
INSTALLATION INSTRUCTIONS

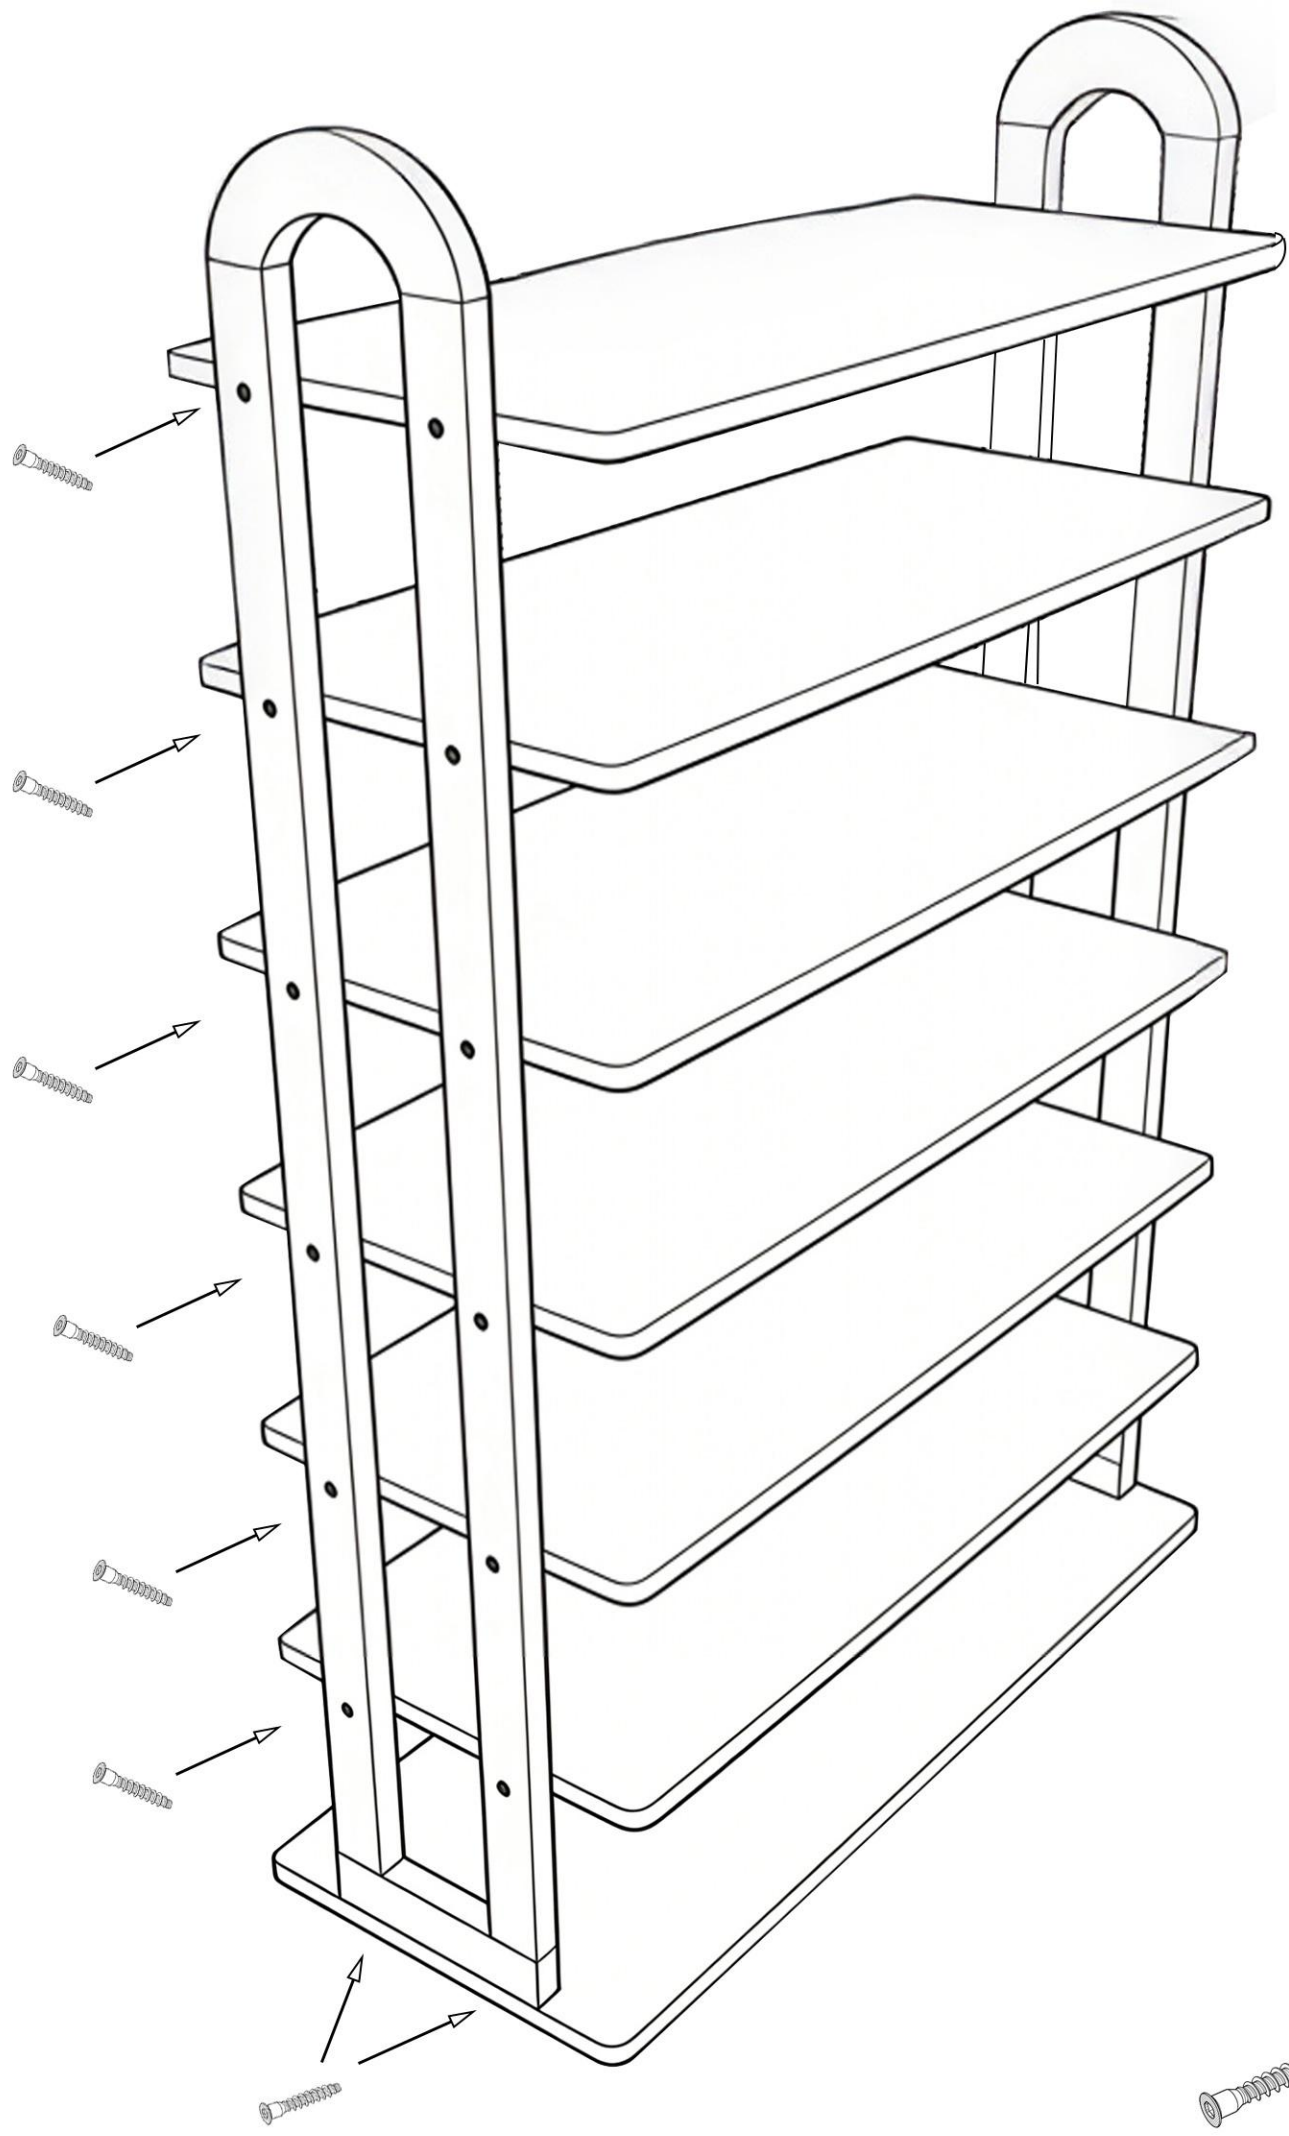

SCREWS: 28 PCS

---

1. ALIGN THE SCREWS WITH THE PRE-DRILLED HOLES ON THE BOARD IN SEQUENCE, THEN TIGHTEN TO COMPLETE THE INSTALLATION.
2. PLEASE INSTALL THE SCREWS FOR THE SHELF BOARDS FIRST, AND THE SCREWS FOR THE BOTTOM BOARD LAST.