

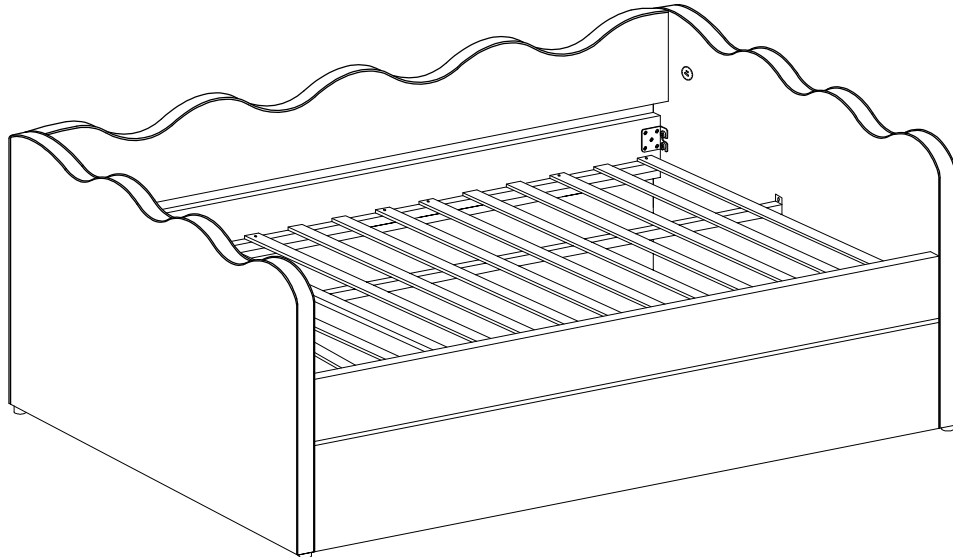


ASSEMBLY INSTRUCTION










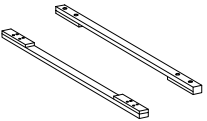



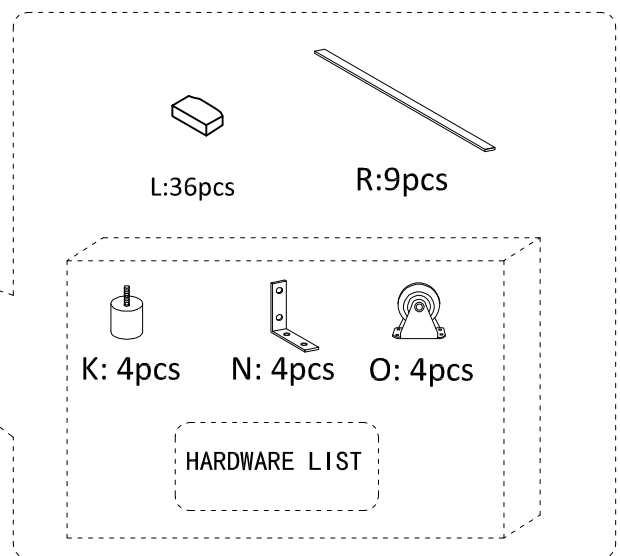




265F

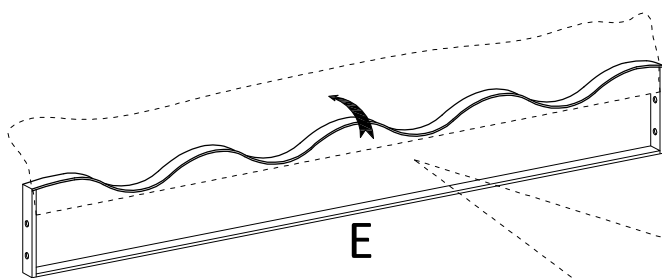












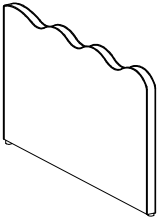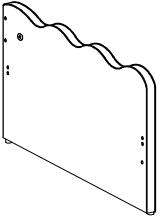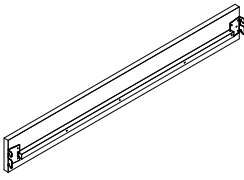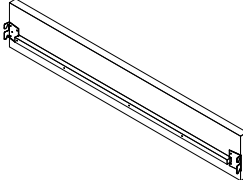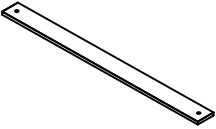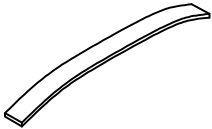

STEP :Packing Details

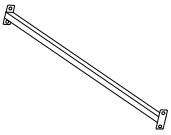

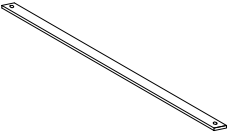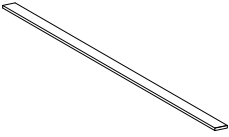ASSEMBLY INSTRUCTION


			
A: 1pc	B: 1pc	C: 1pc	D: 1pc
			
E: 1pc	F: 2pcs	G: 9pcs	H: 1pc
			
I: 1pc	J: 2pcs	K: 4pcs	L: 36pcs
			
M: 2pcs	N: 4pcs	O: 4pcs	P: 1pc
			
Q: 4pcs	R: 9pcs		

HARDWARE LIST

				
M8*30mm 1: 12pcs	M8*50mm 2: 4pcs	M8*20mm 3: 24pcs	M6*45mm 4: 12pcs	M6 5: 12pcs
				
M8*50mm 6: 2pcs	M8 7: 40pcs	M8*19mm 8: 40pcs	M6*16MM 9: 12pcs	M8 10: 1pc
				
M6 11: 1pc	M6 12: 1pc	8*20mm 13: 16pcs		


Assembly Steps



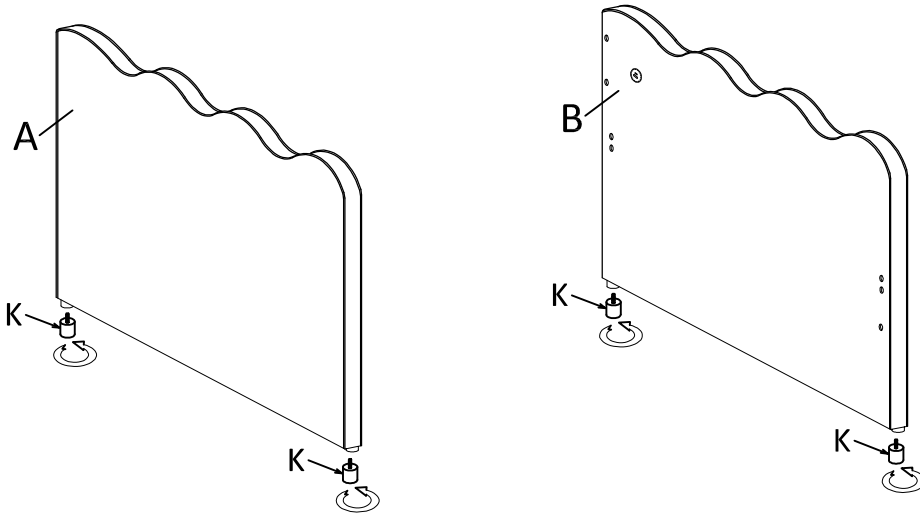

STEP 1:

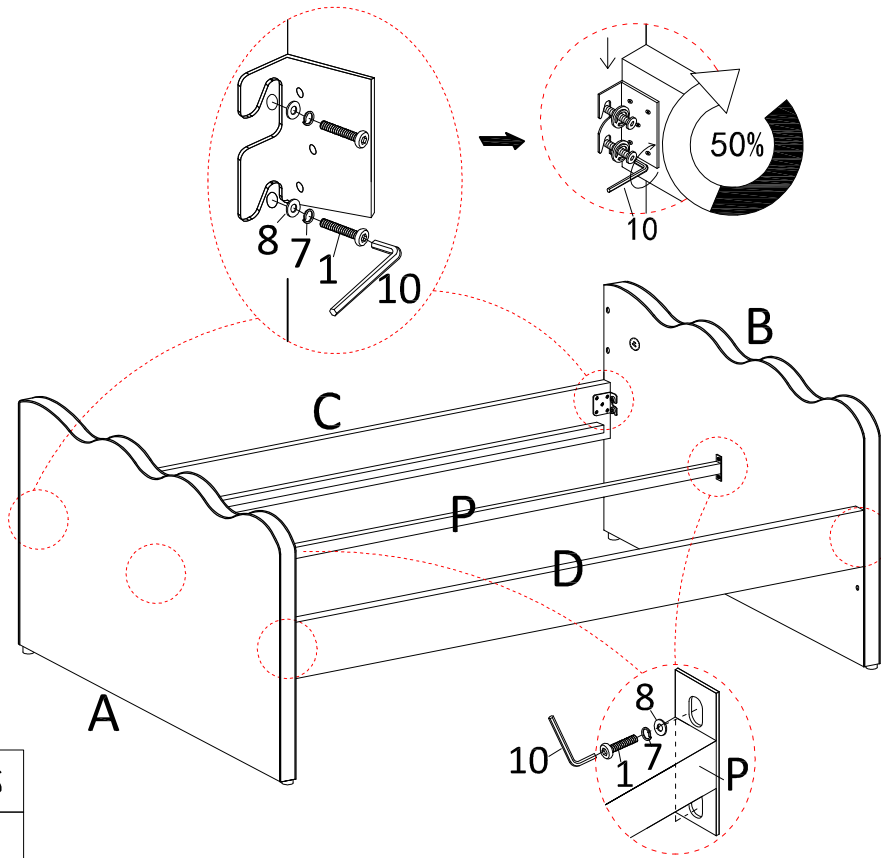

K: 4pcs


STEP 2:



	1 : 12PCS
	10: 1PC
	8 : 12PCS
	7 : 12PCS


Assembly Steps

STEP 3:

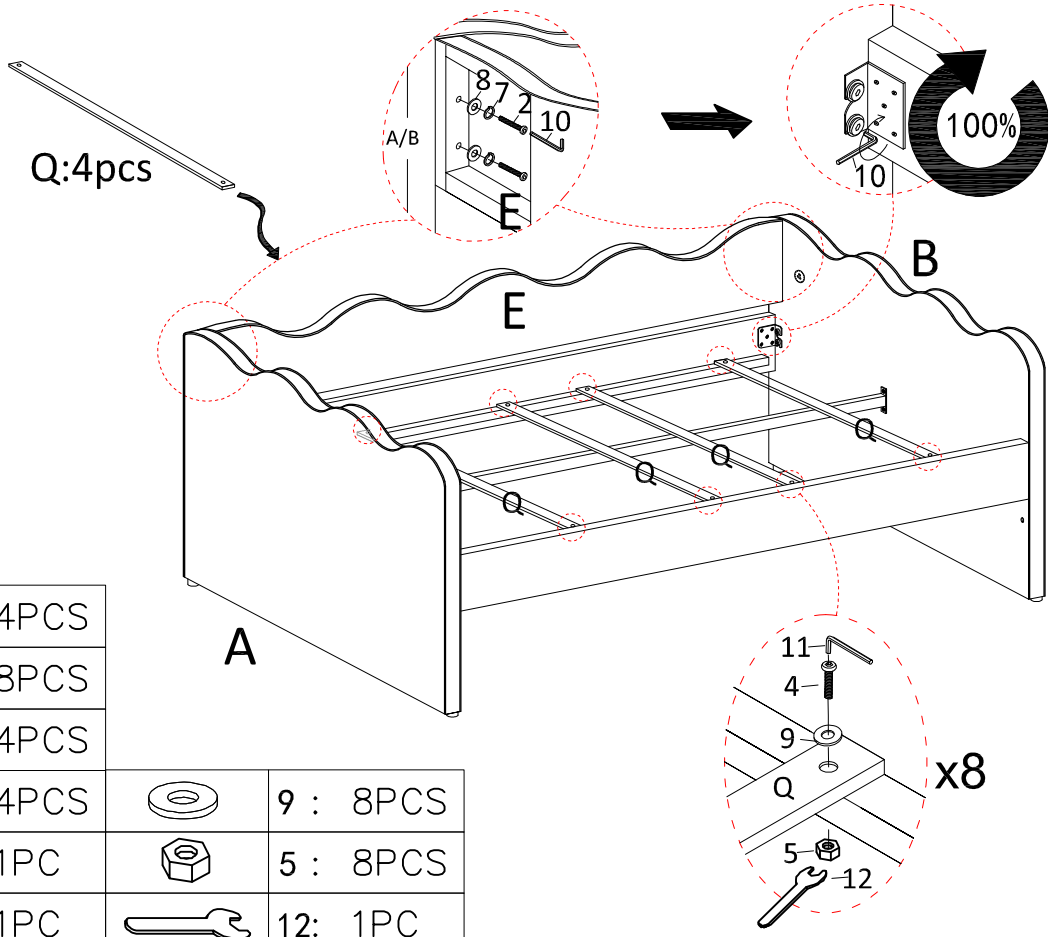

	2 : 4PCS		
	4 : 8PCS		
	8 : 4PCS		
	7 : 4PCS		9 : 8PCS
	10: 1PC		5 : 8PCS
	11: 1PC		12: 1PC



STEP 4:

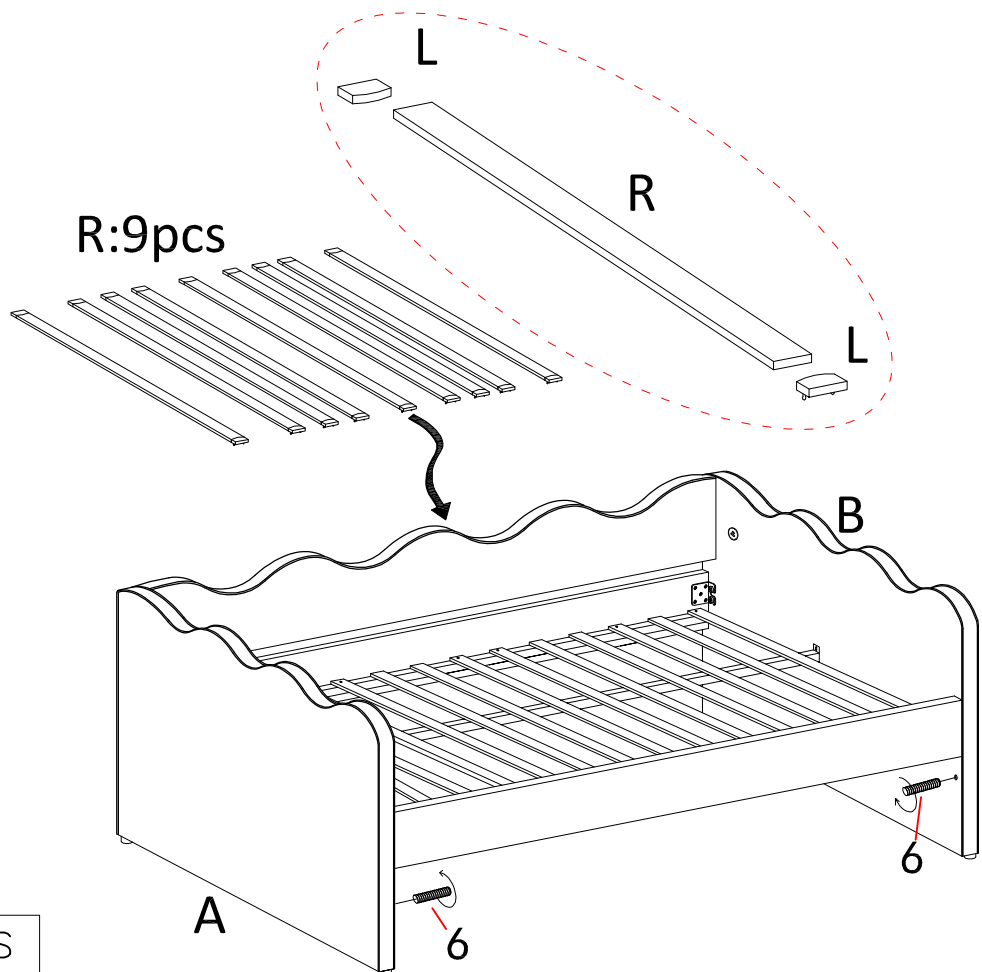

	6 : 2PCS
	L : 18PCS


Assembly Steps

STEP 5:

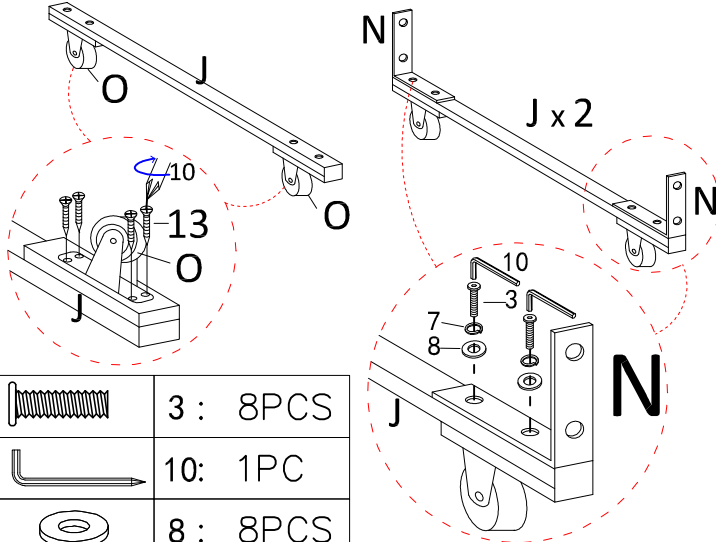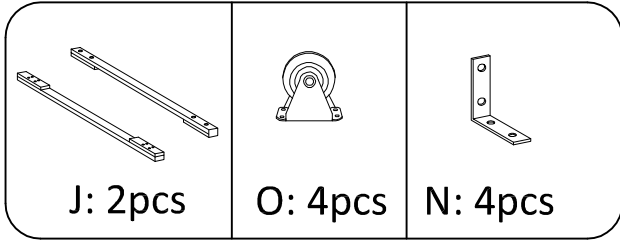


	3 : 8PCS		10: 16PCS
	10: 1PC		
	8 : 8PCS		
	7 : 8PCS		

STEP 6:

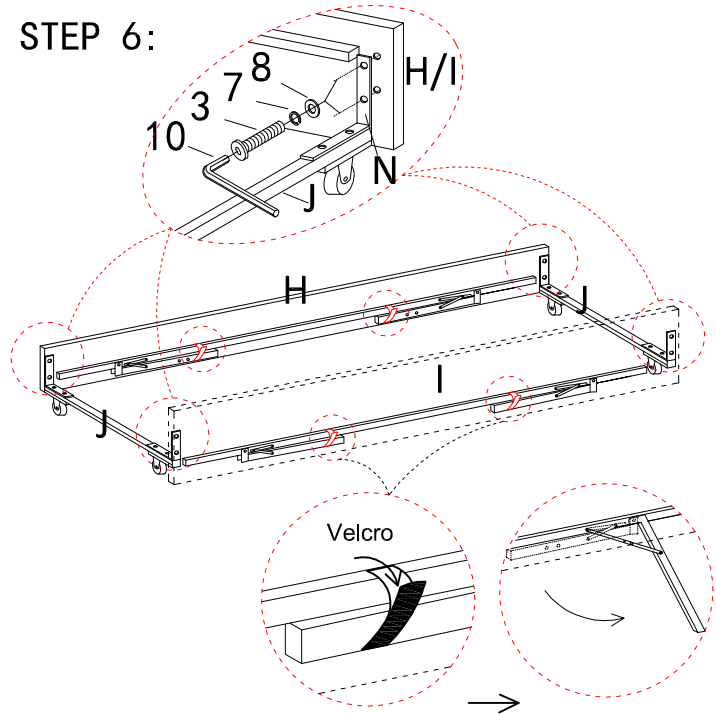


	3 : 8PCS		10: 16PCS
	10: 1PC		
	8 : 8PCS		
	7 : 8PCS		

STEP 7:

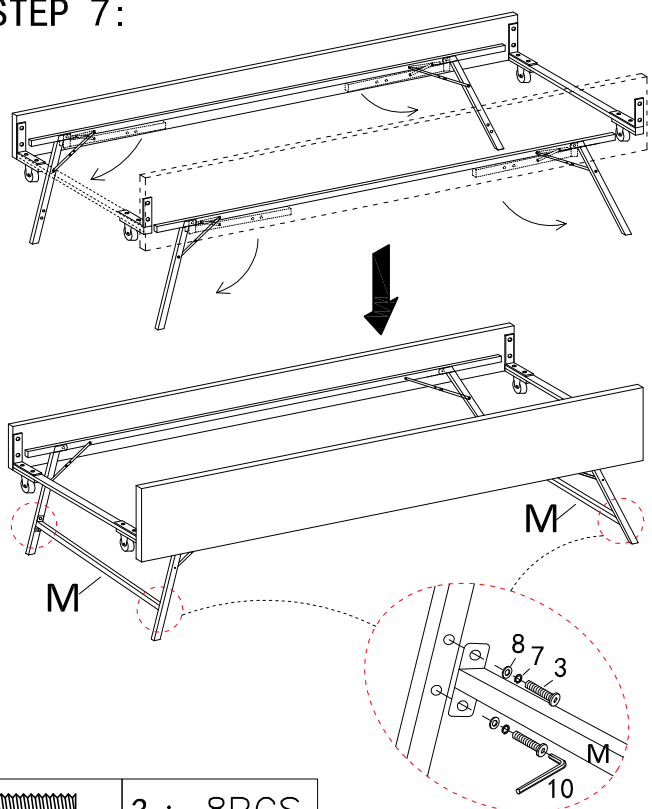

	3 : 8PCS		10: 16PCS
	10: 1PC		
	8 : 8PCS		
	7 : 8PCS		


STEP 8:

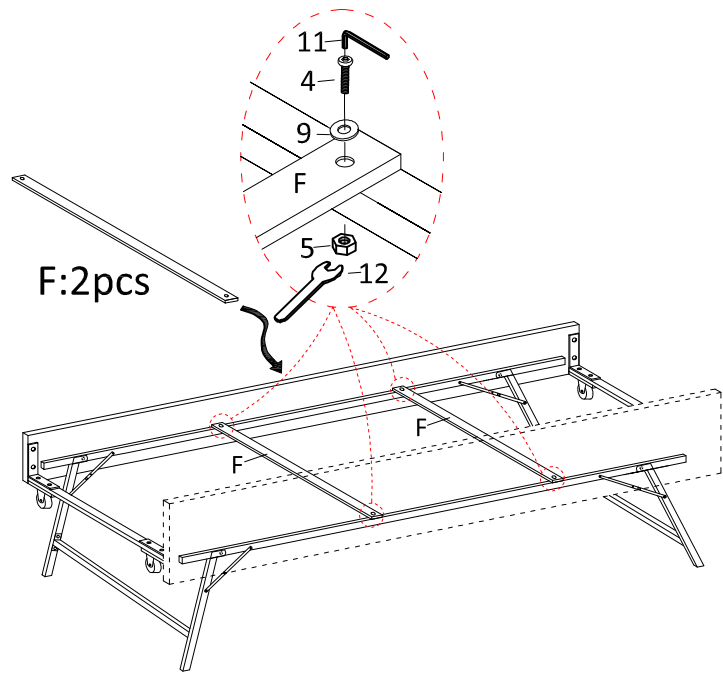



	4 : 4PCS		11: 1PC
	5 : 4PCS		12: 1PC
	9 : 4PCS		11: 1PC

Assembly Steps

STEP 9:

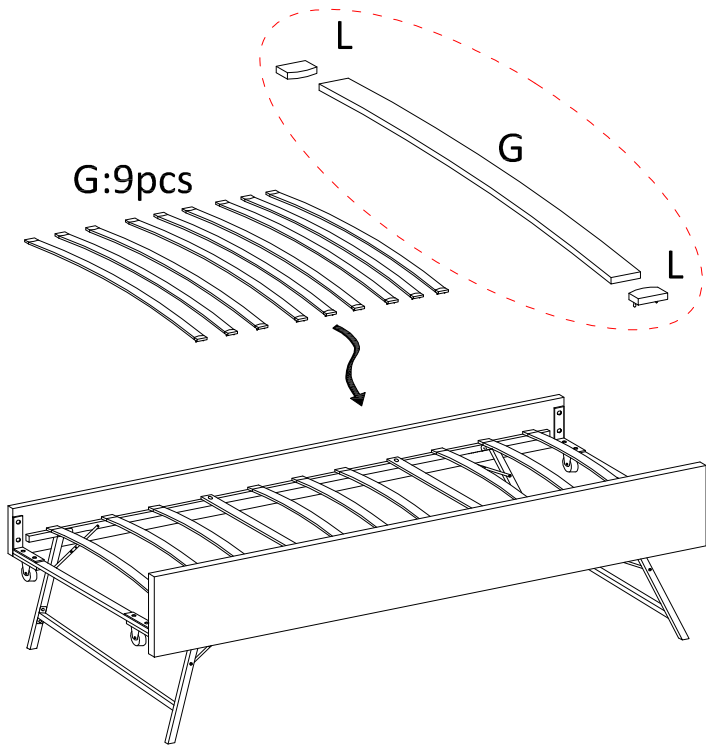

STEP 10:

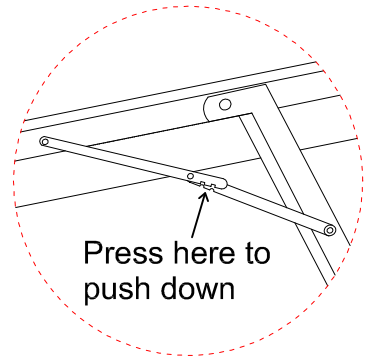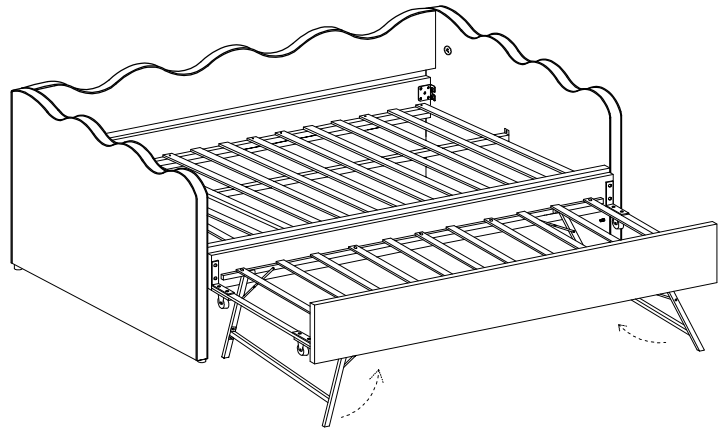

L : 18PCS

STEP 11:

