

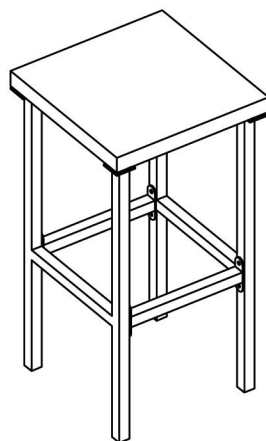
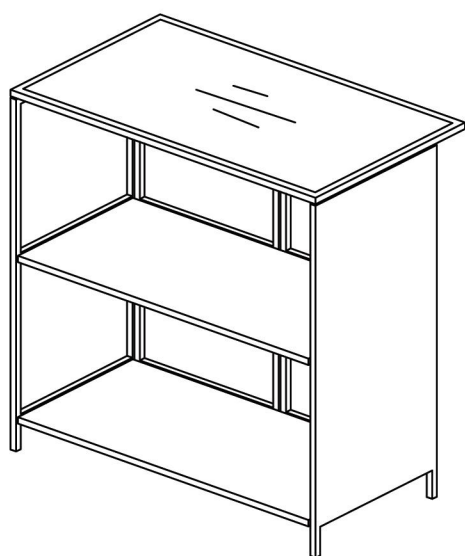


F03LN101

3-Piece Wicker Bar Set

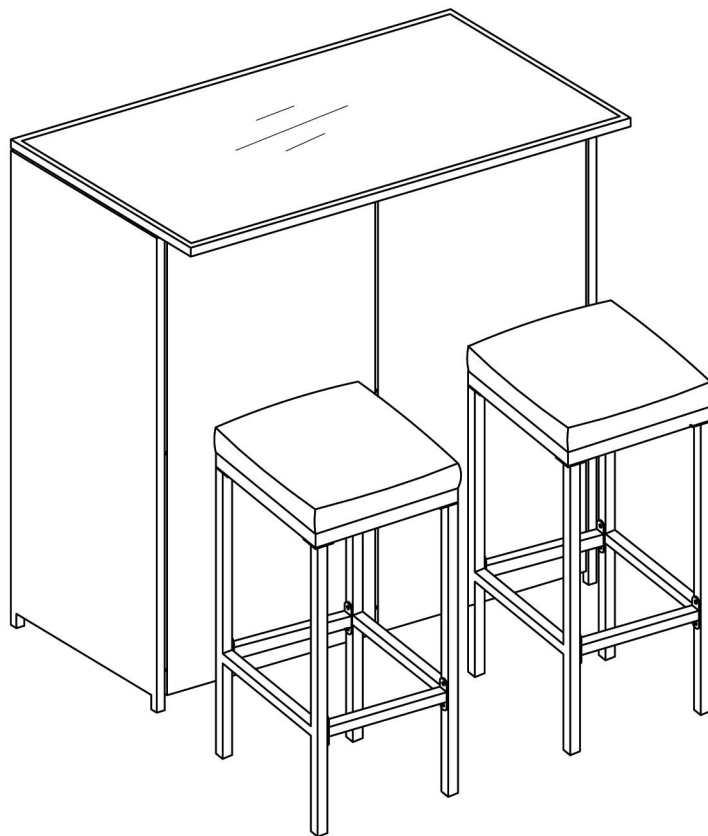

x2

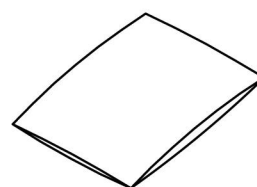








Assembly
bag

1SET/CTN

F03LN101




Barstool

(DO THIS TWO TIMES)

Item no.	Reference Image	Description	Qty.
A		Seat Base	1
B		Legs	2
C		Side Stretchers	2
D		M6 x 15 Socket Head Cap Screw	8
E		Flat Washer	12
F		4-mm Allen Key	1
G		M6 x 30 Socket Head Cap Screw	4

1

Flip the assembly upside down. Attach the seat base (A) and the legs (B) using M6 x 30 socket head cap screws (G) with flat washers (E). Do this in eight places.



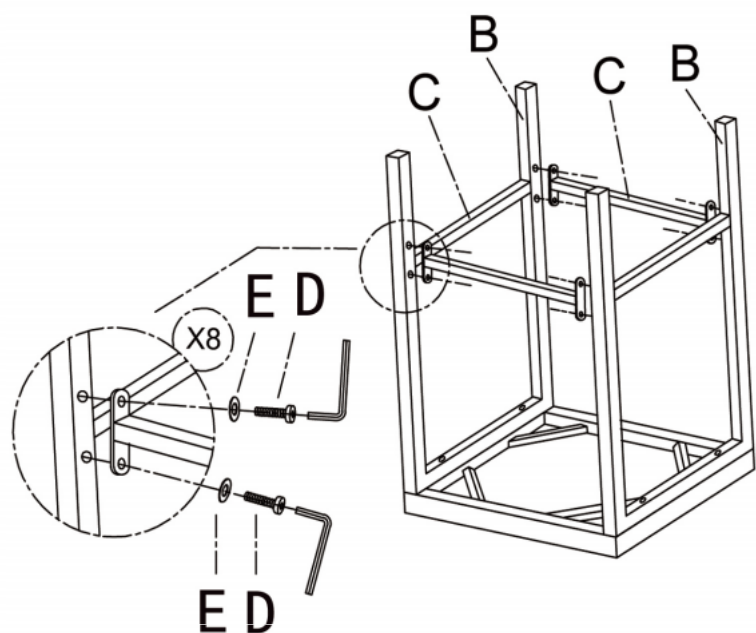
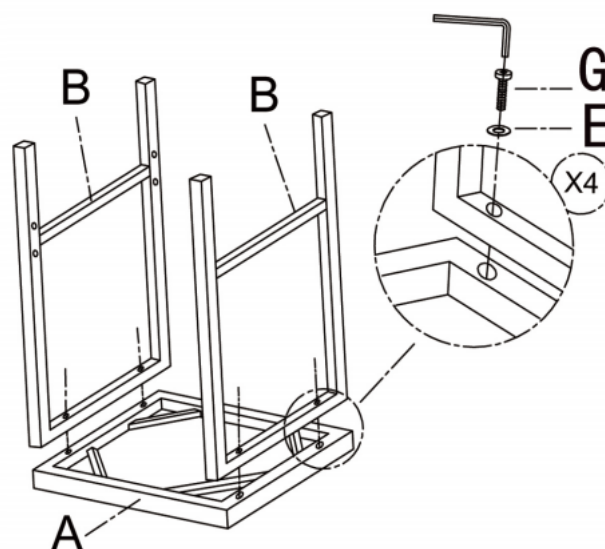
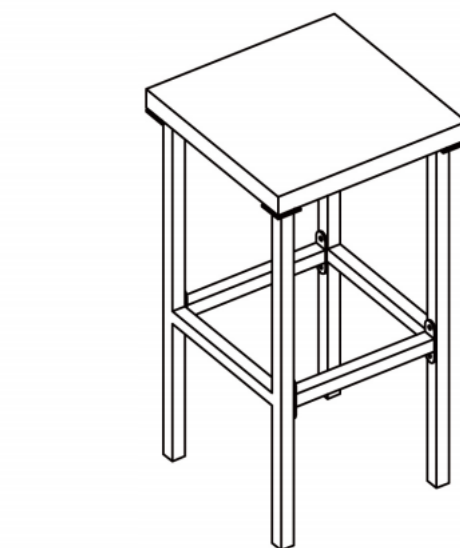











2

With the assembly still flipped over, attach the side stretchers (C) to the assembly using M6 x 15 socket head cap screws (D) with flat washers (E). Do this in eight places.

F03LN101


Bar

Item no.	Reference Image	Description	Qty.
A		Table Top	1
B		Mid Panel & Floor	2
C		Right Leg	1
D		Left Leg	1
E		Front Panel	2
F		M6 x 30 Socket Head Cap Screw	16
G		M6 x 45 Socket Head Cap Screw	2
H		M6 x 35 Socket Head Cap Screw	4
I		Flat Washer	24
J		Nut	2
K		Glass Top	1
L		4-mm Allen Key	1
M		Wrench	1

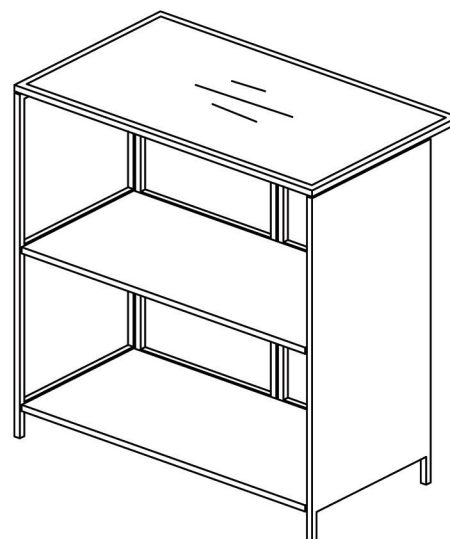


1

With the assembly still flipped over, attach the legs (C&D) to the assembly using M6 x 35 socket head cap screws (H) with flat washers (A). Do this in eight places.

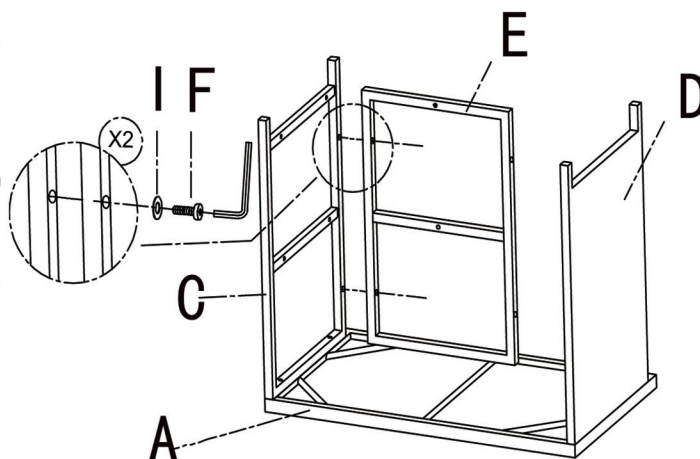

2

Attach the front panels (E) to each other using M6 x 45 socket head cap screws (G) with a washer (I) and secure it with a washer (I) and a nut (J): Do this in two places

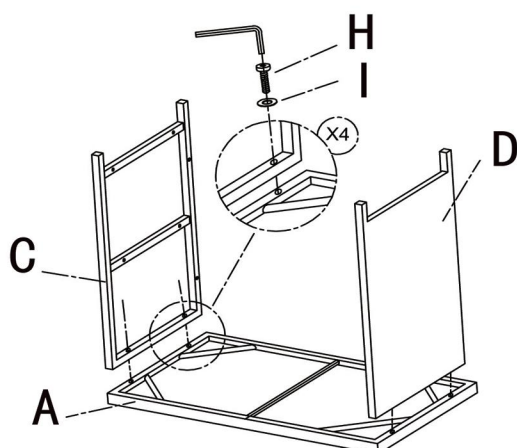


F03LN101

Bar

3

With the assembly still flipped over, attach the middle shelf (plastic bottom) (C) to the assembly using M6 x 30 socket head cap screws (F) with flat washers (I). Do this in four places.

Attach the base (B) to the assembly using M6 x 30 socket head cap screws (F) with flat washers (I). Do this in four places.

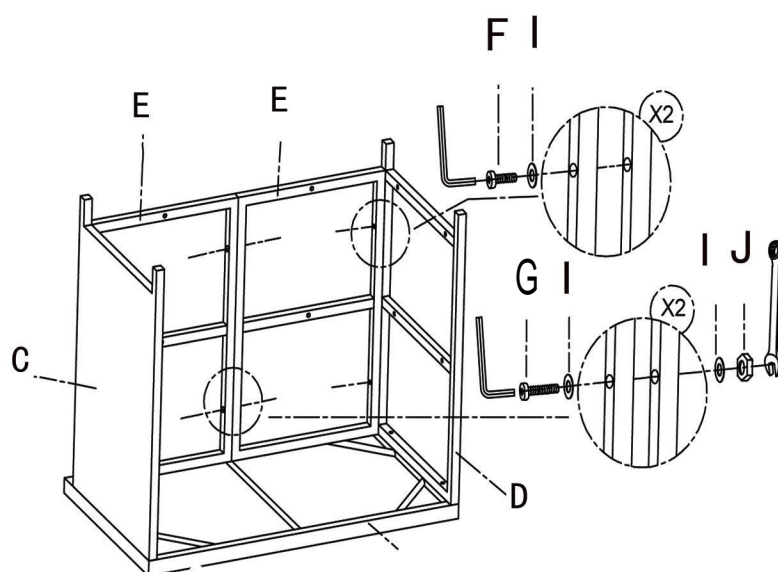

4

Flip the assembly back then place the glass top (K) on it.

