

Assembly Instructions


Dining Chair

Required Tools:

- Hammer
- 7/16" Wrench or Socket
- Cordless Drill
- #2 Square Drive bit
- Tape Measure


Hardware:

- (16) 2" Screws
- (4) 1 1/4" Screws

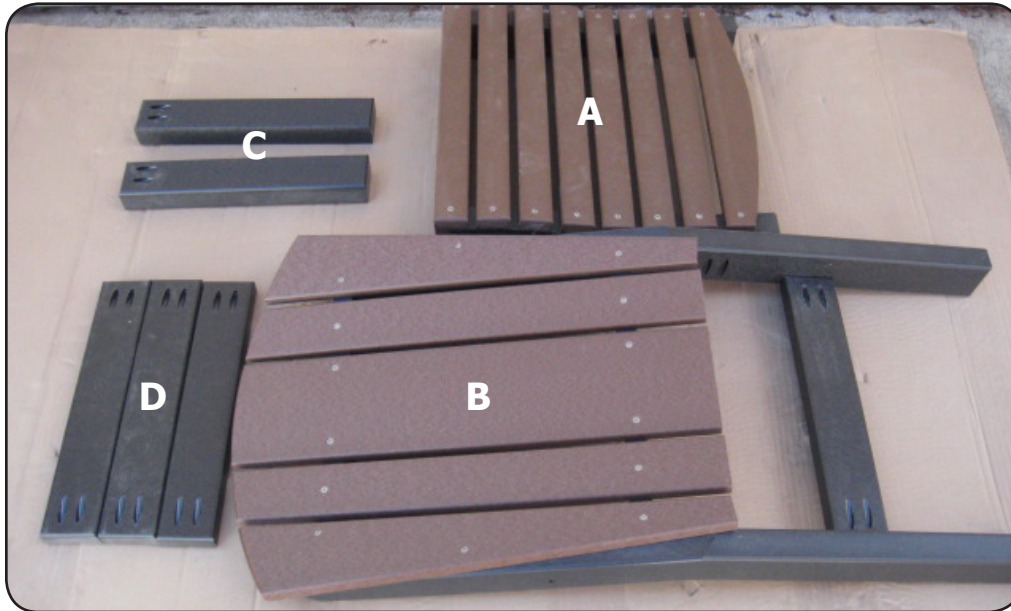

Step 1

Lay seat assembly (A) upside down and fasten leg (C) where shown on picture with (2) 2" screws. Fasten other leg (C) on otherside in the same manner.

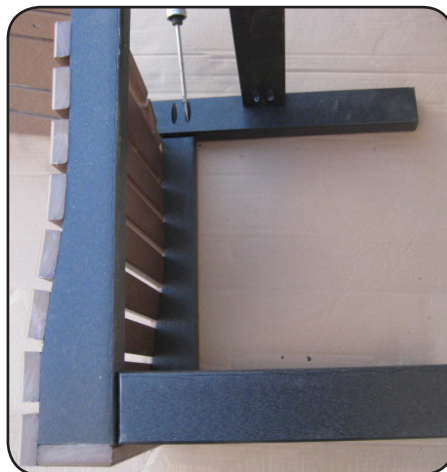

Step 2

Lay Seat assembly on side and position back (B) as shown with back board all the way down against seat support and fasten with (2) 2" screws. repeat otherside.



Step 3

Lay chair on back, fasten leg support (D) keeping flush on inside of leg 2 3/4" up use other support as guide. Fasten with (4) 2" screws repeat other side.



Step 4

Now fasten cross support in center as picture shows and fasten with (4) 1 1/4" screws. Note: you can not use 2" screws here.

Complete without Armrests Please turn over for instructions on optional armrests.




Assembly Instructions



Dining Chair With Arms

Hardware for Armrests:

- (2) 1/4" x 3 1/2" carriage bolts
- (2) 1/4" Flanch nuts
- (4) 2 1/2" Screws
- (4) 1 1/4" Screws

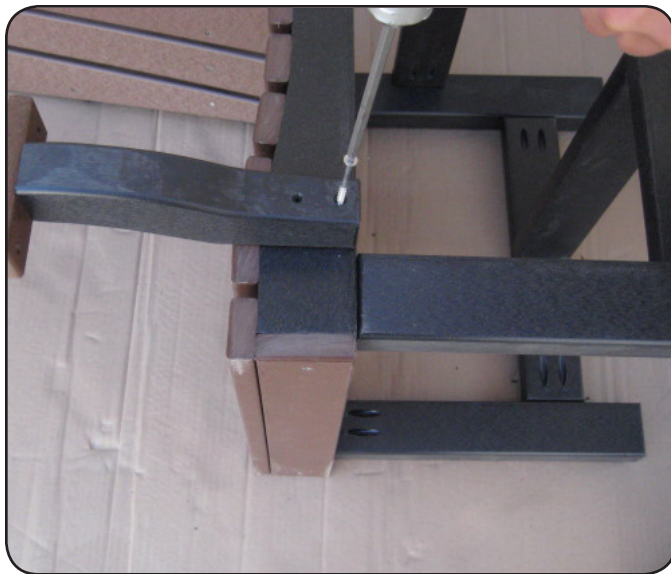

Step 1

Positioning armrest supports where shown and fasten with (2) 2 1/2" screws through predrilled holes, repeat on other side.



Step 2

Fasten armrest to back with 3 1/2" bolt and nut. Then fasten front from bottom up with (2) 1 1/4" screws as shown, repeat on other side.



Complete!