


ASSEMBLY INSTRUCTIONS



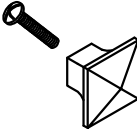


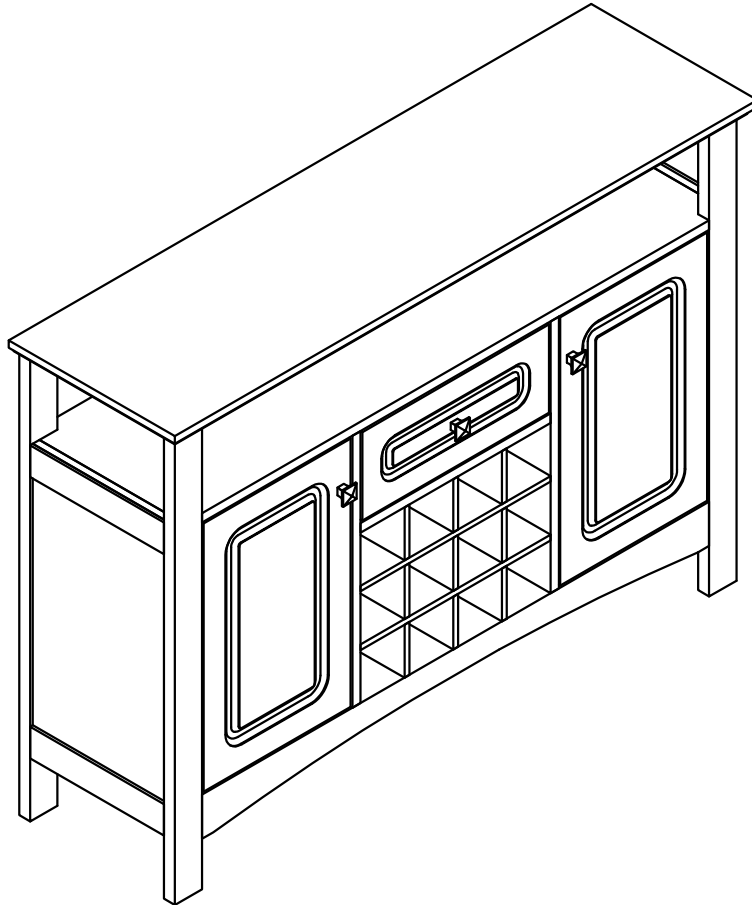





Wine Rack



NOTE TO CUSTOMERS:

- For ease and speed of assembly we recommend that before you commence each step of the assembly that you identify all the parts required to complete that step.
- We recommend that where possible you allow sufficient space to assemble the item as close as possible to the place where it will be once assembled.
- For the protection of your furniture we recommend that the product is placed on protected surfaces during assembly to prevent any damage.
- During assembly do not over tighten, as this may damage the product.
- Please ensure you retain all the product packaging until the item completely assembled.
- Please periodically check all fittings and re-tighten as necessary.
- Please never allow any liquids to remain on your furniture as absorption can cause the wood to warp or finish to de-laminate.
- It is recommended that this item should be assembled by two adults.

Hardware List:

 <p>(a): Camlock 22sets</p>	 <p>(b): Wood dowel 18pcs</p>	 <p>(c): Knob with bolt 3sets</p>	 <p>(d): Magnet 2pcs</p>
 <p>(e): Stopper 1pc</p>	 <p>(f): Screw 1pc</p>	 <p>(g): Shelf Support 8pcs</p>	 <p>(h): Screw 8pcs</p>
 <p>(i): Door Pin 4pcs</p>	 <p>(j): Screw 26pcs</p>	 <p>(k): Glue 1pc</p>	





Note:

- Read these instructions carefully before assembling.
- Tools required : Phillips screwdriver, flat screwdriver.
- Find a clean, smooth area on which to work , such as a carpet, in order to avoid scratching the wood surfaces.
- Wait to dispose of the packing material until assembly is complete and all parts and hardware are accounted for.
- Two or more people might be required for assembly.


To use Dowels:

1. Add glue (about $\frac{1}{4}$ full) in the hole(s) of each board to be joined.
2. Insert the Dowel(s) and join boards.
3. Wipe excess glue with a damp paper towel.


To use Cam Locks:
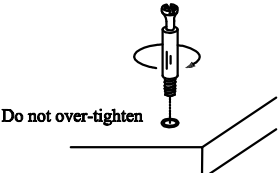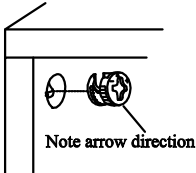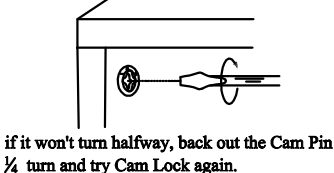
<p>1. Insert Cam Pin until snug</p>  <p>Do not over-tighten</p>	<p>2. Set boards together</p> 	<p>3. Insert Cam Lock</p>  <p>Note arrow direction</p>	<p>4. Turn Cam Lock clockwise (half a turn)</p>  <p>if it won't turn halfway, back out the Cam Pin $\frac{1}{4}$ turn and try Cam Lock again.</p>
---	---	--	---


Furniture Parts

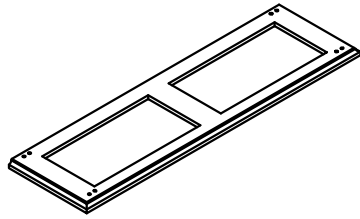


A:Top Panel 1pc




B:Left Side Panel 1pc




C:Right Side Panel 1pc

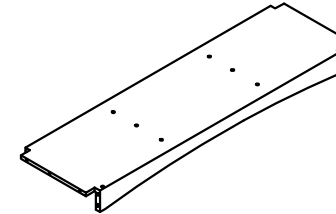


D:Bottom Panel 1pc

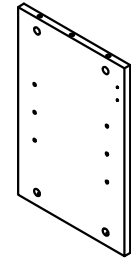


E:Left Divider 1pc

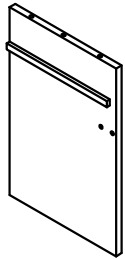

F:Right Divider 1pc

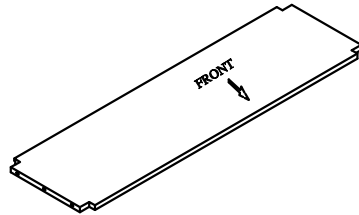


G: Shelf 1pc

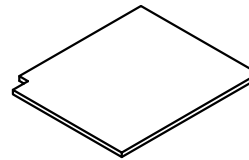


H:Adjustable Shelf 2pcs




I:Cross Panel 3pcs

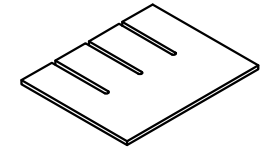


J:Cross Panel 2pcs




K:Left Door 1pc




L:Right Door 1pc

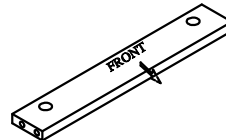


M:Cross Bar 1pc

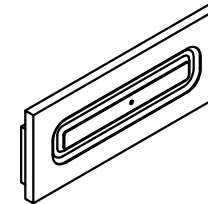


N:Drawer Front Panel 1pc

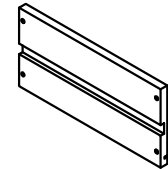


O:Drawer Side Panel 2pcS

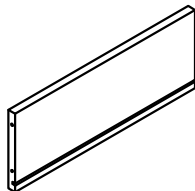


P:Drawer Back Panel 1pc

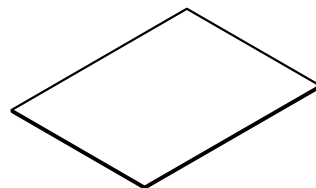

Q:Drawer Bottom Panel 1pc




R:Center Feet 1pc

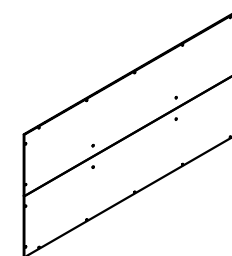


S:Back Panel 1Pc

Step 1

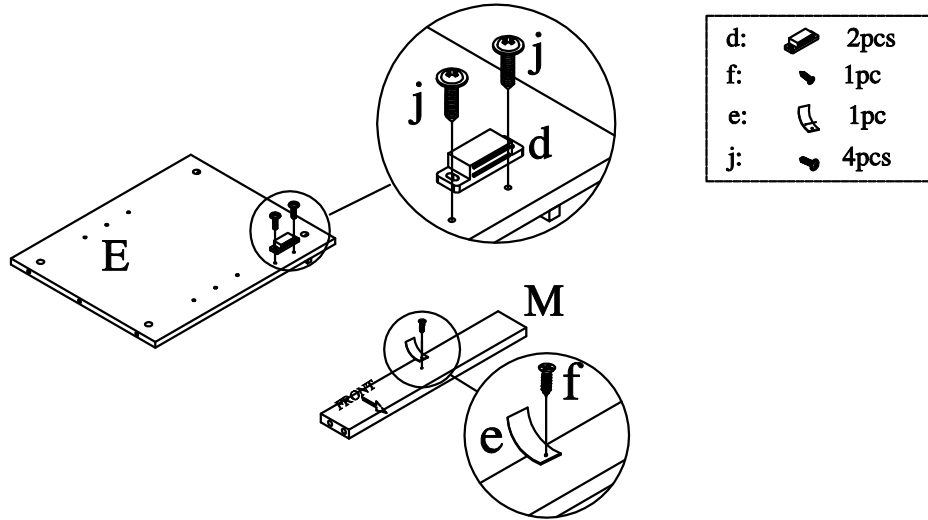


1): Attach Magnets (d) to Dividers (E & F) using Screws (j), please note holes are pre-drilled.
2): Attach Stopper (e) to Cross Bar (M) using Screw (f), please note holes are pre-drilled.

Step 2

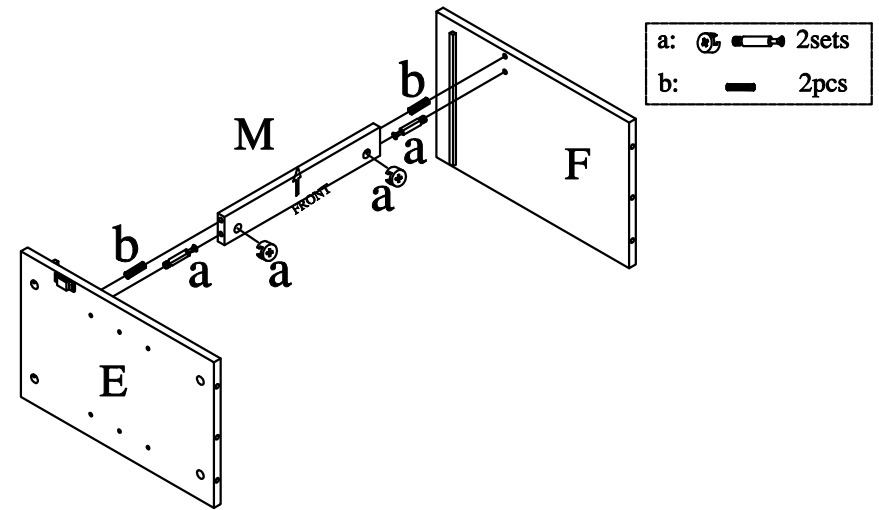


Assemble Cross Bar (M) to Dividers (E&F) using Camlocks(a) and Wood Dowels (b).

Step 3

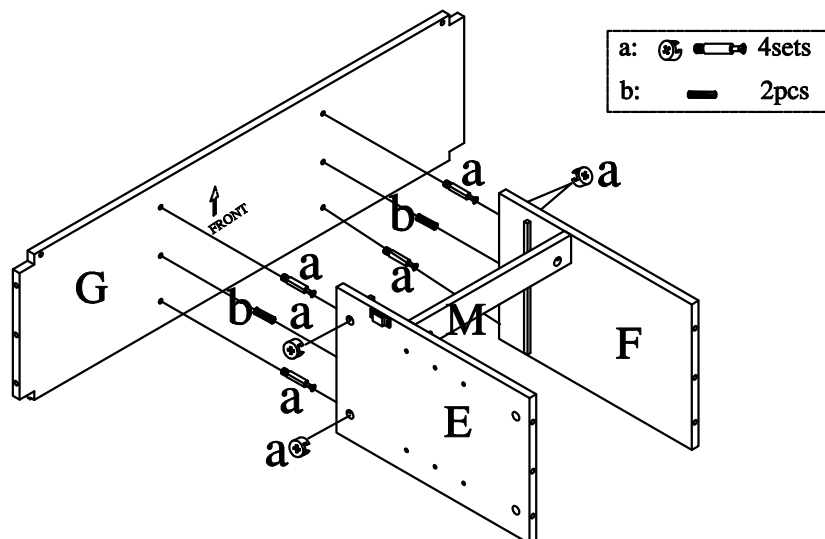



Assemble Shelf (G) to Dividers (E&F) using Camlocks (a) and Wood Dowels (b).

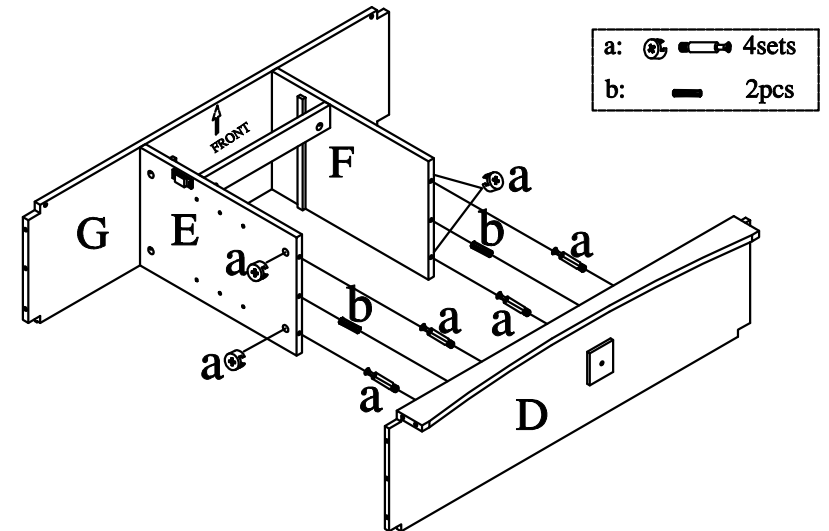
Step 4



Assemble Bottom Panel (D) to Dividers (E&F) using Camlocks (a) and Wood Dowels (b).


Step 5


a:  8sets
b:  8pcs

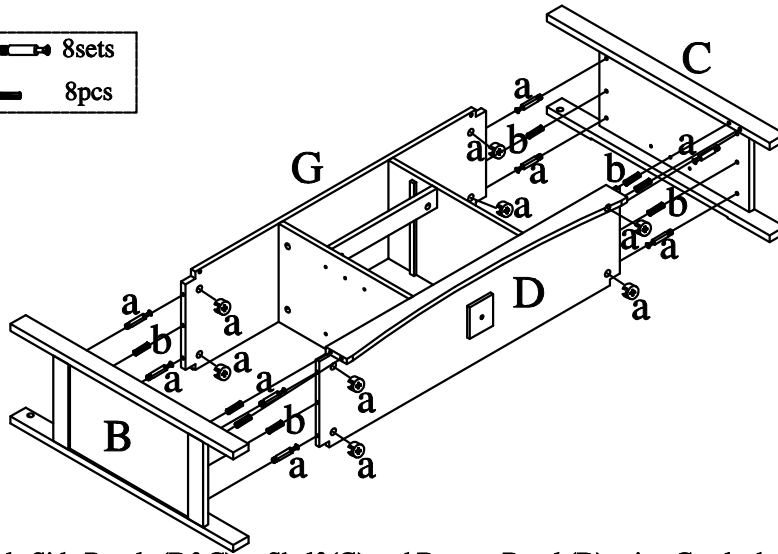

Assemble Side Panels (B&C) to Shelf (G) and Bottom Panel (D) using Camlocks (a) and Wood Dowels (b).

Step 6


a:  4sets
b:  4pcs

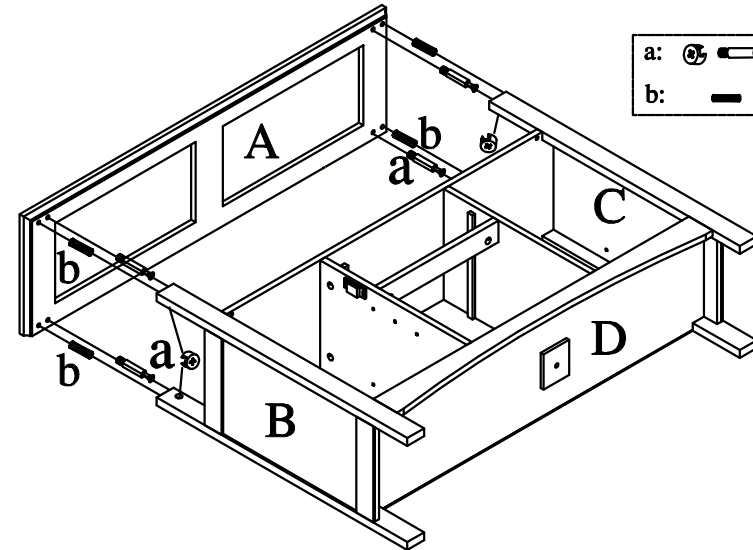

Assemble Top Panel (A) to Side Panels (B&C) using Camlocks (a) and Wood Dowel (b).

Step 7


j:  22pcs

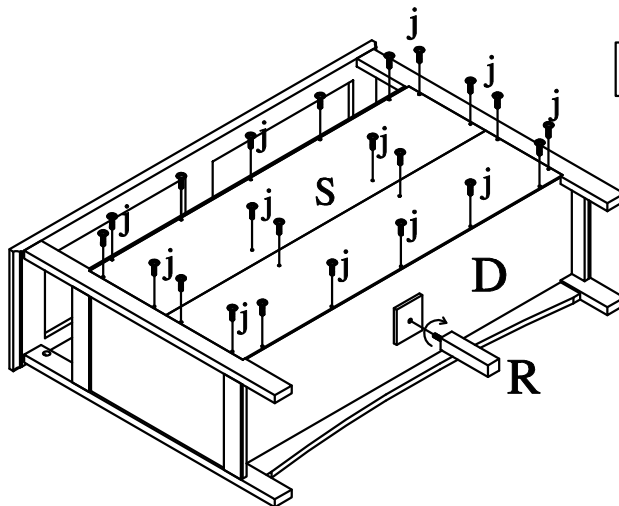

Attach Back Panel (S) to Side Panels (B&C), Shelf (G), Bottom Panel (D) and Dividers (E&F) using Screws (j). Then tighten Center Feet (R) to the bottom of Bottom Panel (D).

Step 8


i:  4pcs

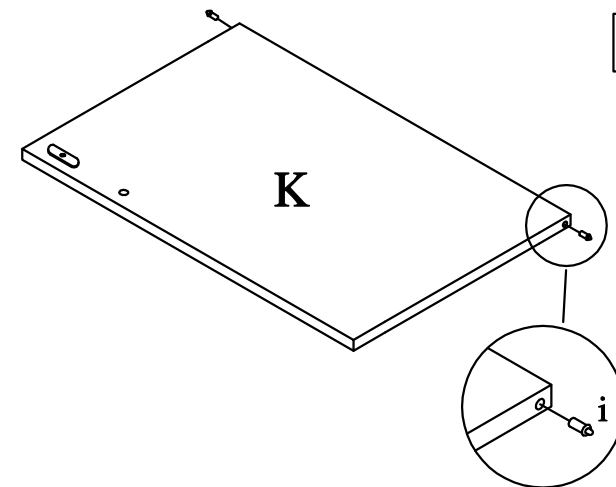

Insert Door Pins (i) into holes on Doors (K&L) as drawing shown above.

Step 9


c:  2sets

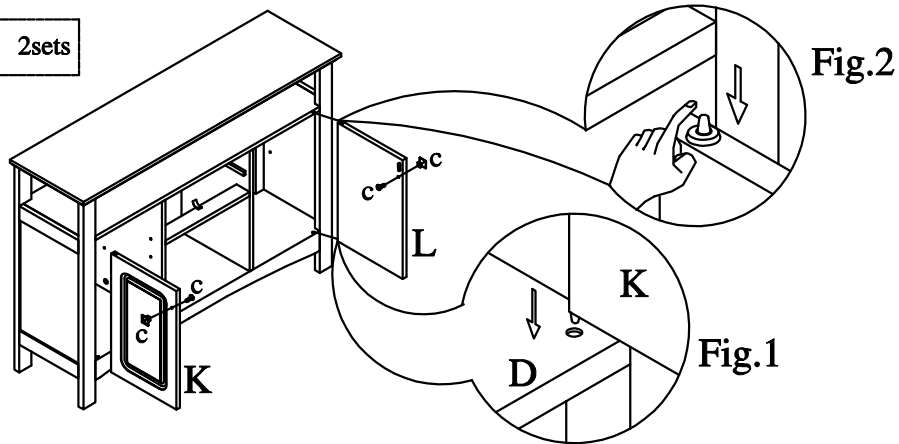

- 1): Connect Door (K) to the Bottom Panel (D) as above Fig.1.
- 2): Press the upper pin on Door (K) see Fig.2. and insert Door (K) carefully into the cabinet with the upper pin popping up into the holes of Shelf (G).
- 3): Attached Knobs (c) to Door (K) using included bolts.
- 4): Repeat above steps to assemble Left Door (L).

Step 10


g:  8pcs

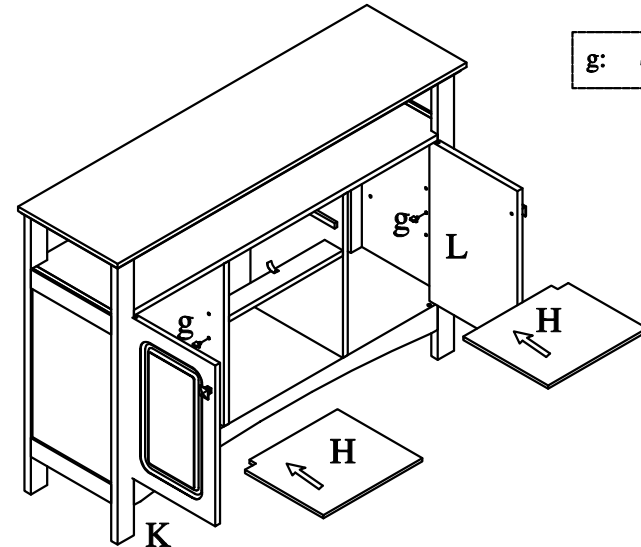

Insert Shelf Supports (g) into holes on Side Panels (B&C), Dividers (E&F). Then put Shelves (H) onto Shelf Supports (g).

Step 11


h:  4pcs

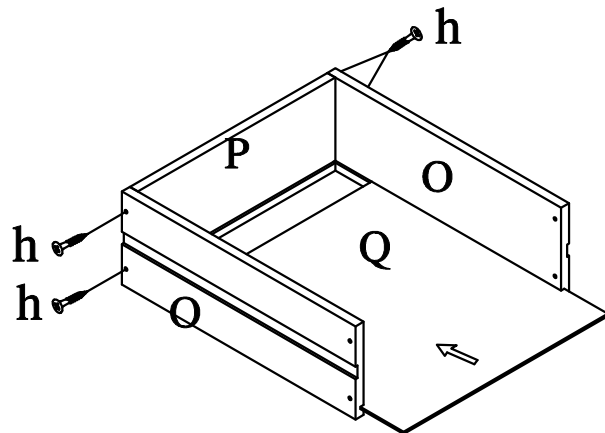

- 1): Assembled Drawer Side Panels (O) to Drawer Back Panel (P) using Screws (h).
- 2): Insert Drawer Back Panel (Q) into grooves on Drawer Side Panels (O).


Step 12

c:  2sets
h:  4pcs

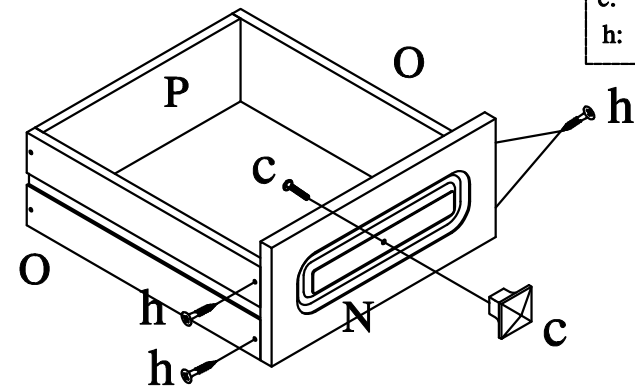


Attach Knob (c) to Drawer Front Panel (N) using included bolts, then assemble Drawer Front Panel (N) to Drawer Side Panels (O) using Screws (h).

Step 13

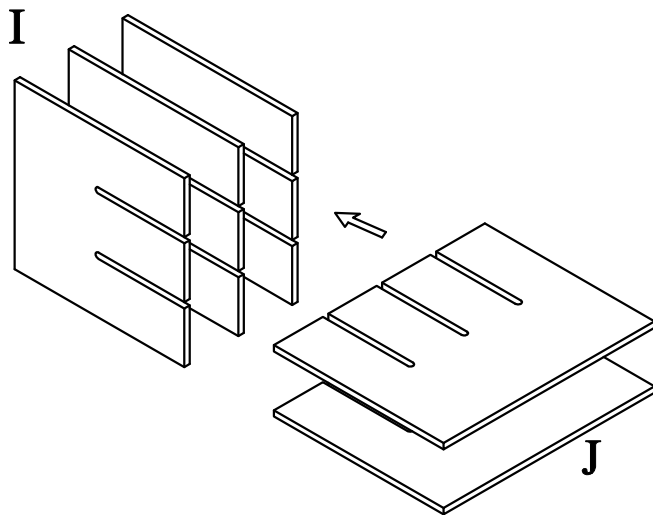


Cross the cross bars (J) to (I) as above drawing shown .

Step 14

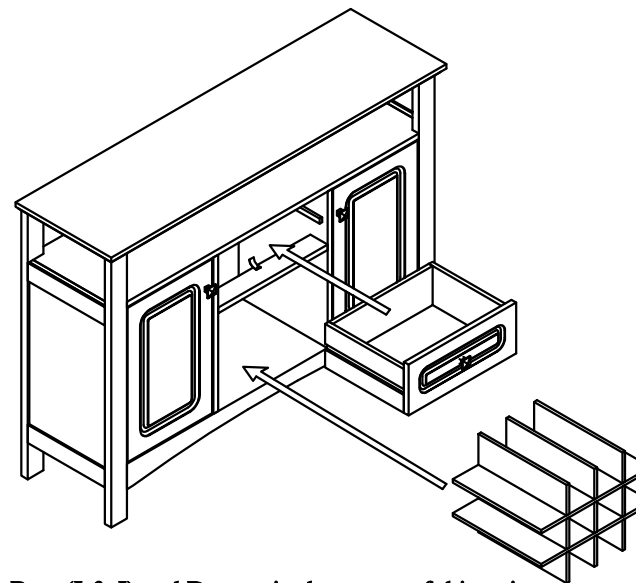

Insert Cross Bars (I & J) and Drawer in the center of this unit.

Step 15

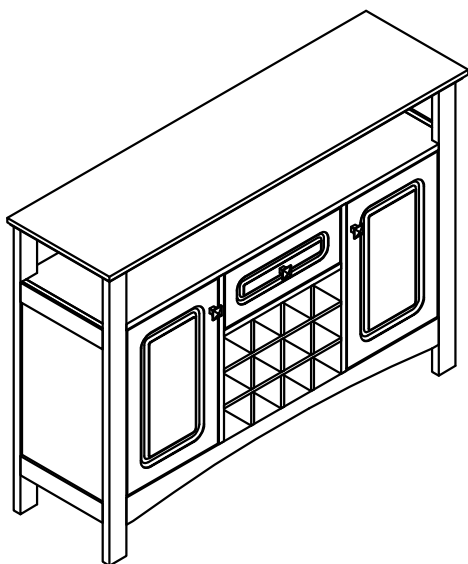

Step 16