
SKU: C001G047WF-1 C001G047WF-2 C001G047WF-3 C001G047WF-4

# INSTRUCTIONS

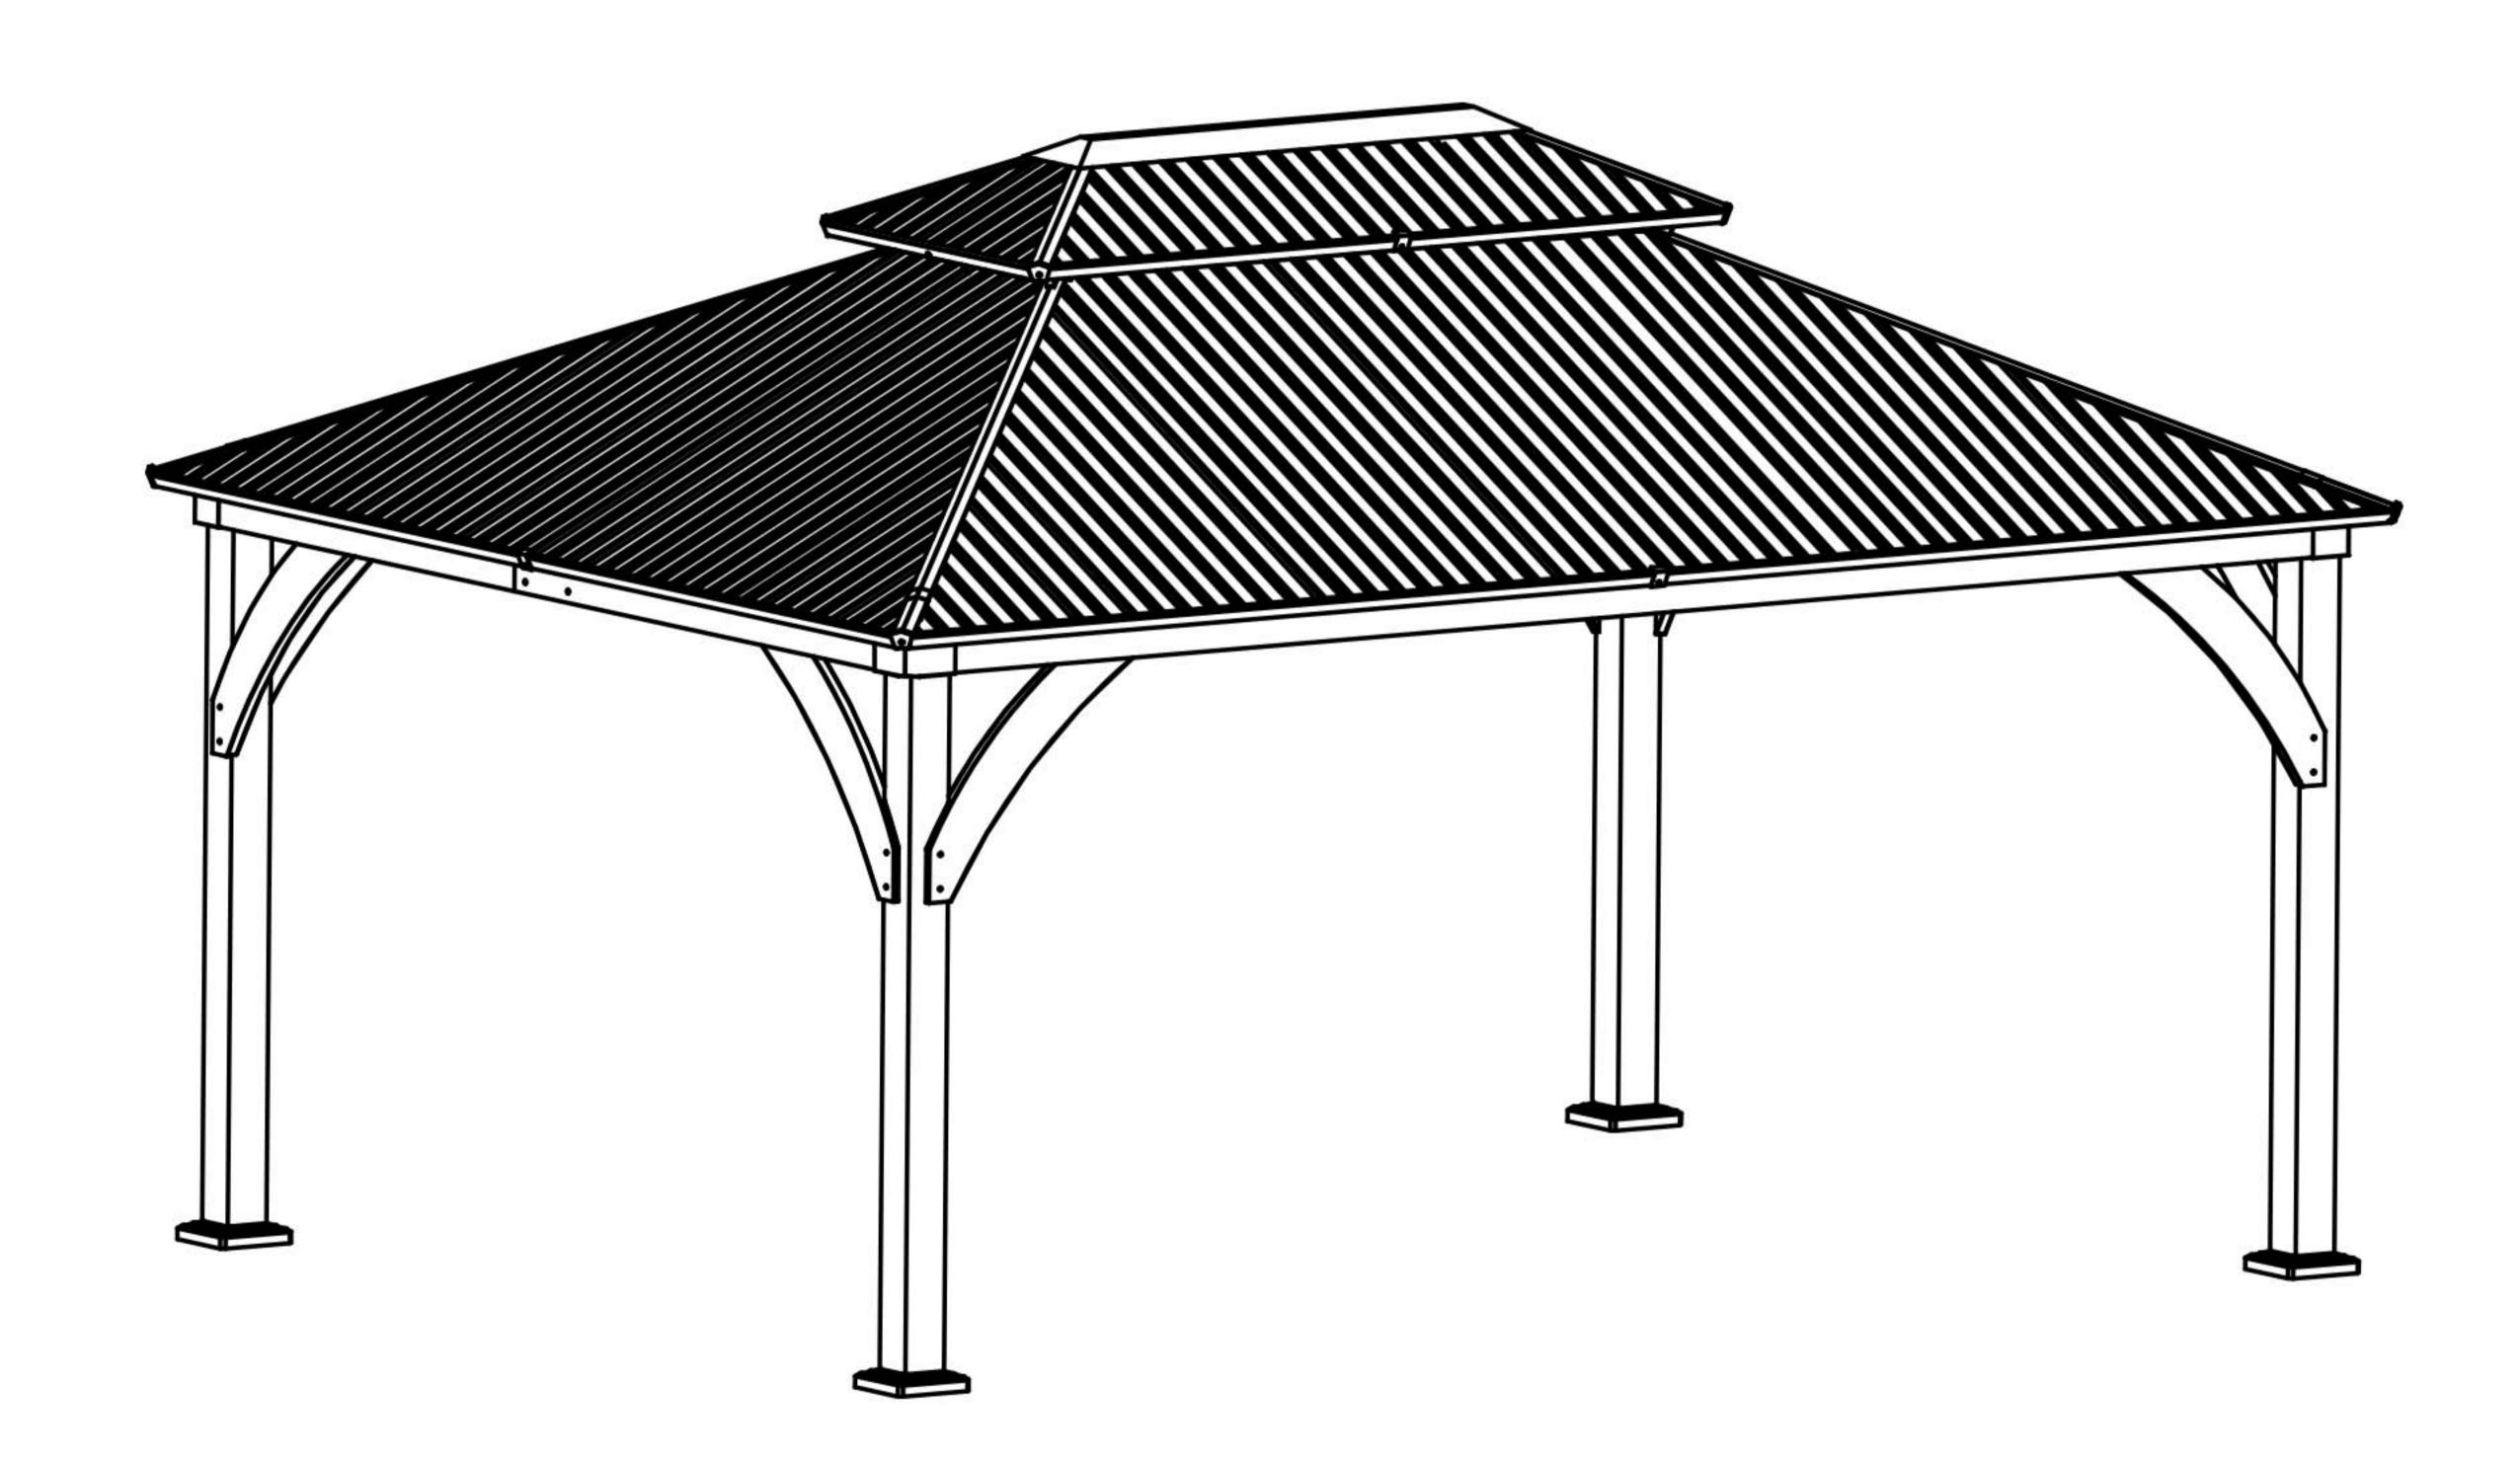



Please check the number of parts in the following accessory catalogue when unpacking. We have sent you more small parts for spare. If there is any missing or any questions about the installation. Please feel free to contact us. We will reply within 24 hours.



E-mail: cs.helper01@gmail.com

### TOOLS RECOMMENDED

\*NOTE: The recommended tools are not included in boxes and need to be prepared by yourself.



DRILL



RUBBER MALLET



STEPLADDER (6.5Ft Or More)



SAFETY HAT



GLOVES



SAFETY GOGGLES

## ATTENTIONS



Since it is easy to lose many small accessories during the installation, please collect all the screw accessories before the assembly is completed



To better align the screws for practical situations, do not fully tighten screws initially



Please reinforced the Gazebo and do not use in heavy winds or inclement weather



Make sure all screws are tightented before use and check all screws, buckles and straps every 90 days




Two or more people are required for assembly





Please clear the snow off the roof in time for the heavy snowfall and do not use it


## Permanent Installation Examples

Our supporting expansion screws can only be used for cement floors, customers need to bring their own special screws if they are used for wood floors

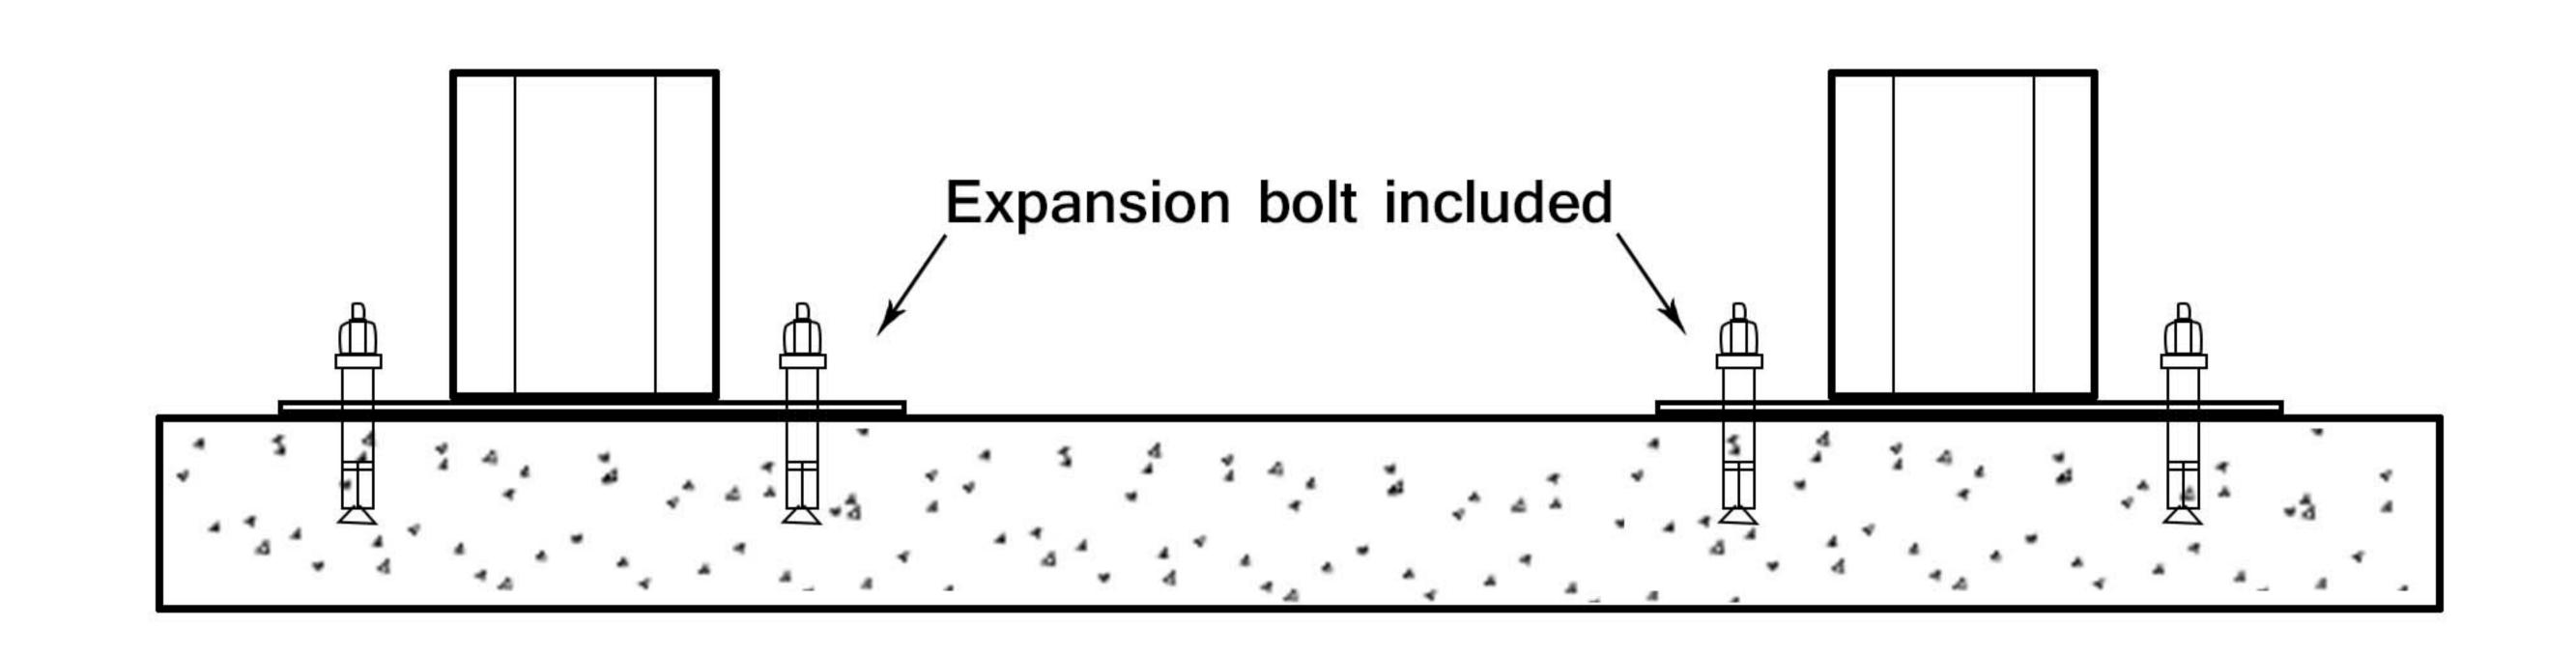

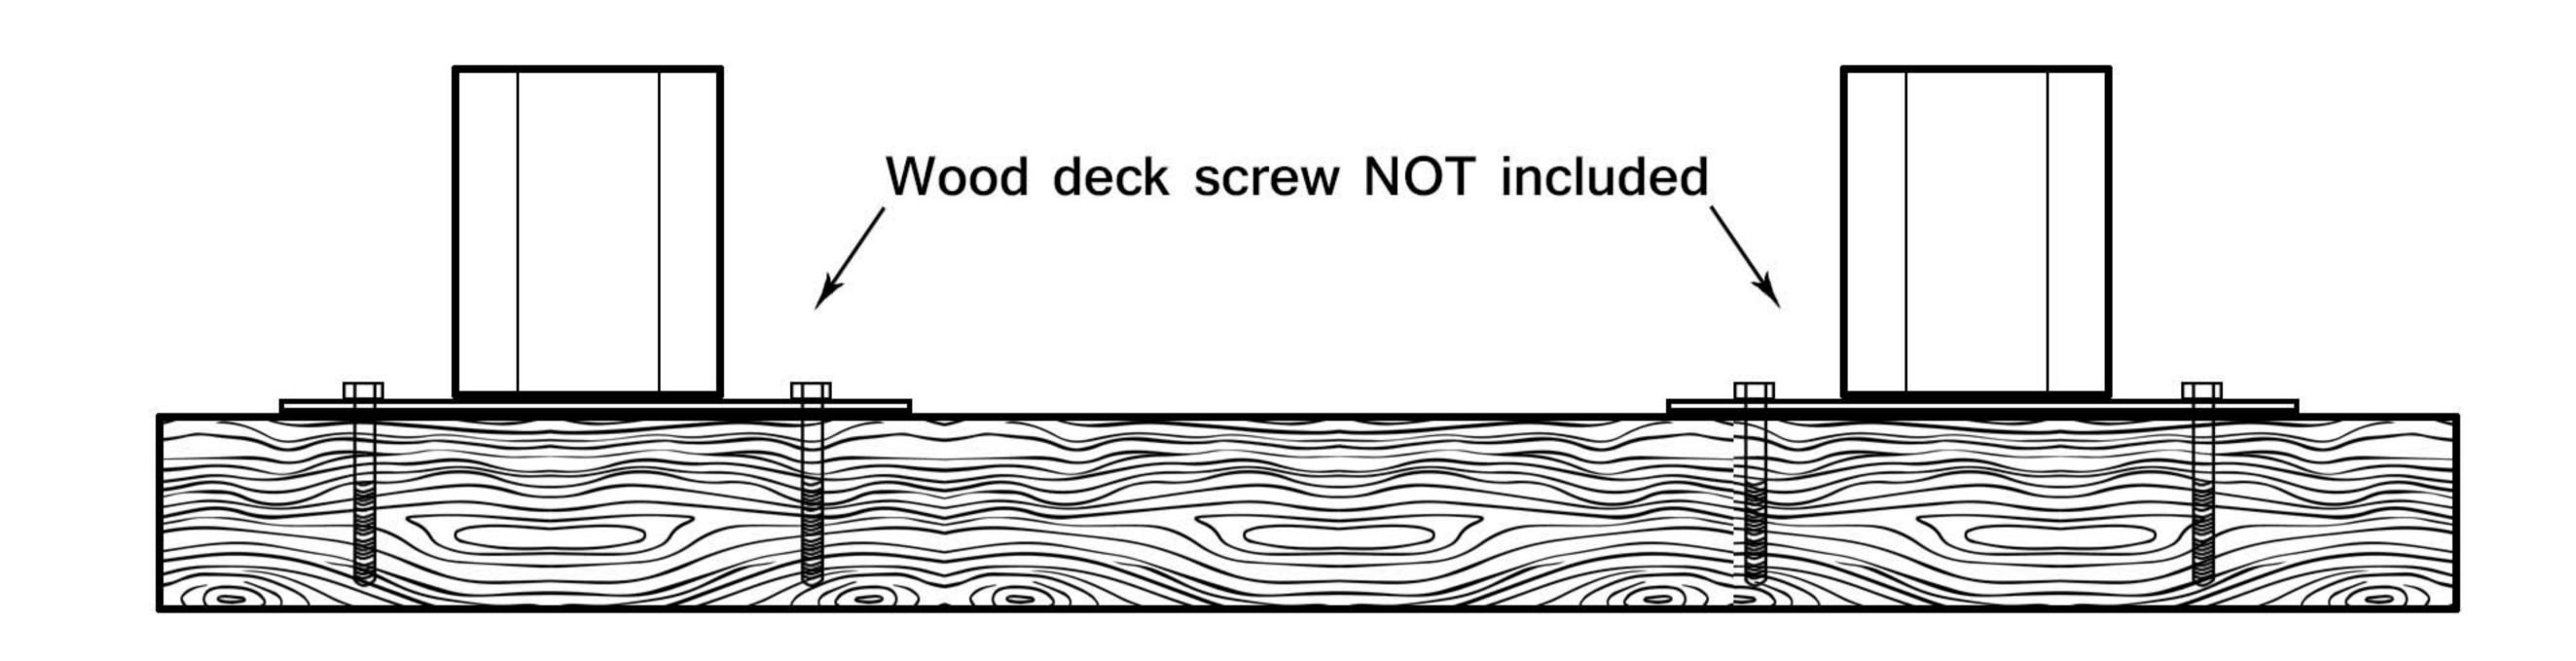

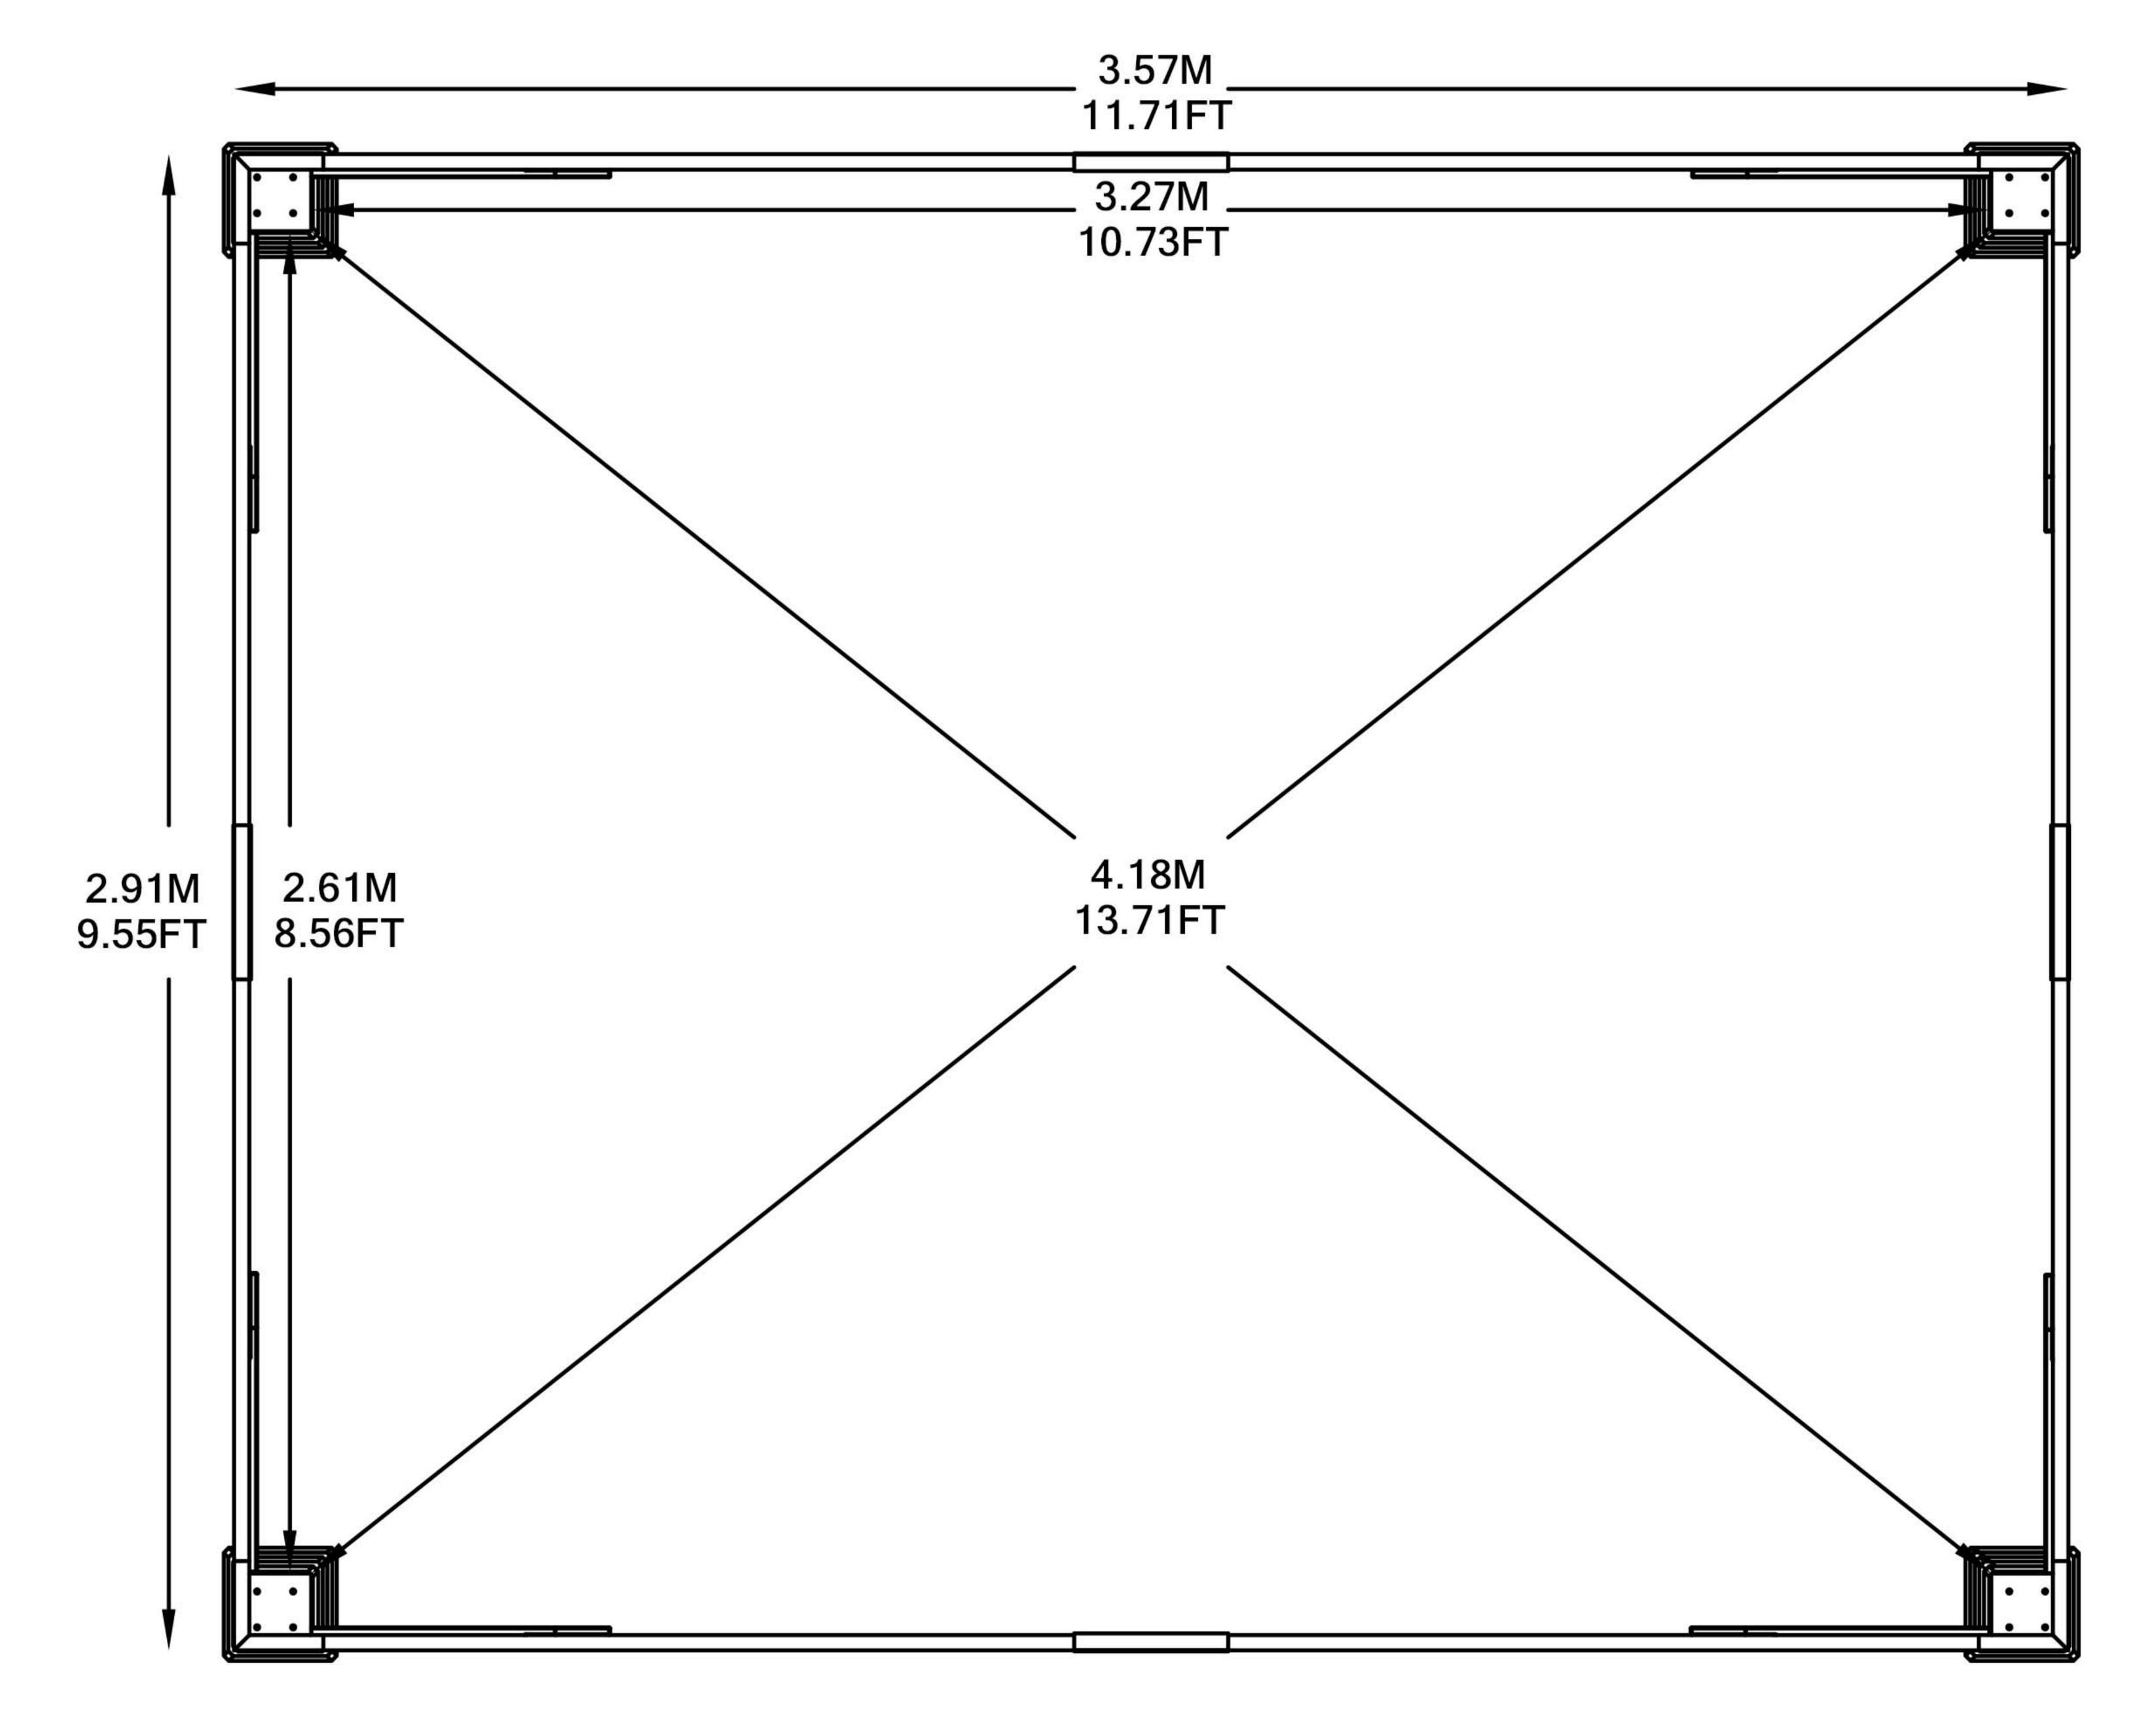



# BOX 1 SKU: C001G047WF-1

ltem no.	Reference Image	Qty.
A		4


## SKU: C001G047WF-2

ltem no.	Reference Image	Qty.
B		2
BI		2
		2
		2
E		4
		4

ltem no.	Reference Image	Qty.
	M8X20mm	20
<b>X2</b>	M8X45mm	16
X3	M8X35mm	32

# BOX 3 SKU: C001G047WF-3

ltem no.	Reference Image	Qty.
		4
		4
		4
G1		2



Item no.	Reference Image	Qty.
G2		2
G3		2
G4	<u>_</u>	2
<b>G5</b>		2

ltem no.	Reference Image	Qty.
M8		4
		4
X5	M6X38mm	4
X6	M6X15mm	113
<b>X</b> 7	(h)	40
X8	M6X30mm	4

ltem no.	Reference Image	Qty.
X9	M5X15mm	32
		16
G6		2
G7		2
G10		2
	° ° °	4


ltem no.	Reference Image	Qty.
	•	4
H2		4
H3	**************************************	4
		4
		4
		4
		4


ltem no.	Reference Image	Qty.
M2		8
M3		8
M4	0/0/0	8
(M5)		40
M6		4
		2
		8

BOX 4 SKU: C001G047WF-4


ltem no.	Reference Image	Qty.
NF		2
(N2)		2
(N3)		2
(NA)		2
YA		2
Y3		2
Y2		2
03		2
04		2
<b>V4</b>		2
<b>V3</b>		2


ltem no.	Reference Image	Qty.
YI		2
(NG)		2
		2
Y7		2
Y6		2
		2
02		2
<b>V2</b>		2
		2
(O5)		2
<b>V</b> 5		2

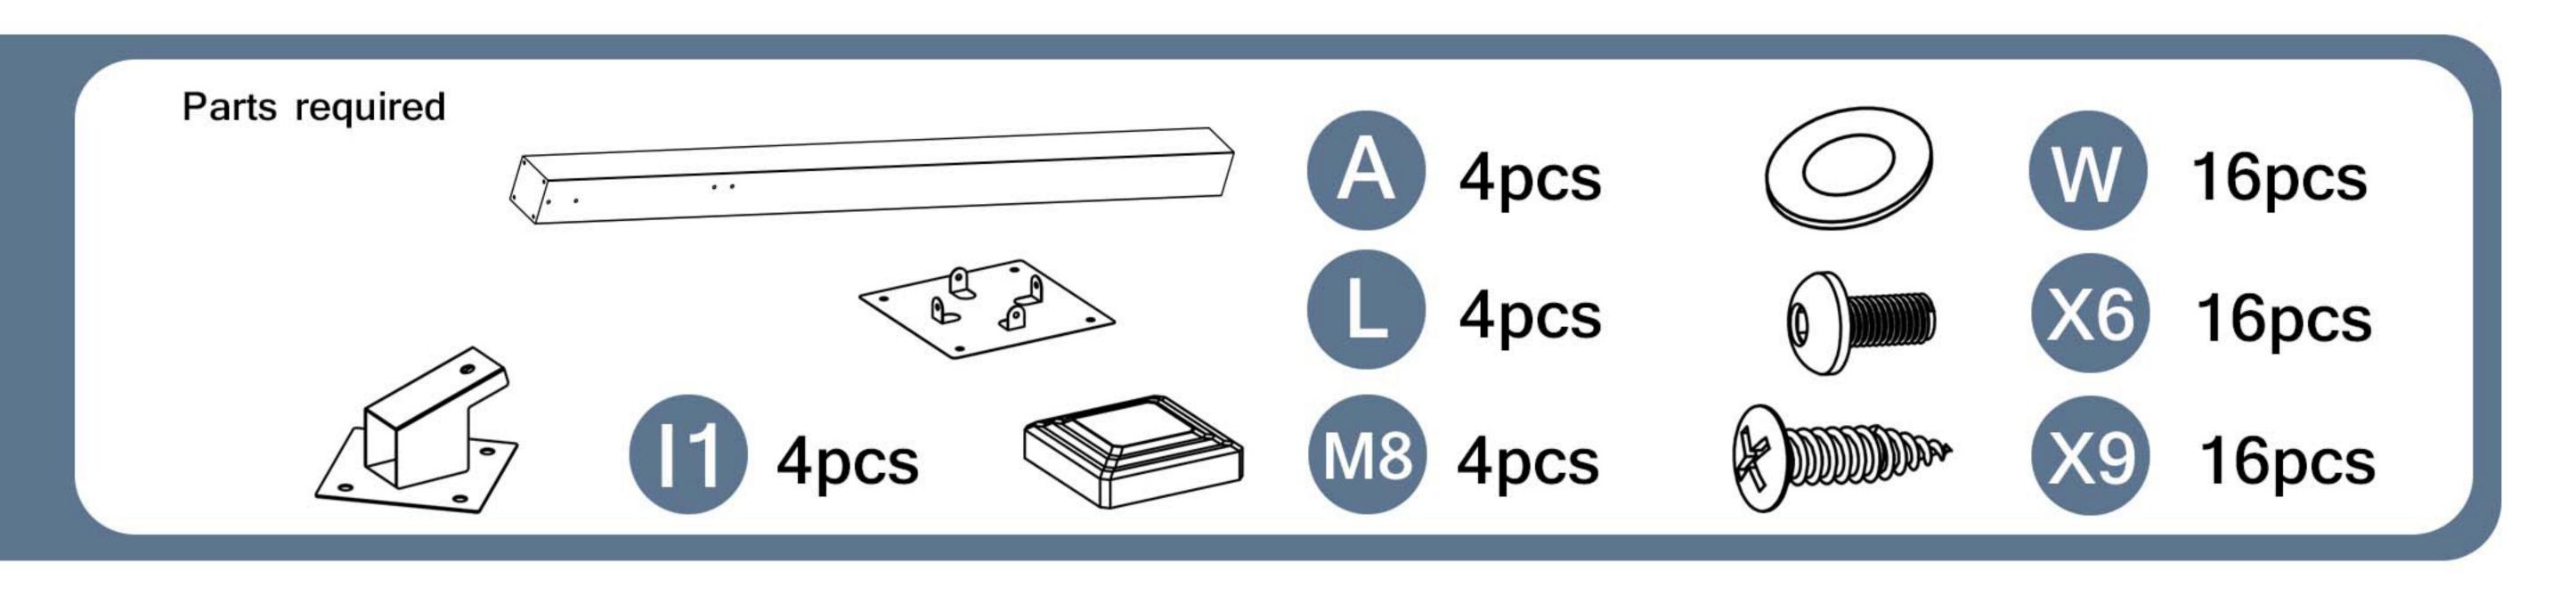

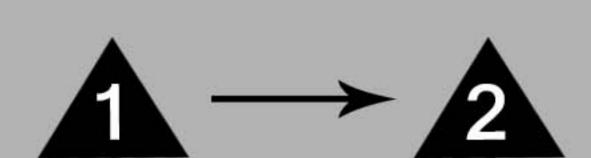


Please note the orientation of the hole.

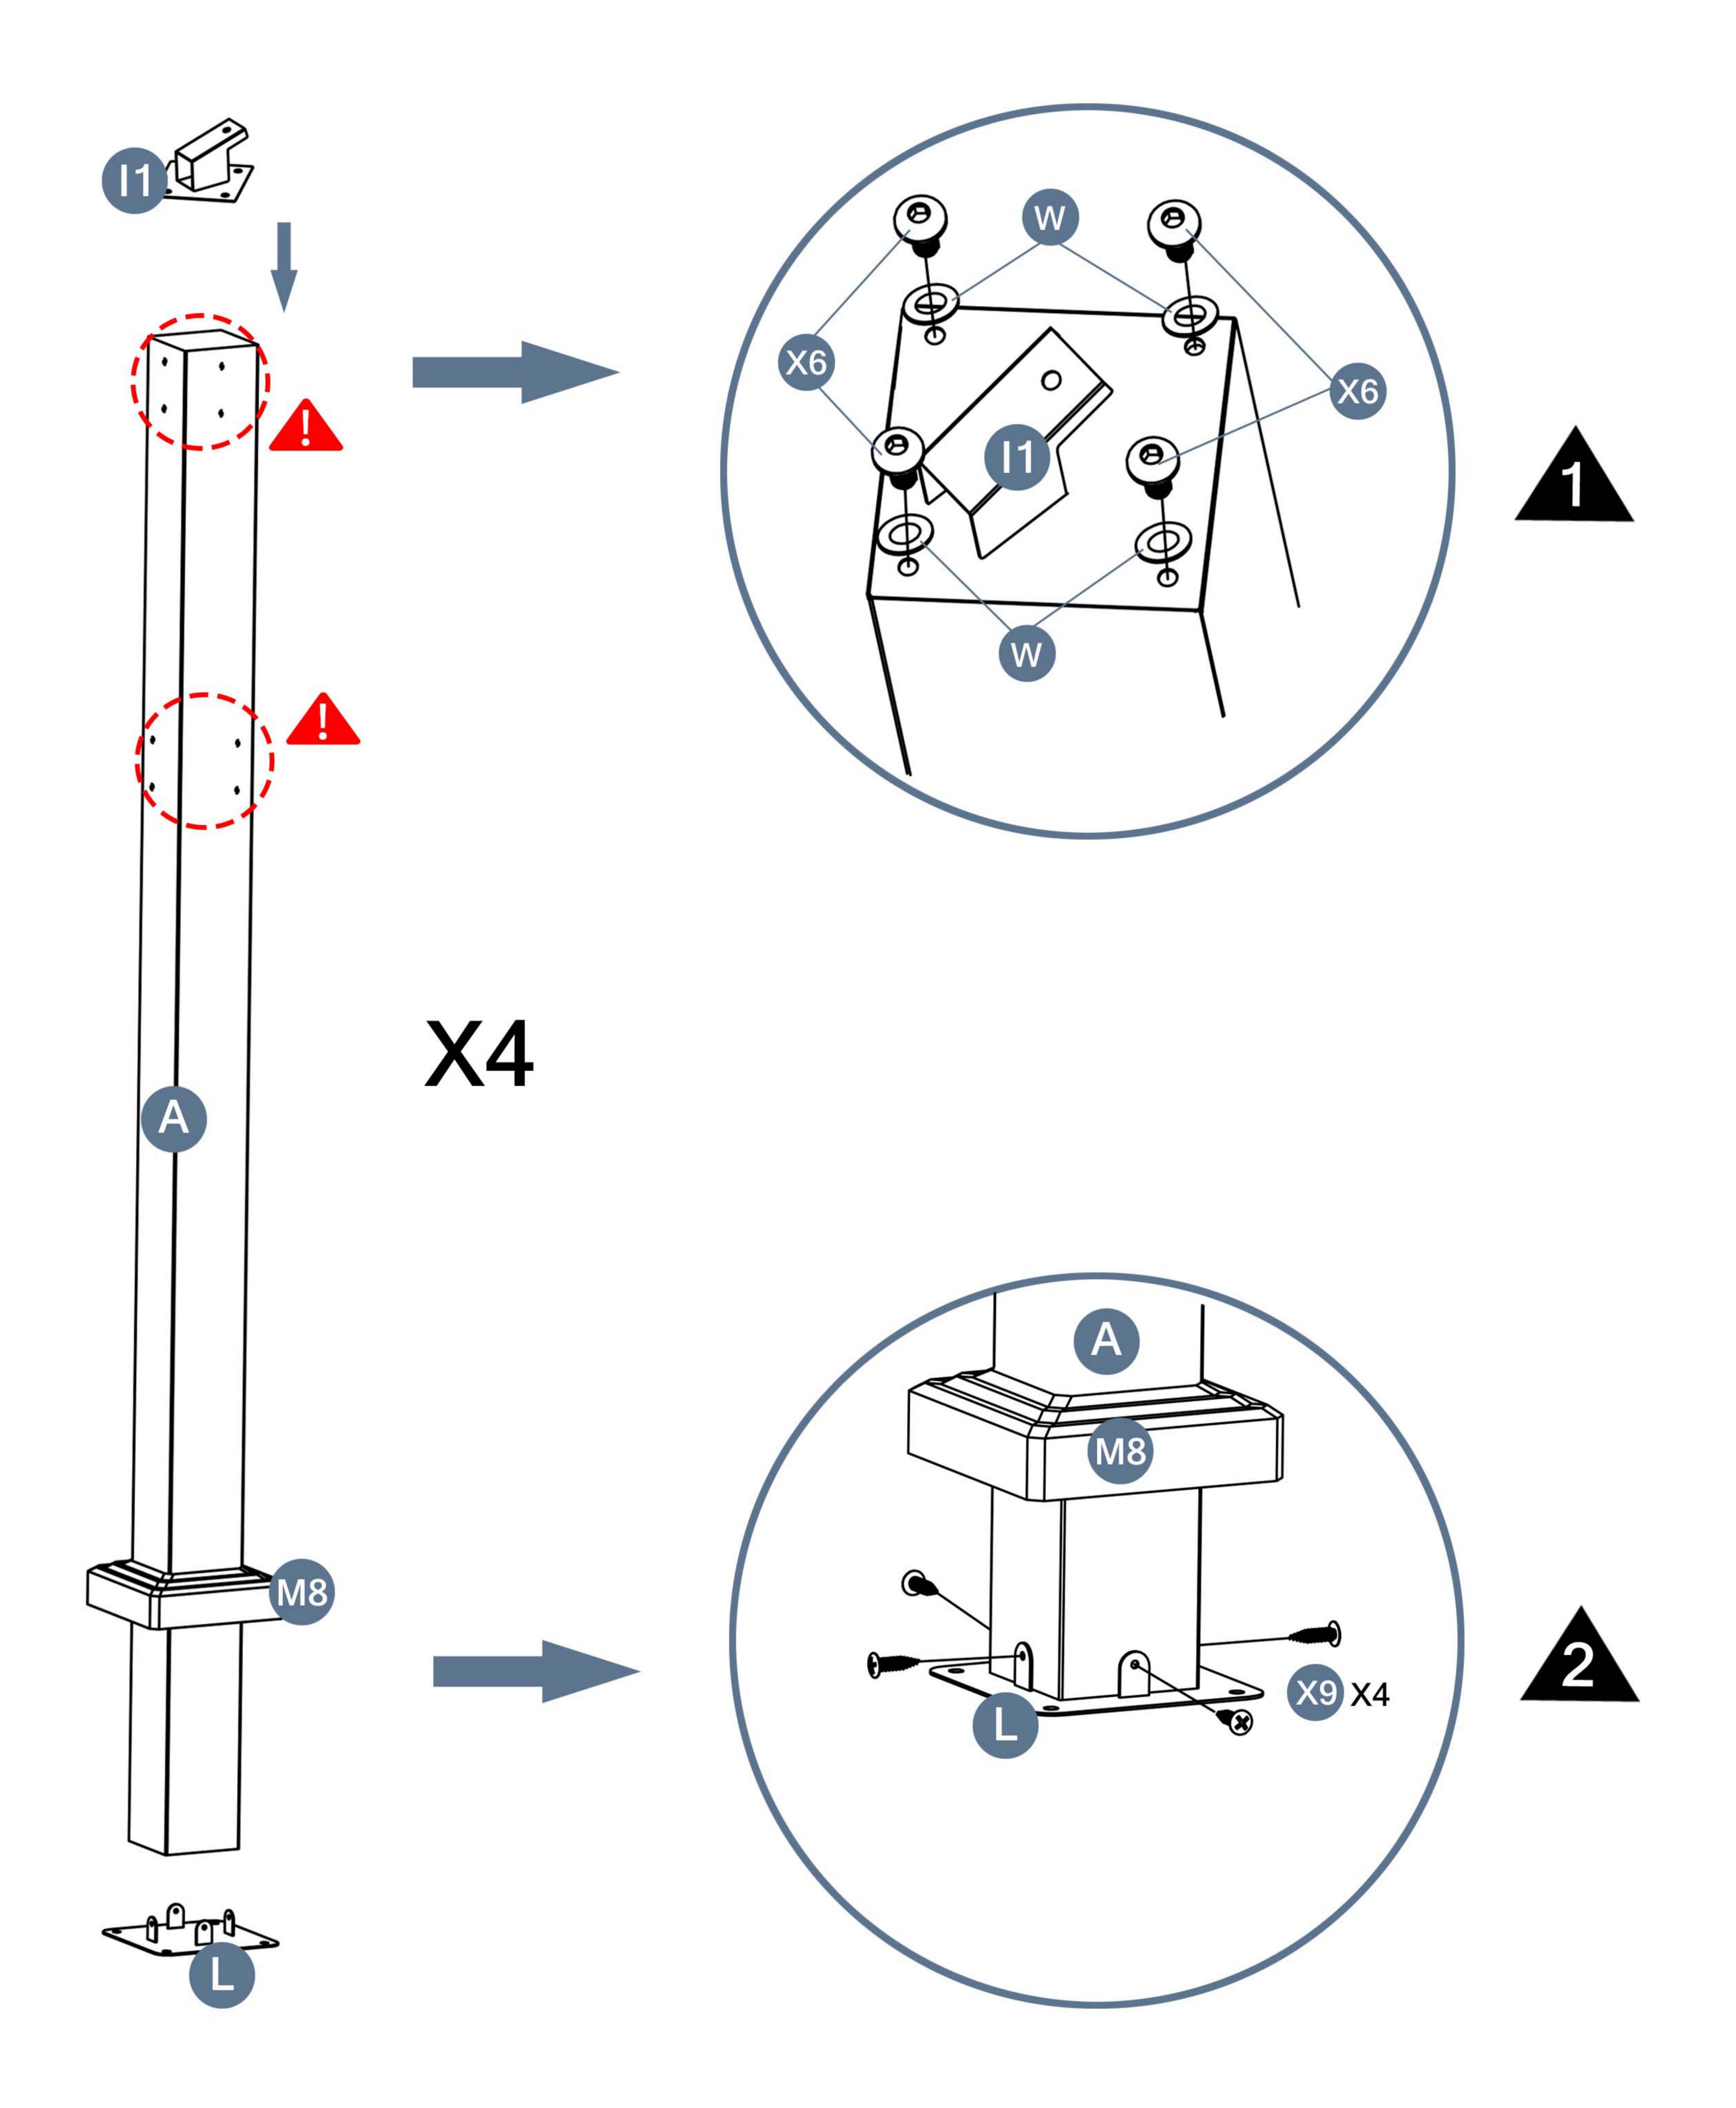

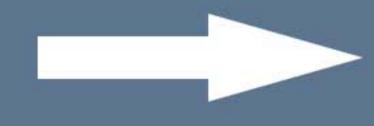


# STEP2

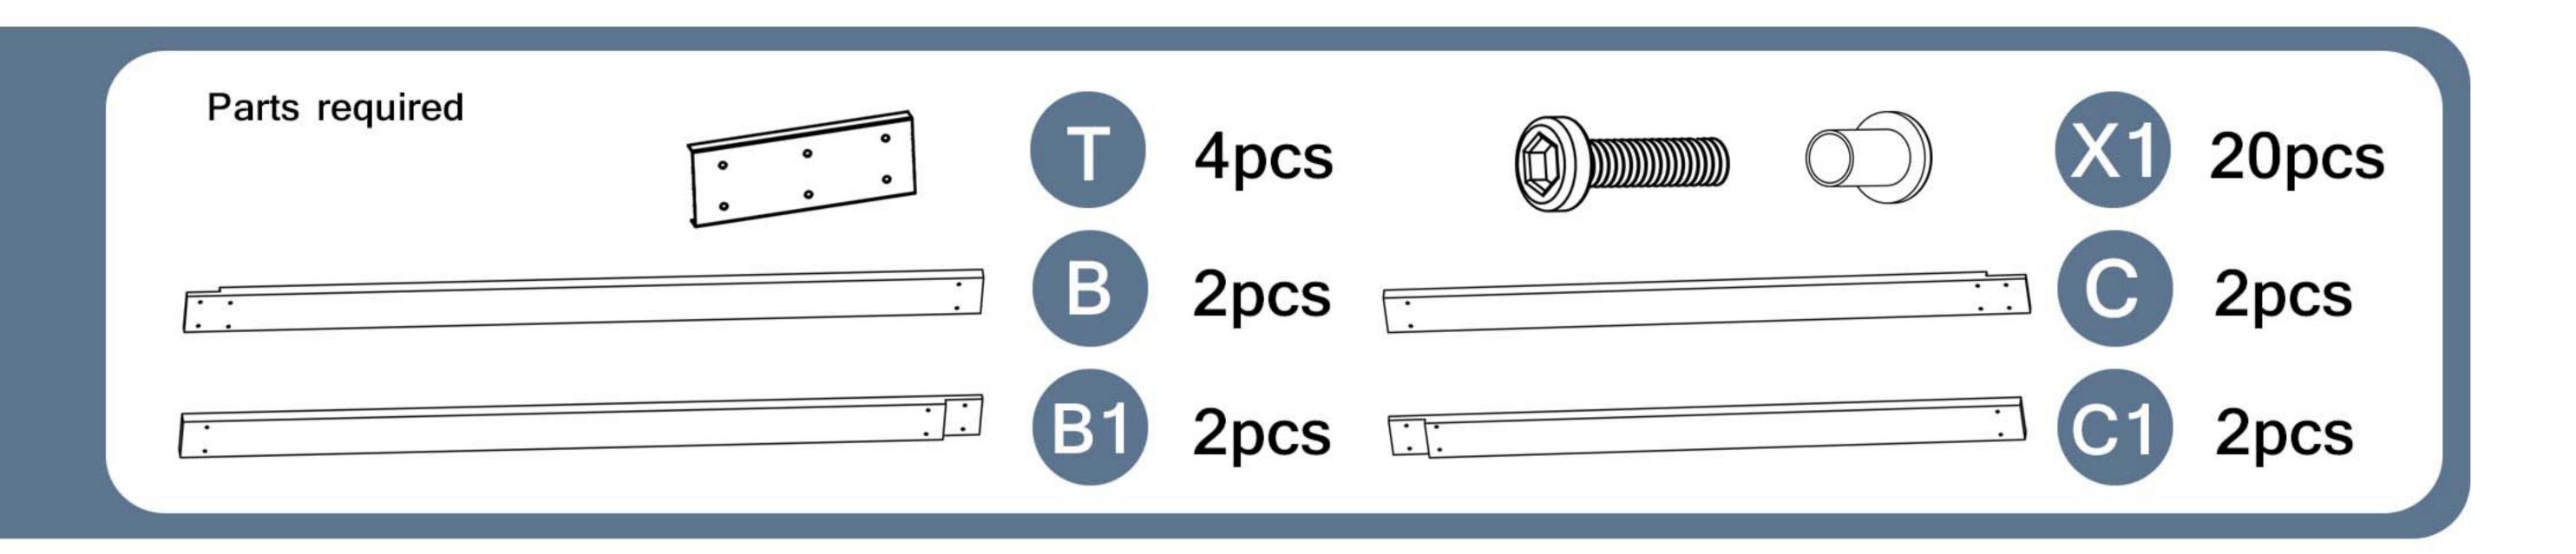


<u>A</u> - <u>A</u> .

Pay attention to the orientation of the red circle, please install the on the back. (shown in the figure), And turn the outward when the combination is installed.

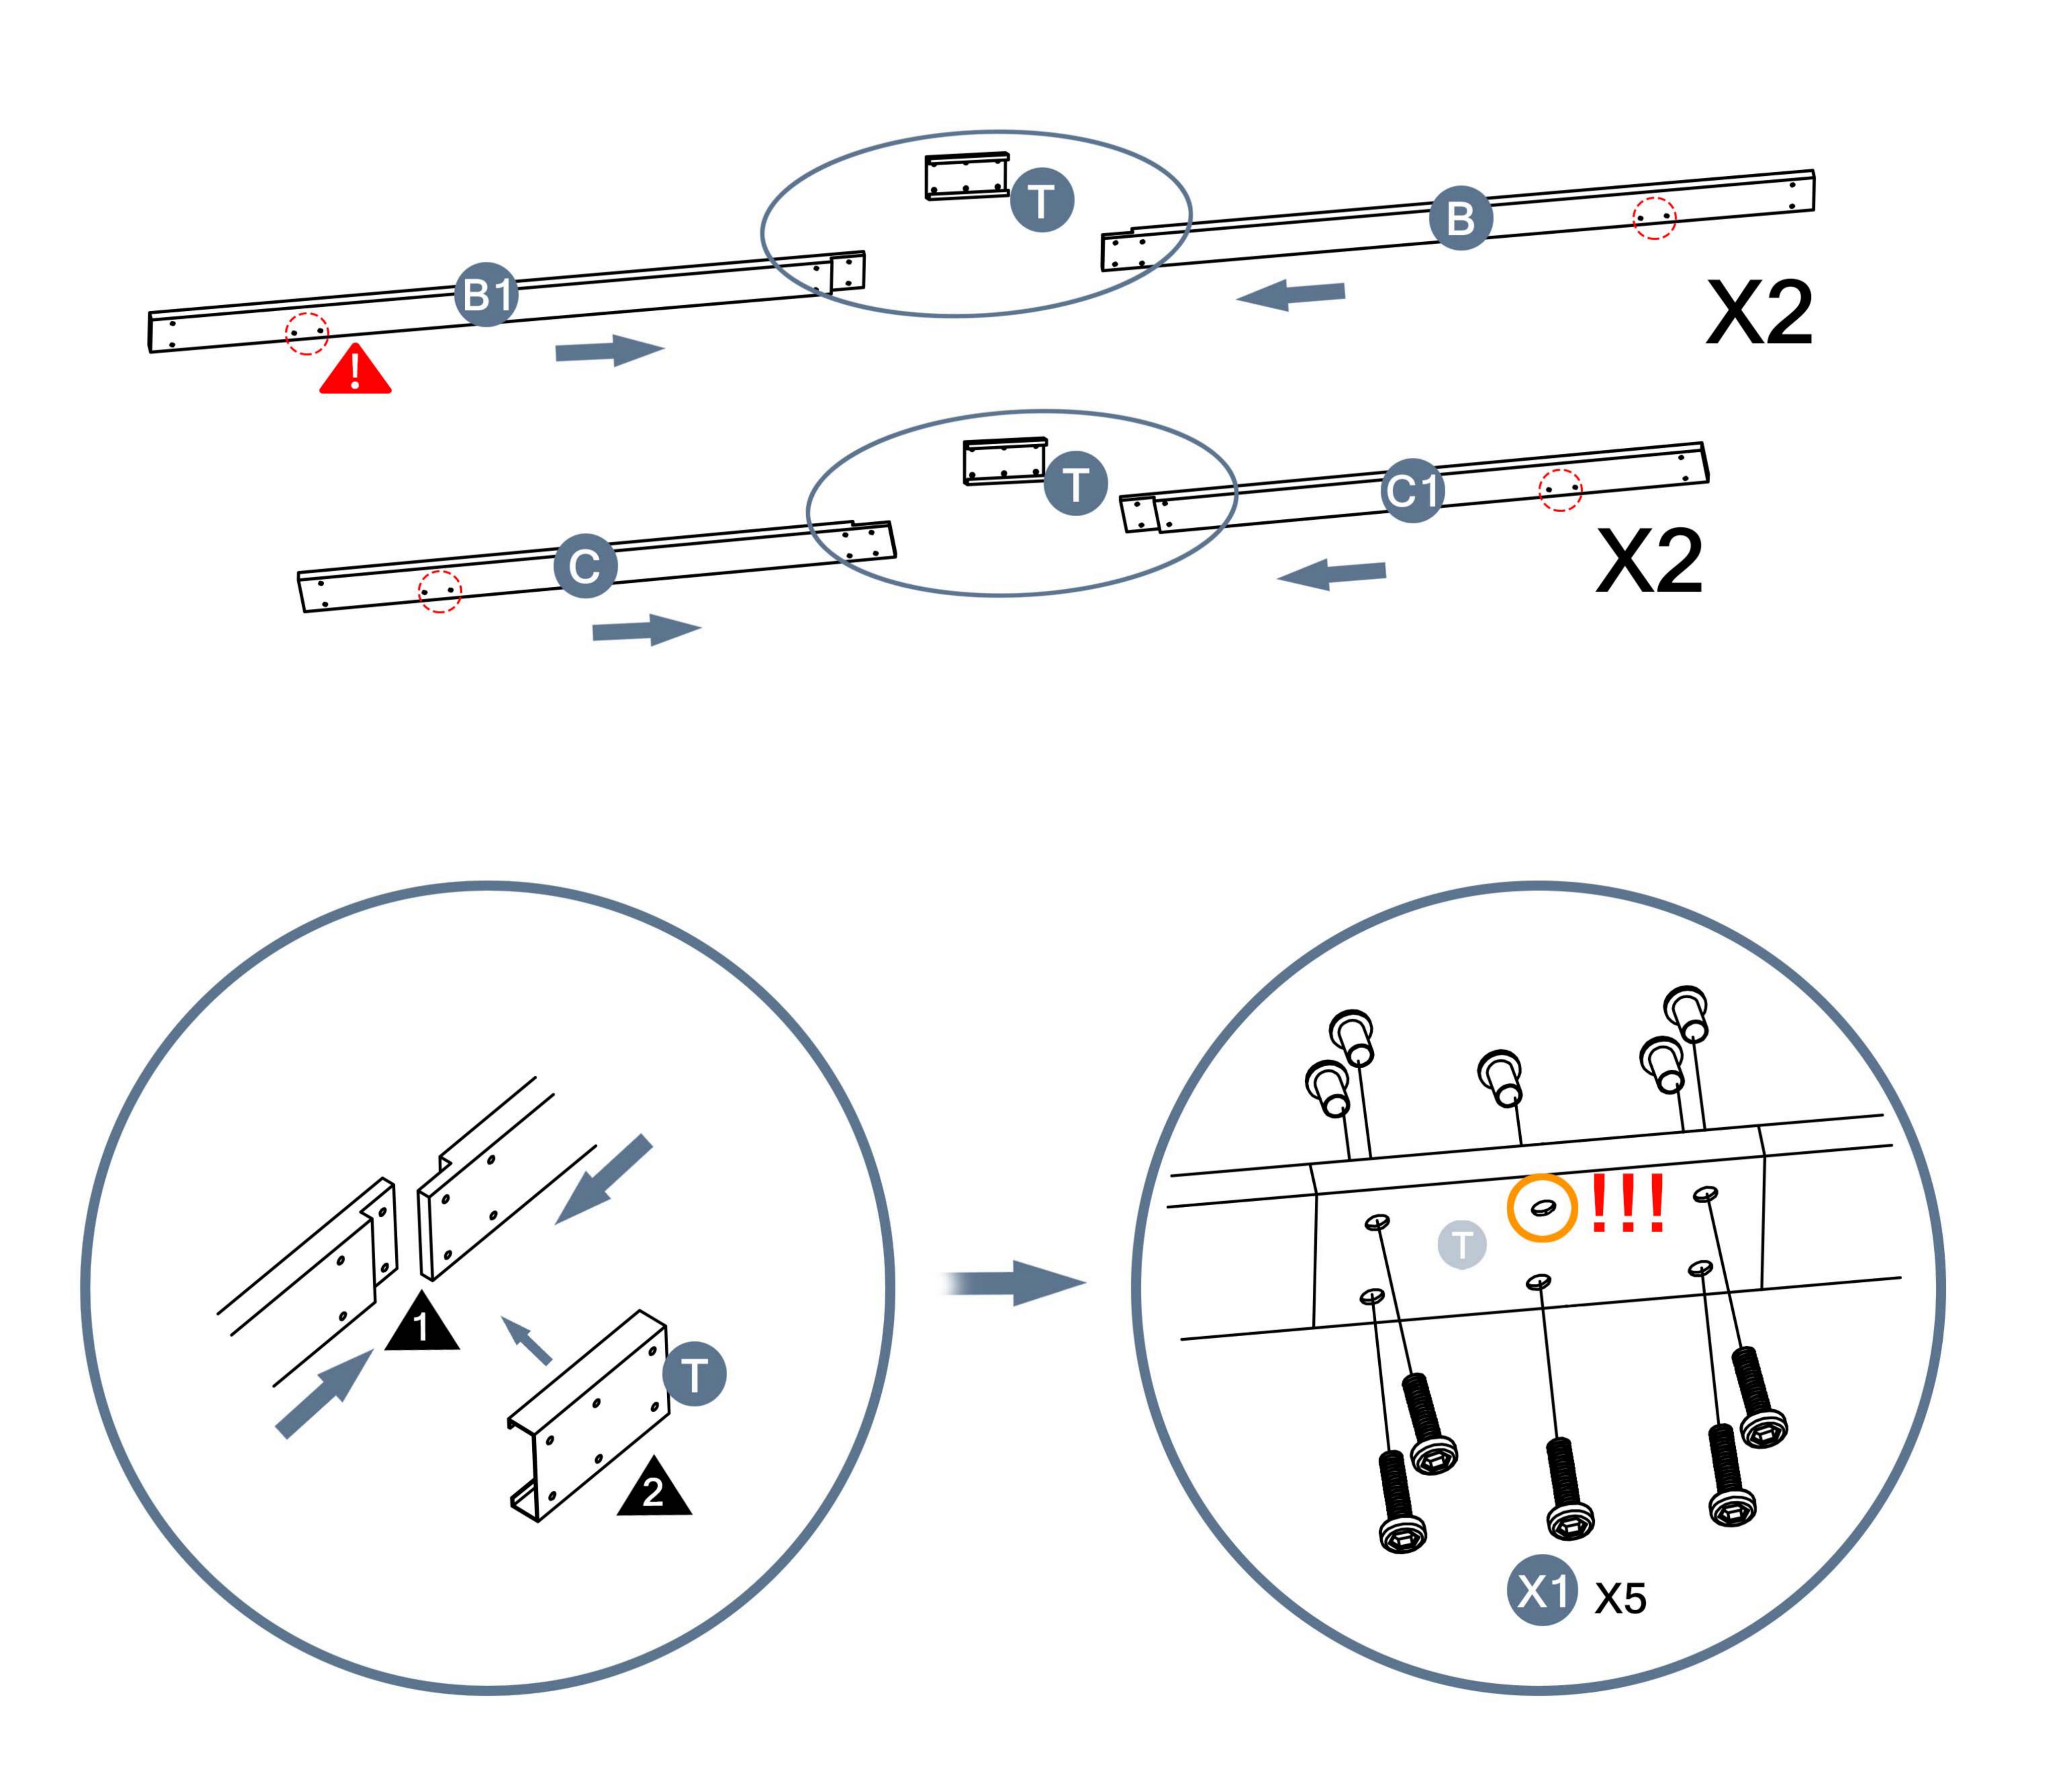

Be careful not to screw the screws at the yellow circle. Step 5 is screwing.


Parts required

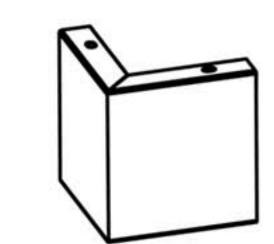








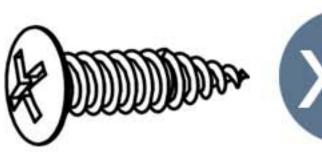





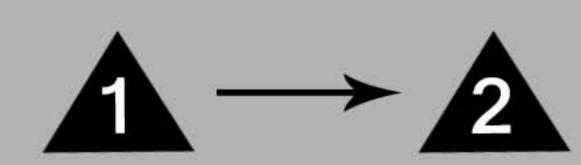





Please Note that the X9 circled in red is a self-tapping nail without hole, it can be directly tightened.

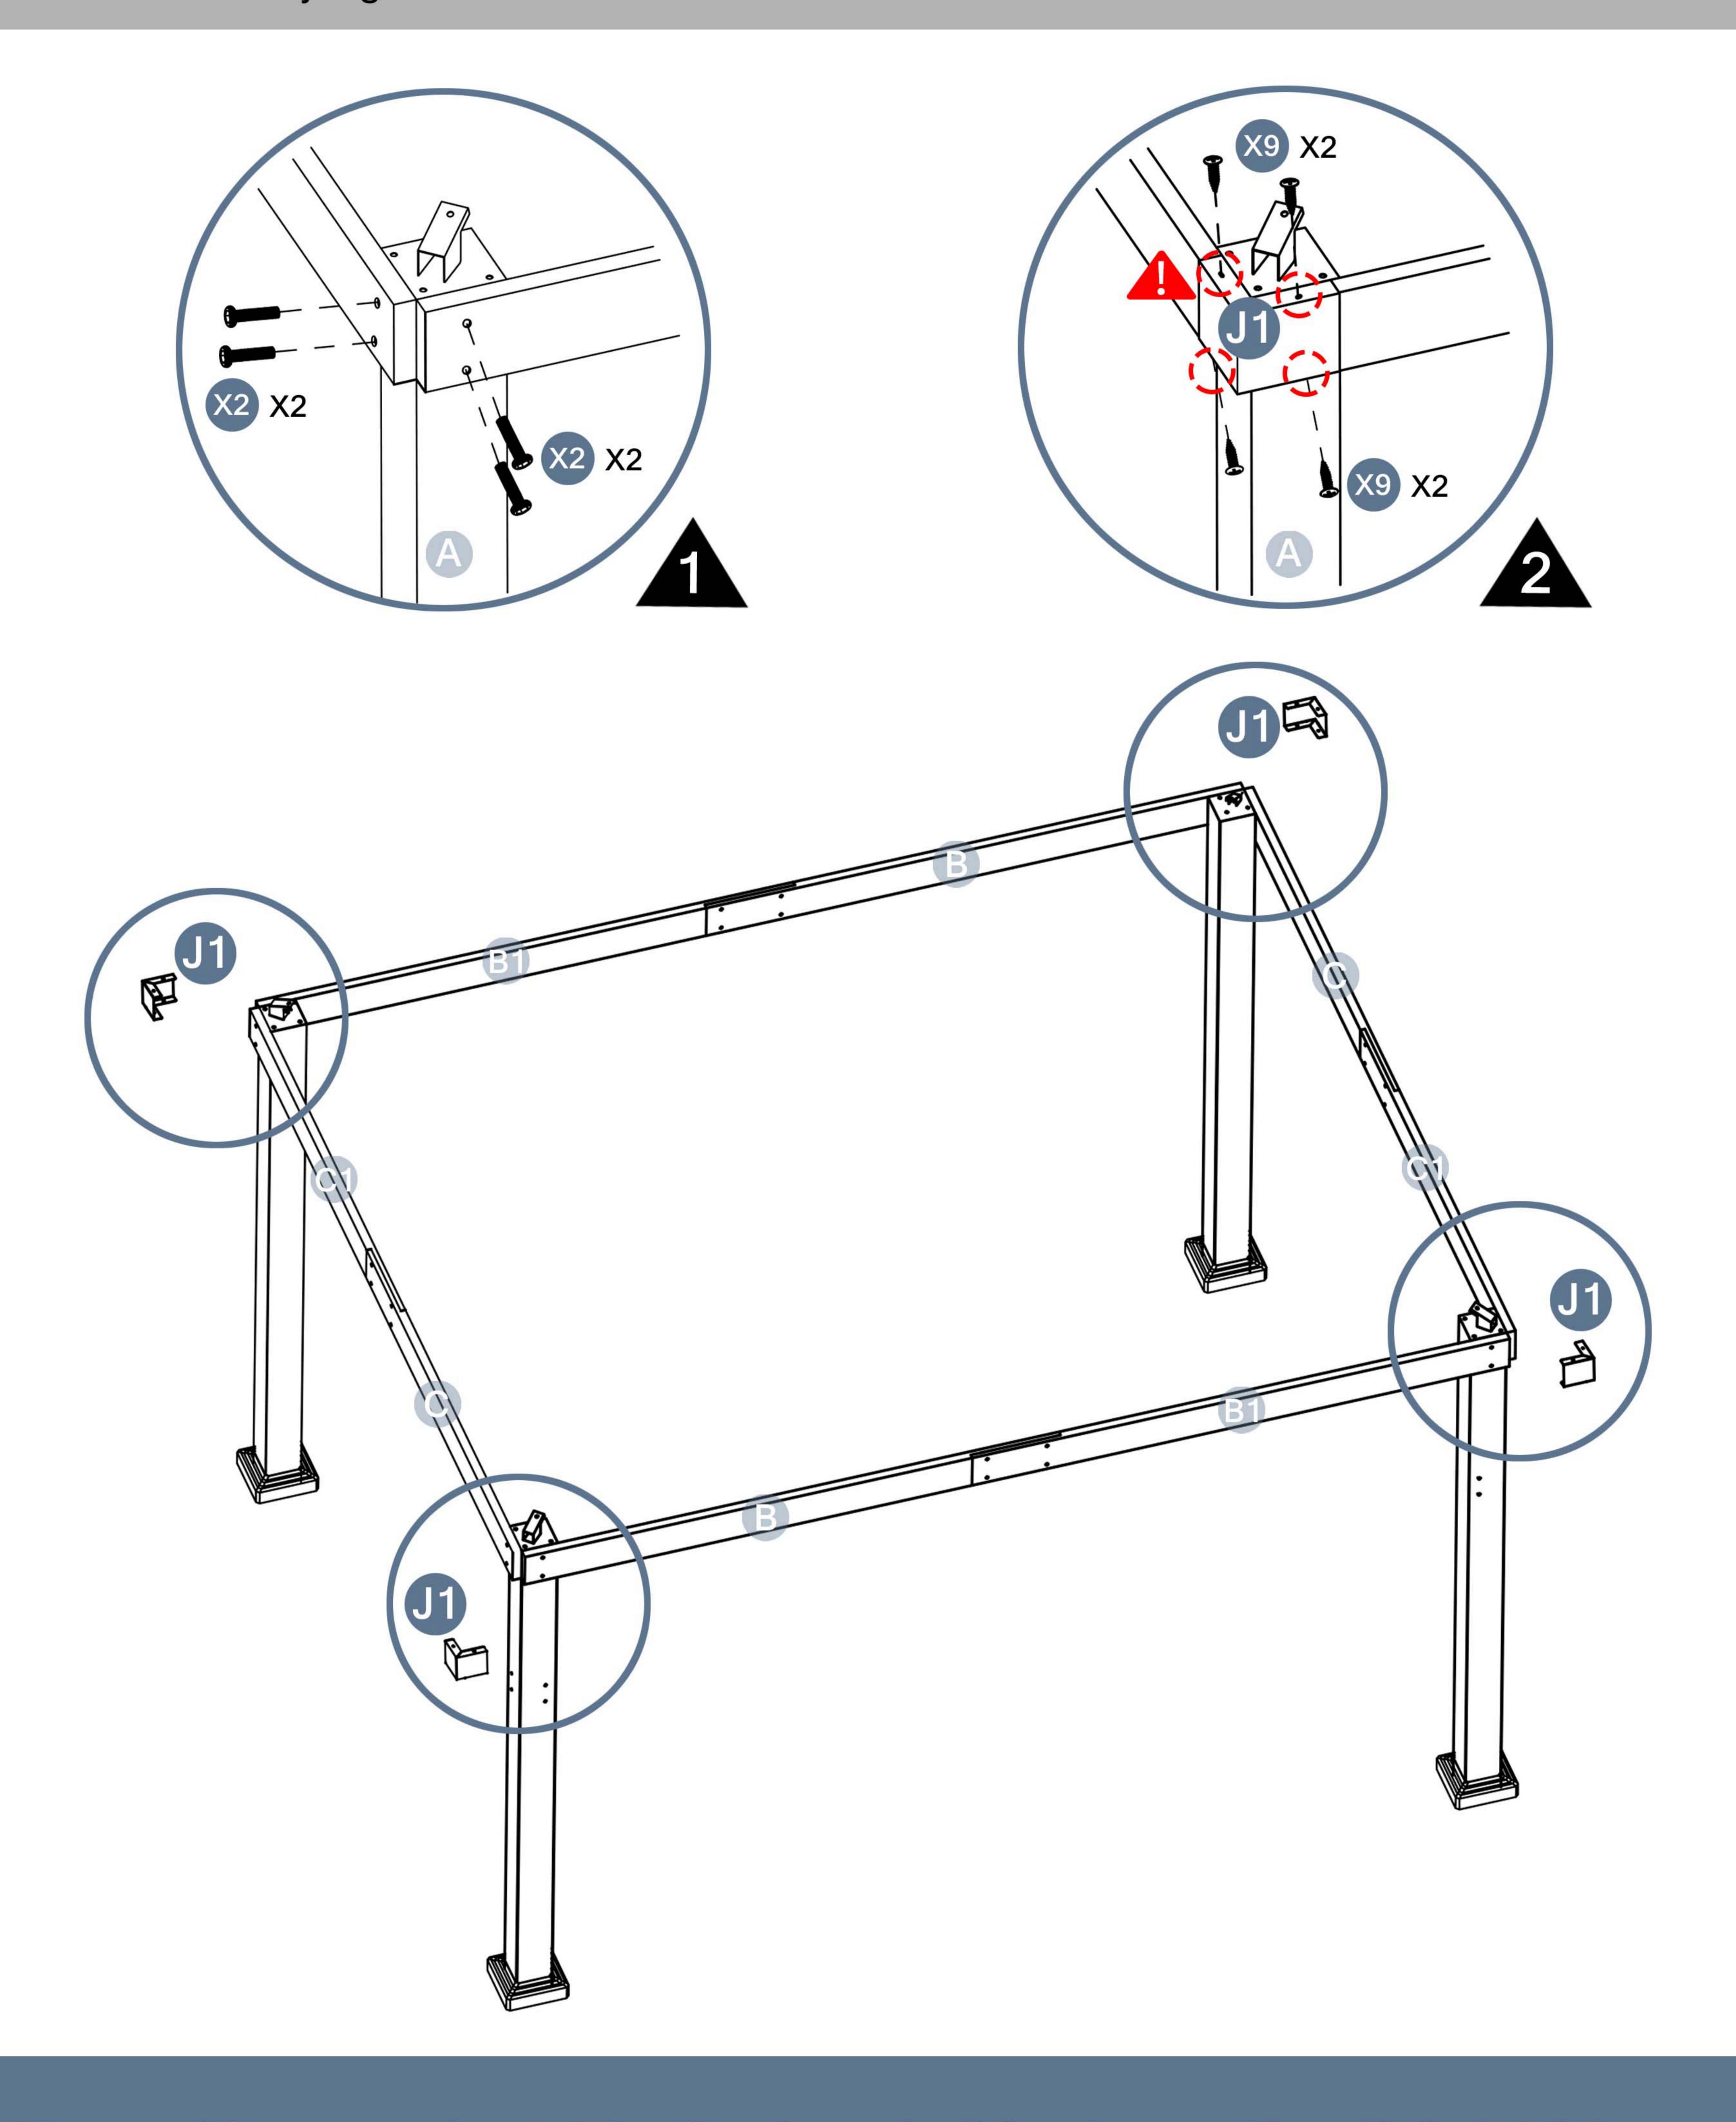


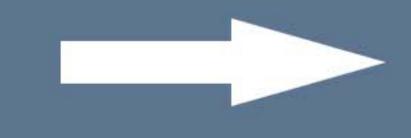



# STEP4

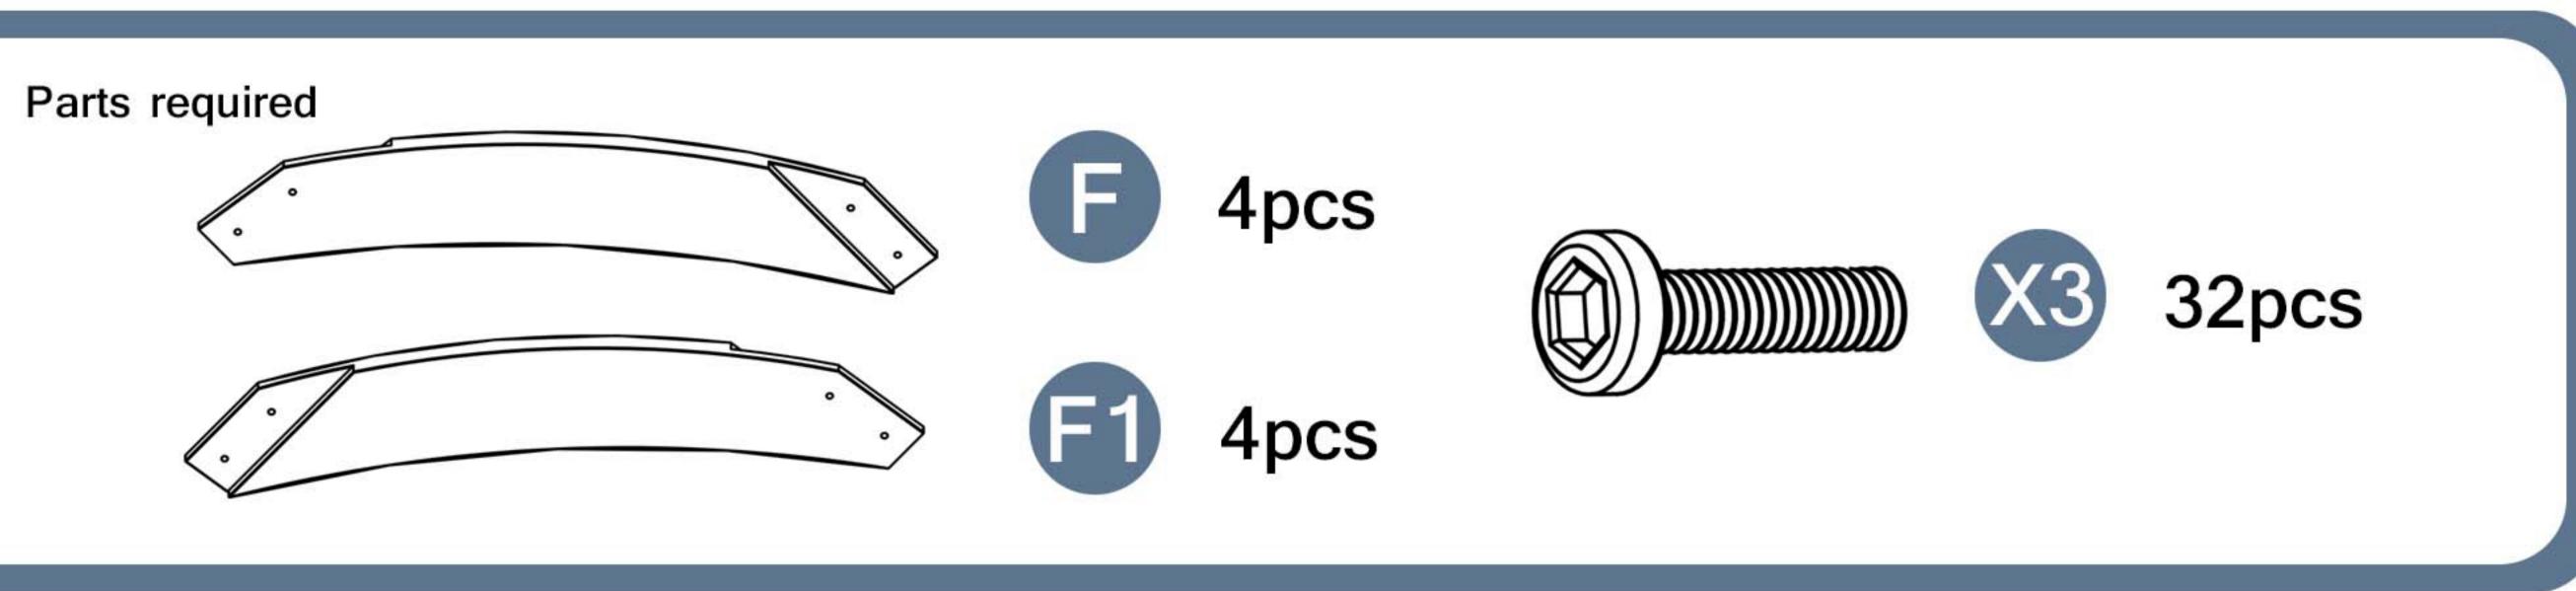


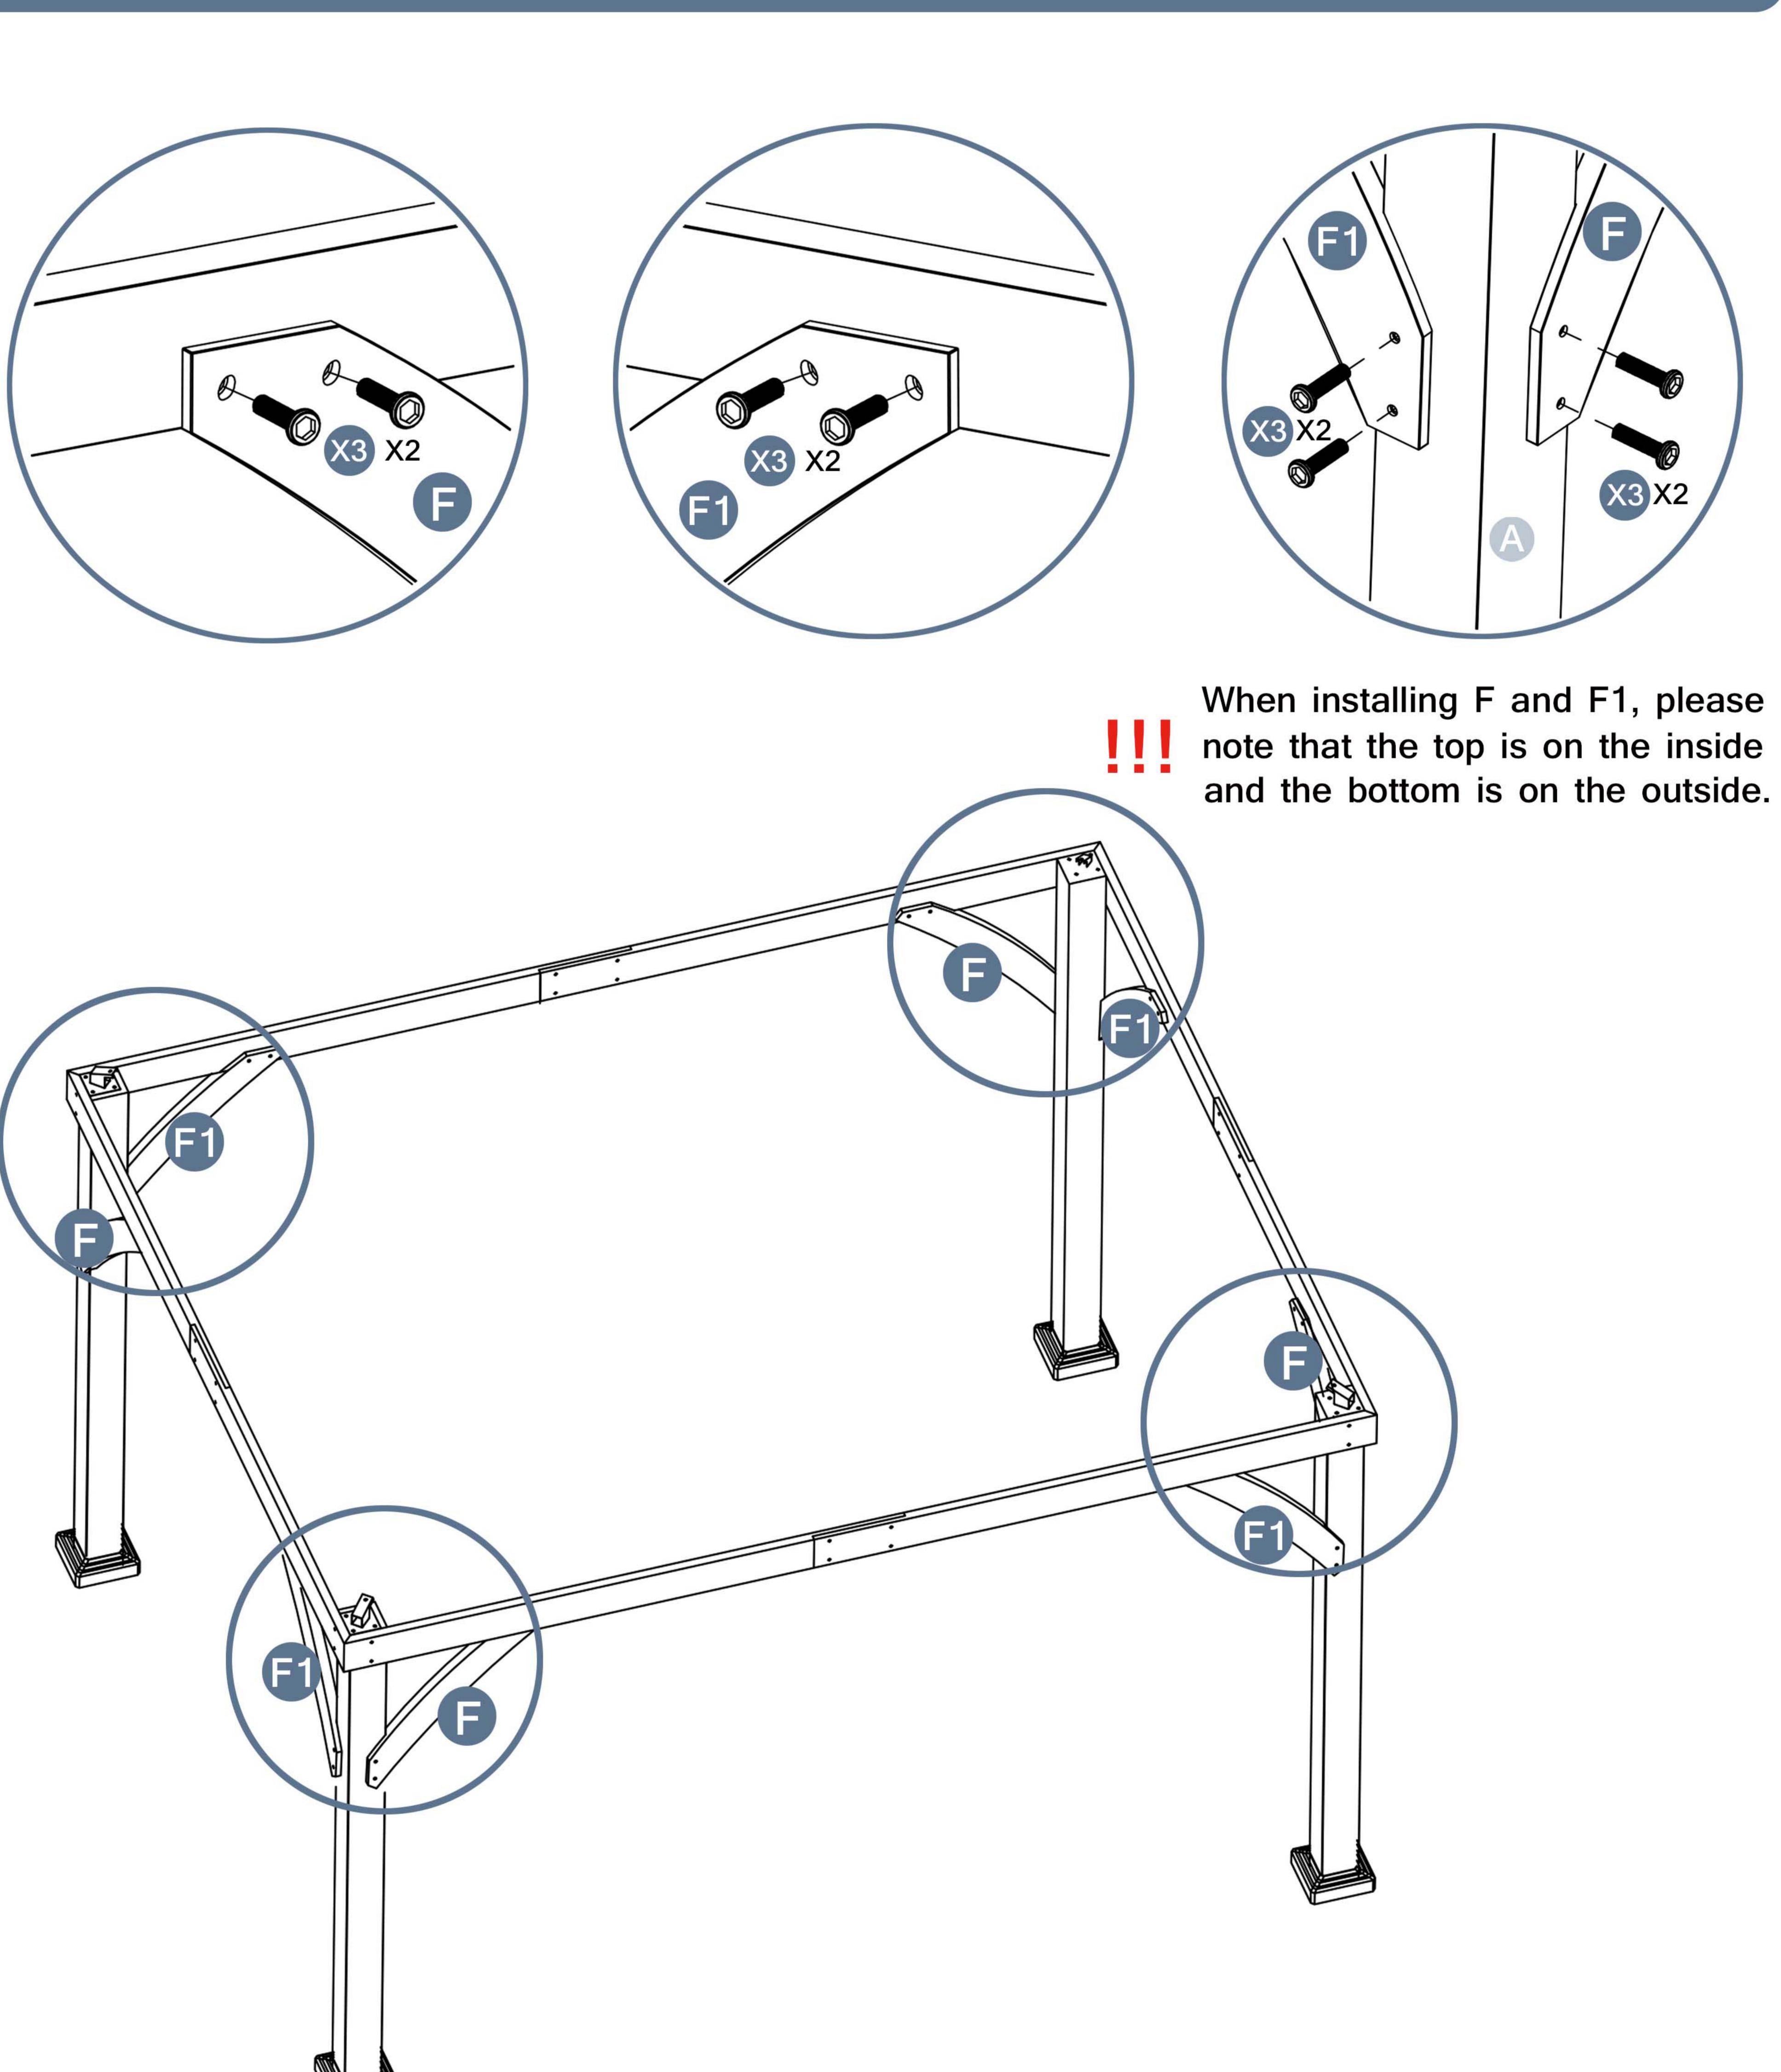

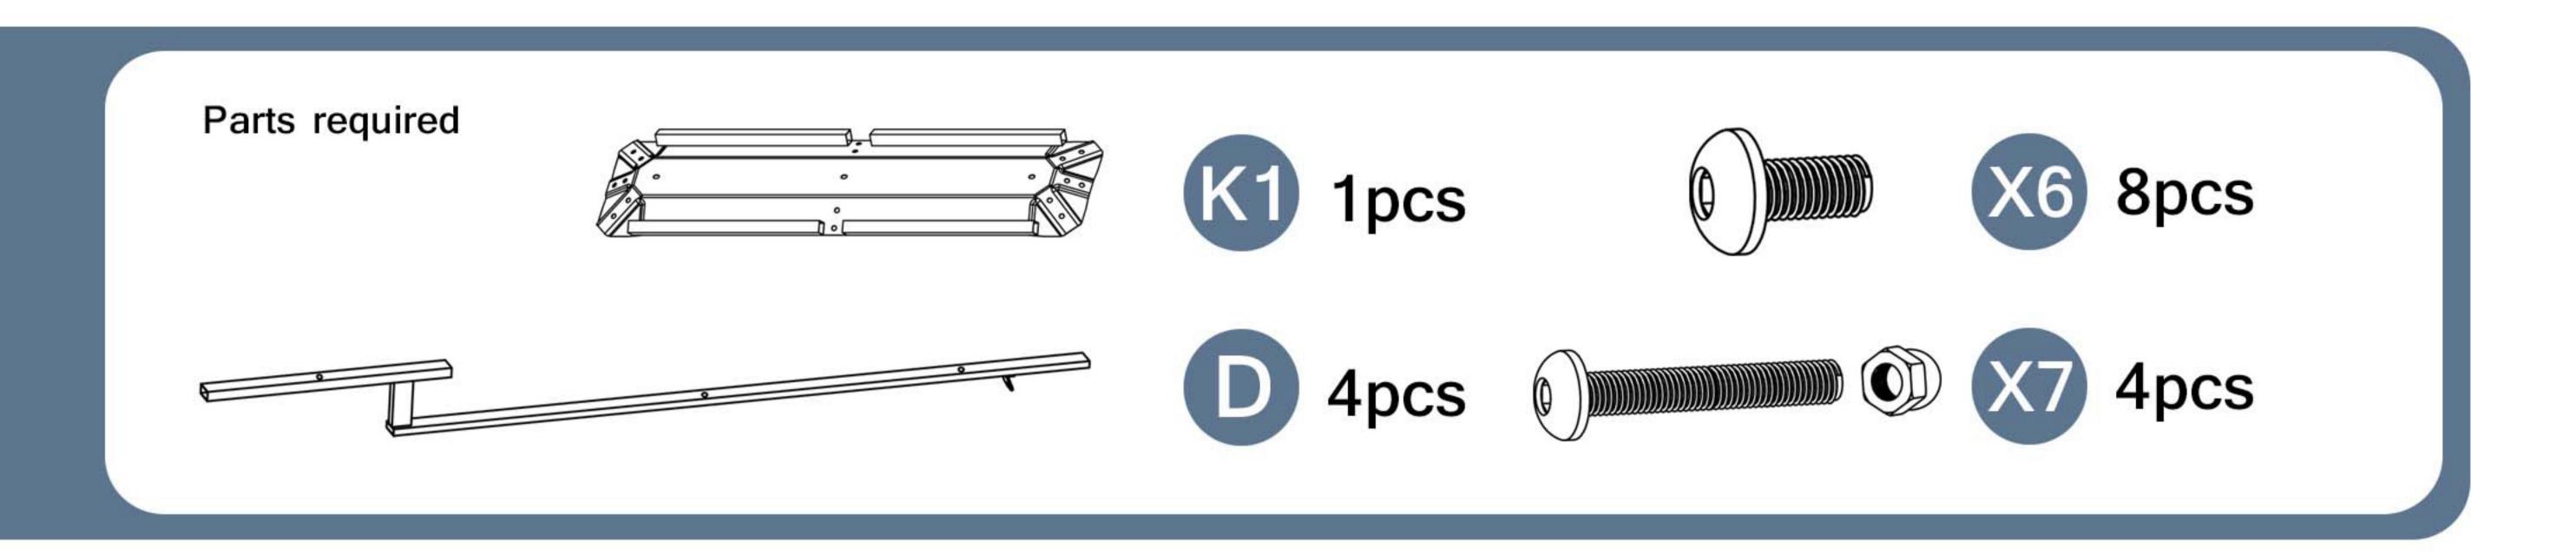

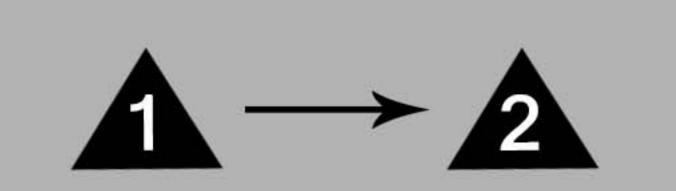


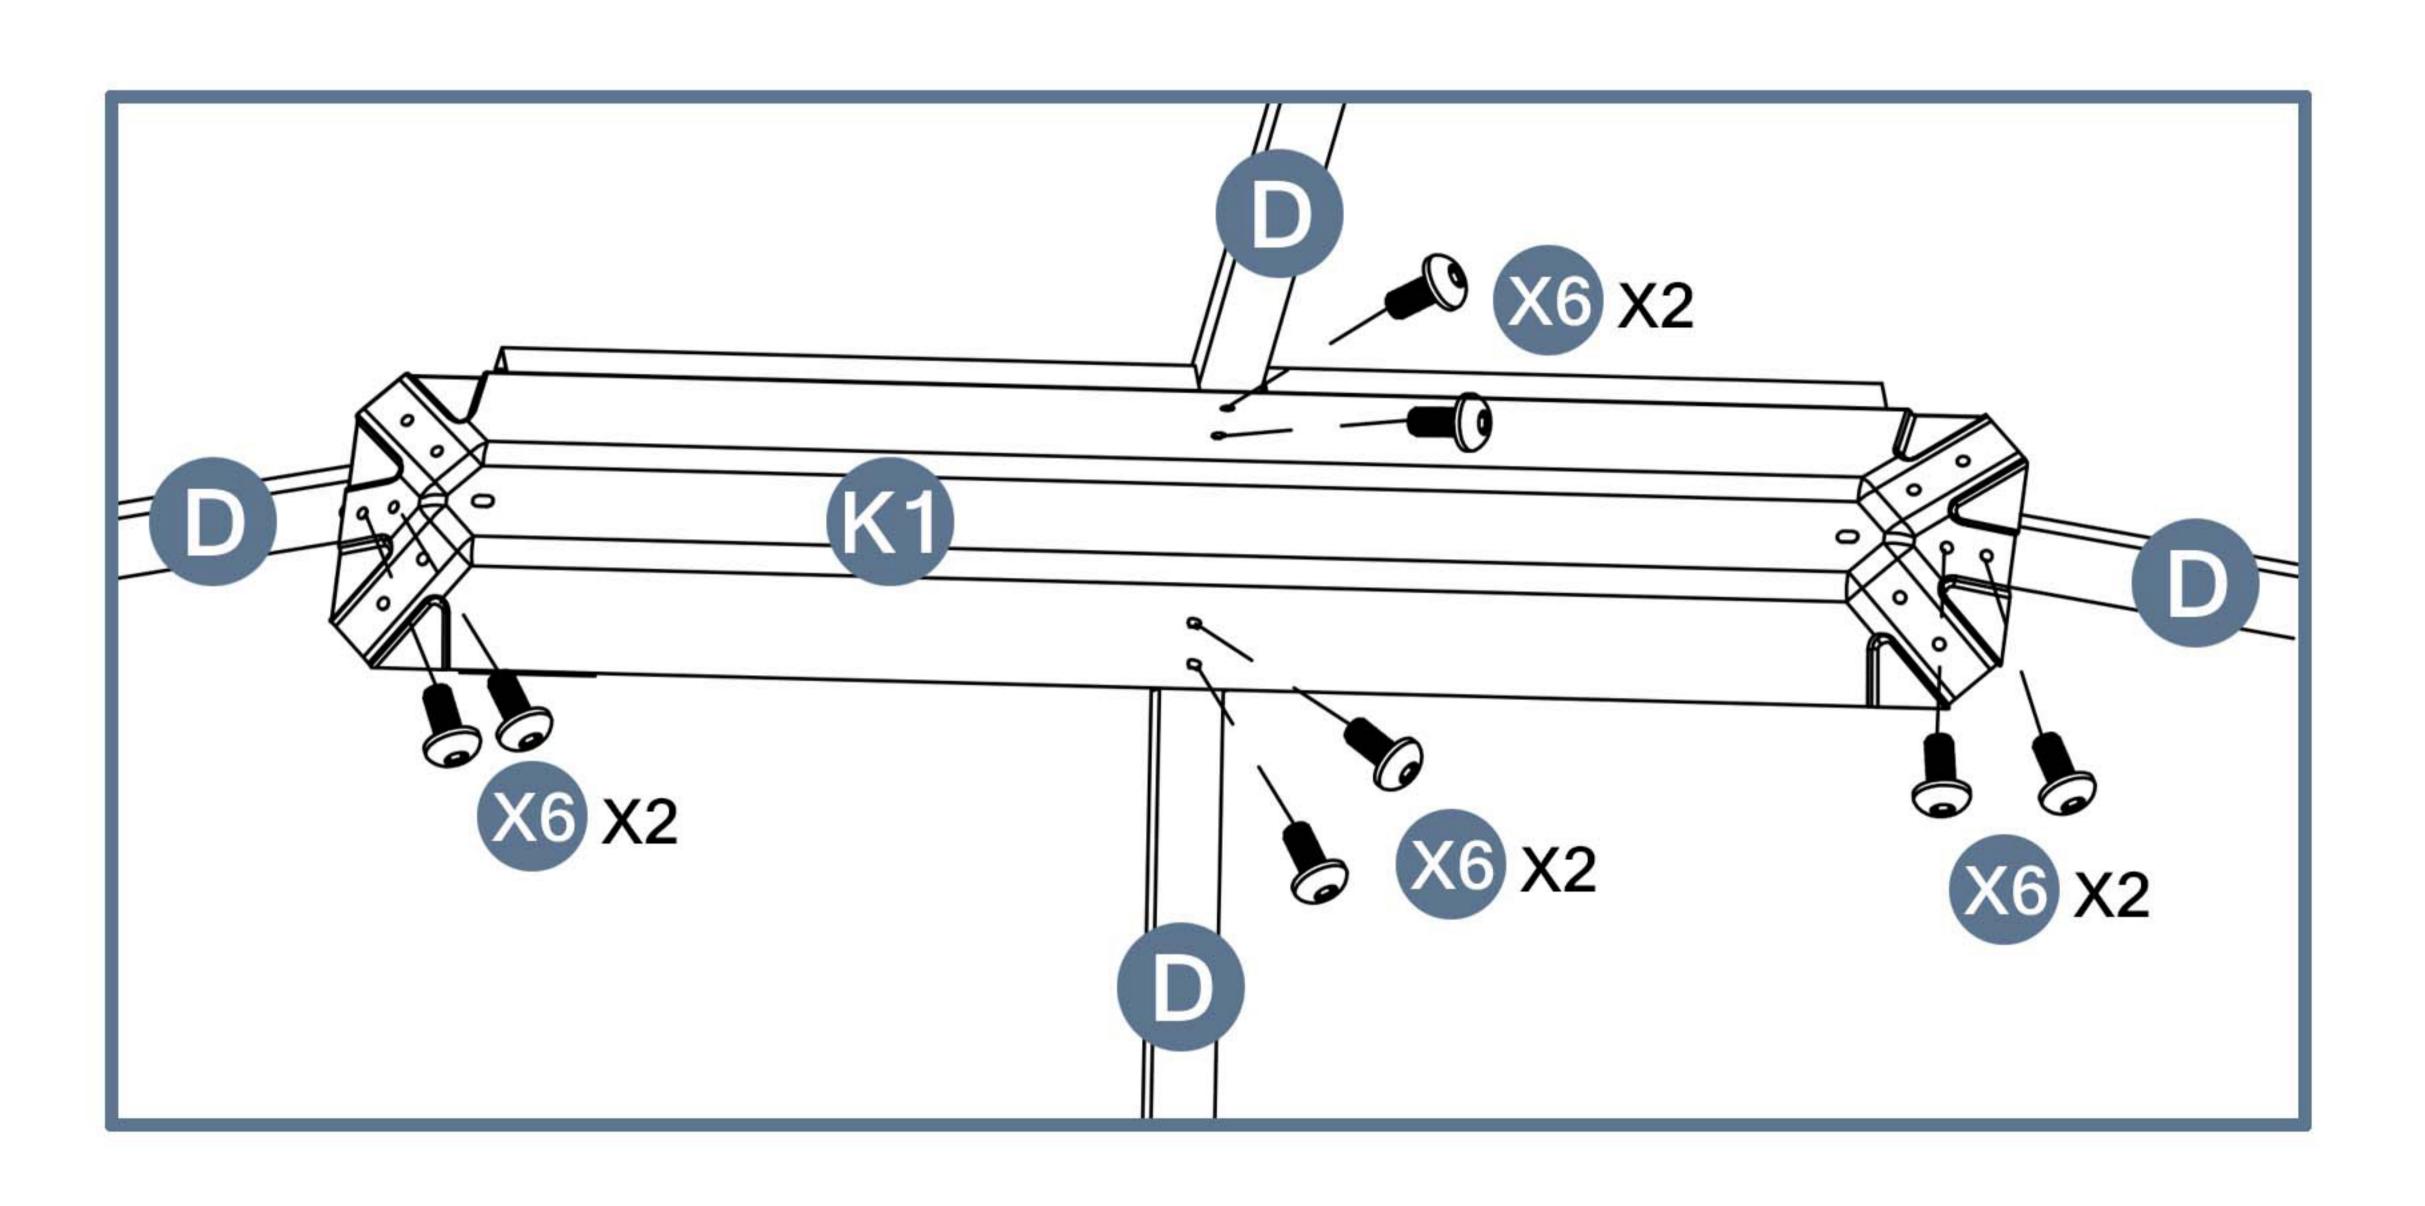


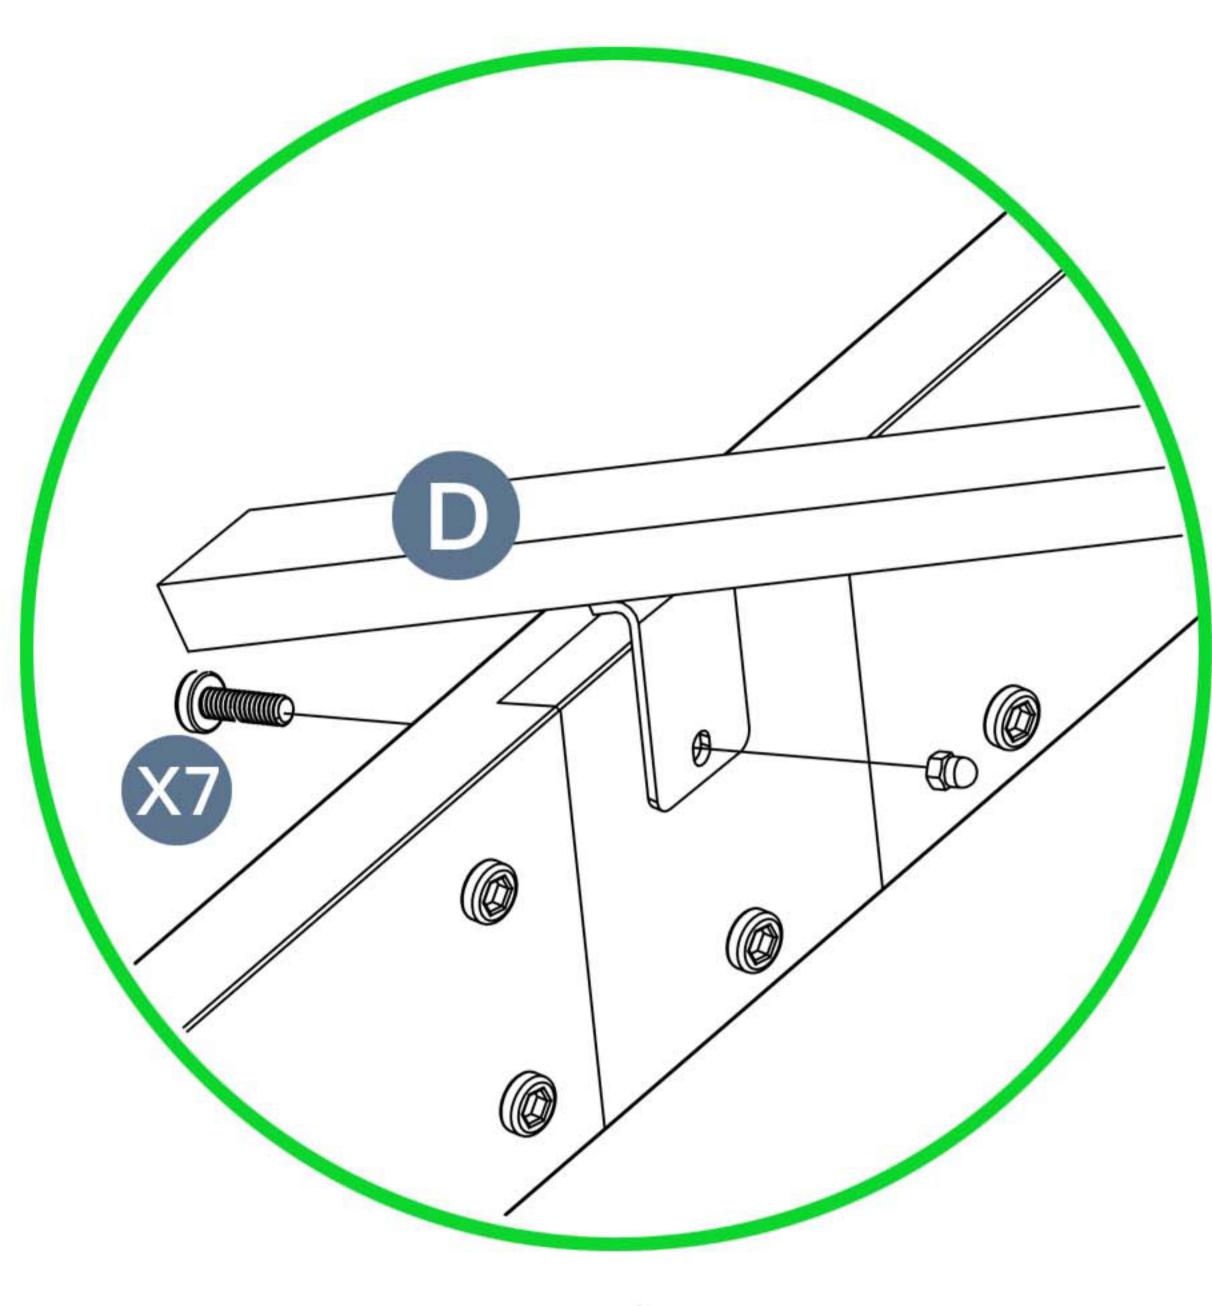






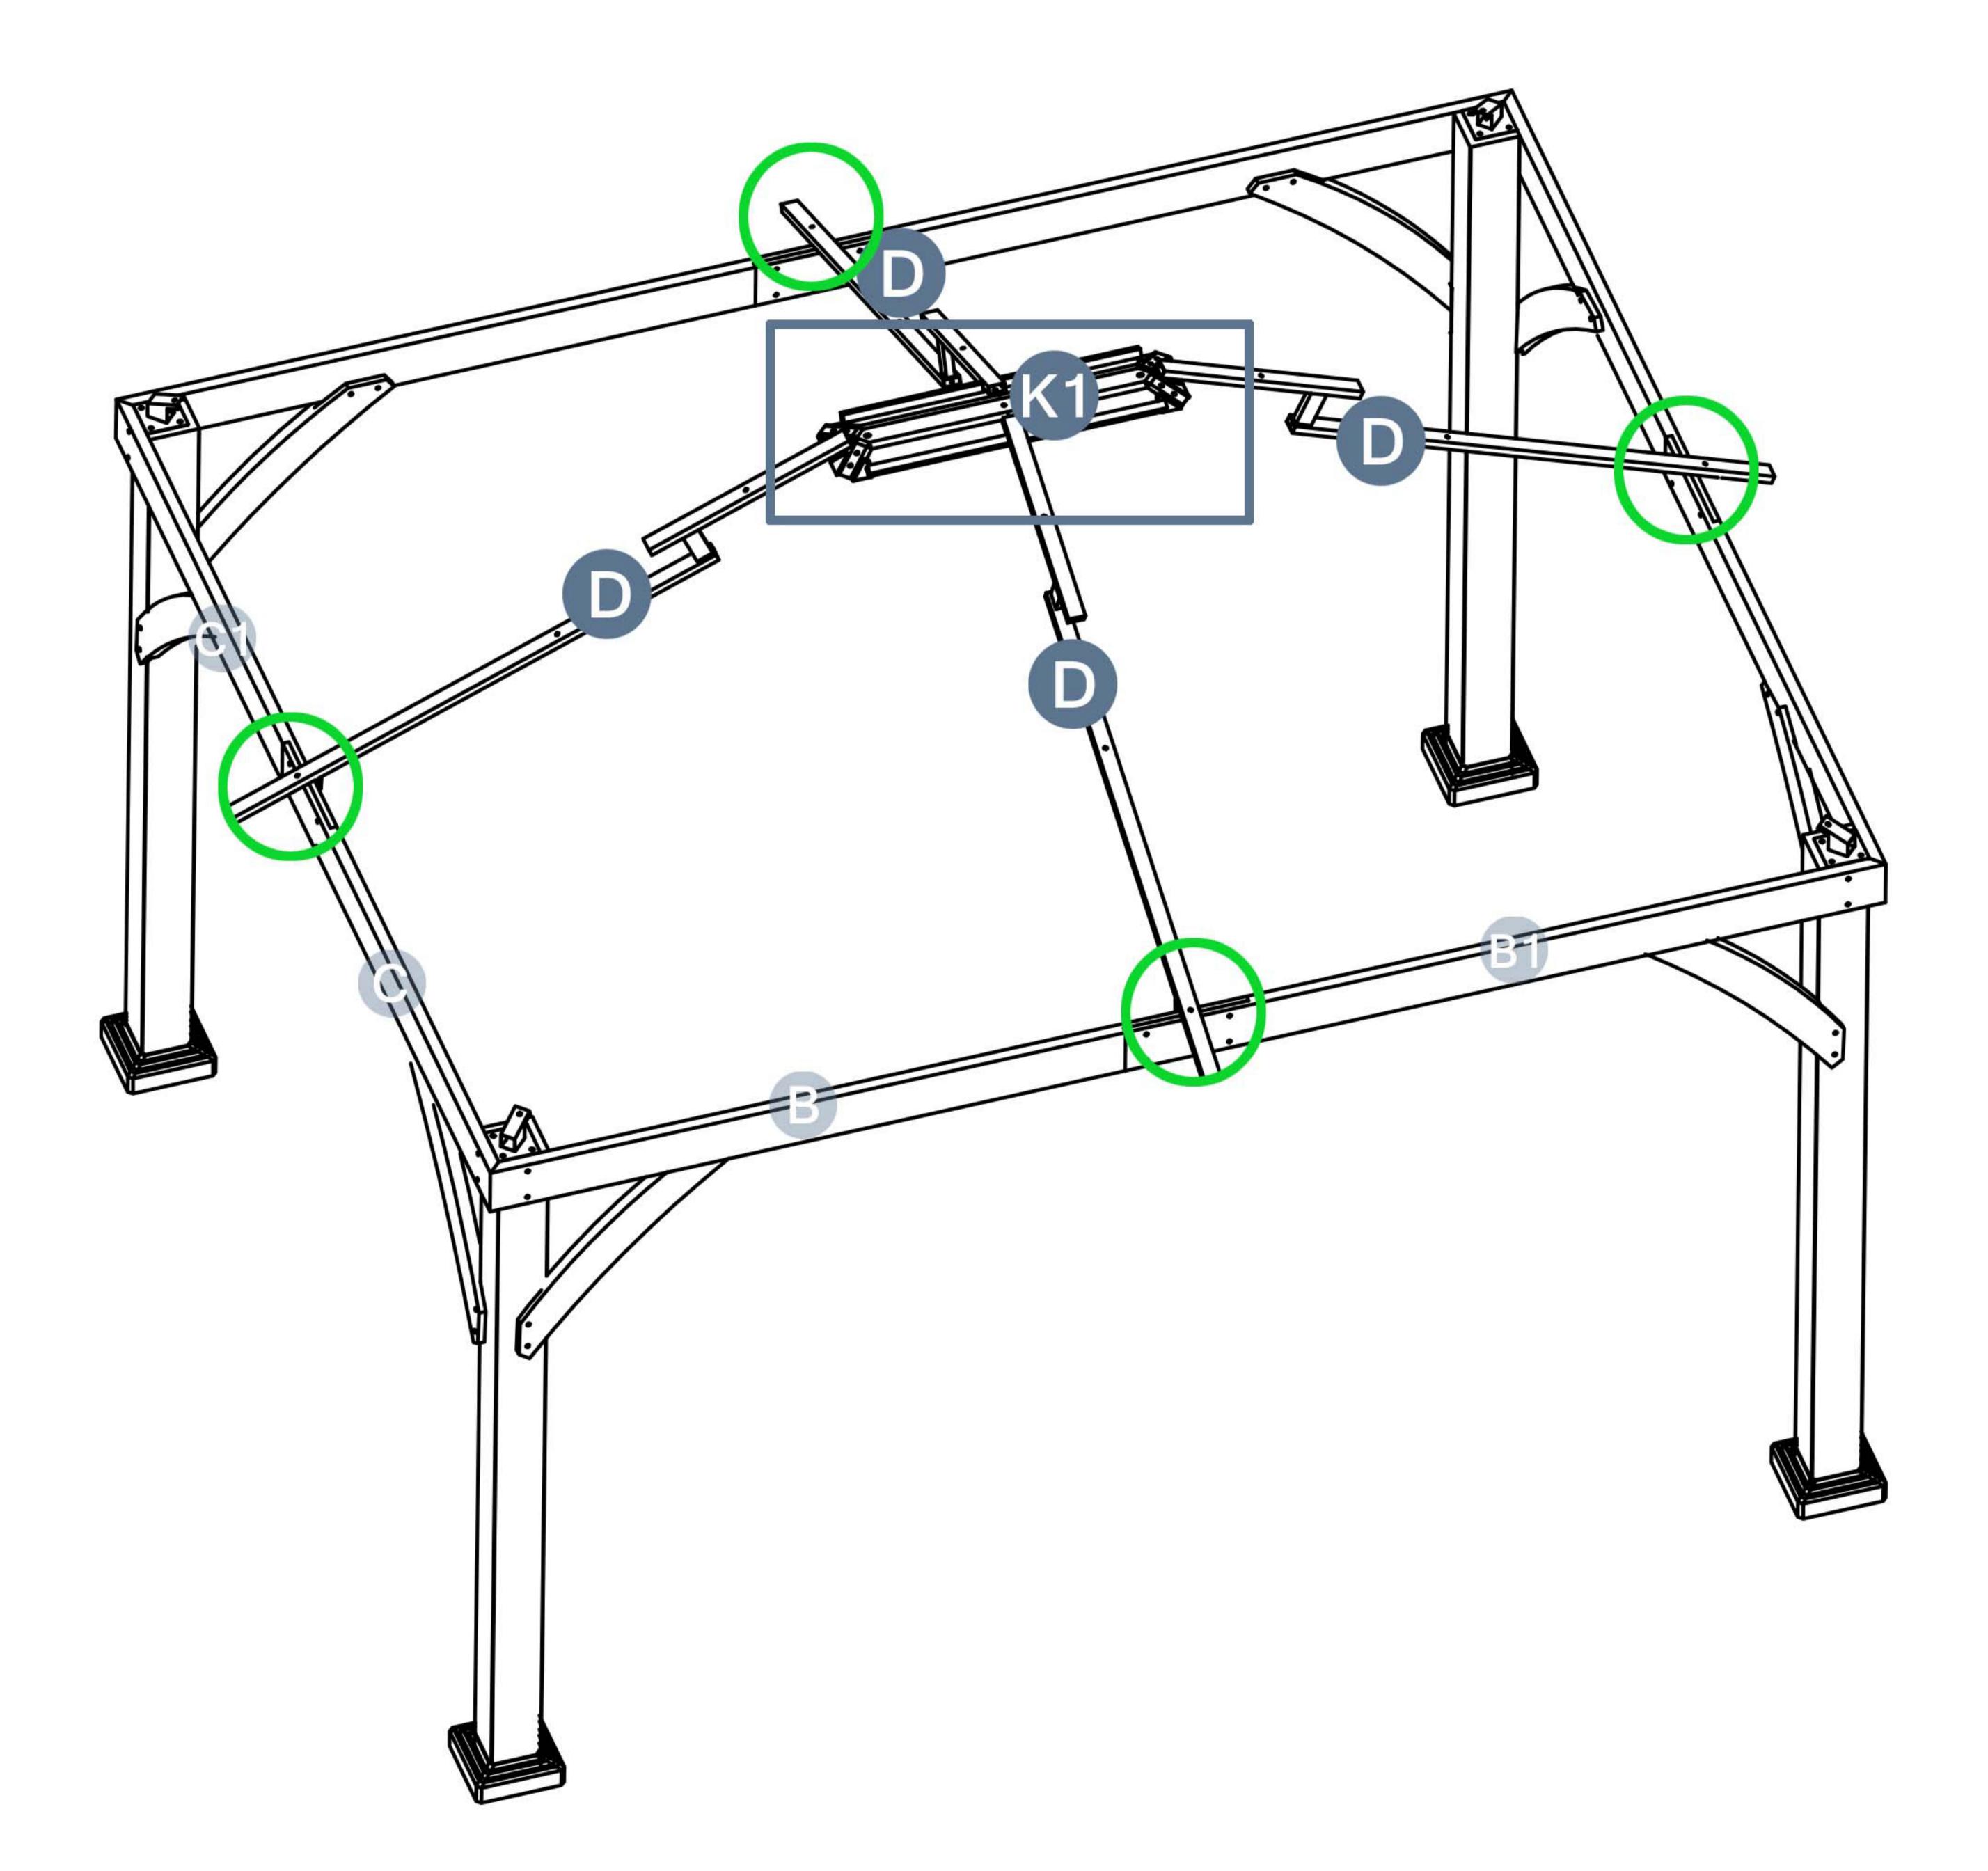

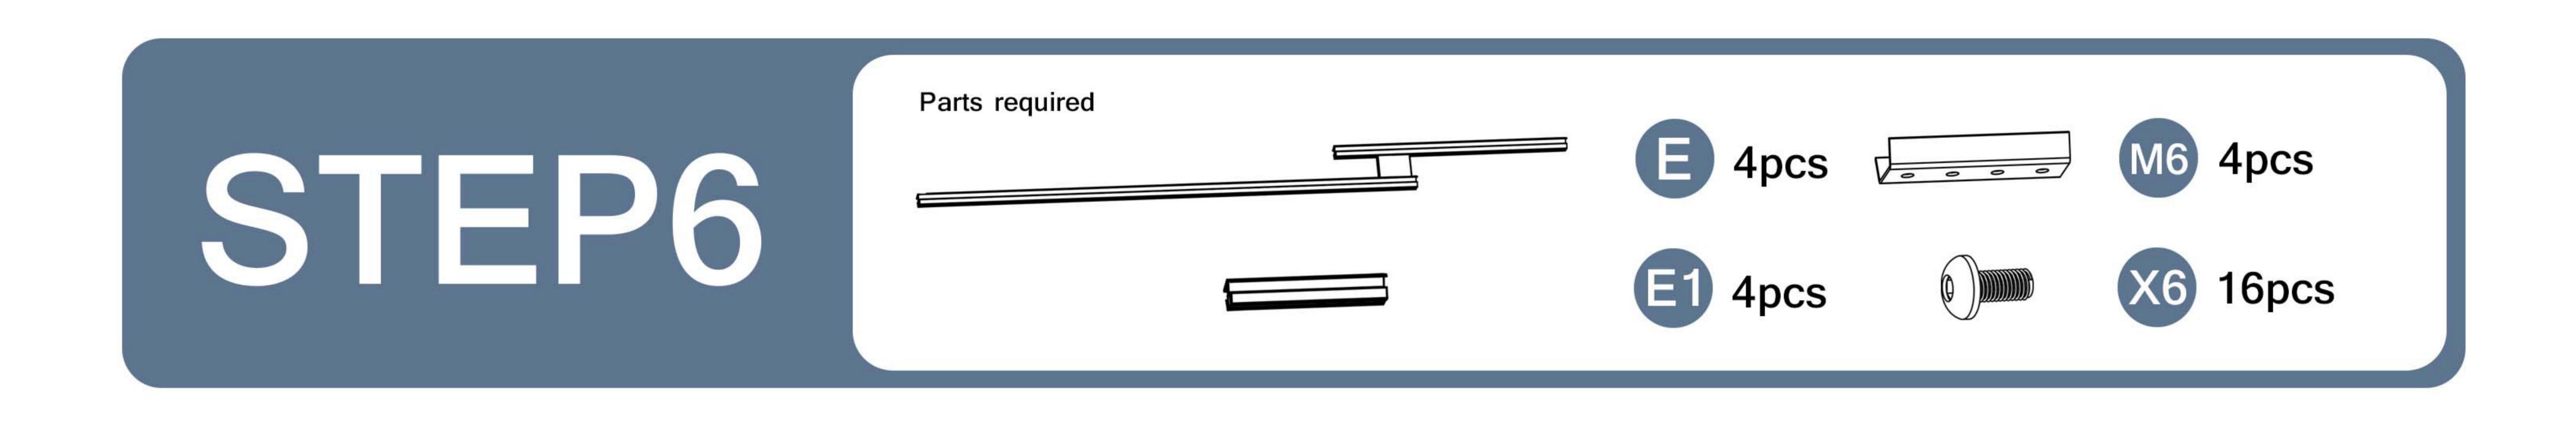


Do not screw and tighten the E pipe in the red dotted box.

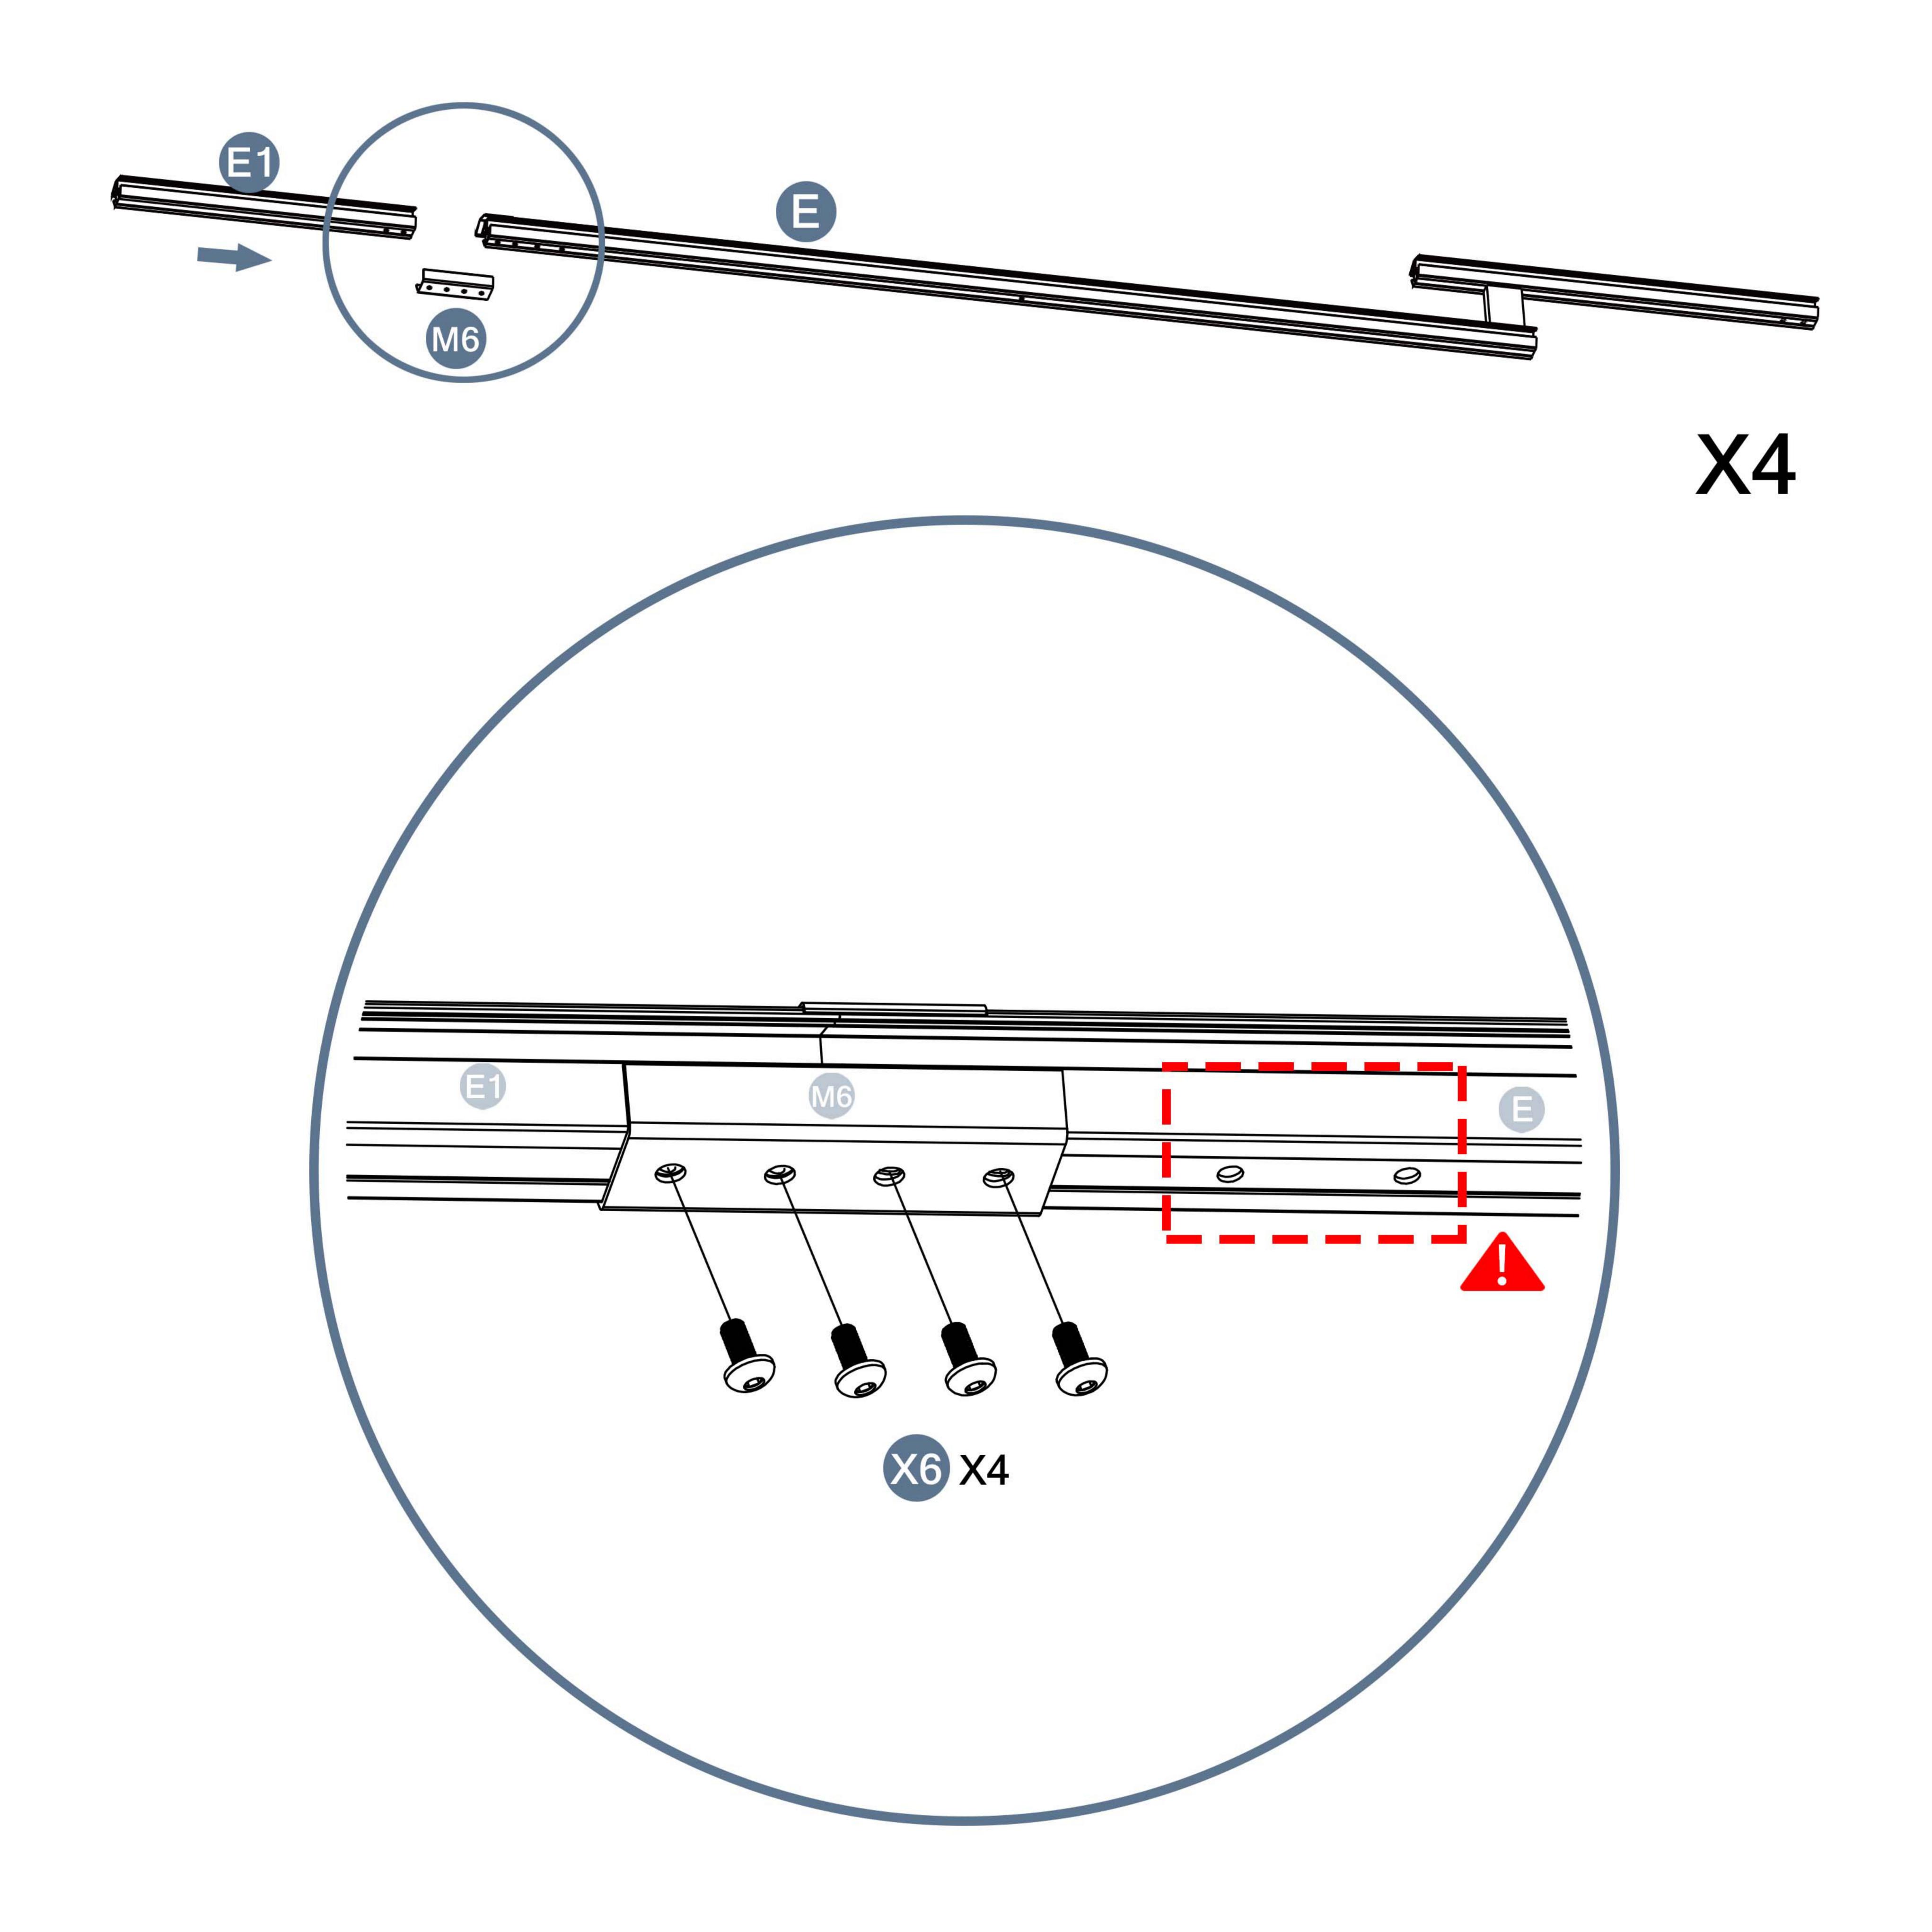



Parts required


# SIEP/

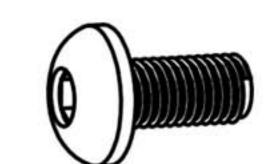





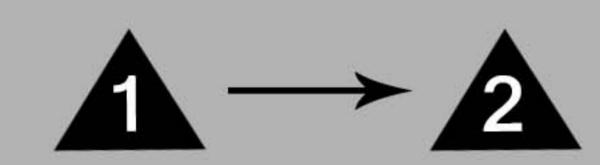

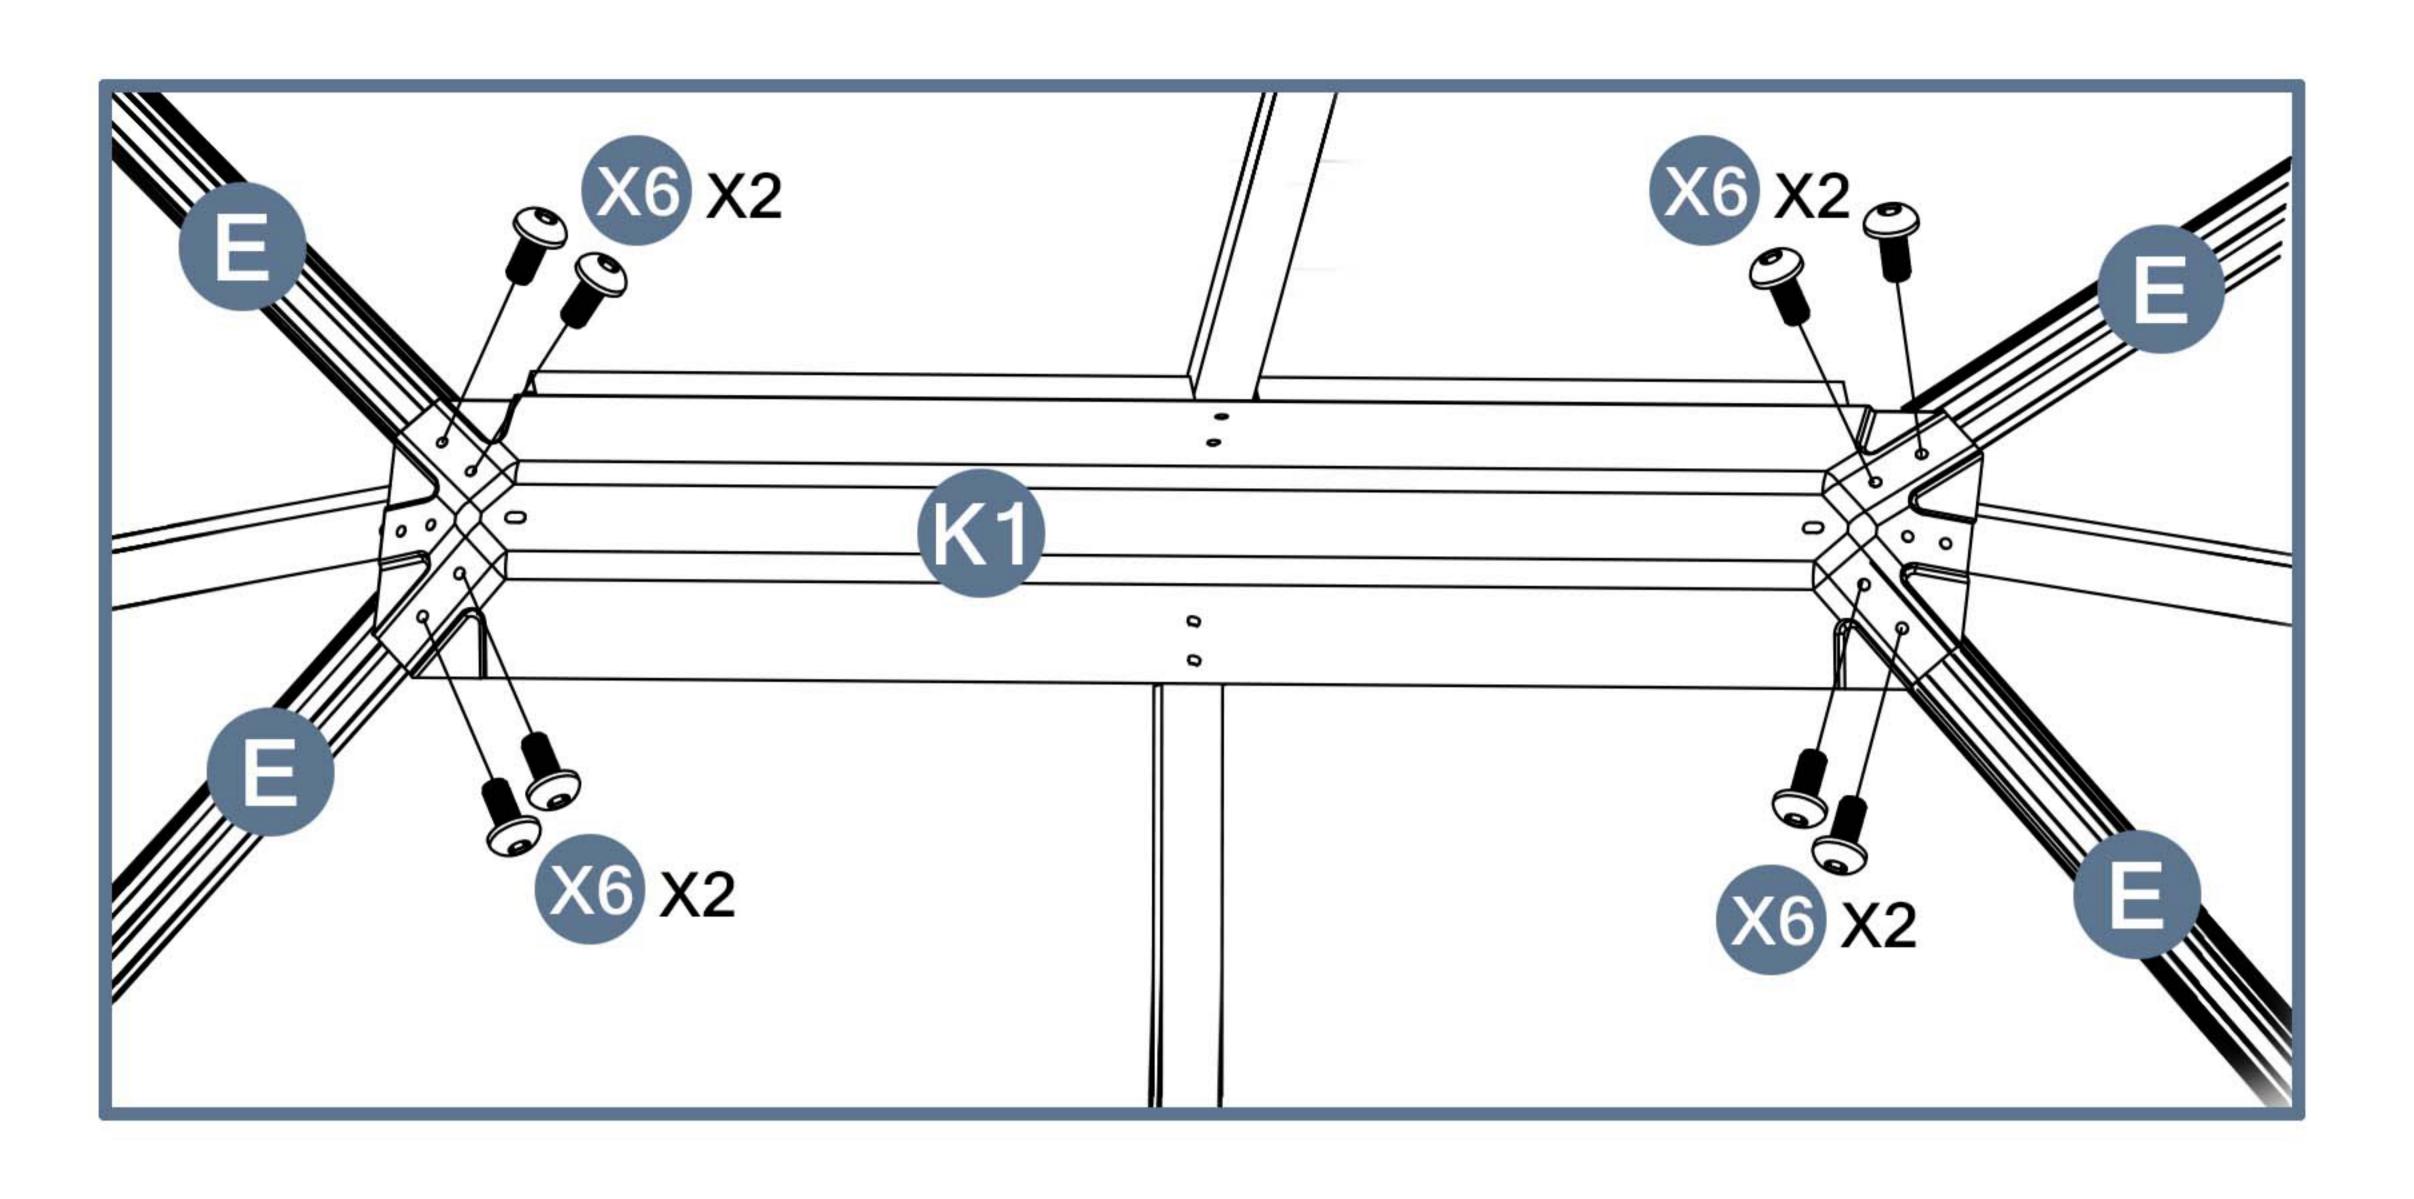


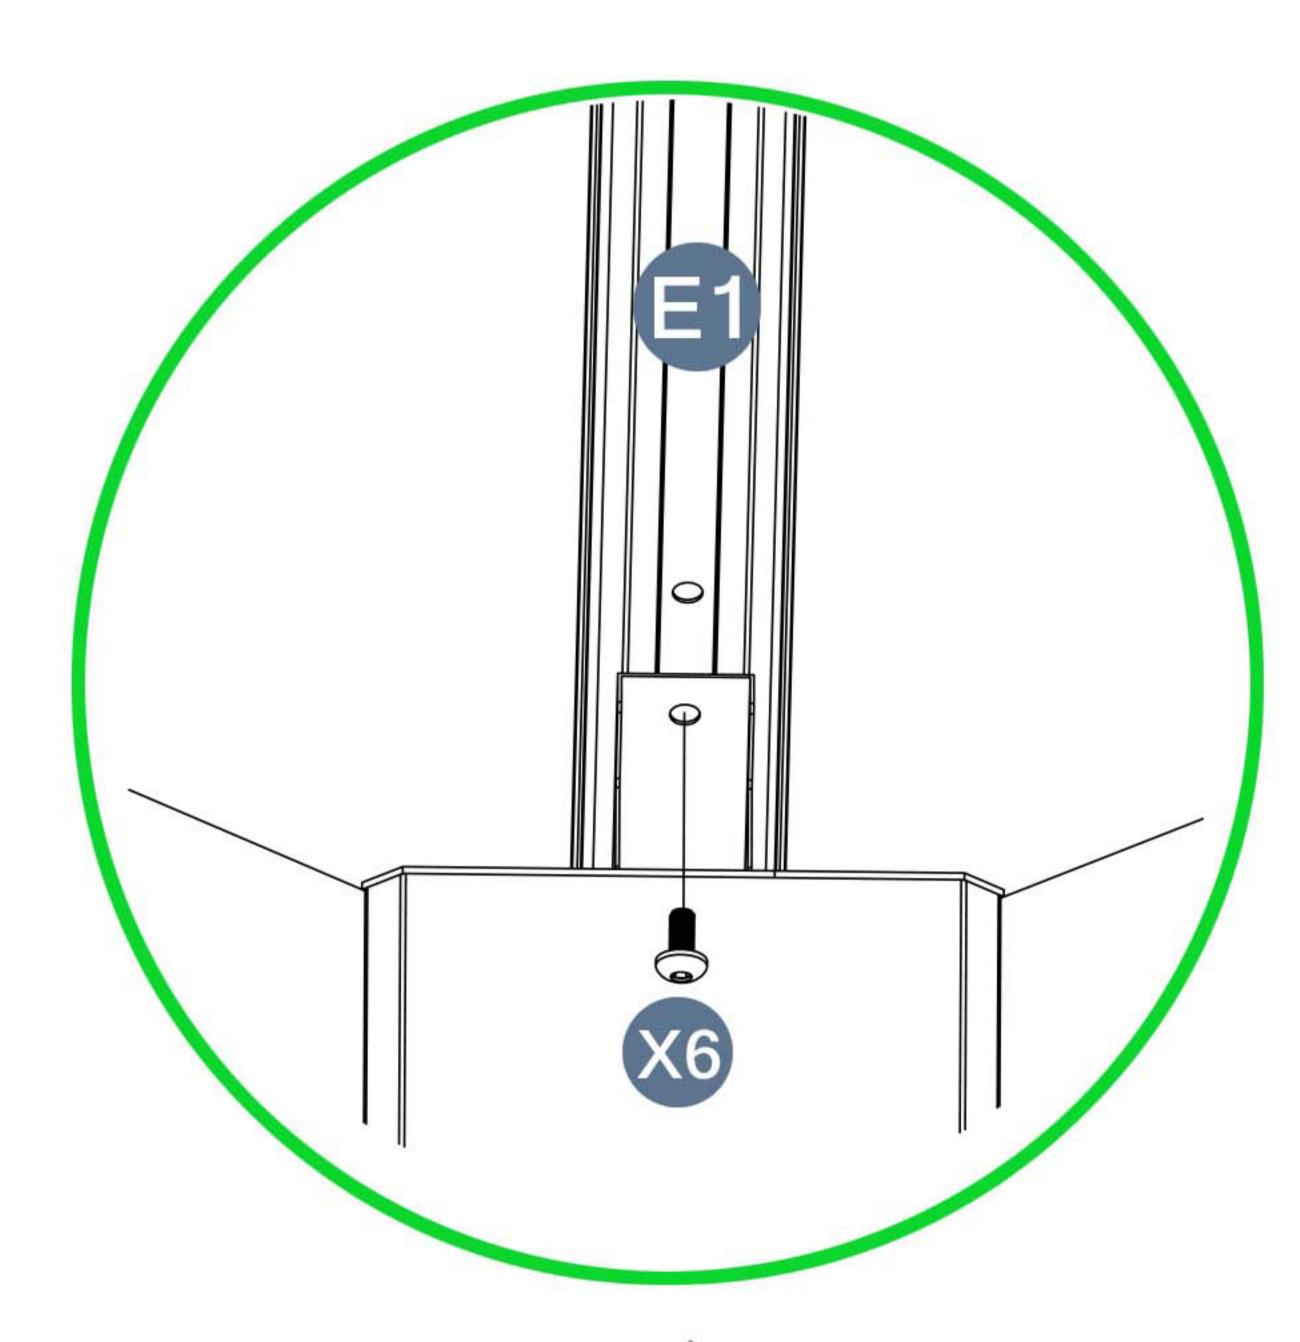

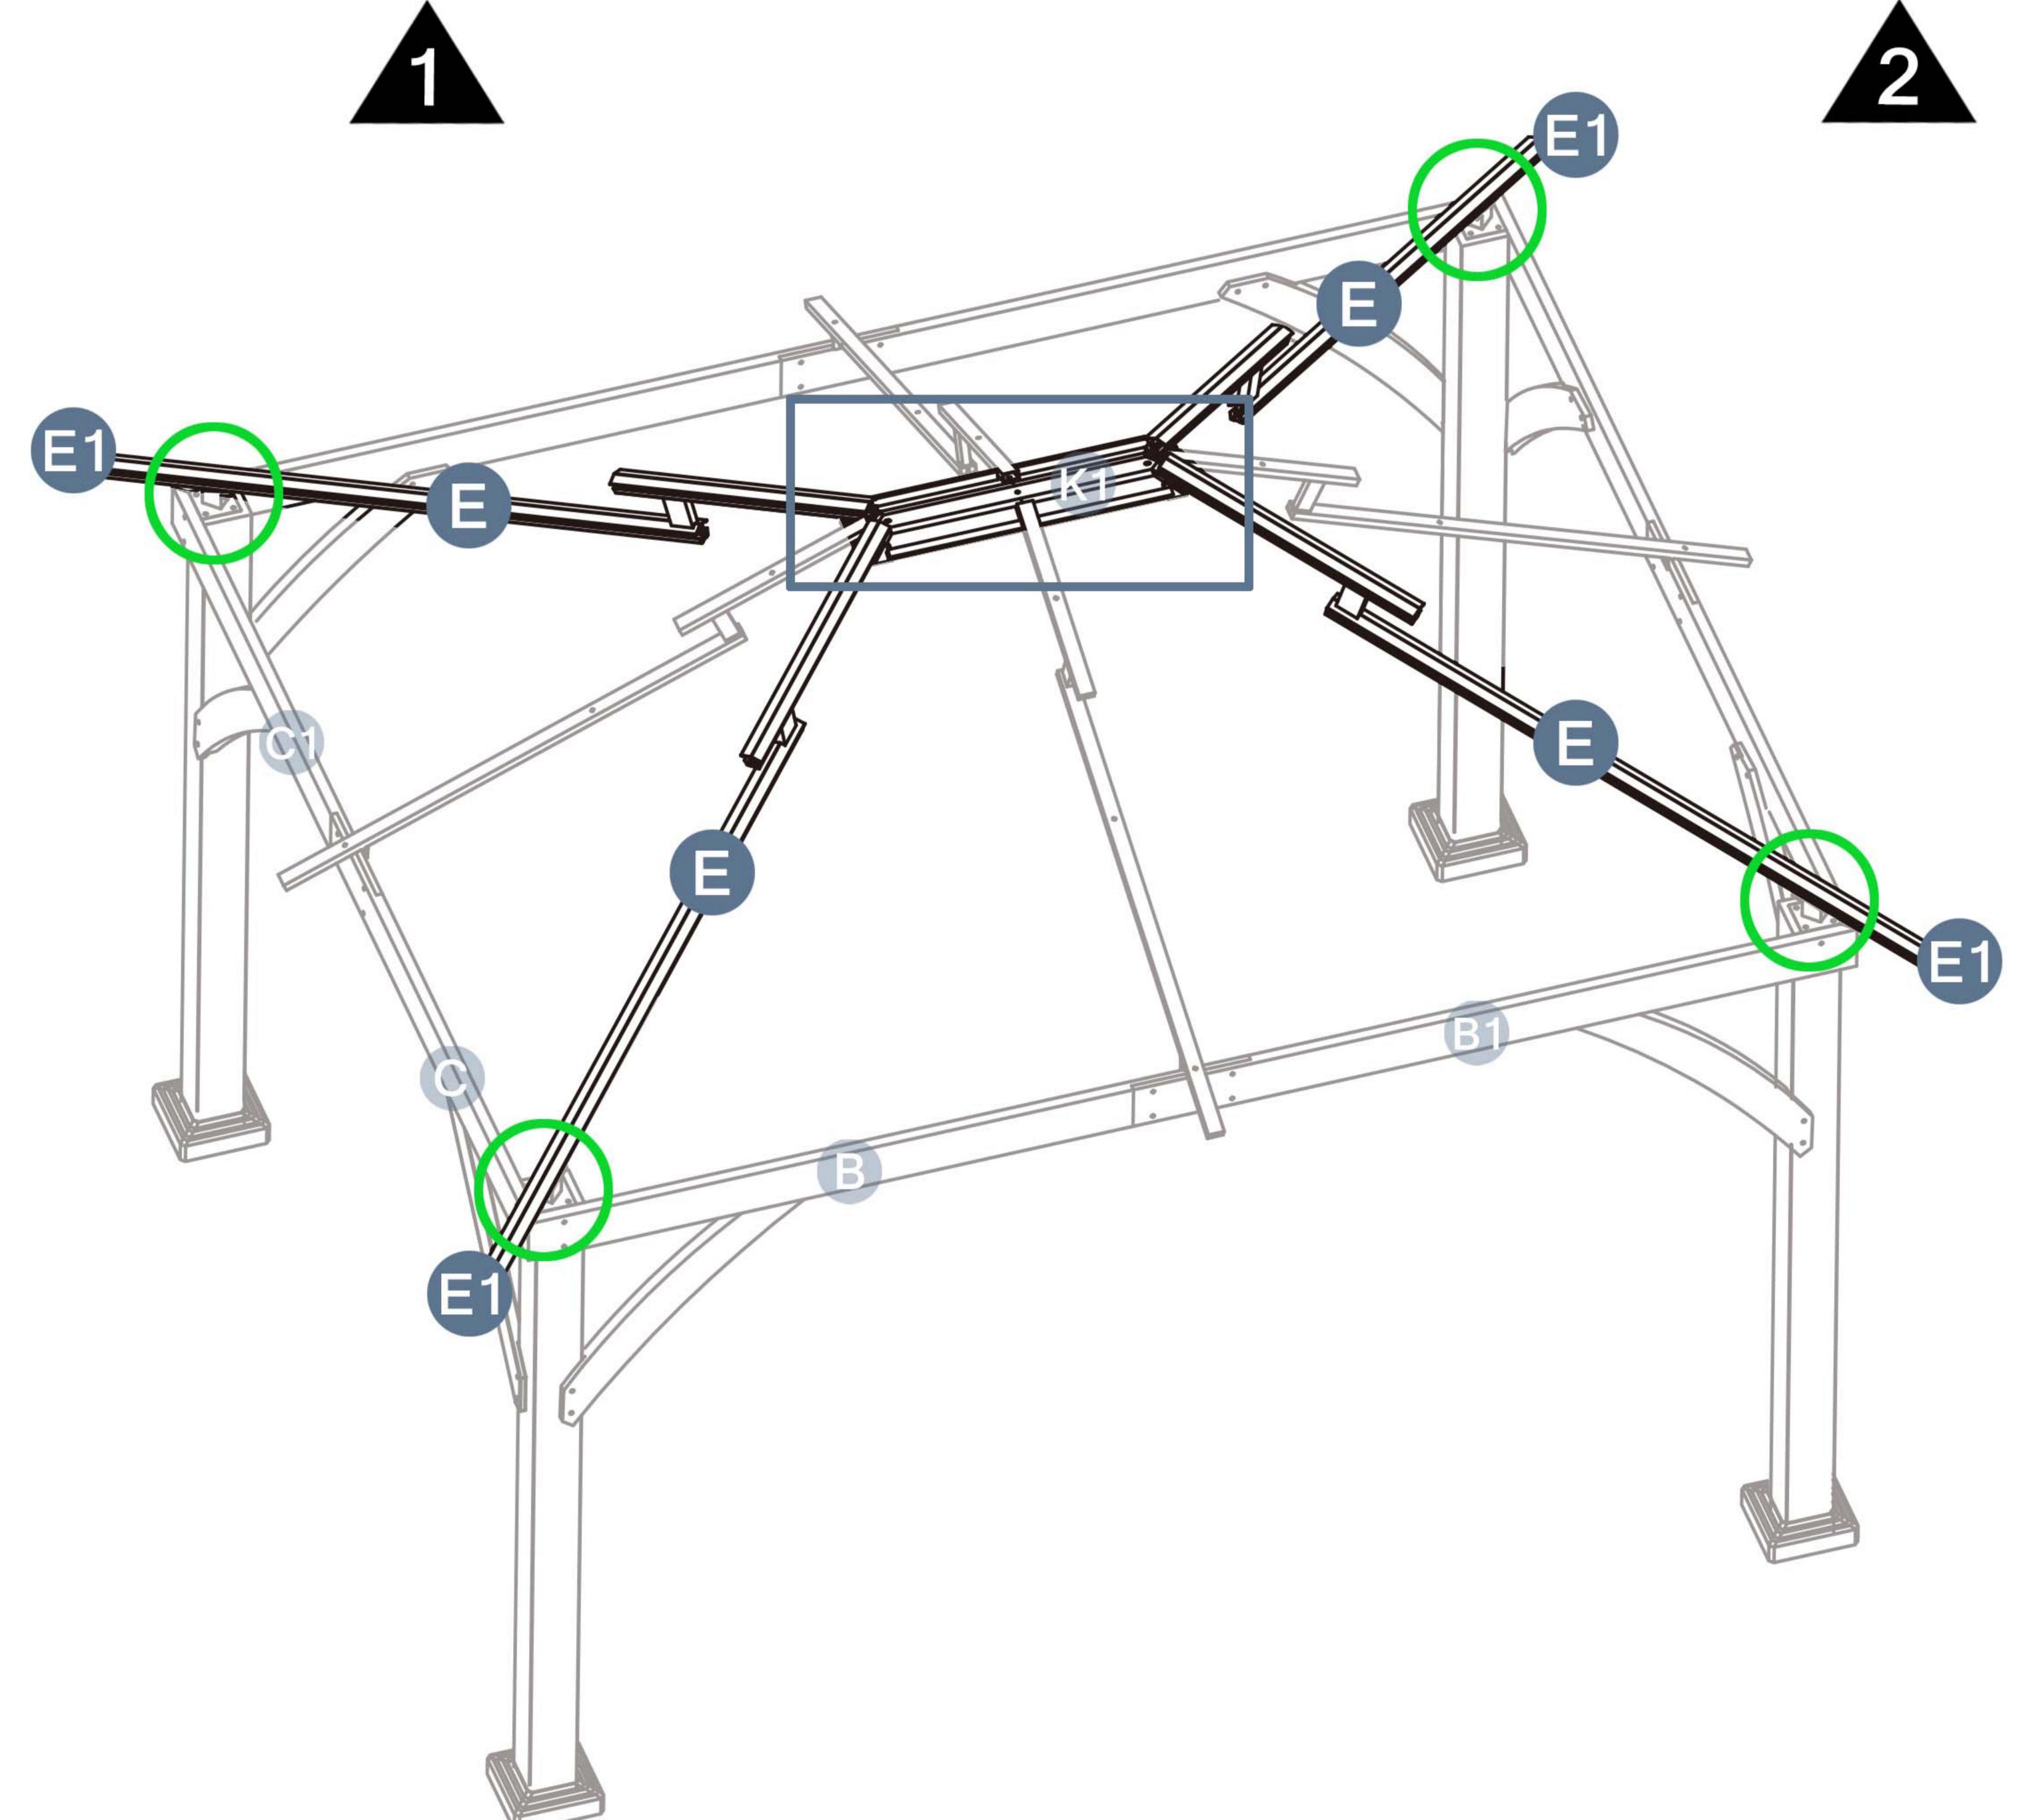


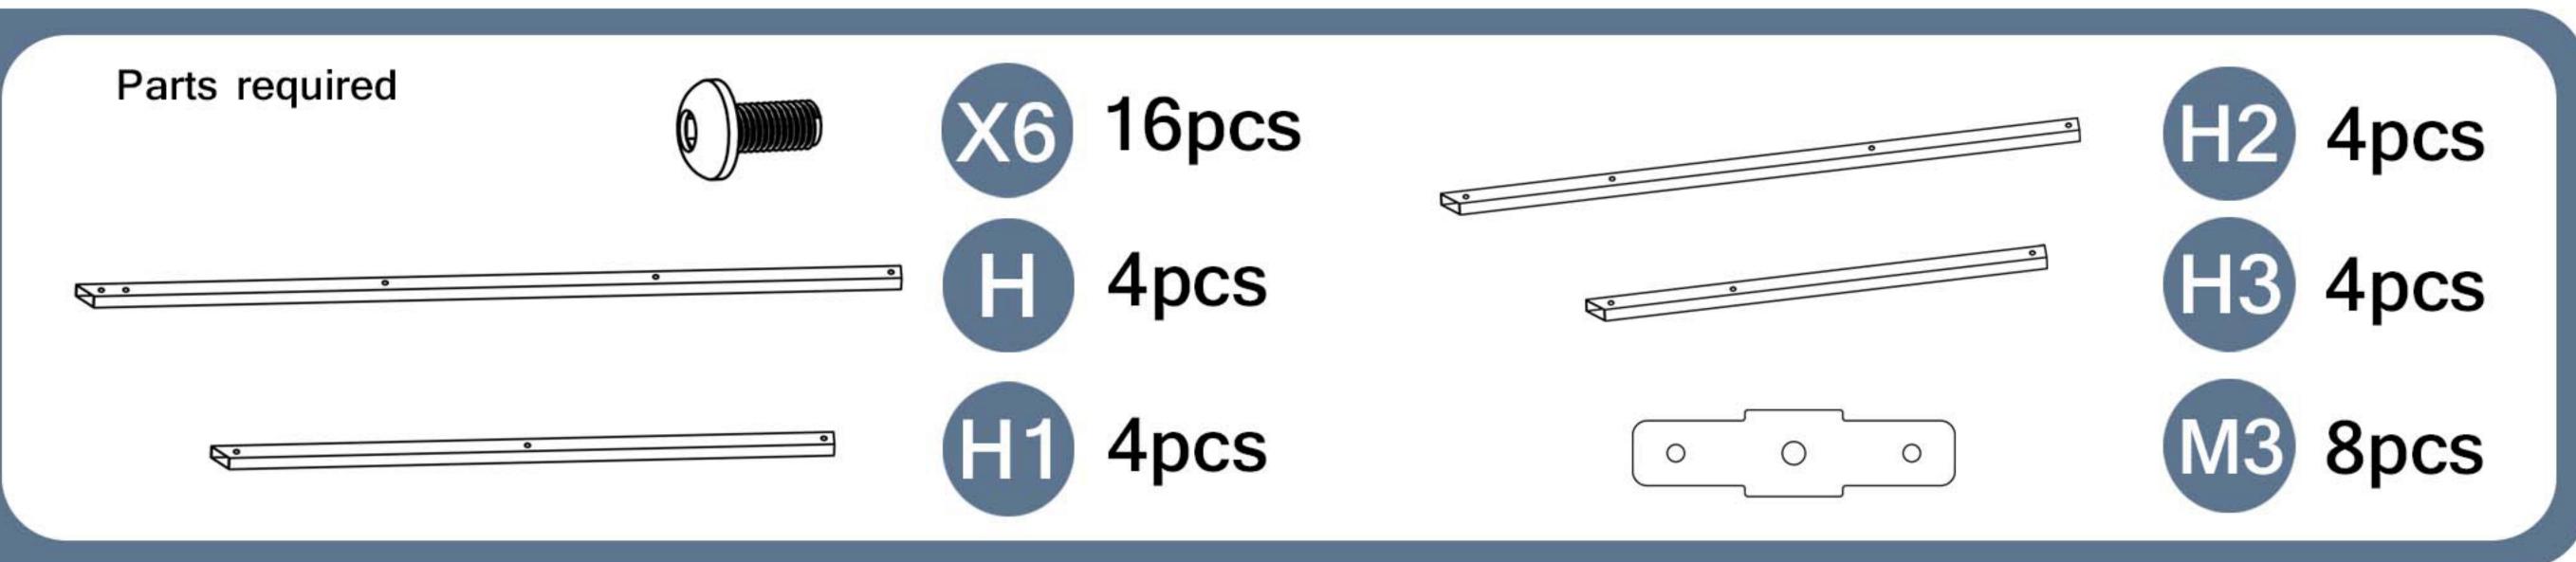


Part H \ Part H1\ Part H2 and Part H3 should be placed as shown in the picture.

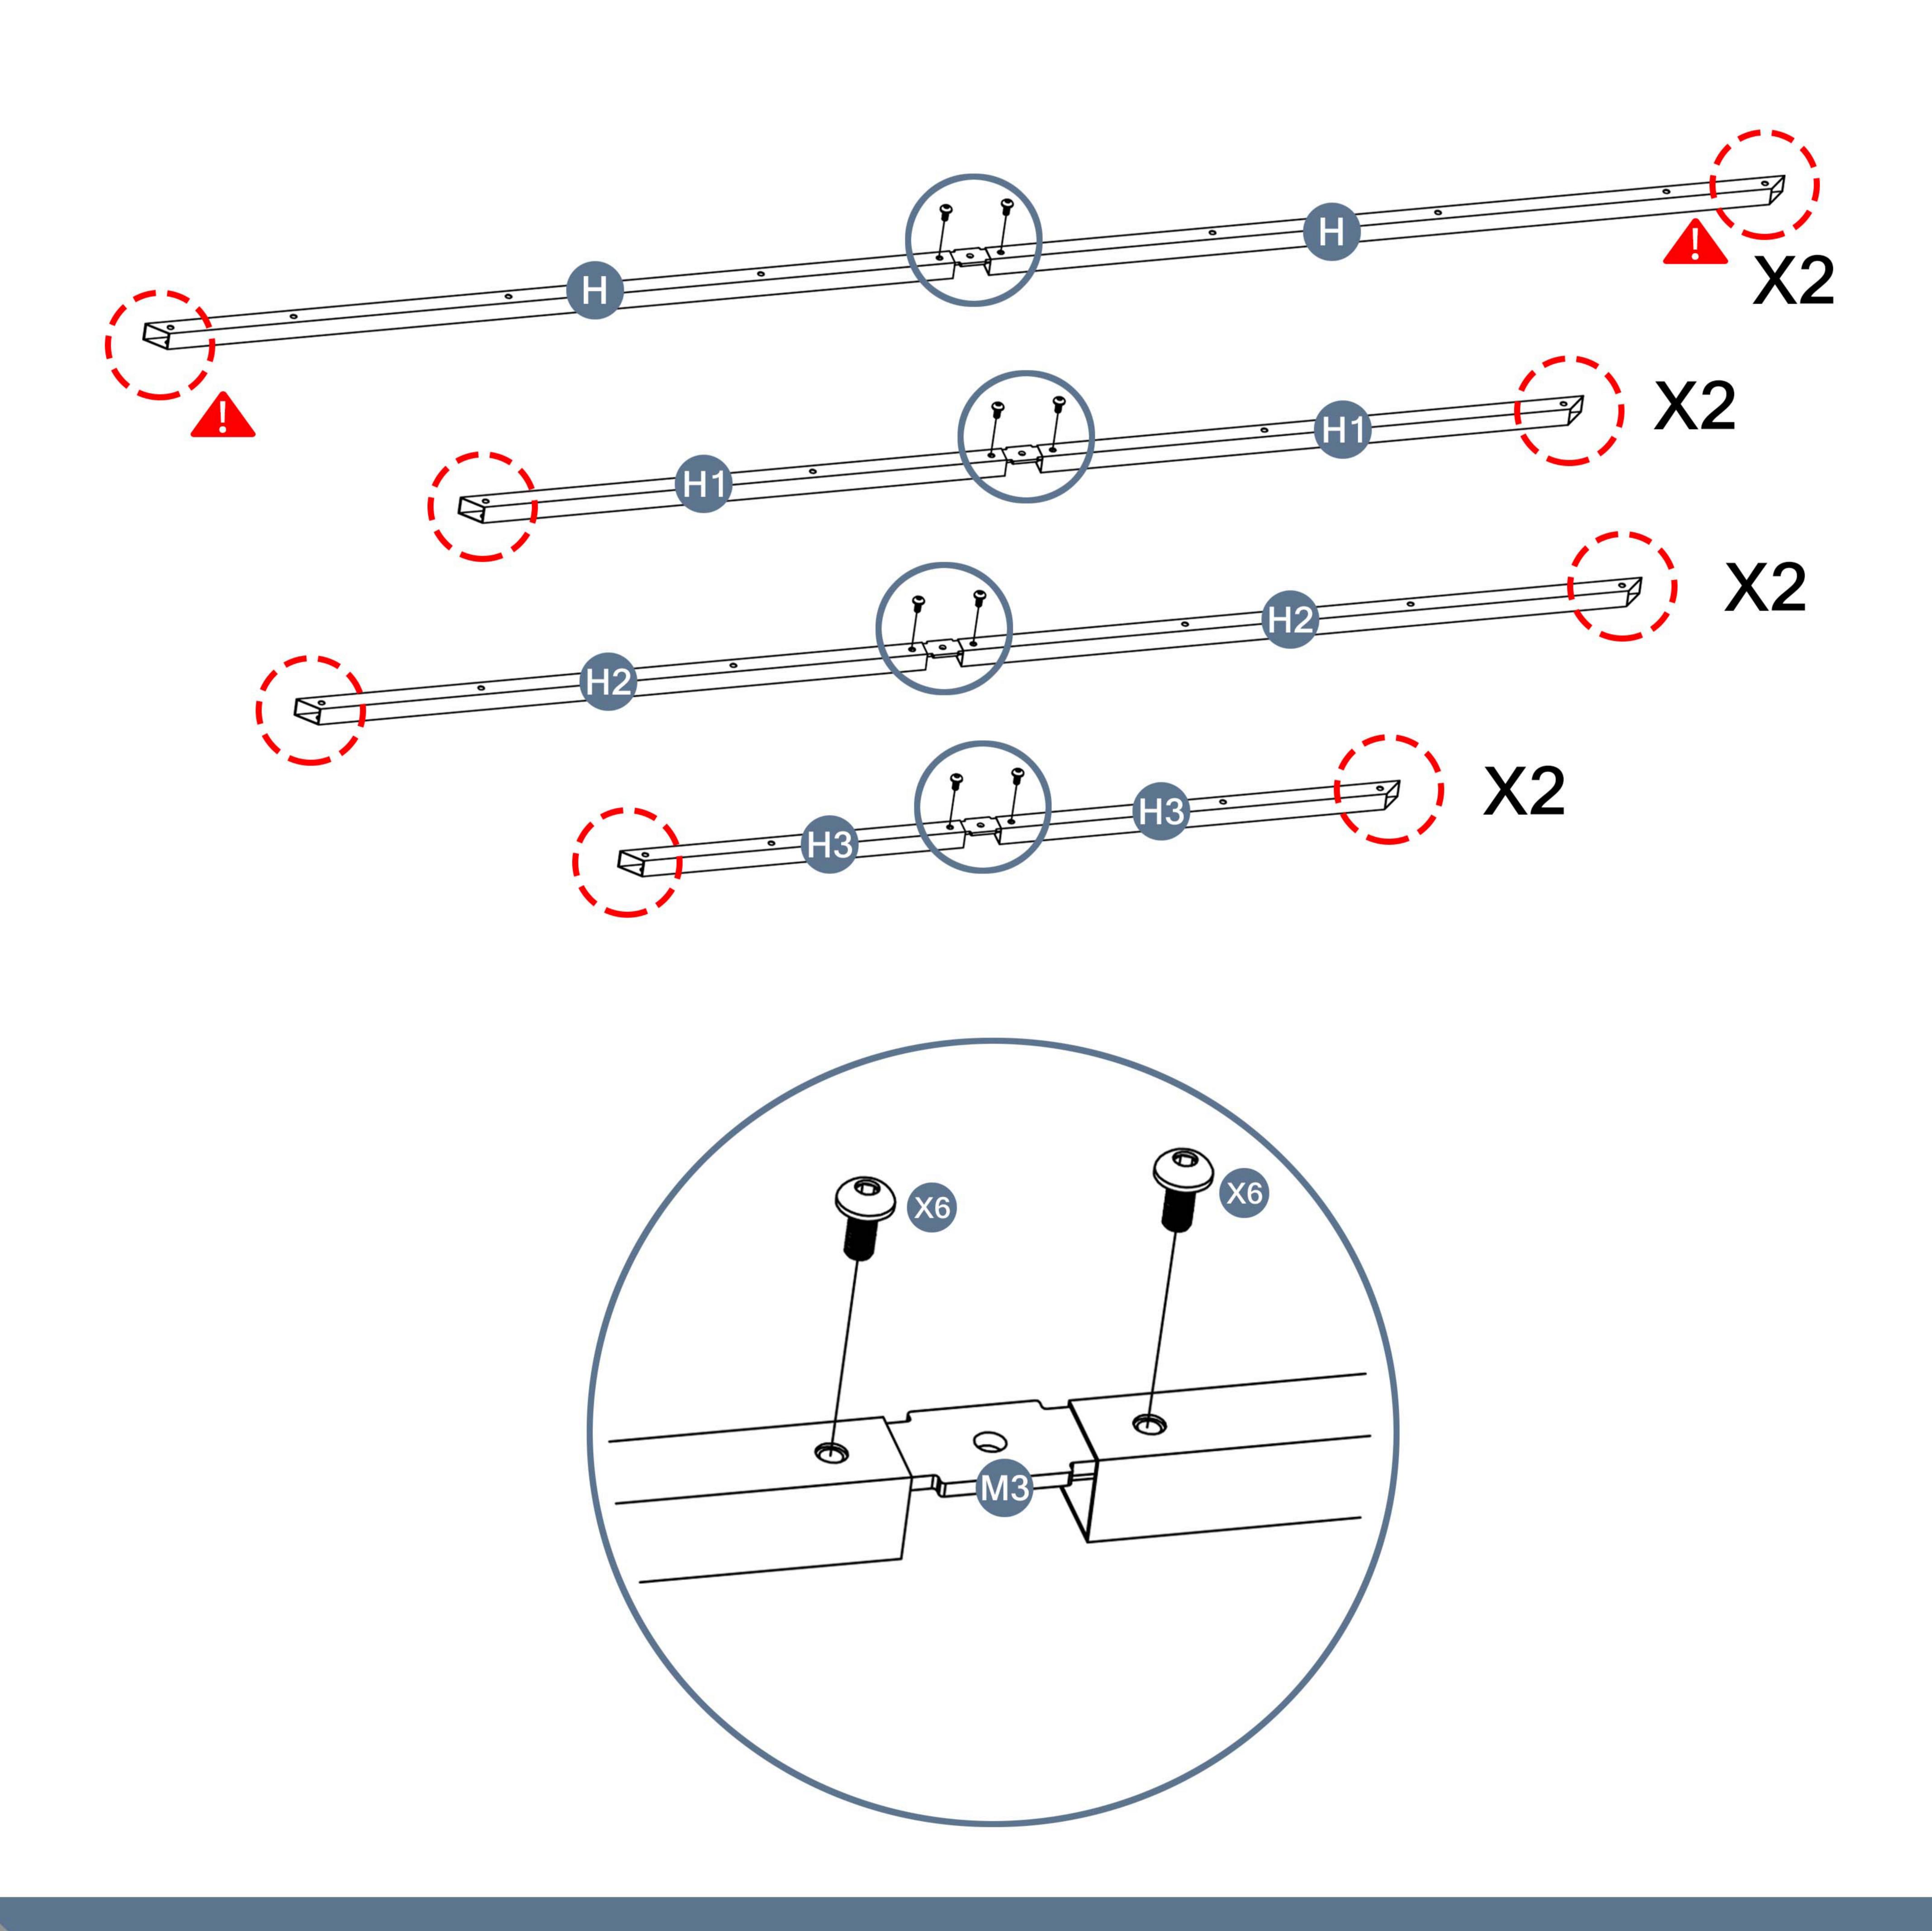


# STEP9

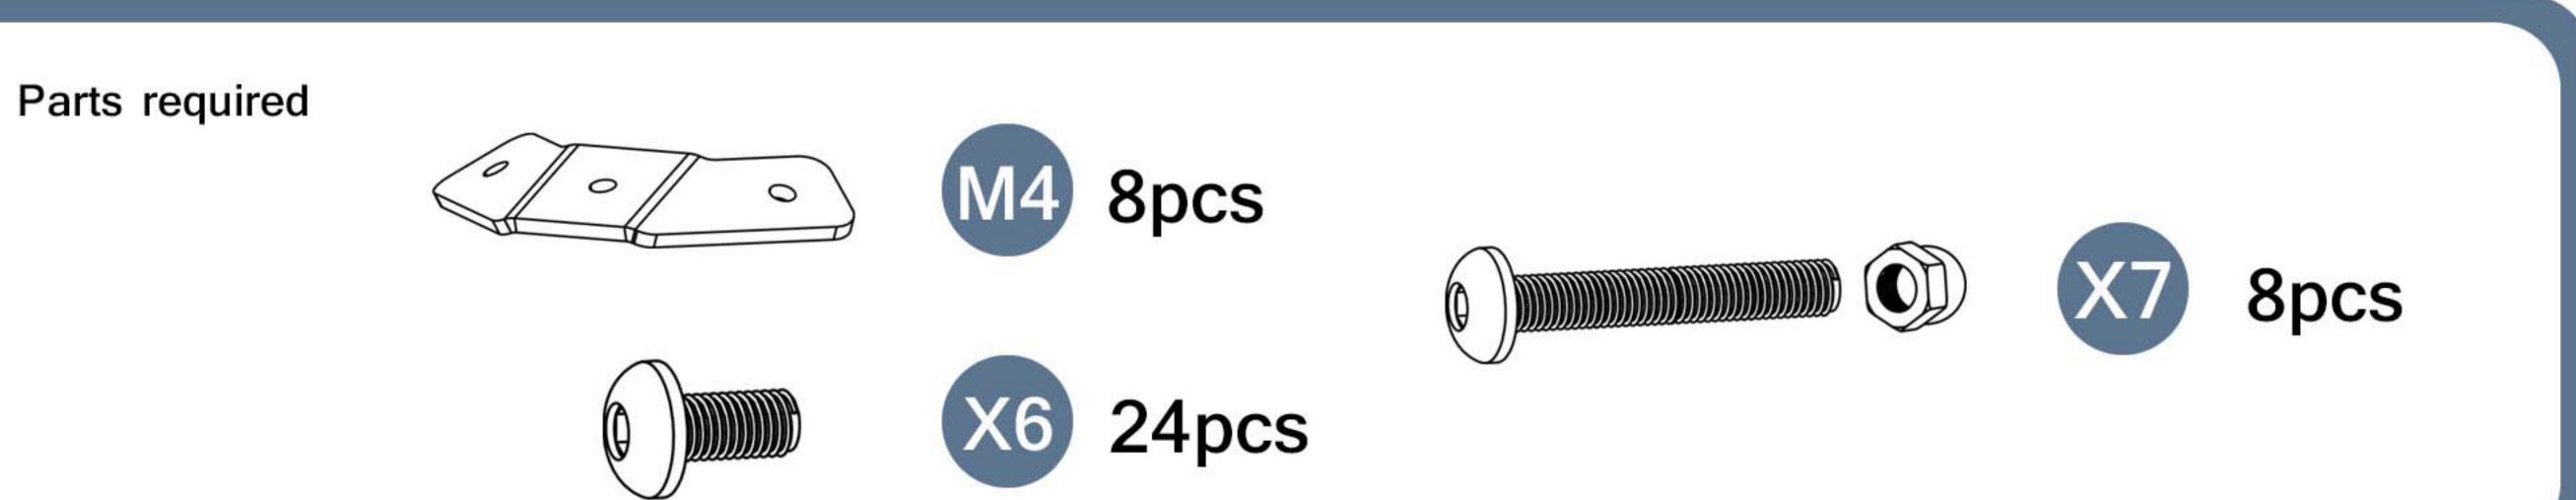


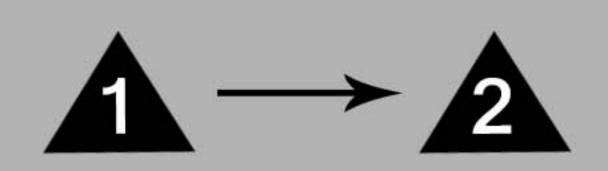


Only X7 screws are used in this step. Please store the X7 nuts. Steps 13 and 14 will be used.


To better align the screws for practical situations, do not fully tighten screws initially.

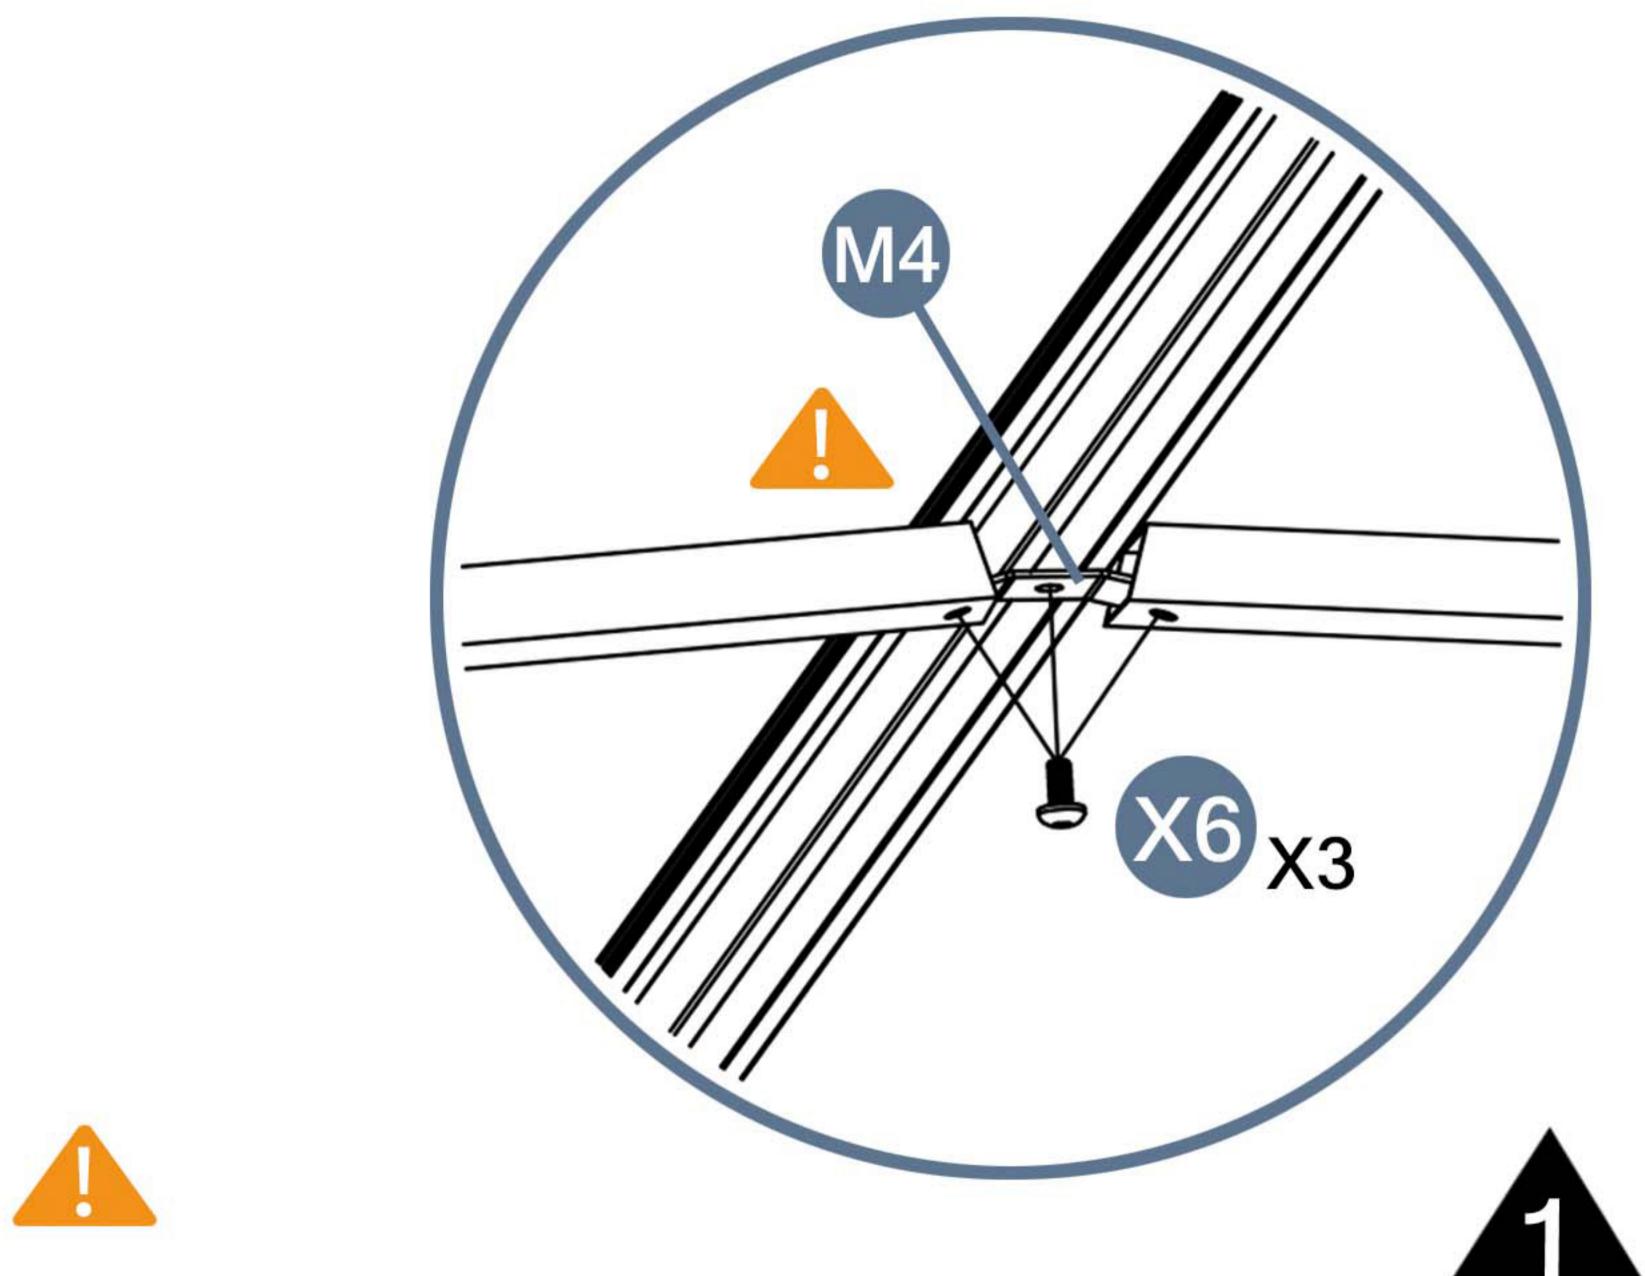

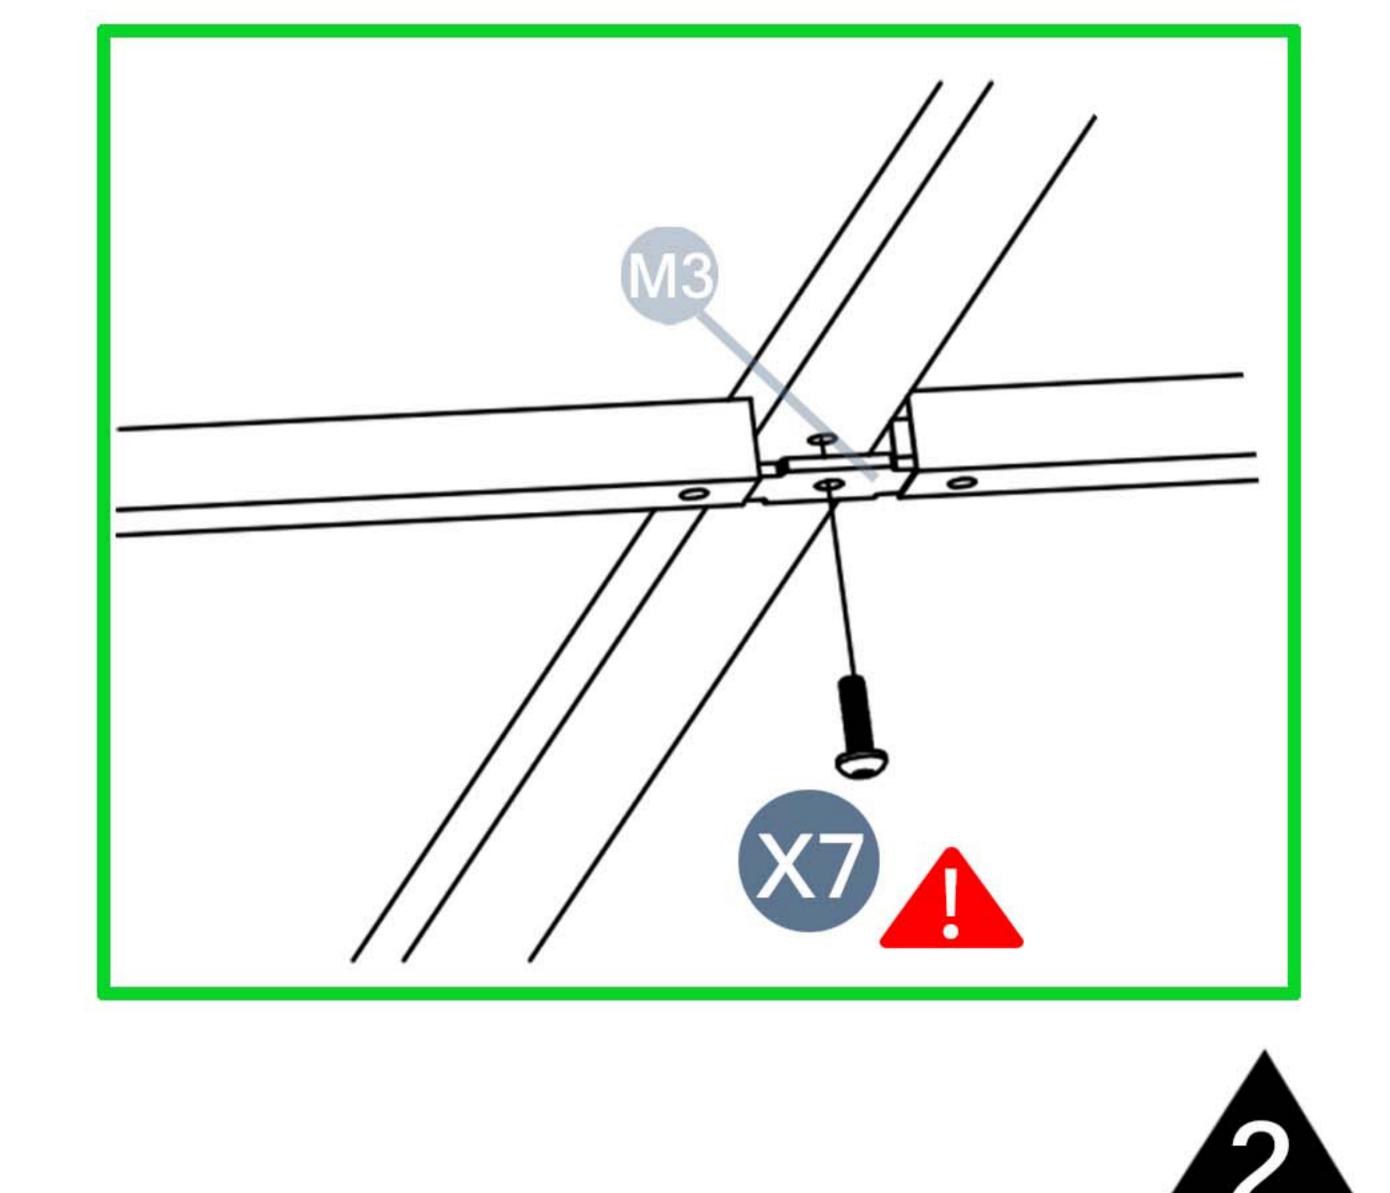


M4 needs to be inserted into both tubes, aligned with the holes.

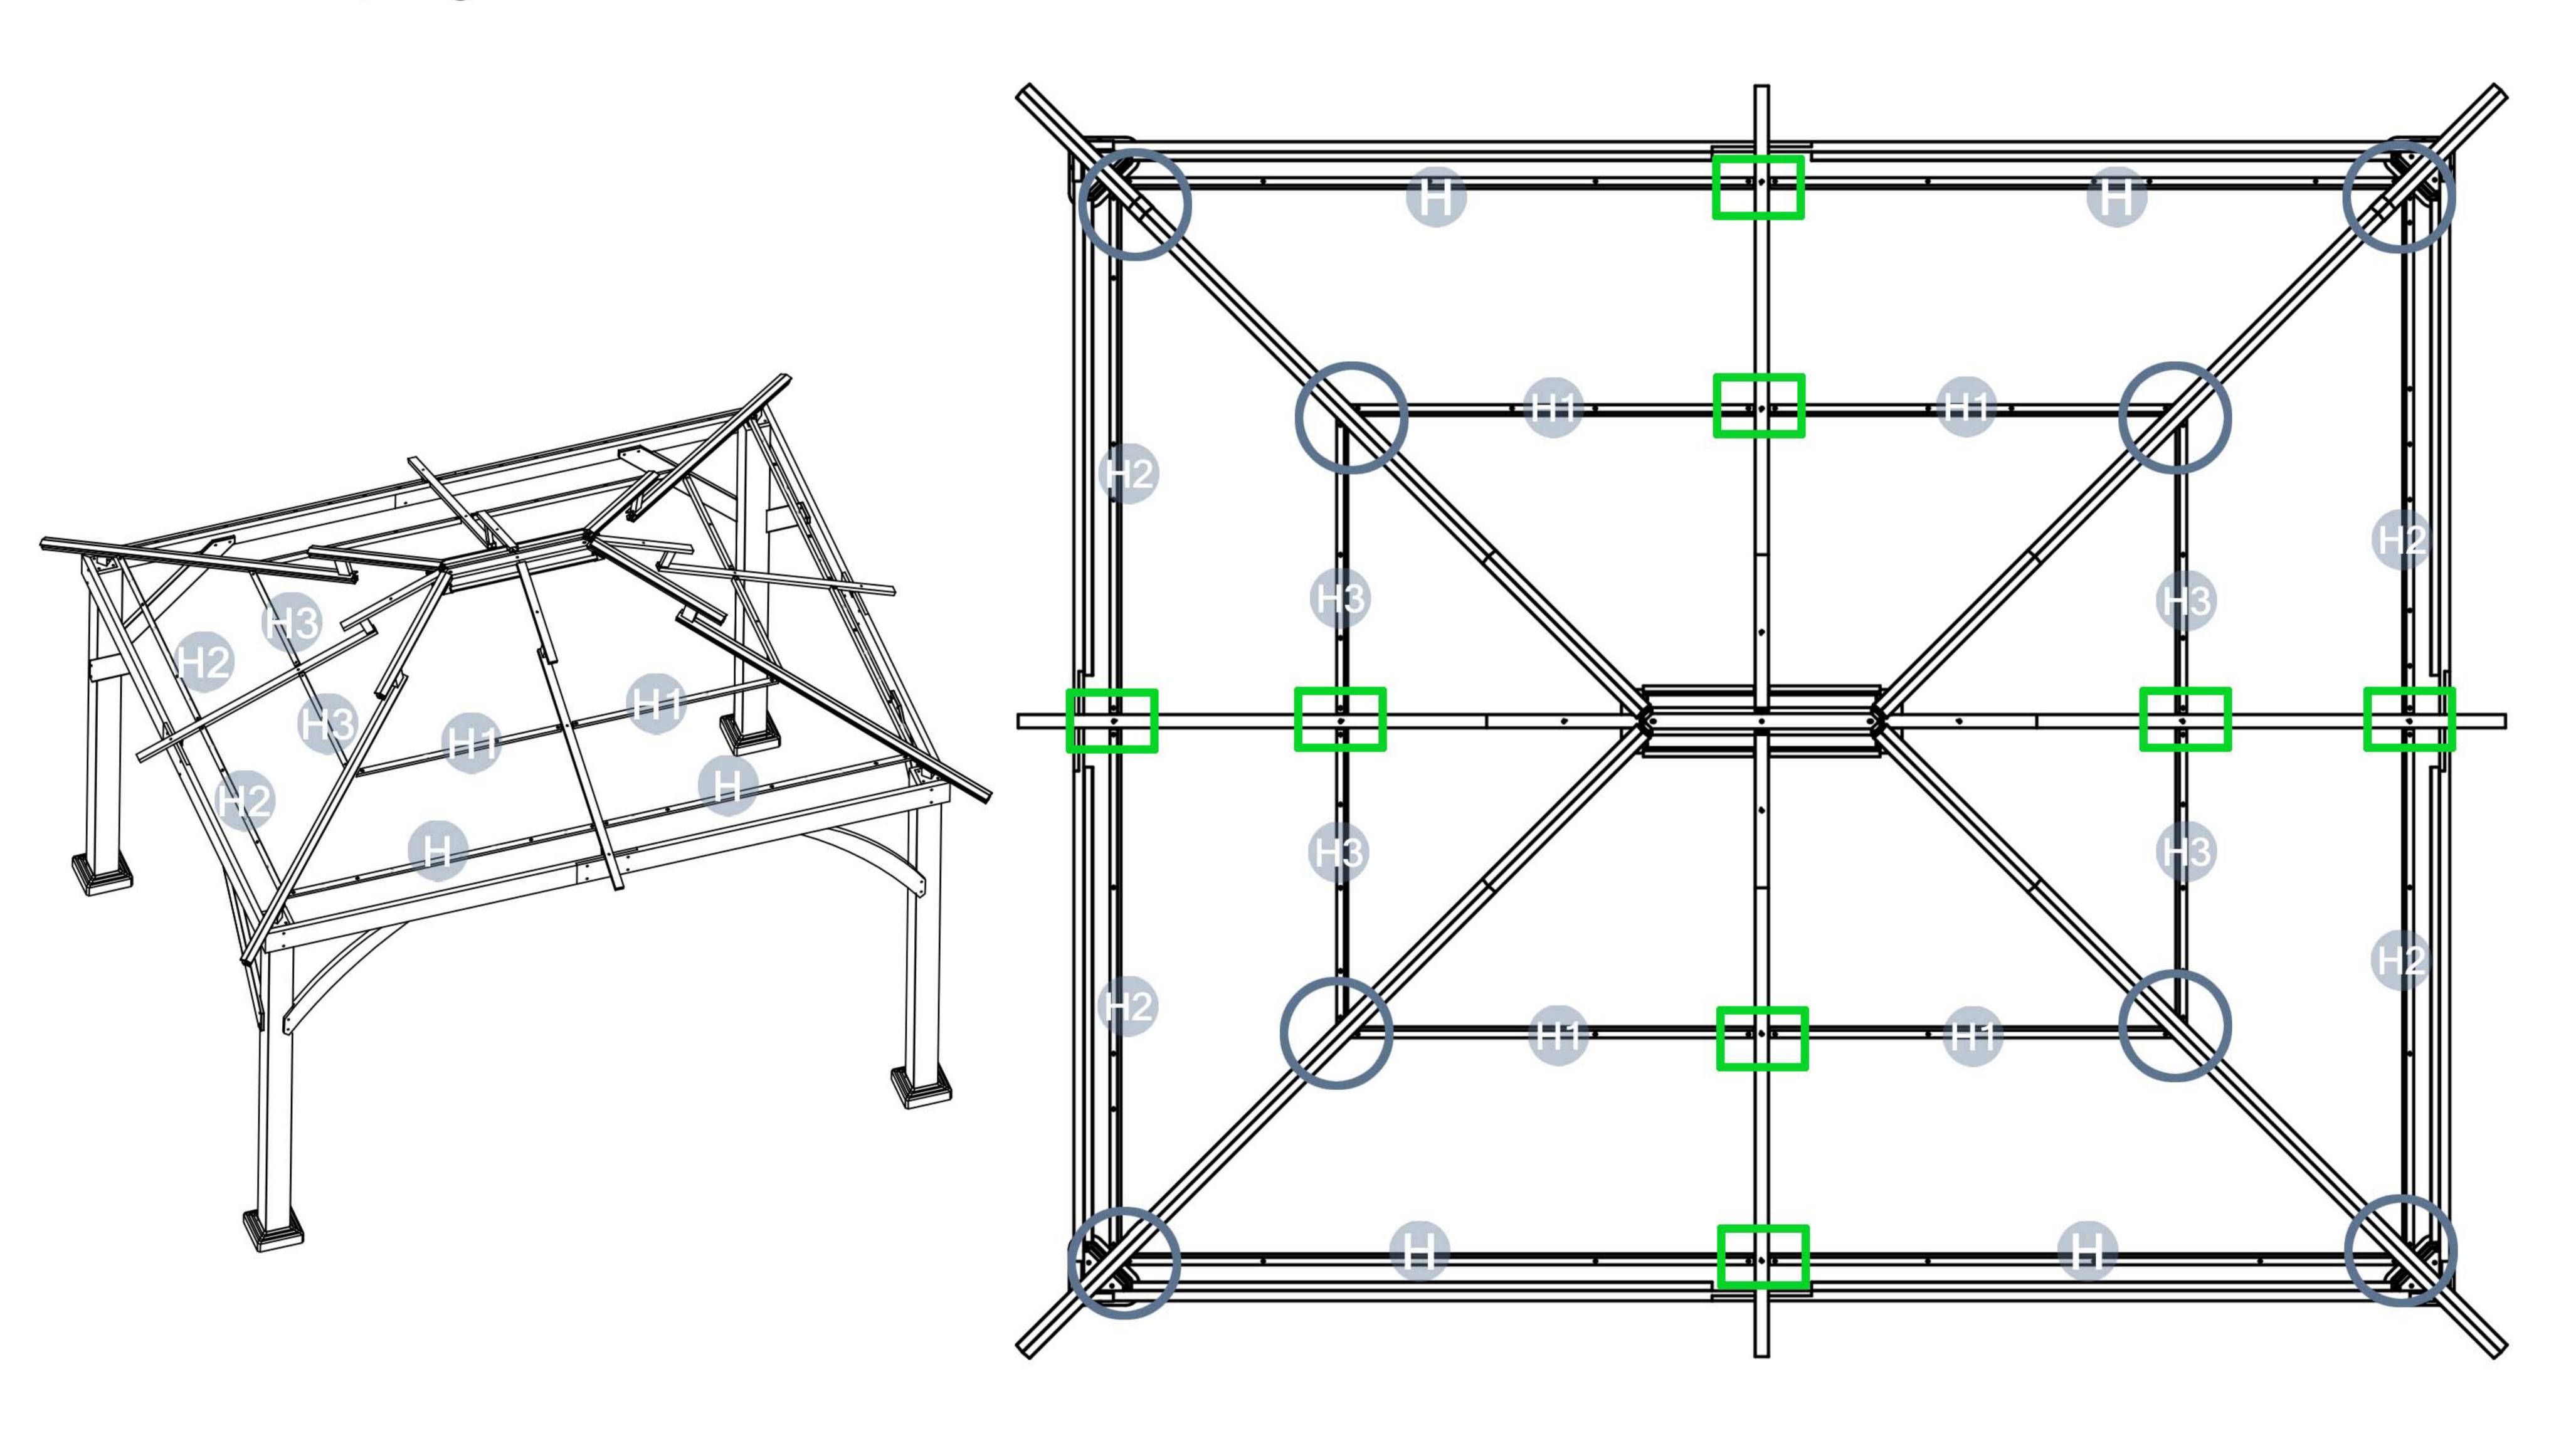

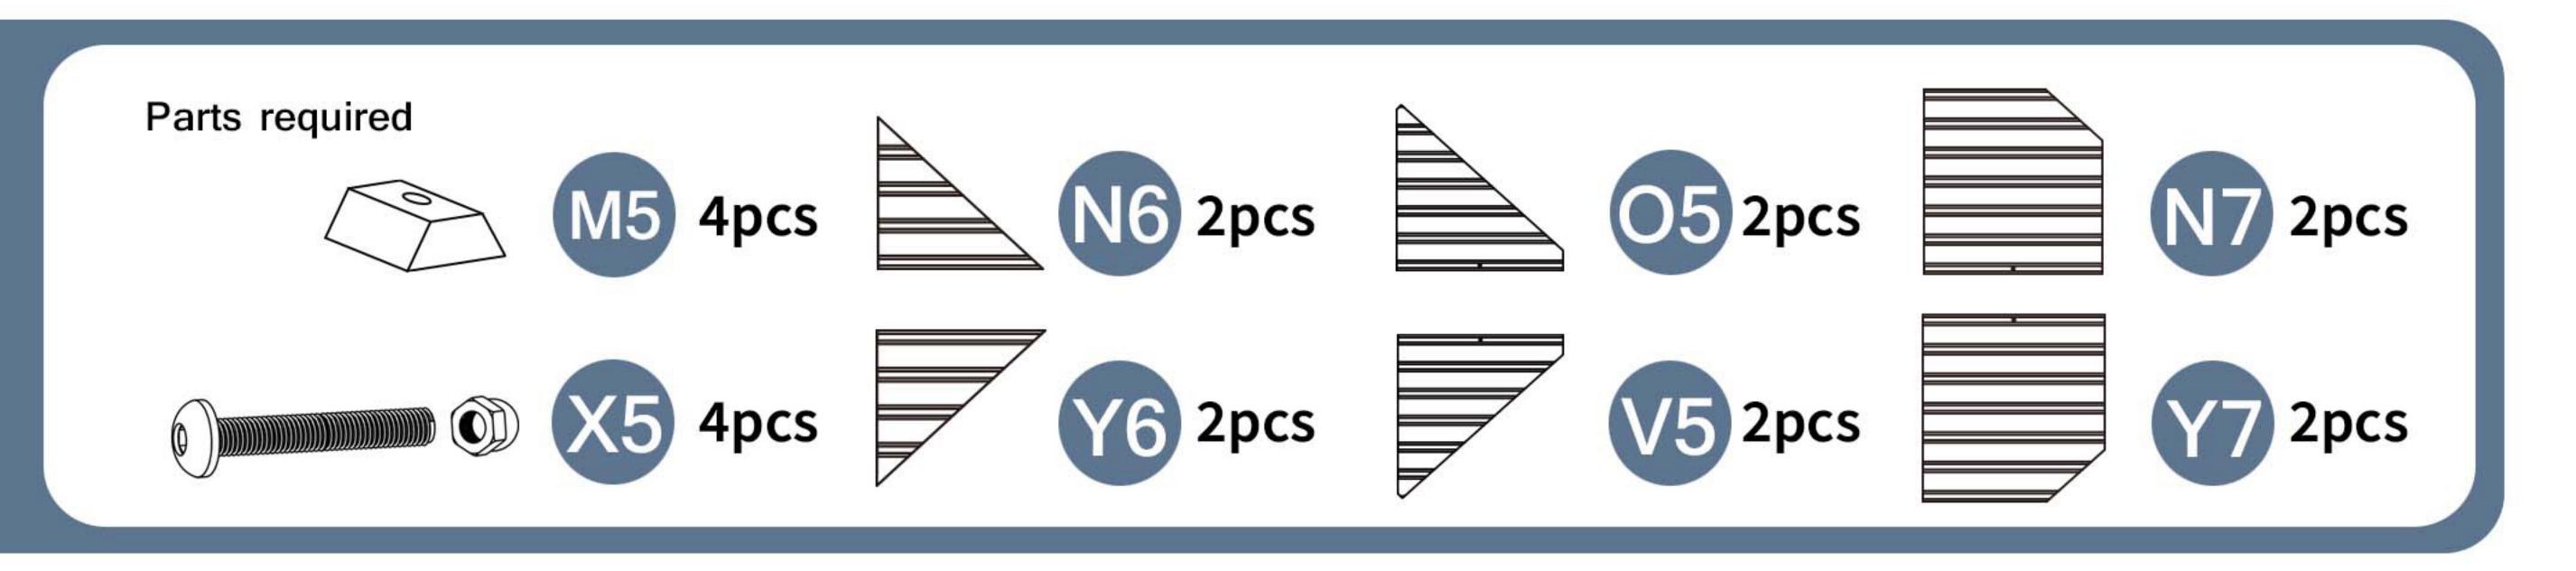






In order to facilitate the installation, it is recommended to leave one side and not install it for the time being. Wait for the installation in step 11 to complete before installing.

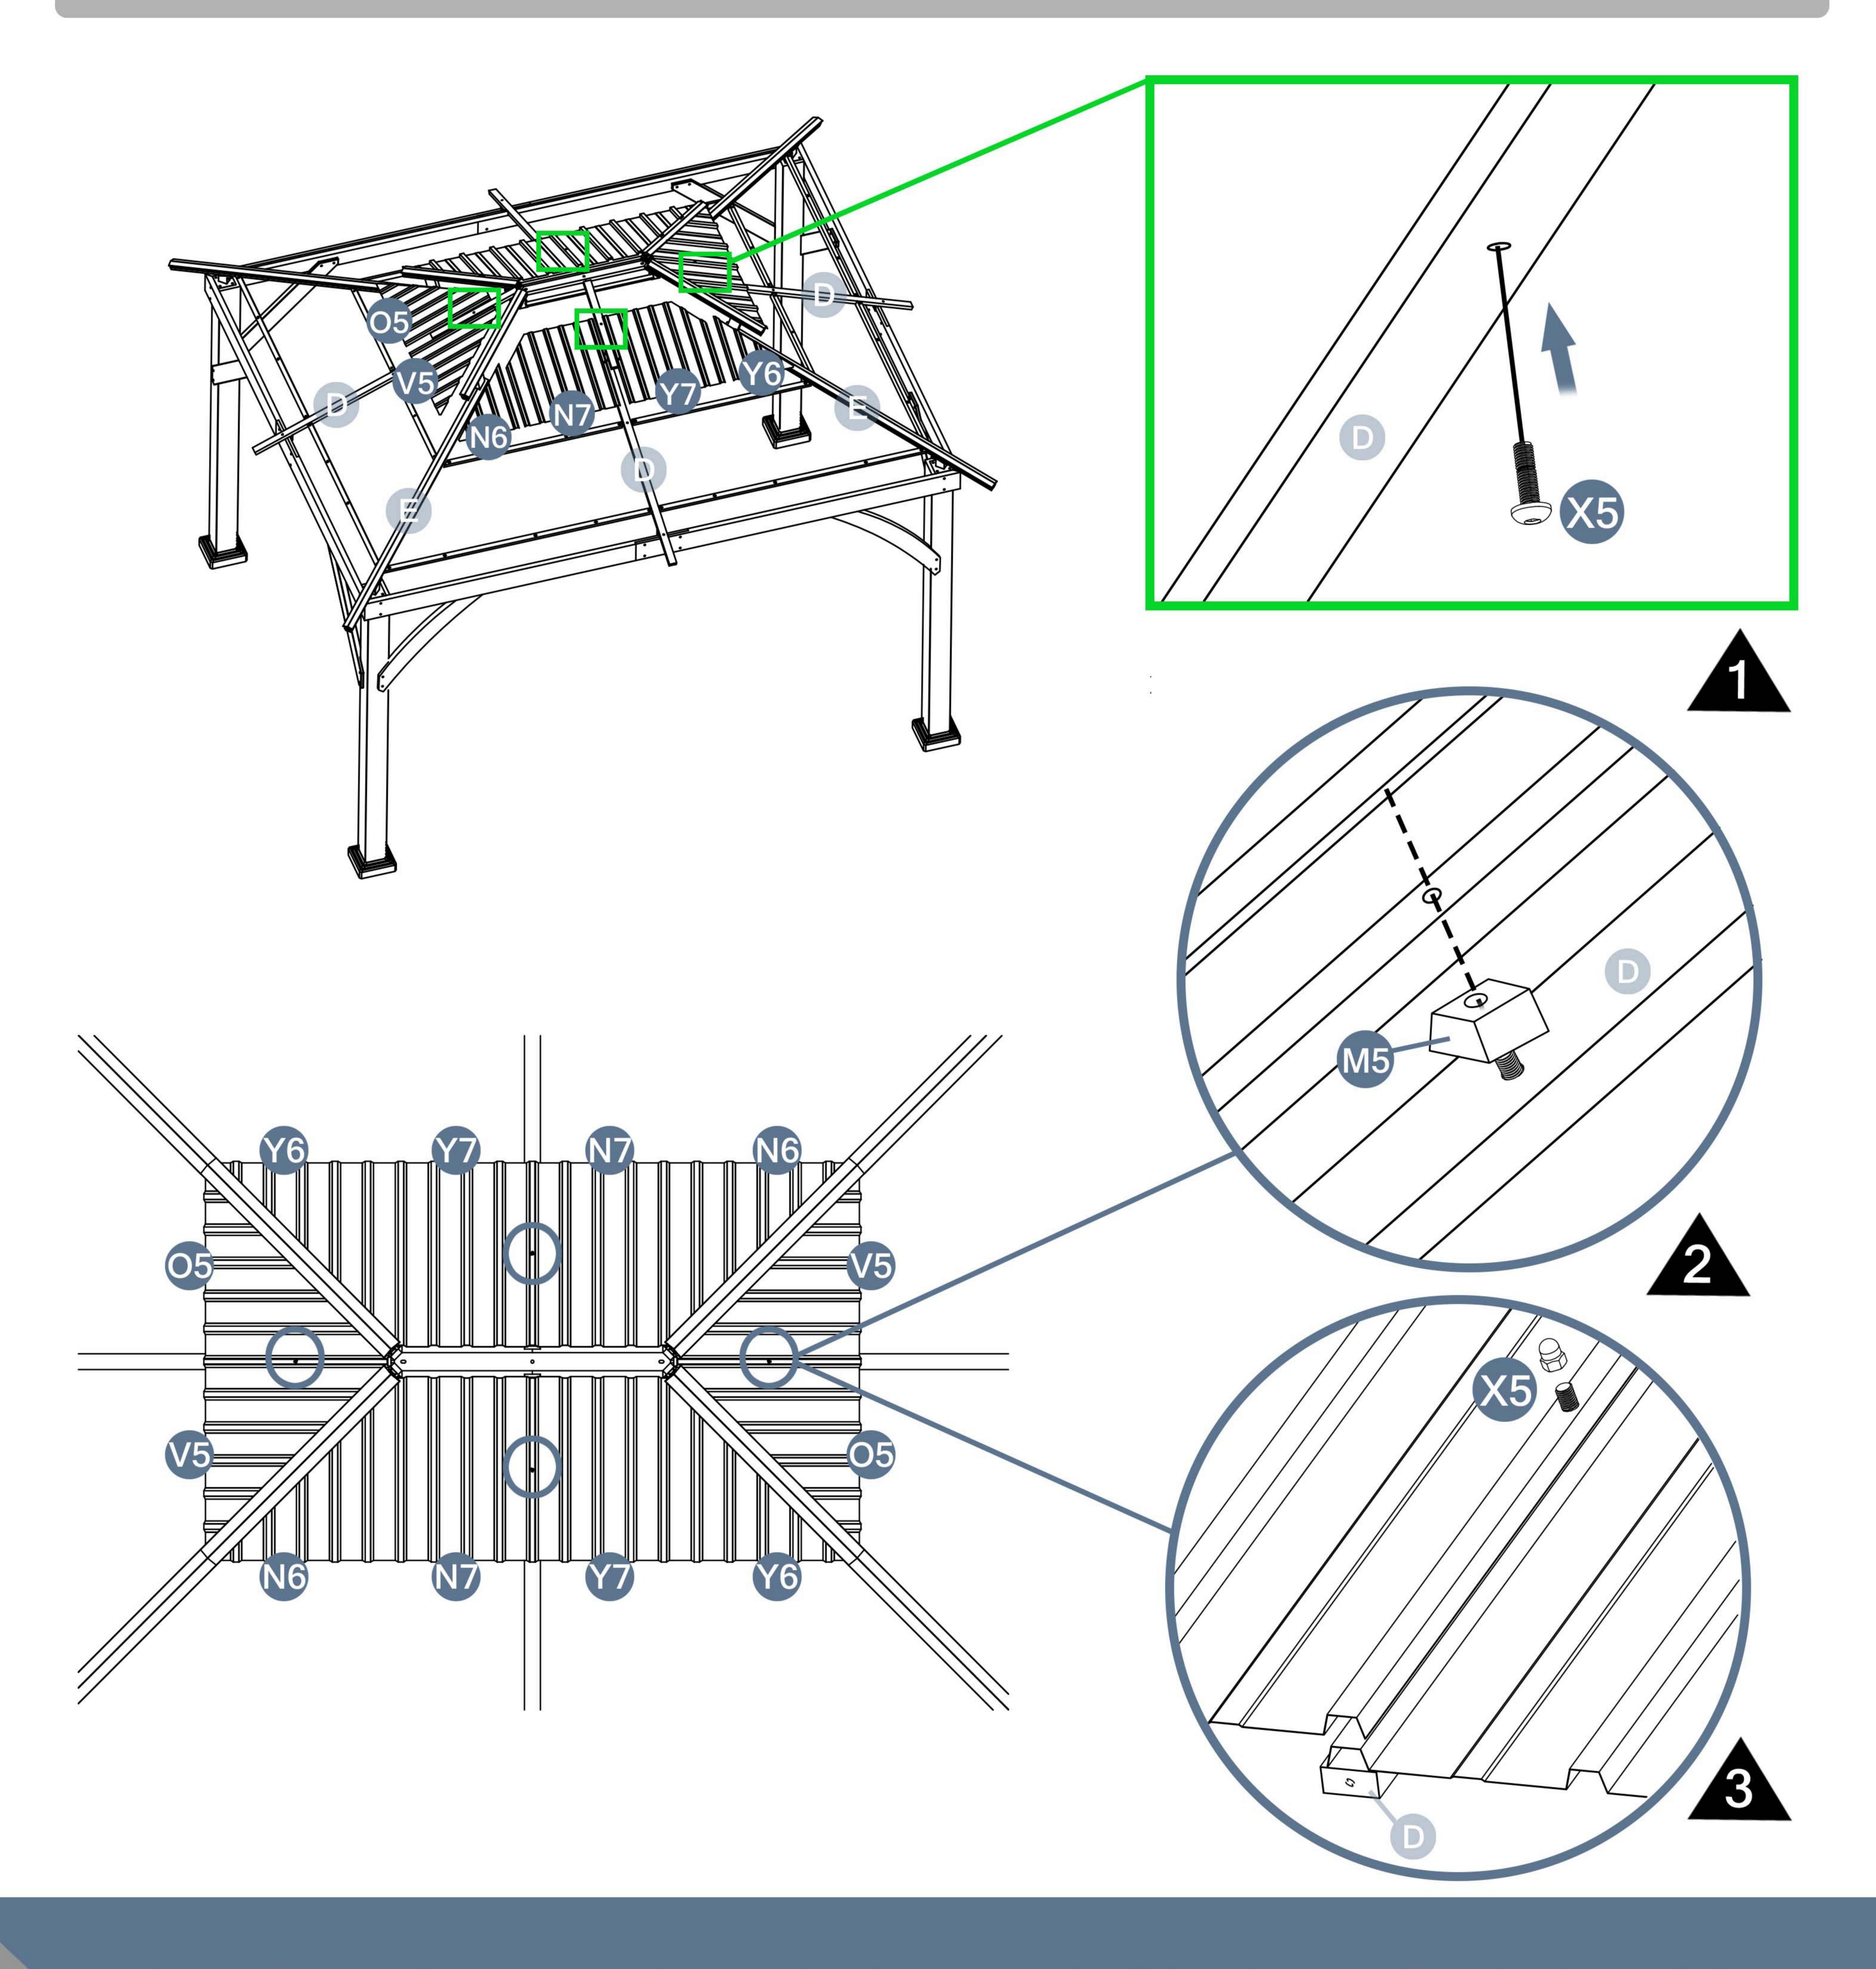


# Parts required

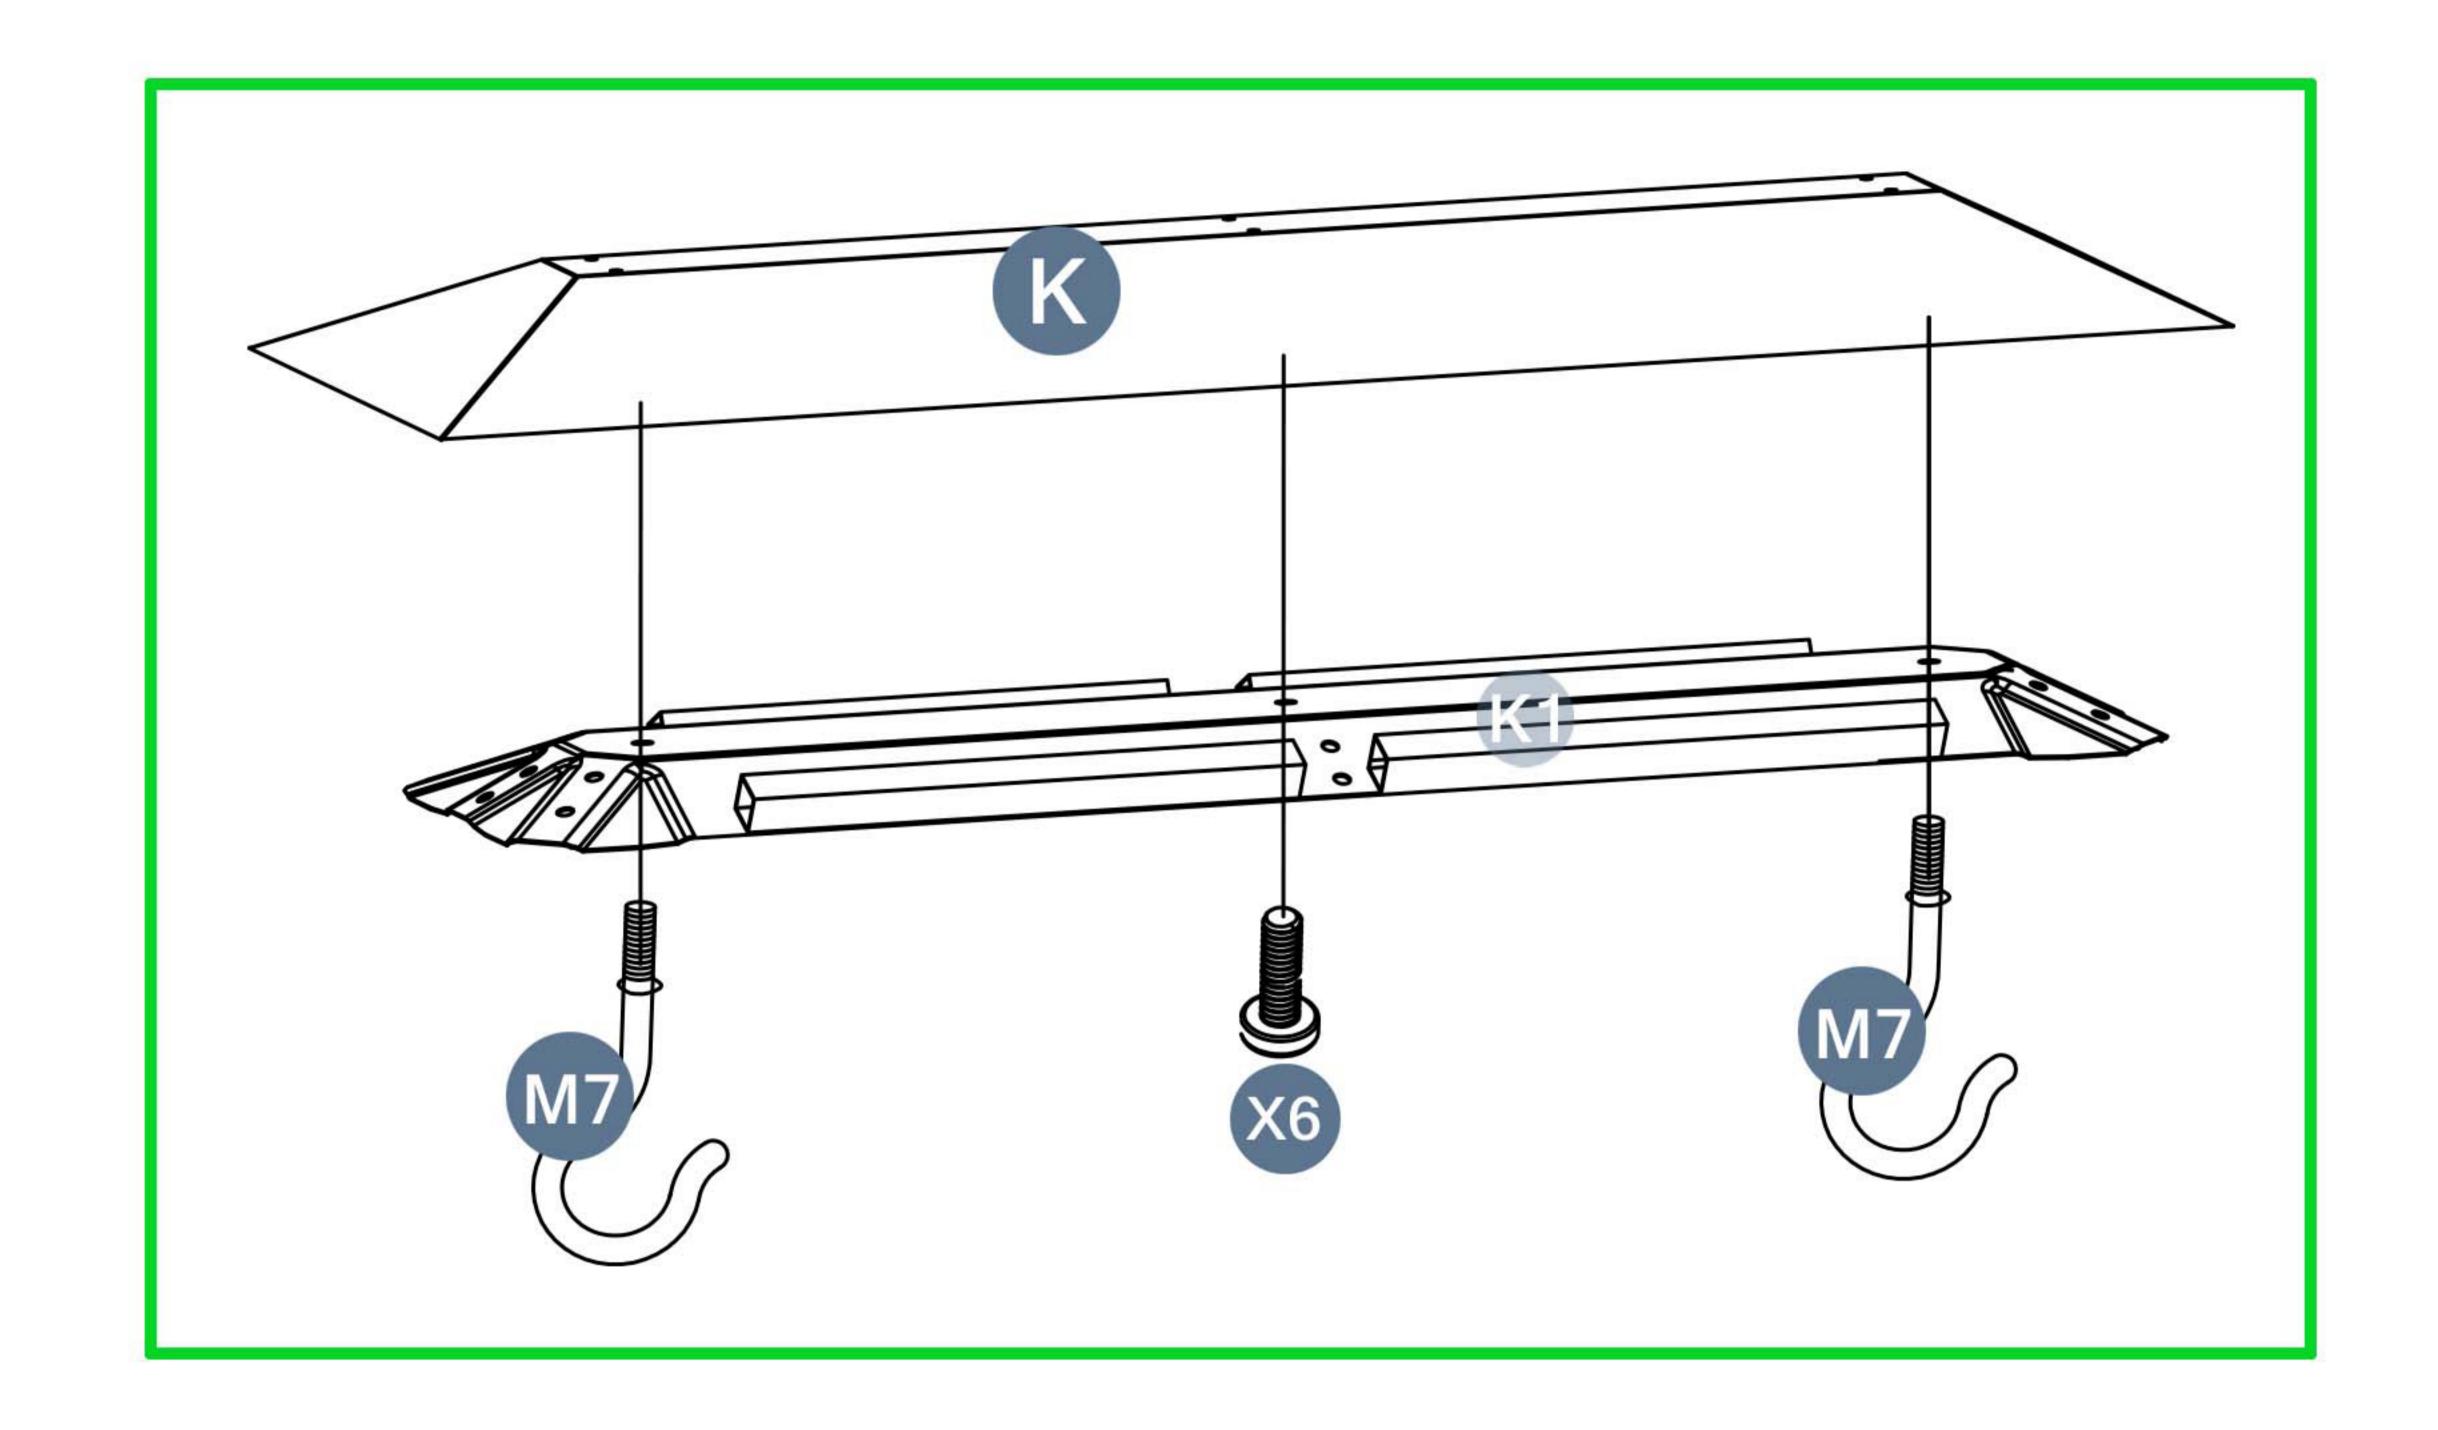


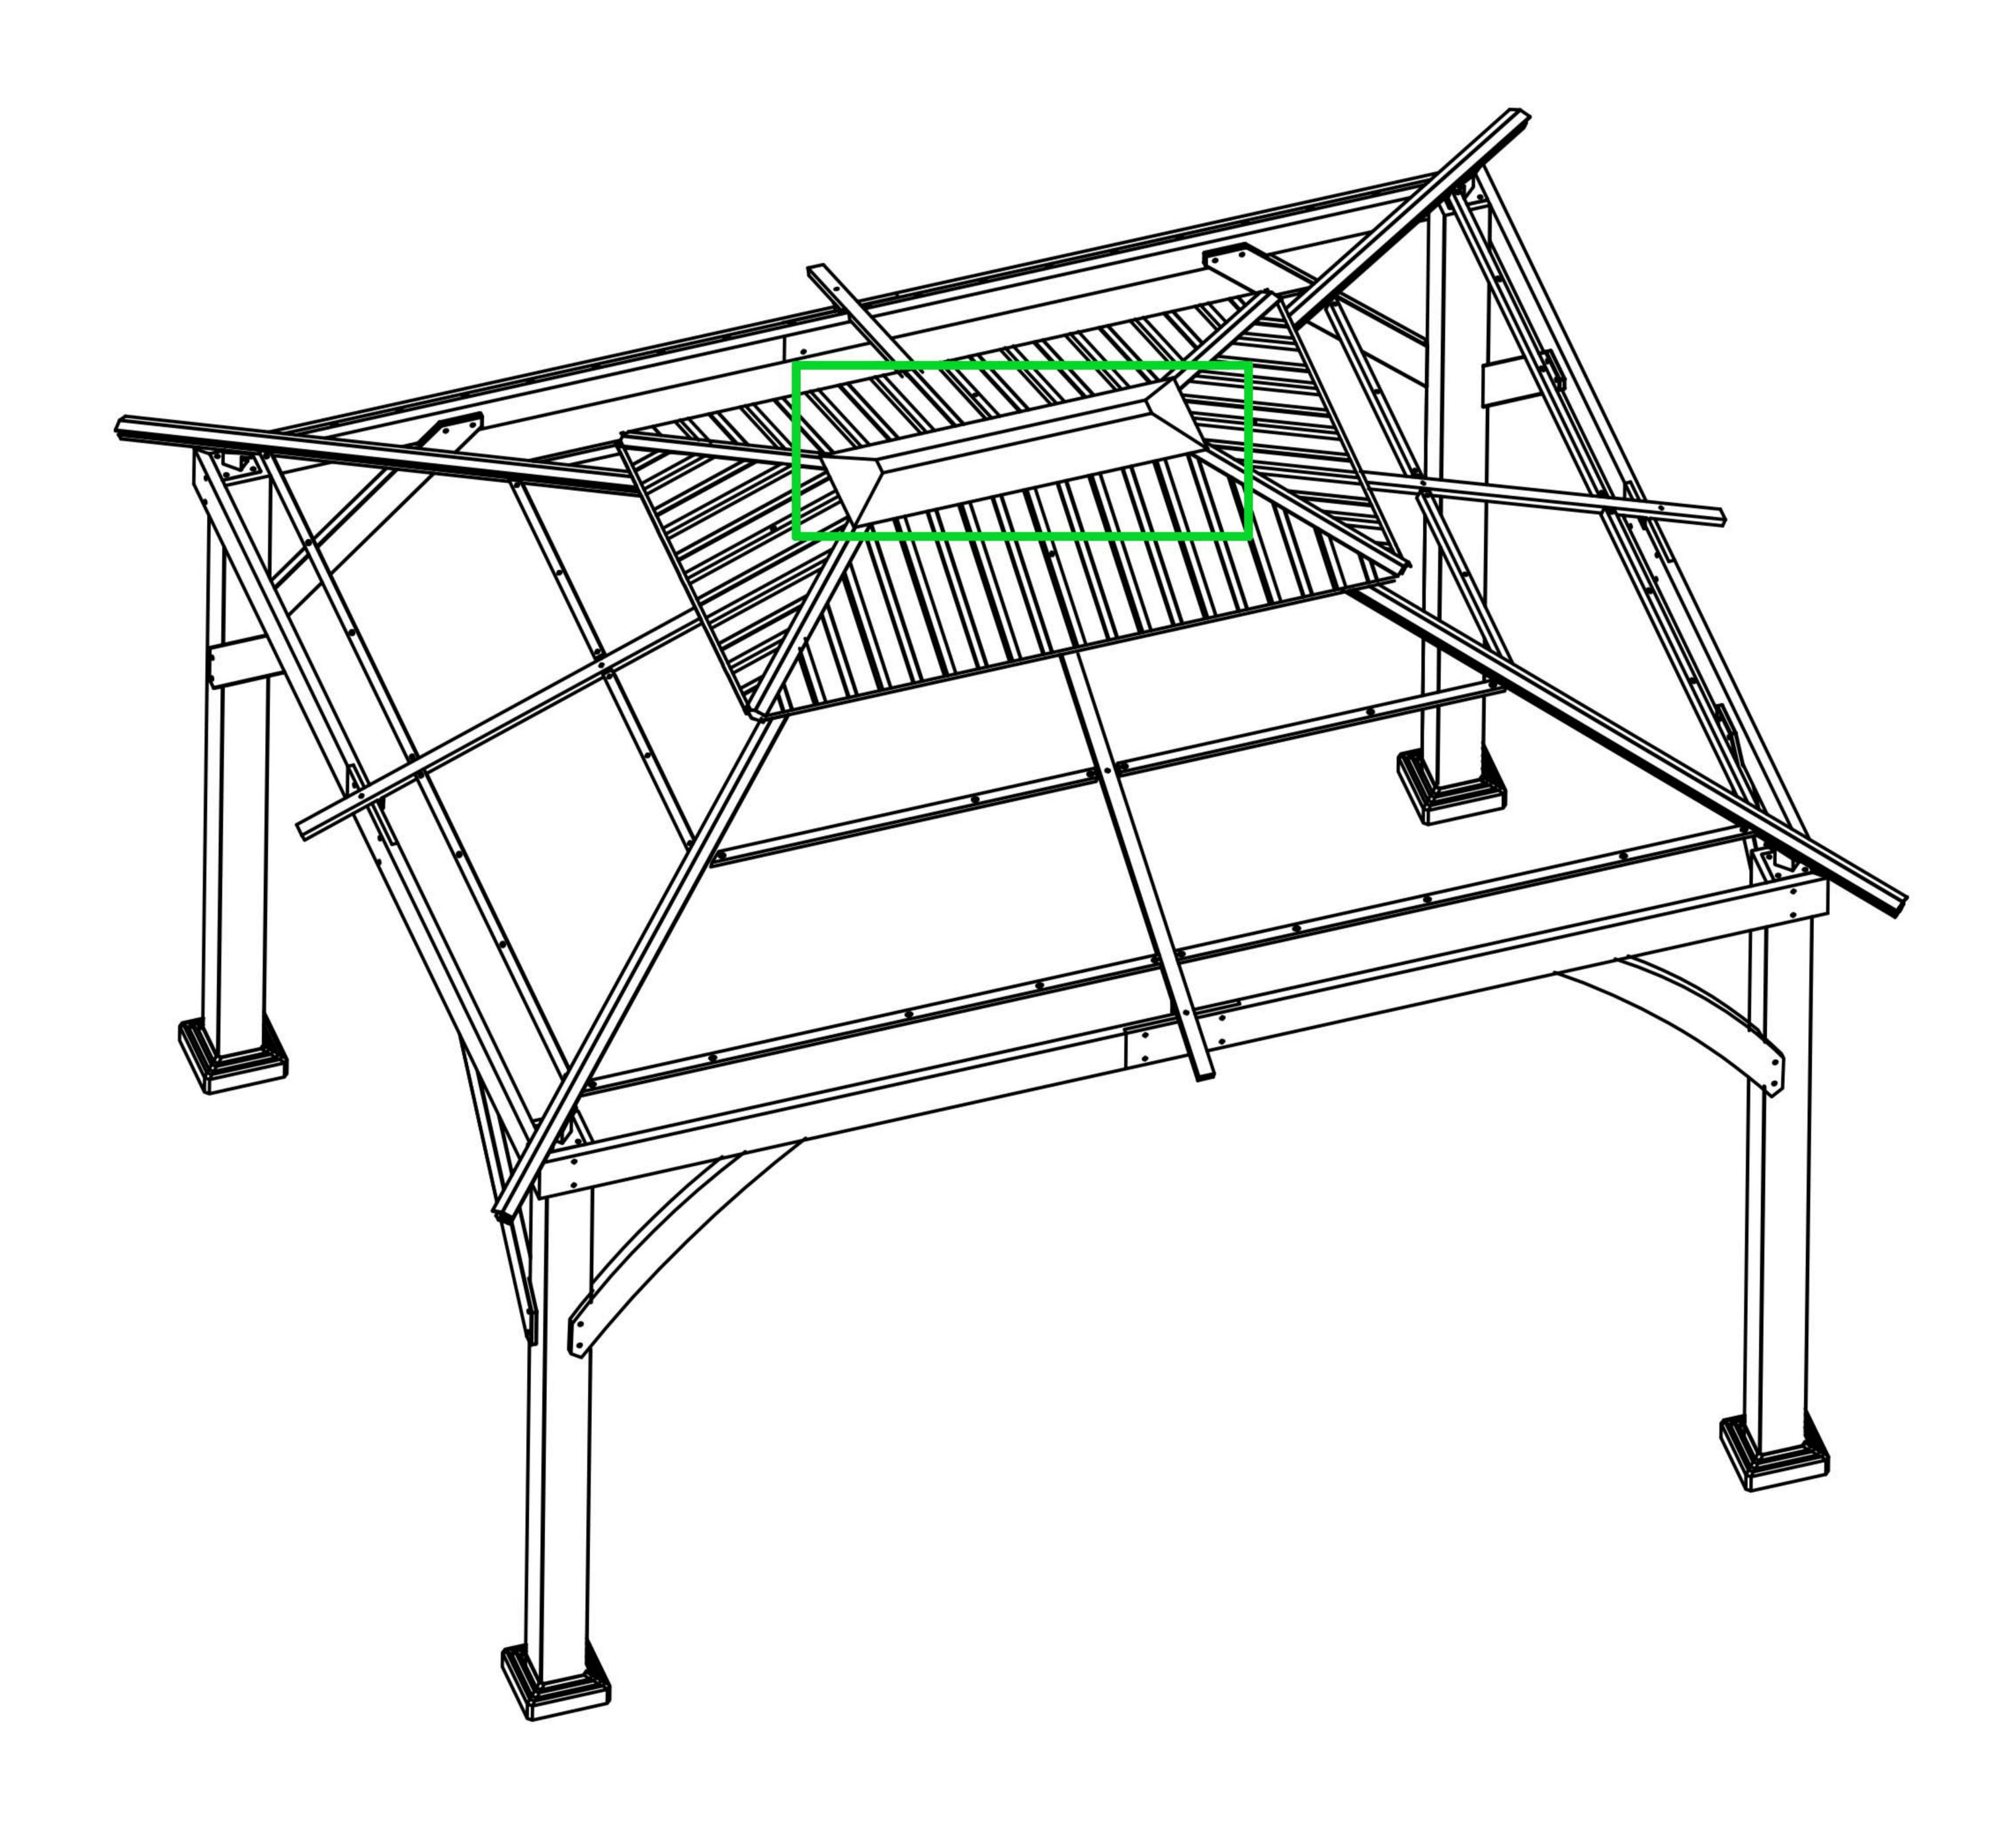

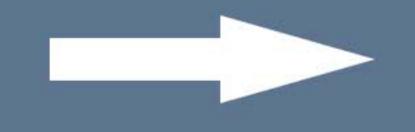


# STEP12 Parts required G5 2pcs M2 4pcs G6 2pcs G6 2pcs M2 8pcs

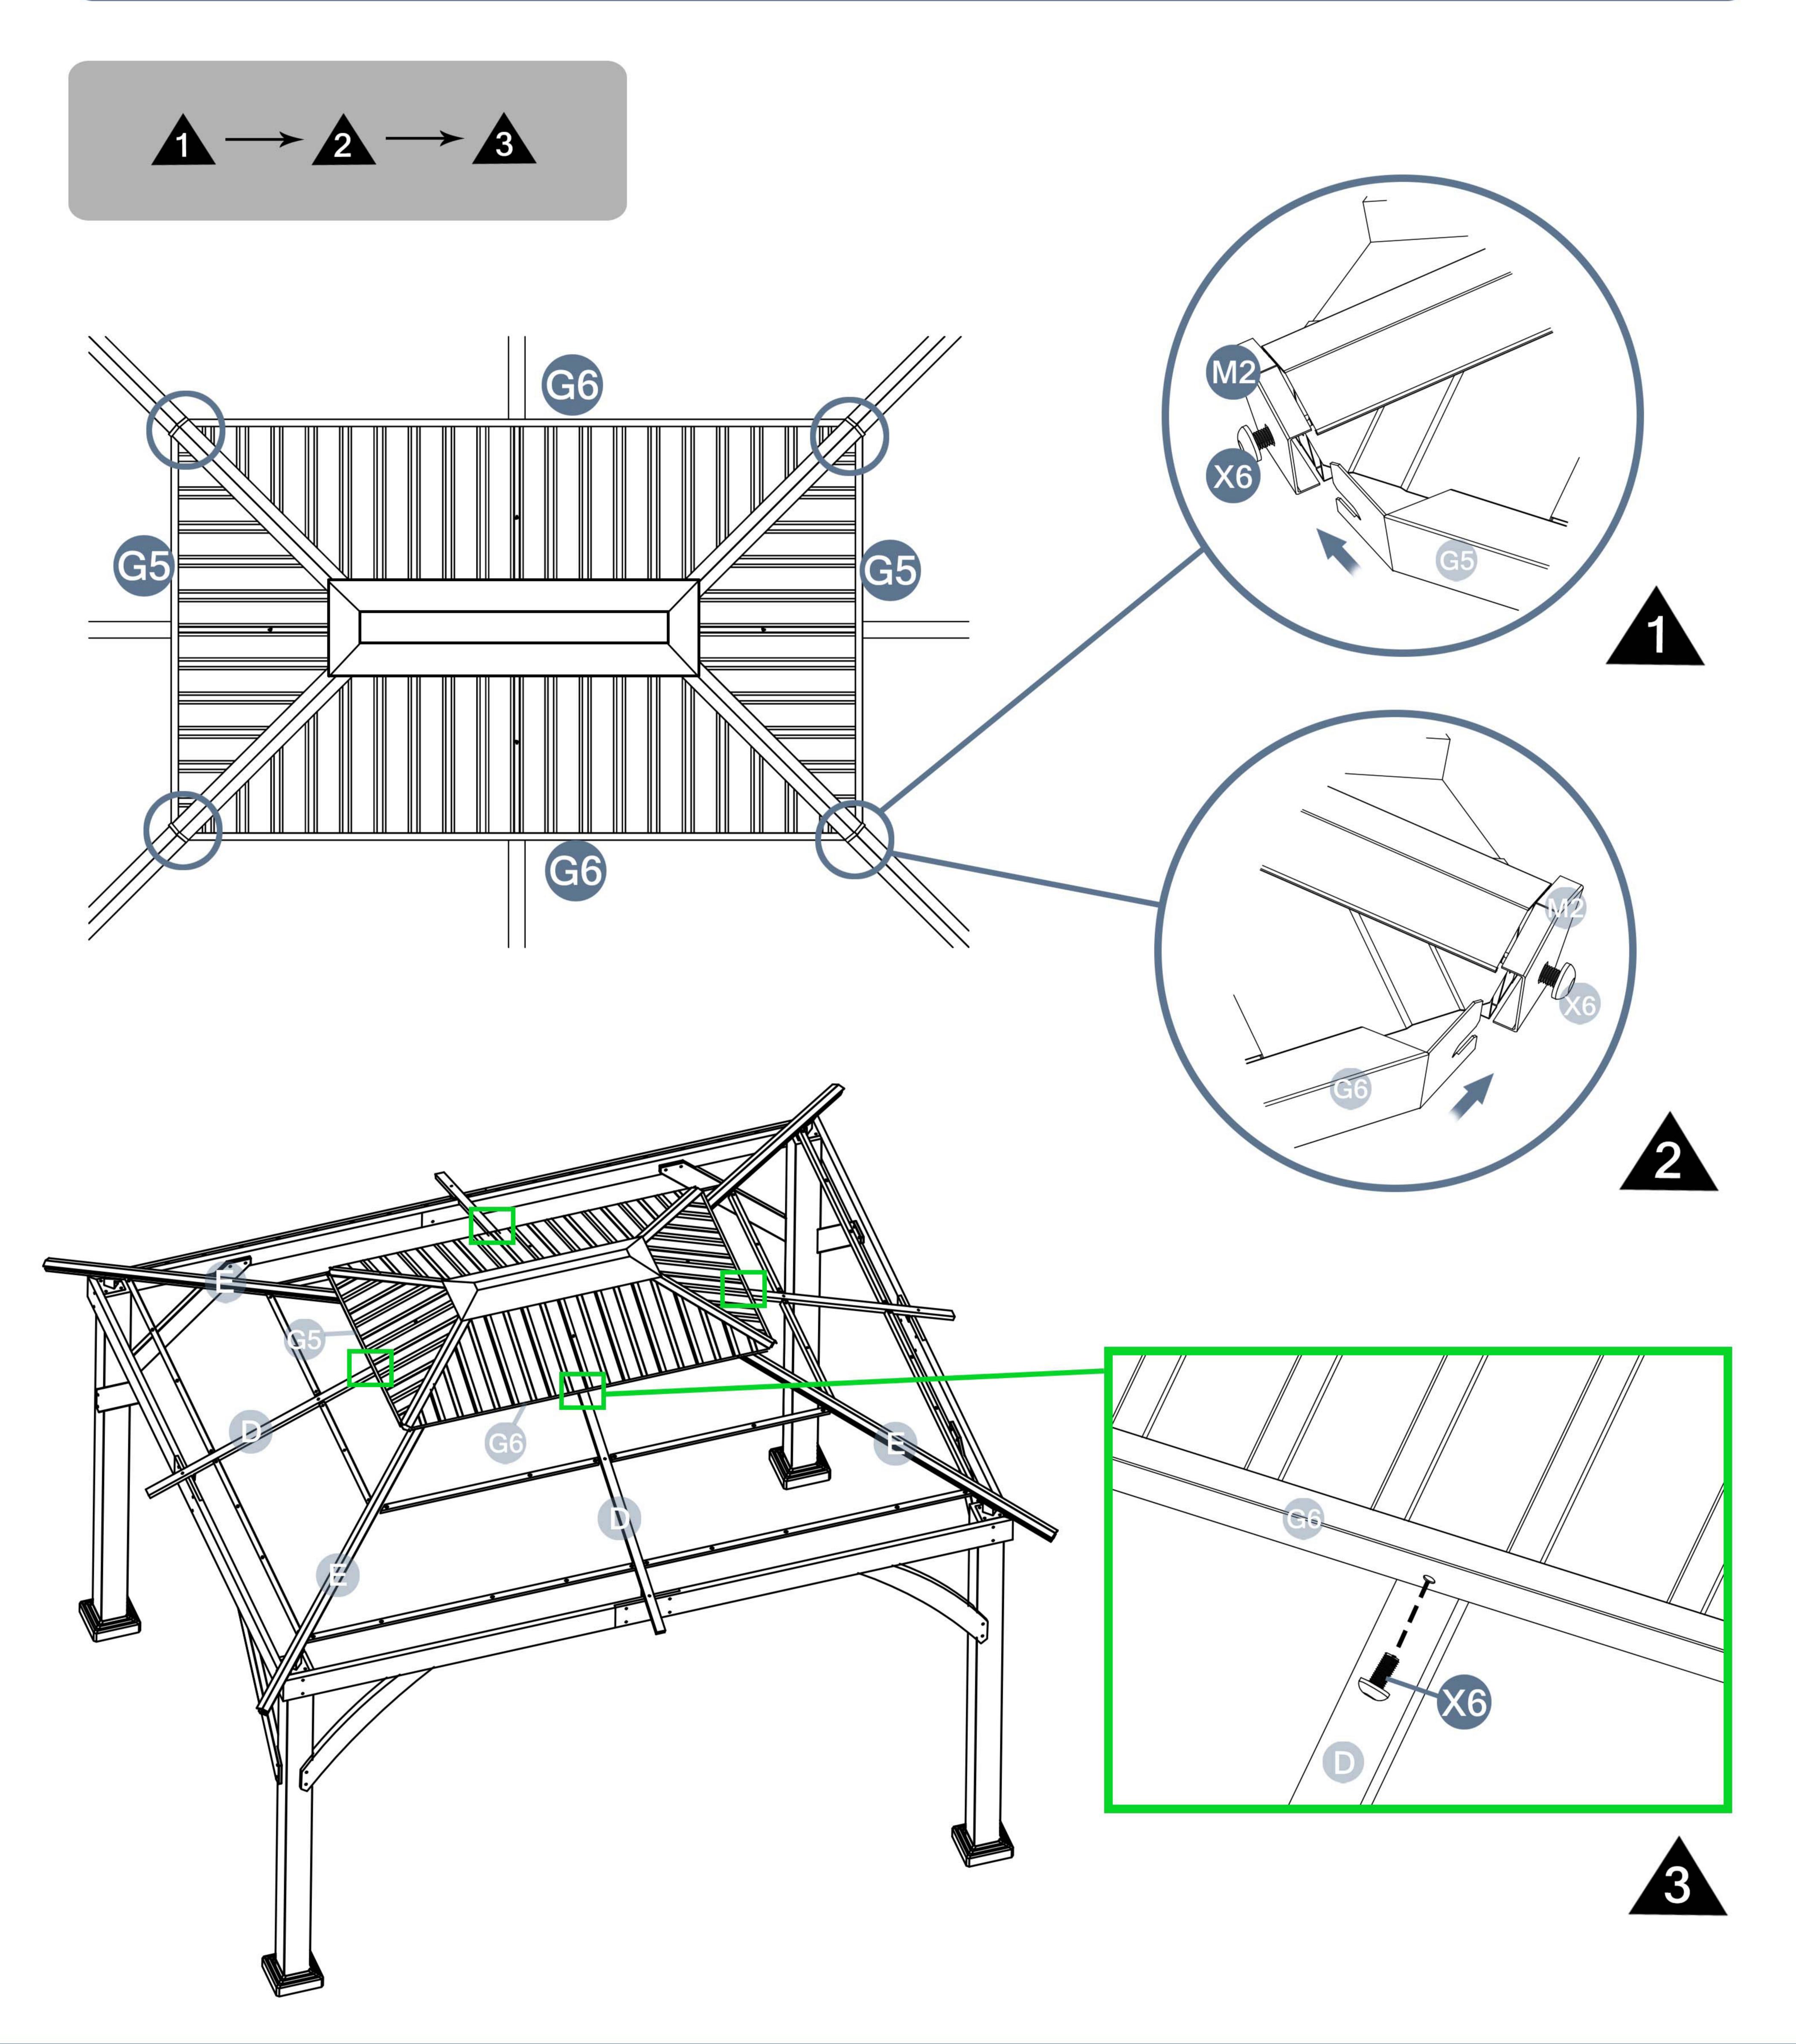

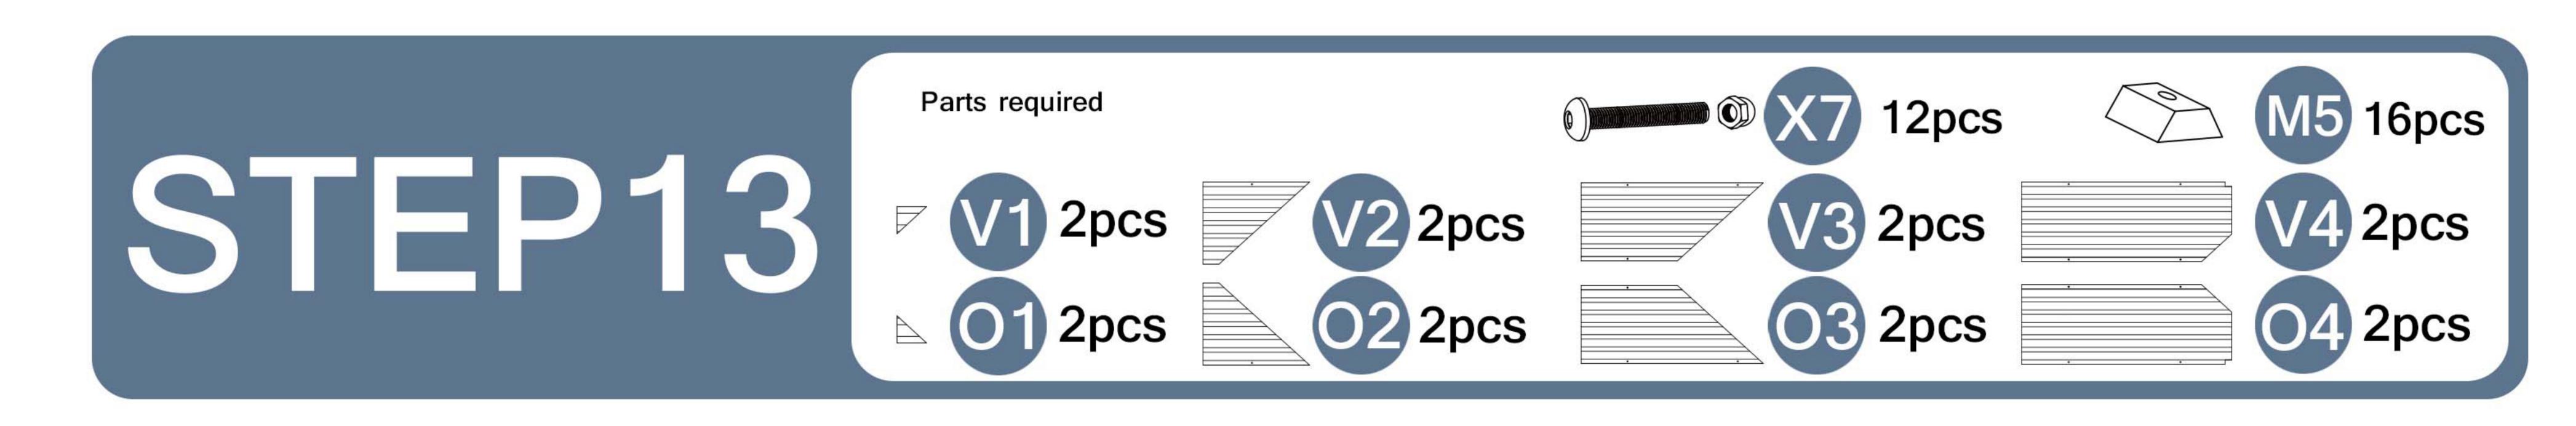




Pay attention to the direction of screw installation

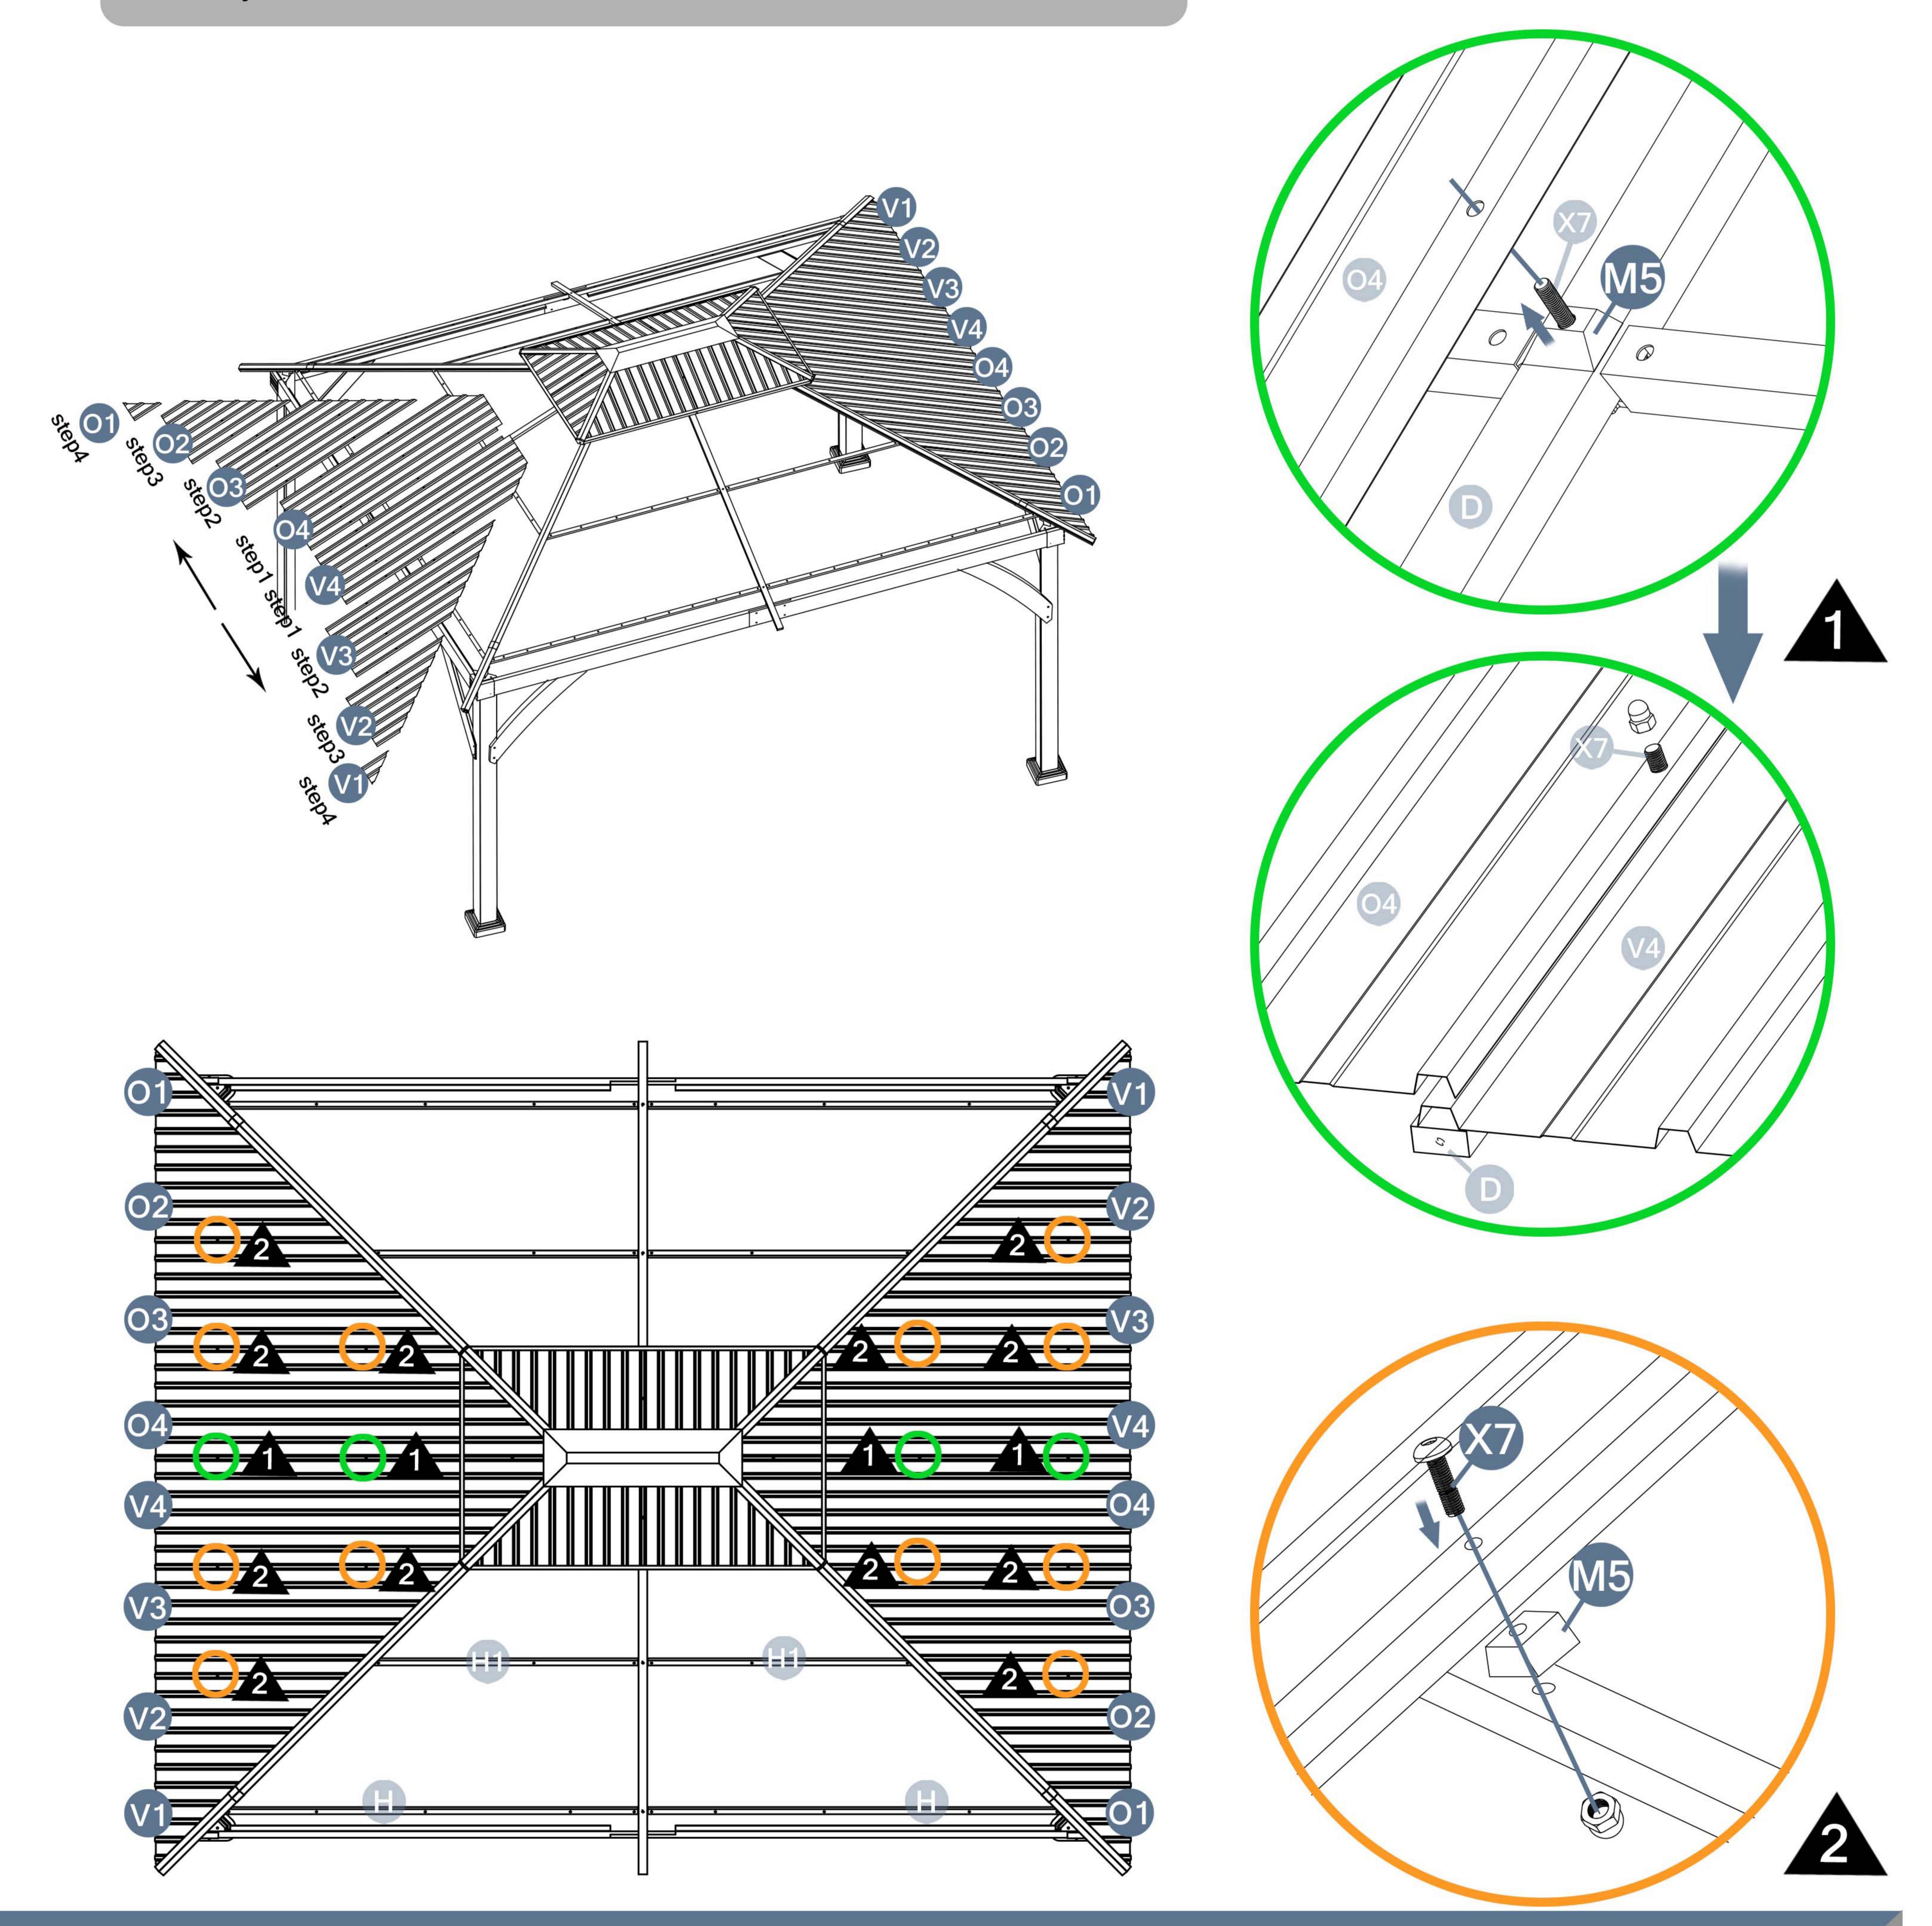







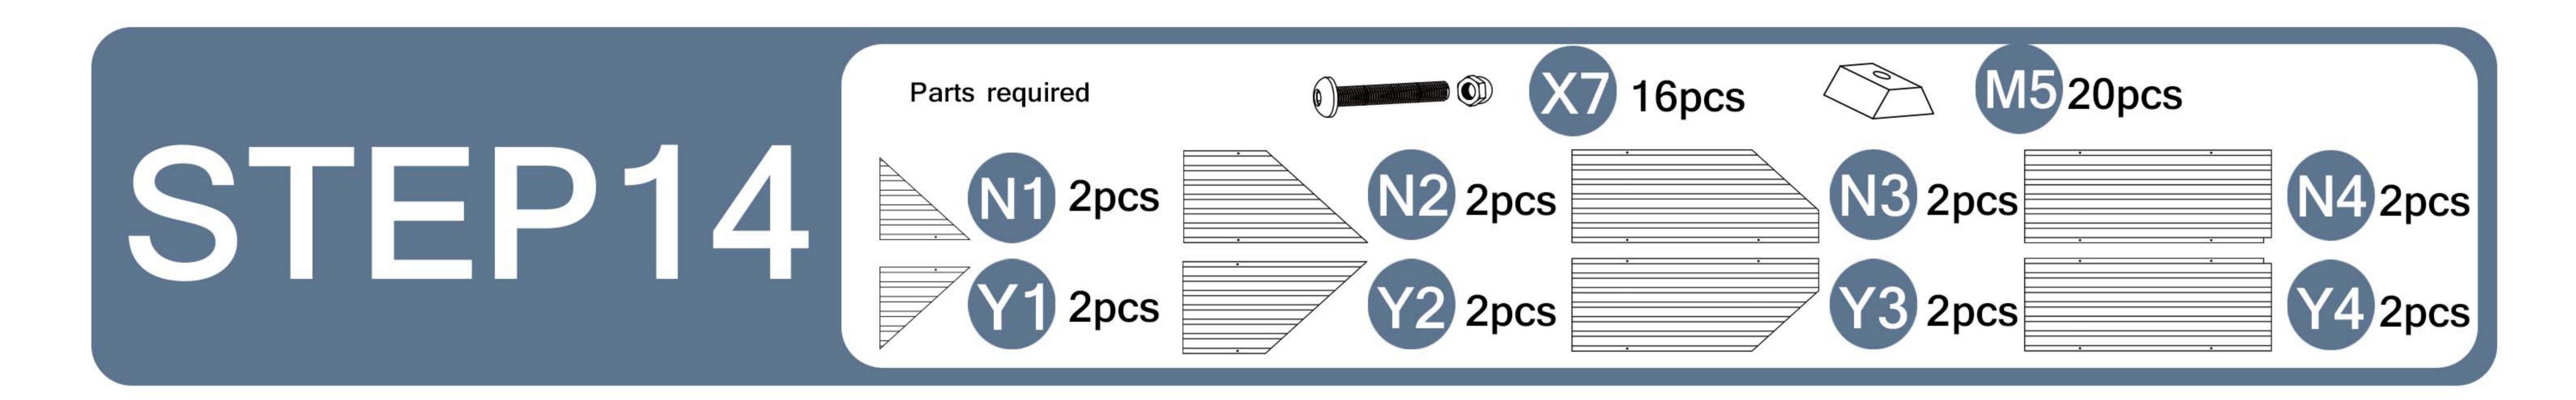






Pay attention to the direction of screw installation

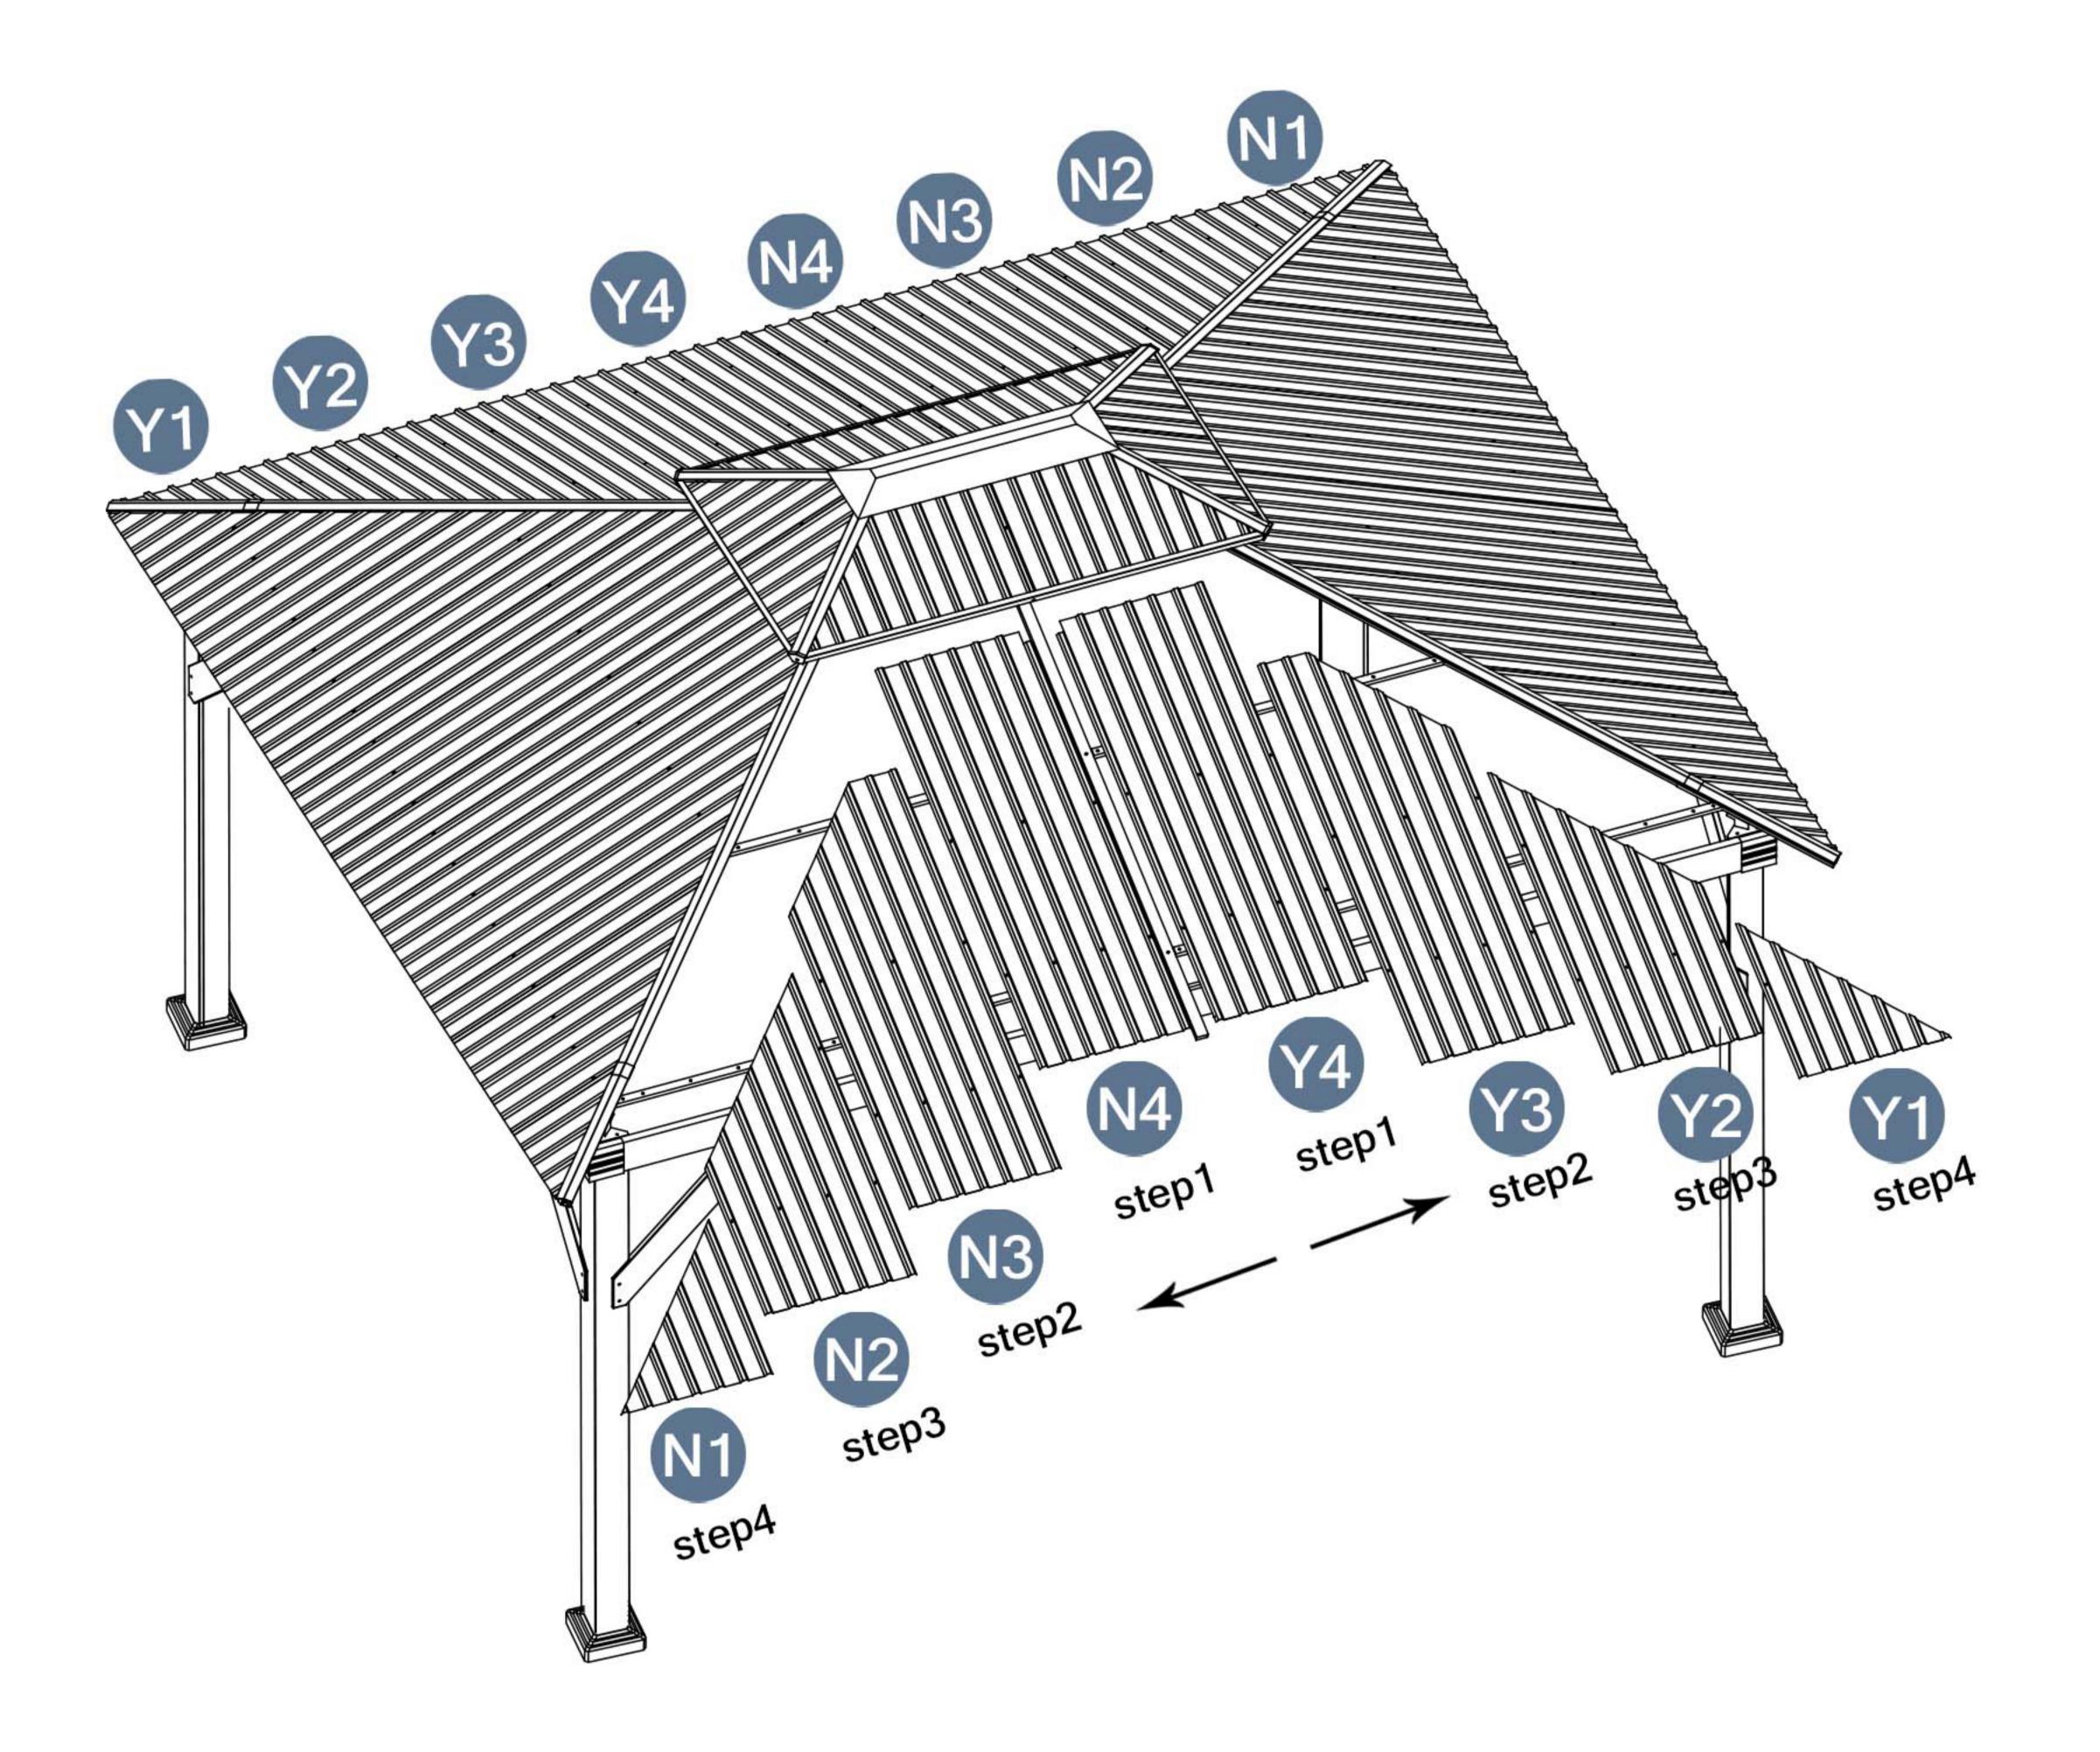


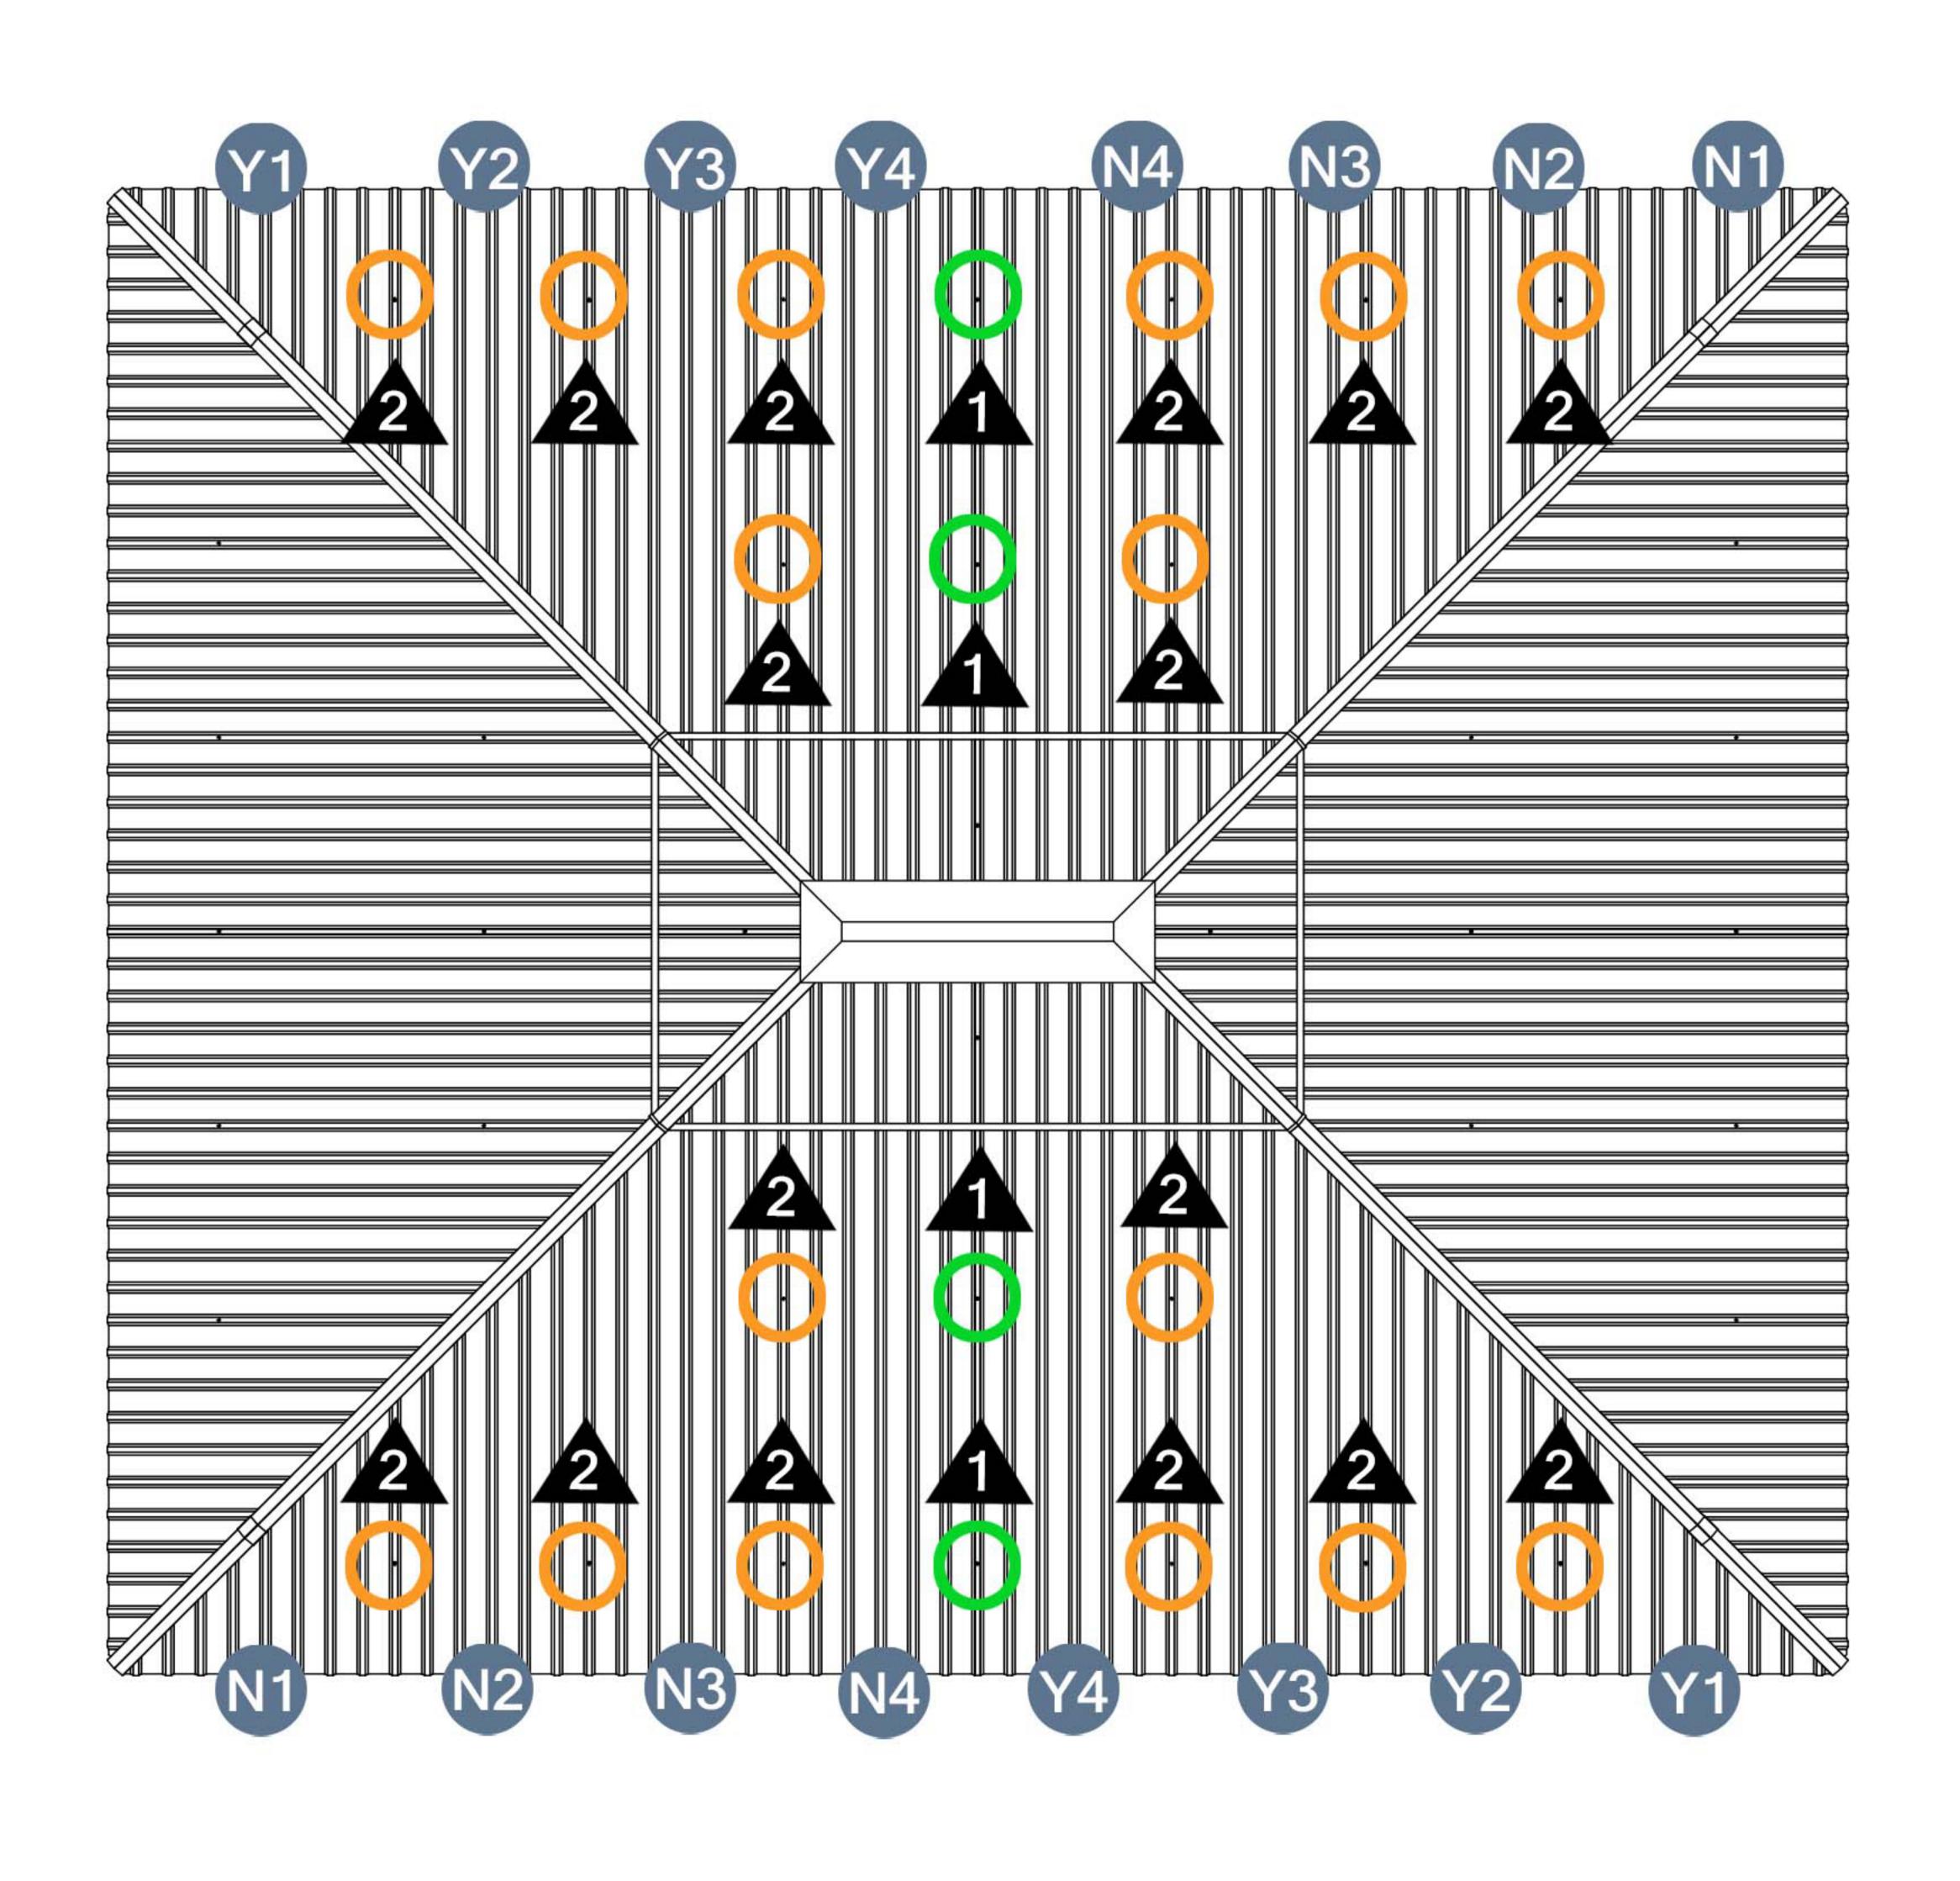

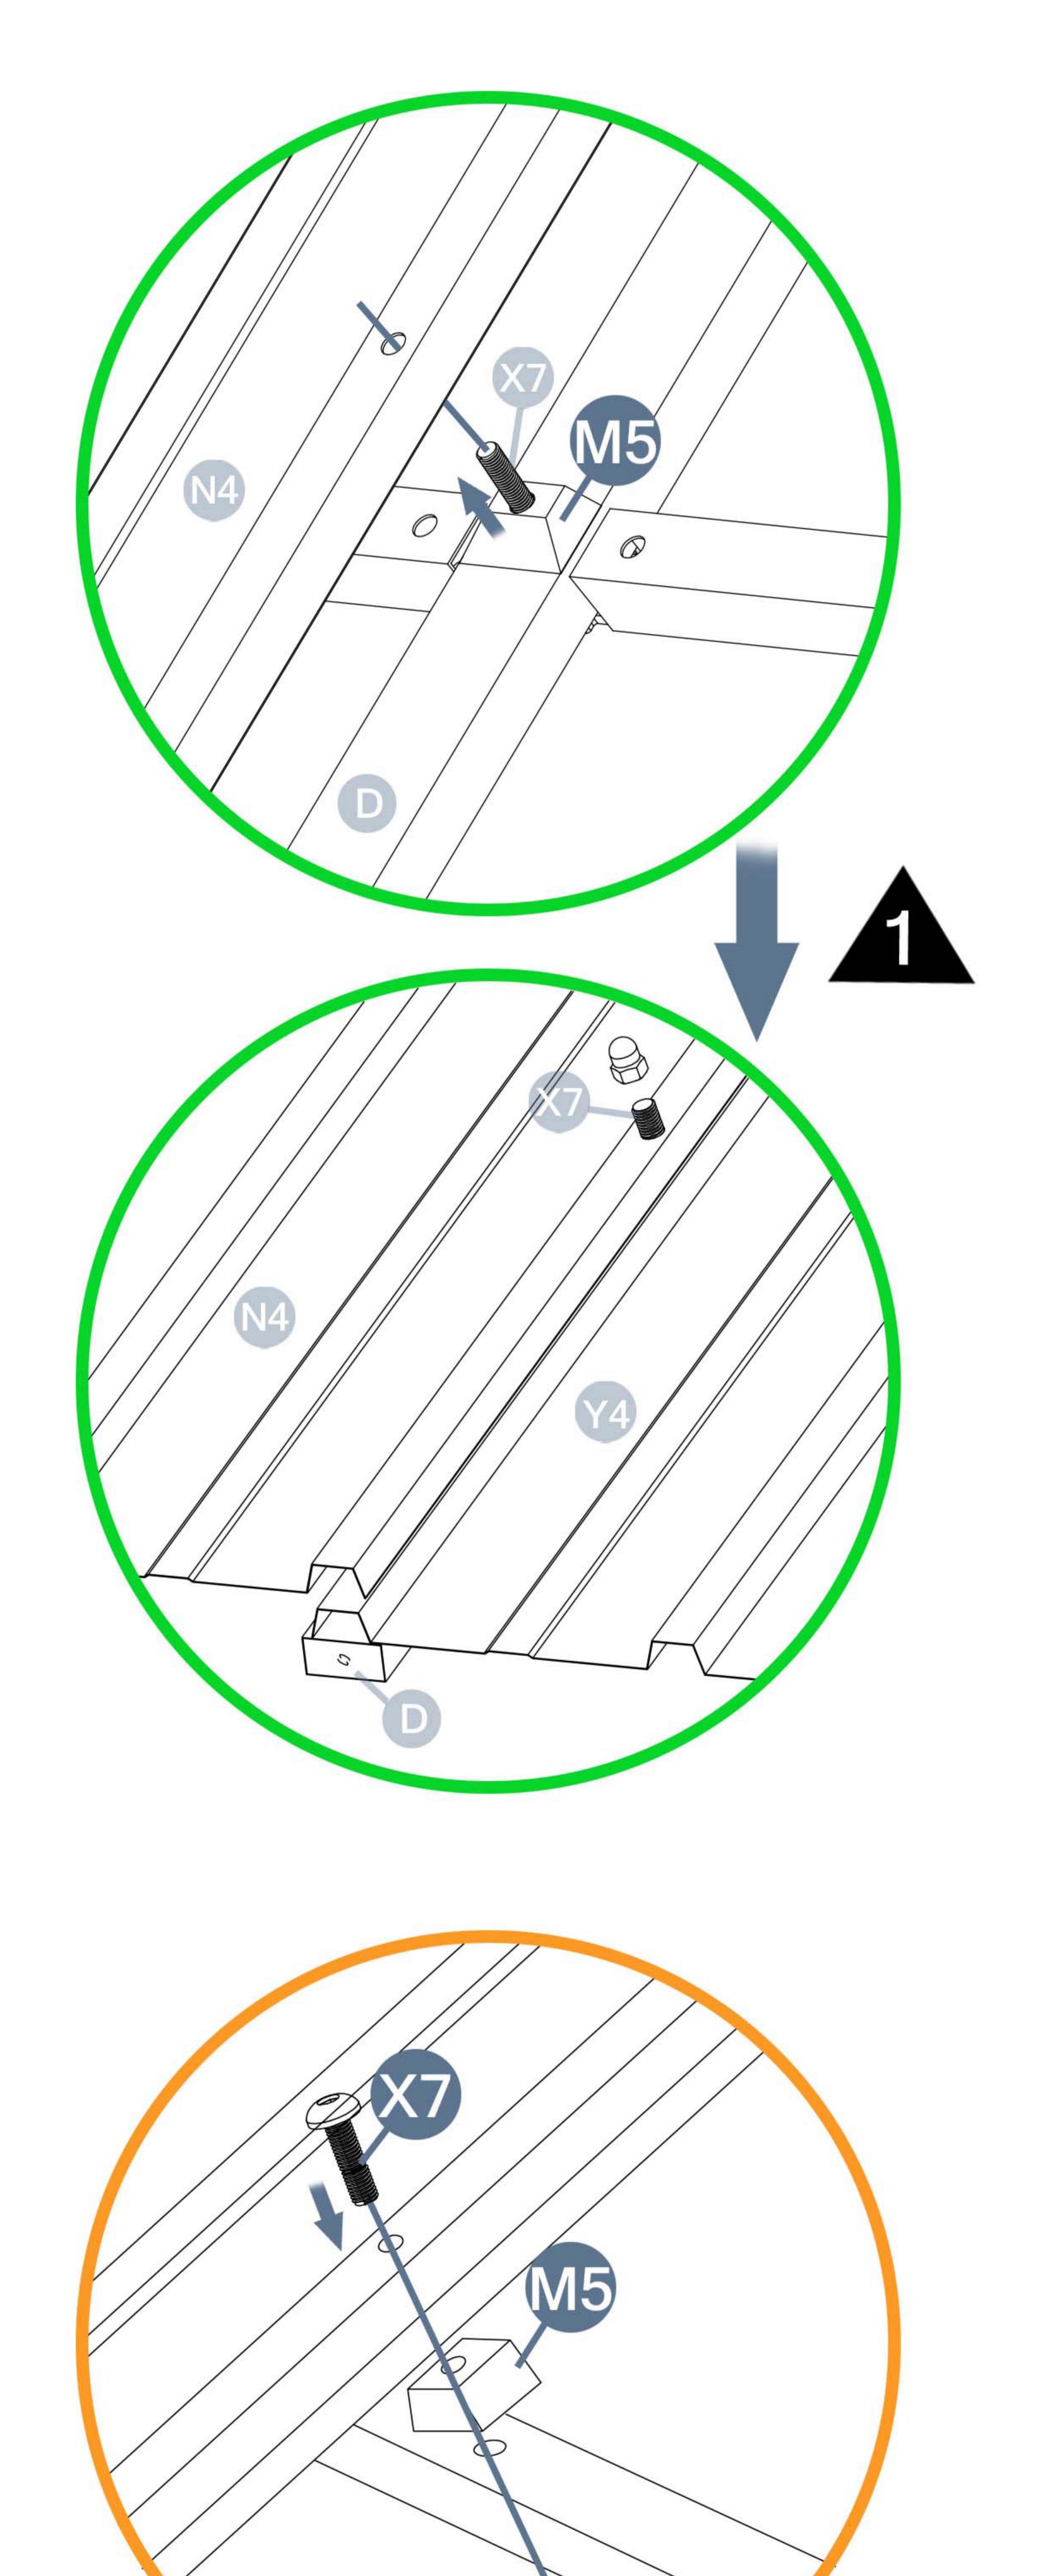

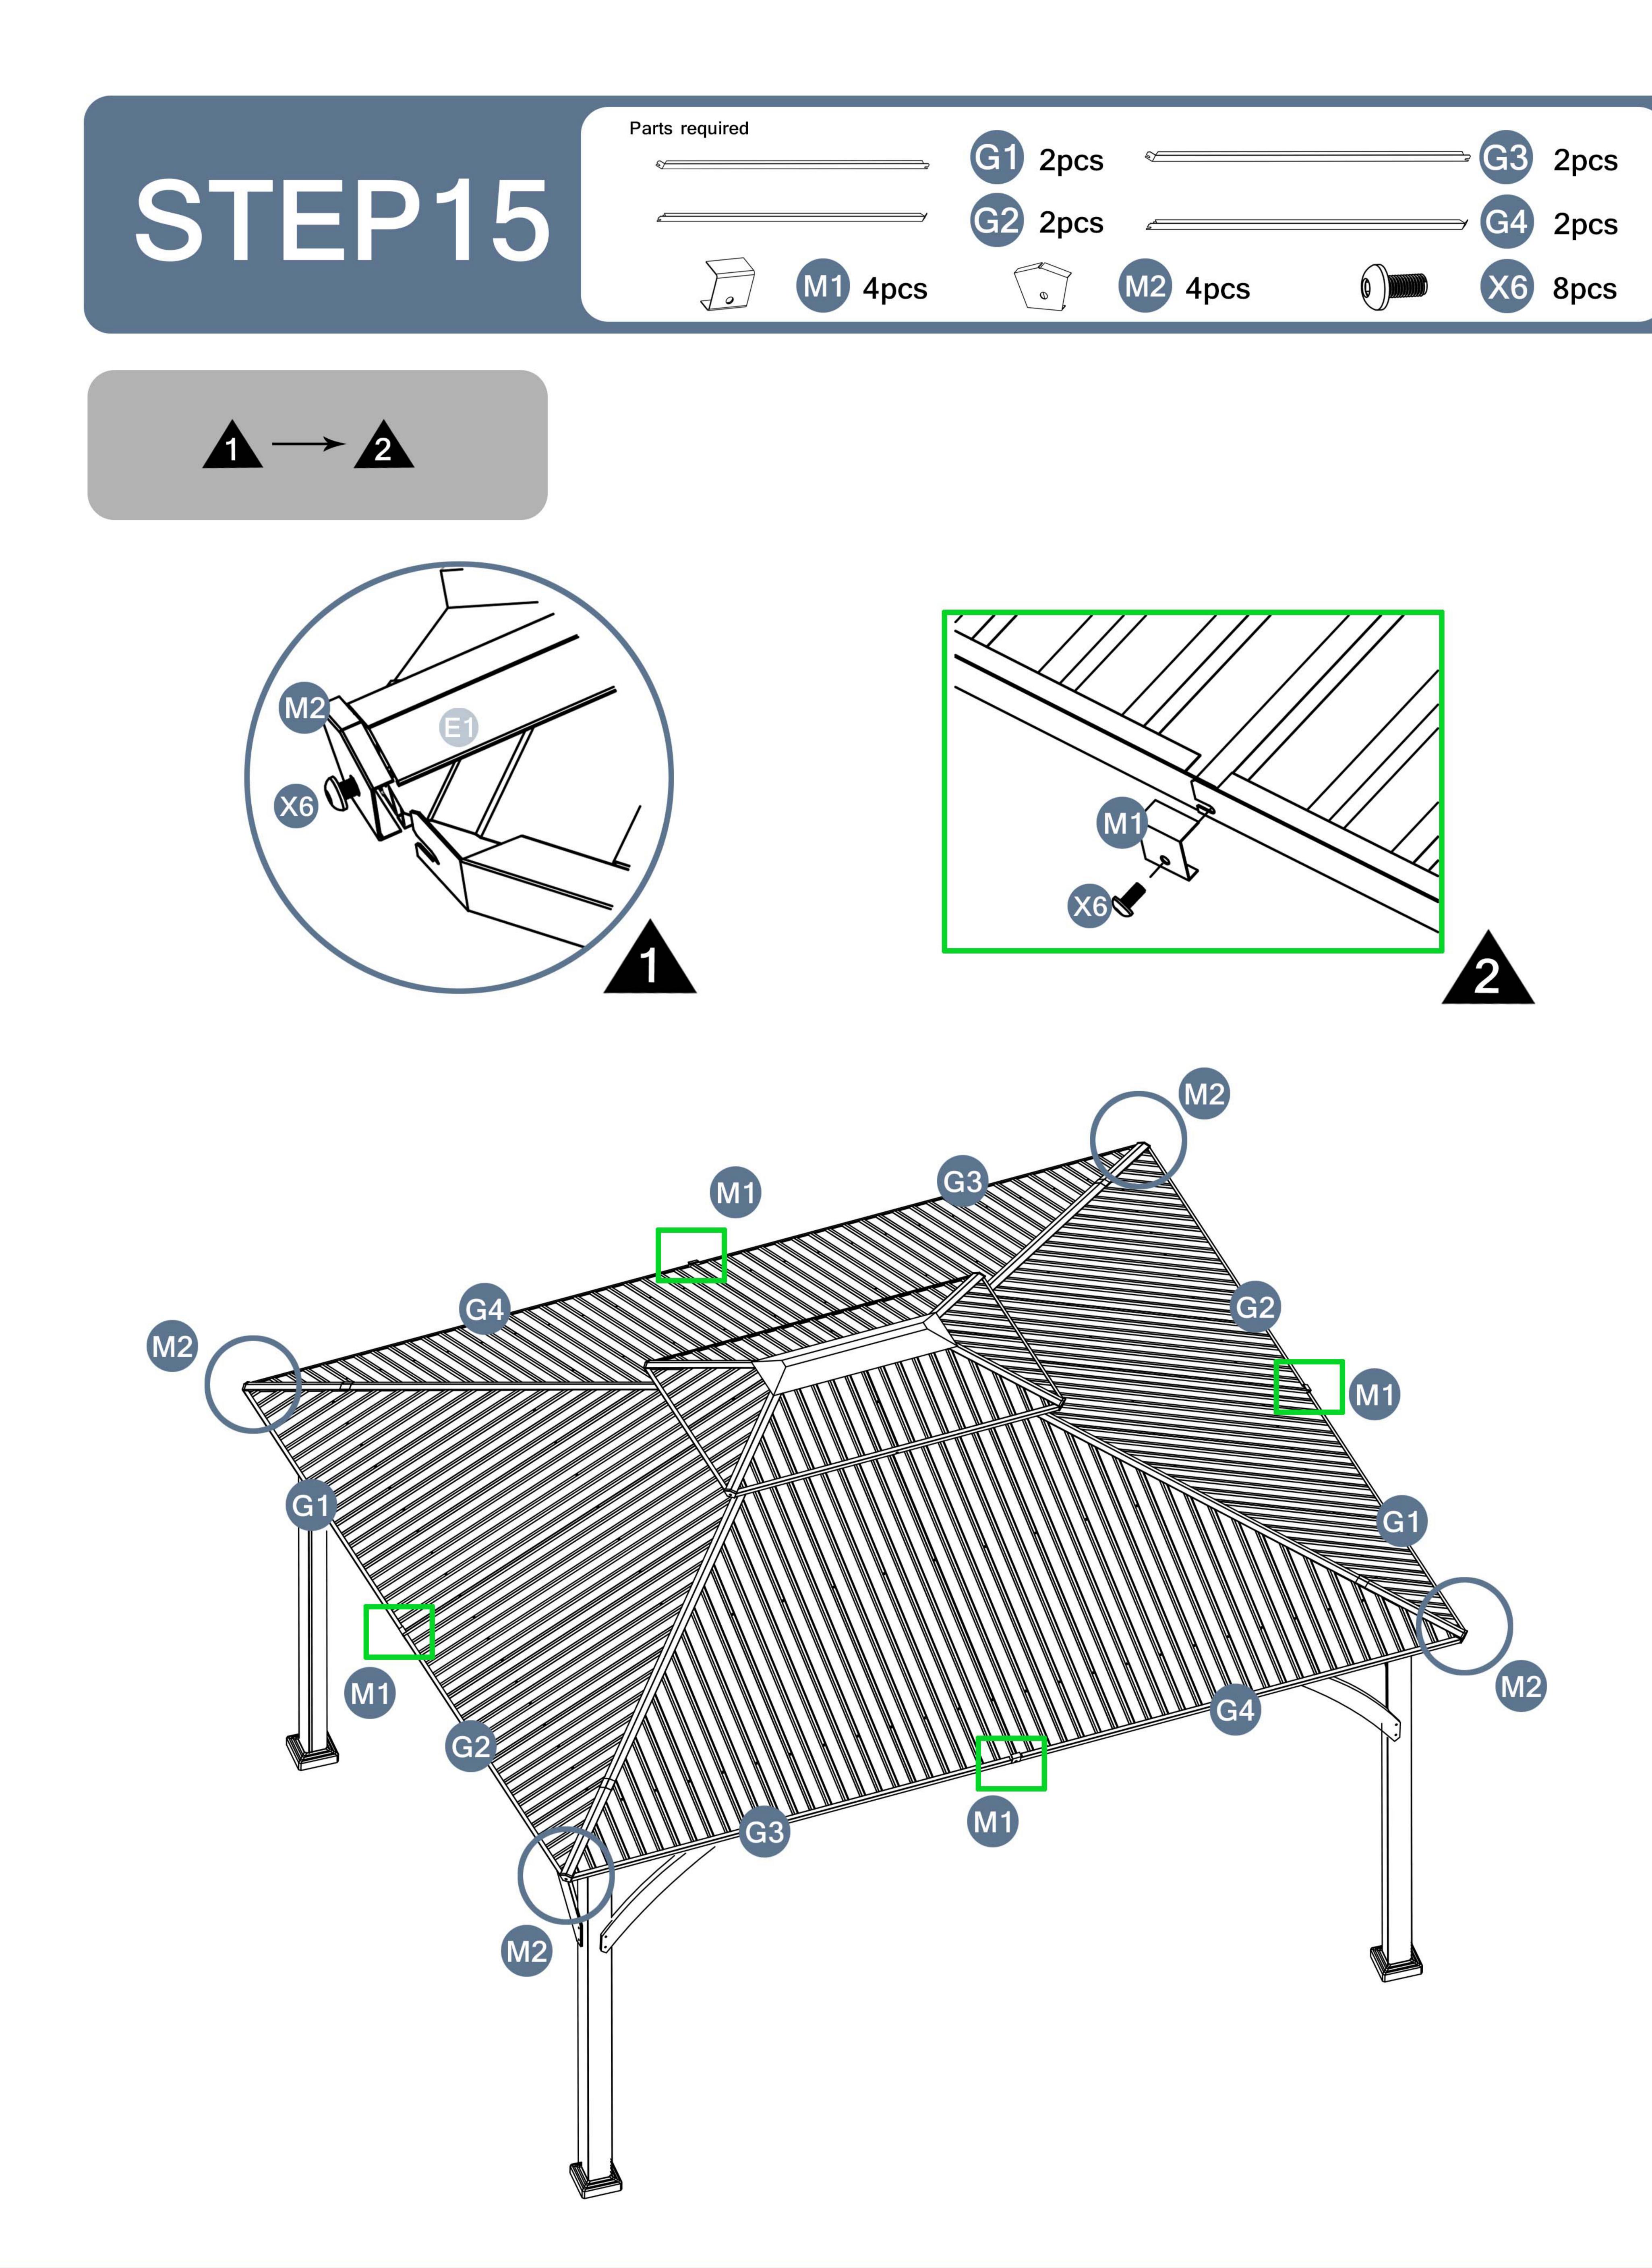


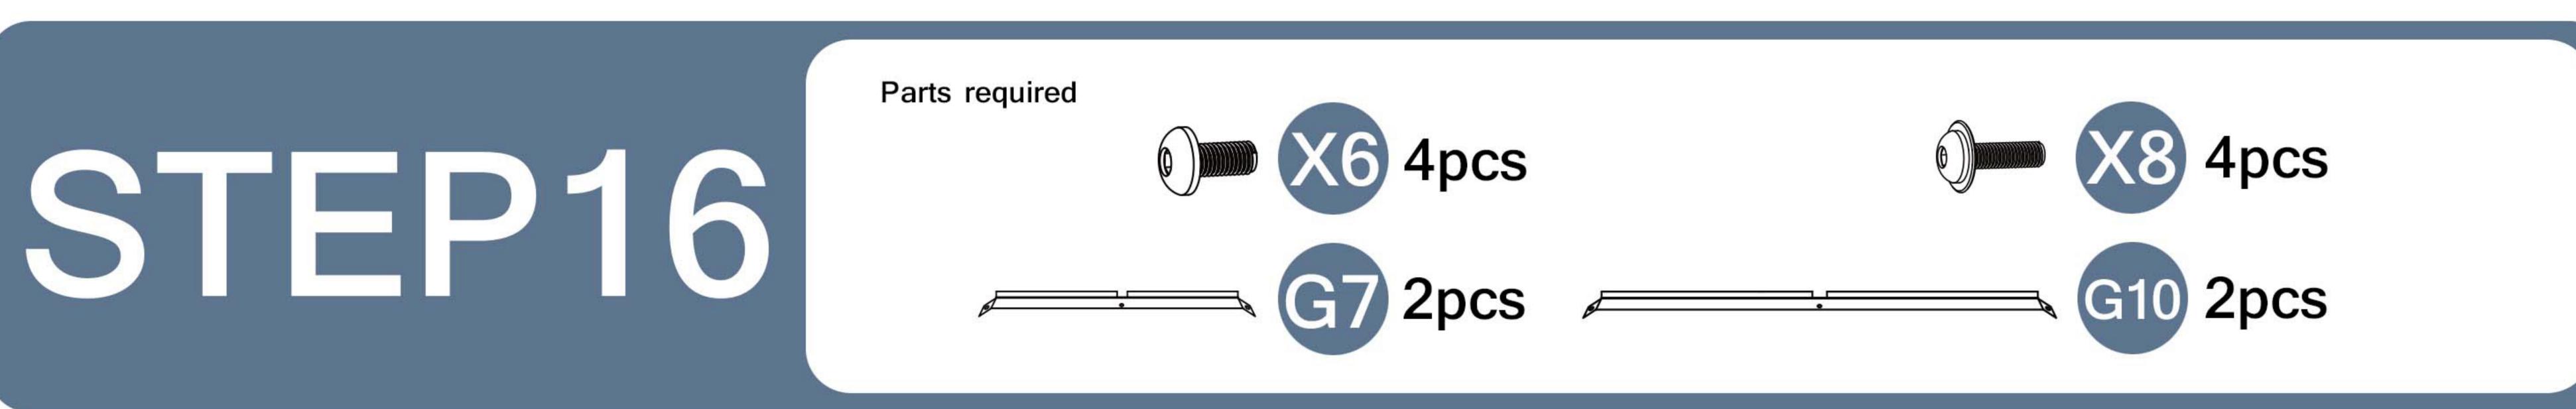


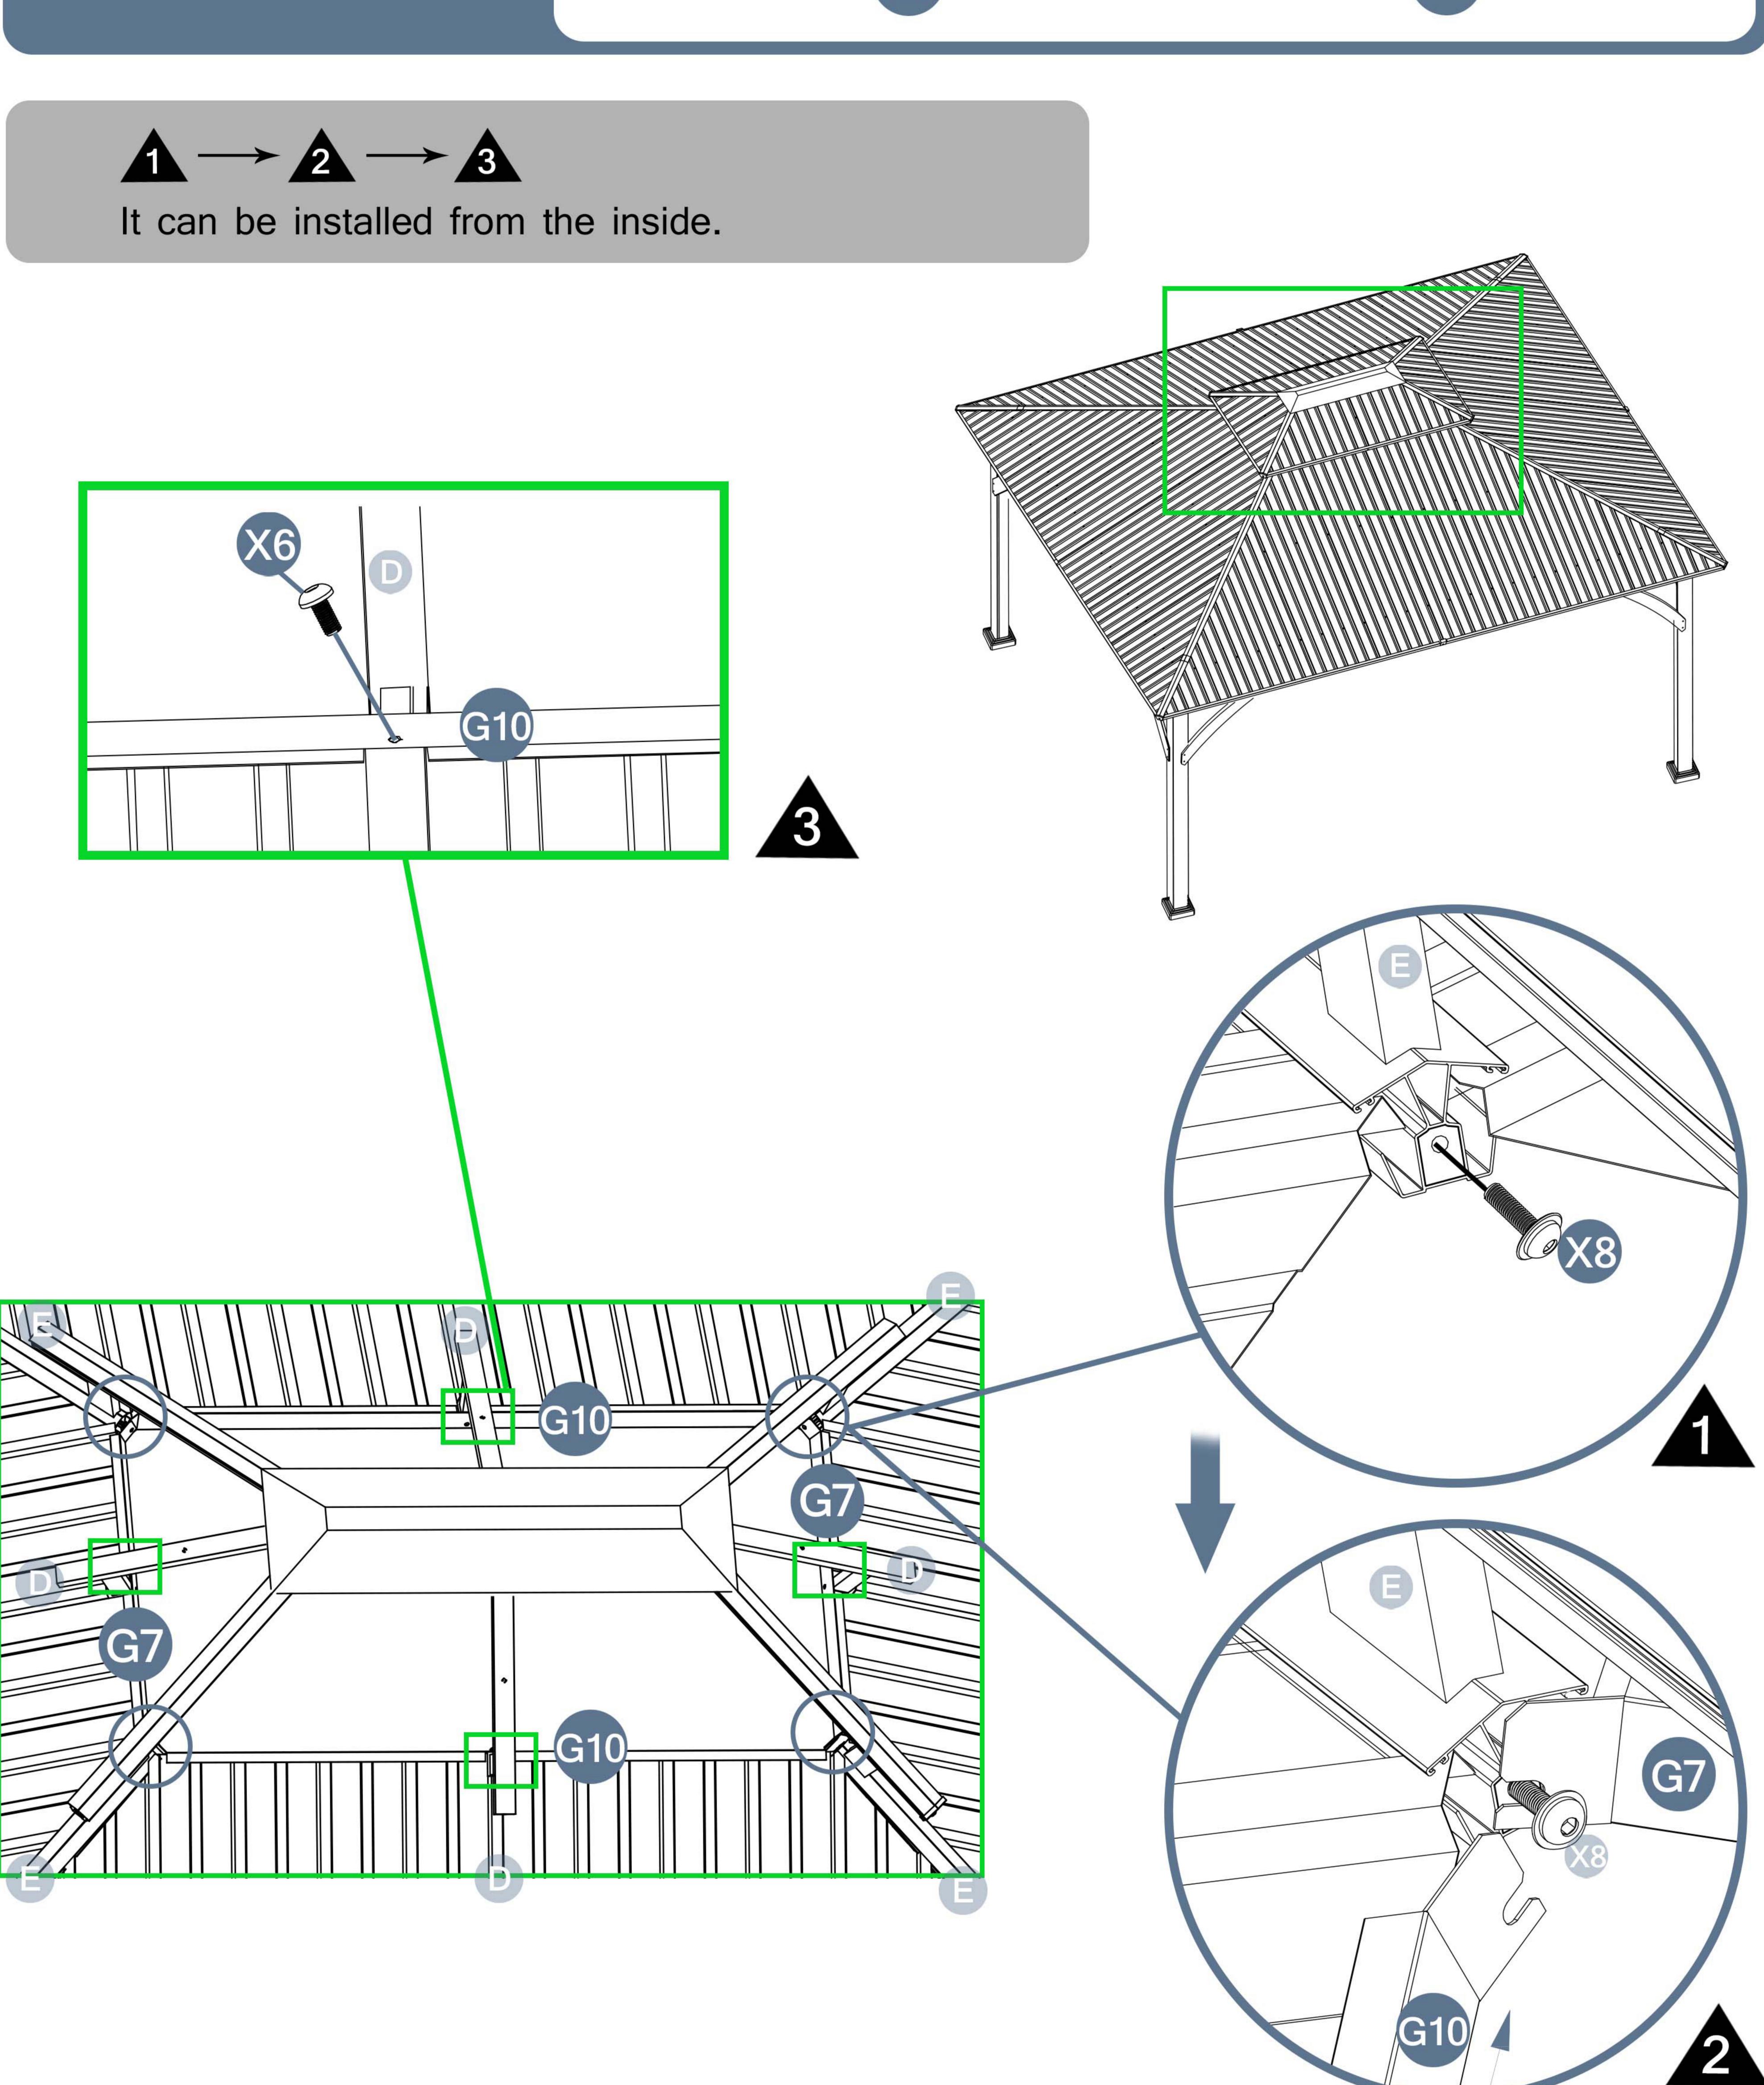

Parts required


## STEP17

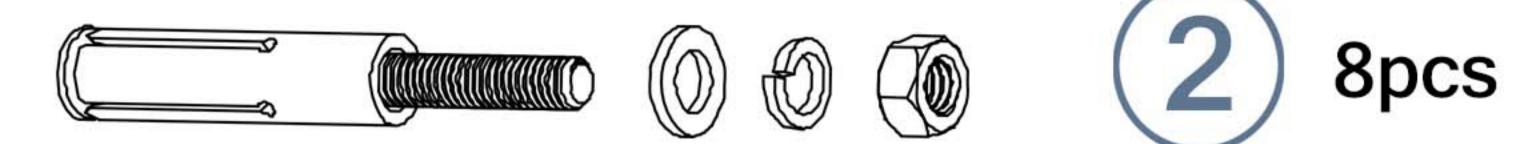

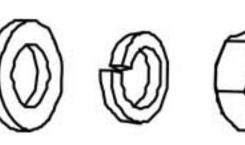




To improve stability of gazebo, expansion screws very necessary. Expansion screws use for cement surfaces and have included in the package.

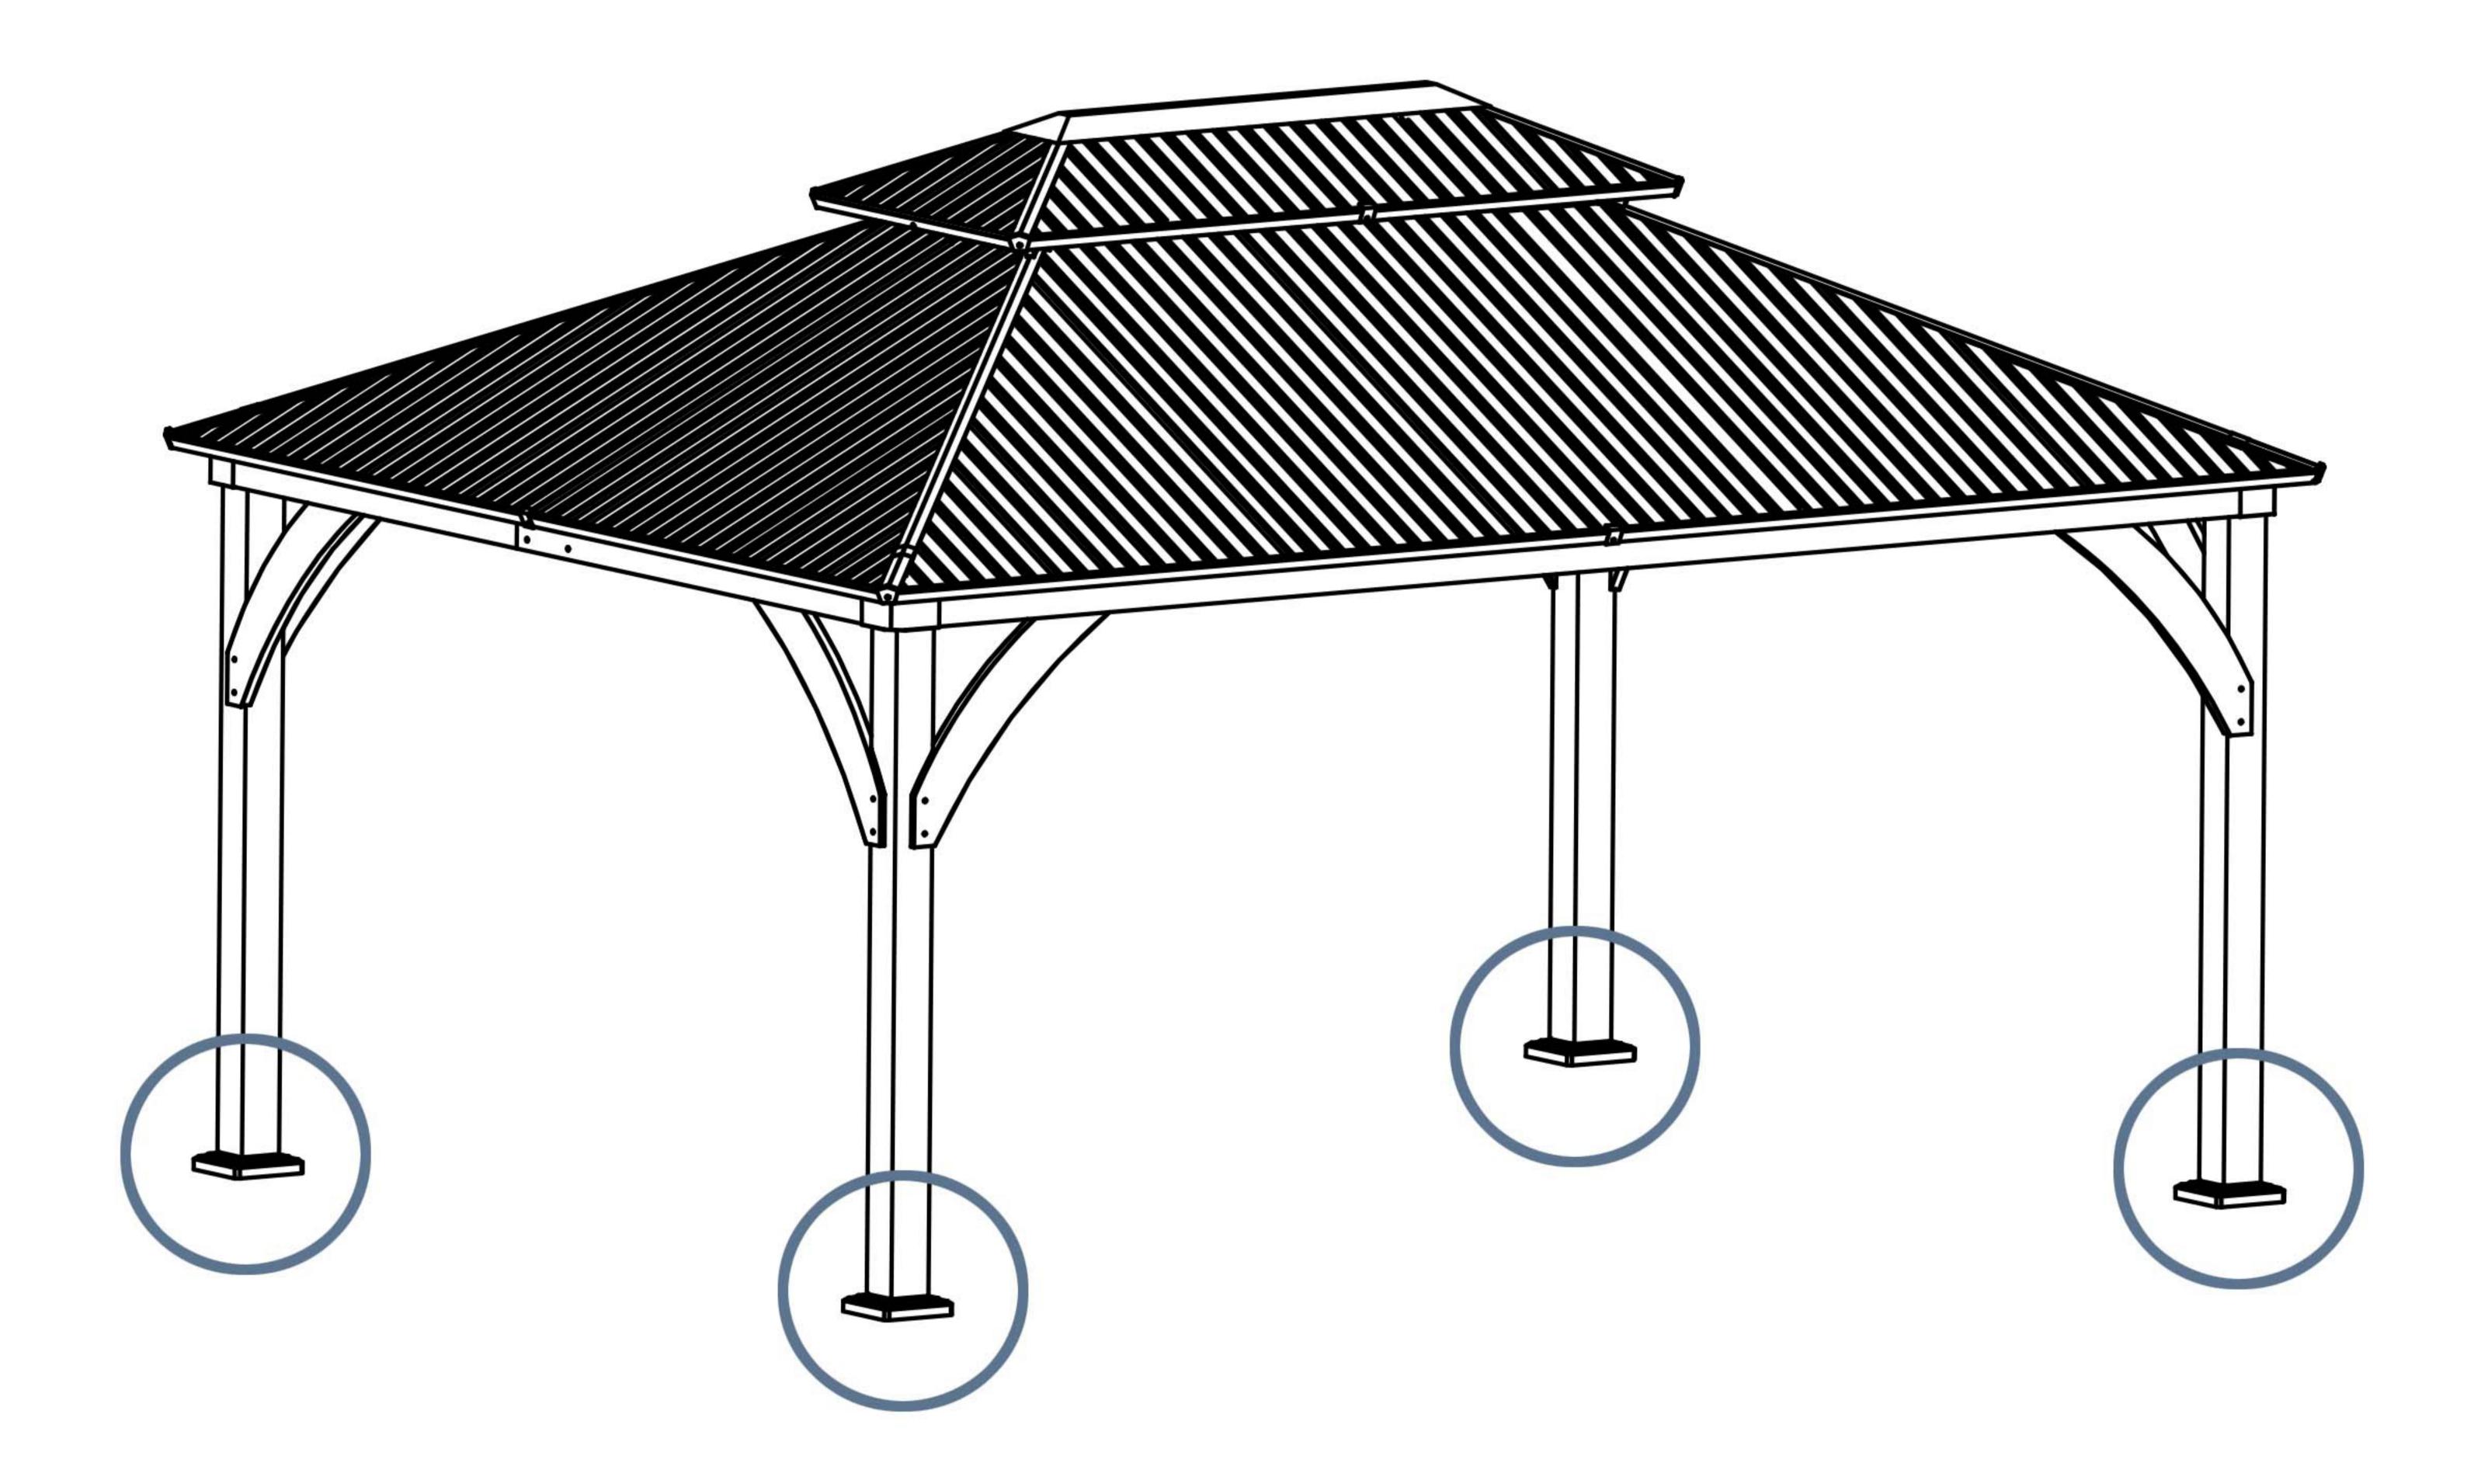

For safety's stake, please check and make sure that all screws are tightened after all installation is complete.

Installation Completed

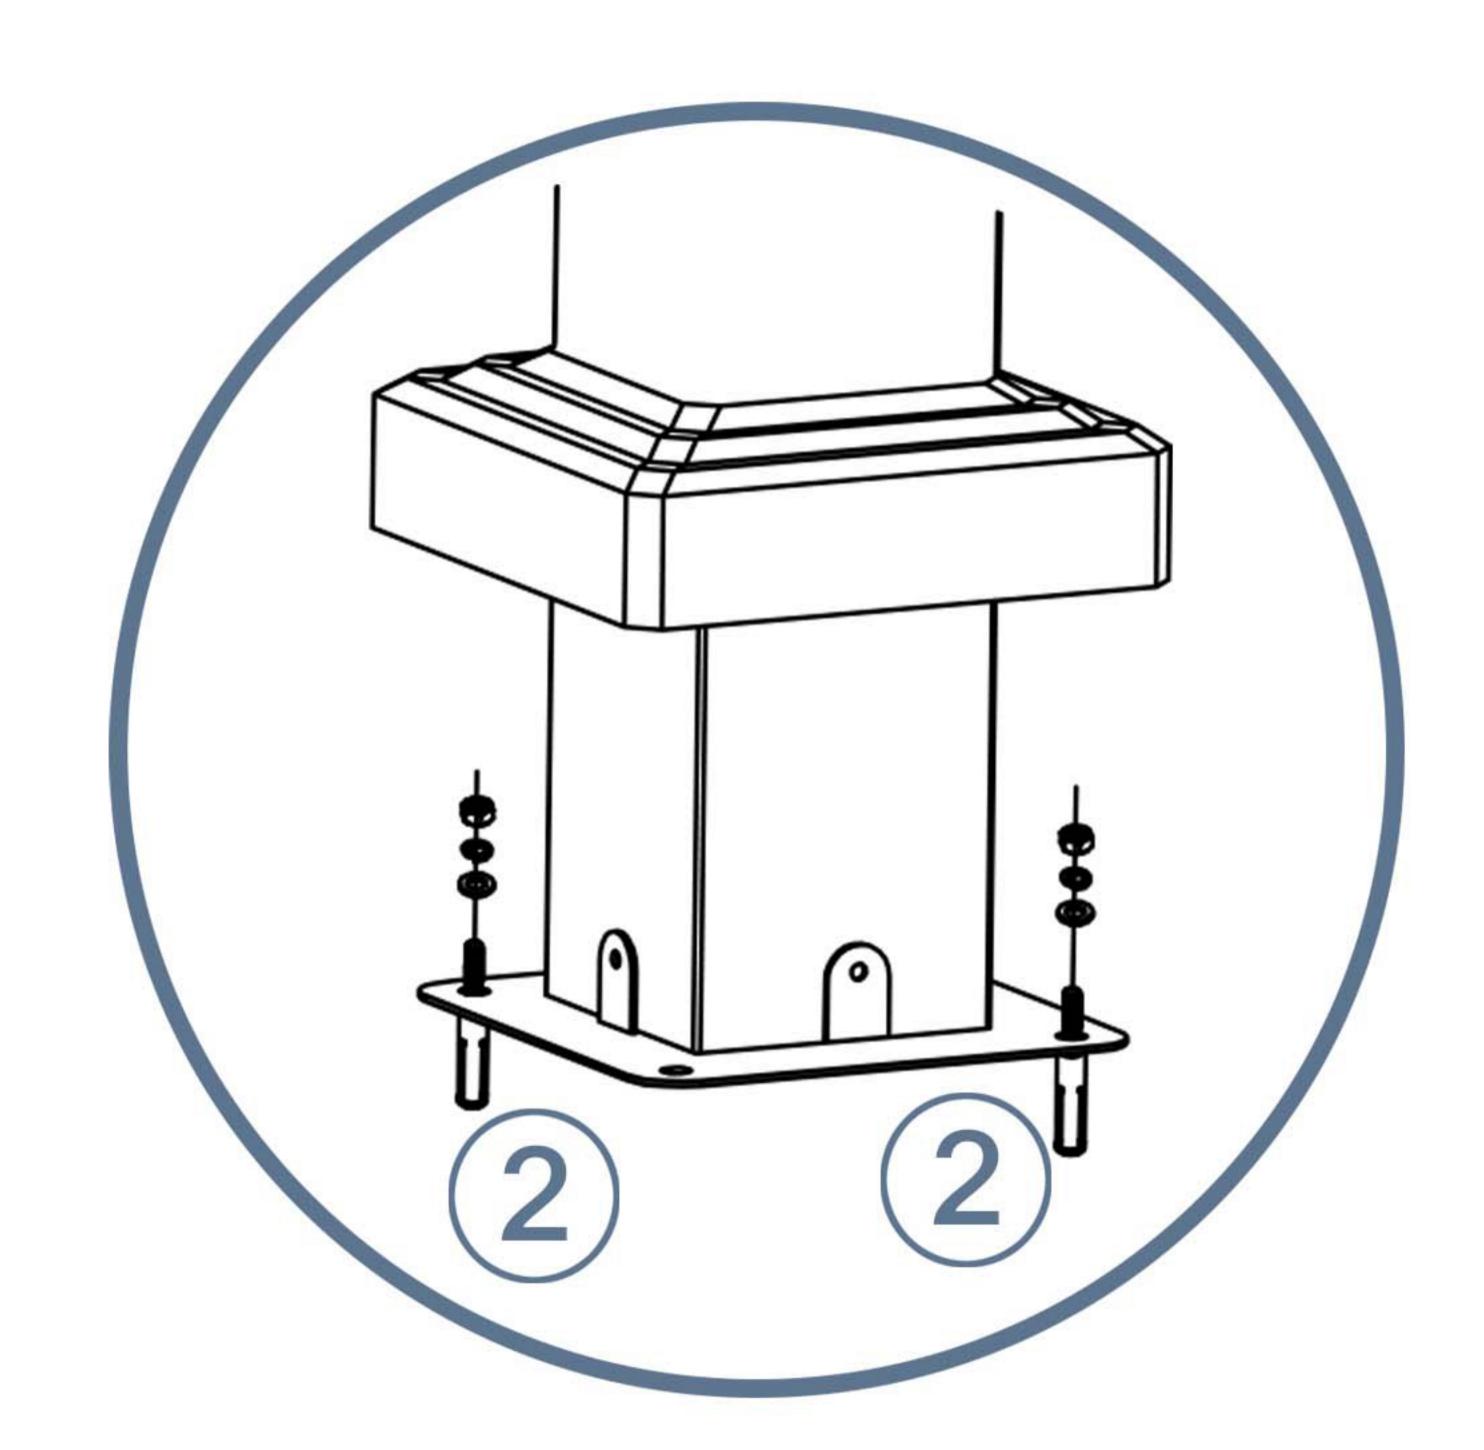


# Hope you enjoy this product.

If you have any concerns about gazebo Installation, please feel free to contact us. We will reply within 24 hours.



E-mail: cs.helper01@gmail.com

### 11X13FT

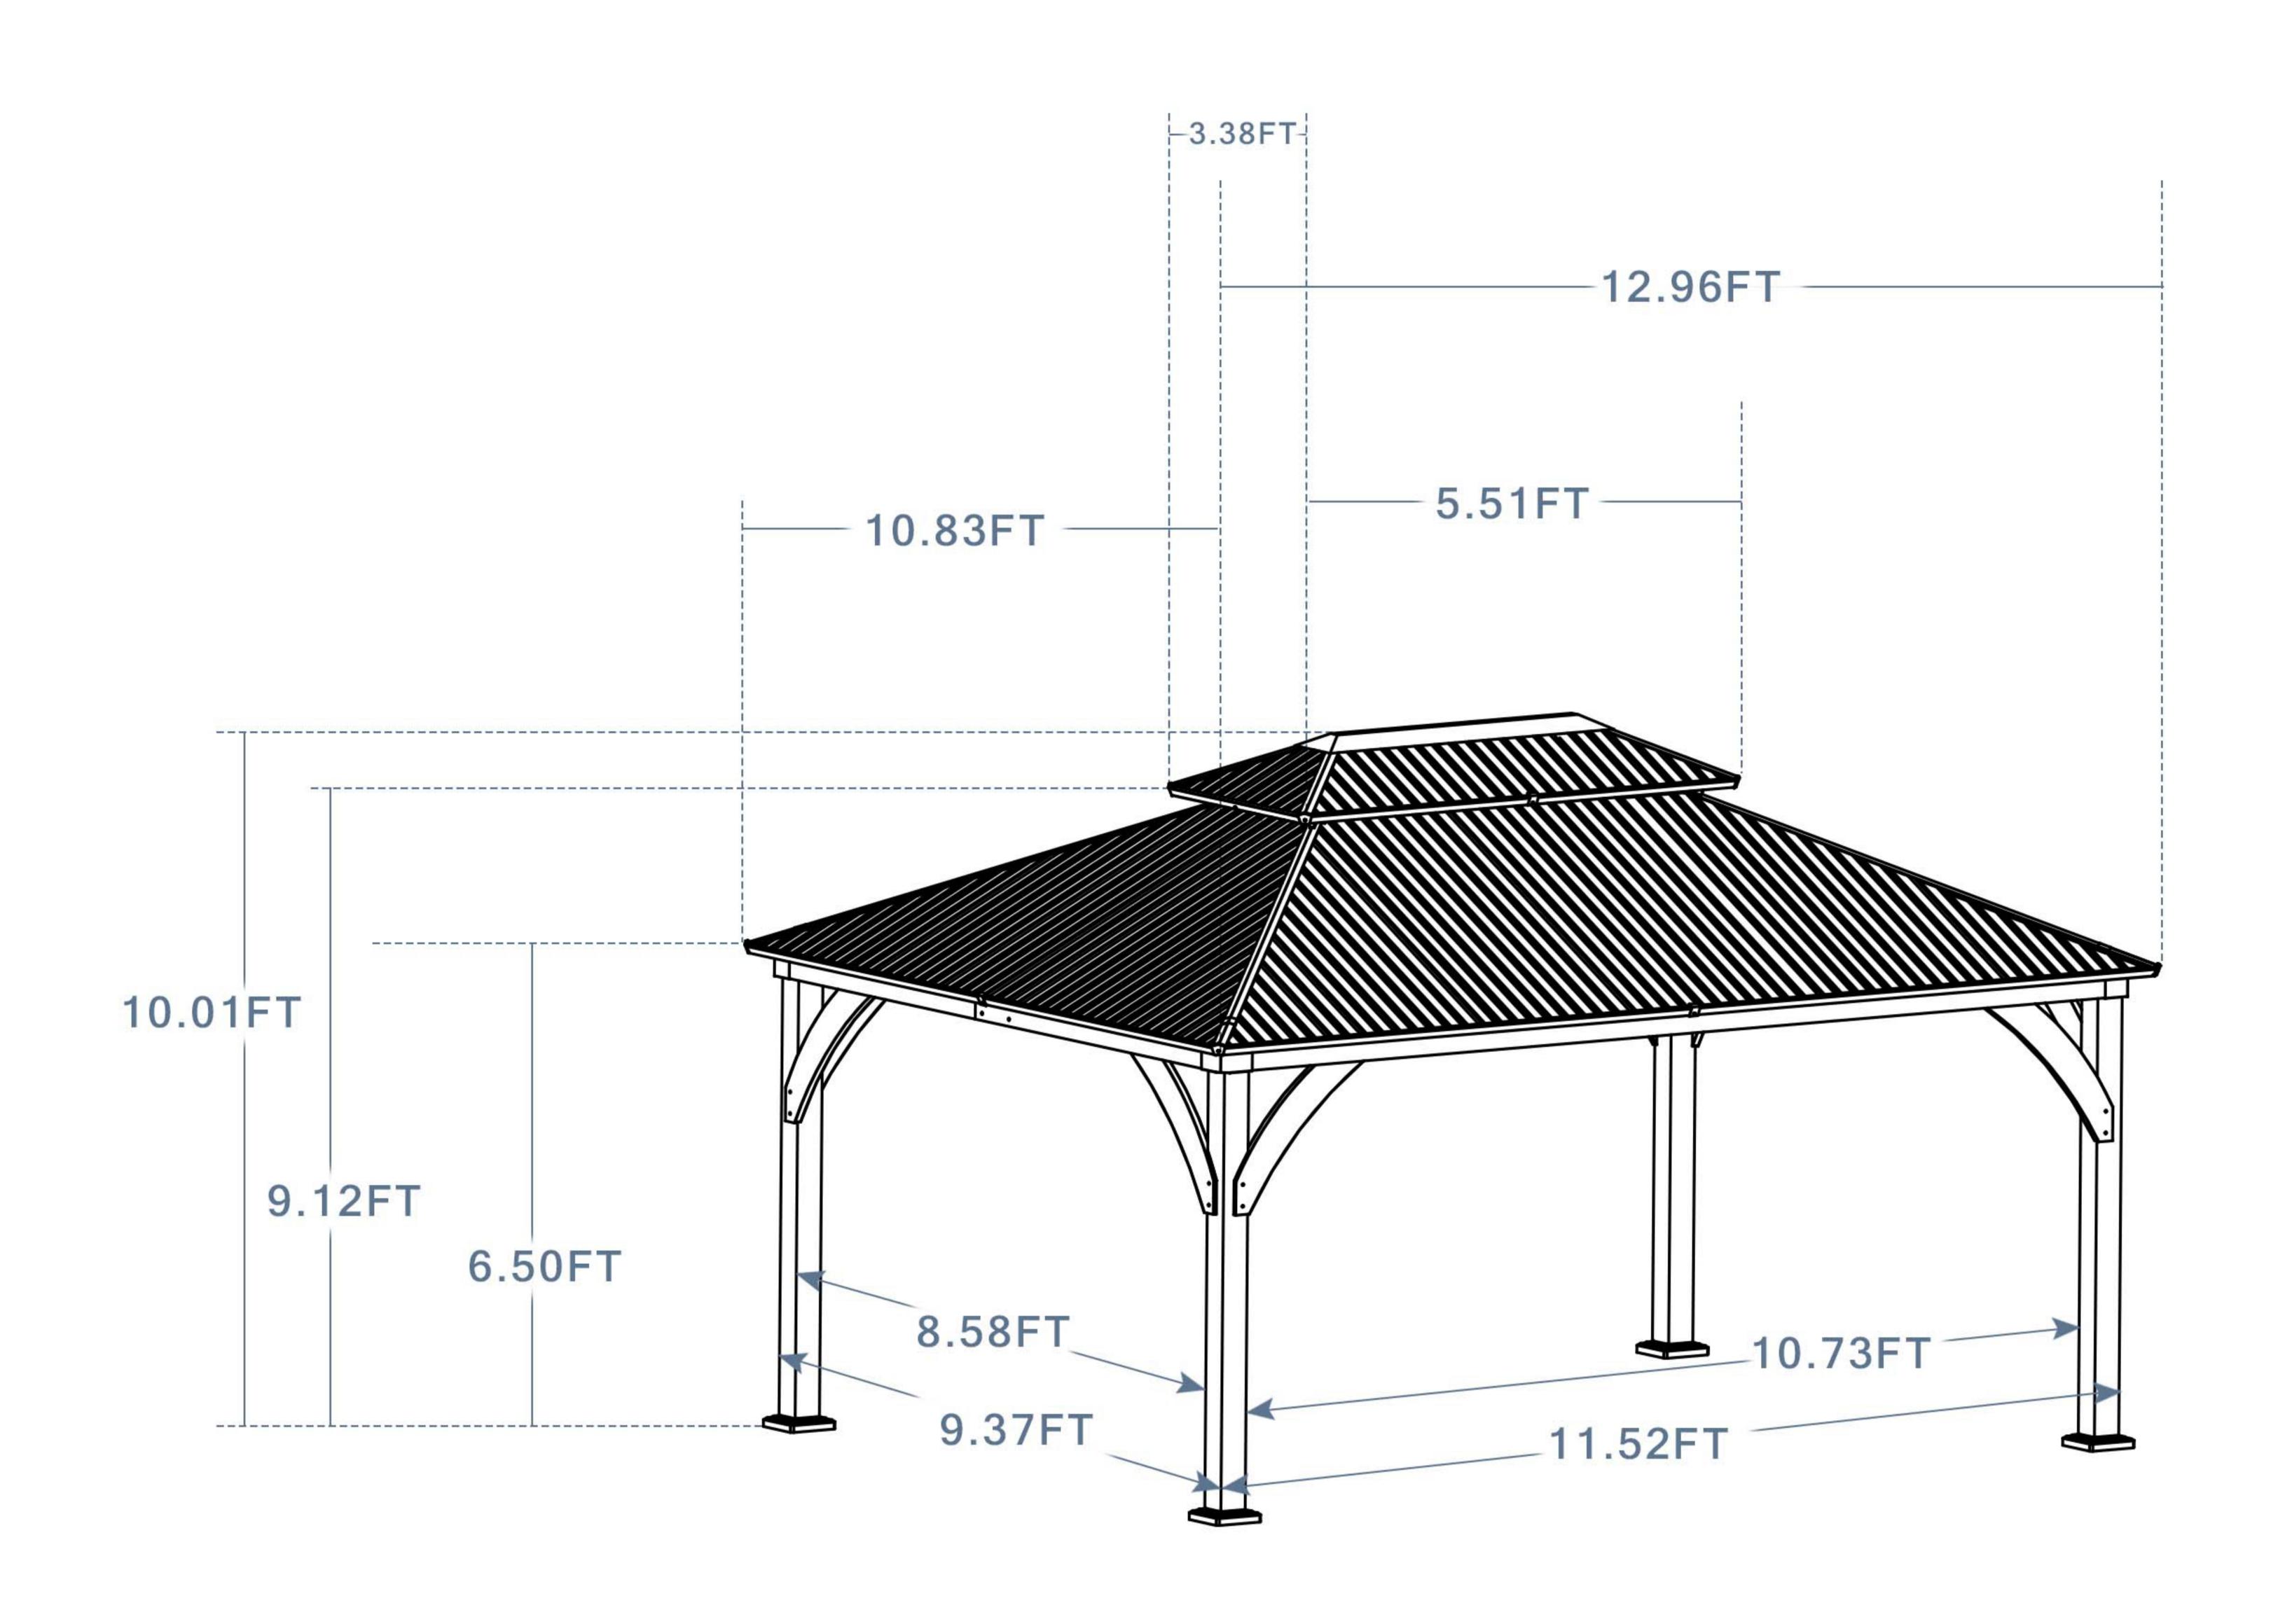

SKU:C001G047WF-1 C001G047WF-2 C001G047WF-3 C001G047WF-4