

12 x 14 FT


WQOT290TN

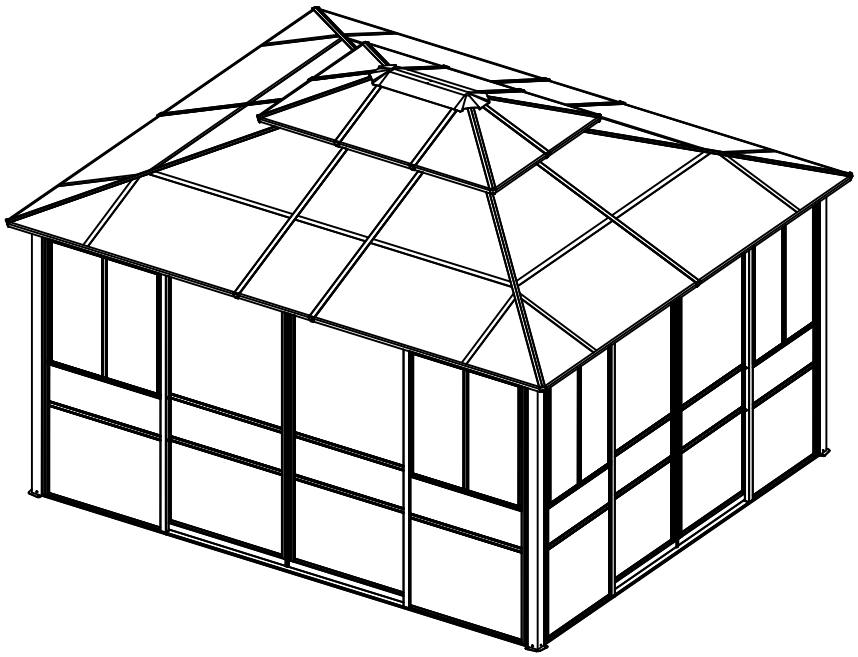



Note: The gazebo requires five people for assembly.
The following tools are required for assembly but are not included.

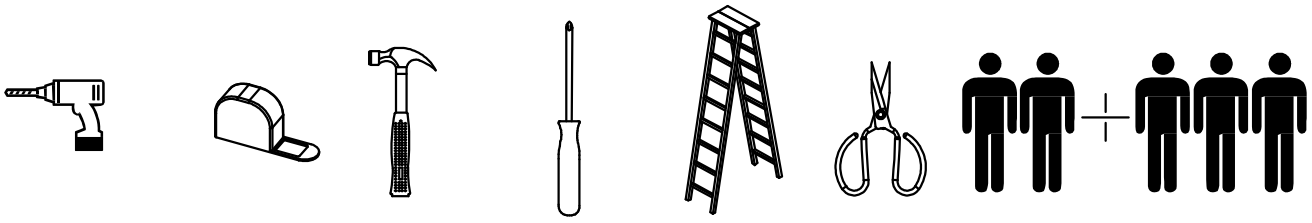

Pistol Drill Tape Measure Hammer Screwdriver Ladder Scissor 5 People

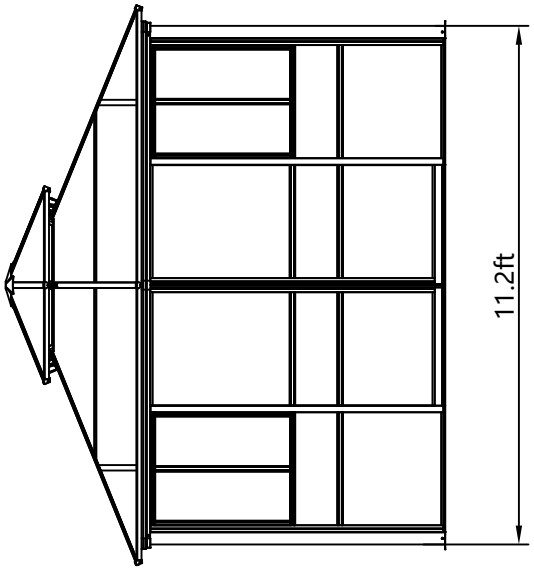
11.2ft

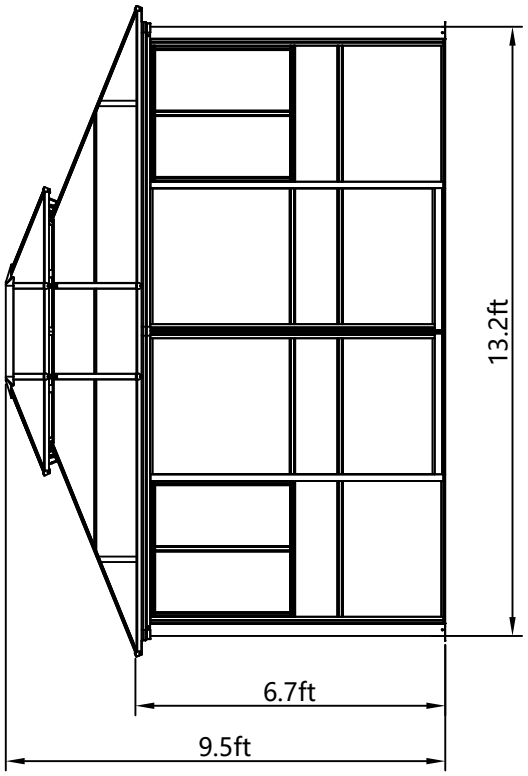
13.2ft
6.7ft
9.5ft

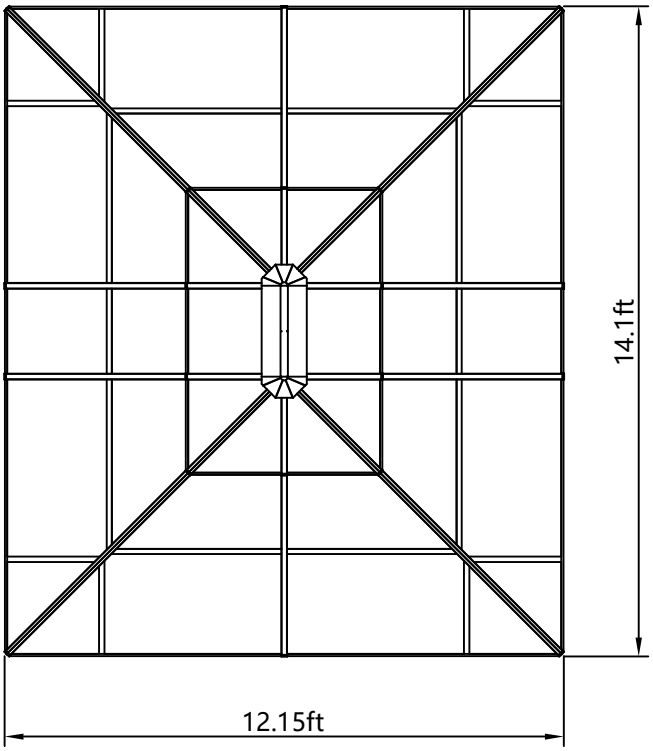
14.1ft
12.15ft

Box A	
Part #	Qty
B	4
E2	4
G	2
G5	4
G6	4
G7	4
G8	4
H	4
H5	4
H6	4
H7	4
H8	4
I2	2
I3	2
I4	2
I5	2
M1A	4
M2A	4
M1F	4

Box B	
Part #	Qty
C2	2
C3	2
F2	2
F3	6
M1E	16
L3	1
M3	1
5-1	2
Bags for screws: 1-26	1

Box C	
Part #	Qty
D2	2
D3	2
F2	4
M1G	8
M5G	16
M7G	16
M4L	8
M6L	8
J1	4
K	4
R	10
P	4
Q	4
T	4
MQ2	24
X	6

N	12
N1	12
U1	4
U2	4
U3	4
U4	4
MD1	32
MD2	64
MD3	16
MD4	16
MD5	16
3-1	16
4-1	16
23	1
Instructions	1
12x14 AB AB AC AC BA BA CA CA AD AD AE AE DA DA EA EA AF AF AF AF AG AG AG AG	1

Box D	
Part #	Qty
M1B	4
M2B	4
M1C	4
M2C	4
M4V	2
M6V	2
M4N	2
M6N	2


Box E	
Part #	Qty
Z2	2
Z3	2
Z4	2
M5B	4
M6B	4
M1D	4
M2D	4
M4H	4
M6H	4
M4K	4
M6K	4
M4M	4
M6M	4
M4P	4
M6P	4
E3	4


Box F	
Part #	Qty
W3	2
W4	4
W5	4
V7	4
V8	4
V9	4
V10	4


Box G	
Part #	Qty
1R-1	24
1R-2	8
MS1	8
MS2	8
MS3	4
MS4	4
MS20	4
MS9	4
MS11	4
V11	4
V12	4

Box H	
Part #	Qty
MS10	8
MS12	4
MS22	4
M1S	4
M3S	4
V6	4


Remove the plastic packing blocks from both ends of profiles M1E, M1G, M5G, M7G, M4L, M6L, M4H,and M6H.

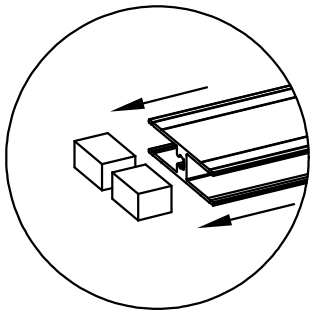

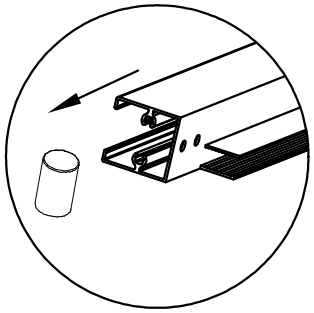




B 4x




C2 2x



C3 2x



D2 2x



D3 2x



E2 4x



E3 4x



F2 6x




F3 6x




G 2x




G5 4x



G6 4x



G7 4x



G8 4x



H 4x



H5 4x




H6 4x



H7 4x



H8 4x




I2 2x




I3 2x




I4 2x




I5 2x



Z2 2x



Z3 2x




Z4 2x




M1A 4x




M2A 4x

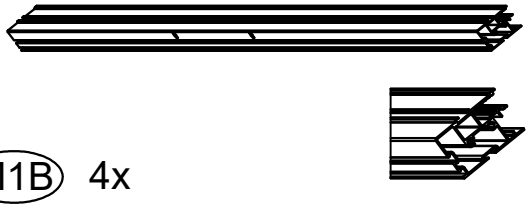


M1B 4x

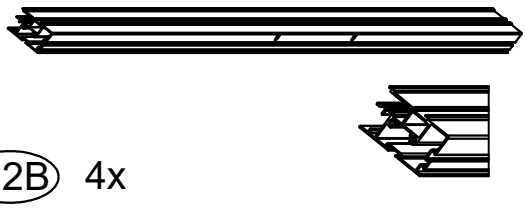


M2B 4x

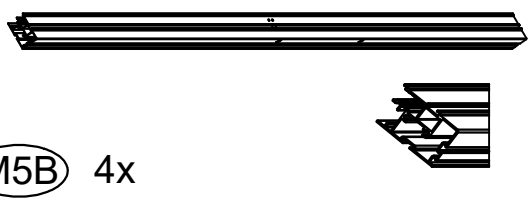

M5B 4x

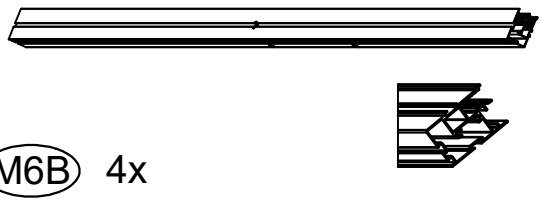


M6B 4x

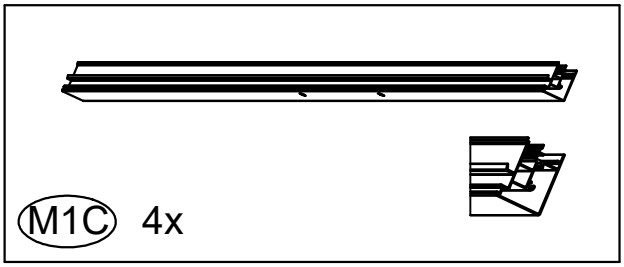


M1C 4x




M2C 4x

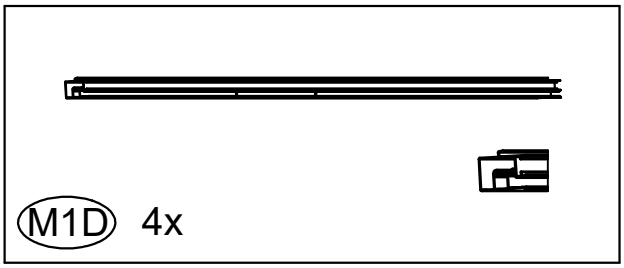


M1D 4x

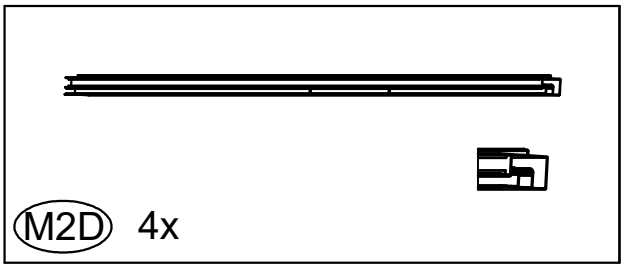


M2D 4x

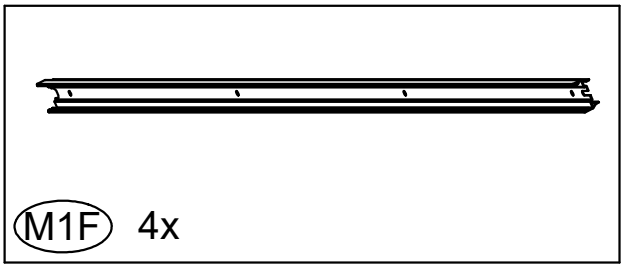


M1F 4x

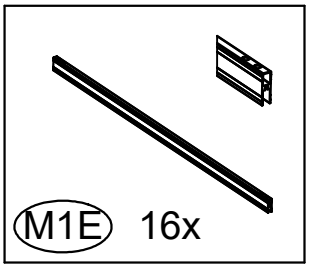


M1E 16x

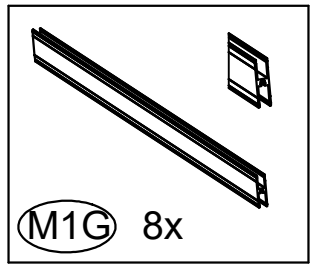


M1G 8x

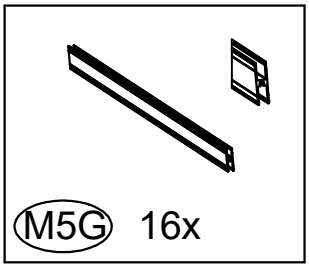


M5G 16x

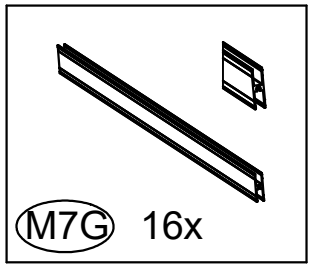


M7G 16x

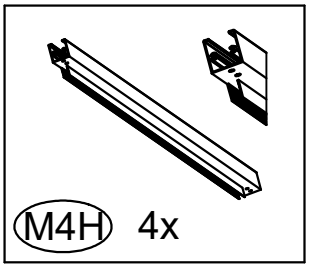


M4H 4x

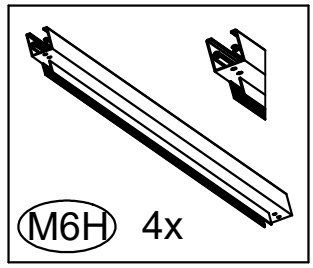


M6H 4x

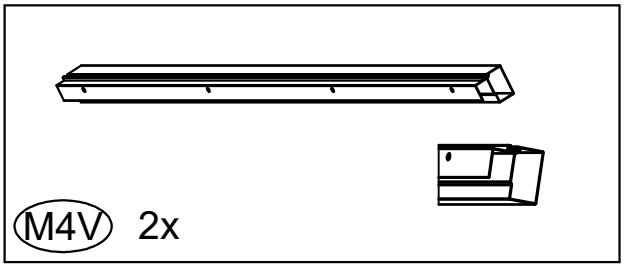


M4V 2x

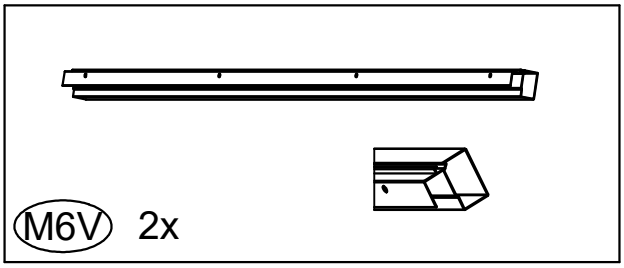


M6V 2x

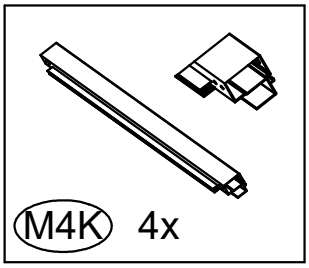


M4K 4x

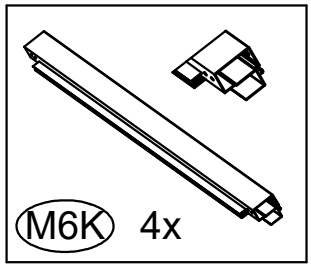


M6K 4x

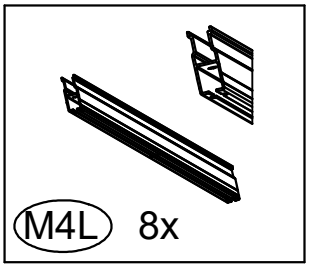


M4L 8x

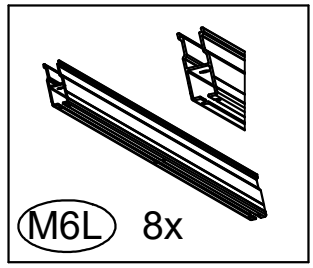


M6L 8x

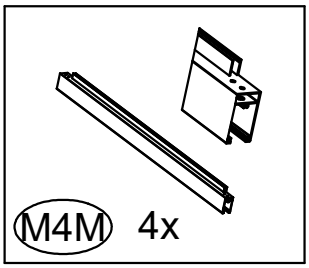


M4M 4x

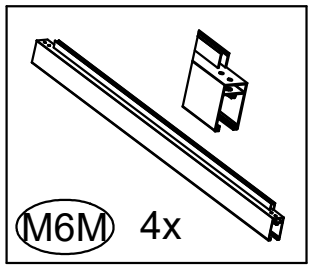


M6M 4x

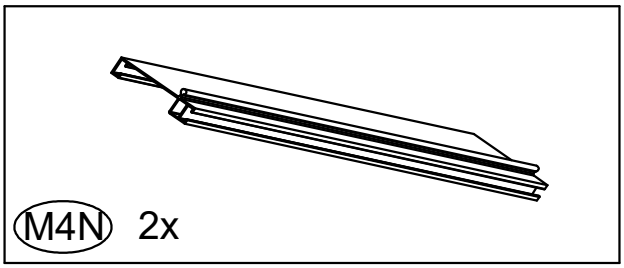


M4N 2x

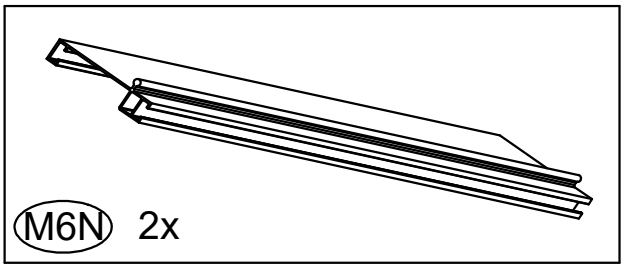


M6N 2x

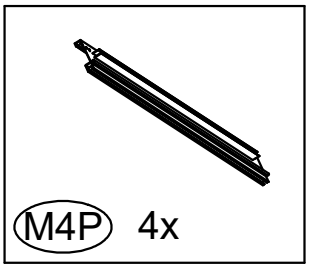


M4P 4x

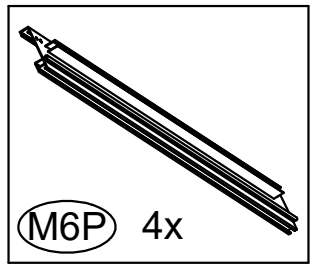


M6P 4x

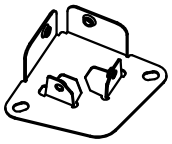


J1 4x




K 4x



L3 1x




M3 1x

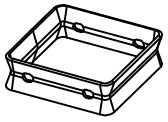

R 10x




P 4x




Q 4x




T 4x



MQ2 24x




X 6x



N 12x




N1 12x




U1 4x




U2 4x



U3 4x




U4 4x




MD1 32x



MD2 64x




MD3 16x



MD4 16x




MD5 16x



6.2*11*15


3-1 16x

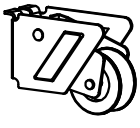


4-1 16x




5-1 2x

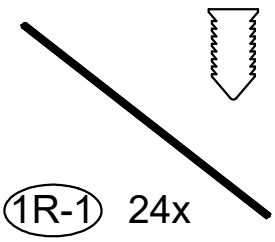


1R-1 24x

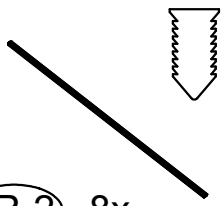


1R-2 8x




MS1 8x




MS2 8x

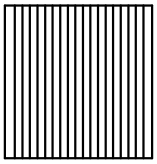


MS3 4x

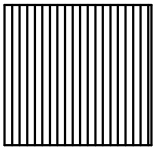


MS4 4x

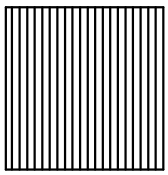


MS20 4x




MS9 8x




MS10 8x

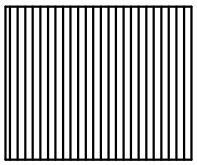


MS11 4x

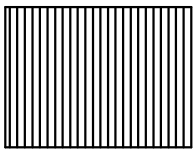


MS12 4x

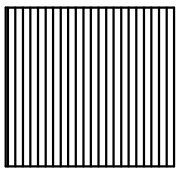


MS22 4x

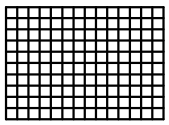


M1S 4x

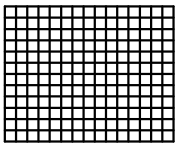


M3S 4x

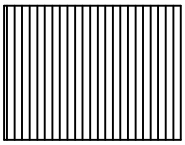


W3 2x

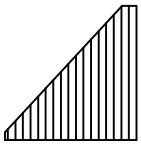


W4 4x

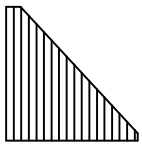


W5 4x

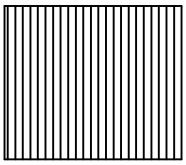


V6 4x

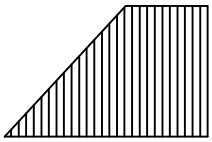


V7 4x

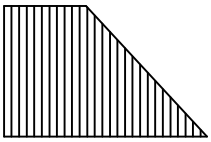


V8 4x




V9 4x



V10 4x



V11 4x



V12 4x

Bags of Screws



M6x15

① 218x



② 16x



ST4.8x12

③ 40x




M5x12

④ 52x



⑤ 2x




⑥ 1x



M6x10

⑦ 10x




M6

⑧ 26x




M4x20

⑨ 160x




M4x35

⑩ 64x



M4x50

⑪ 64x



⑫ 24x



M5x6

⑬ 96x



M5

⑭ 48x



M5x12

⑮ 48x



⑳ 8x




M5x15

㉑ 16x




M4x12

㉒ 4x

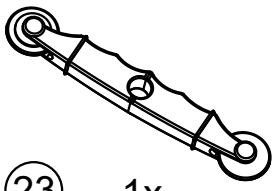

㉓ 1x

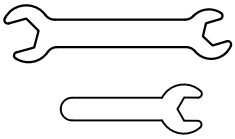

㉔ 1x



4mm

㉕ 2x



2.5mm

㉖ 2x

12x14							
AB	AB	AC	AC	BA	BA	CA	CA
AD	AD	AE	AE	DA	DA	EA	EA
AF	AF	AF	AF	AG	AG	AG	AG


letter sticker 1x

<1>

x4



B 4x

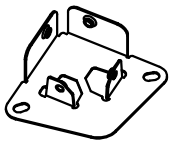


J1 4x




M6x15

1 8x

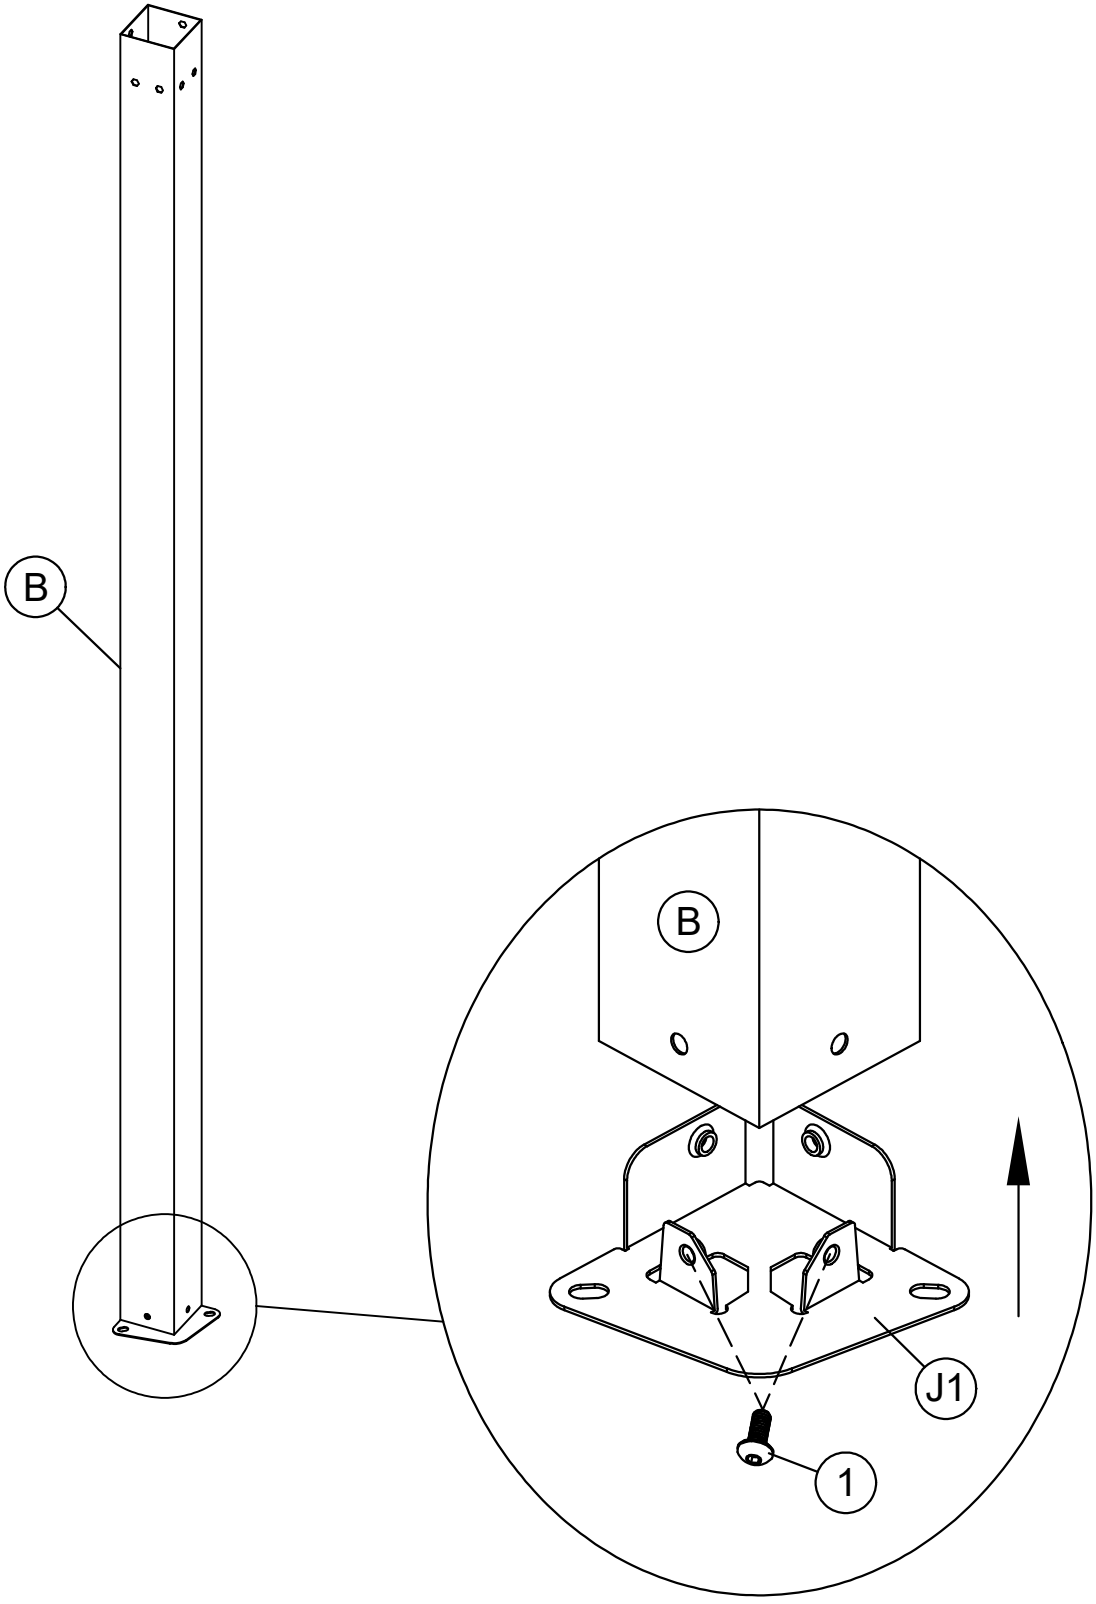





C2 2x

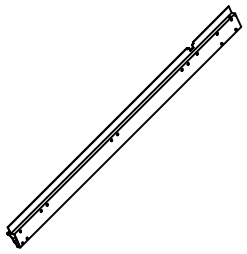


C3 2x

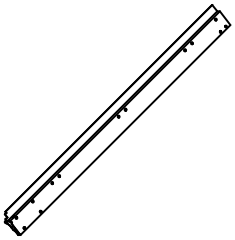

D2 2x

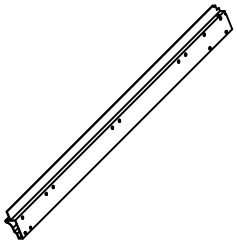

D3 2x



K 4x




M6x15


1 34x

12

x2

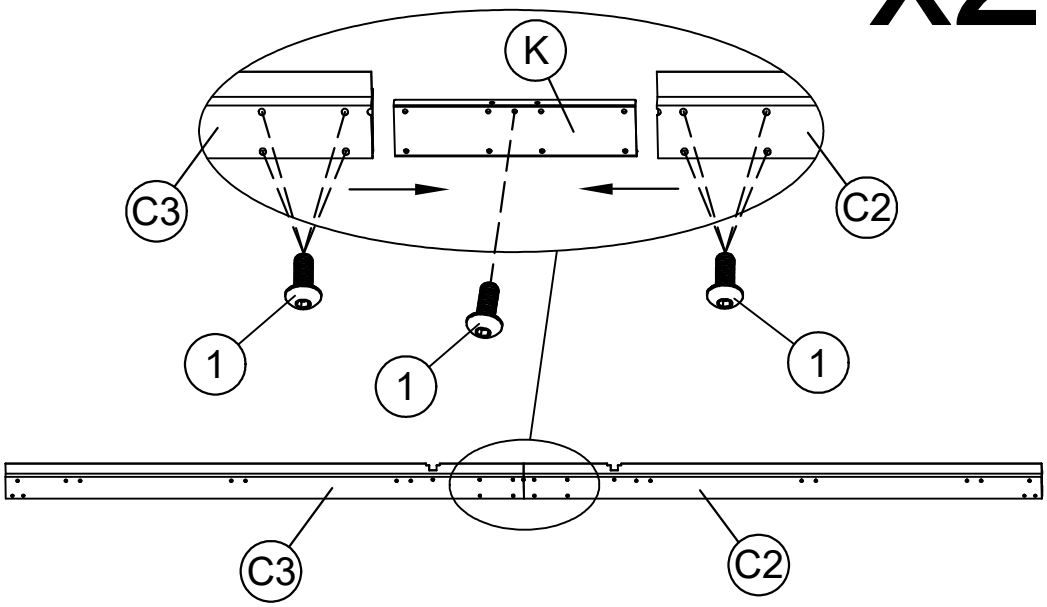

x2

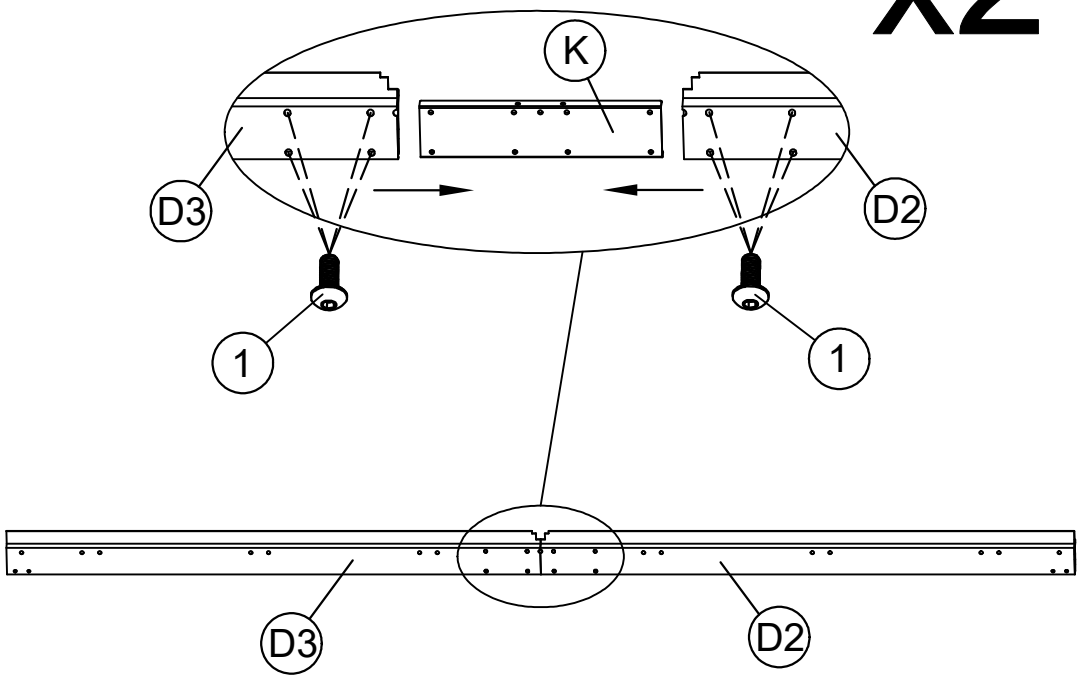

<3>





2 16x




M6x15

1 8x

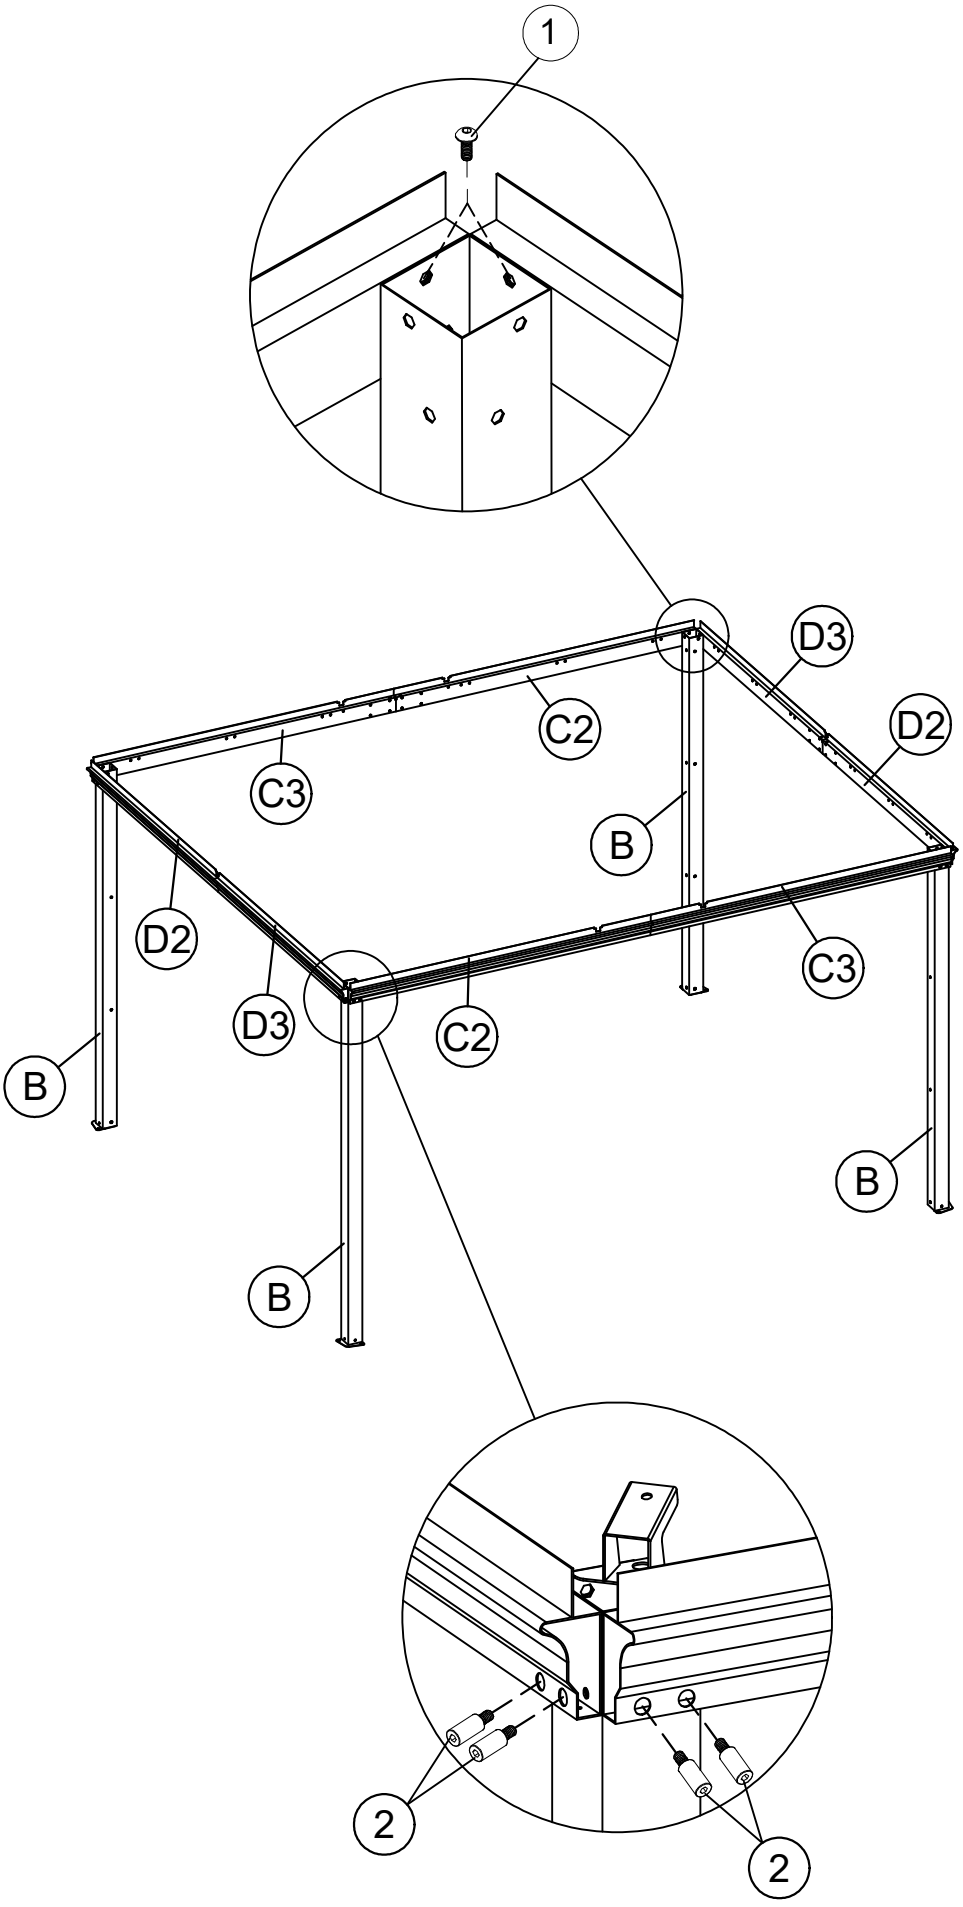



T 4x



Q 4x



P 4x




M6x15


1 12x



ST4.8x12

3 24x

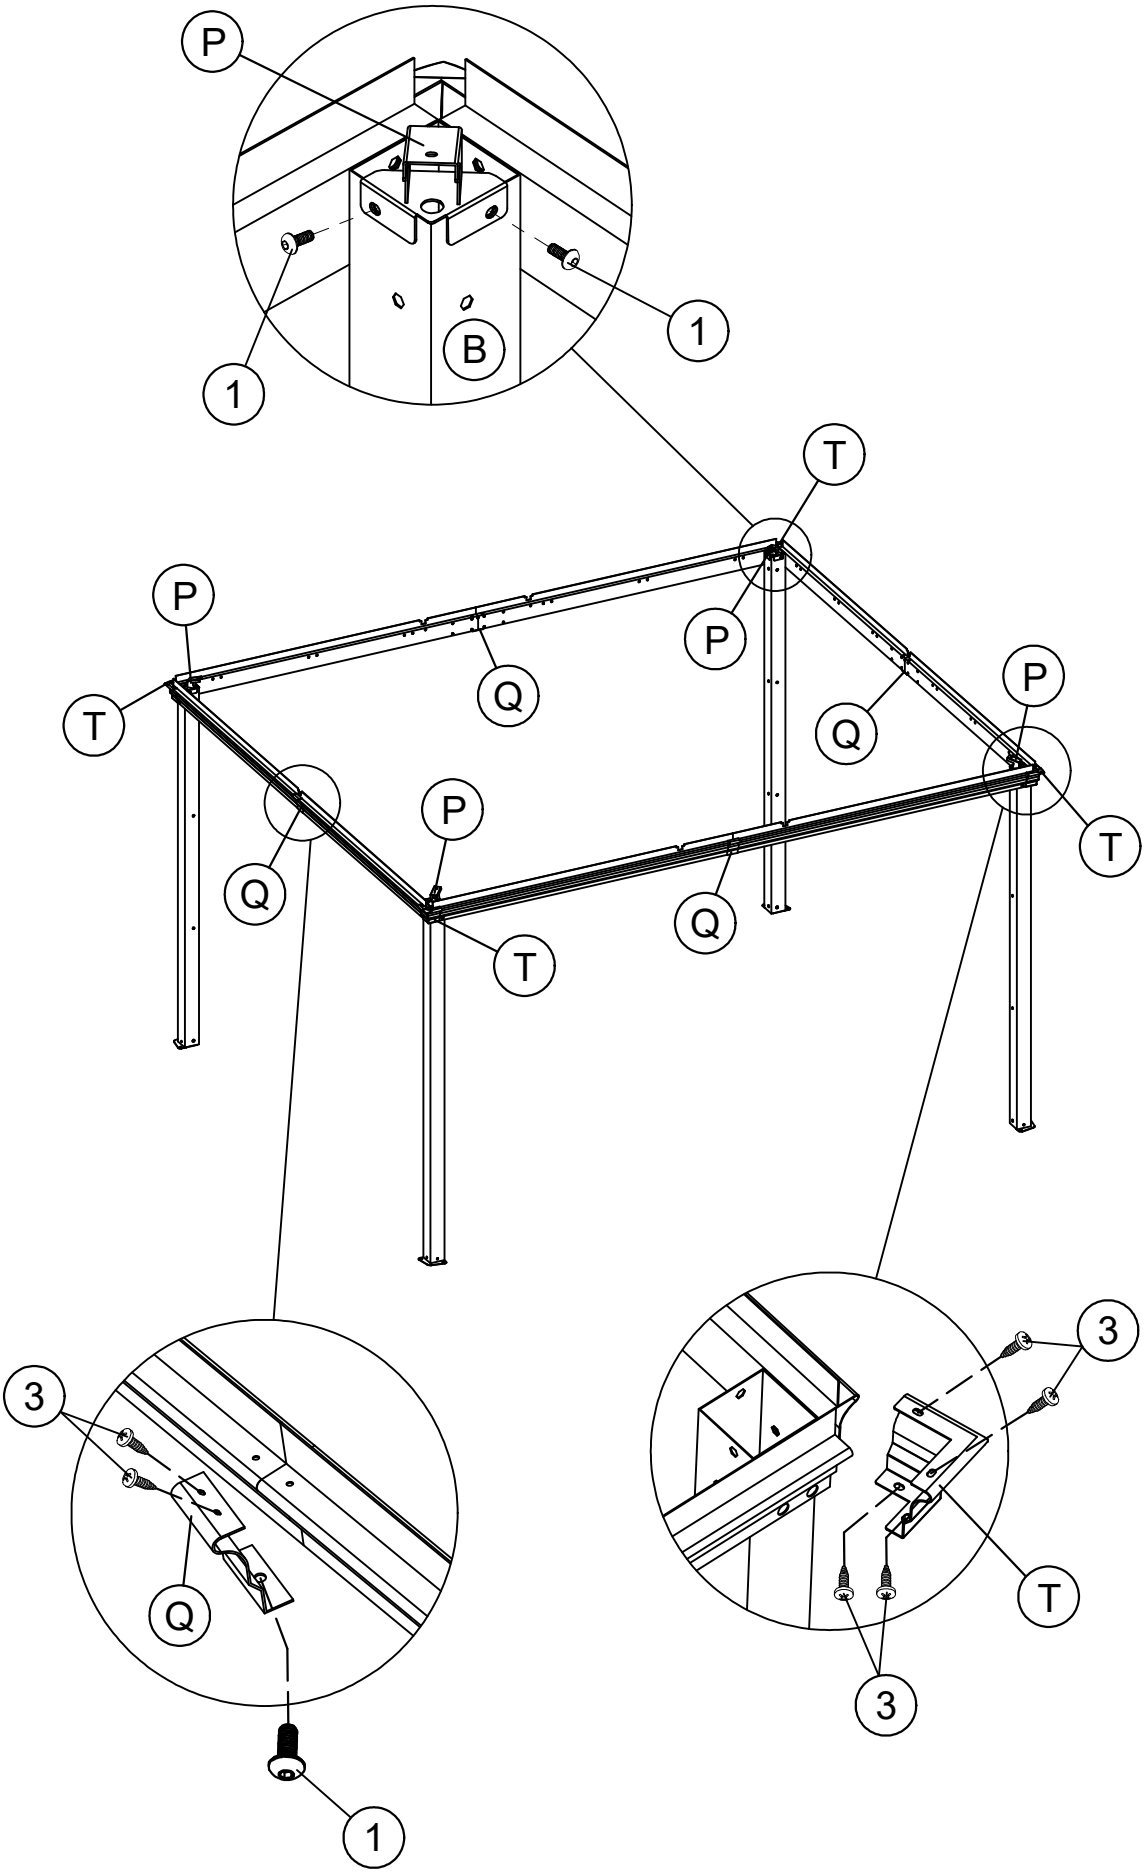

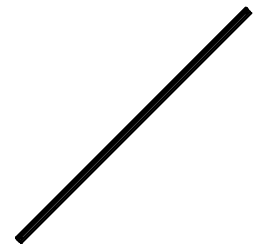

E2 4x




E3 4x



F2 6x



F3 6x

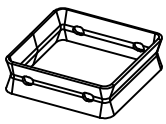

L 10x




X 6x





M5x12

4 52x


15

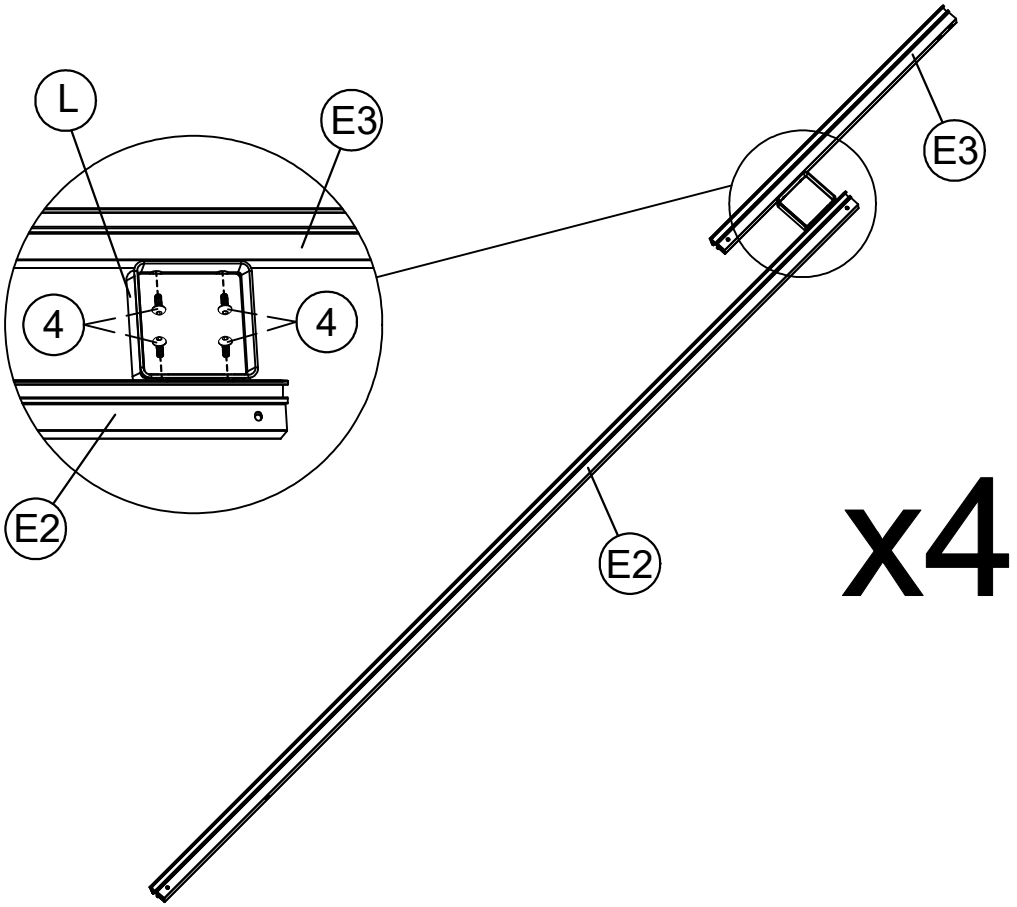

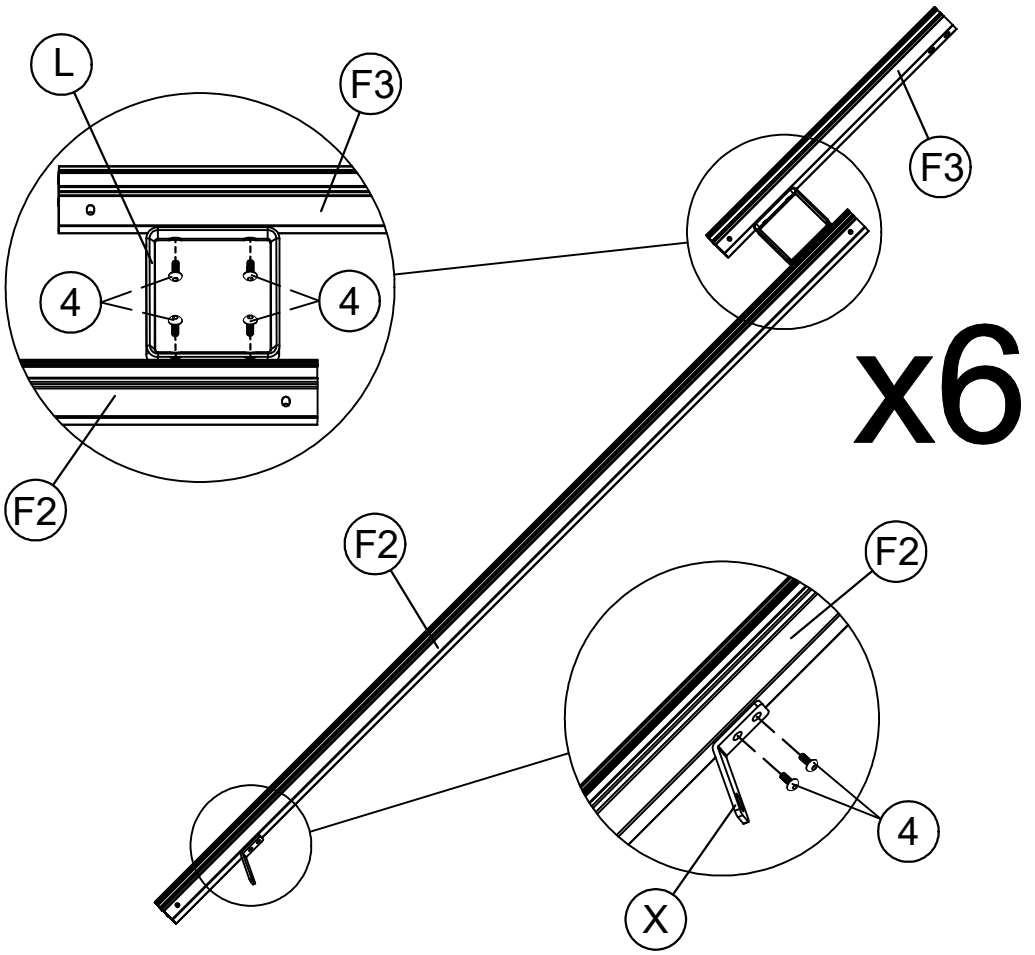

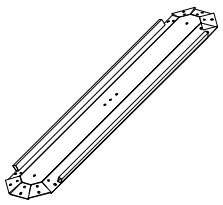

L3 1x




6 1x





M6x15

1 8x

<6>

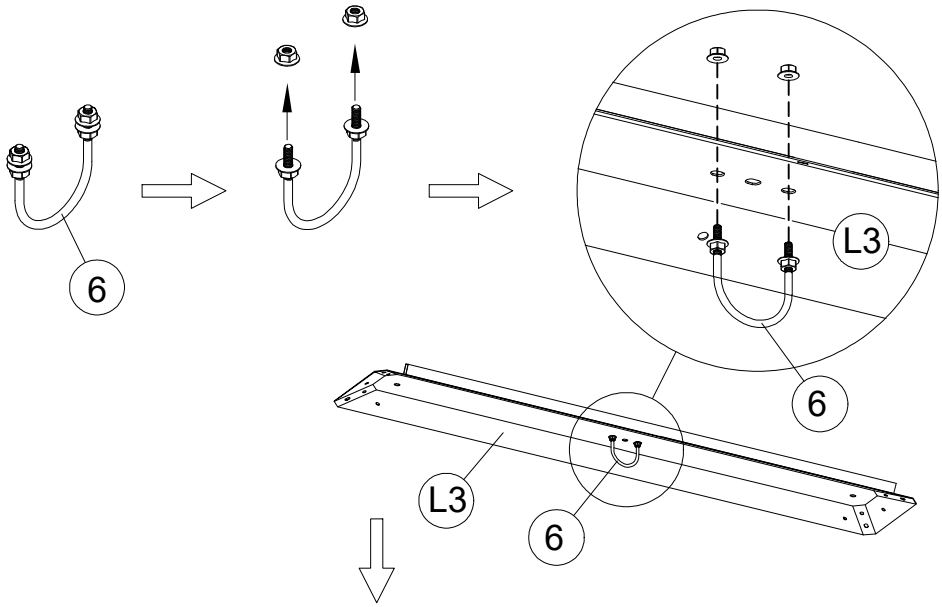

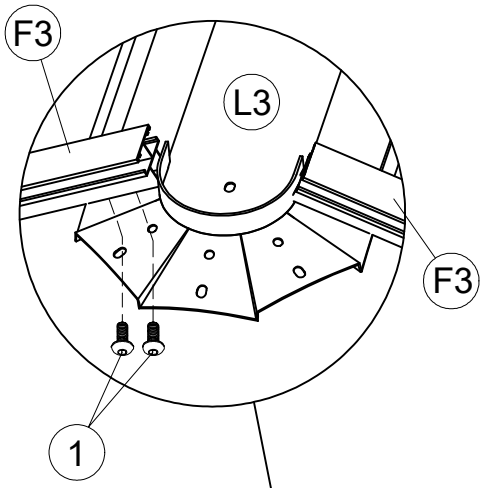

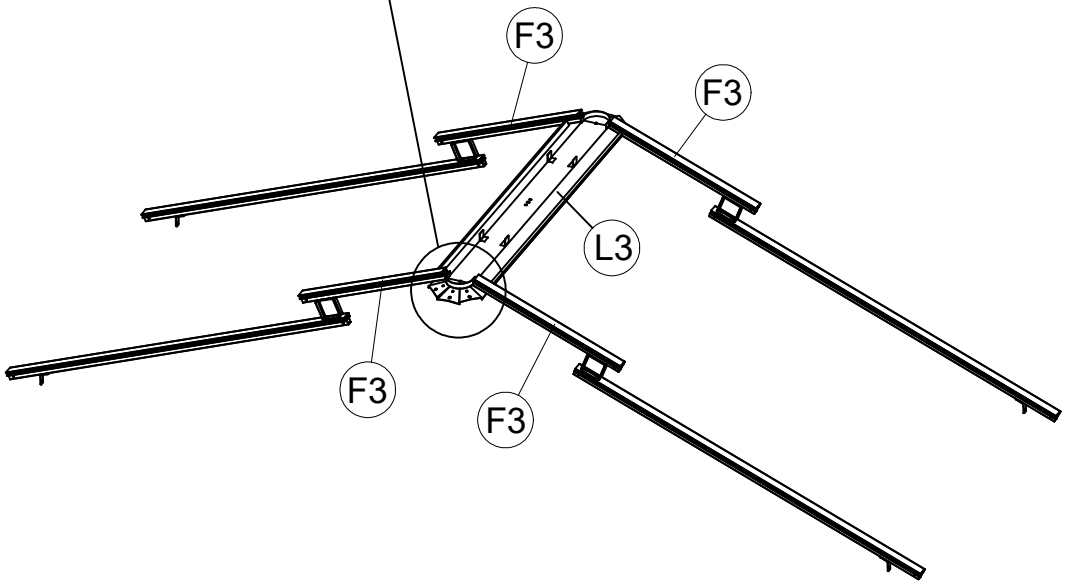


<7>



M6x15

(1) 4x

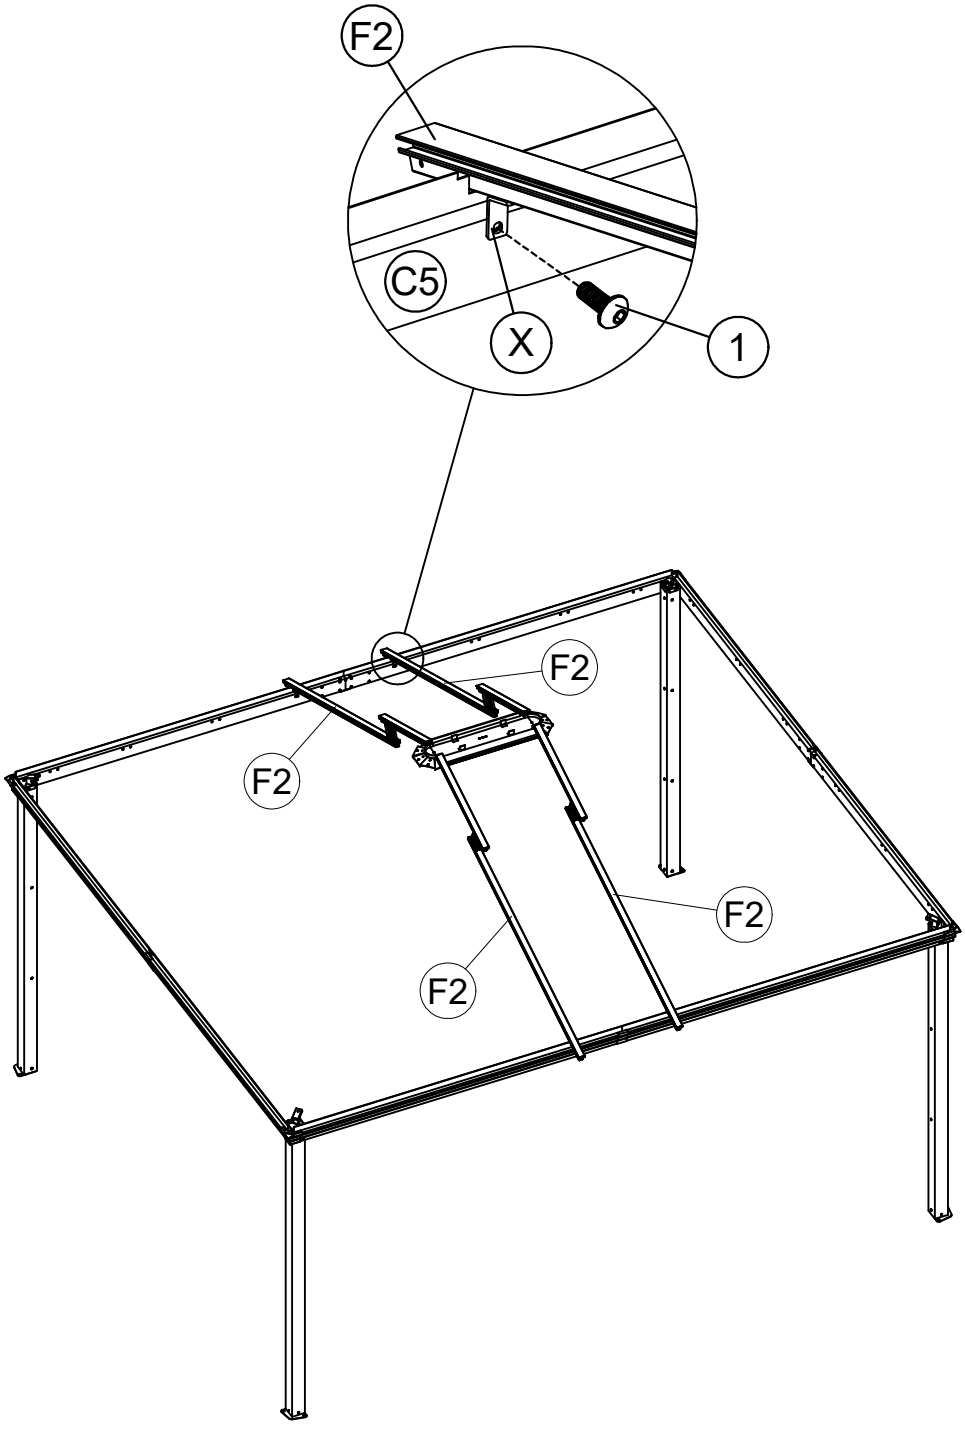



<8>



M6x15

(1) 18x

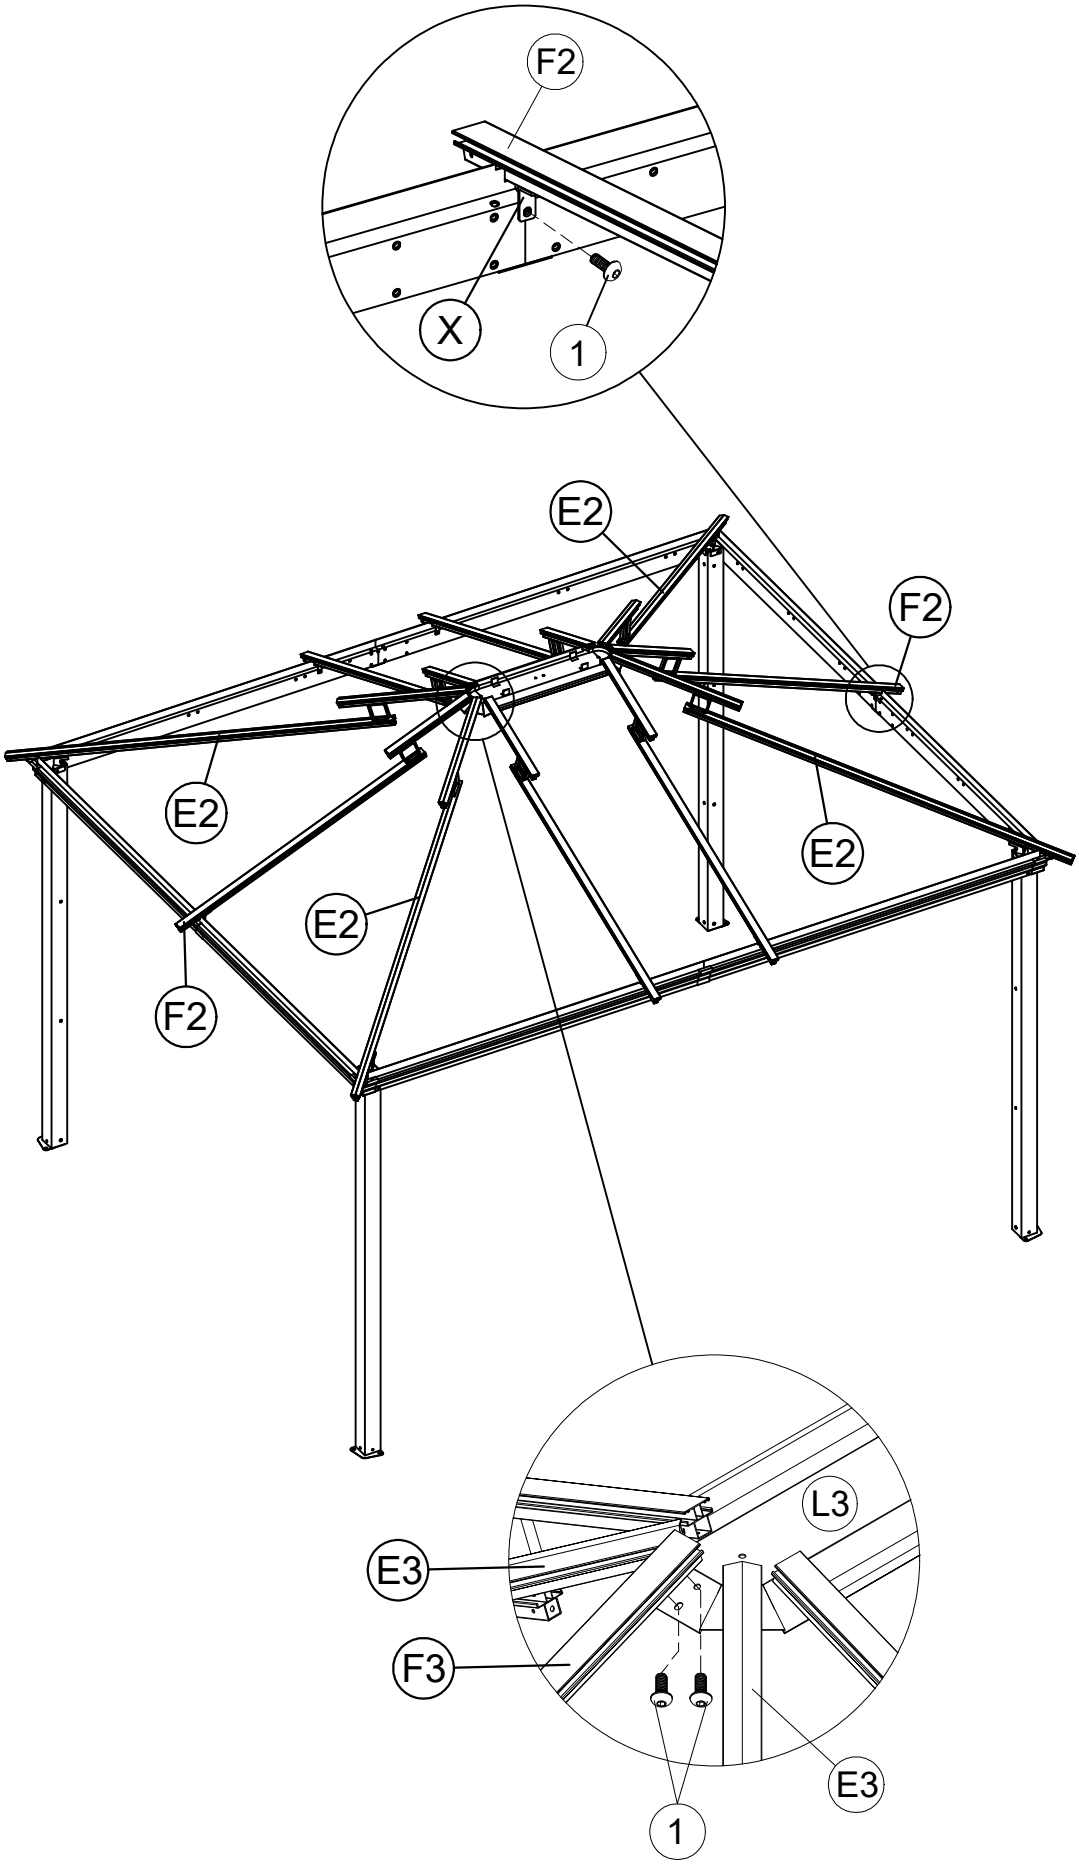

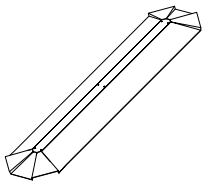



M3 1x




5 2x

<9>

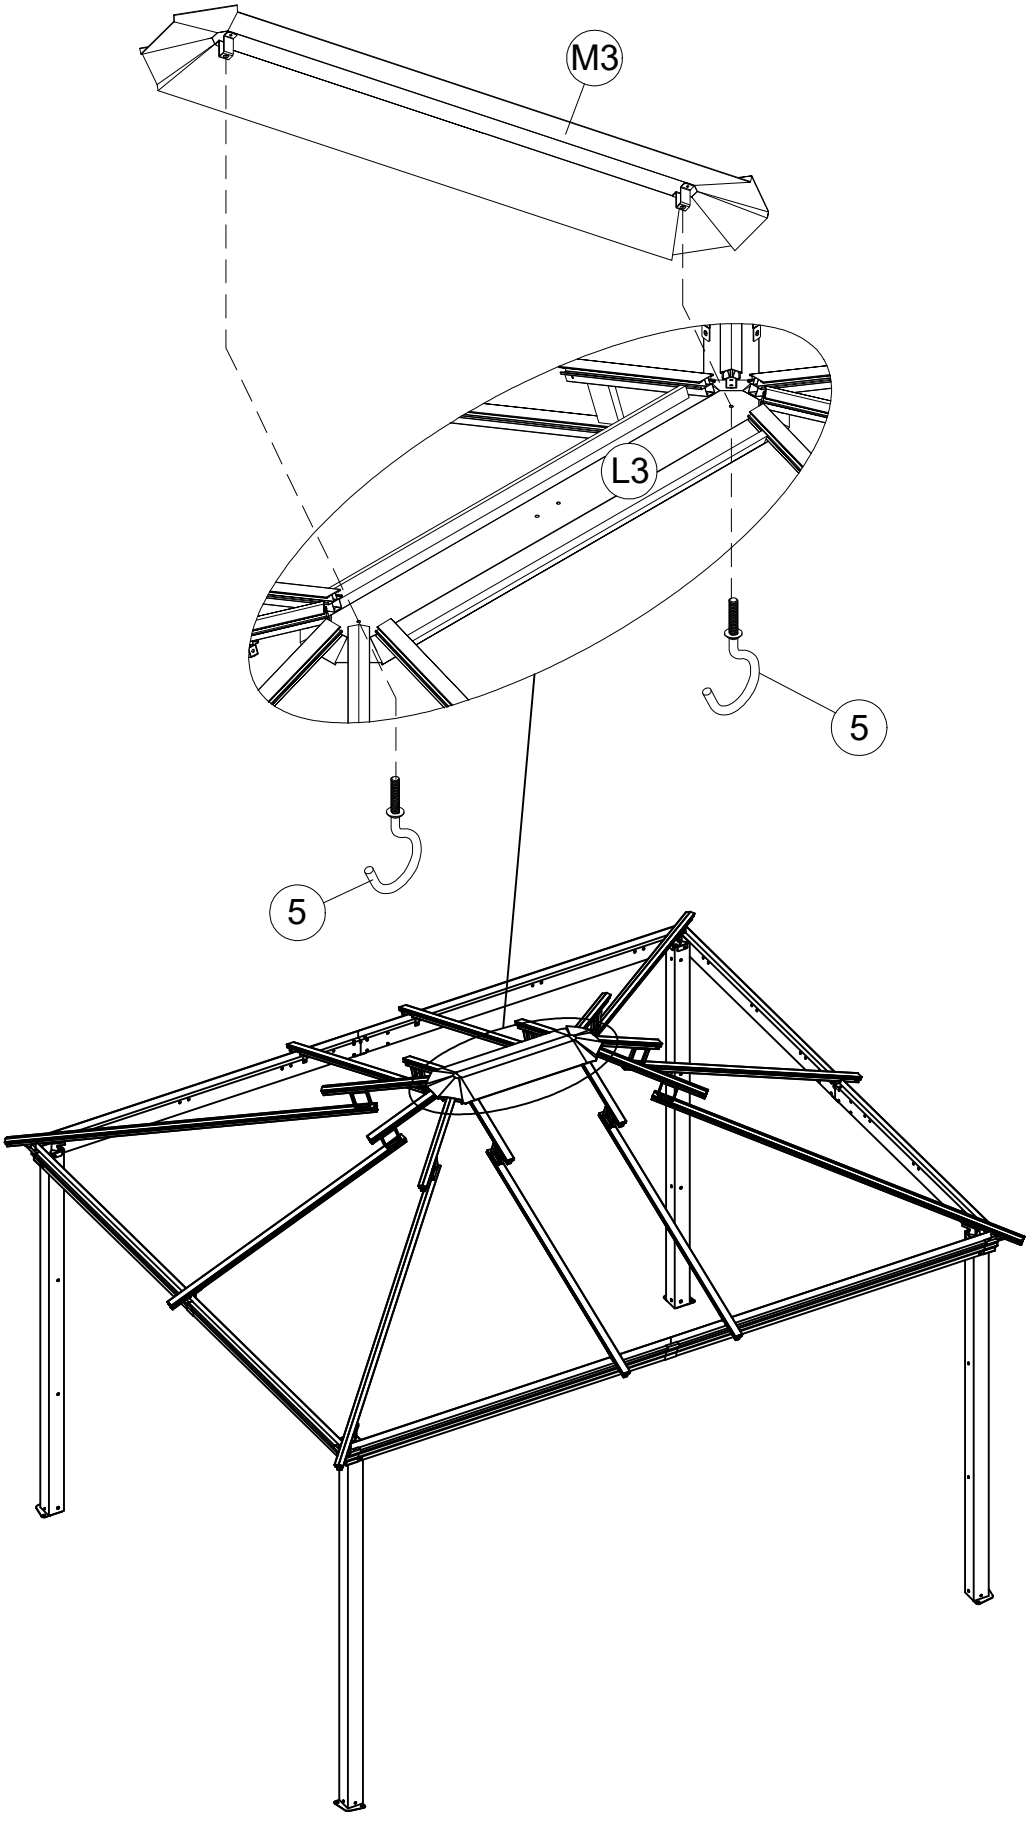


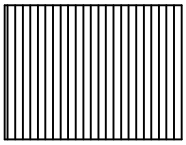

W3 2x

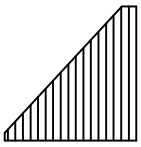



W4 4x

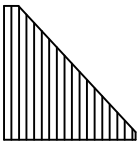


W5 4x

<10>

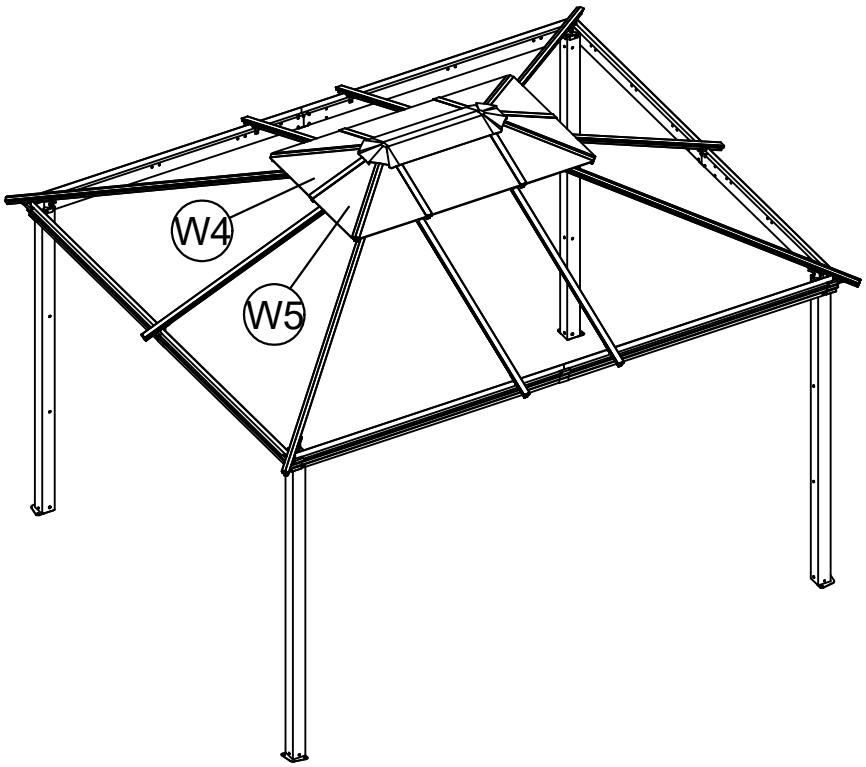


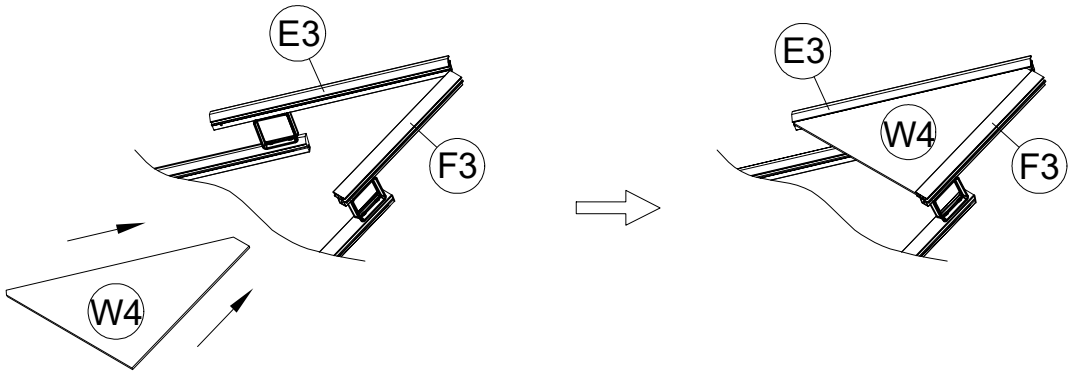

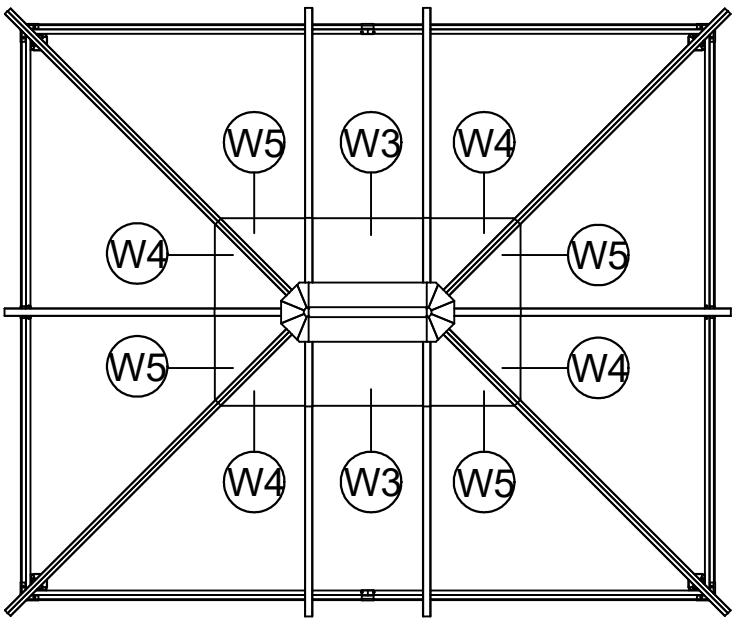




H 2x

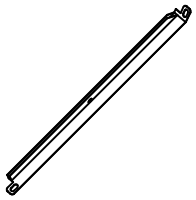

H7 4x



H8 4x



N 4x





N1 6x




M6x15


1 10x

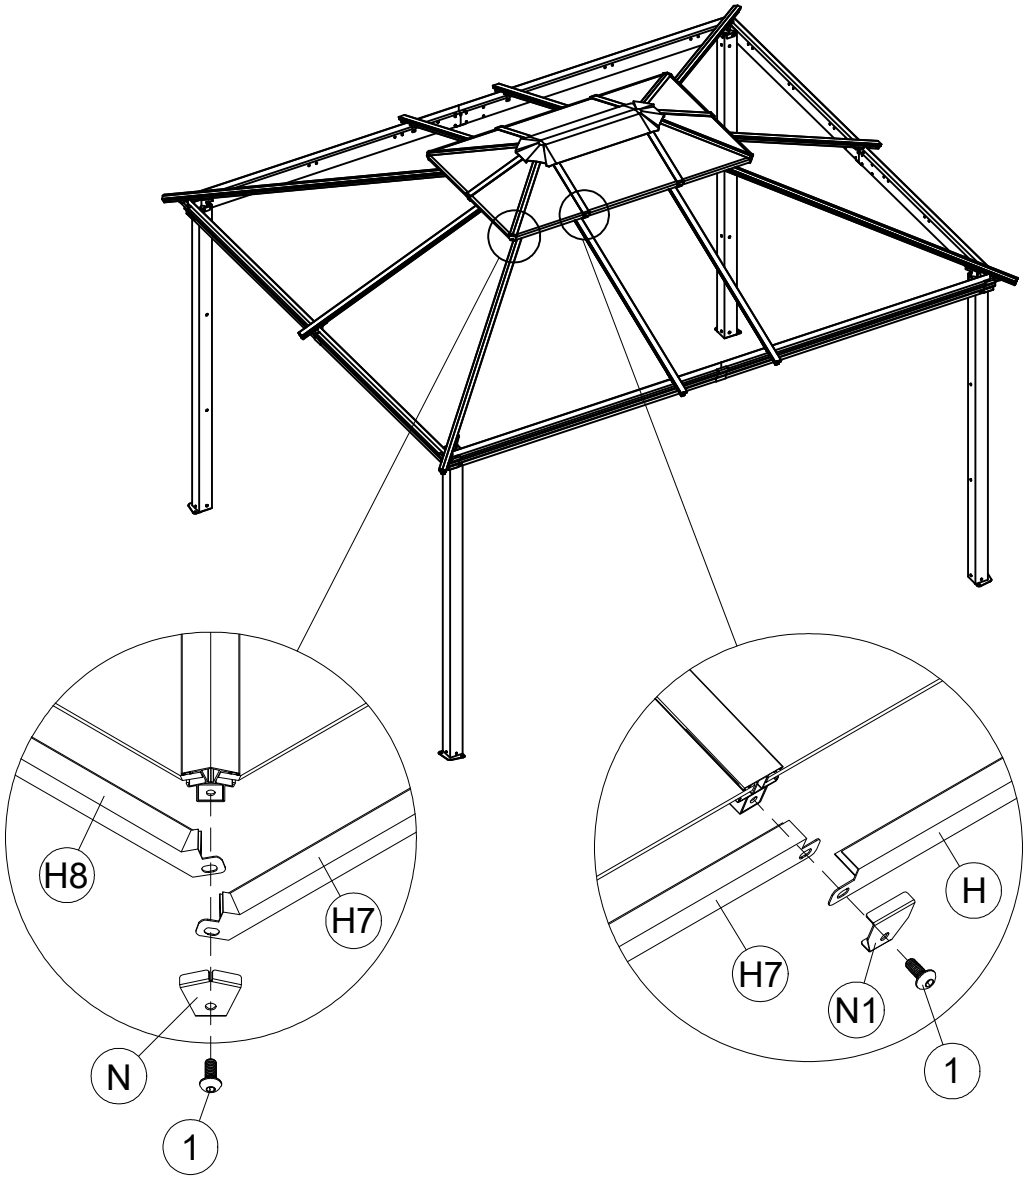

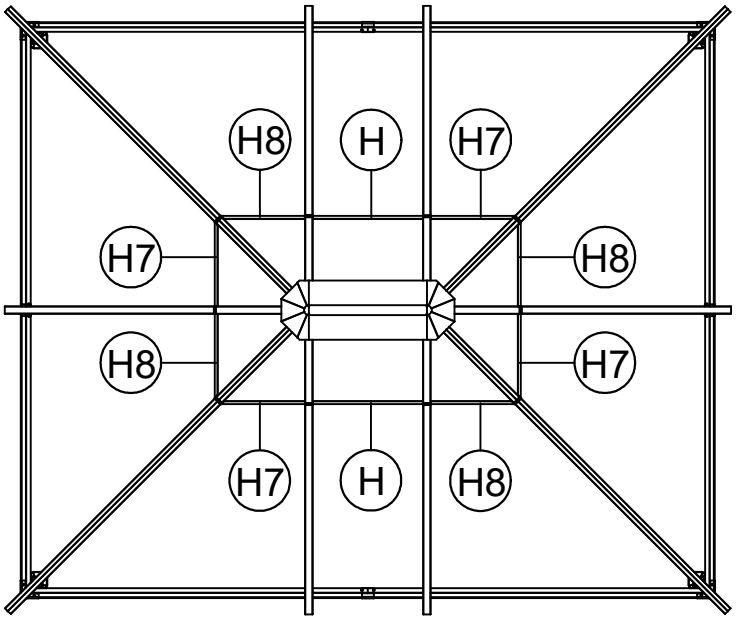


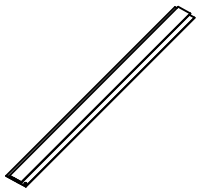


G 2x

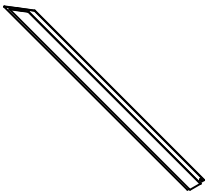


G5 4x

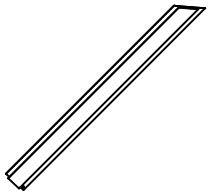


G6 4x

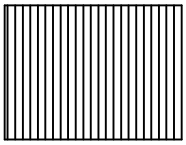


V6 2x

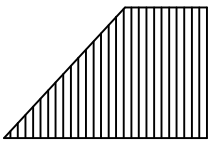



V7 4x

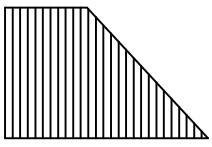


V8 4x

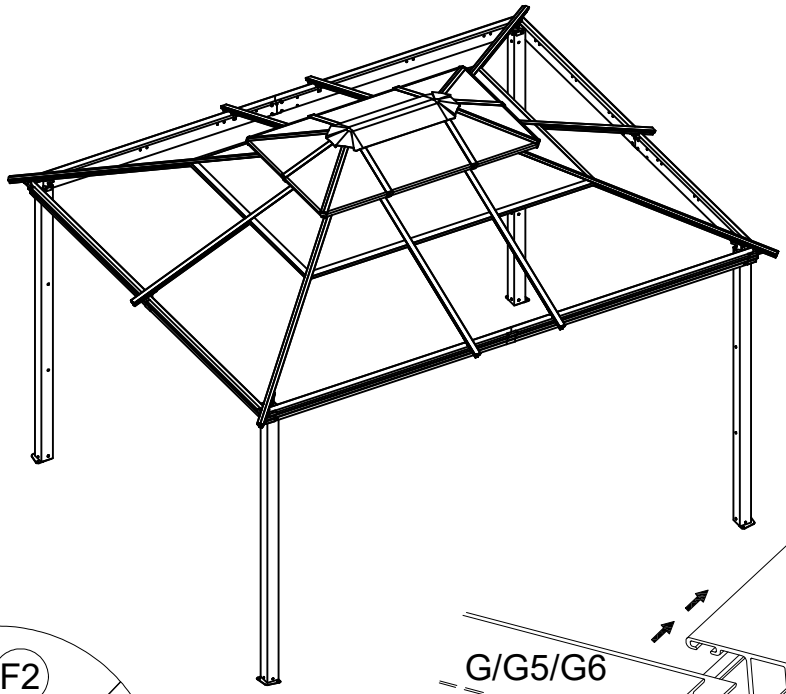


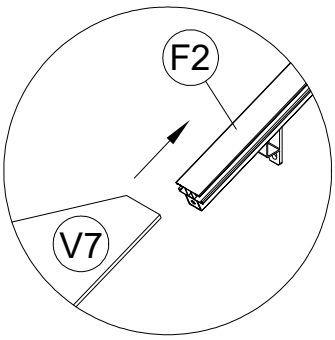


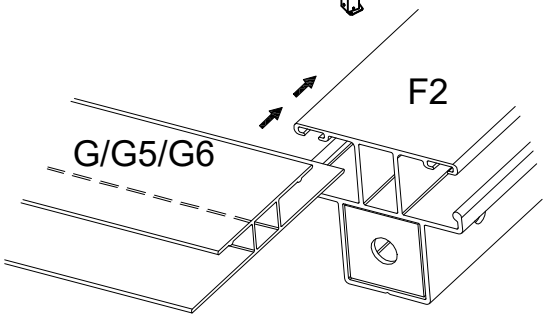


Note:When G, G5, or G6 are inserted into F2,
the wide side must face downward and
the narrow side upward; otherwise,
it may cause water leakage.

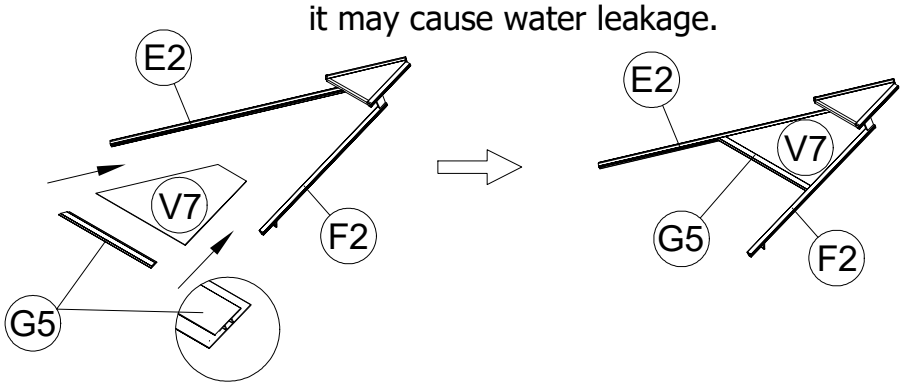

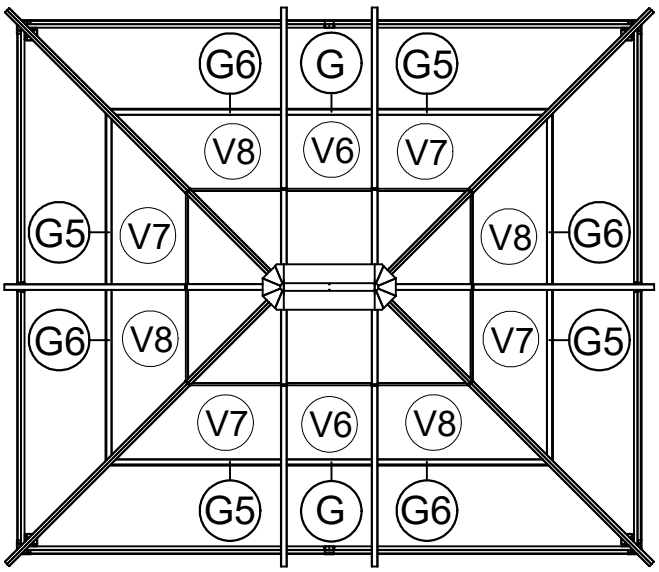


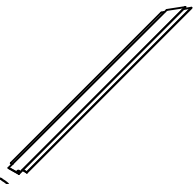


G7 4x

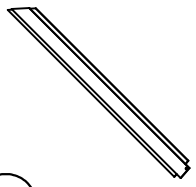


G8 4x

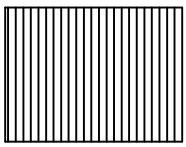


V6 2x

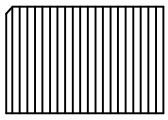


V9 4x



V10 4x





V11 4x





V12 4x

<13>

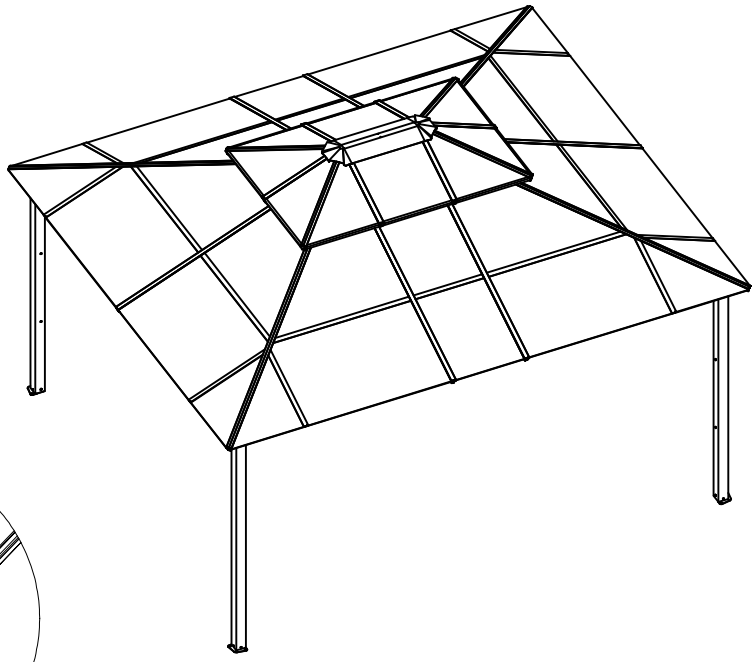

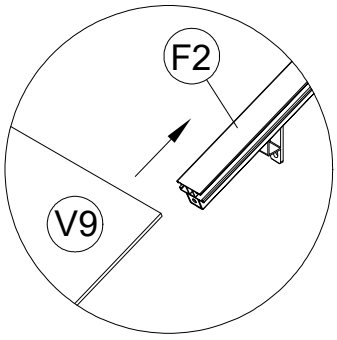

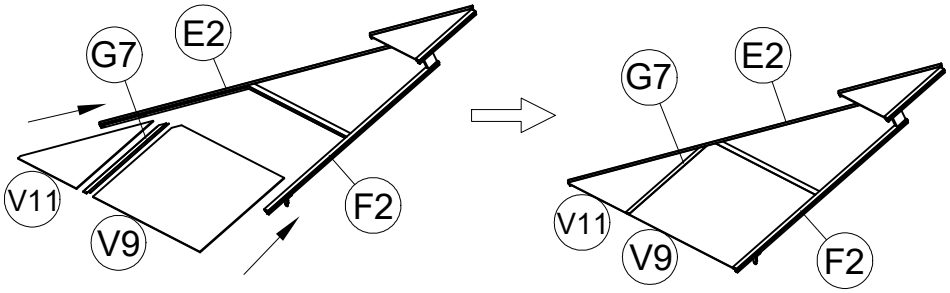


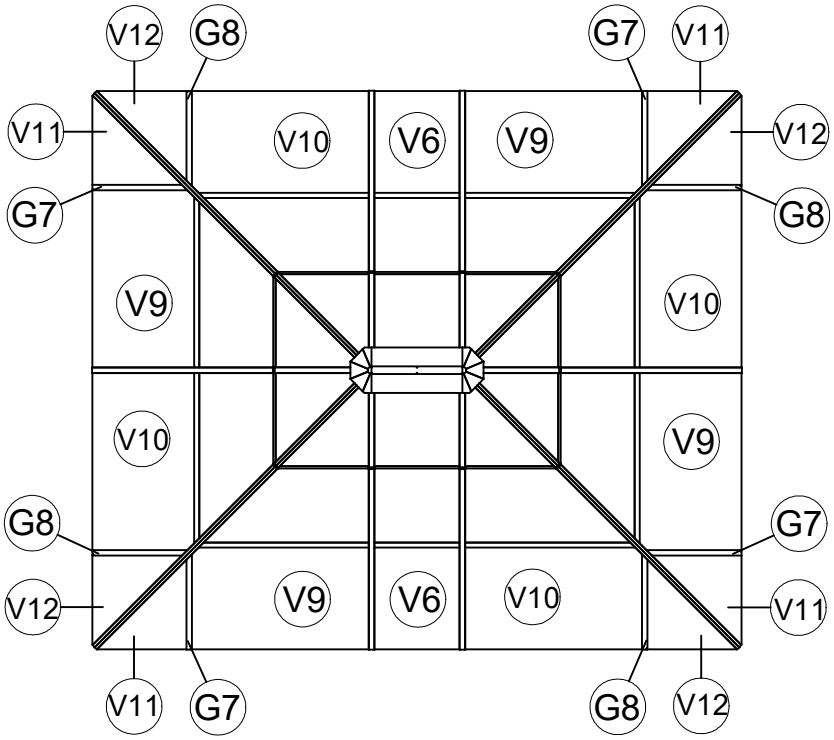


<14>




H 2x

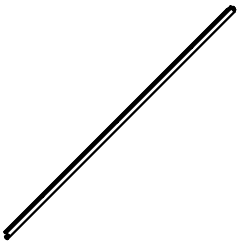

H5 4x

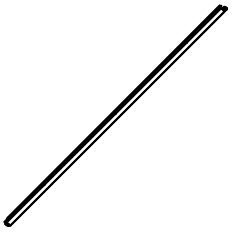

H6 4x



N 4x





N1 6x





M6x15

1 10x

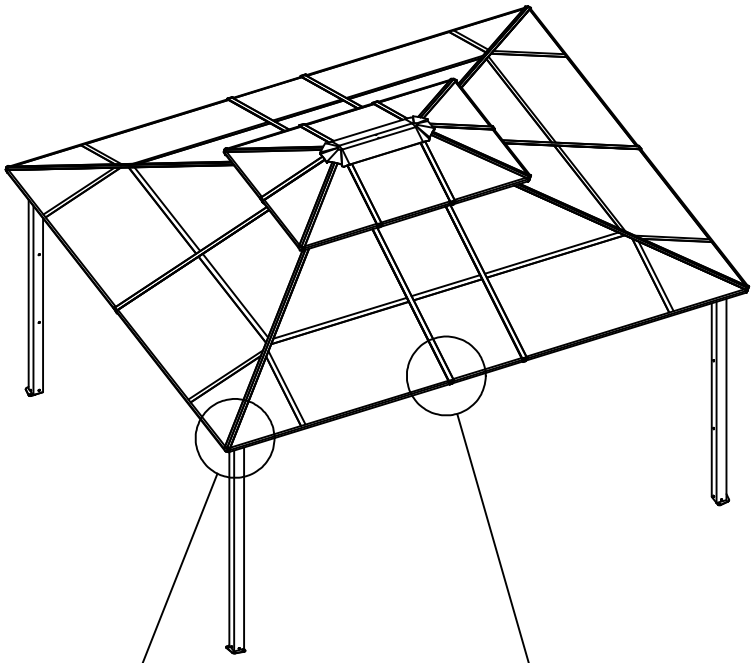

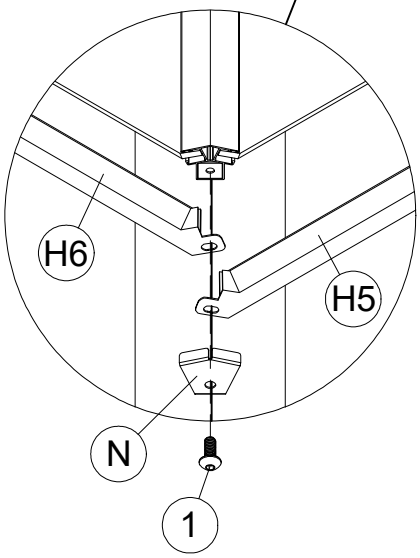

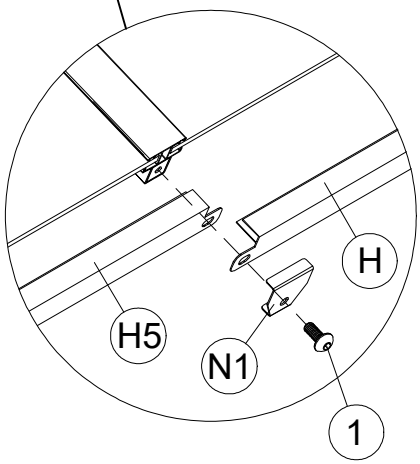

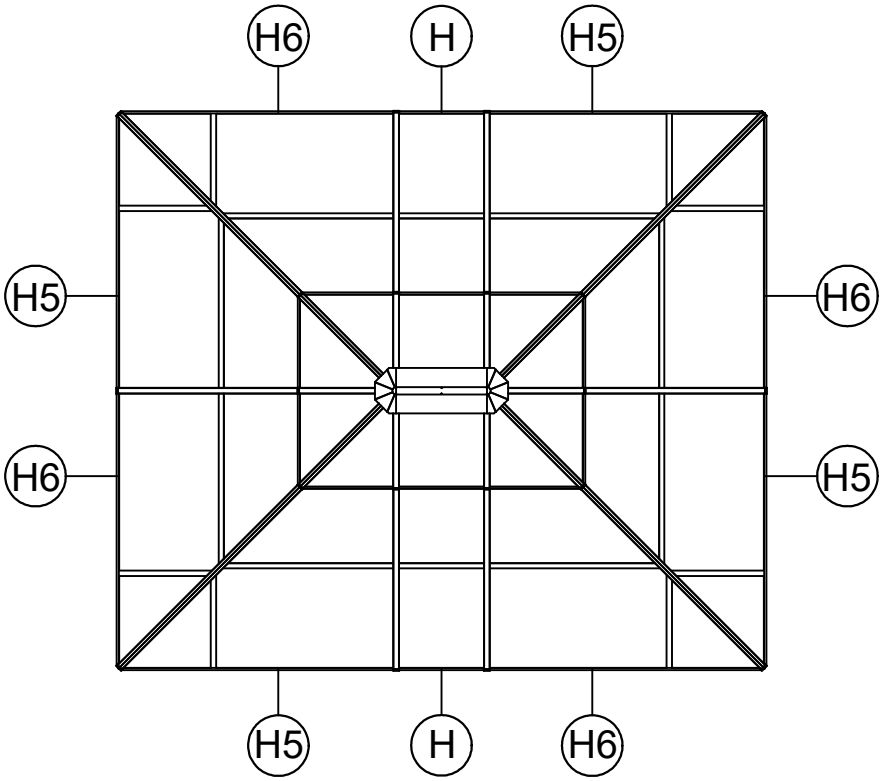

I2 2x

I3 2x

I4 2x

I5 2x

N 4x

M6x15
1 10x


Z2 2x


Z3 2x

Z4 2x


M6x10
7 10x


M6
8 10x

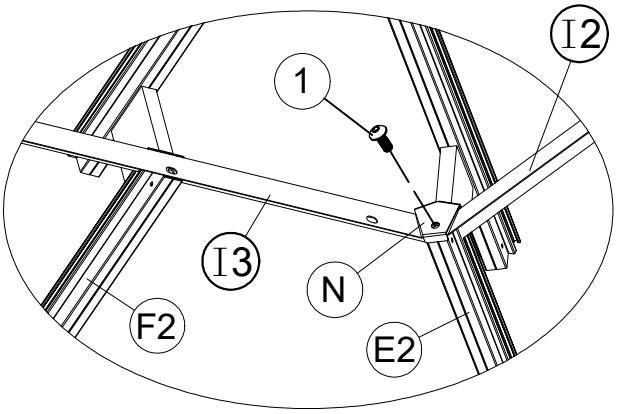

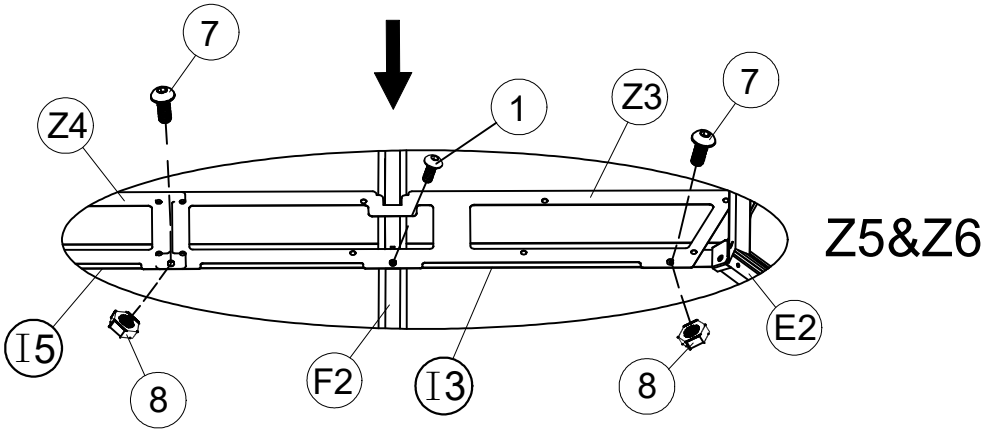


Z5&Z6

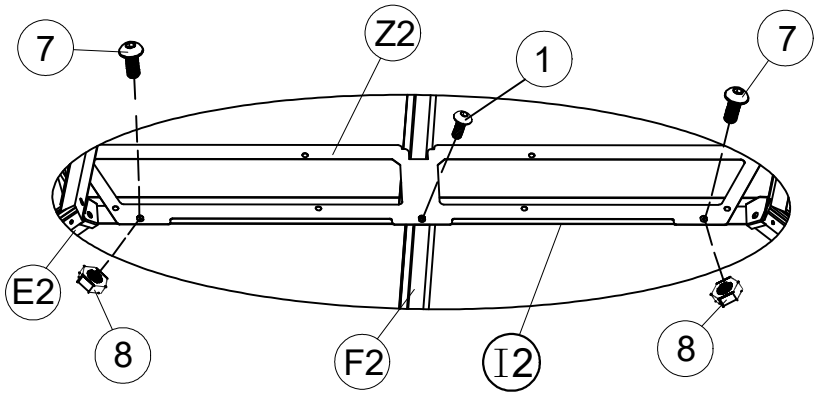


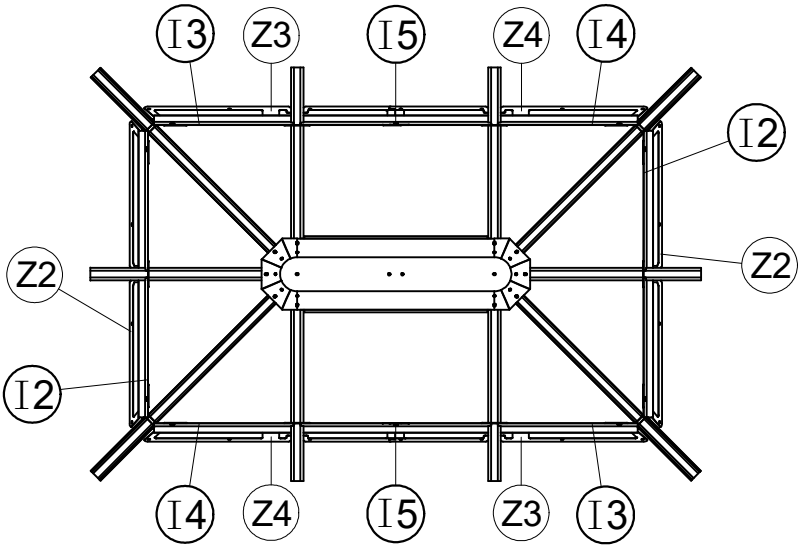


Top view of the roof

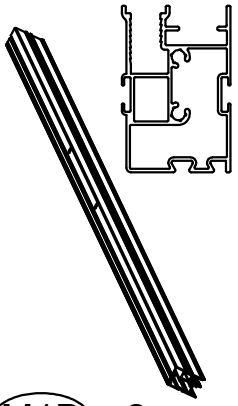


M1B 2x

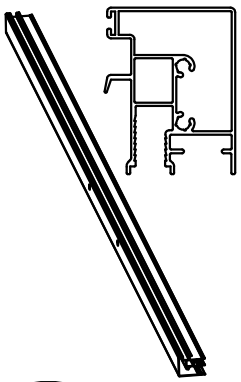


M1C 2x

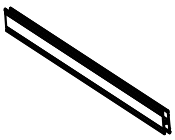

M5G 4x



MS2 2x

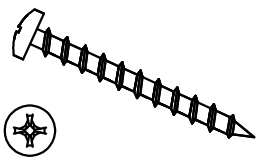



M4x50


11 8x

AB 2x


For component AB, repeat two times.

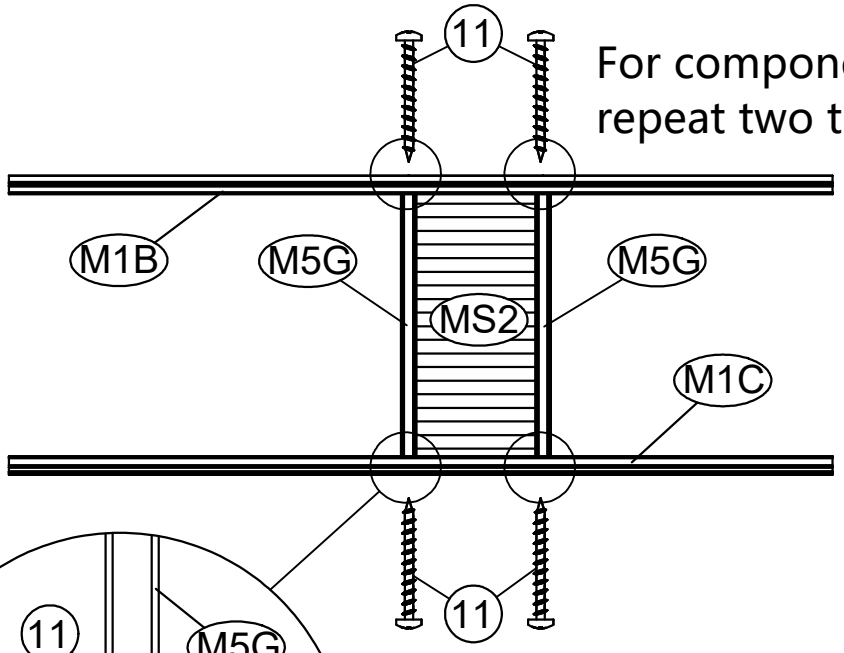

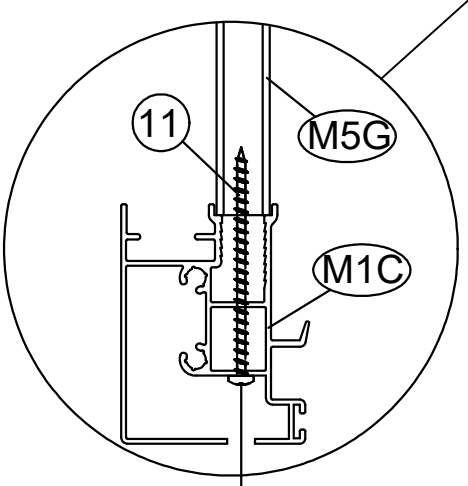

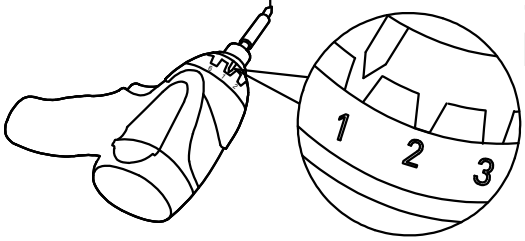


Select the low gear.

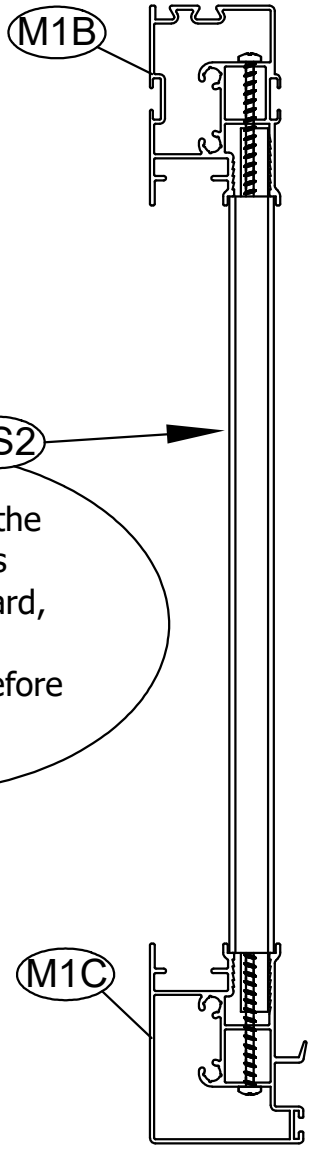


With the side of the PC panel that has text facing outward, remove the protective film before installation.

The door frame installation template is provided on pages 26 to 30. All following door frames should be installed according to this template.

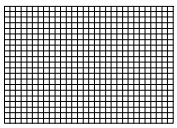

M1S 2x

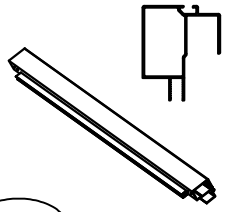

M4K 2x




M4x20


9 8x

<17>

For component AB, repeat two times.


AB 2x

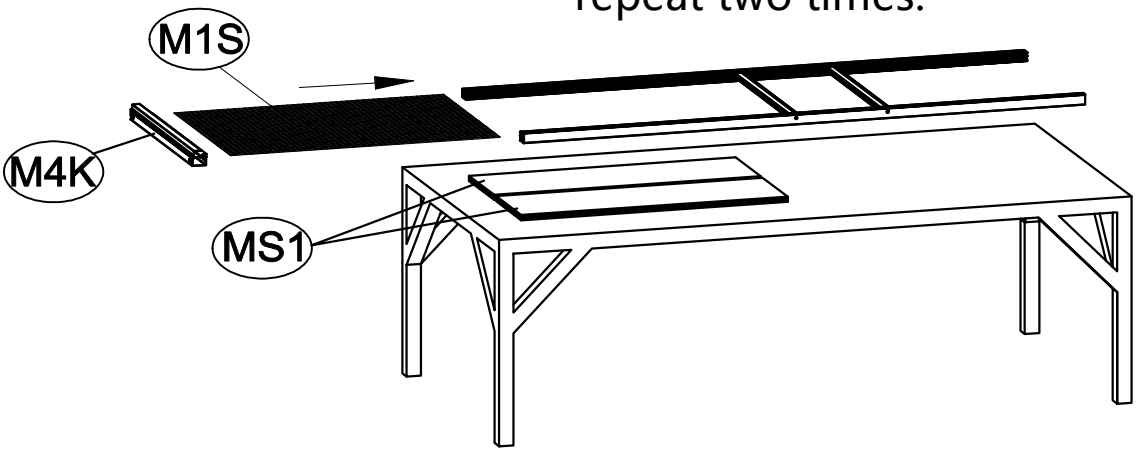

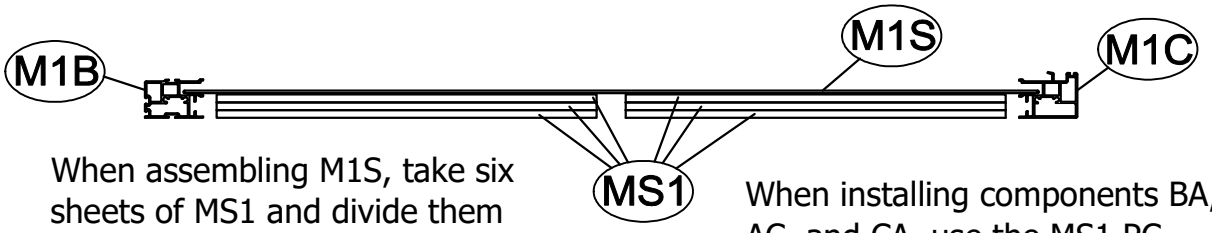

When assembling M1S, take six sheets of MS1 and divide them into two piles. Place the piles under the bottom to lift M1S.

When installing components BA, AC, and CA, use the MS1 PC panel as a pad in the same way.

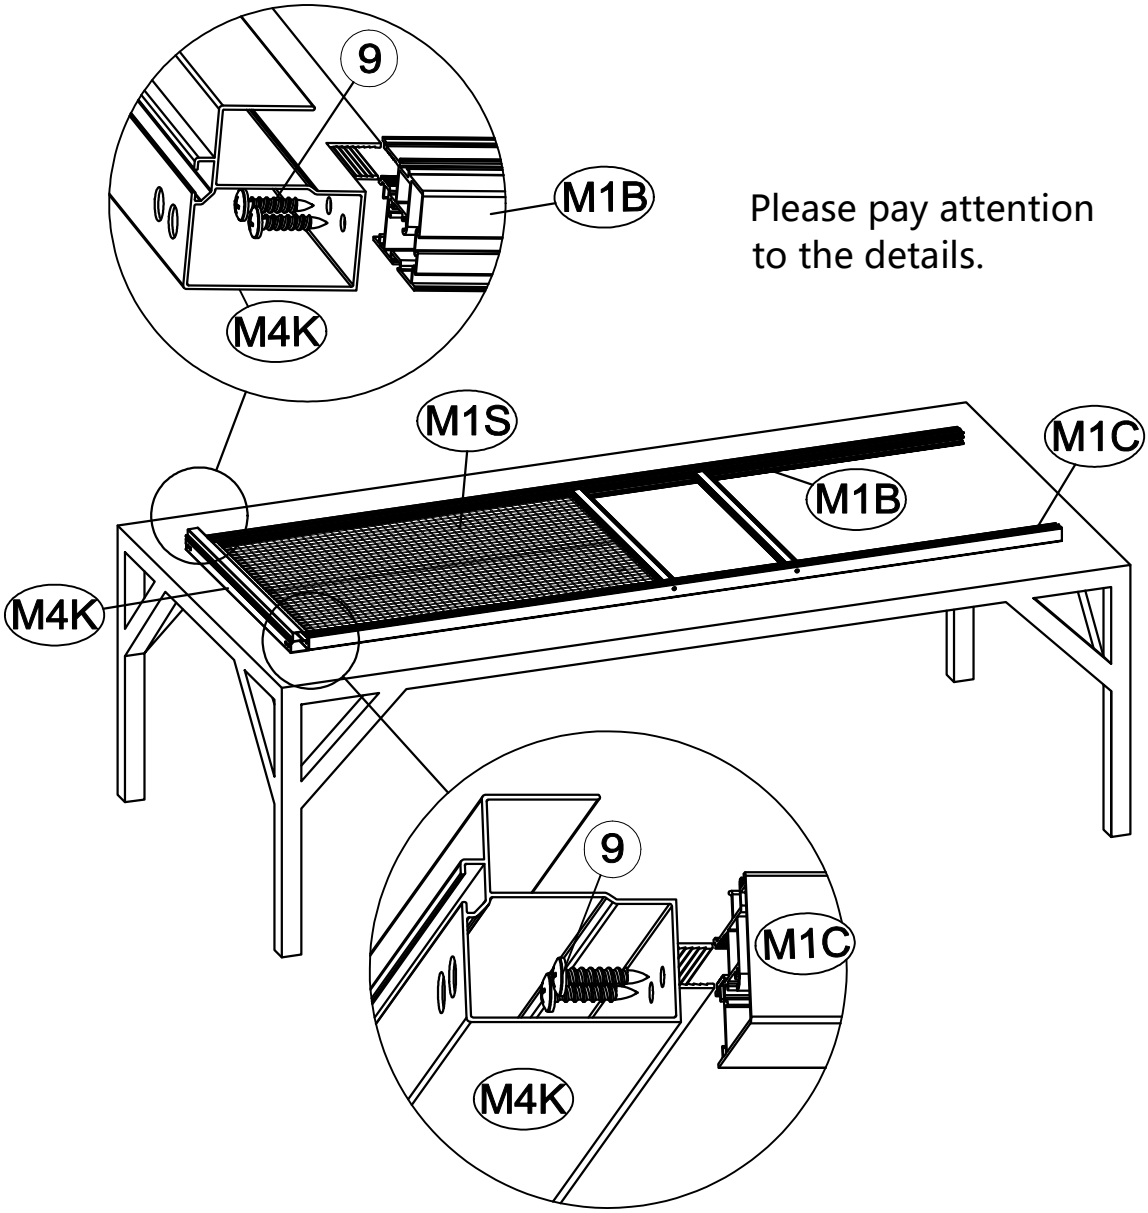


Please pay attention to the details.


<18>

For component AB, repeat two times.

AB 2x

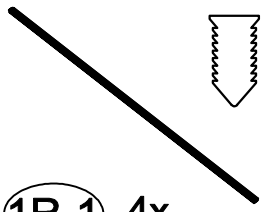



1R-1 4x

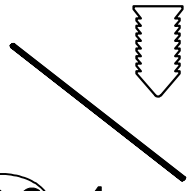



1R-2 4x

Before installing parts 1R-1 and 1R-2, move the mesh by hand to ensure there is enough space around it.

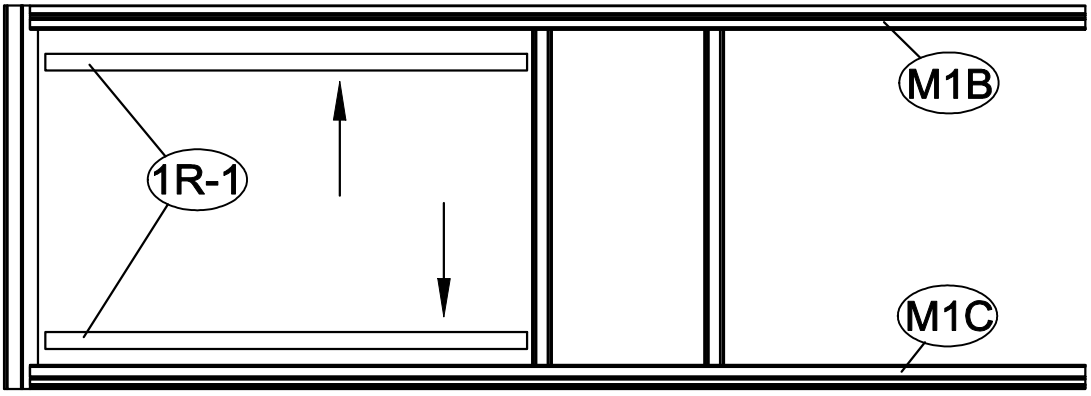

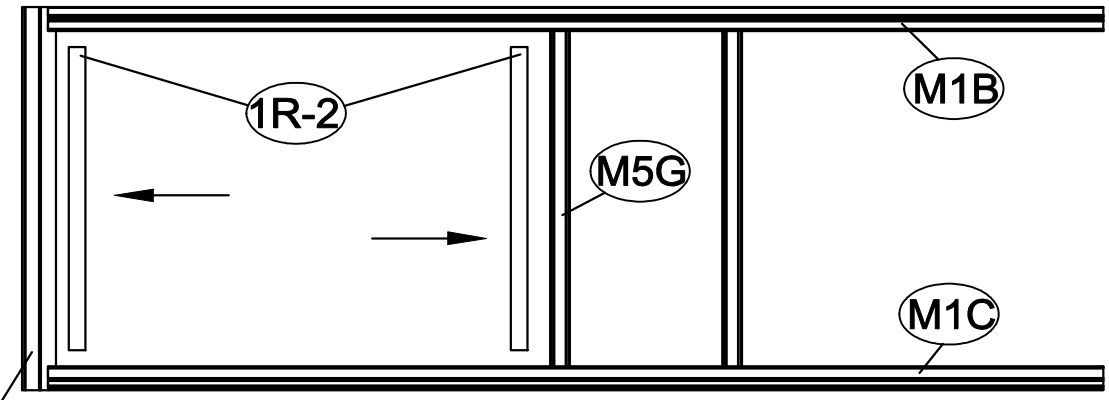


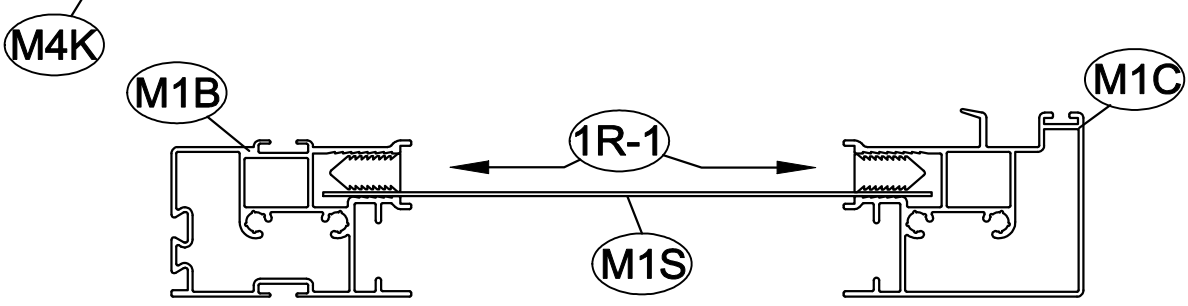

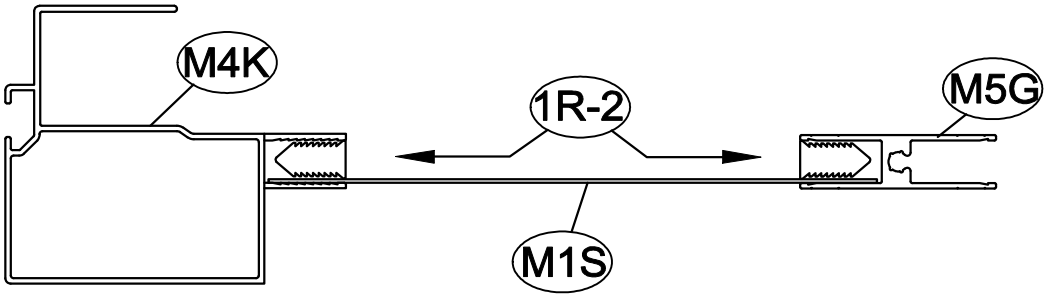

<19>

This picture is provided for subsequent reference.

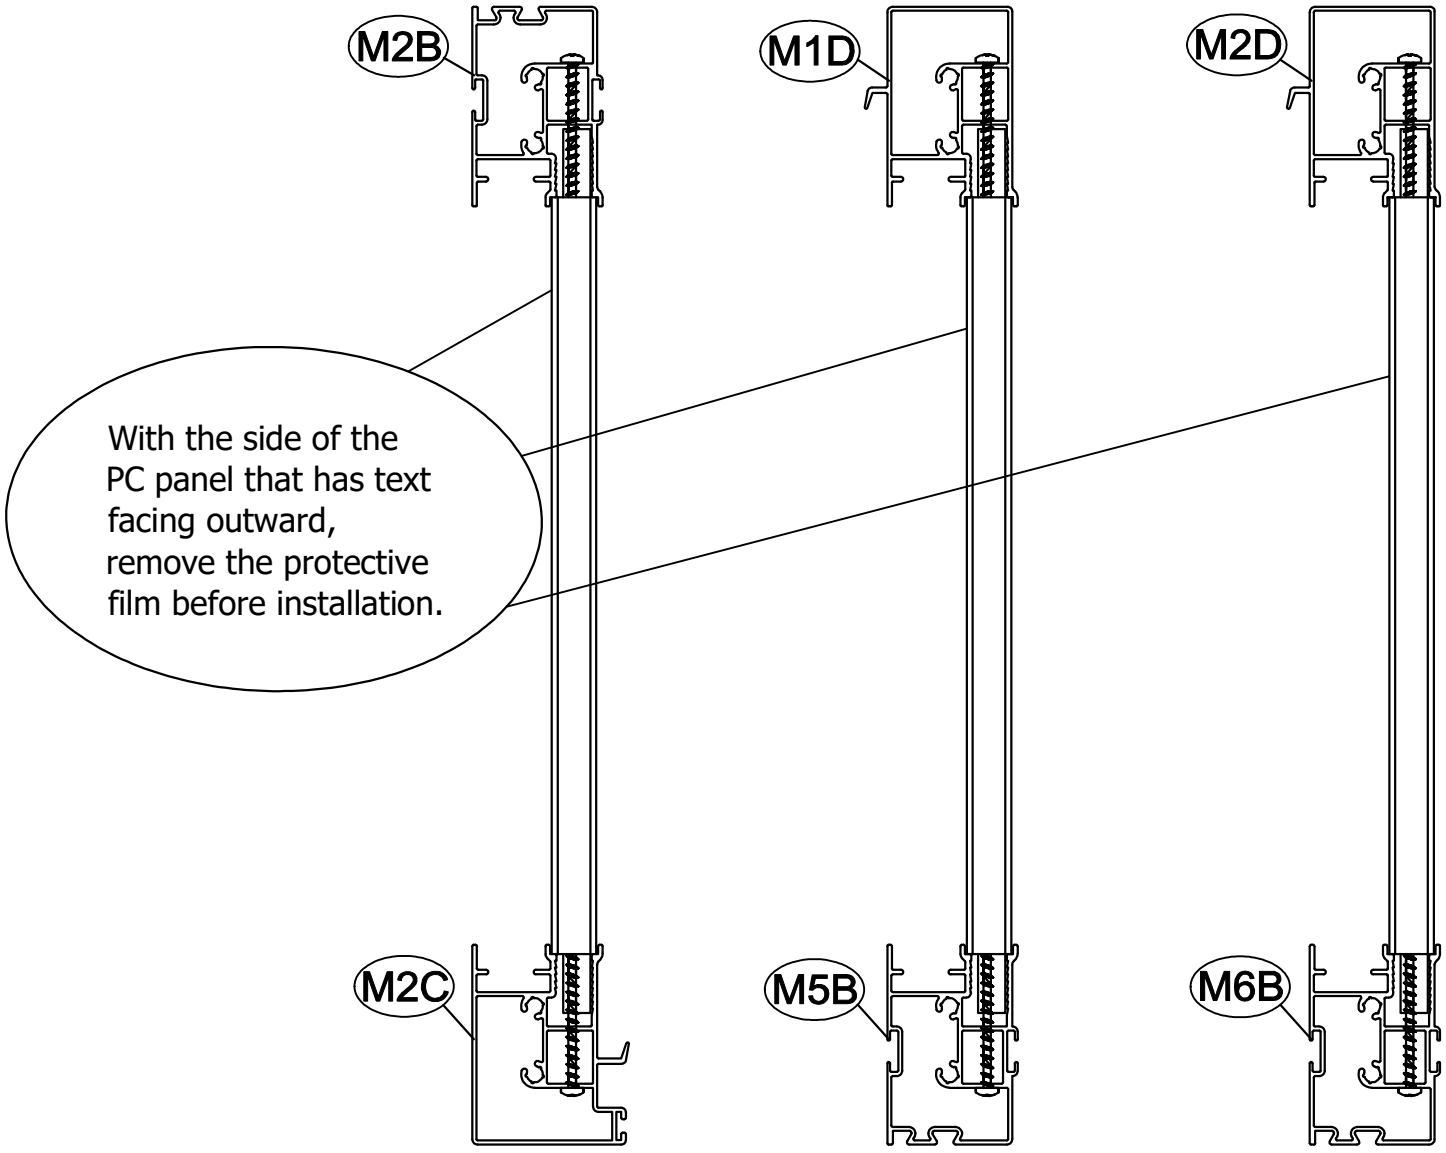


<20>

Door frame BA, AC, and CA installation: see pages 25–29.


M4K	2x
1R-1	4x
1R-2	4x
M5G	4x
M1S	2x
MS2	2x
M2B	2x
M2C	2x
11	8x
9	8x

For component BA, repeat two times. BA 2x

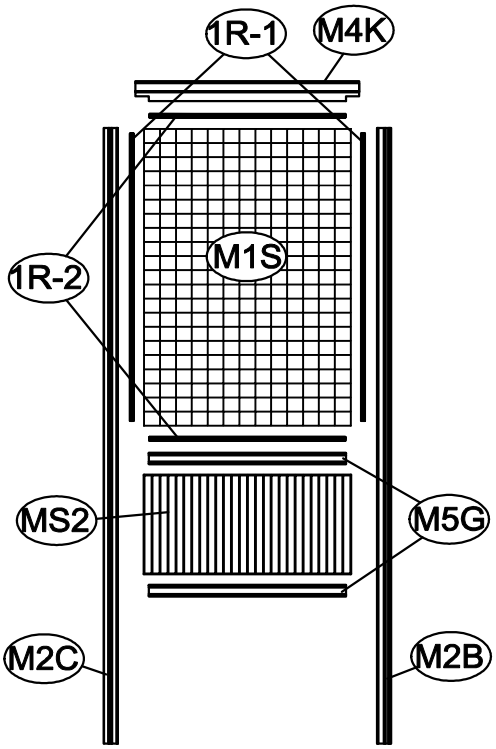


M6K	2x
1R-1	8x
M7G	4x
M3S	2x
MS10	2x
M1B	2x
M1C	2x
11	8x
9	8x

For component AC, repeat two times. AC 2x

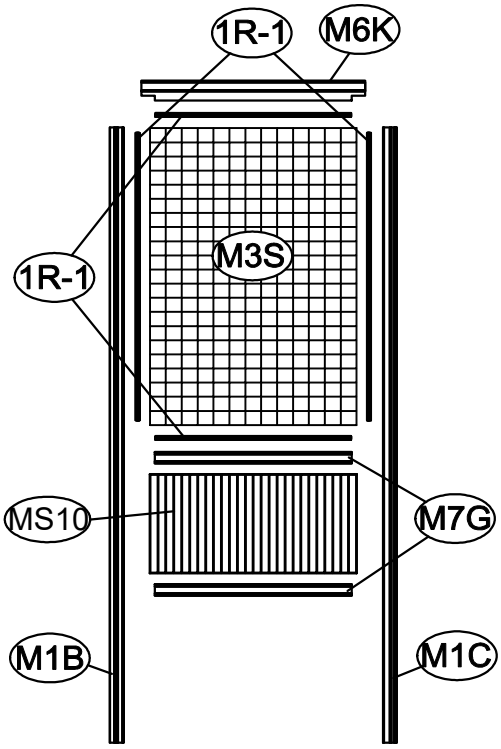


M6K	2x
1R-1	8x
M7G	4x
M3S	2x
MS10	2x
M2B	2x
M2C	2x
11	8x
9	8x

For component CA, repeat two times. CA 2x

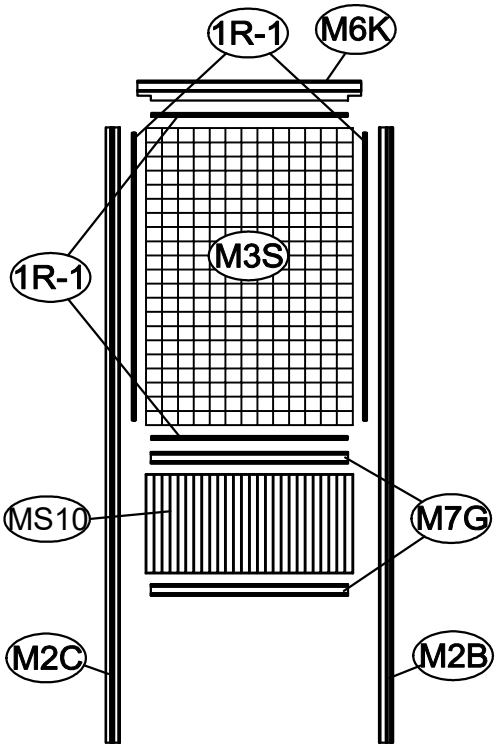


AB and BA are symmetrical components;
AC and CA are also symmetrical.


For component AF, repeat four times. AF 4x

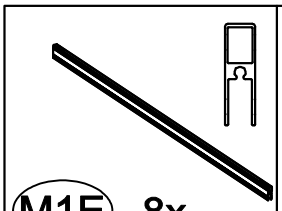


M1E 8x

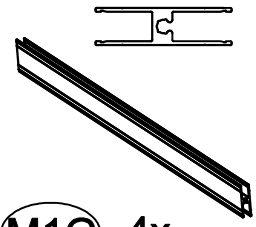


M1G 4x

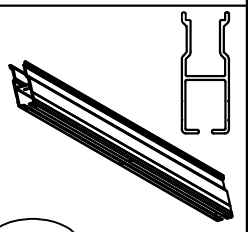

M4L 8x




MS1 8x




M4x35


10 24x

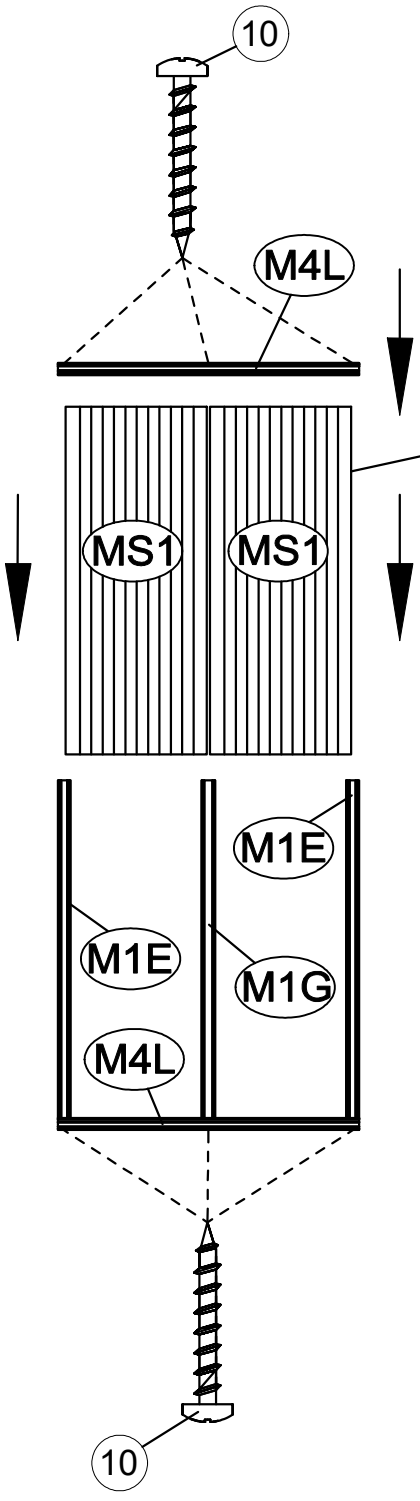


With the side of the PC panel that has text facing outward, remove the protective film before installation. After installation, make sure the front side remains facing outward for the next step.

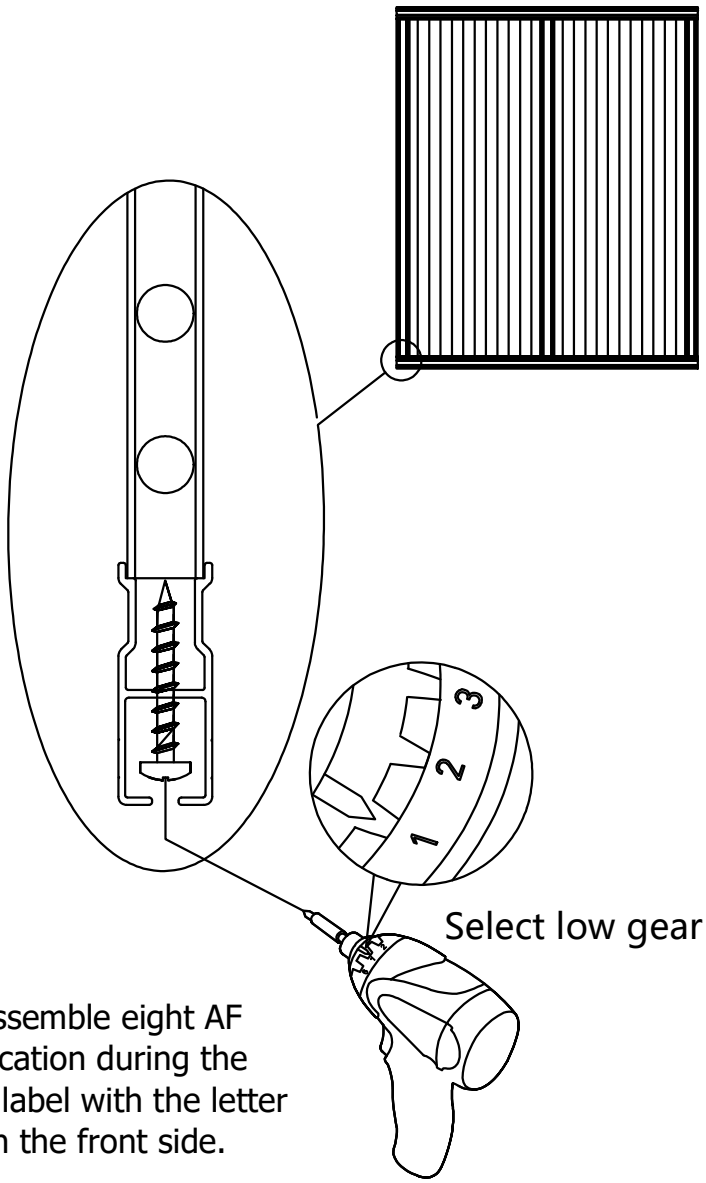


Repeat the previous steps to assemble eight AF components. For easier identification during the following assembly, attach the label with the letter "AF" to a prominent position on the front side.

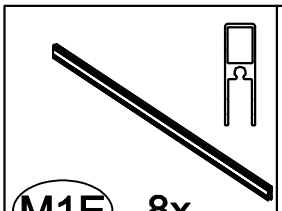


M1E 8x

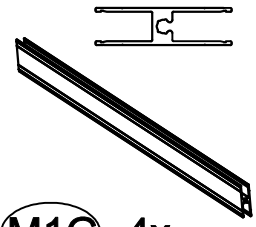


M1G 4x

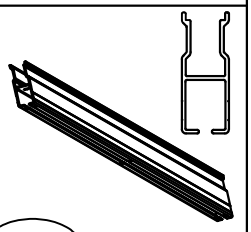

M6L 8x




MS9 8x




M4x35

10 24x

For component AG, repeat four times. AG 4x

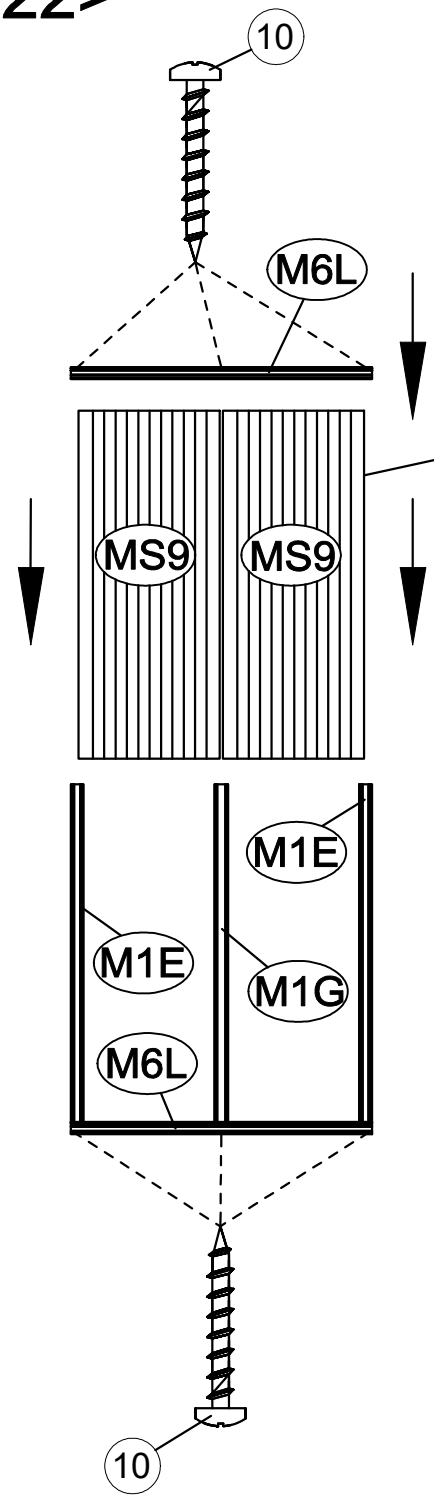


With the side of the PC panel that has text facing outward, remove the protective film before installation. After installation, make sure the front side remains facing outward for the next step.

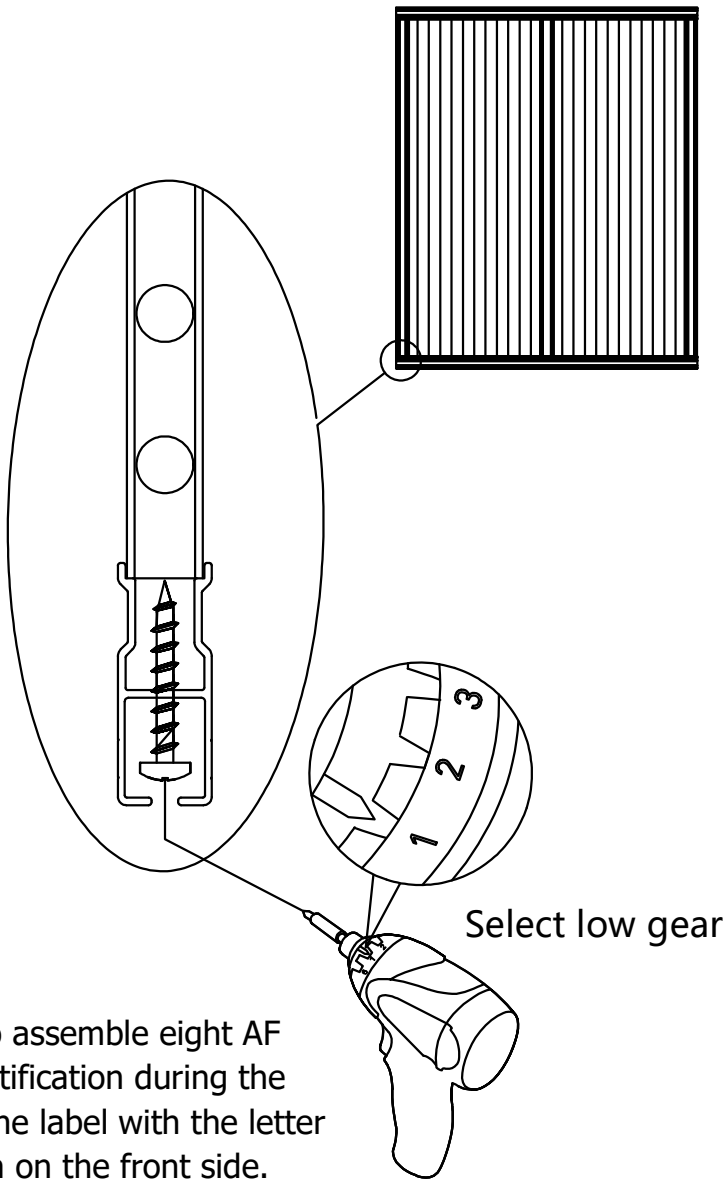

Select low gear


Repeat the previous steps to assemble eight AF components. For easier identification during the following assembly, attach the label with the letter "AG" to a prominent position on the front side.



MD1 32x




MD2 64x




MD3 16x

AF 4x AG 4x

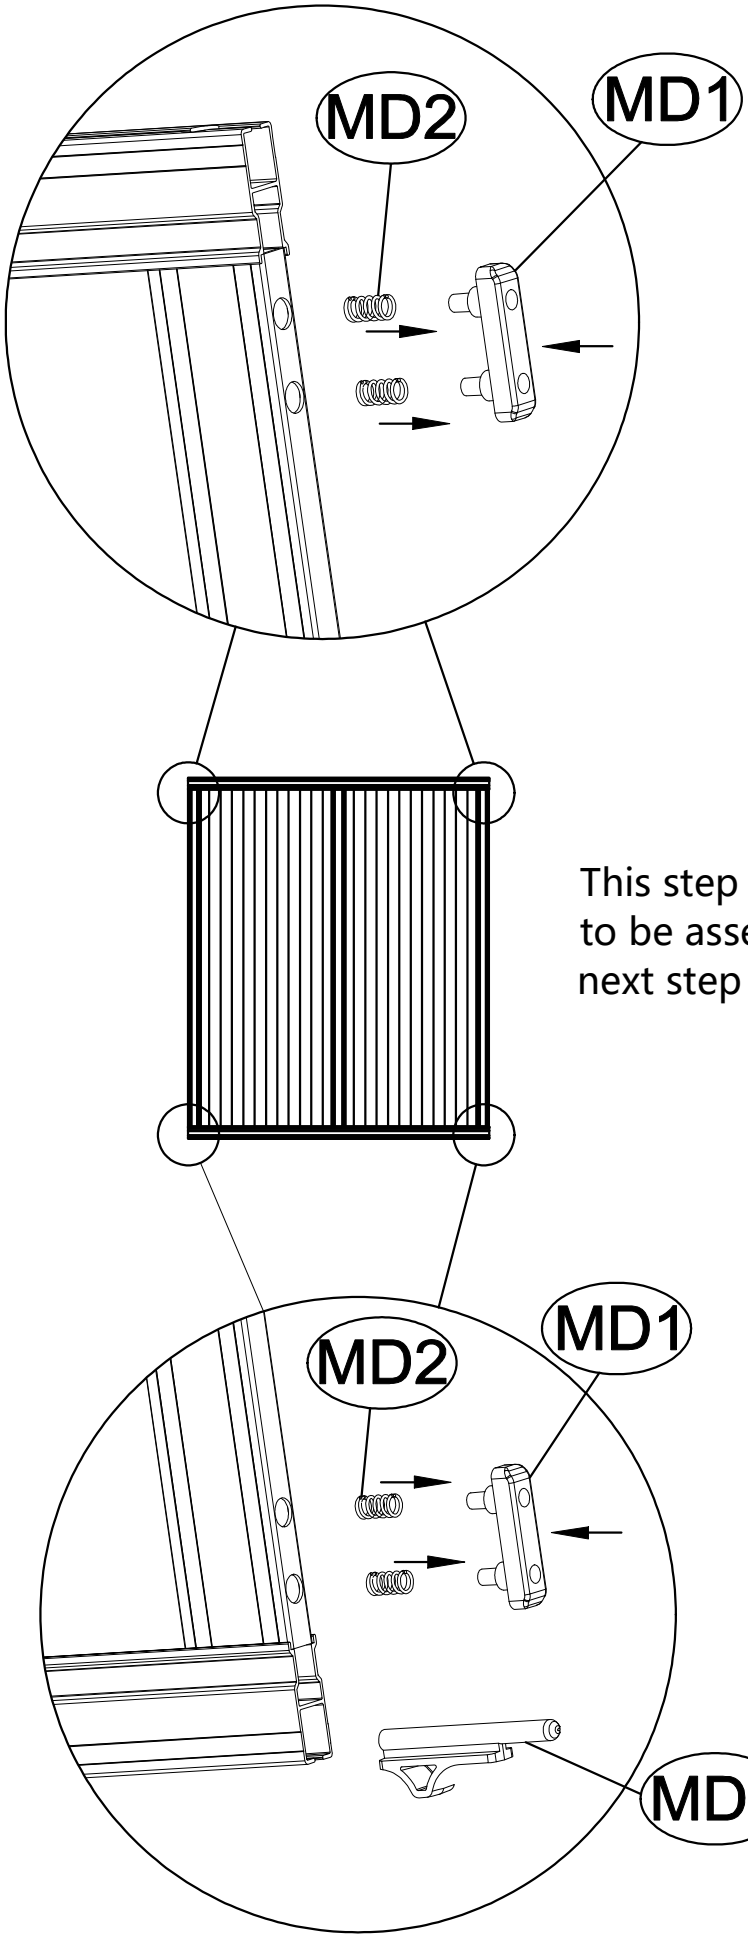


This step is recommended to be assembied with the next step together.

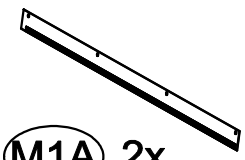


M1A 2x



M2A 2x

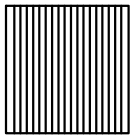

MS3 4x

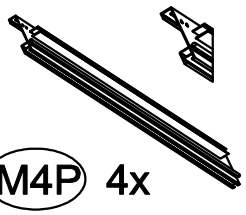

M4P 4x




M4x20


9 16x


<24>


AB 2x

BA 2x

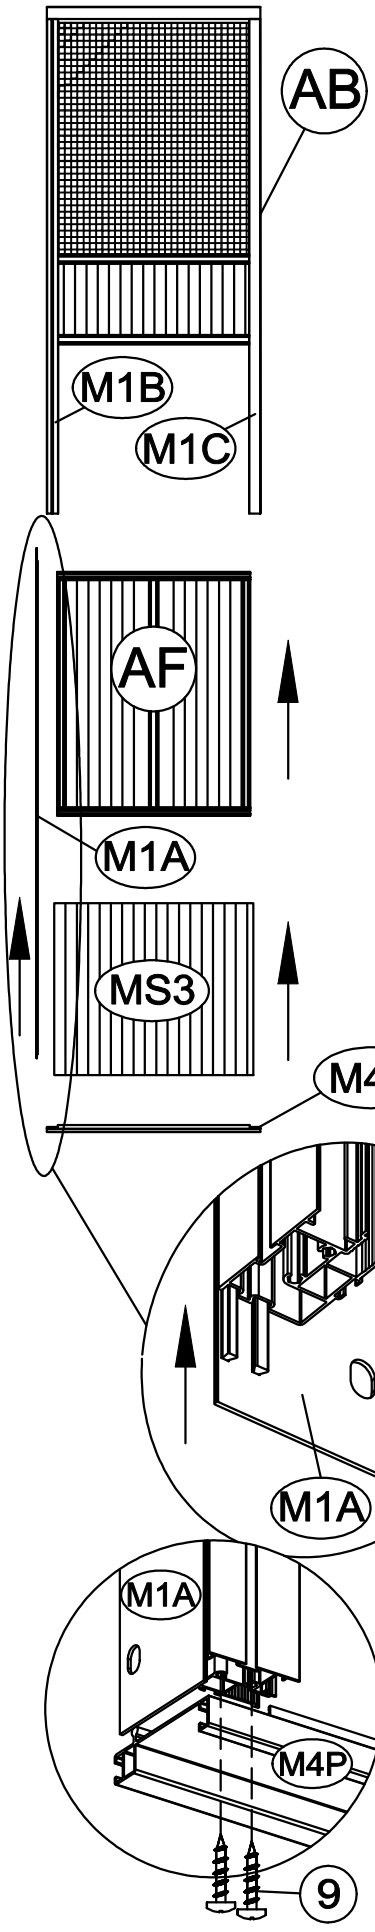

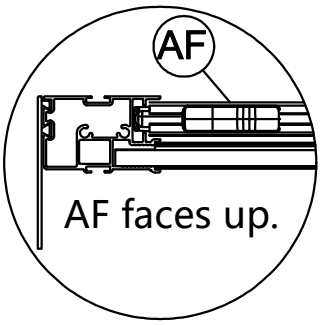

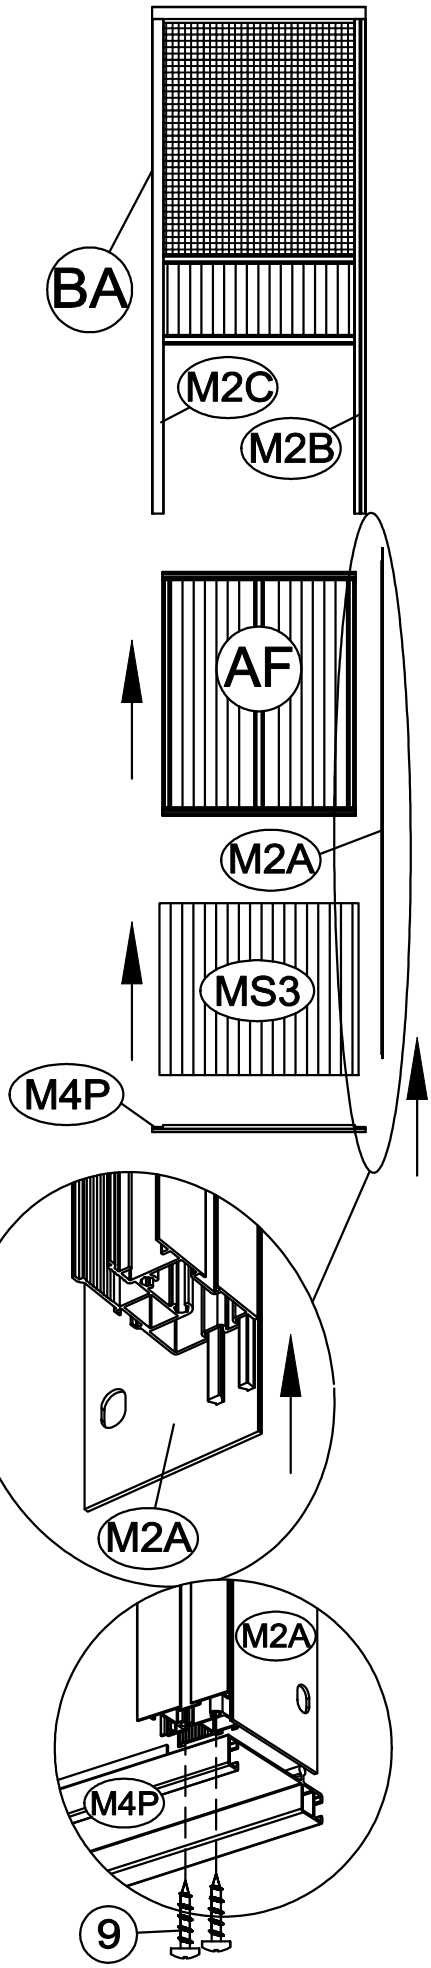


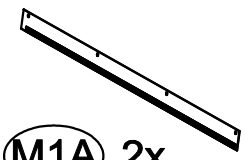


M1A 2x




M2A 2x

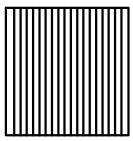

MS11 4x

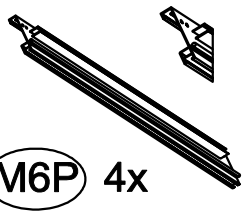


M6P 4x




M4x20


9 16x

AC 2x CA 2x

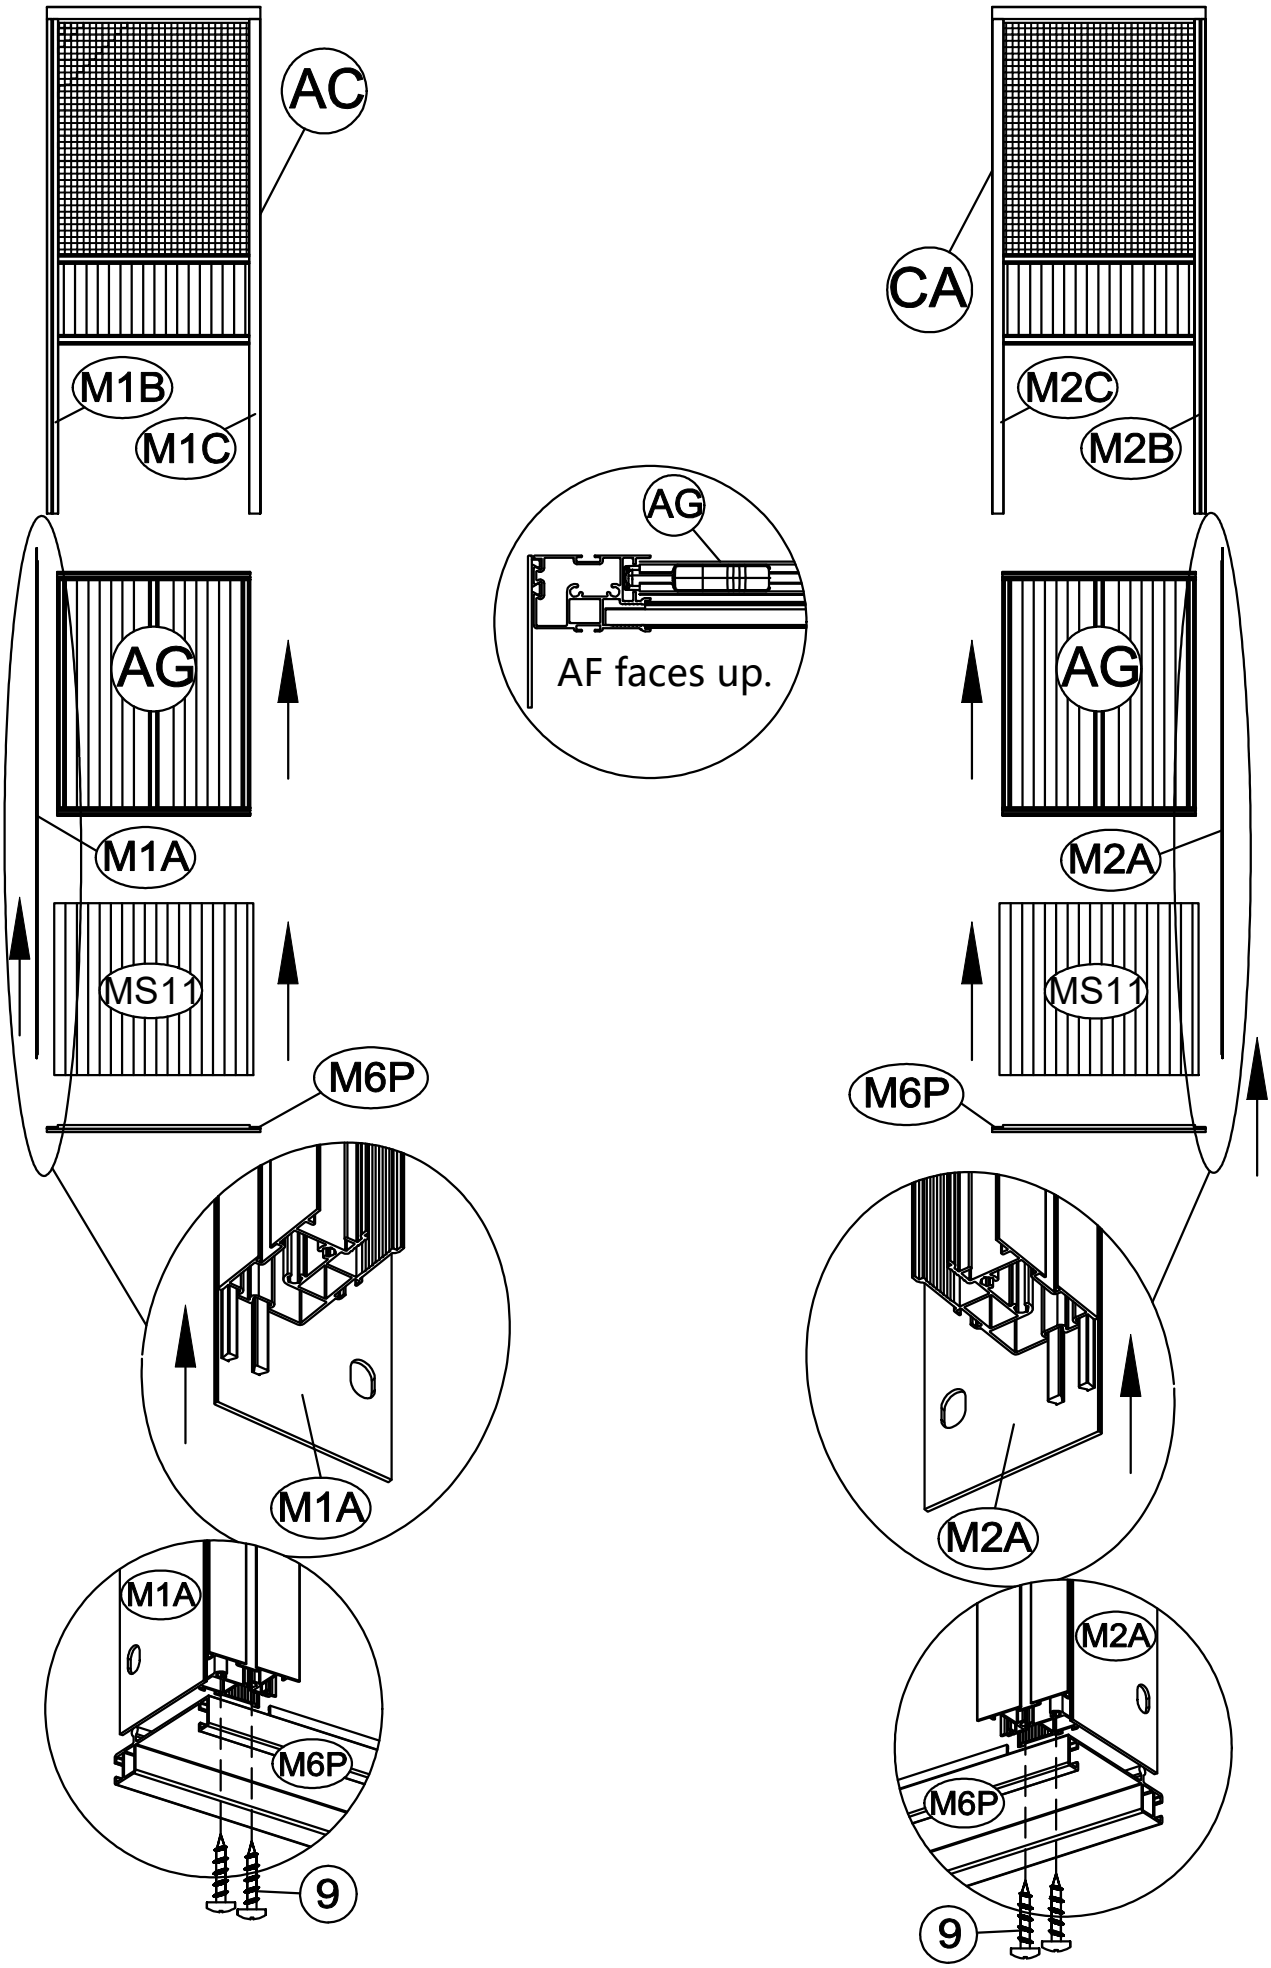


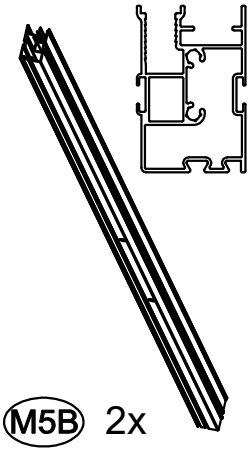


M5B 2x

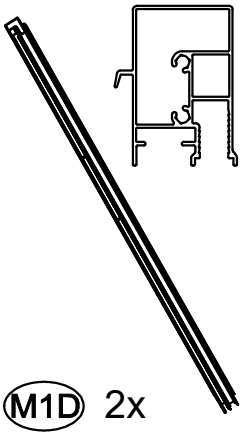


M1D 2x

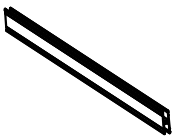

M5G 4x




MS2 2x

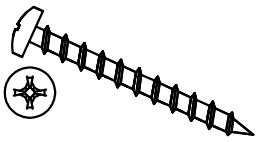



M4x50

11 8x


AD 2x

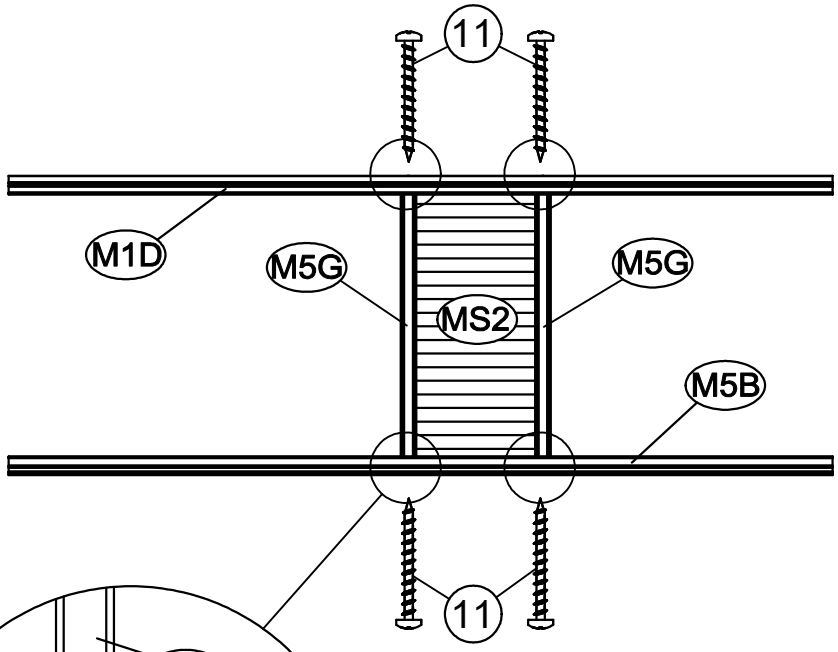

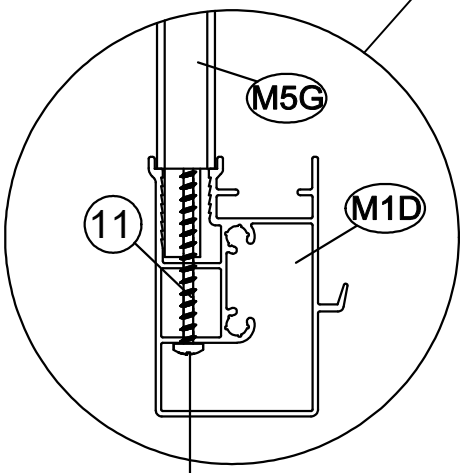

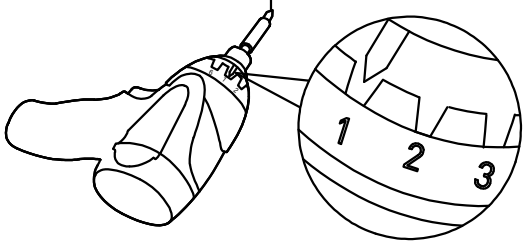


Select the low gear.

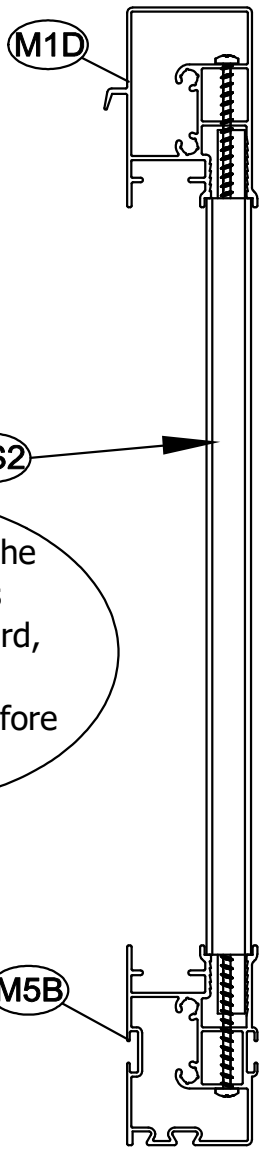


With the side of the PC panel that has text facing outward, remove the protective film before installation.


The door frame installation template is provided on pages 36 to 38. All following door frames should be installed according to this template.

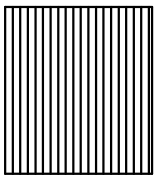


MS20 2x

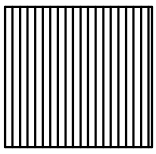

MS4 2x

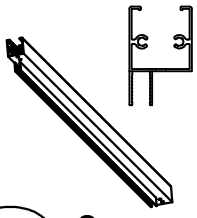

M4H 2x

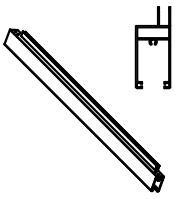


M4M 2x




M4x20

9 16x

AD 2x

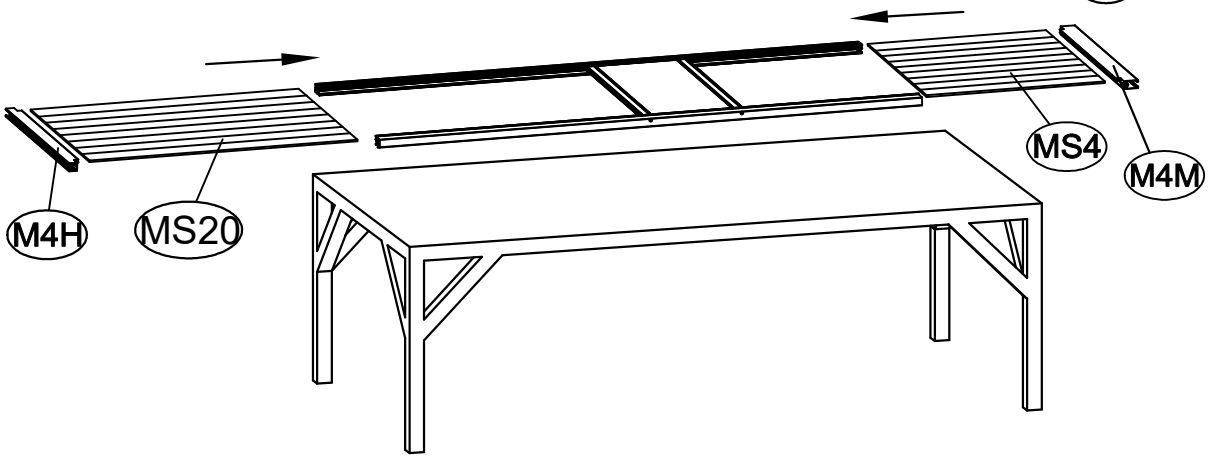

This picture is for reference in the following steps.

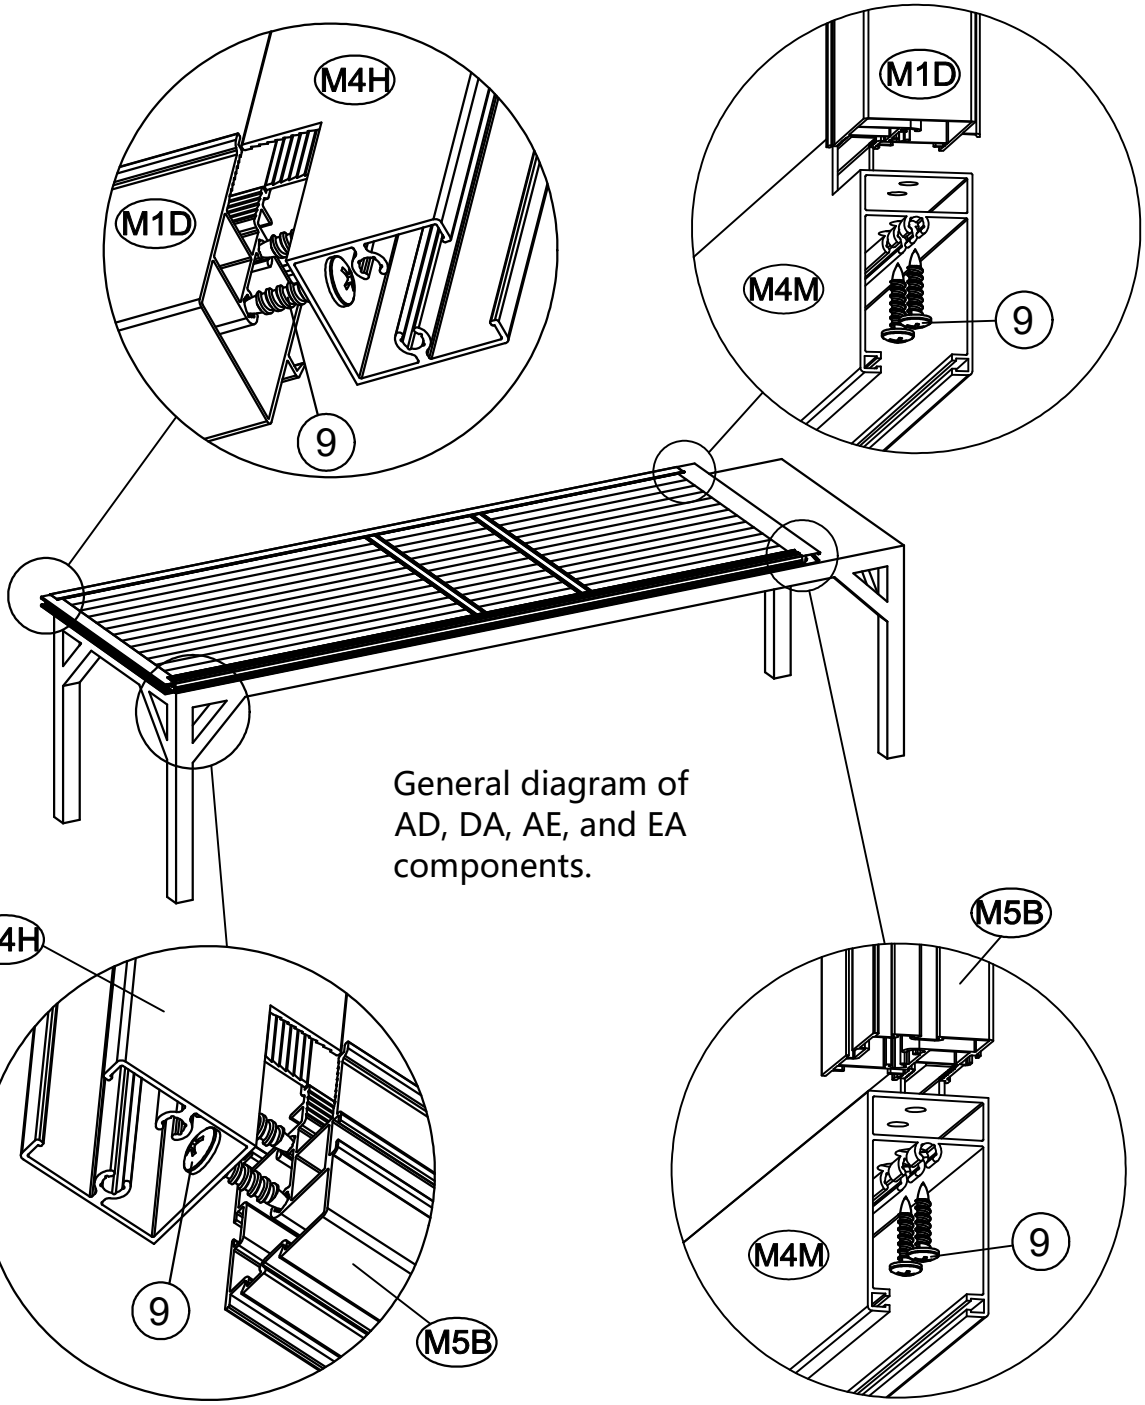


General diagram of AD, DA, AE, and EA components.

<28>

Door frame DA, EA, and AE installation: see pages 36–38.


M4H	2x
M4M	2x
M5G	4x
MS20	2x
MS2	2x
MS4	2x
M6B	2x
M2D	2x
11	8x
9	16x

DA 2x

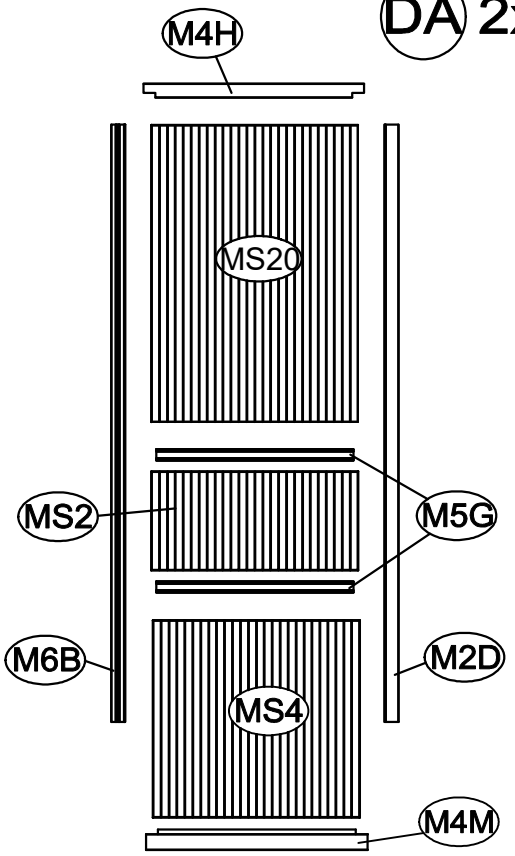


M6H	2x
M6M	2x
M7G	4x
MS22	2x
MS12	2x
MS10	2x
M5B	2x
M1D	2x
11	8x
9	16x

AE 2x

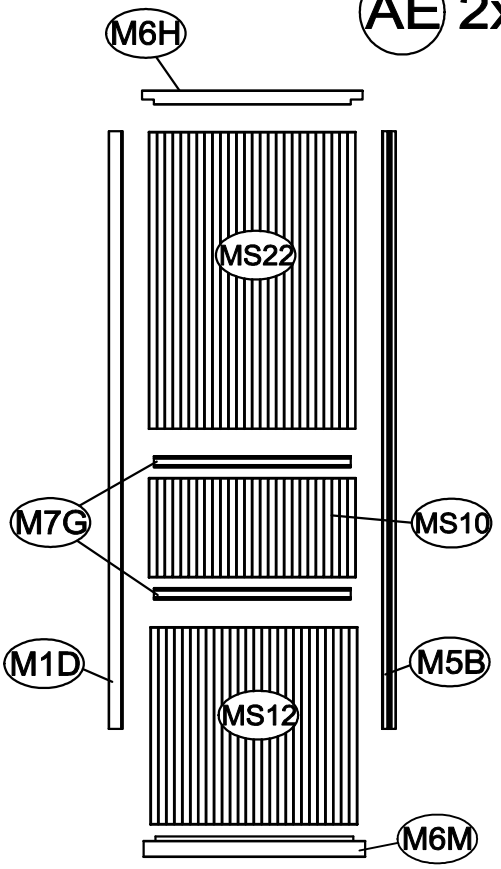

M6H	2x
M6M	2x
M7G	4x
MS22	2x
MS12	2x
MS10	2x
M6B	2x
M2D	2x
11	8x
9	16x


EA 2x

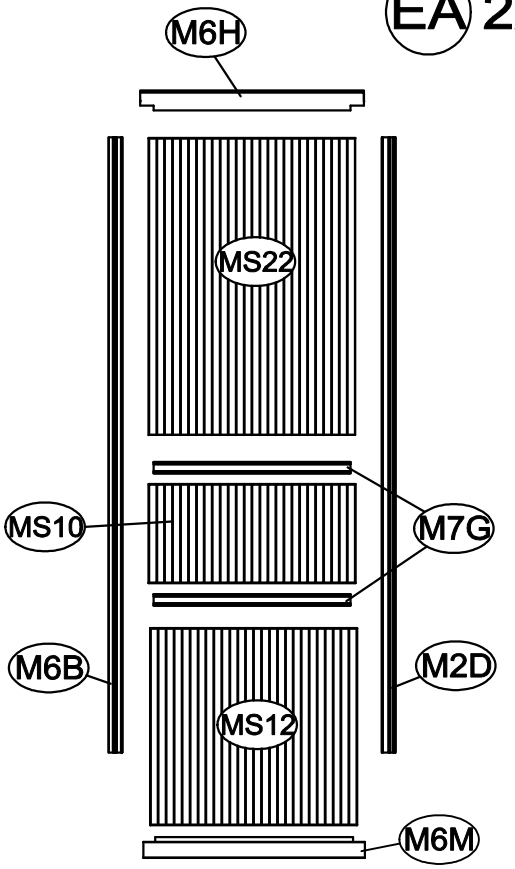


AD and DA are symmetrical components;
AE and EA are also symmetrical.




MD5 4x



MD4 4x

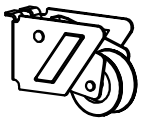


4-1 4x



M4x20


9 8x



M4x35

10 4x

AD 2x

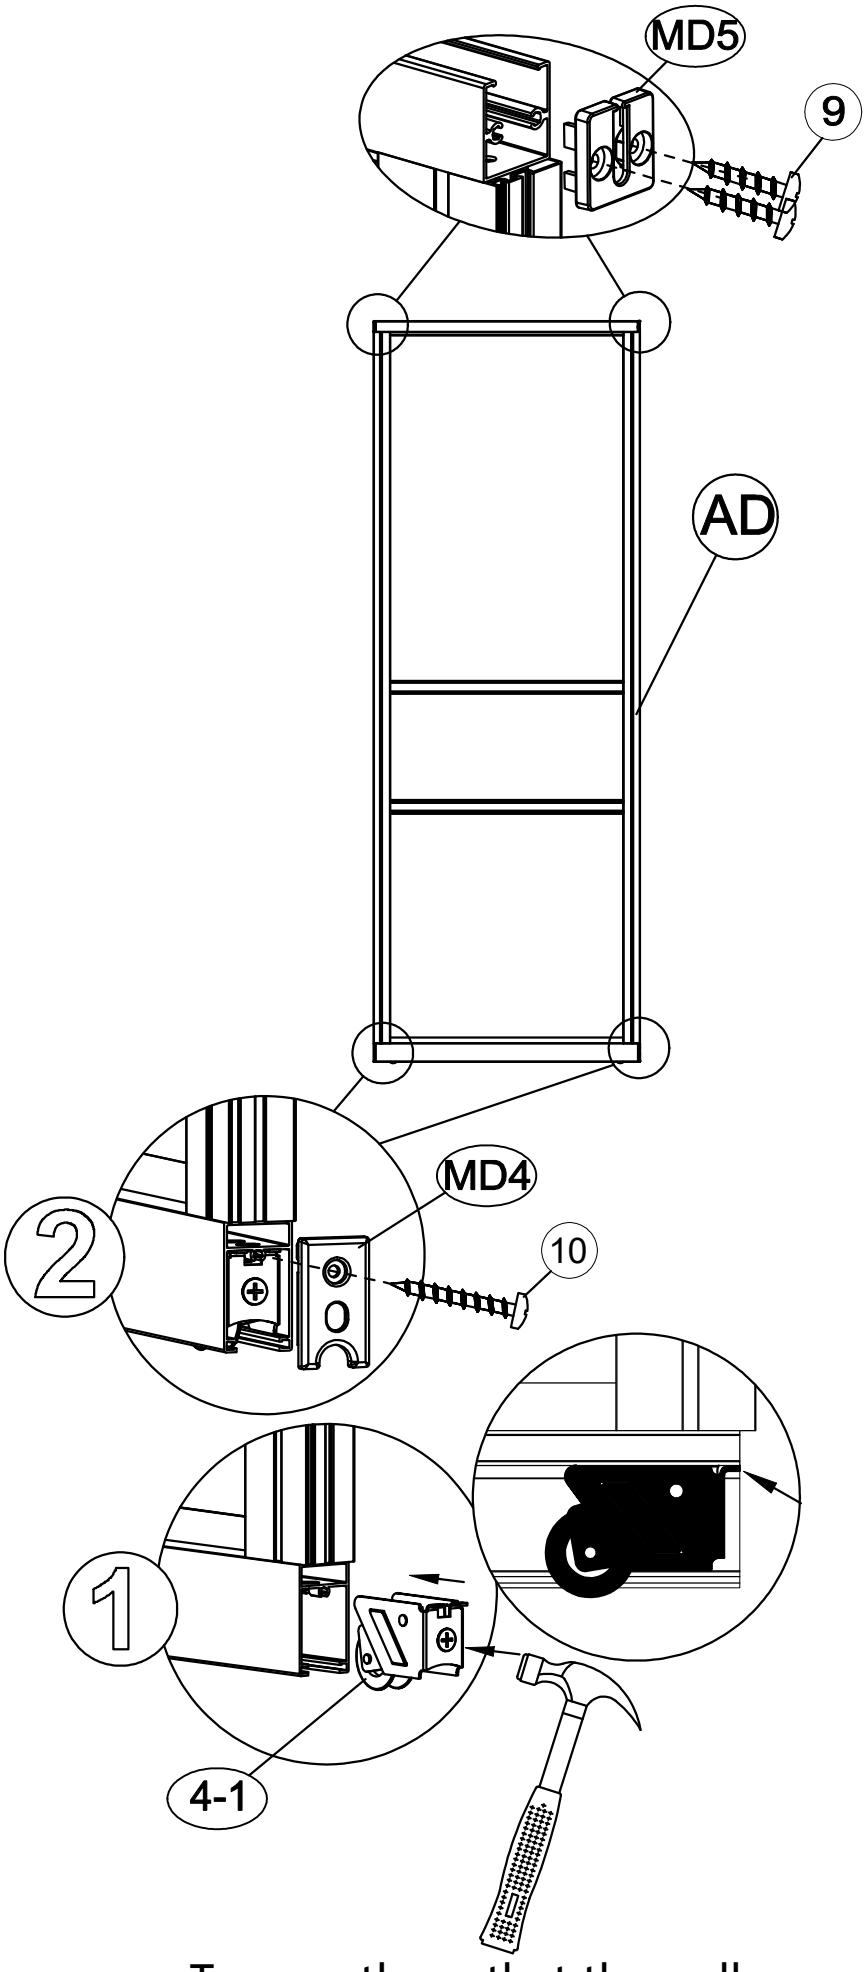


Tap gently so that the pulley is flush with the profile.

<30>

Door frame DA,EA, and AE installation: see pages 39–40.


MD4	4x
MD5	4x
4-1	4x
9	8x
10	4x

DA 2x

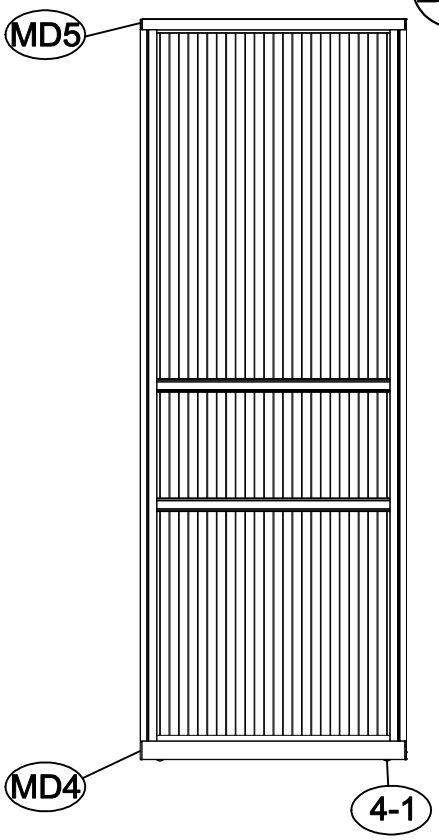


MD4	4x
MD5	4x
4-1	4x
9	8x
10	4x

AE 2x

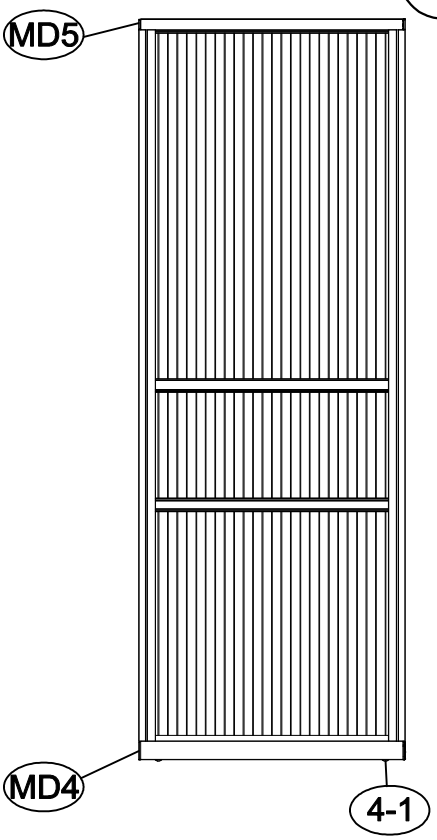


MD4	4x
MD5	4x
4-1	4x
9	8x
10	4x

EA 2x

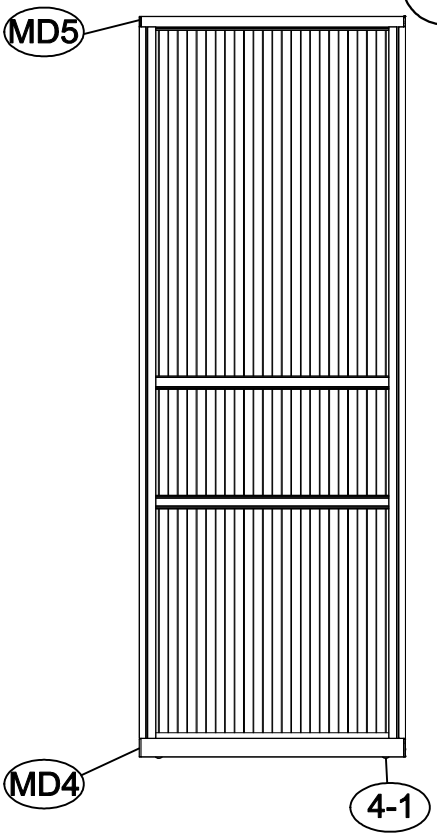




5-1 2x

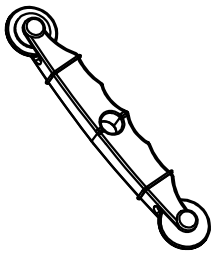


23 1x

<31>


Before installation, wet the rubber strips "5-1" with water to make it easier to stick into the slot.

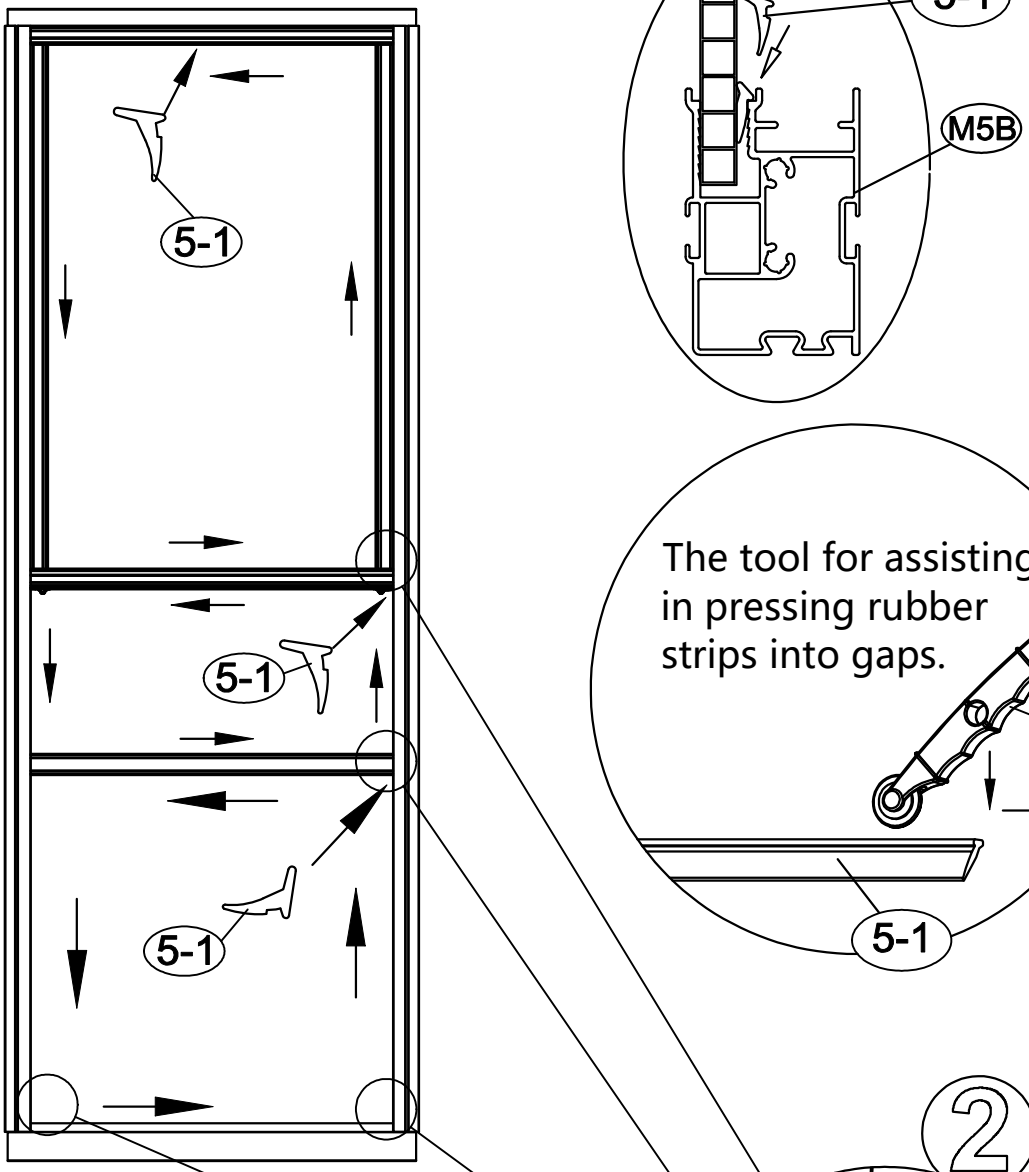


All door frames, AB, BA, AC, CA, AD, DA, AE, EA,AF,AG, follow this method.

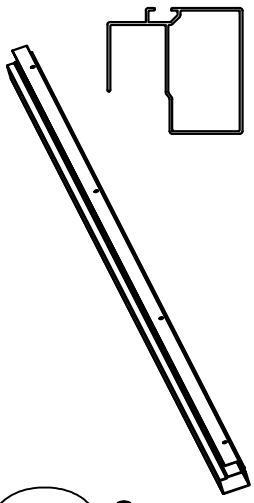

M4V 2x

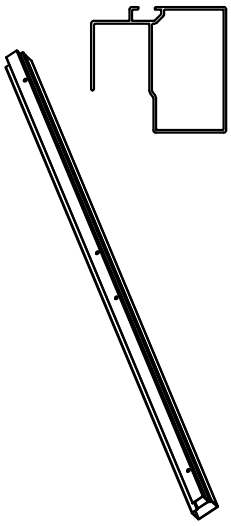


M6V 2x



6.2*11*15

3-1 16x



M6


8 16x





M6x15


1 16x

42

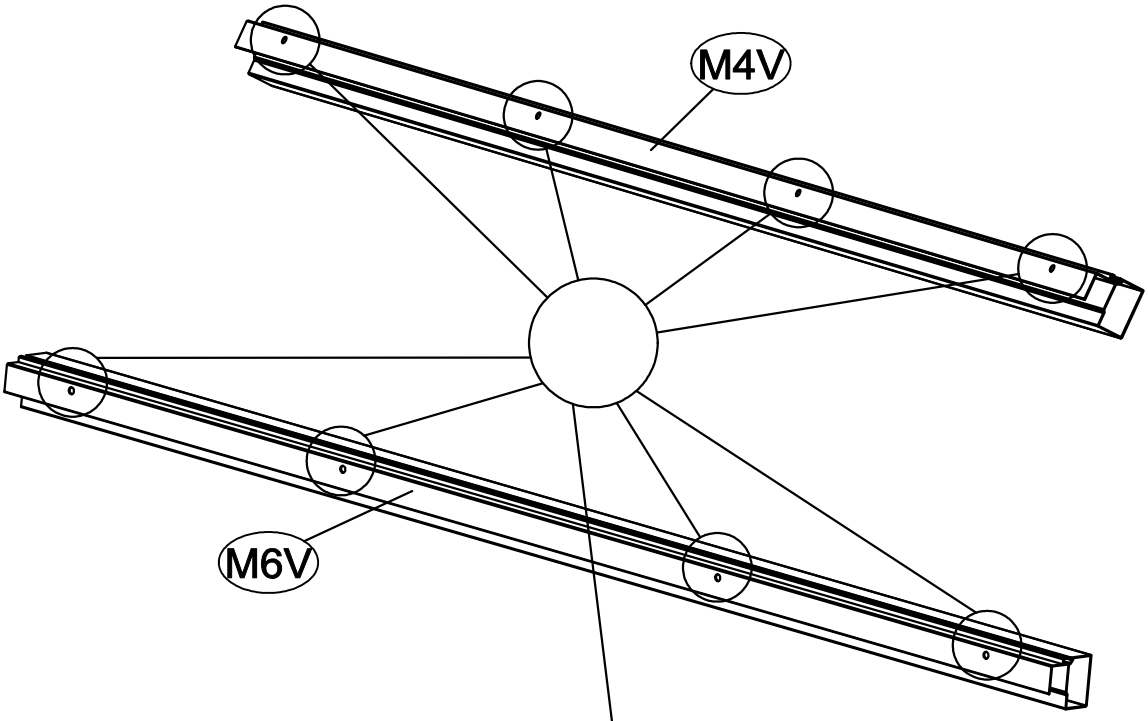

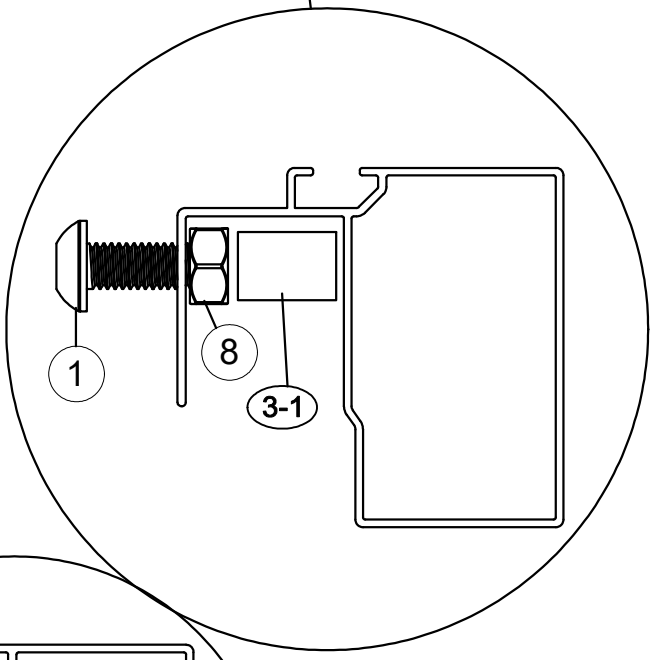

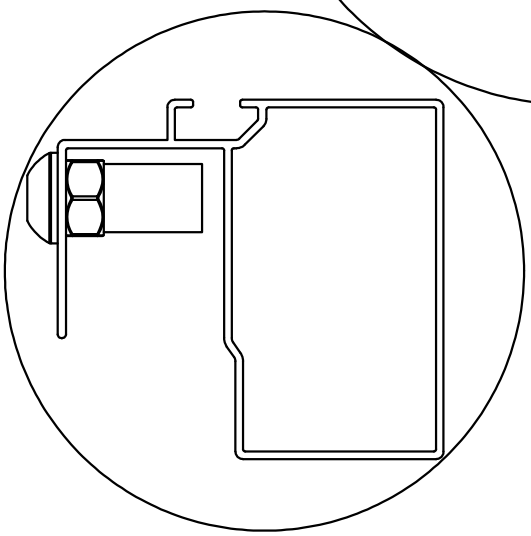

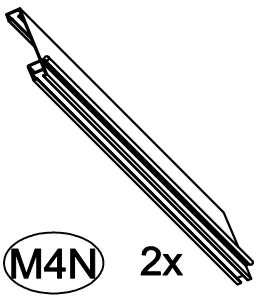

M4N 2x




12 12x




M5*6

13 48x

<33>

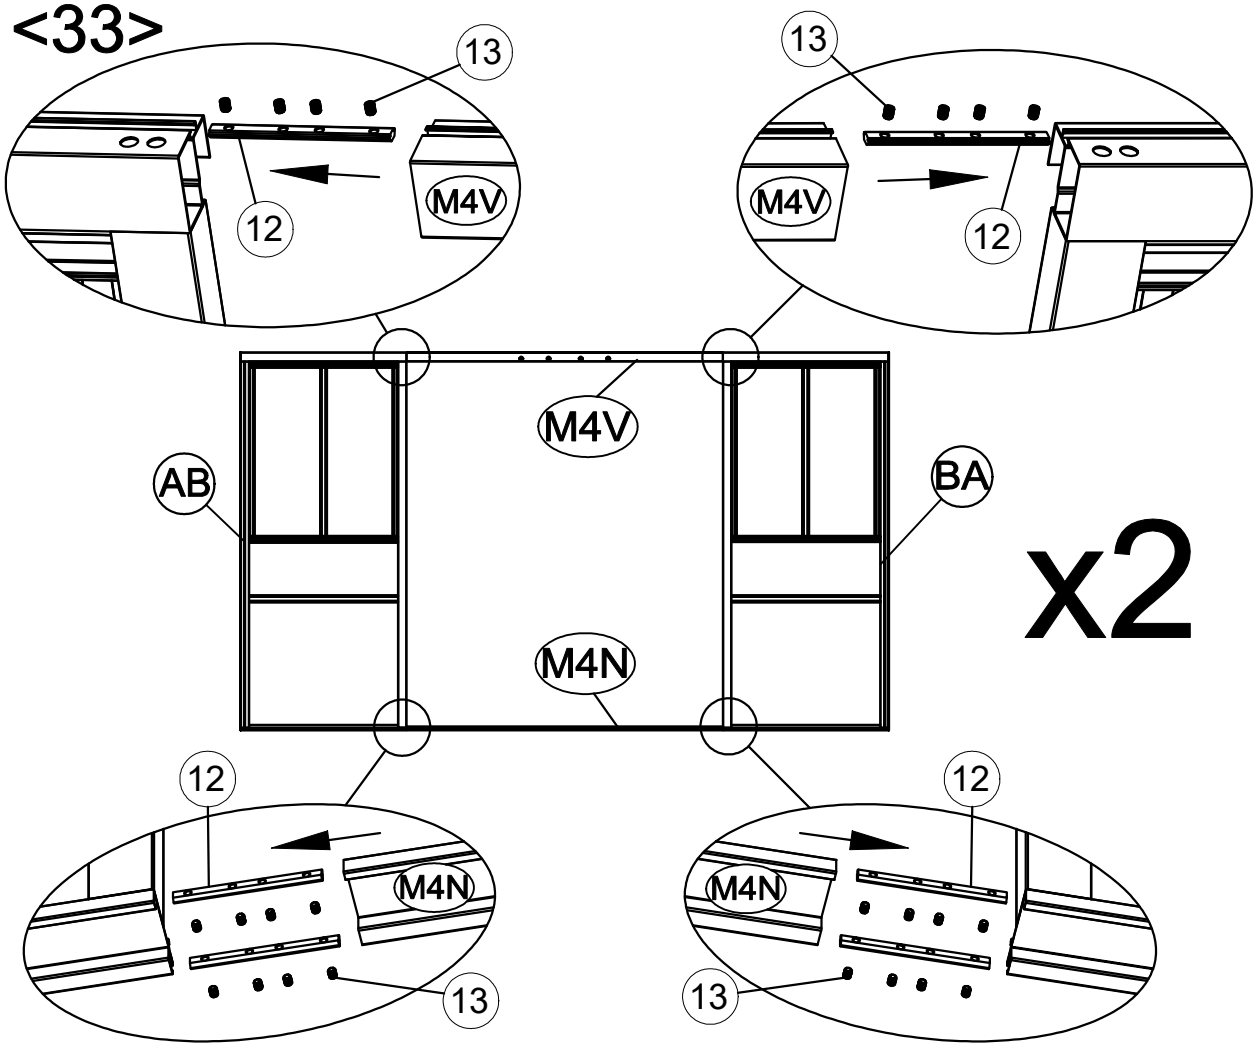

x2

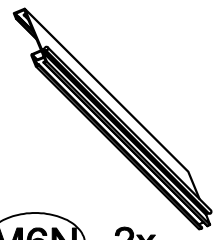

M6N 2x




12 12x




M5*6


13 48x

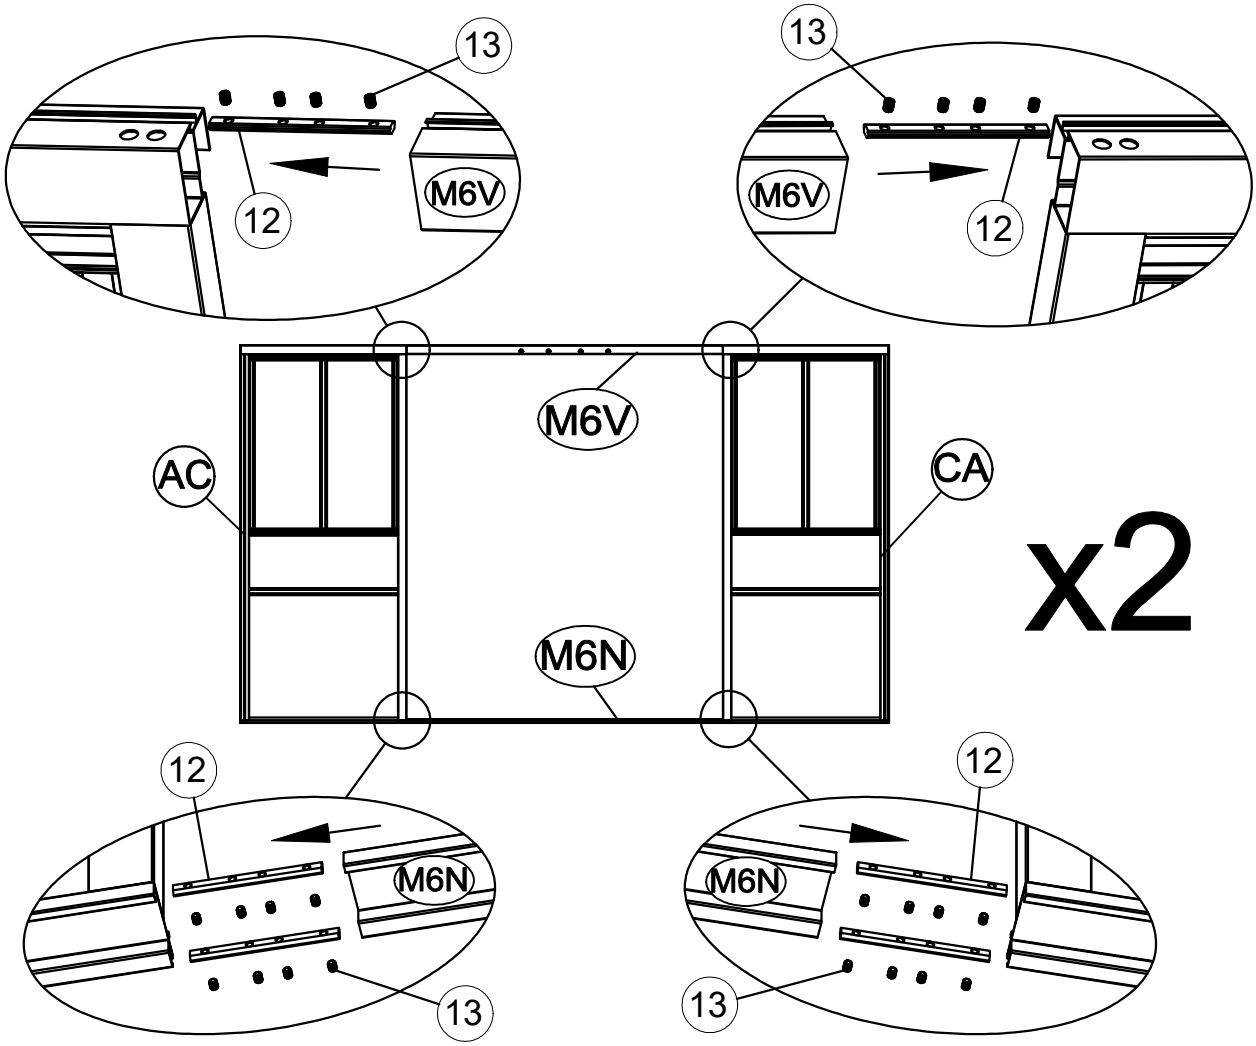



x2


<34>

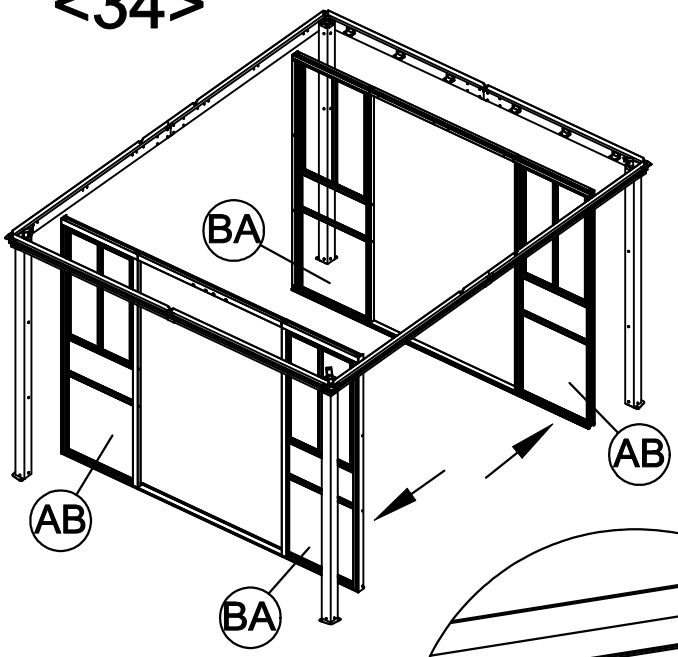

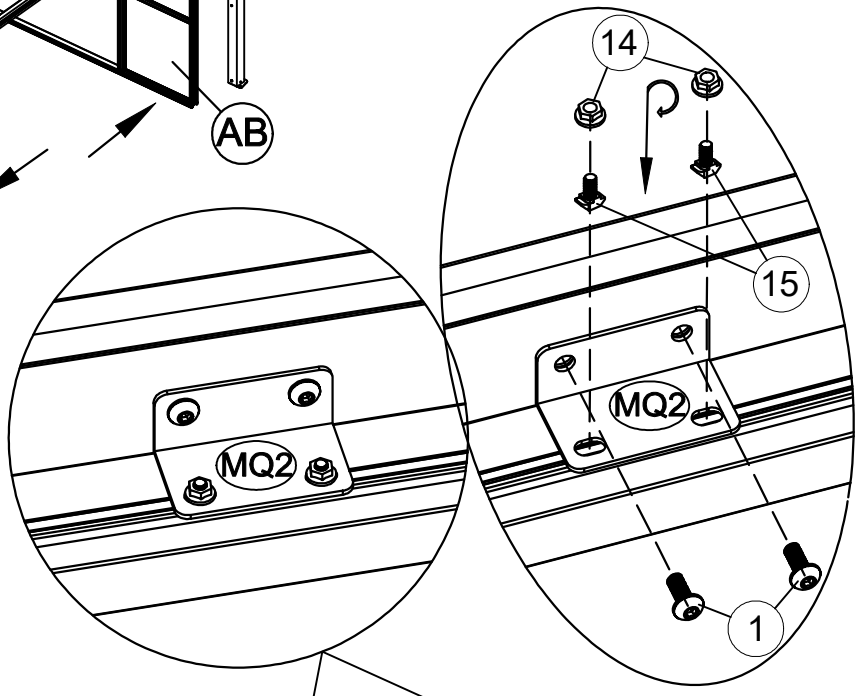


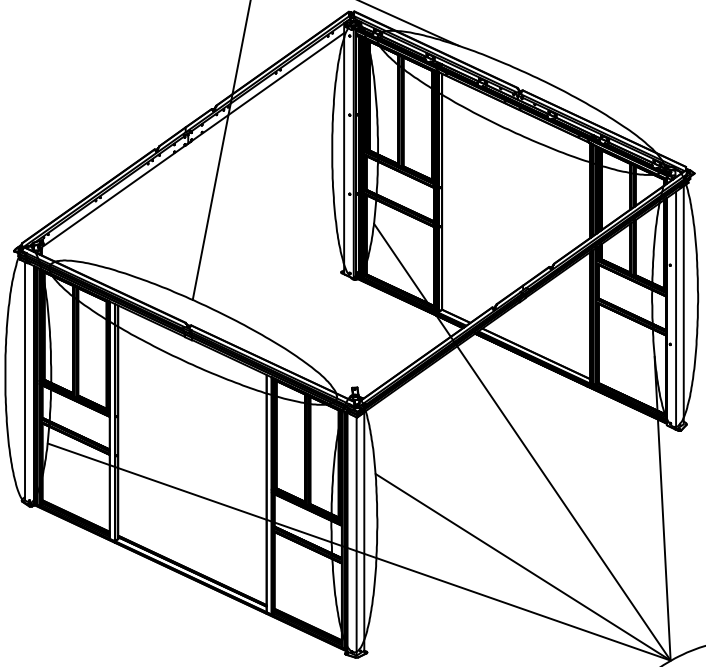

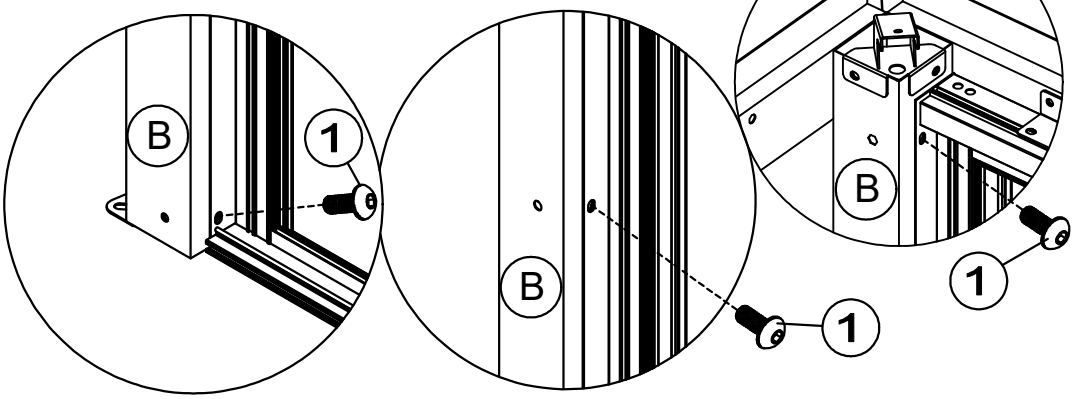



MQ2 12x



M5x12

15 24x



M5

14 24x





M6x15


1 40x


44


<35>

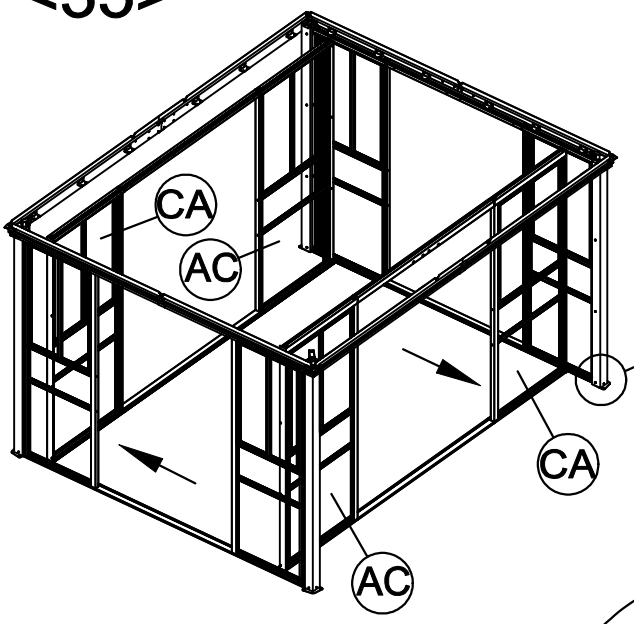


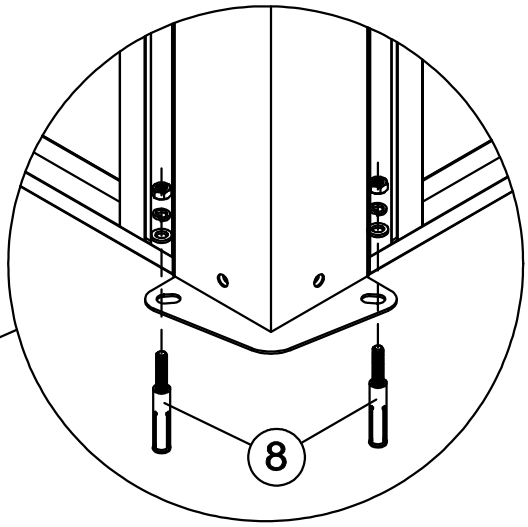

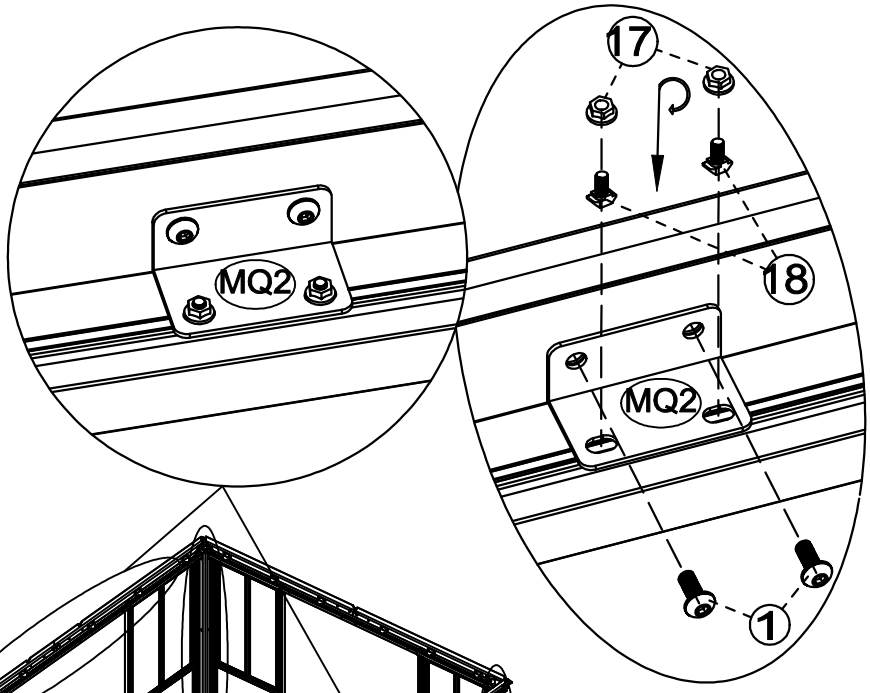


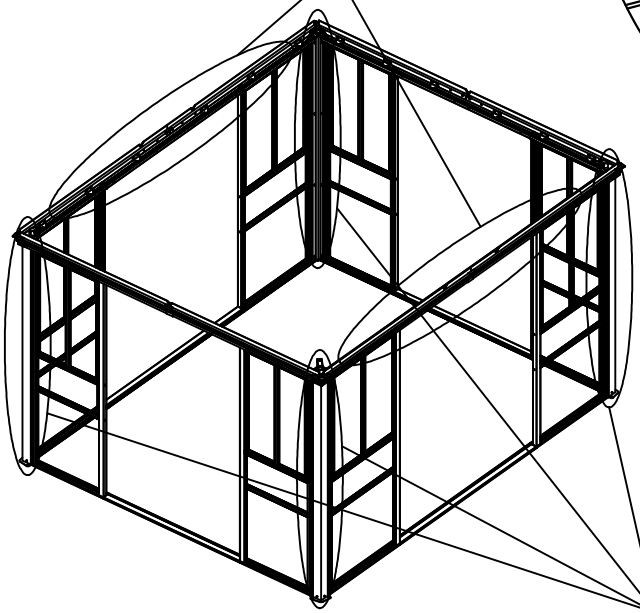

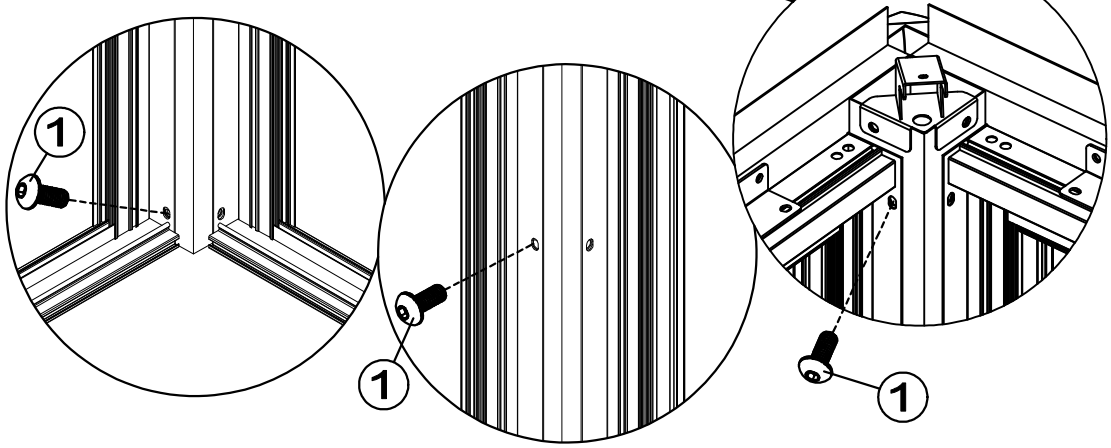


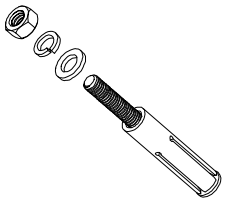

20 8x



MQ2 12x



M5x12

15 24x



M5


14 24x



M6x15

1 40x

45

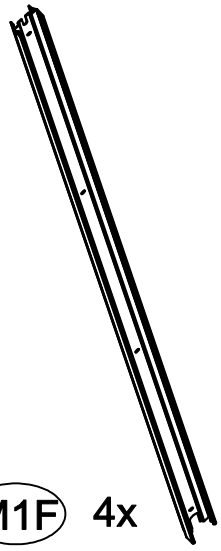

M1F 4x


ST4.8x12


3 16x

<36>

DA 2x EA 2x

Pay attention to the installation direction of the left and right sides of the door.

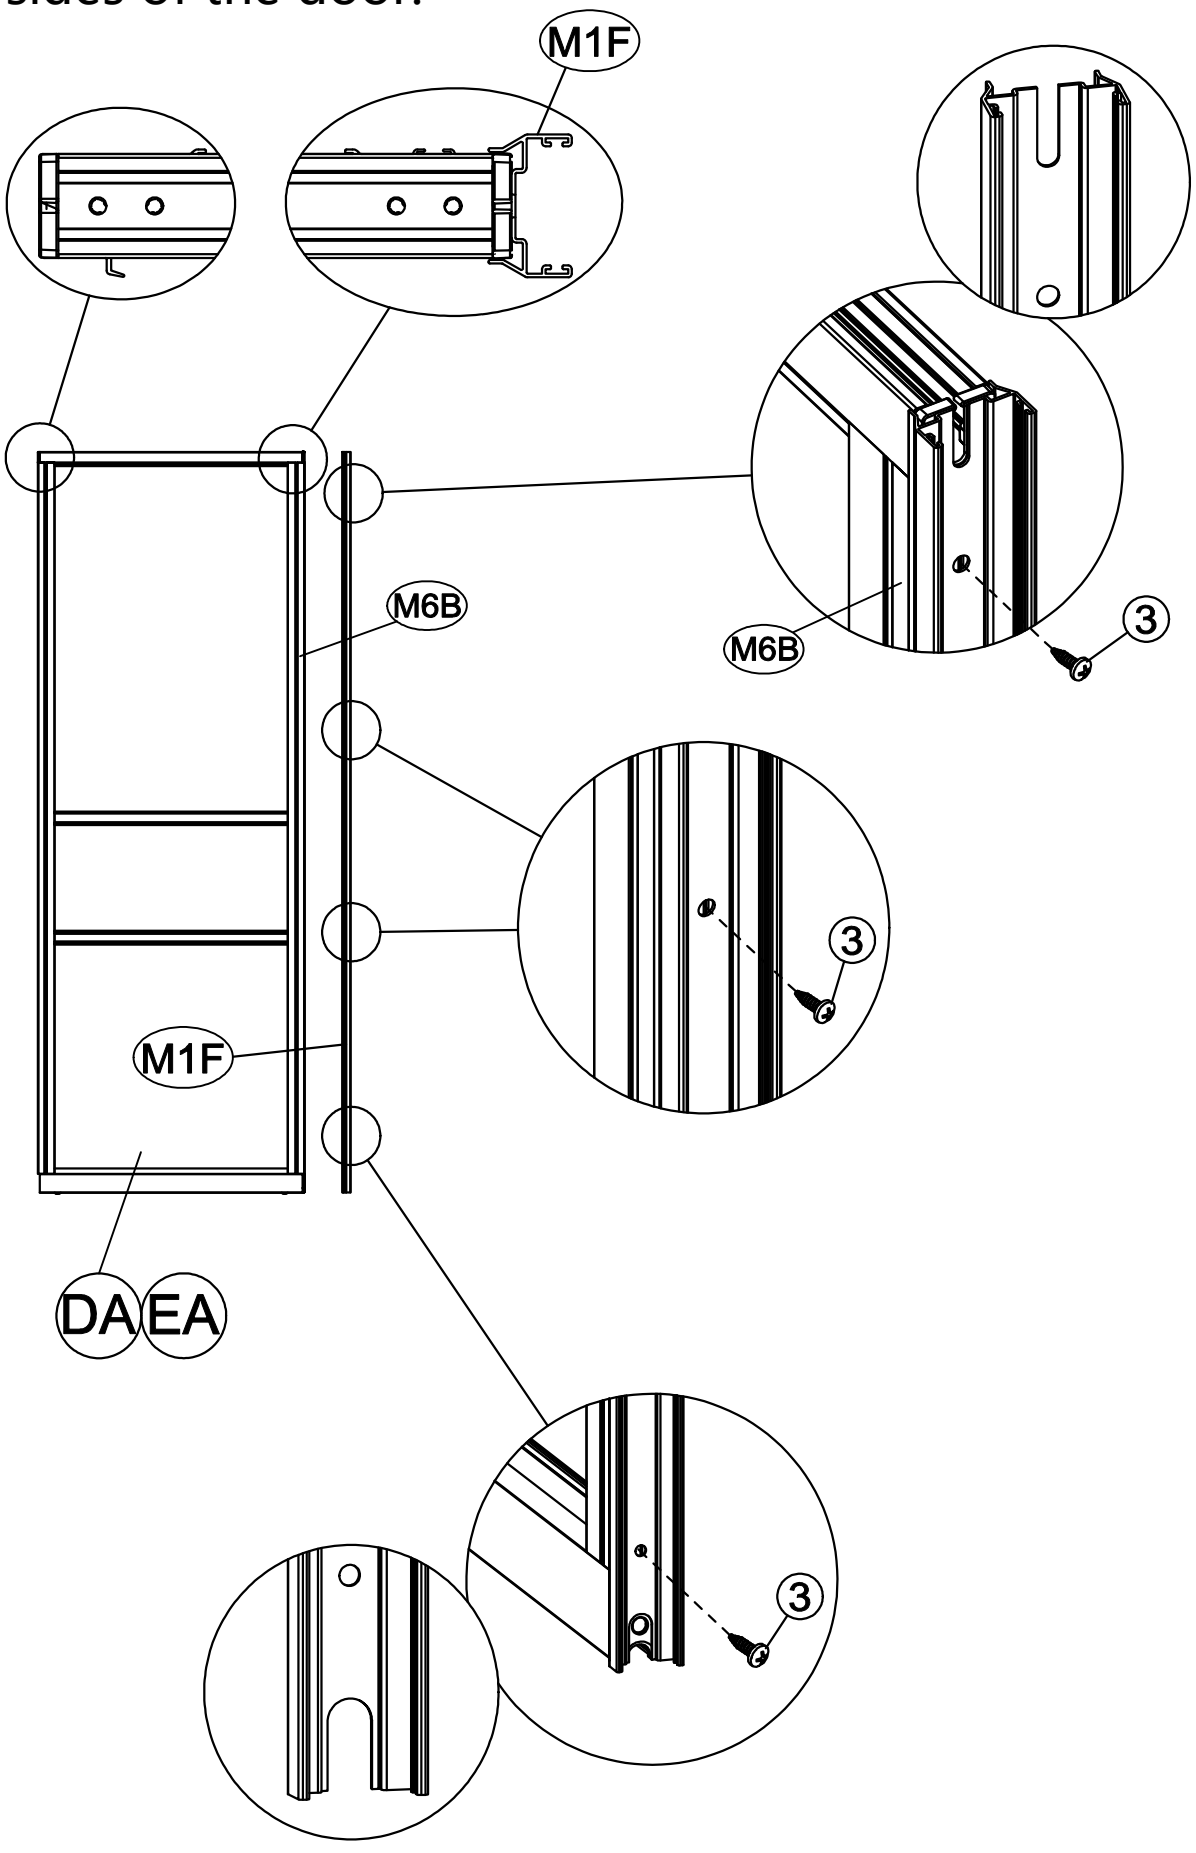




U1 4x



U2 4x




U3 4x




M4x12

22 4x

DA 2x EA 2x

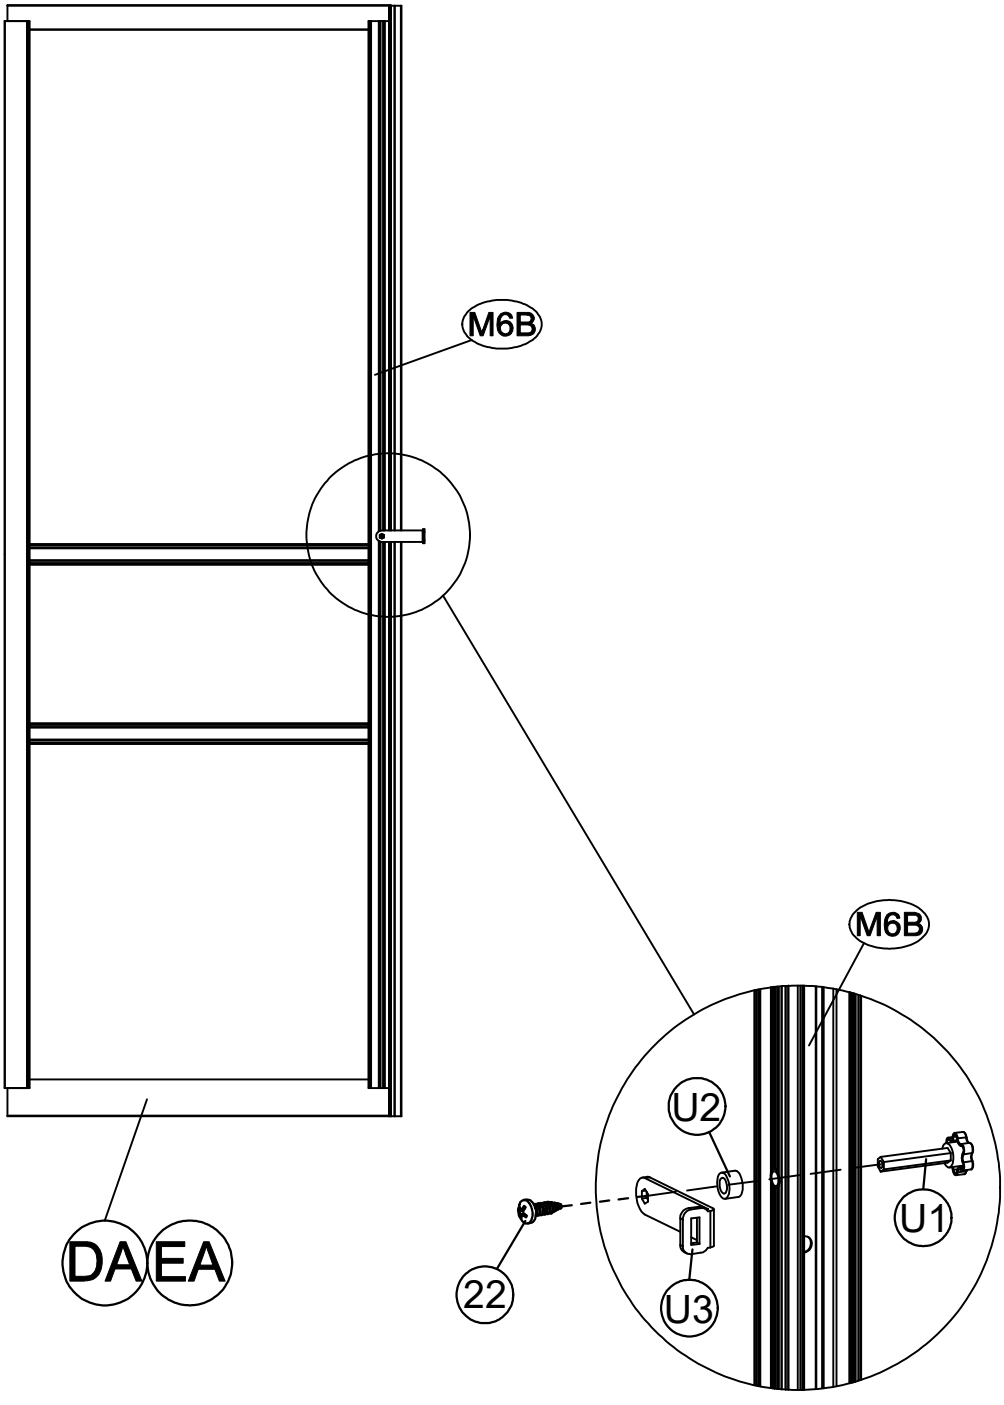



U4 4x




M5x15


21 16x

<38>


AD 2x AE 2x

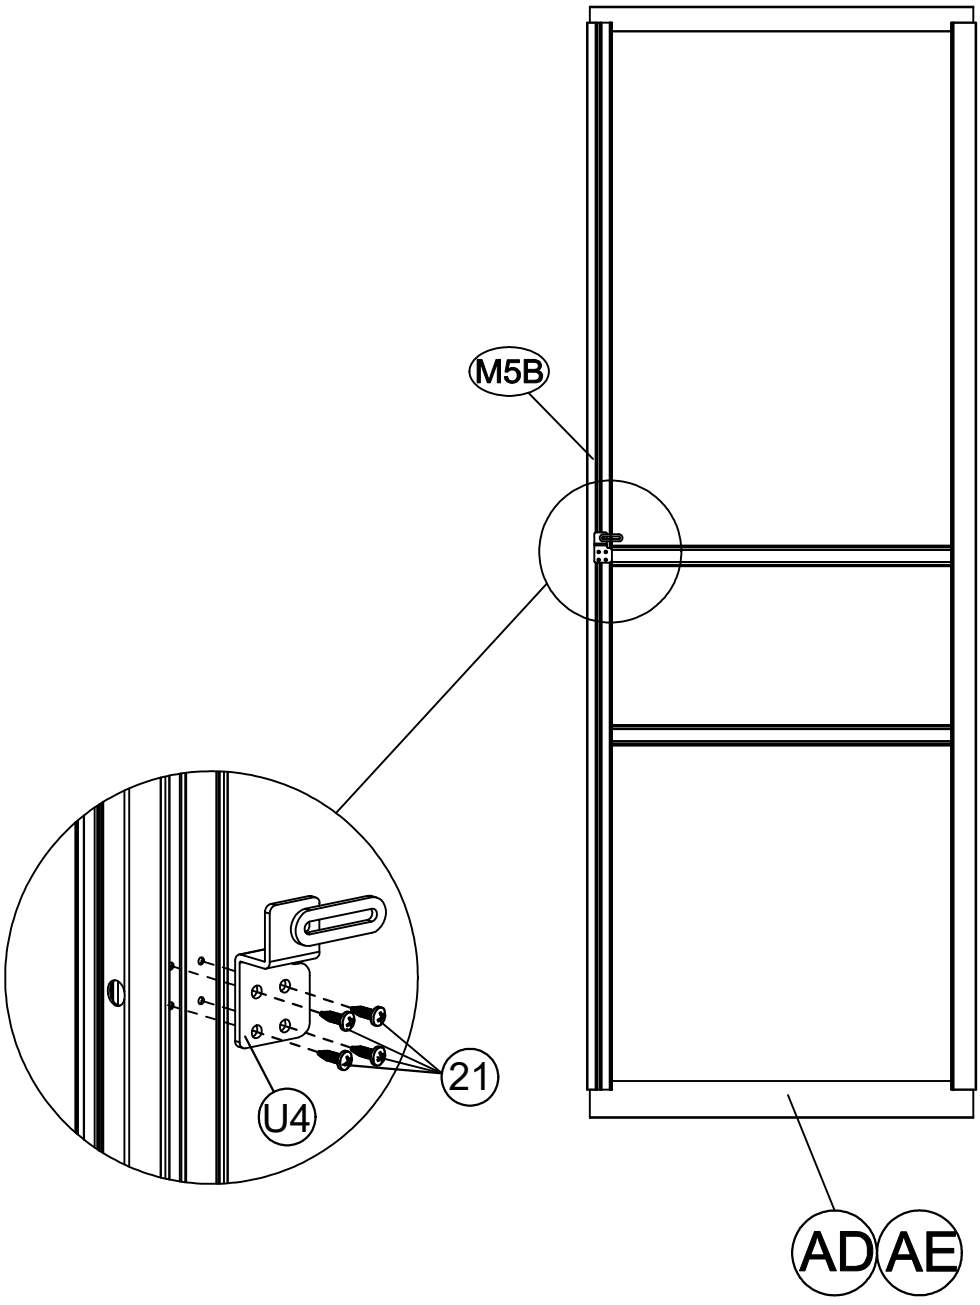


<39>

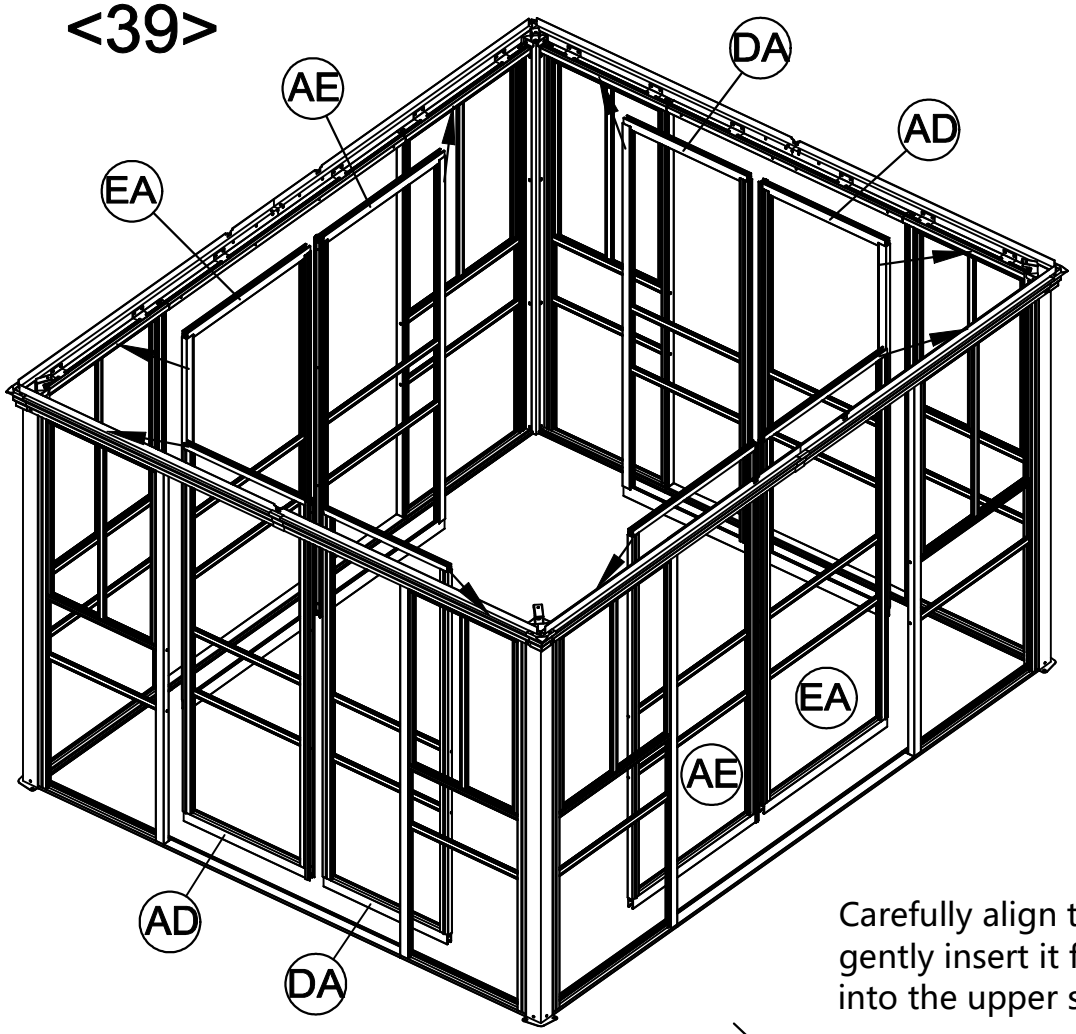


Carefully align the door and gently insert it from the inside into the upper slot.

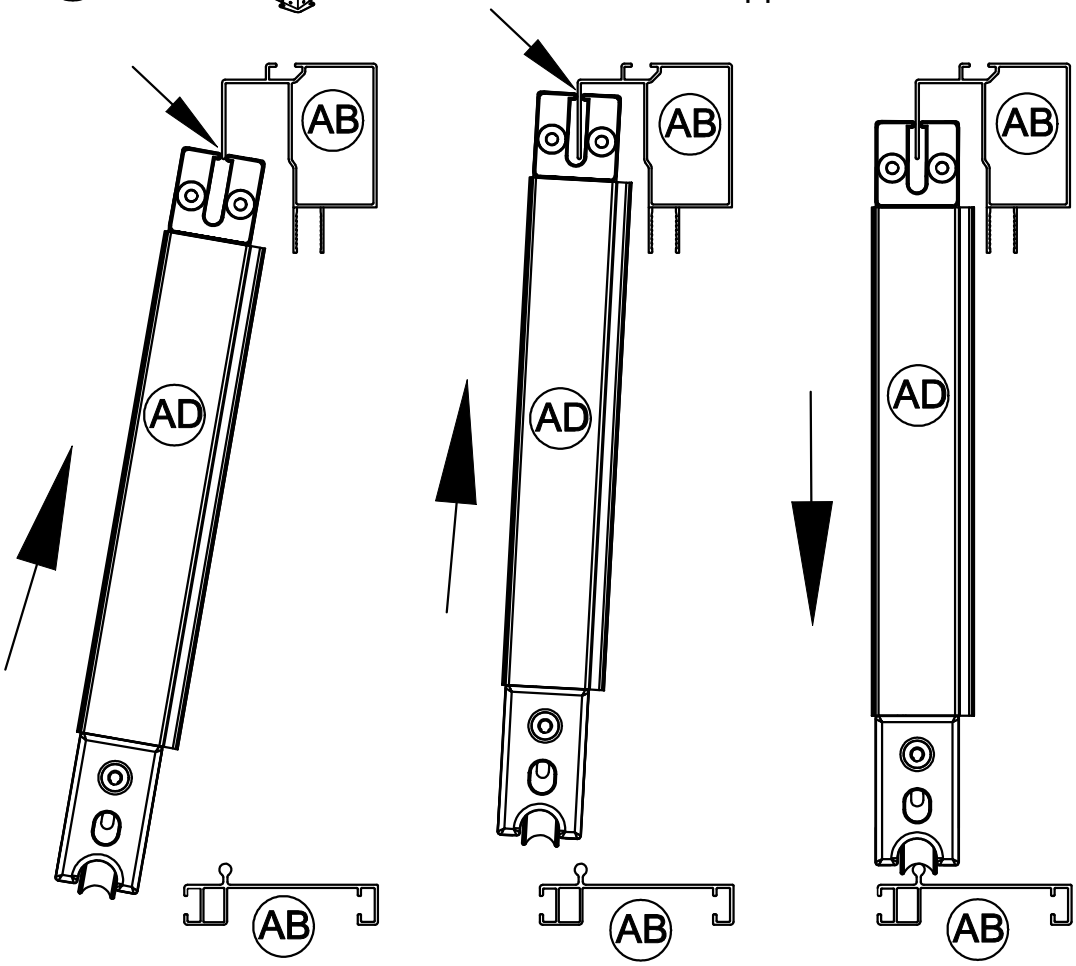

Repeat the previous steps for other components.

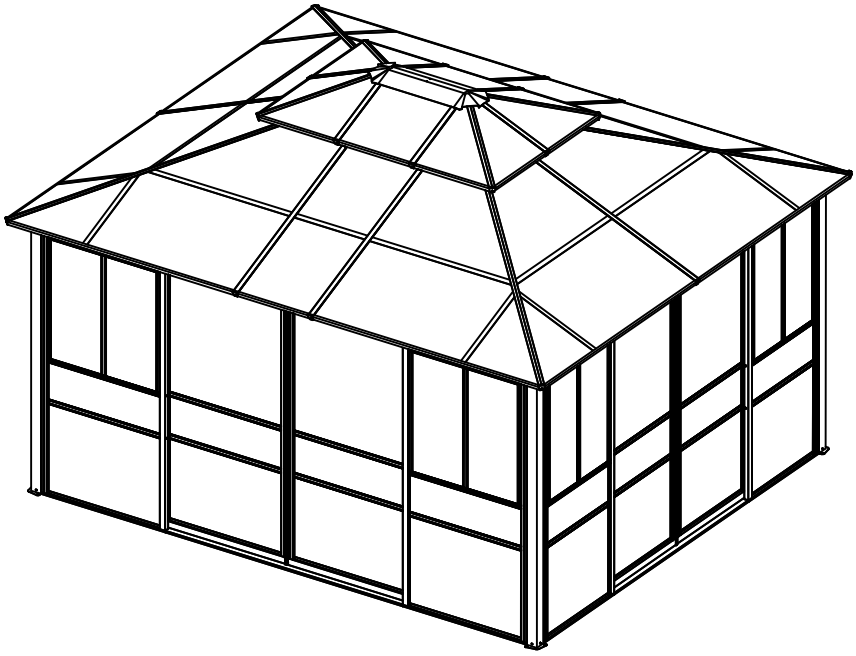

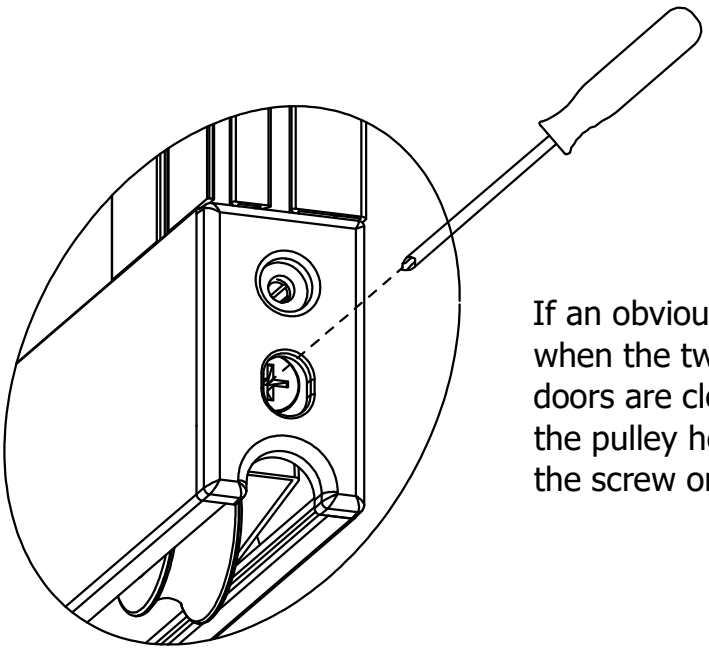

If an obvious gap is found when the two sliding doors are closed, adjust the pulley height using the screw on the pulley.

<41>

