




Fits right, always tight, safe & durable.

Installation Guide


TOOLS REQUIRED:
Wrench or Pliers
Thread seal tape (included)

1

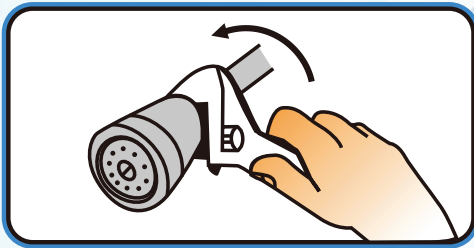


1.) Remove old shower head with a wrench or pliers. Clean all debris around the shower arm threads. (If shower arm has permanently installed ball joint, replace it with a stand 1/2" shower arm).

2

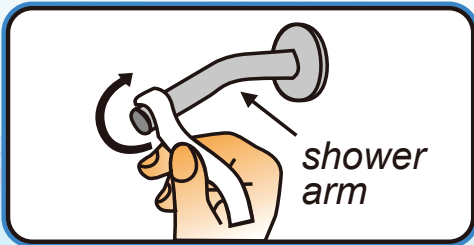

2.) Apply thread seal tape (provided) onto the threads of the shower arm.

3

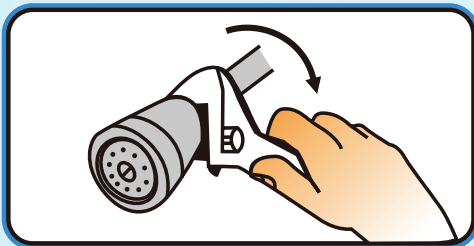

3.) Thread shower head onto shower arm. Tighten shower head with a wrench or pliers. Use a cloth under tool to protect finish of shower head.