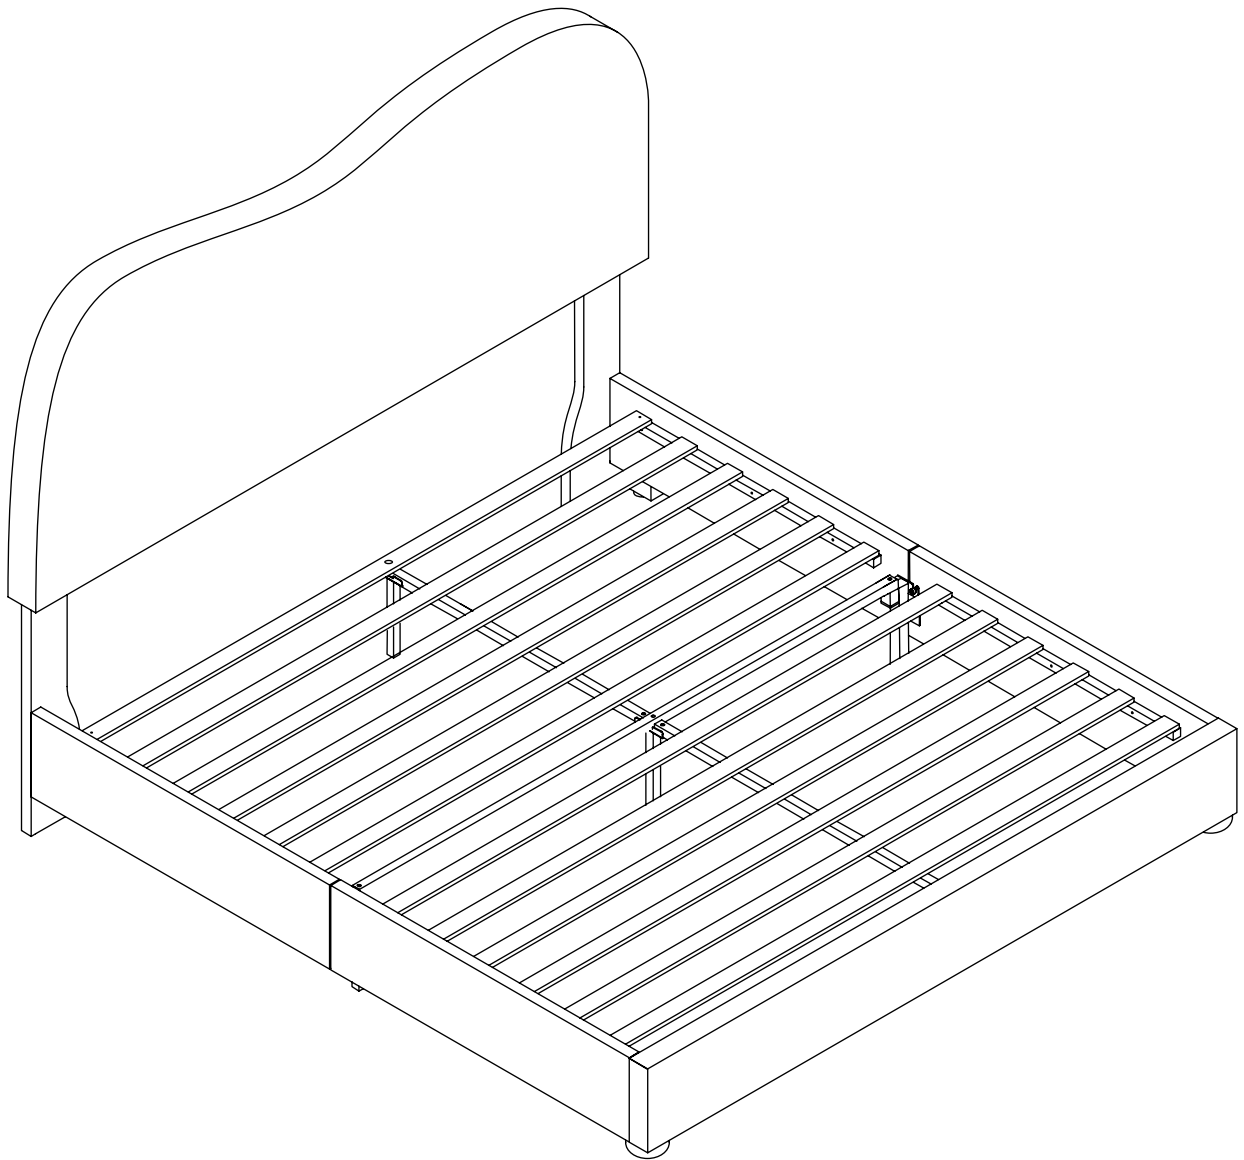


Assembly Instruction

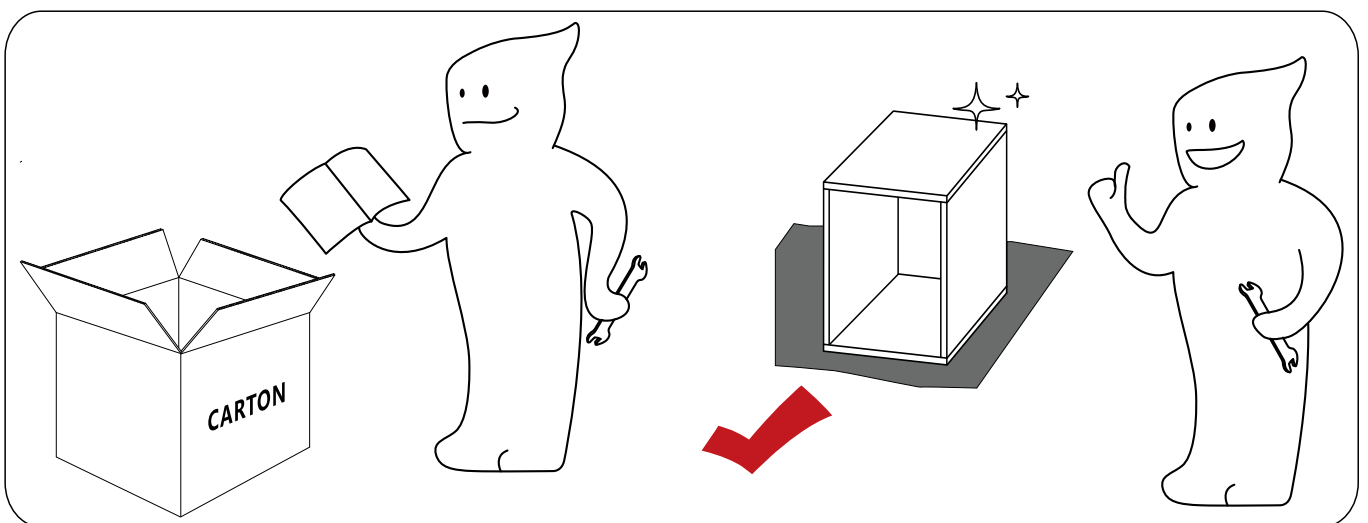
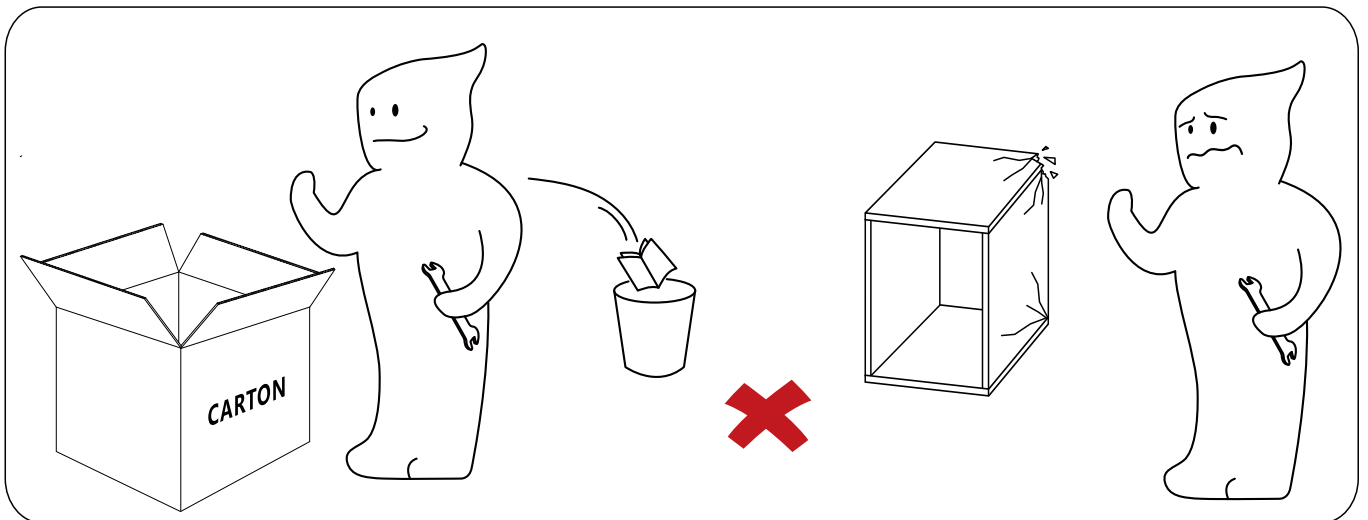


Please check that you have all the parts listed before you start assembling, if you do find that something is missing, do not continue assembly, please contact us immediately.

NOTE: Please do not completely tighten all the hardware until the entire assembly is complete!


! IMPORTANT

Please follow the instruction manuals and use a pad to protect the product during your assembly.




Note:














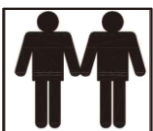
1. Should be assembled on flat ground to keep balance.
2. Before completing the installation, do not tighten the screws.













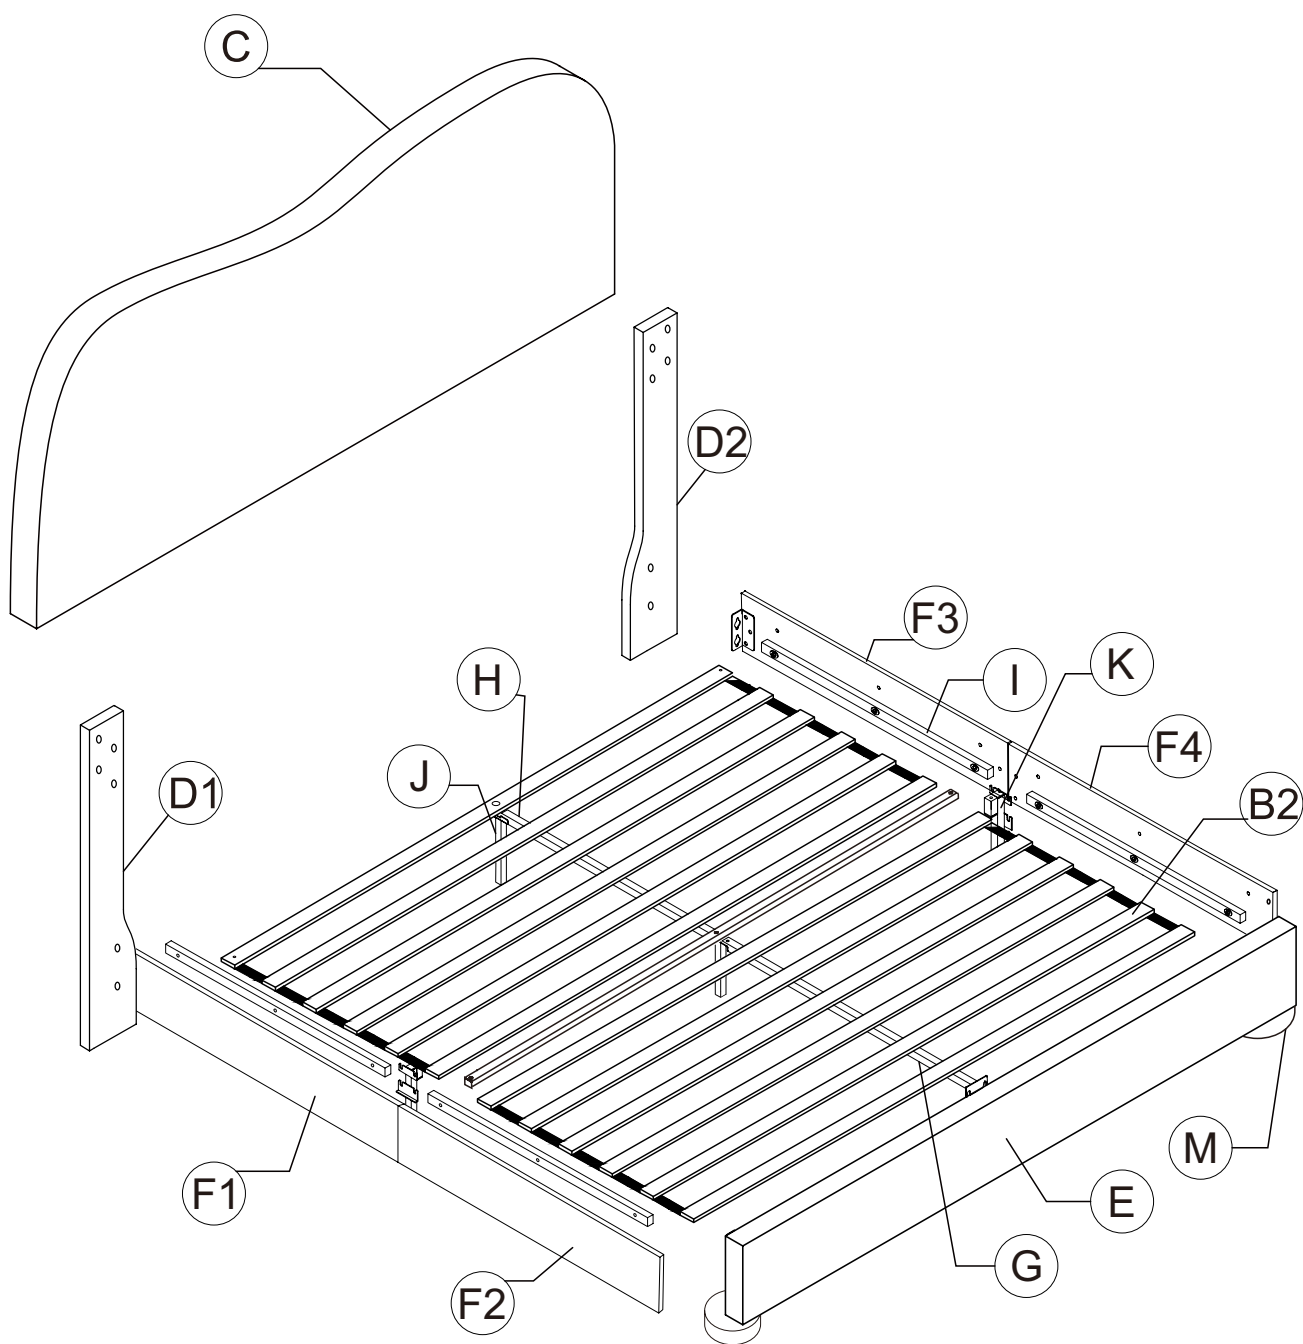
For easier and better assembly, **2** or more adults are required.



BED FRAME PARTS LIST

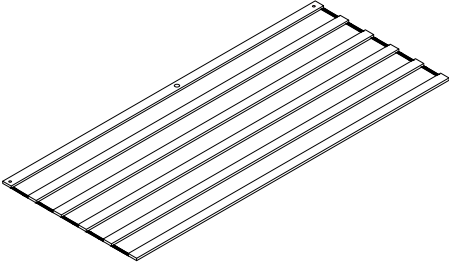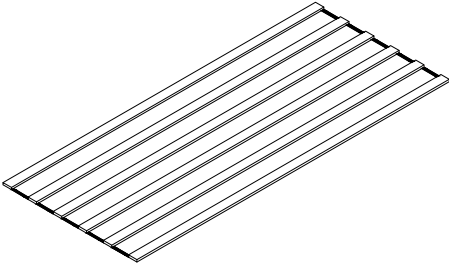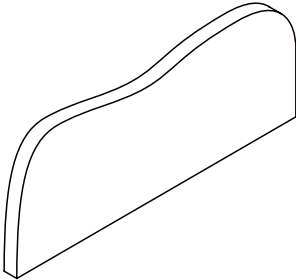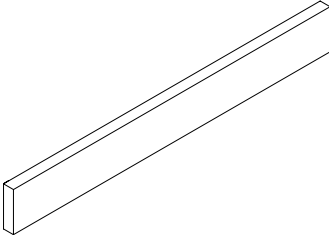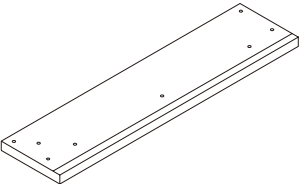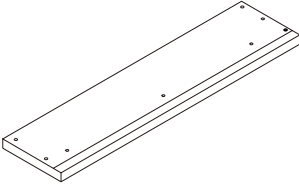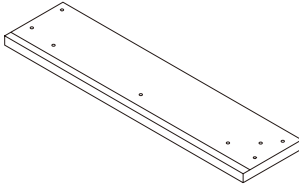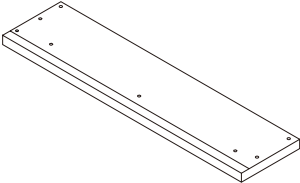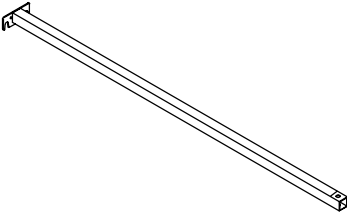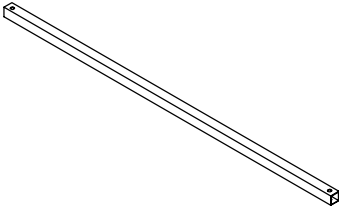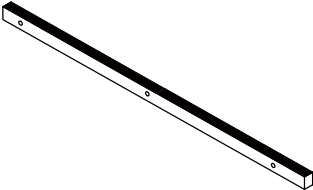B1  Slat 1PC	B2  Slat 1PC	C  Footboard 1PC
D₁  Left Leg 1PC	D₂  Right Leg 1PC	E  Footboard 1PC
F1  side rail 1PC	F2  side rail 1PC	F3  side bar 1PC
F4  side bar 1PC	G  Middle behind support bar 1PC	H  Middle front support bar 1PC
I  Side bar 4PCS	J  Middle support leg 2PCS	K  Bed side support leg 2PCS

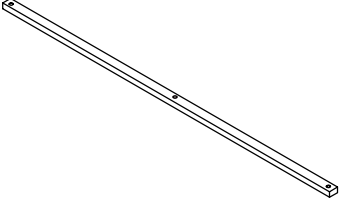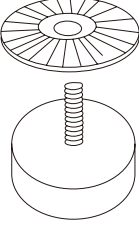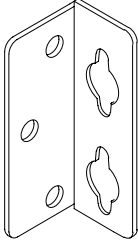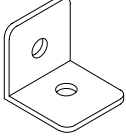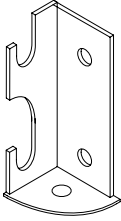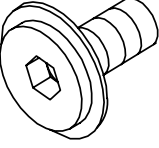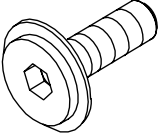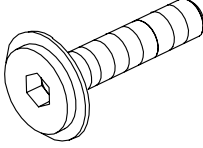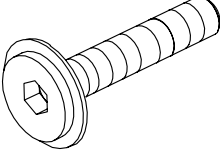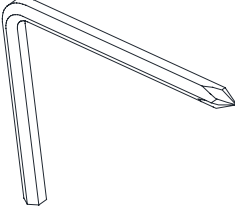FITTING PART LIST

L	1PC	M	2PCS	N	2PCS	O	2PCS
							
Cross bar		Foot		Connector-N		Connector-O	
P1	1PC	P2	1PC				
							
a	28PCS	b	4PCS	c	17PCS	d	9PCS
							
M8*18		M8*25		M8*35		M8*55	
e	2PCS	f	2PCS	g	1PC		
							
M4*35							

step1

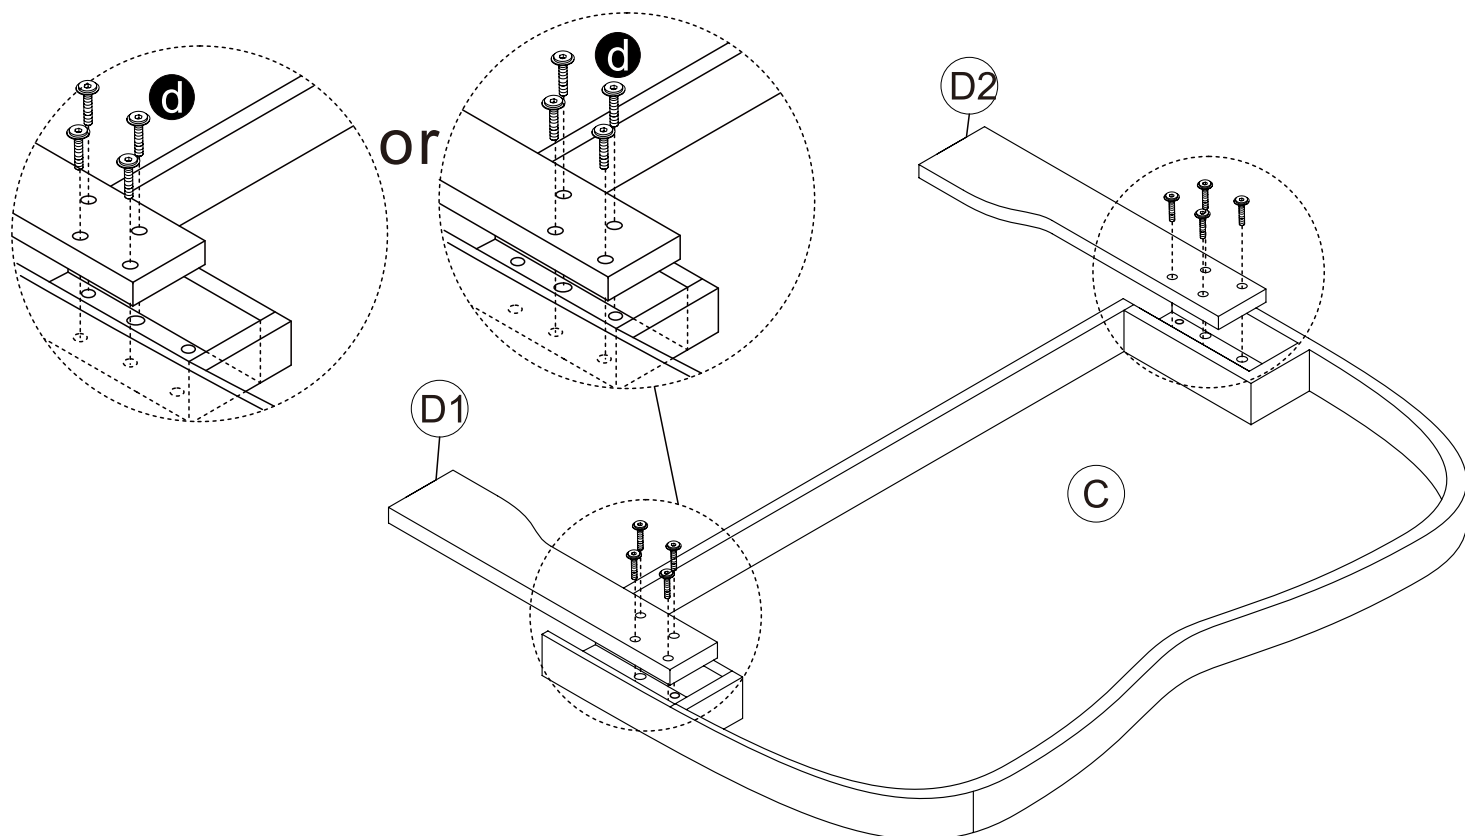
d



M8*55

8PCS

As shown in the figure, the headboard height can be adjusted by locking the support legs to different holes on the headboard for a 2-inch height adjustment.




step2

b



M8*25

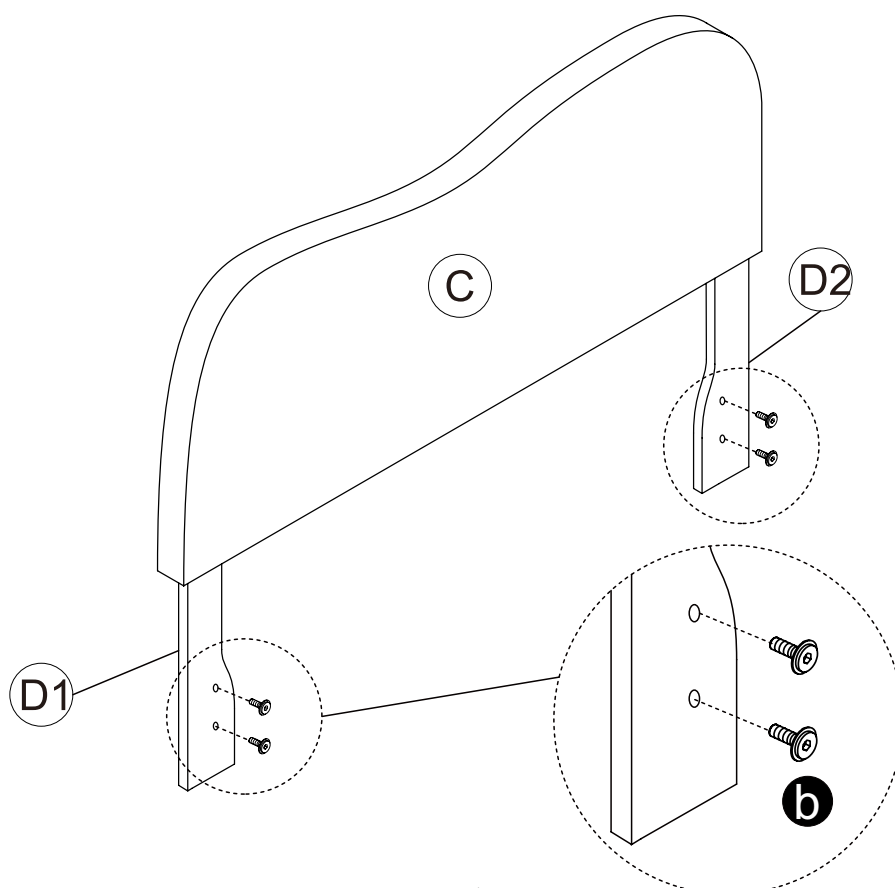4PCS




step3

a



M8*18

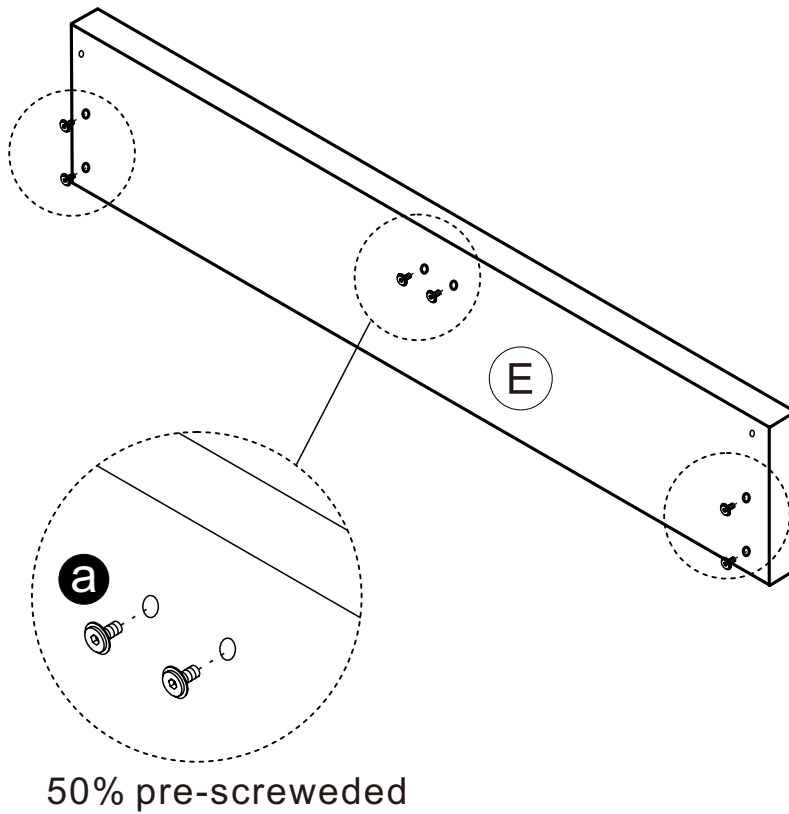6PCS




step4

a




M8*18

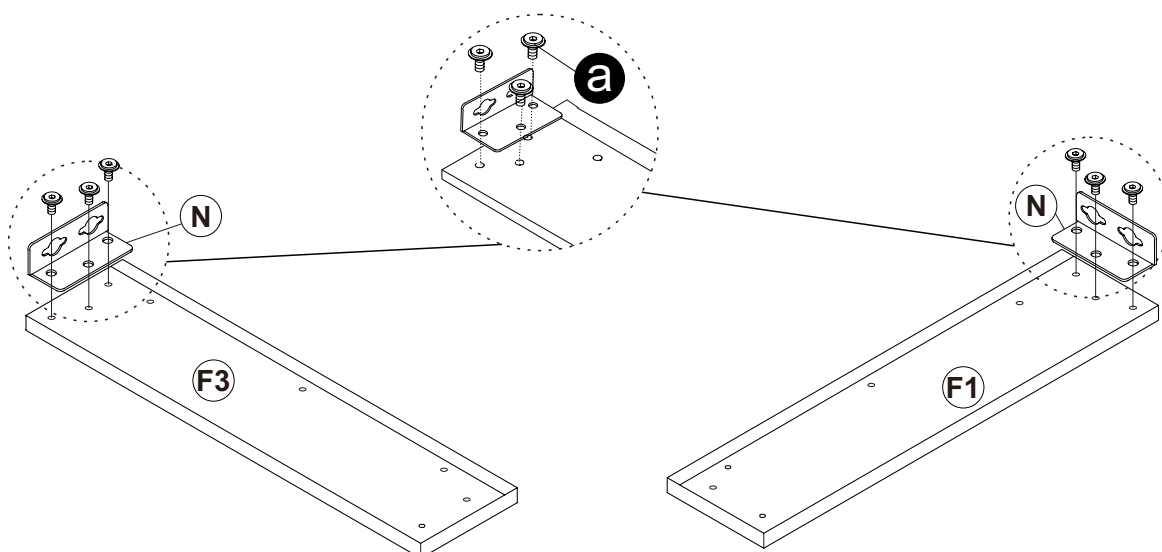6PCS




step5

a	 M8*18	4PCS
---	--	------

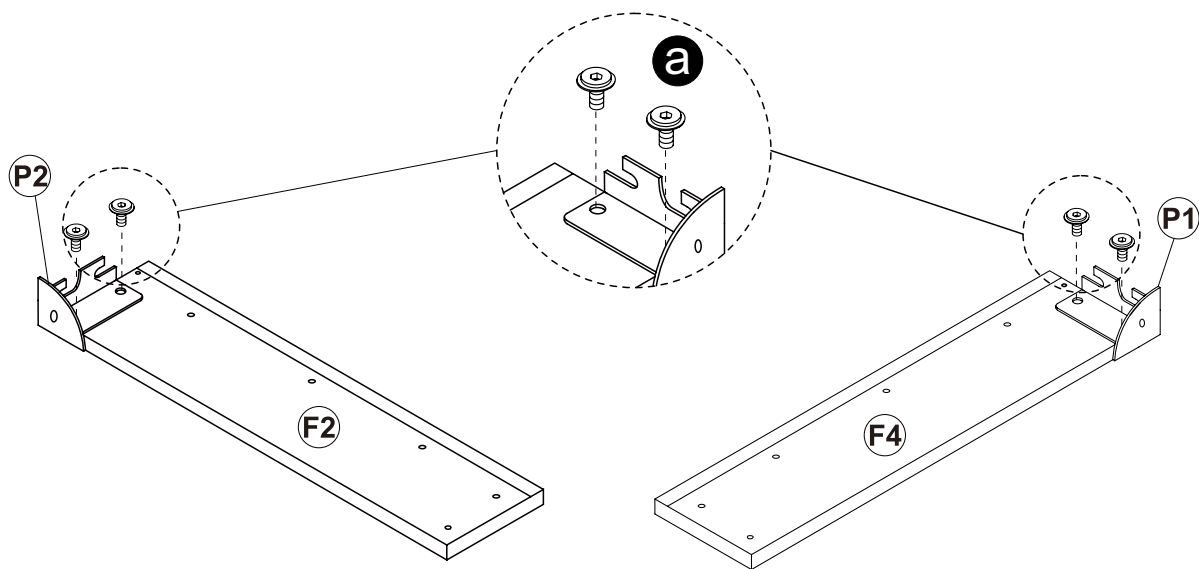


step6

a	 M8*18	8PCS
---	--	------

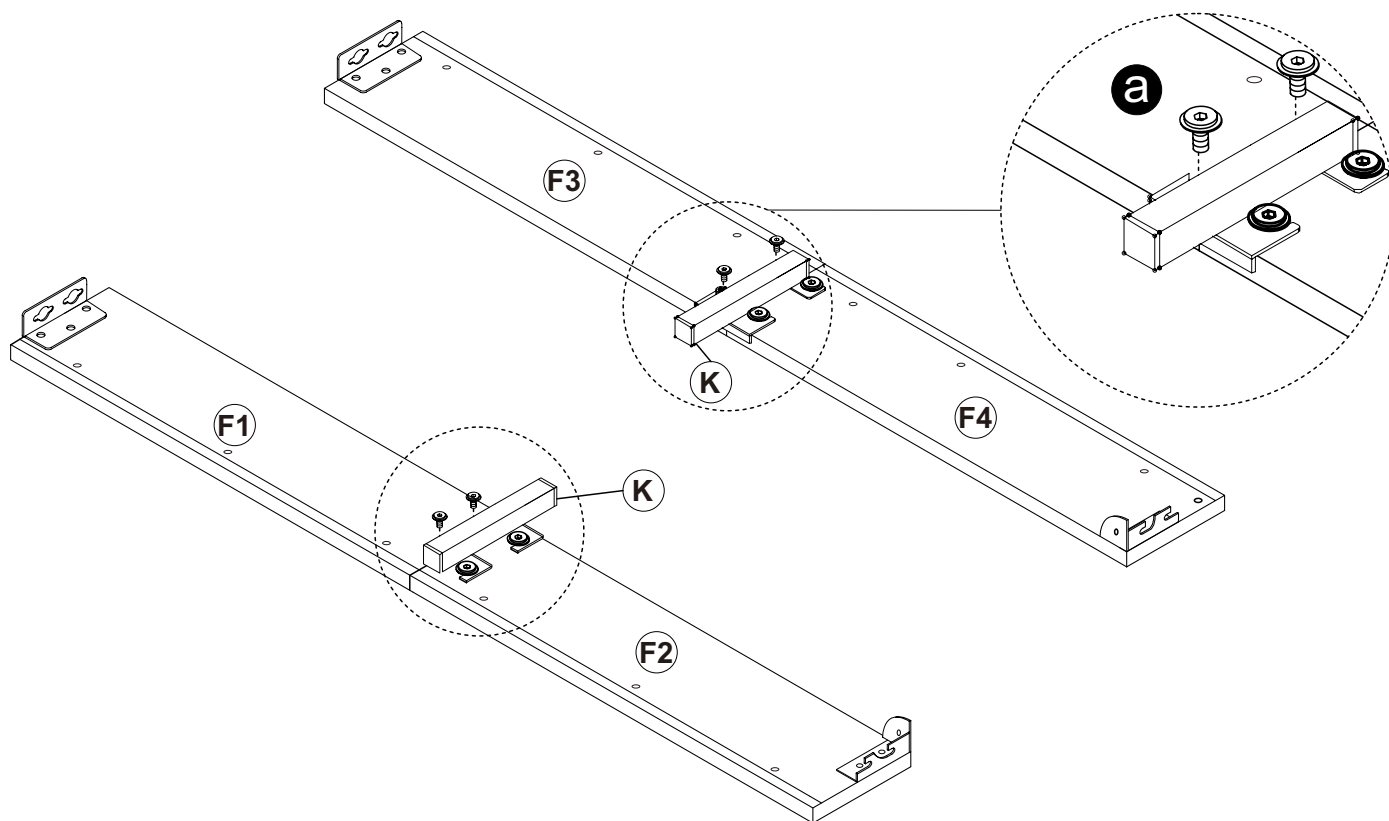


step7

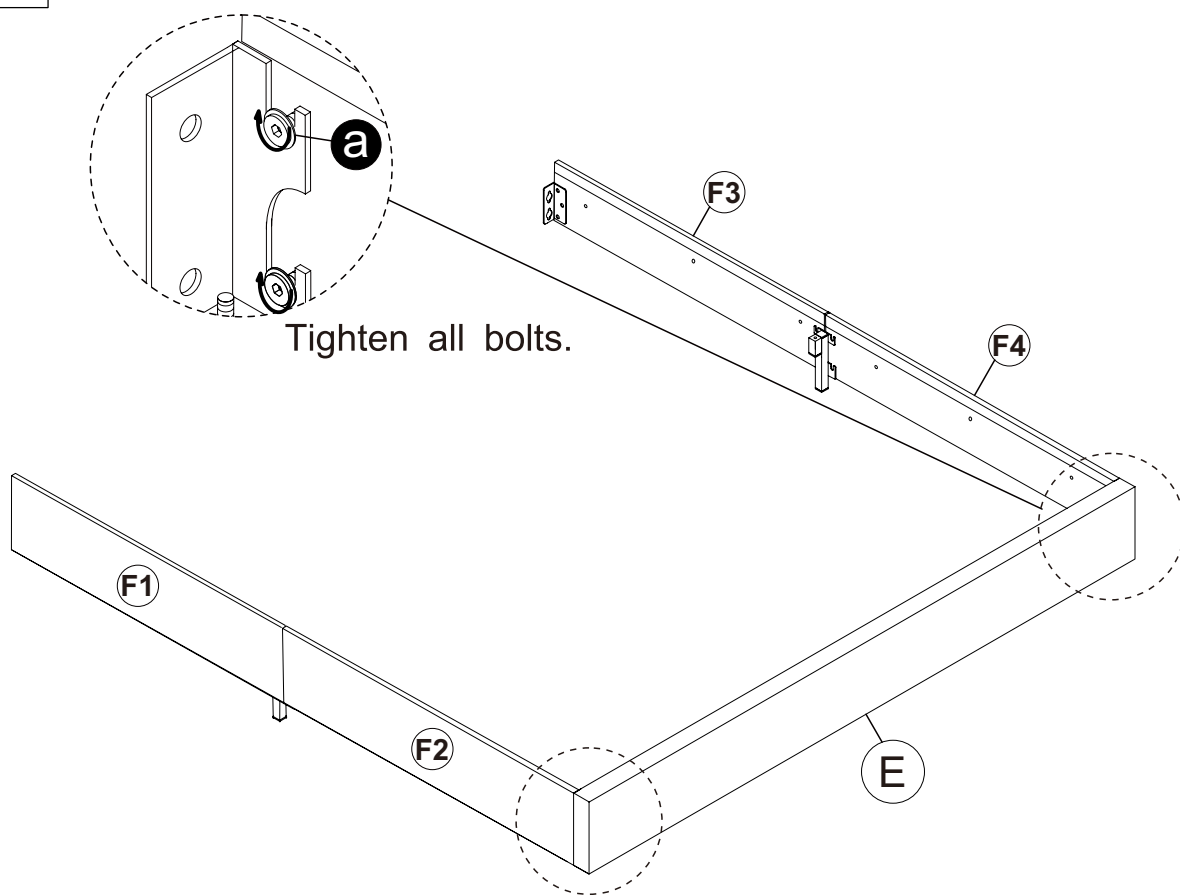Please first use the pre-installed screw a on the footboard to attach it to the connectors P1 and P2 on the side panel, and then tighten the screw a.




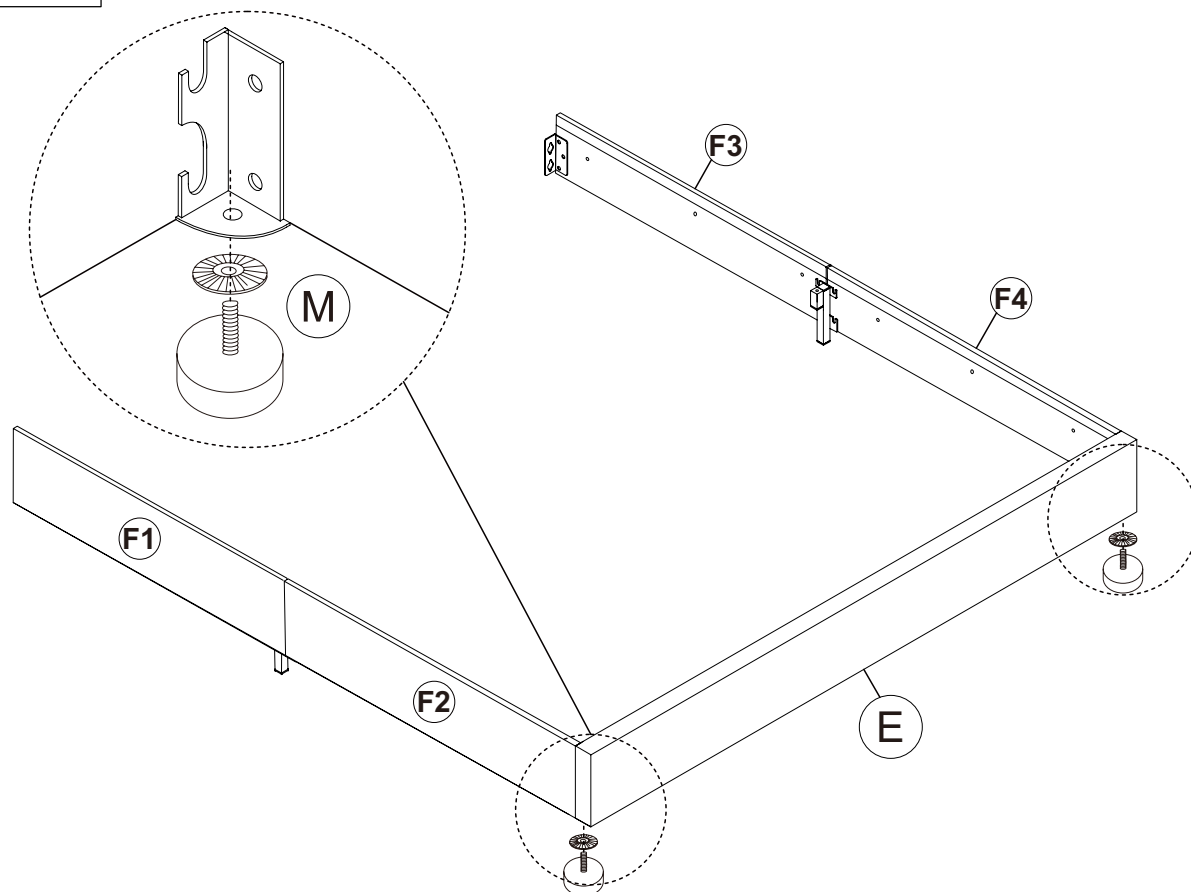step8



step9

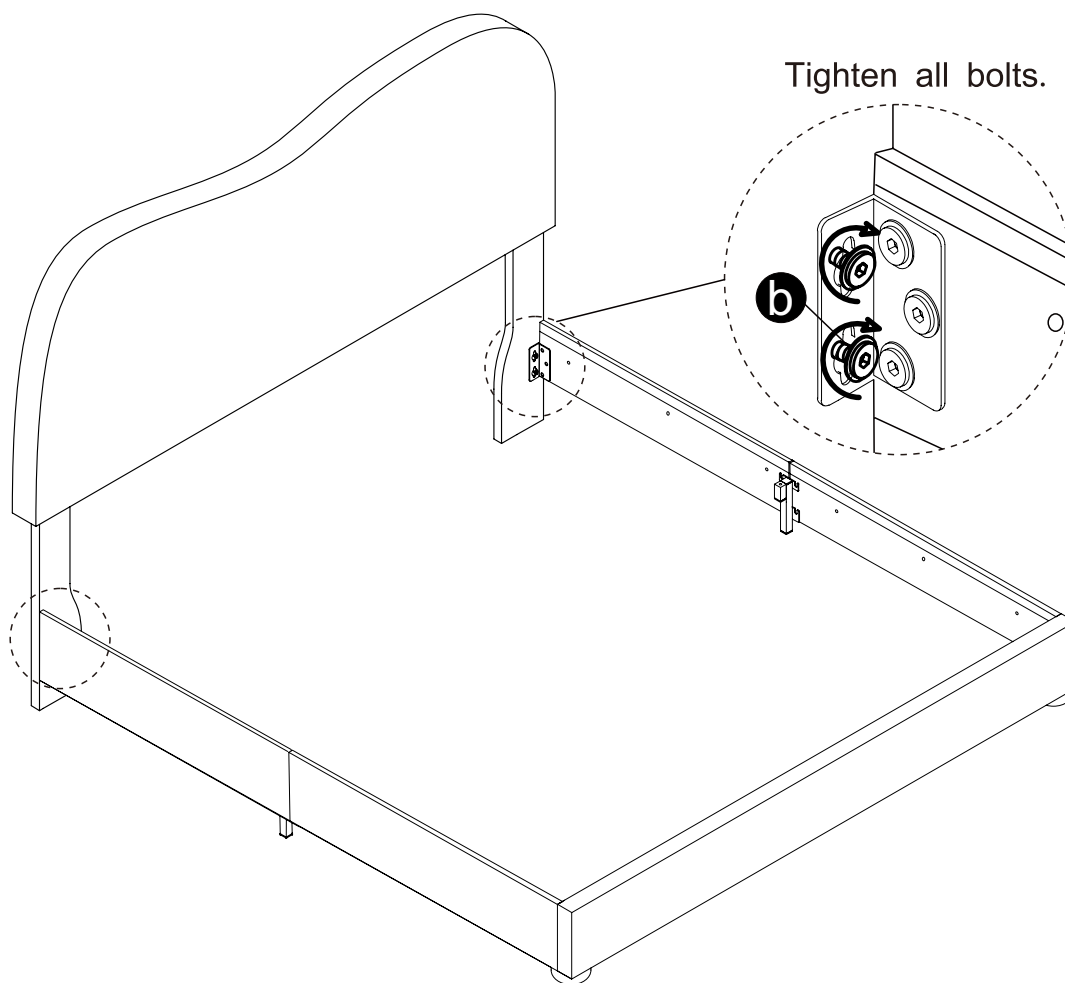Please first attach the side panel to the pre-installed screw b on the head support leg using connector N, and then tighten screw b.




step10

a

M8*18

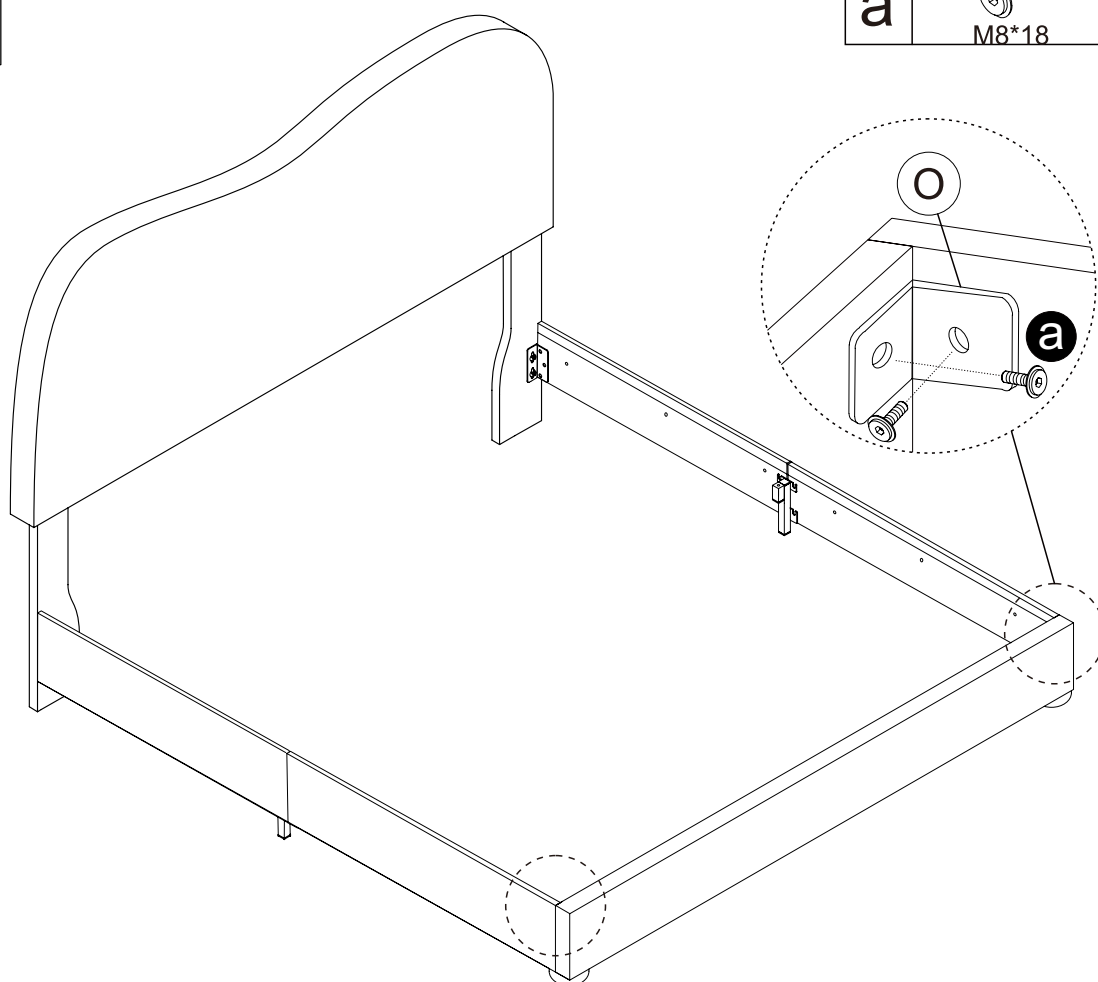4PCS




step11

C

M8*35

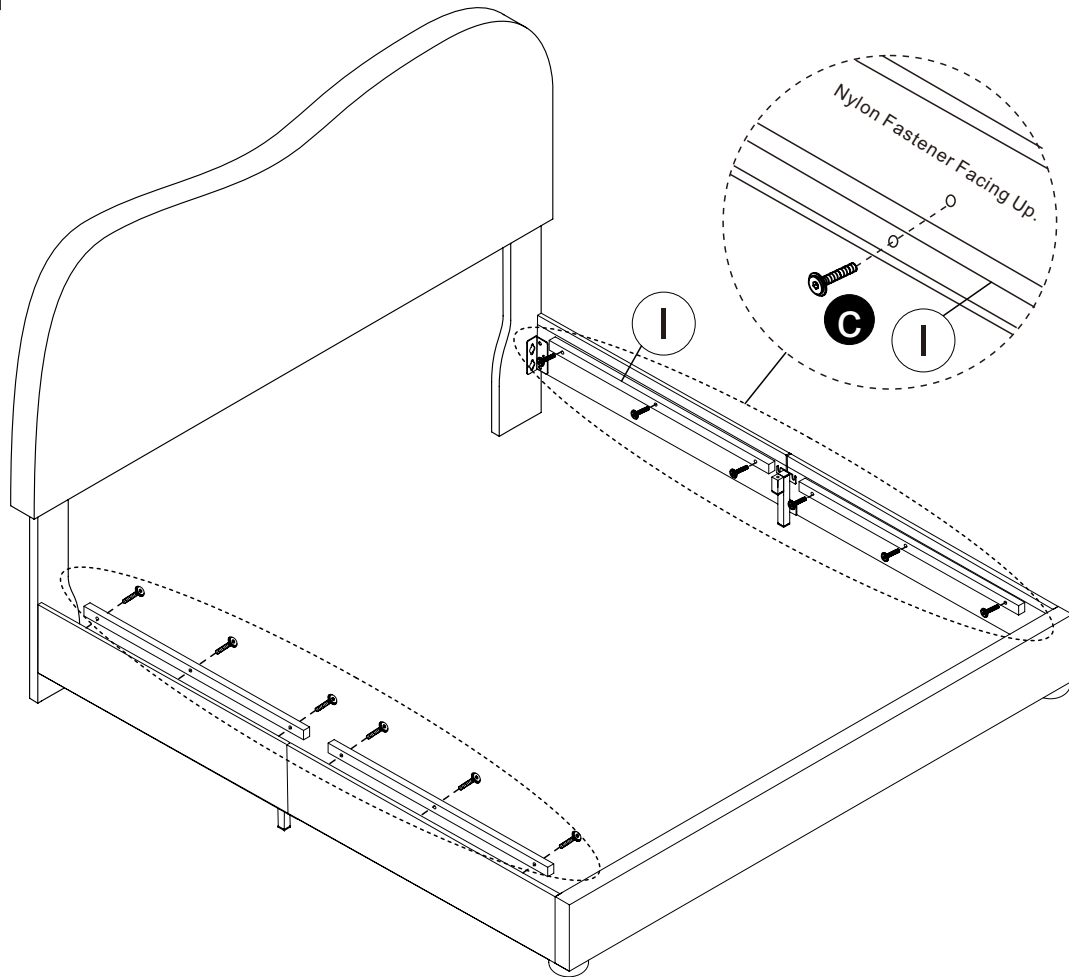12PCS




step12

C


M8*35

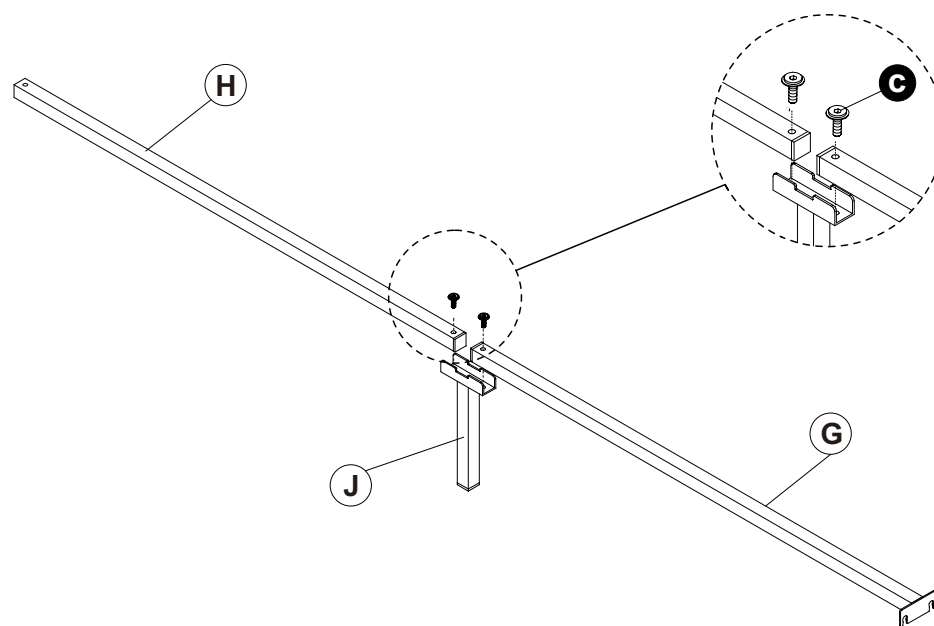2PCS




step13

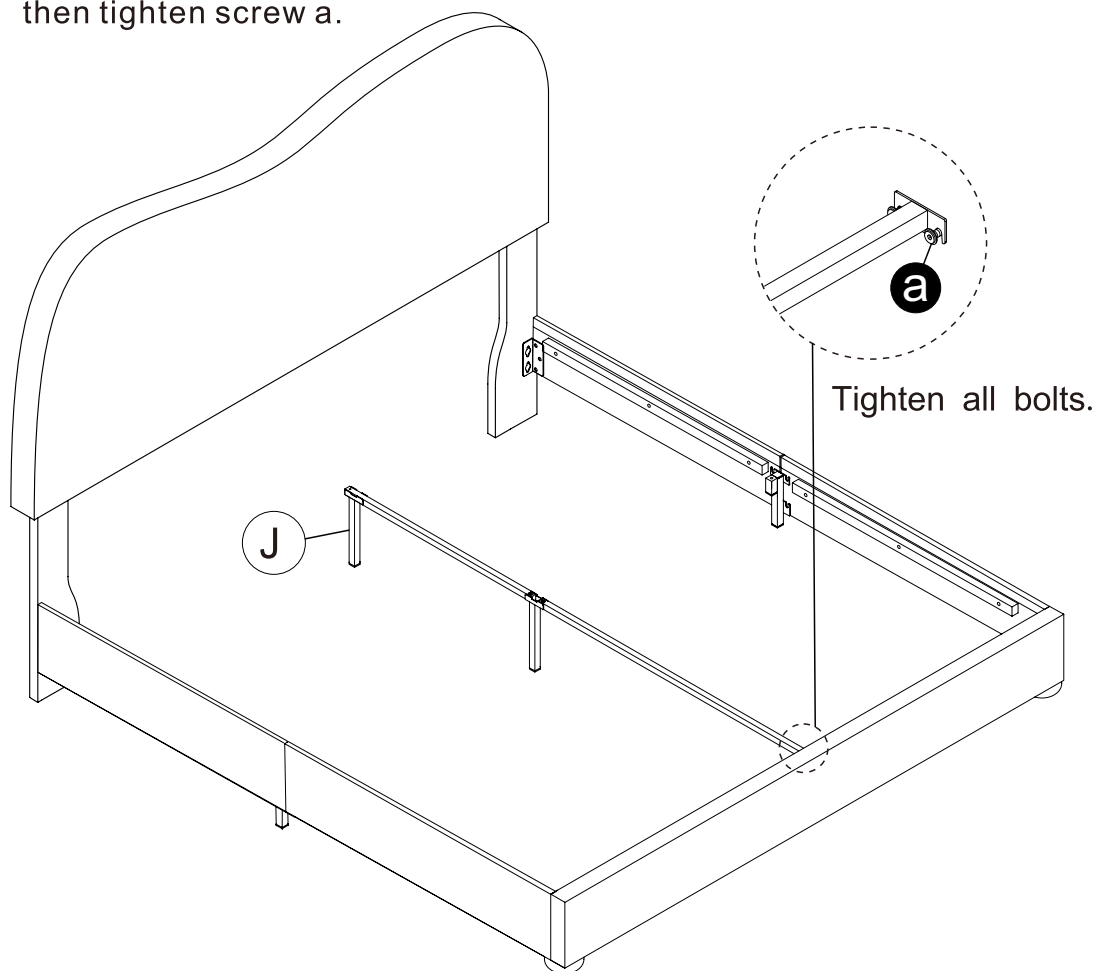
Please first hang bracket G onto screw a pre-installed on the footboard, and then tighten screw a.



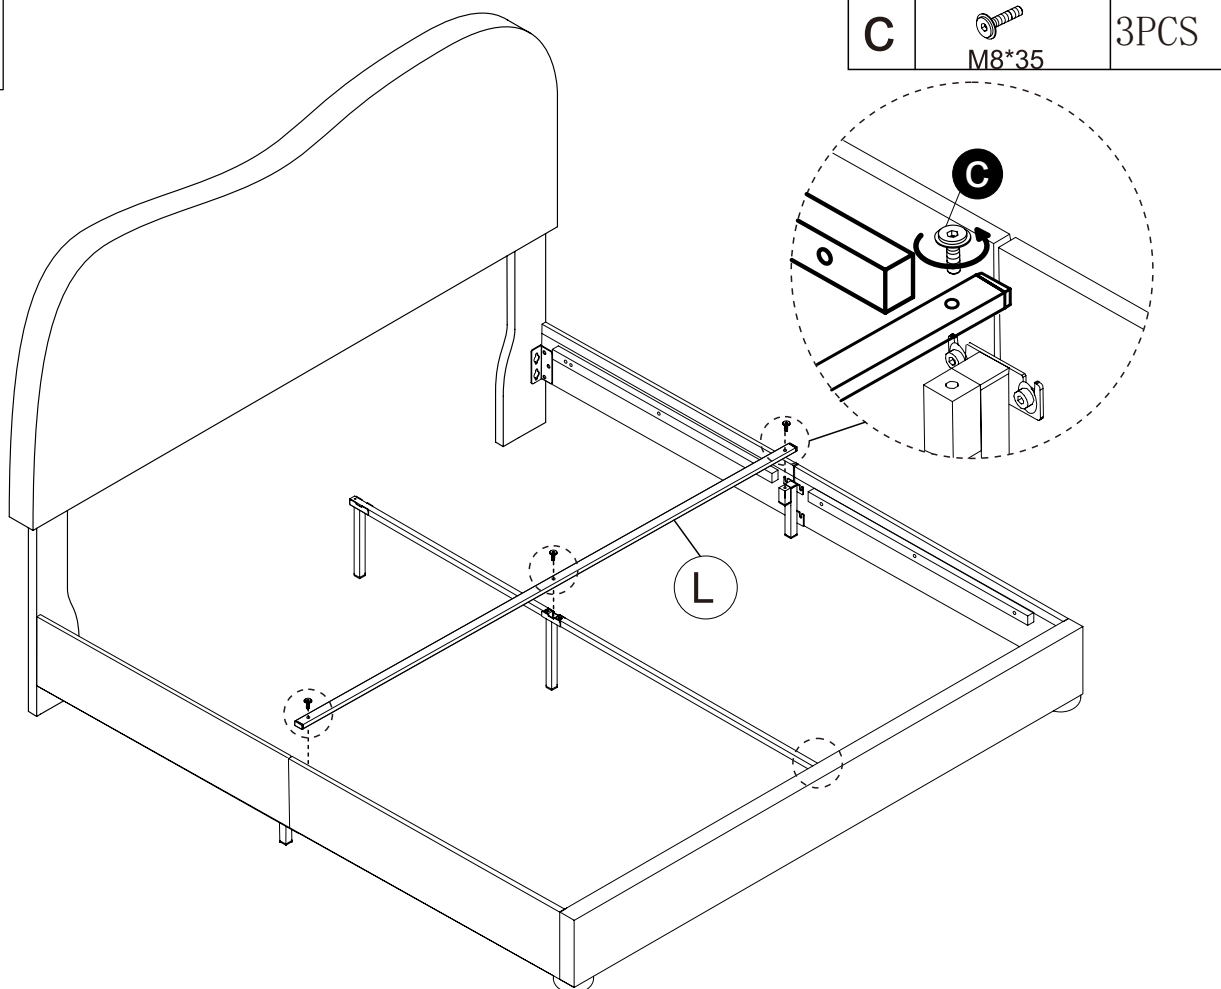step14



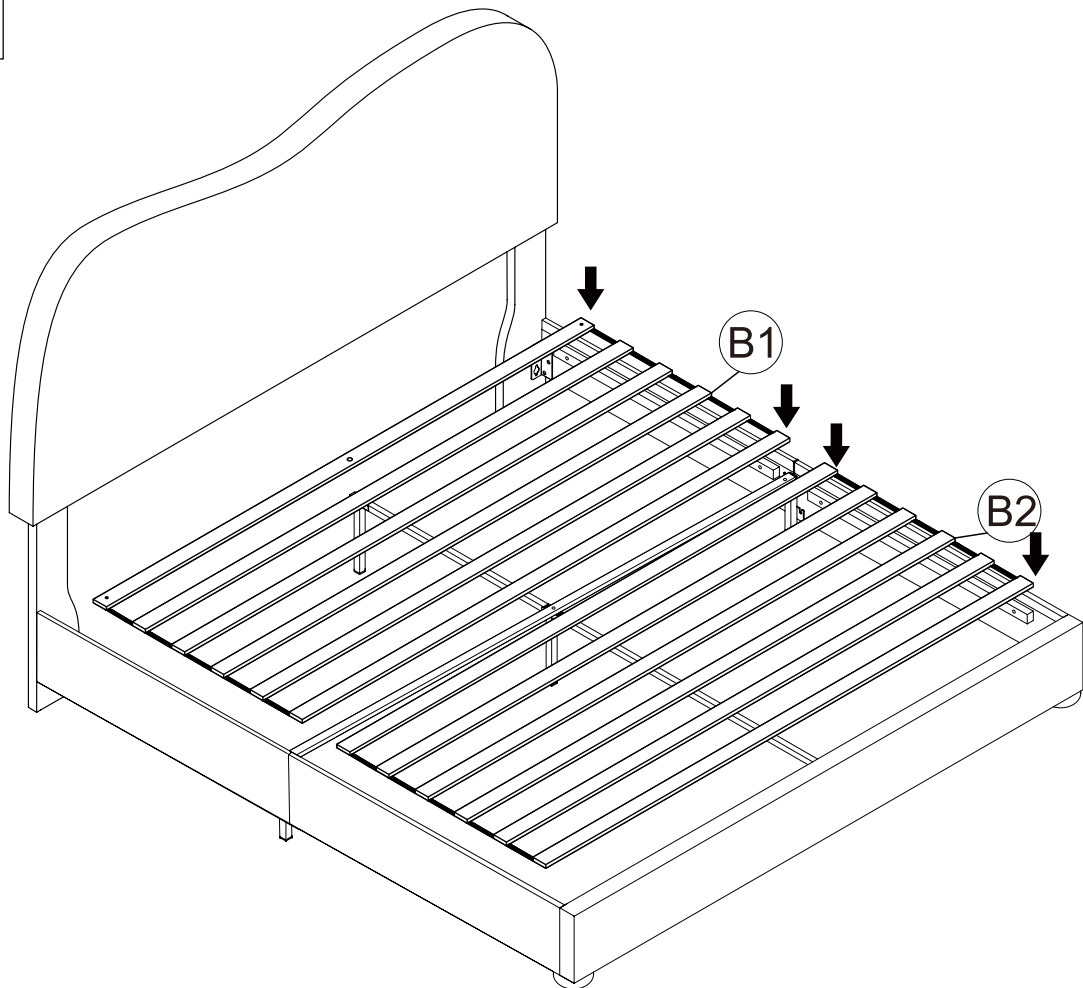step15




step16


d



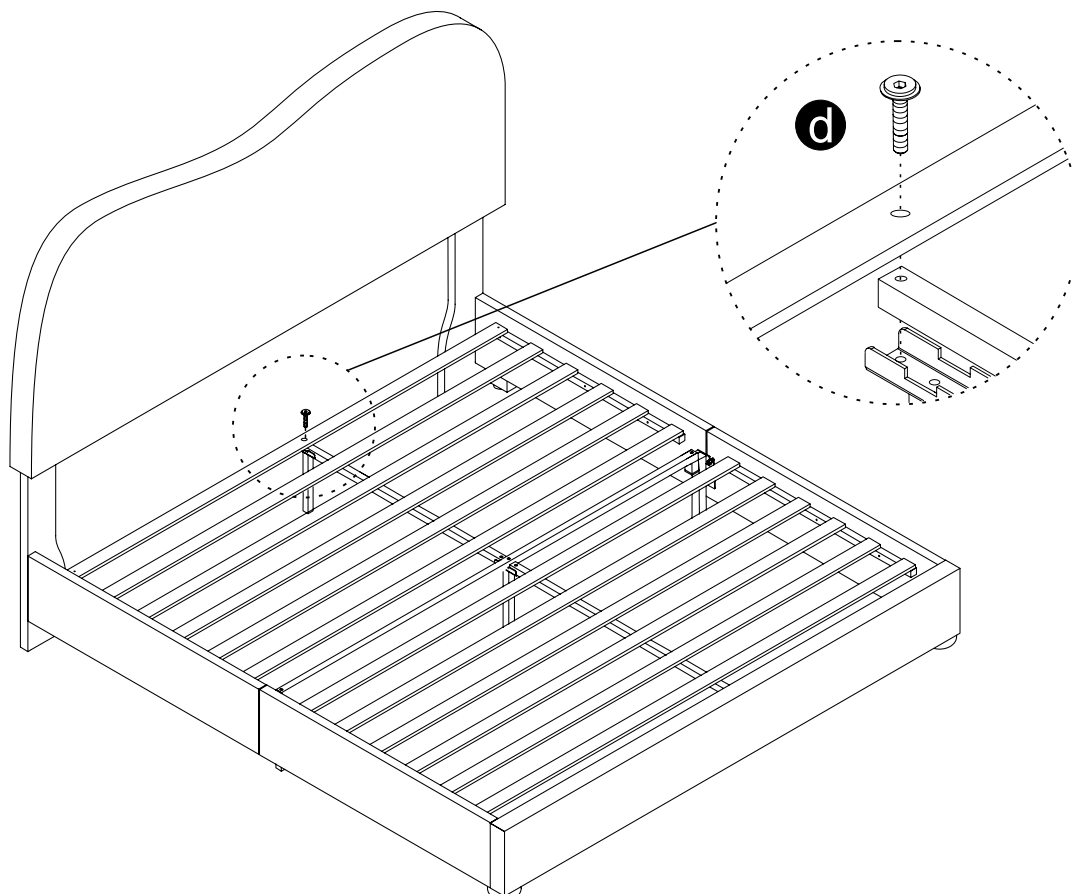1PC



step17

e	 M4*35	2PCS
f		2PCS

