











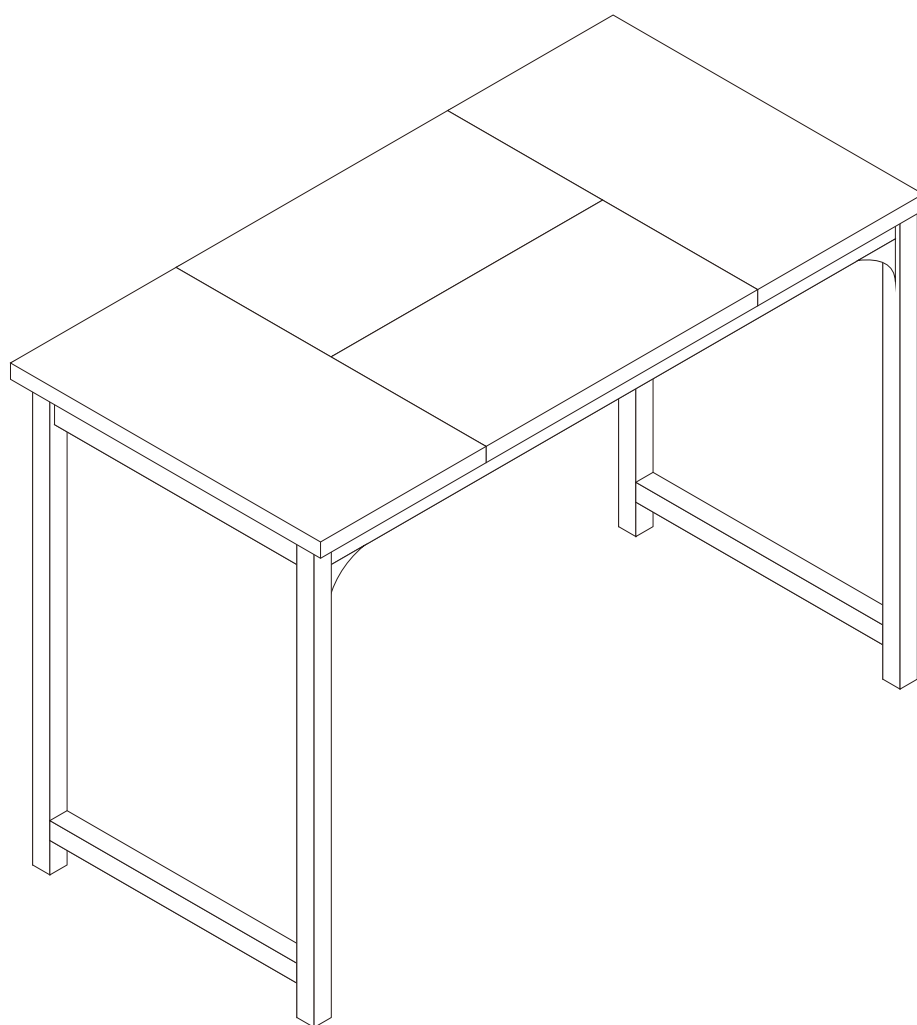




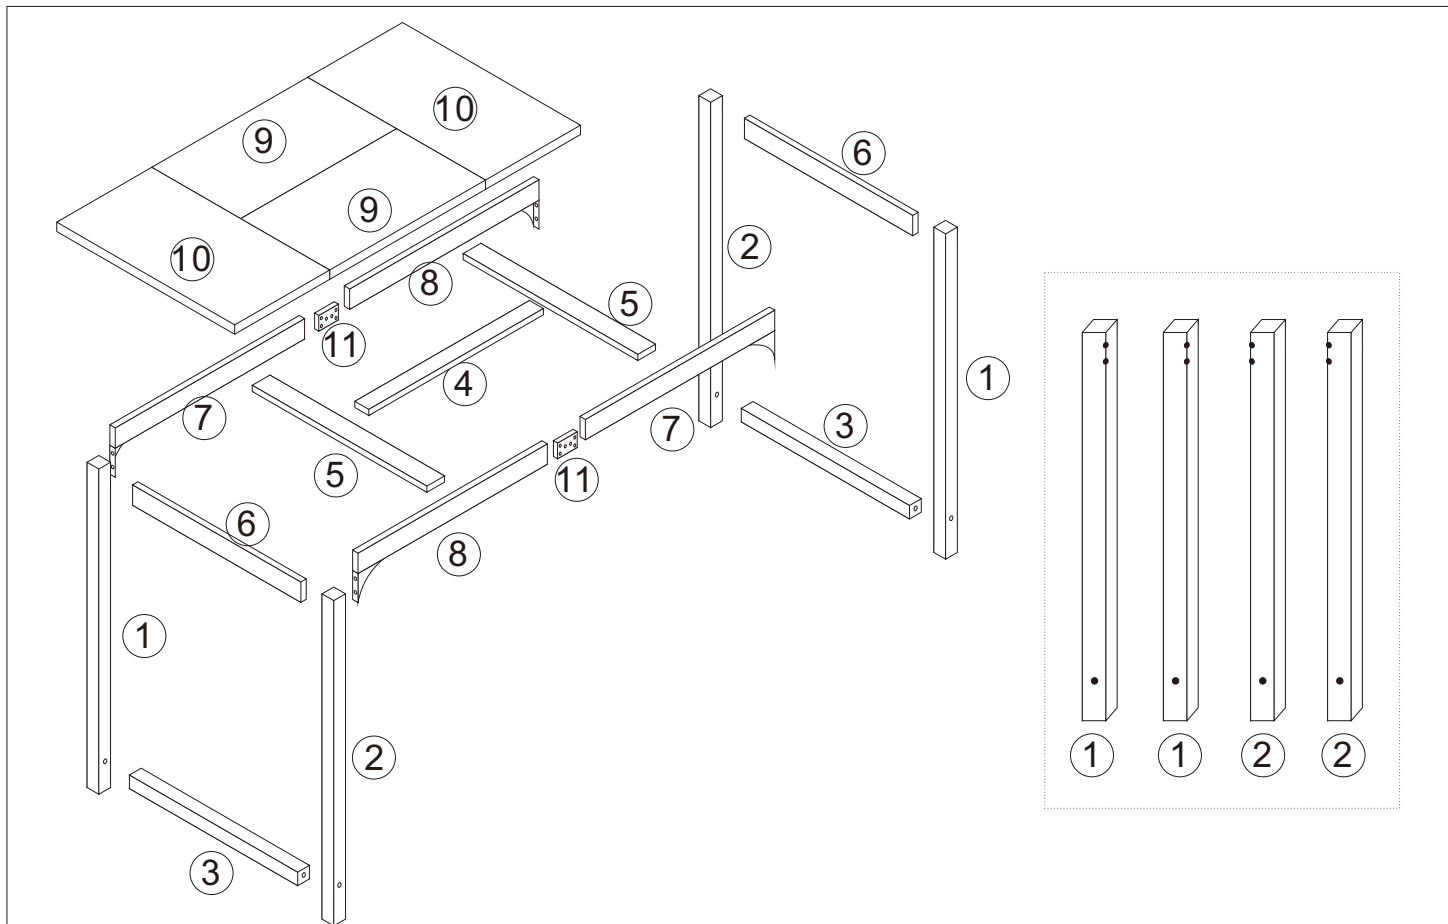







Installation instructions

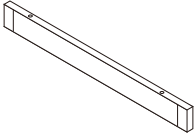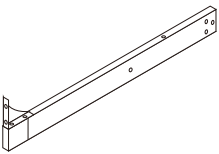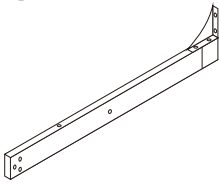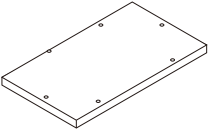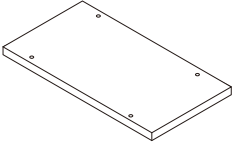



 <p>1</p> <p>72x5x5cm x2</p>	 <p>2</p> <p>72x5x5cm x2</p>	 <p>3</p> <p>68x5x5cm x2</p>	 <p>4</p> <p>85.5x5x2.5cm x1</p>	 <p>5</p> <p>71.7x5x2.5cm x2</p>	 <p>6</p> <p>68x5x2.5cm x2</p>
 <p>7</p> <p>84.2x5x2.5cm x2</p>	 <p>8</p> <p>84.2x5x2.5cm x2</p>	 <p>9</p> <p>90x40cm x2</p>	 <p>10</p> <p>80x45cm x2</p>	 <p>11</p> <p>x2</p>	
<p>A</p>  <p>8x70mm</p> <p>x6</p>	<p>B</p>  <p>8x40mm</p> <p>x12</p>	<p>C</p>  <p>x4</p>	<p>D</p>  <p>x4</p>	<p>E</p>  <p>8x20mm</p> <p>x20</p>	
<p>F</p>  <p>6x35mm</p> <p>x12</p>	<p>G</p>  <p>6x60mm</p> <p>x8</p>	<p>H</p>  <p>x1</p>	<p>J</p>  <p>x1</p>		

01

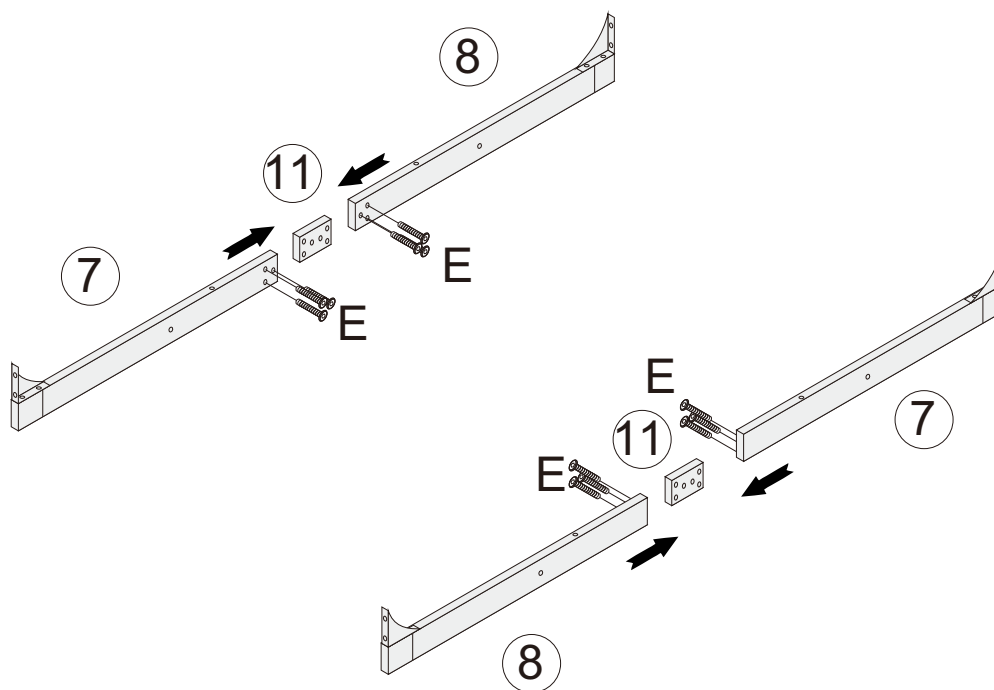


E



8x20mm

x12

02

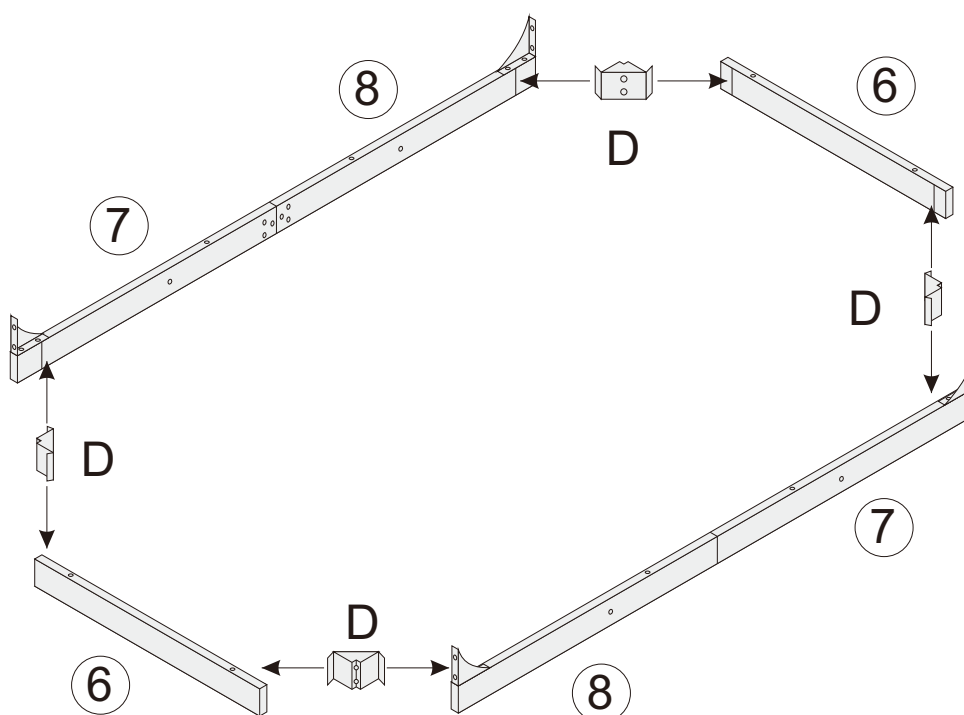


D




x4

03

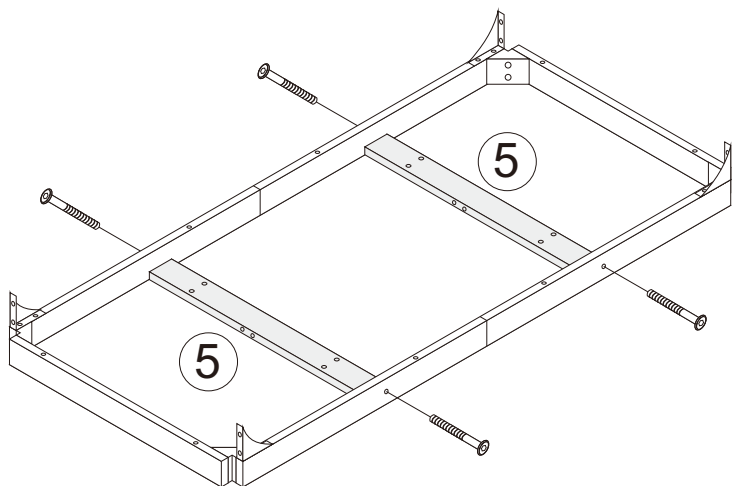

Friendly Tips: DO NOT fully tighten all screws until assembly is completed.


B




8x40mm

x4

04

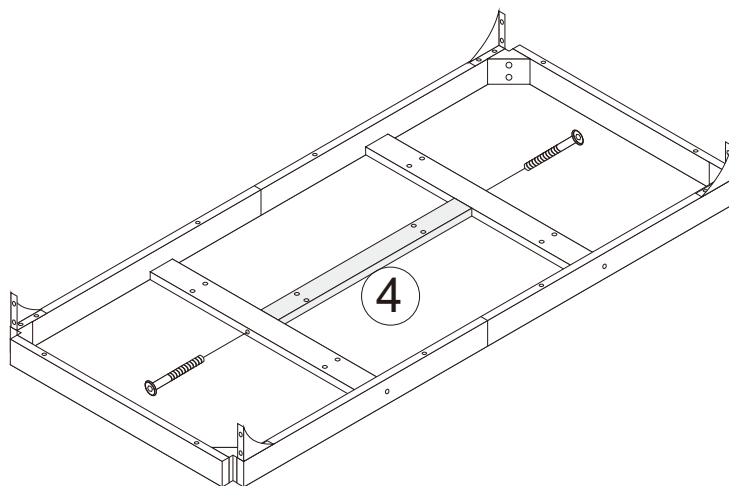



A



8x70mm

x2

05

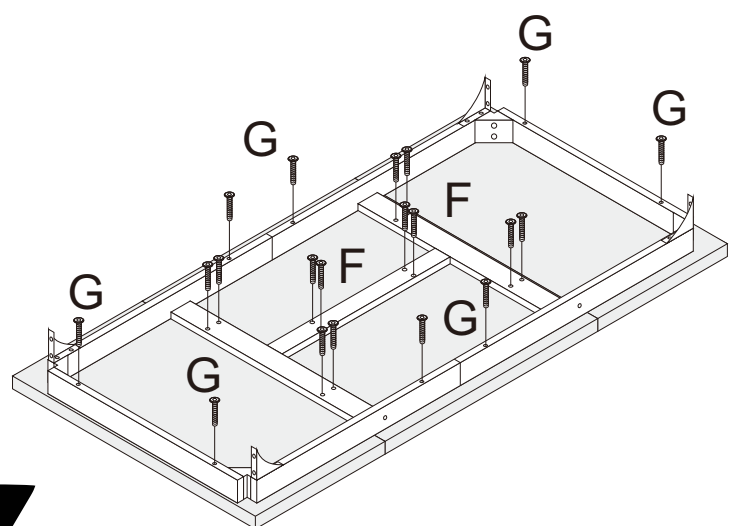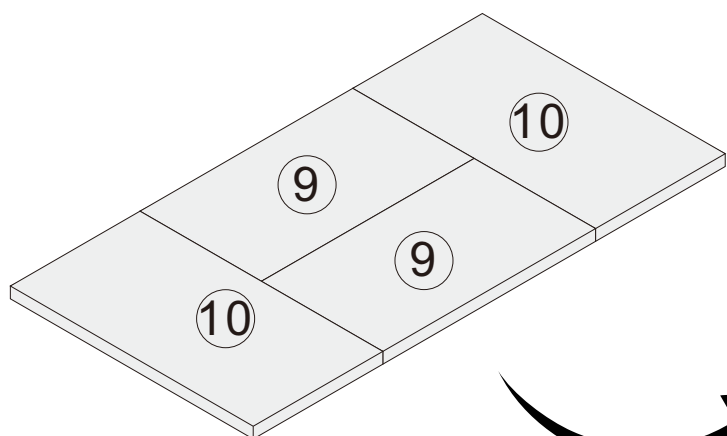

Friendly Tips: Don't tighten the F and G screws in step 5, wait until finish step 7 to fine-tune the desktop, and then align the screws and tighten them!

F



6x35mm

x12

G





6x60mm


x8

06

Pay attention to the direction of the hole

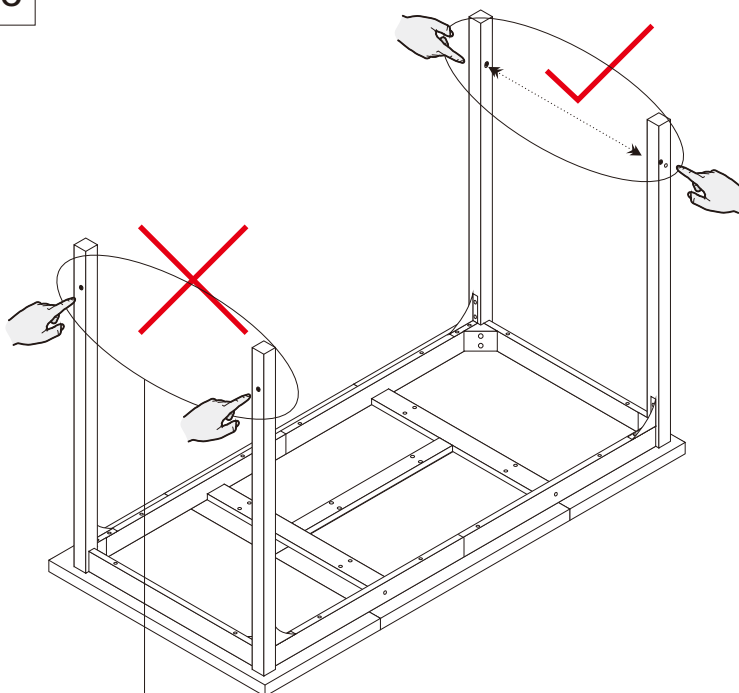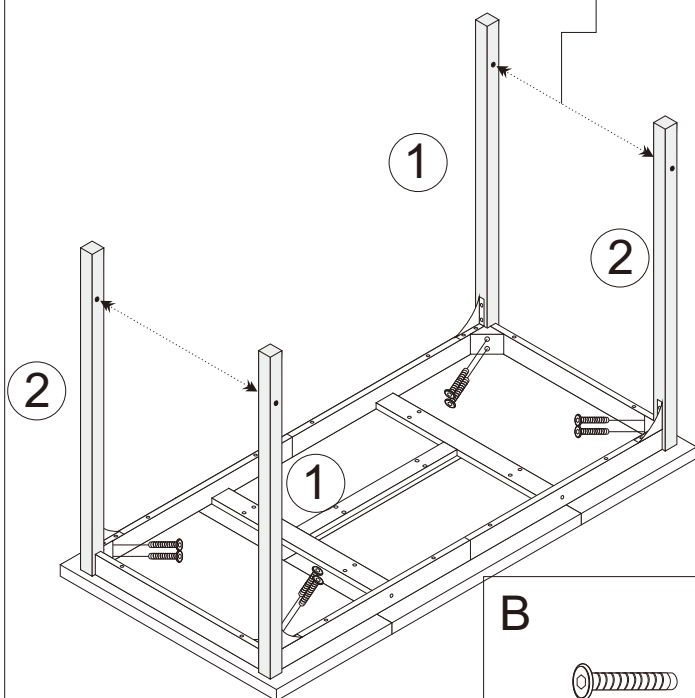

B




8x40mm

x8

If this happens, just switch the two steel legs left and right to install it.

07

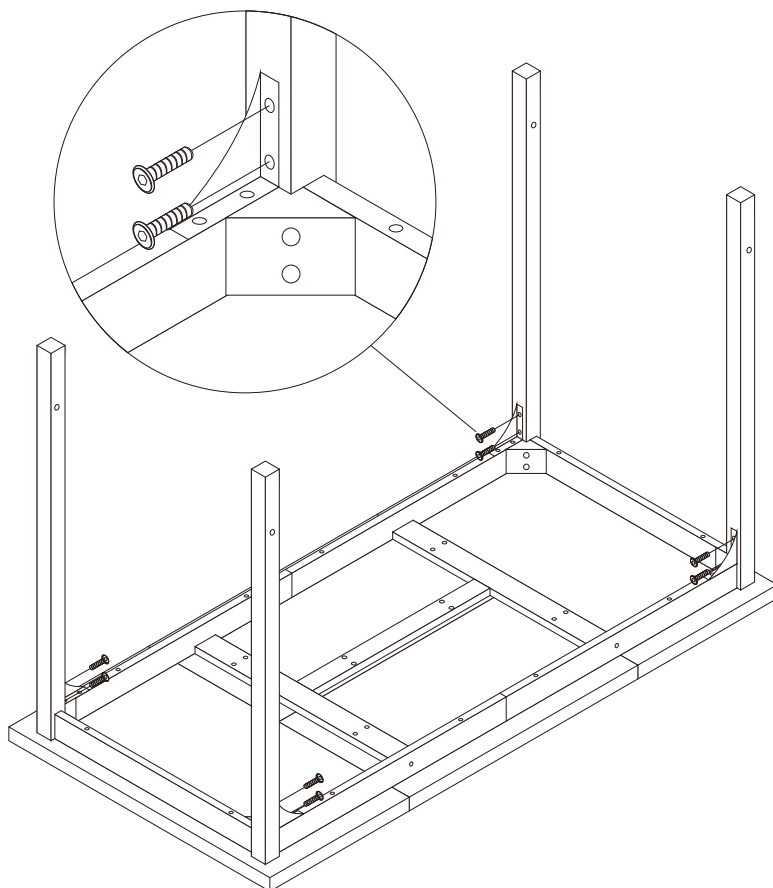


E




8x20mm

x8

08

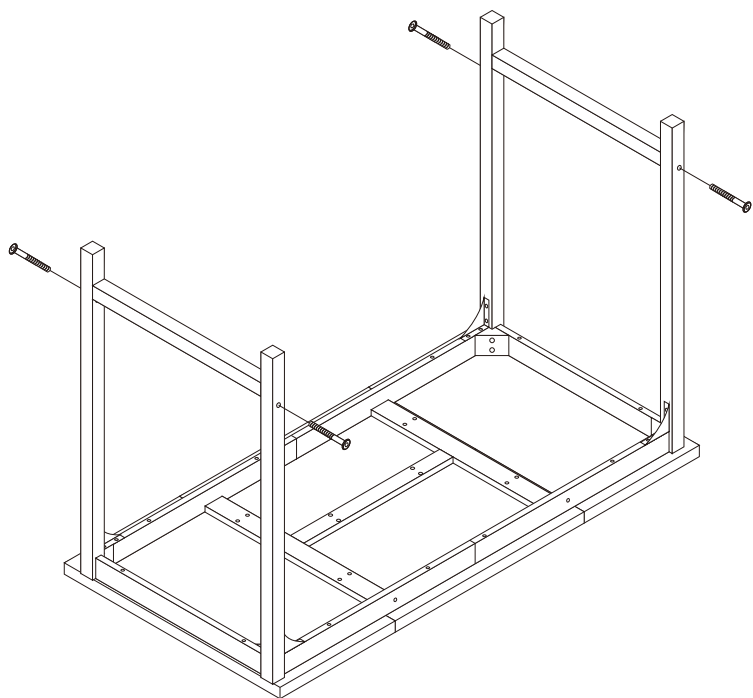



A



8x70mm

x4

09

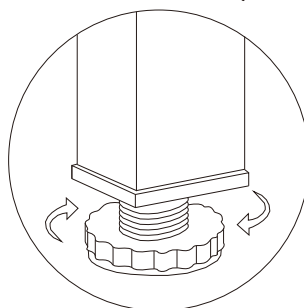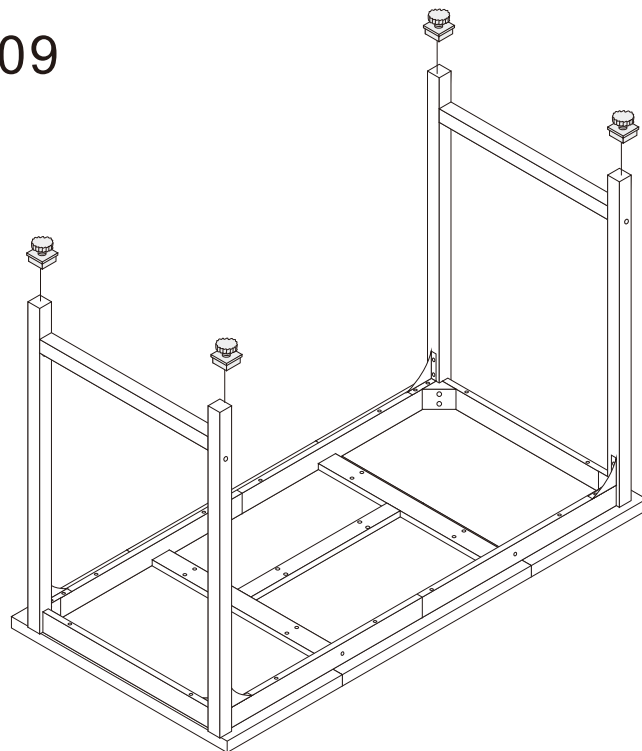

C



x4

10

