


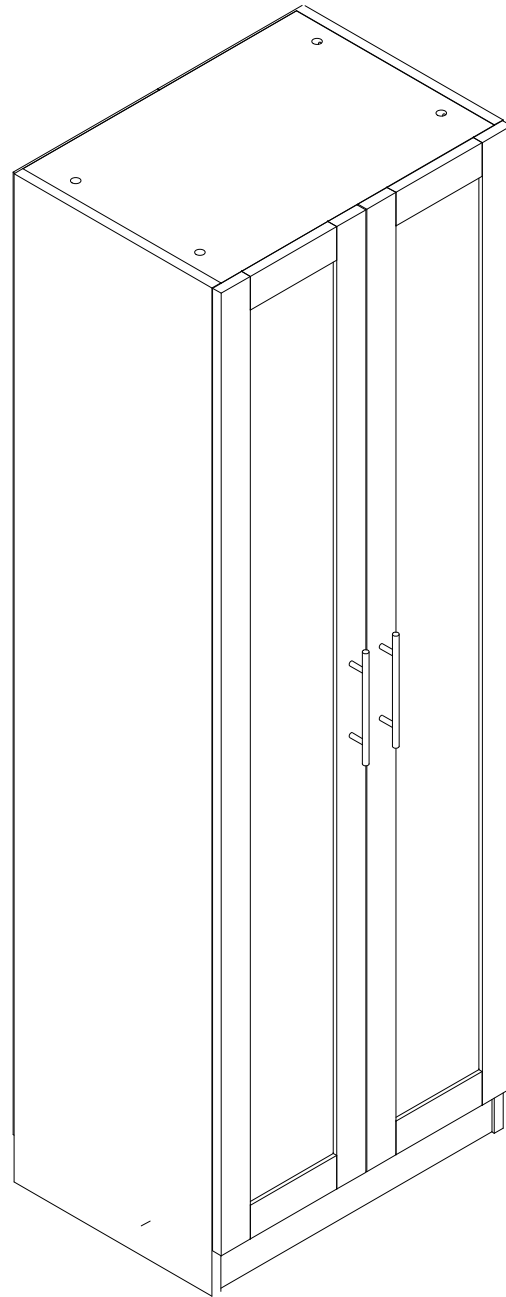
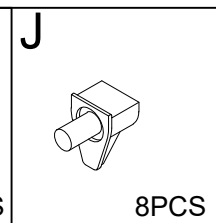
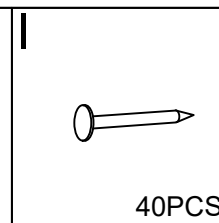
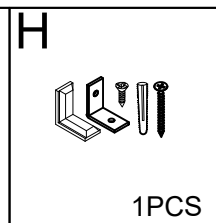
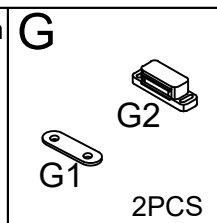
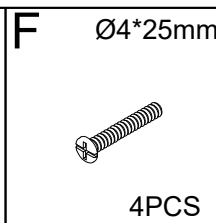
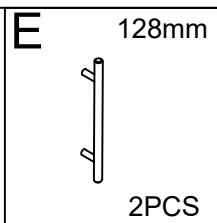
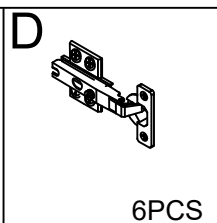
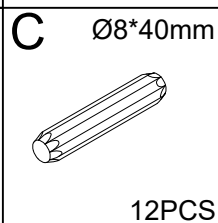
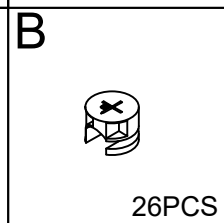
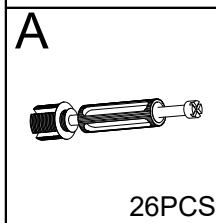
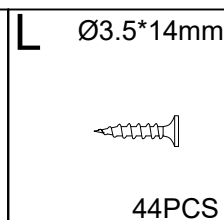
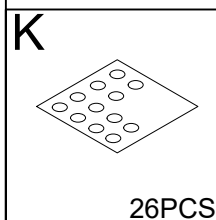
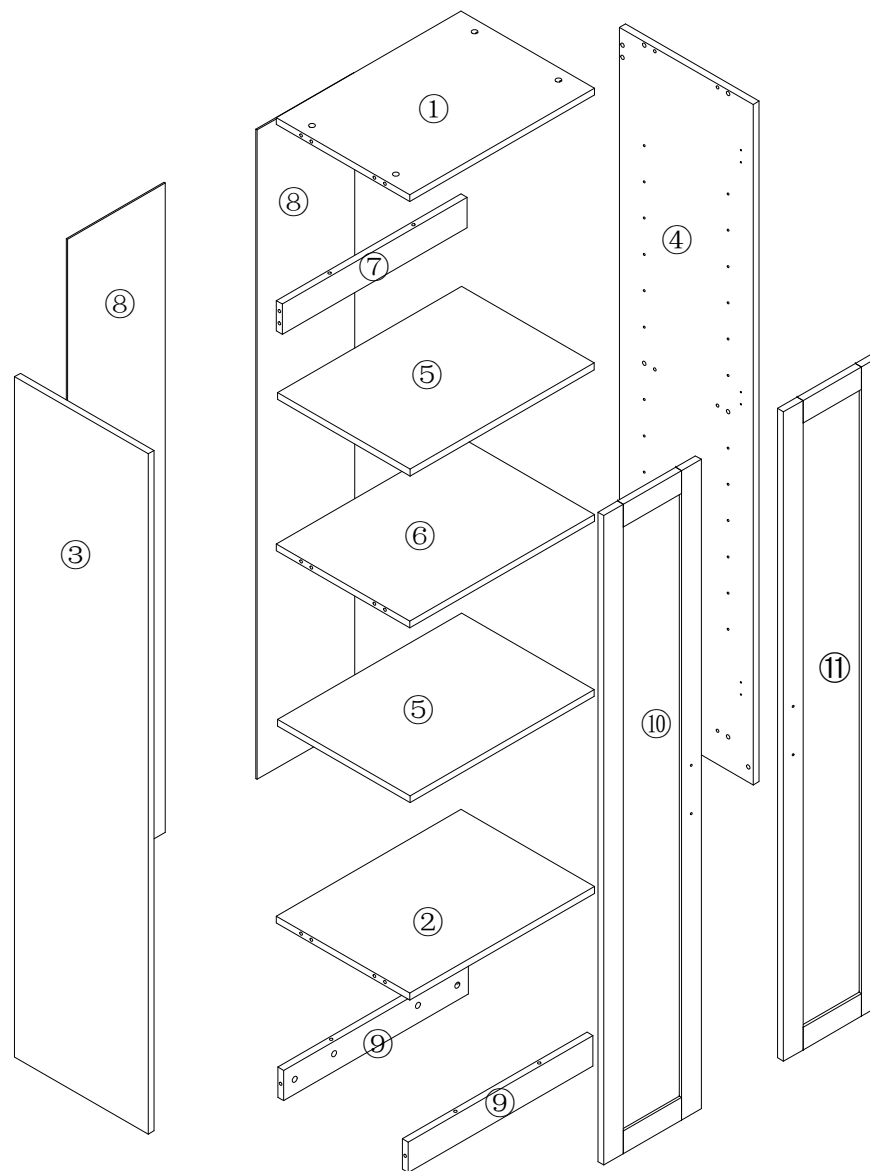
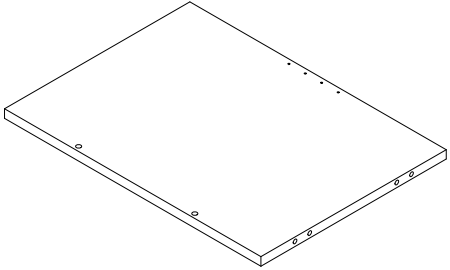
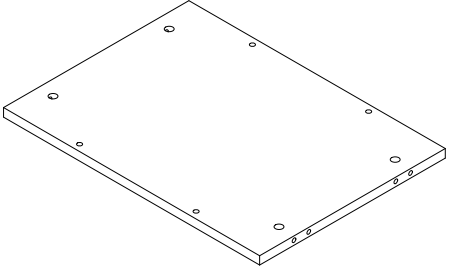
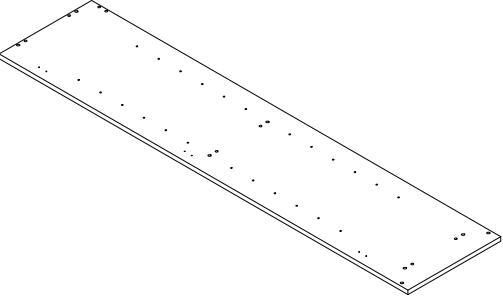
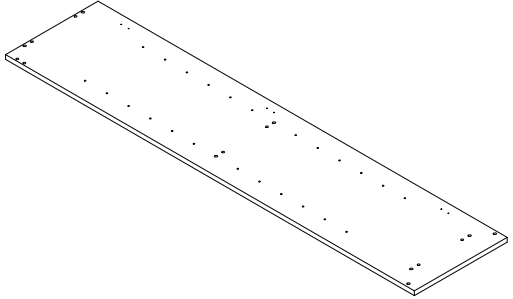
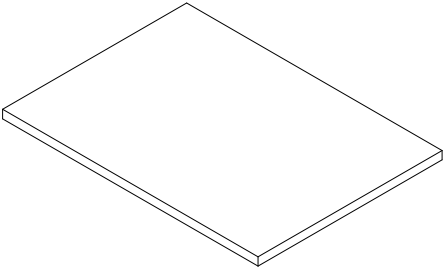
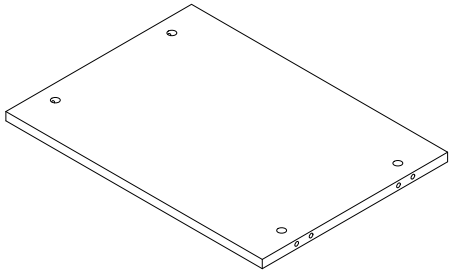
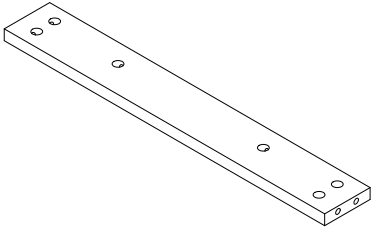
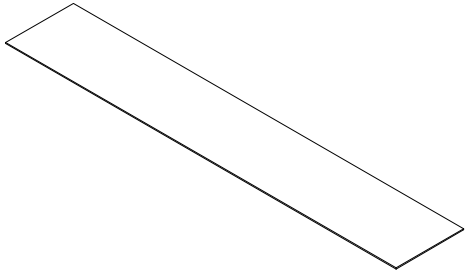


Installation & Assembly

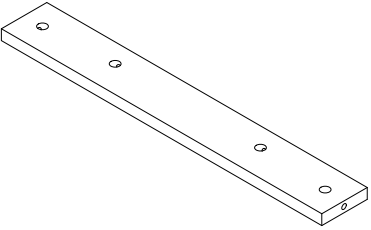

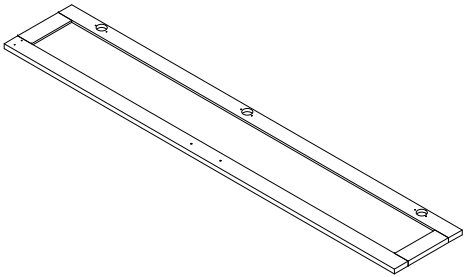


1 564*408  1PCS	2 564*408  1PCS	3 1800*408  1PCS	4 1800*408  1PCS
5 562*405  2PCS	6 564*408  1PCS	7 564*80  1PCS	8 1718*298  2PCS
9 564*80  2PCS	10 1718*298  1PCS	11 1718*298  1PCS	

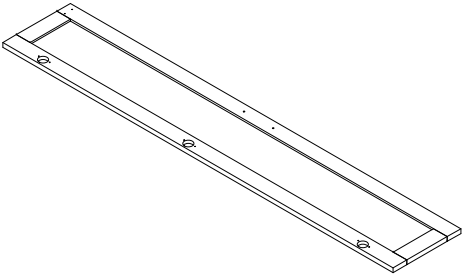


Hardware installation demonstration

NOTE: Please make sure "A" hardware tightened and can't be pulled out!


I

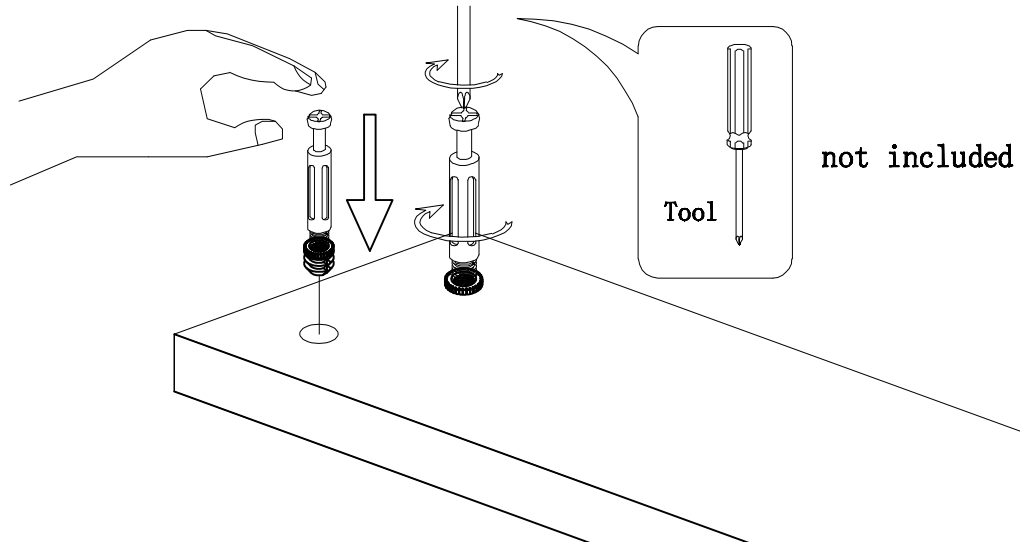


II

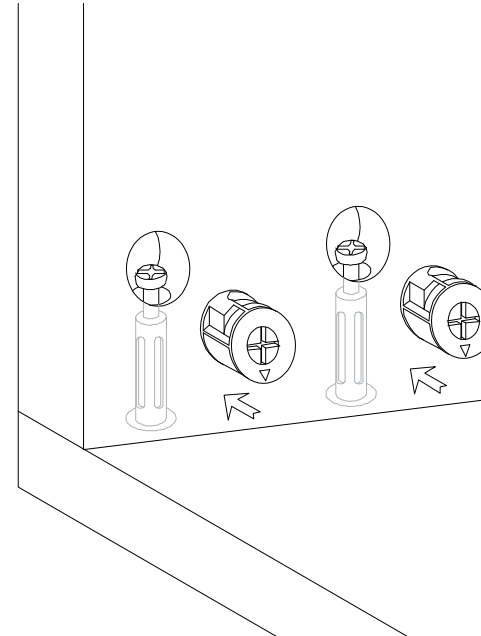

III

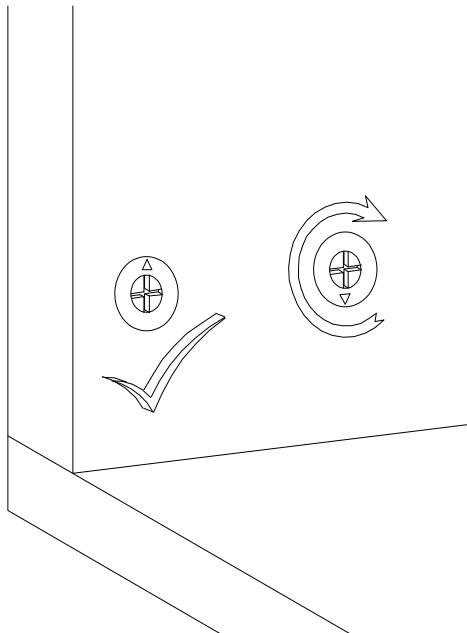


1

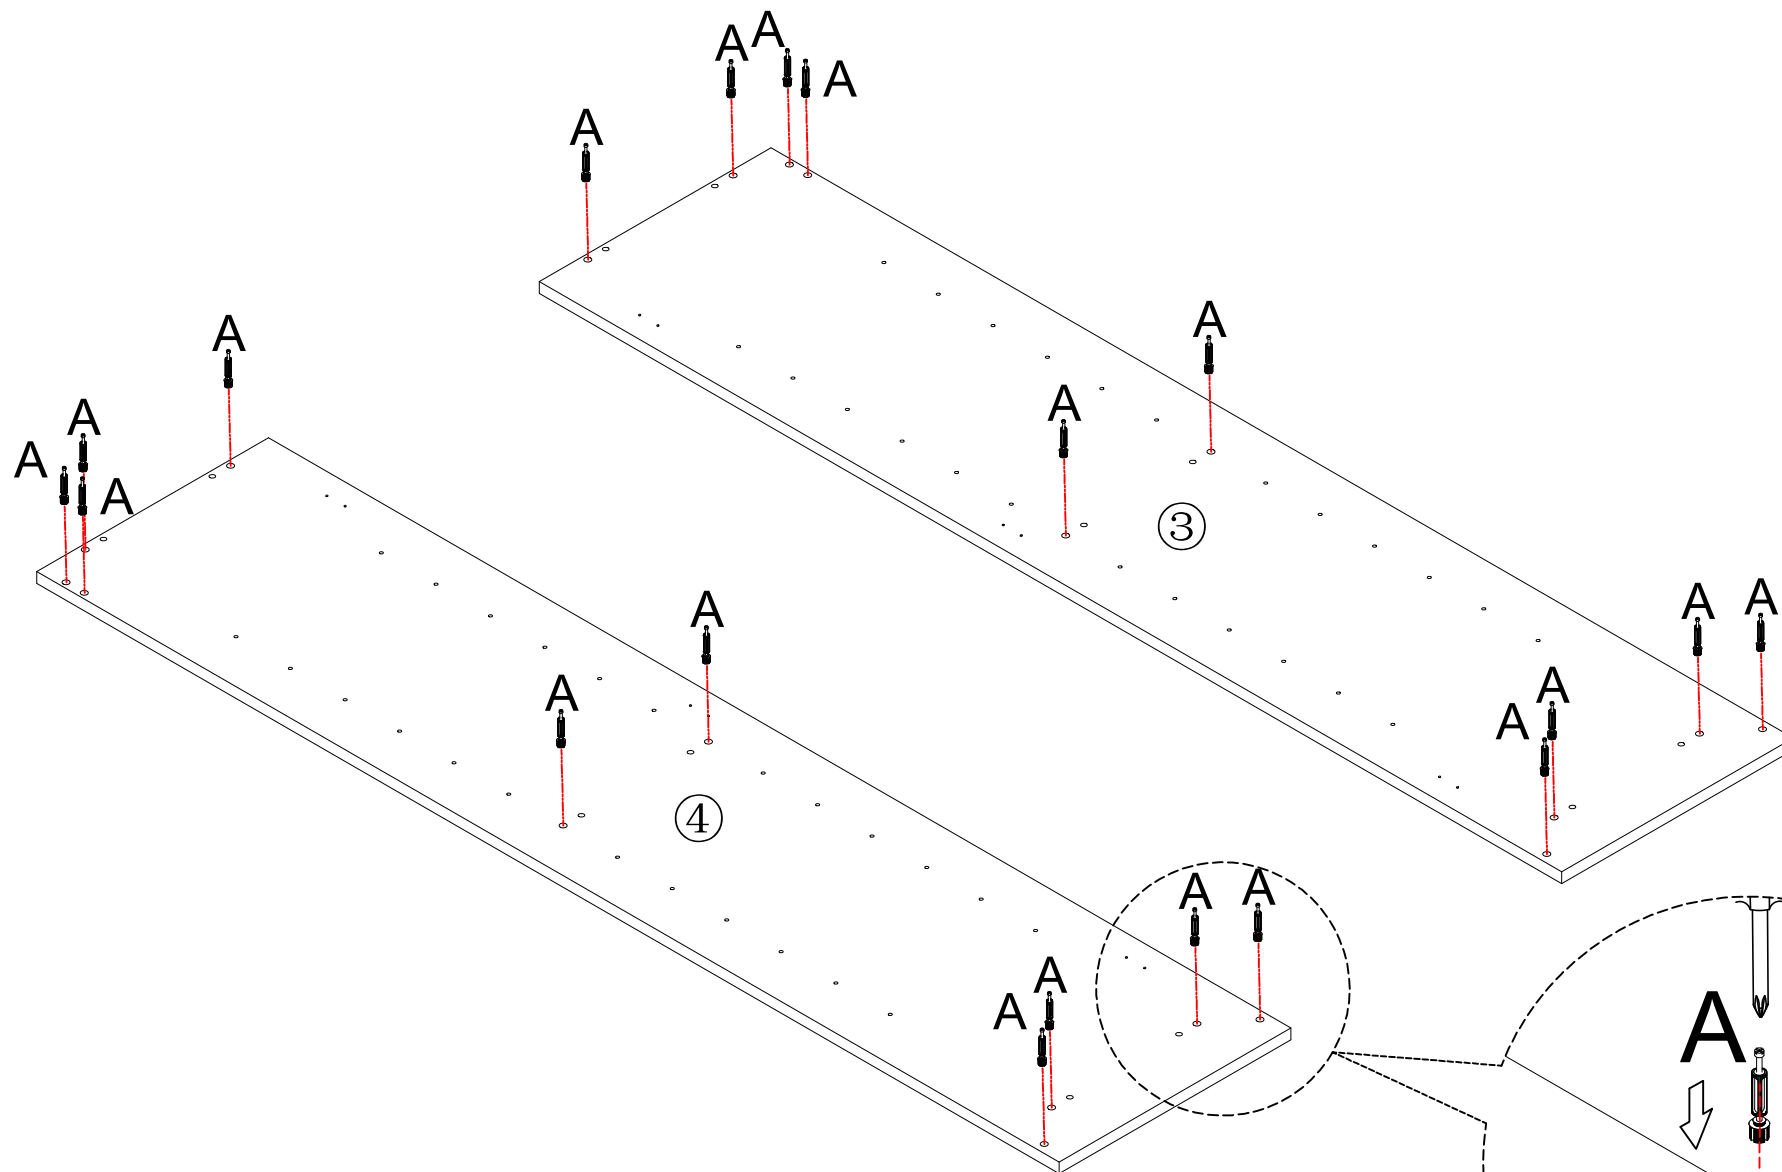


A*20

Put A on board ③④

2

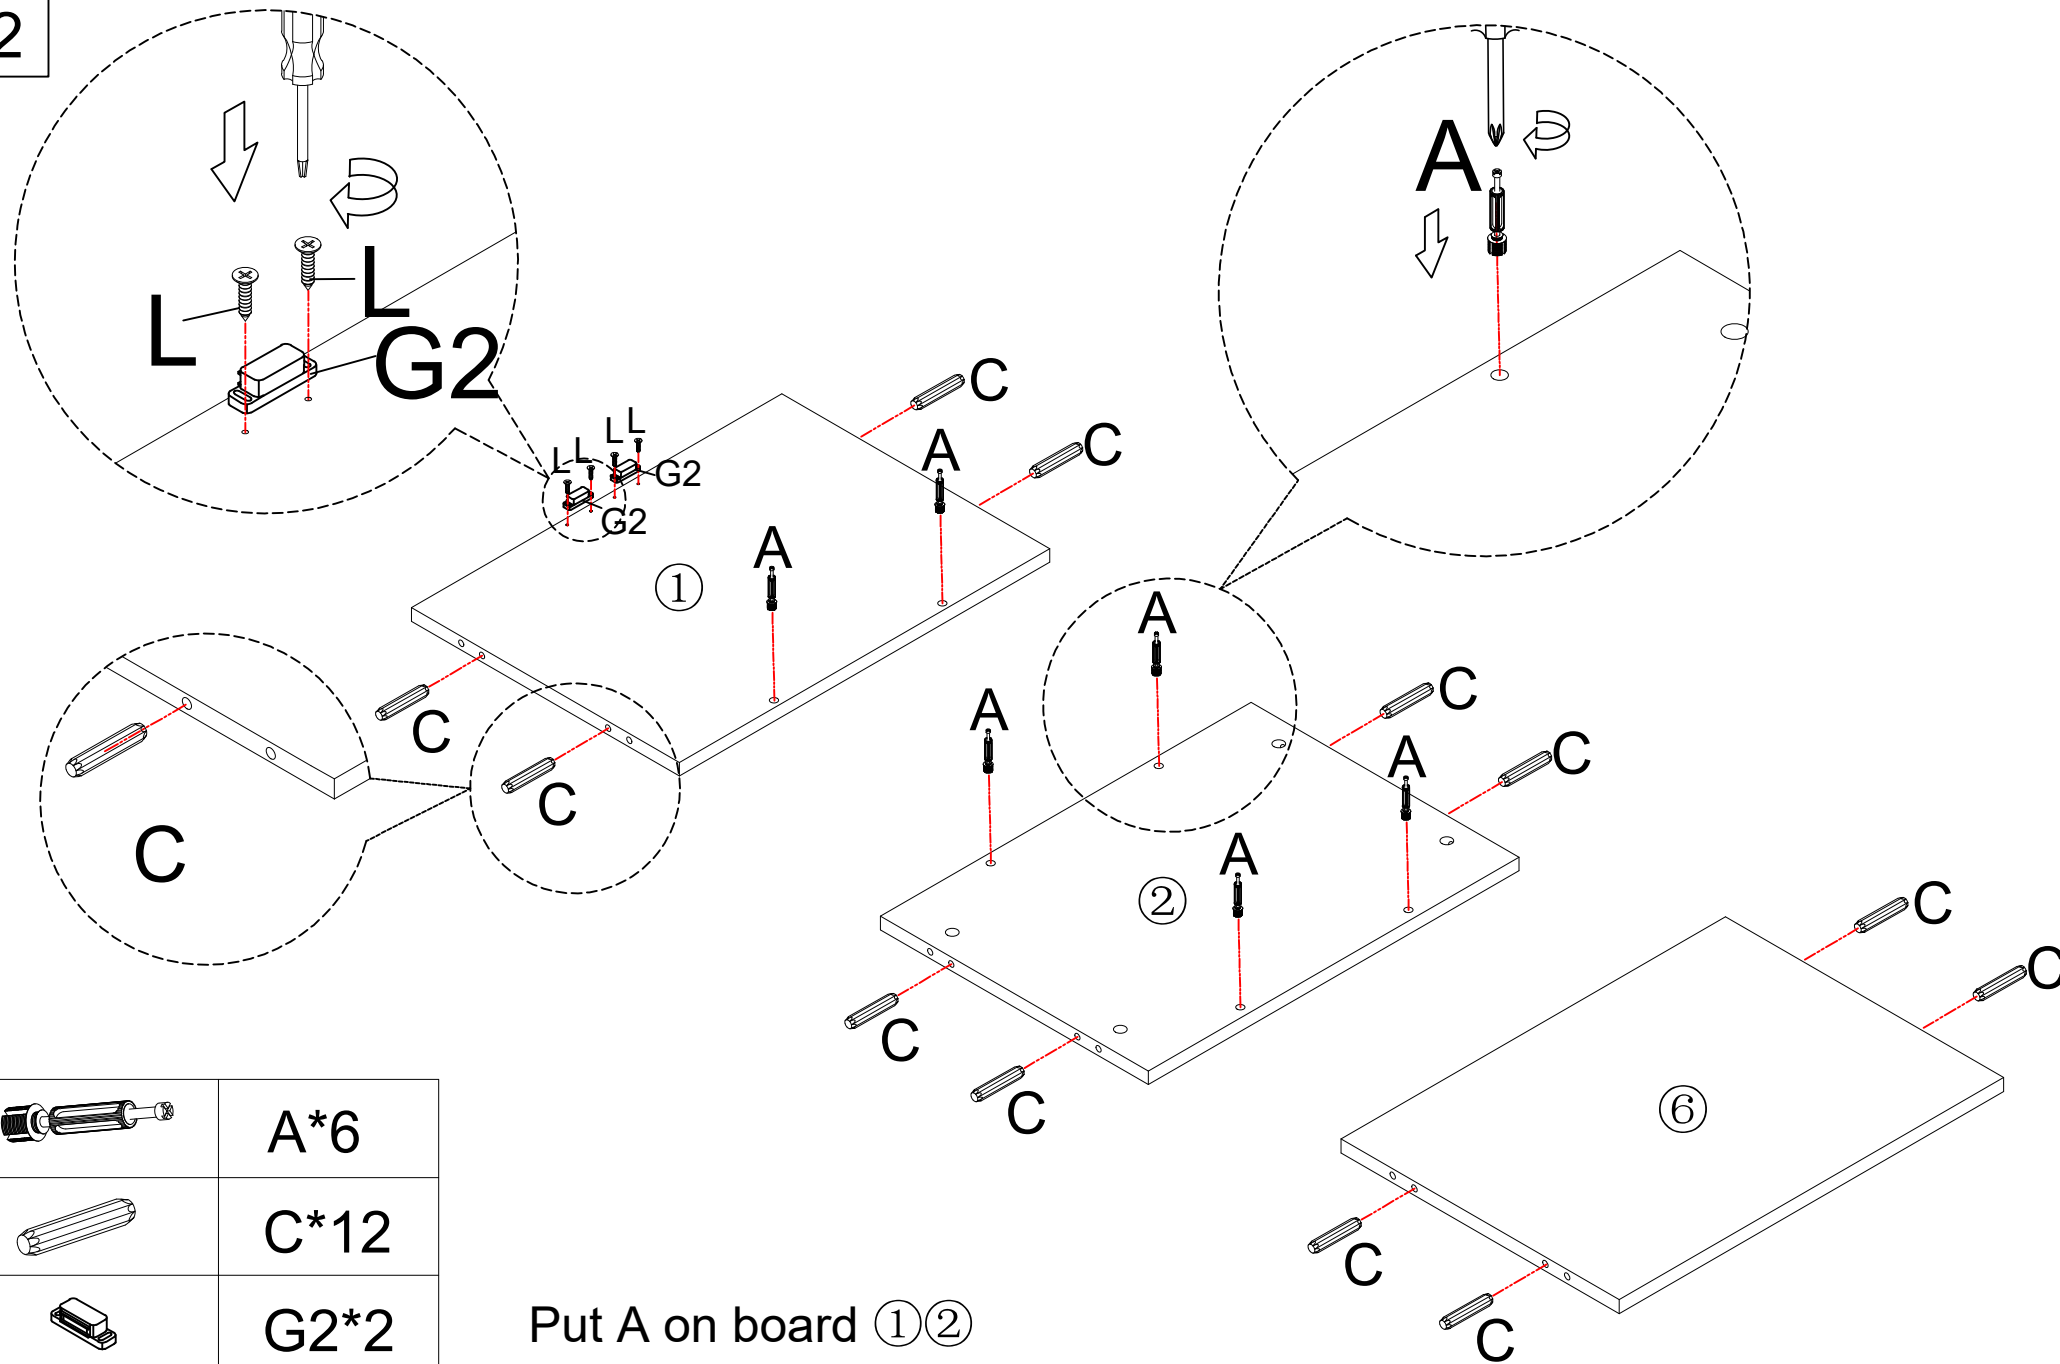

A*6



C*12



G2*2




L*4

Put A on board ①②

Put C on board ①②⑥

3


Make sure the arrow on the screw align to the hole on the side

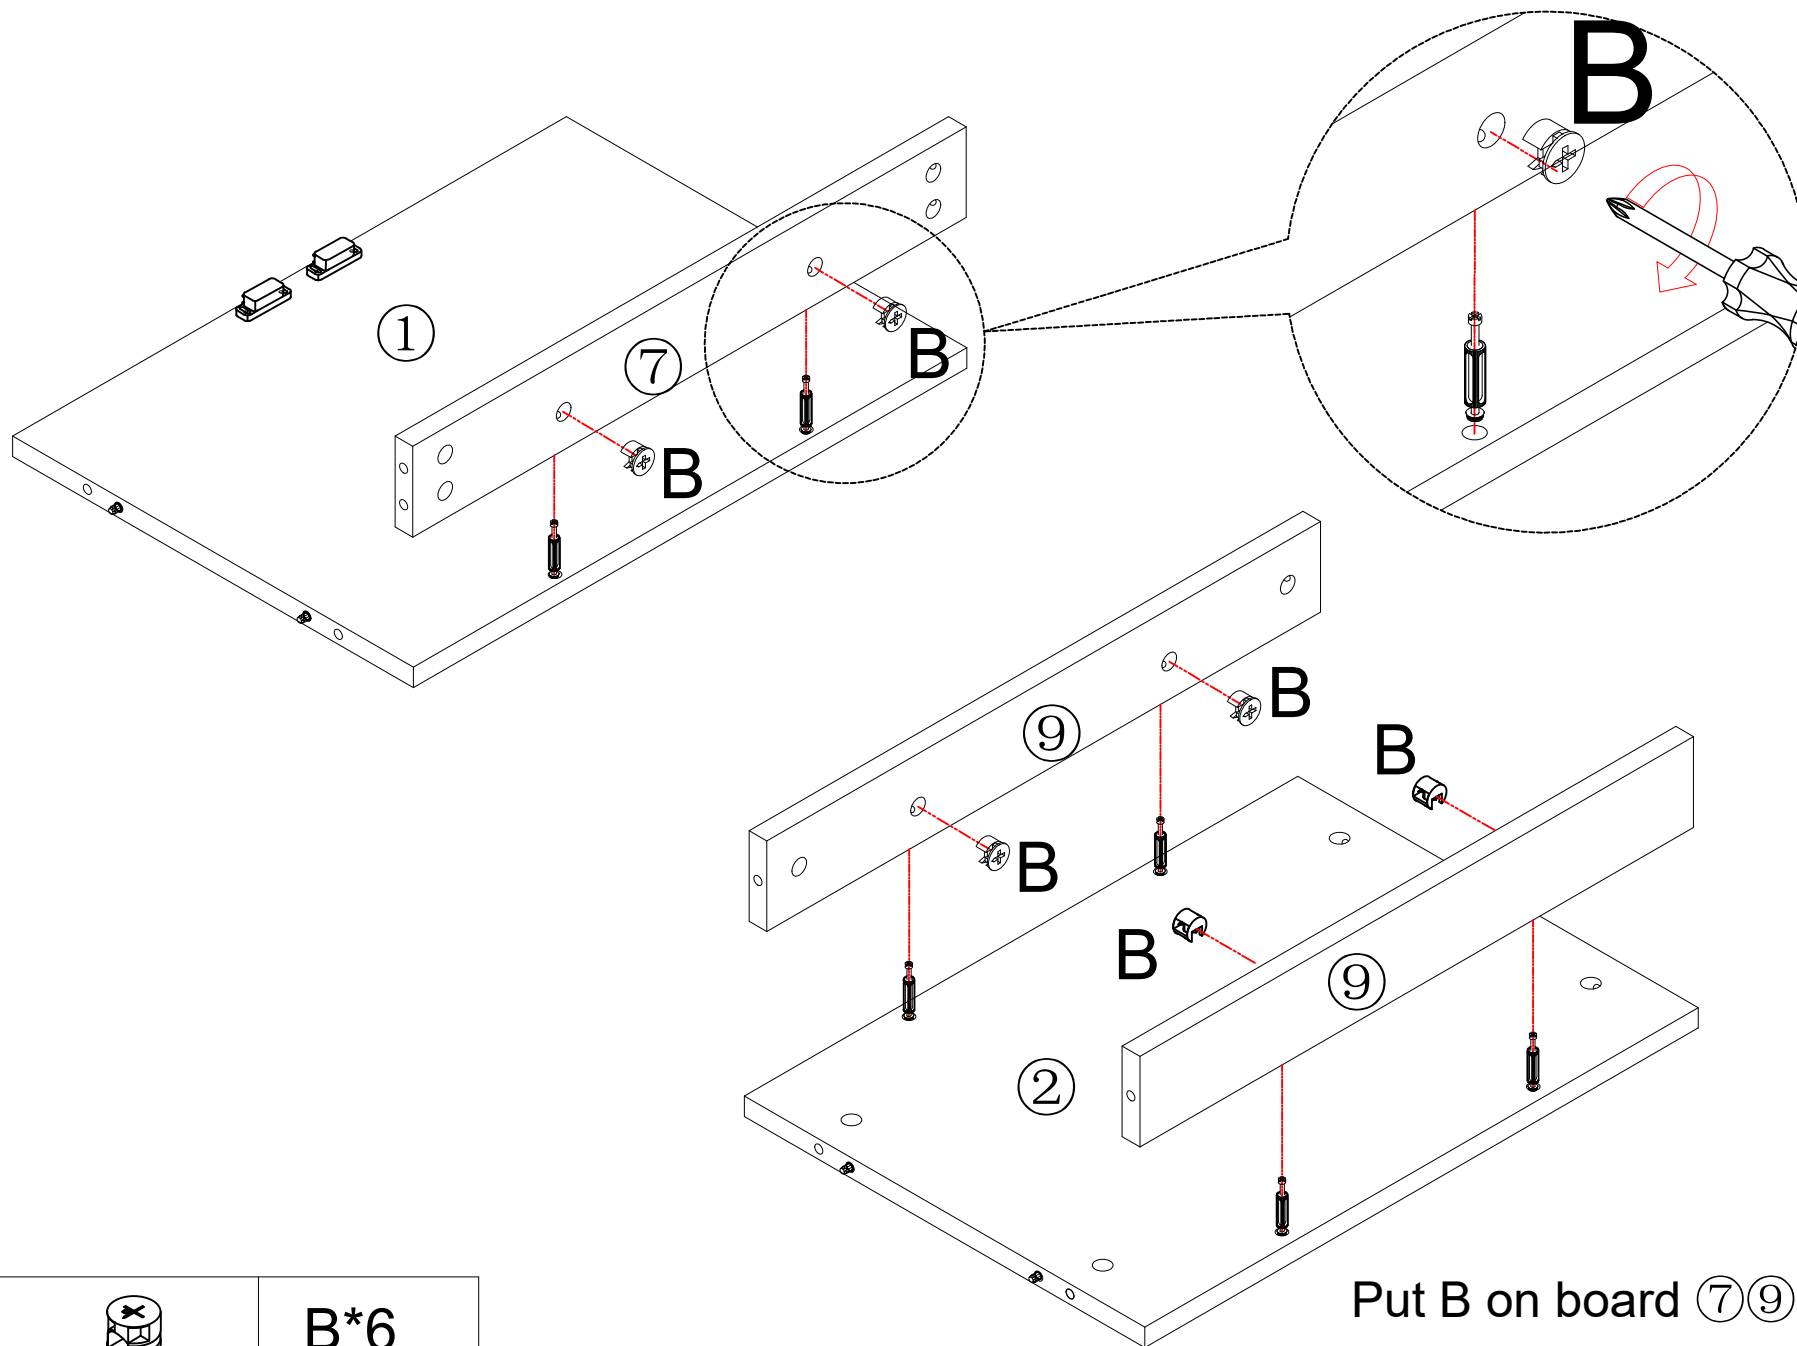

B*6

4

Make sure the arrow on the screw align to the hole on the side

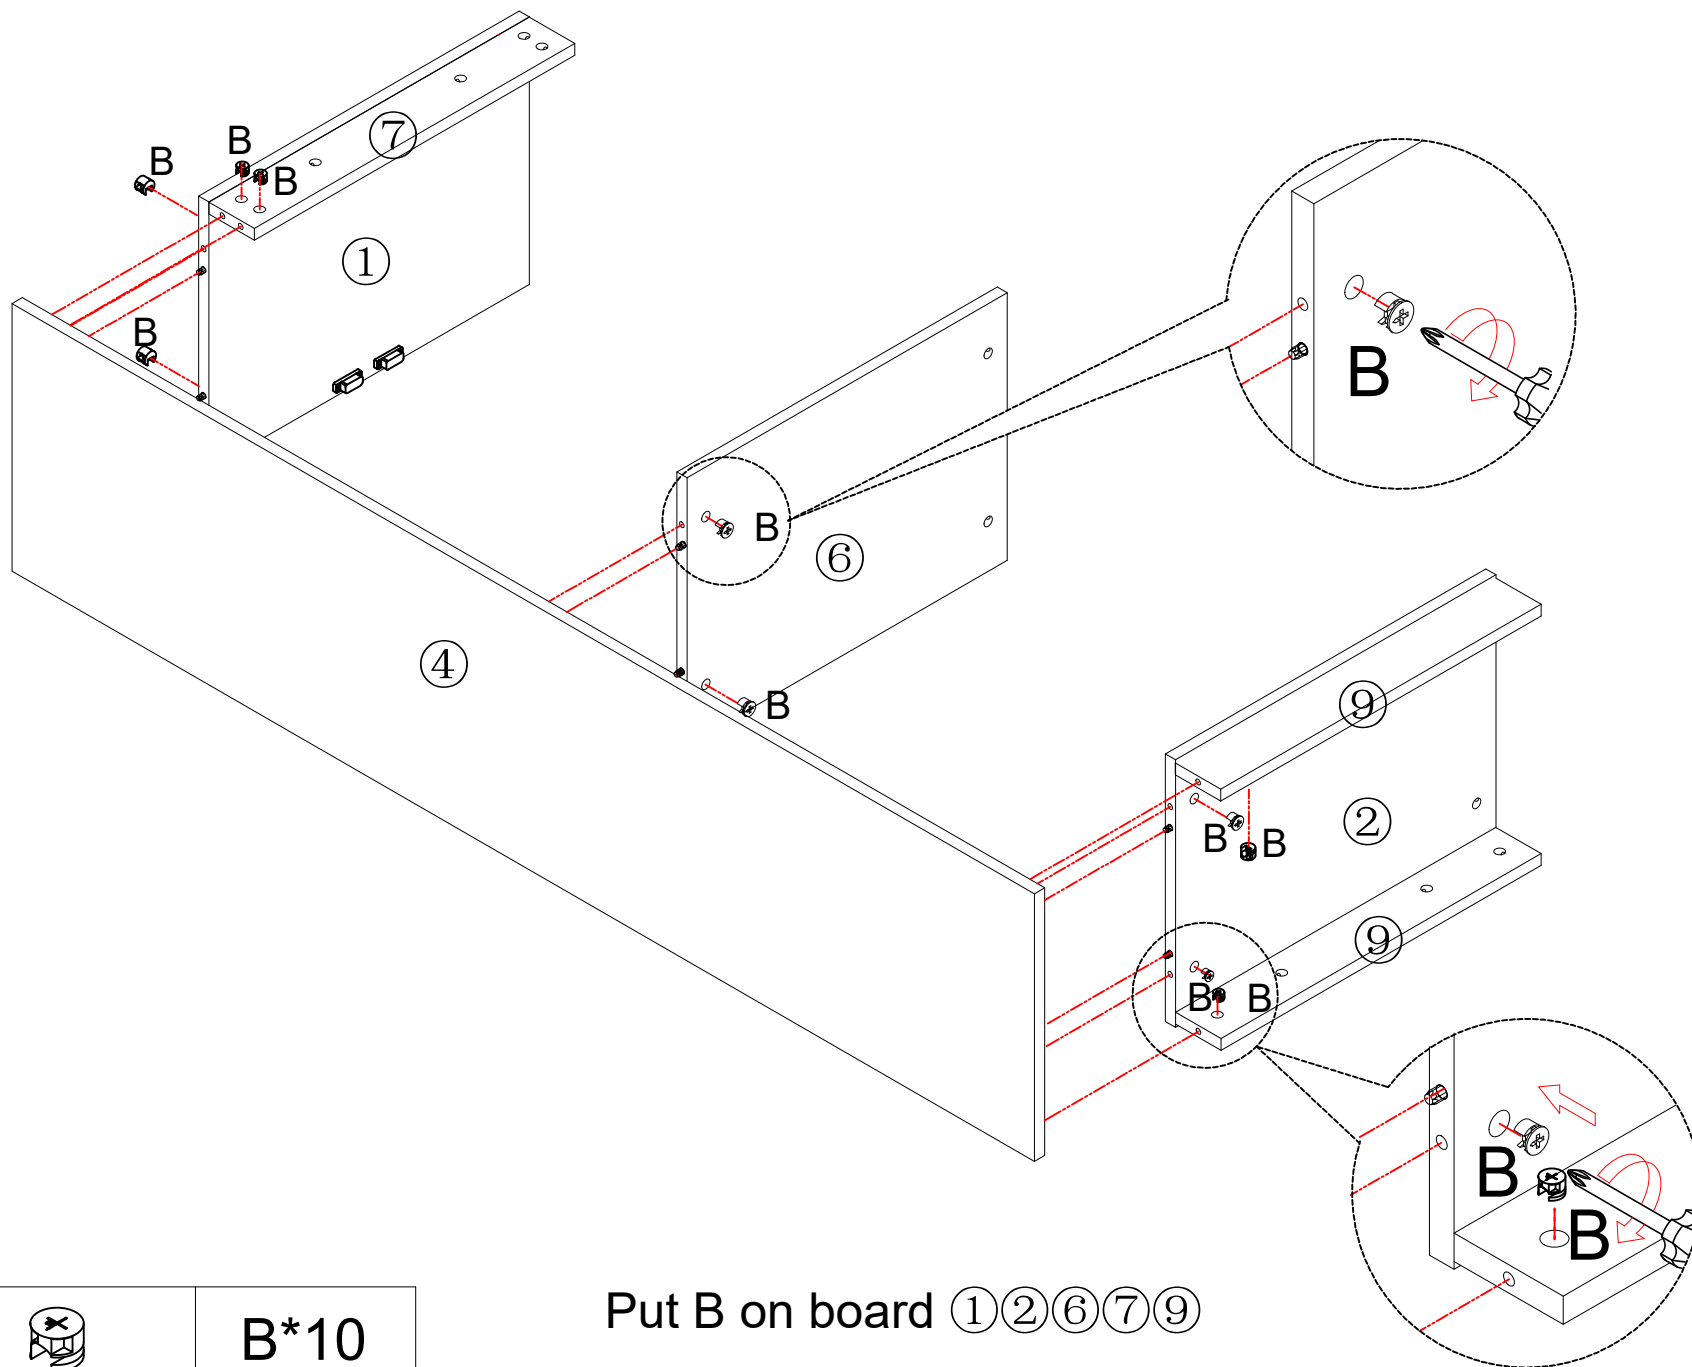


B*10

Put B on board ①②⑥⑦⑨

5



Make sure the arrow on the screw align to the hole on the side

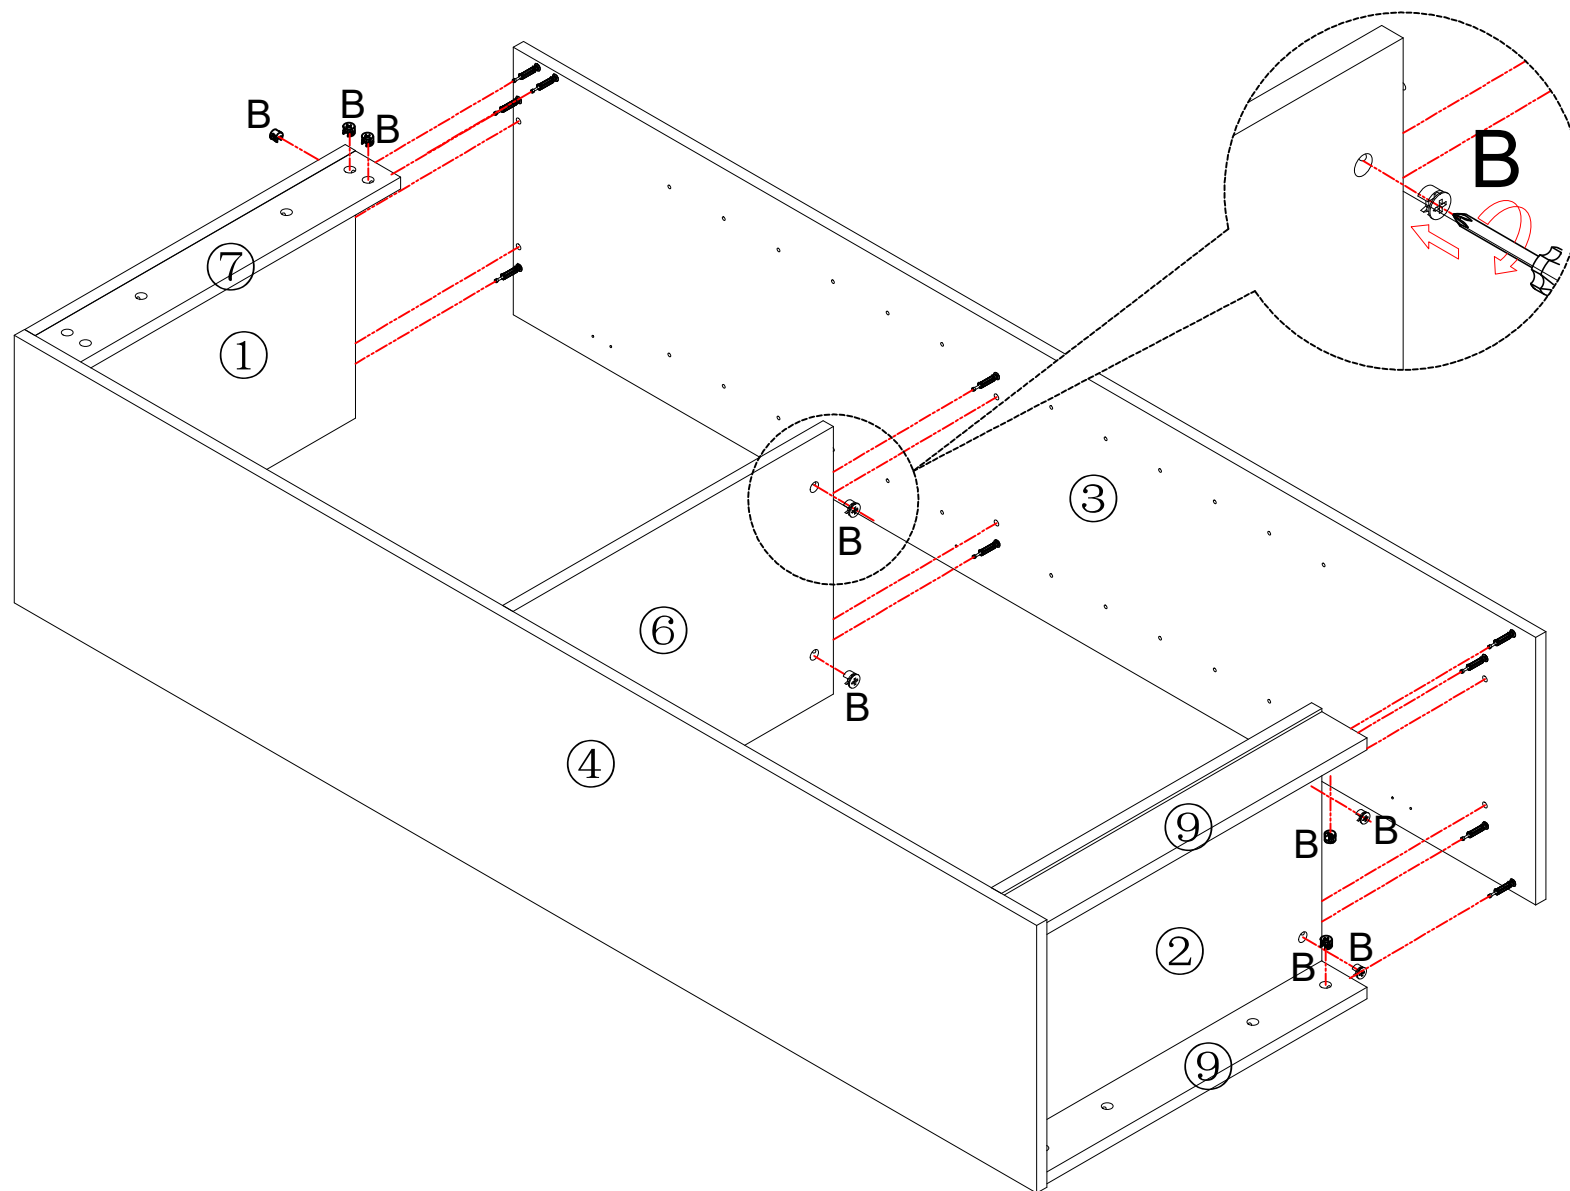

B*10



Put B on board ①②⑥⑦⑨

6

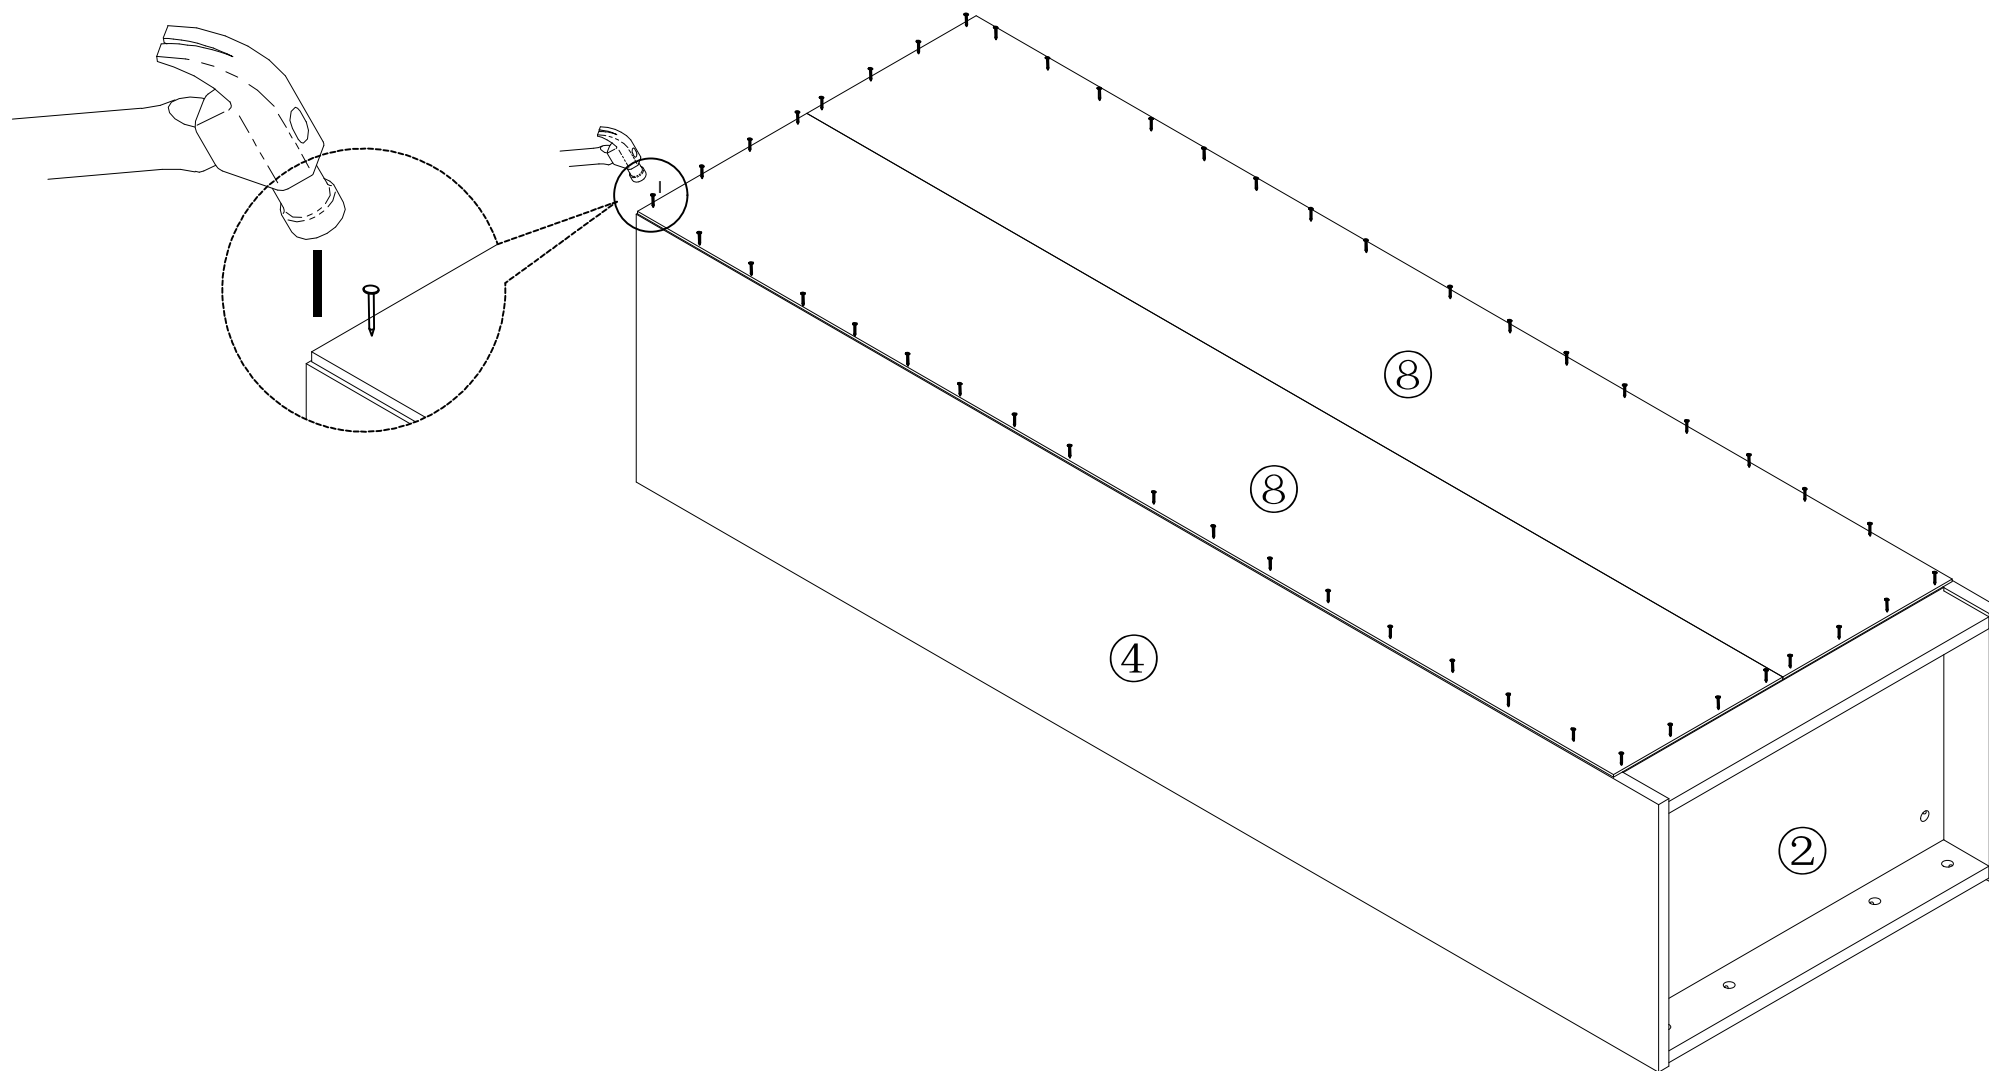

I*40


7

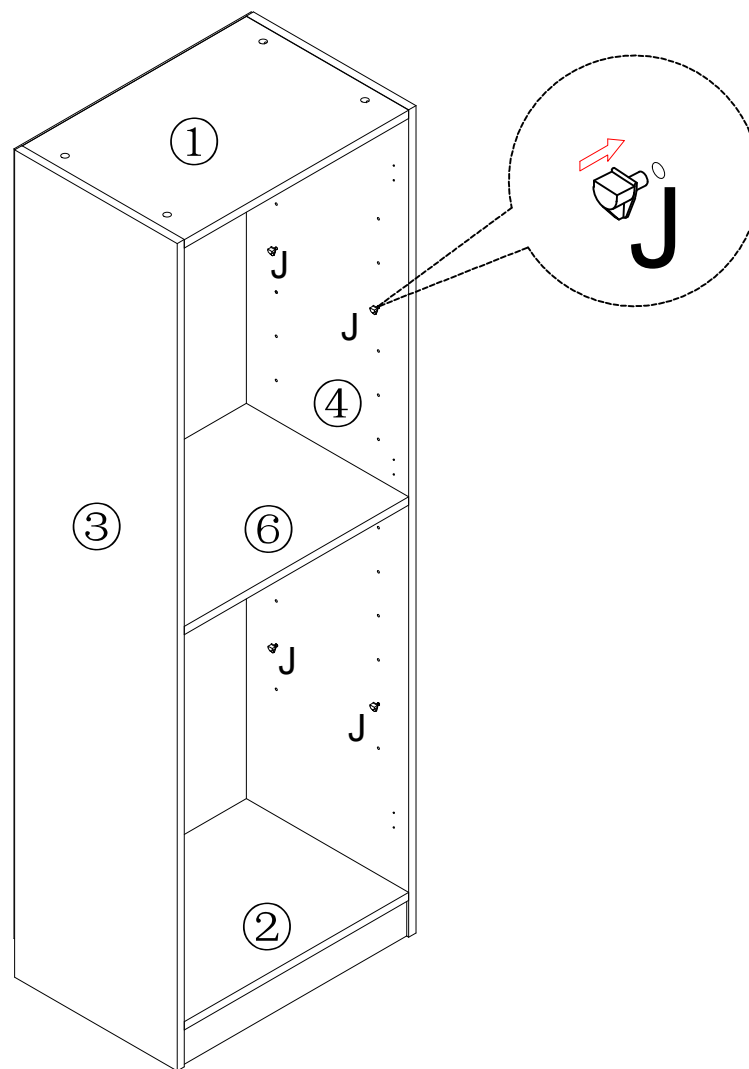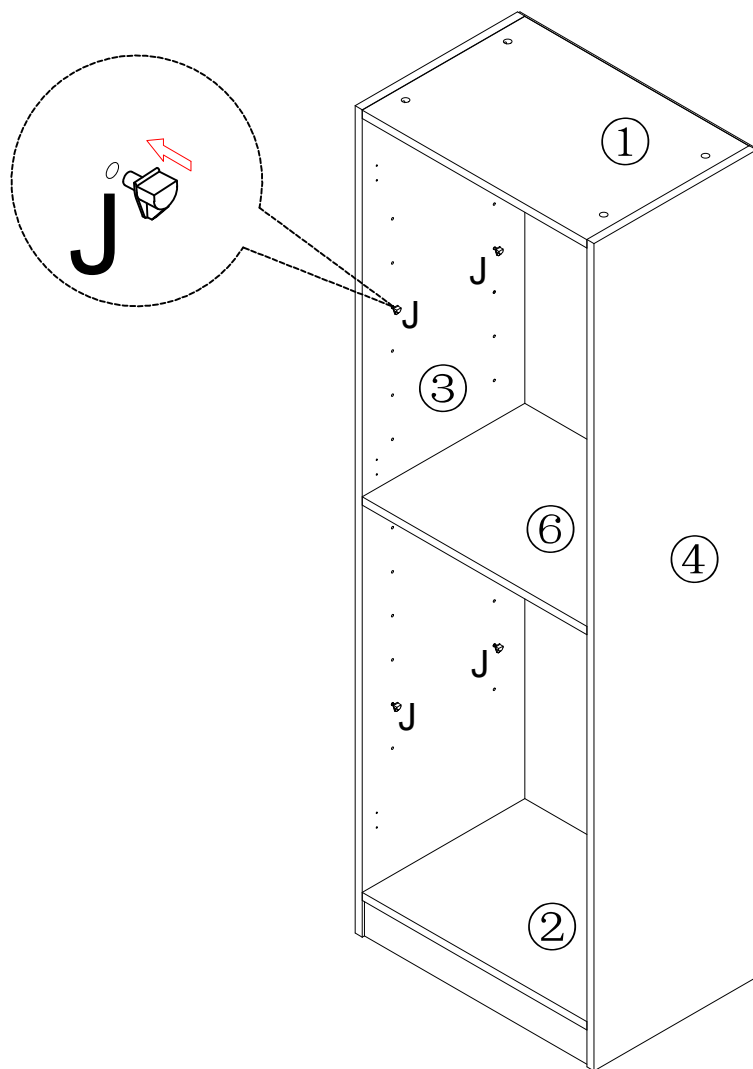



J*8

Put J on board ③④





8

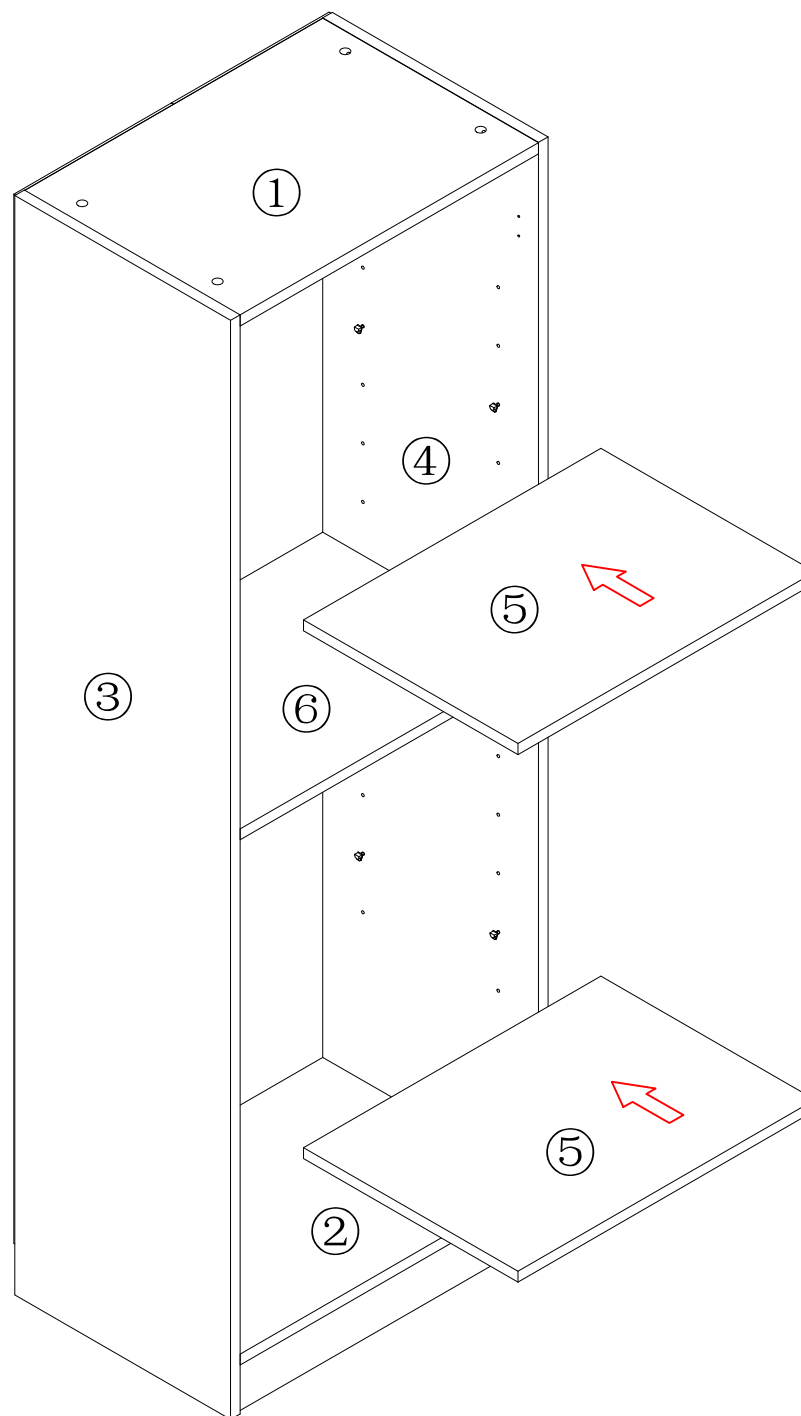

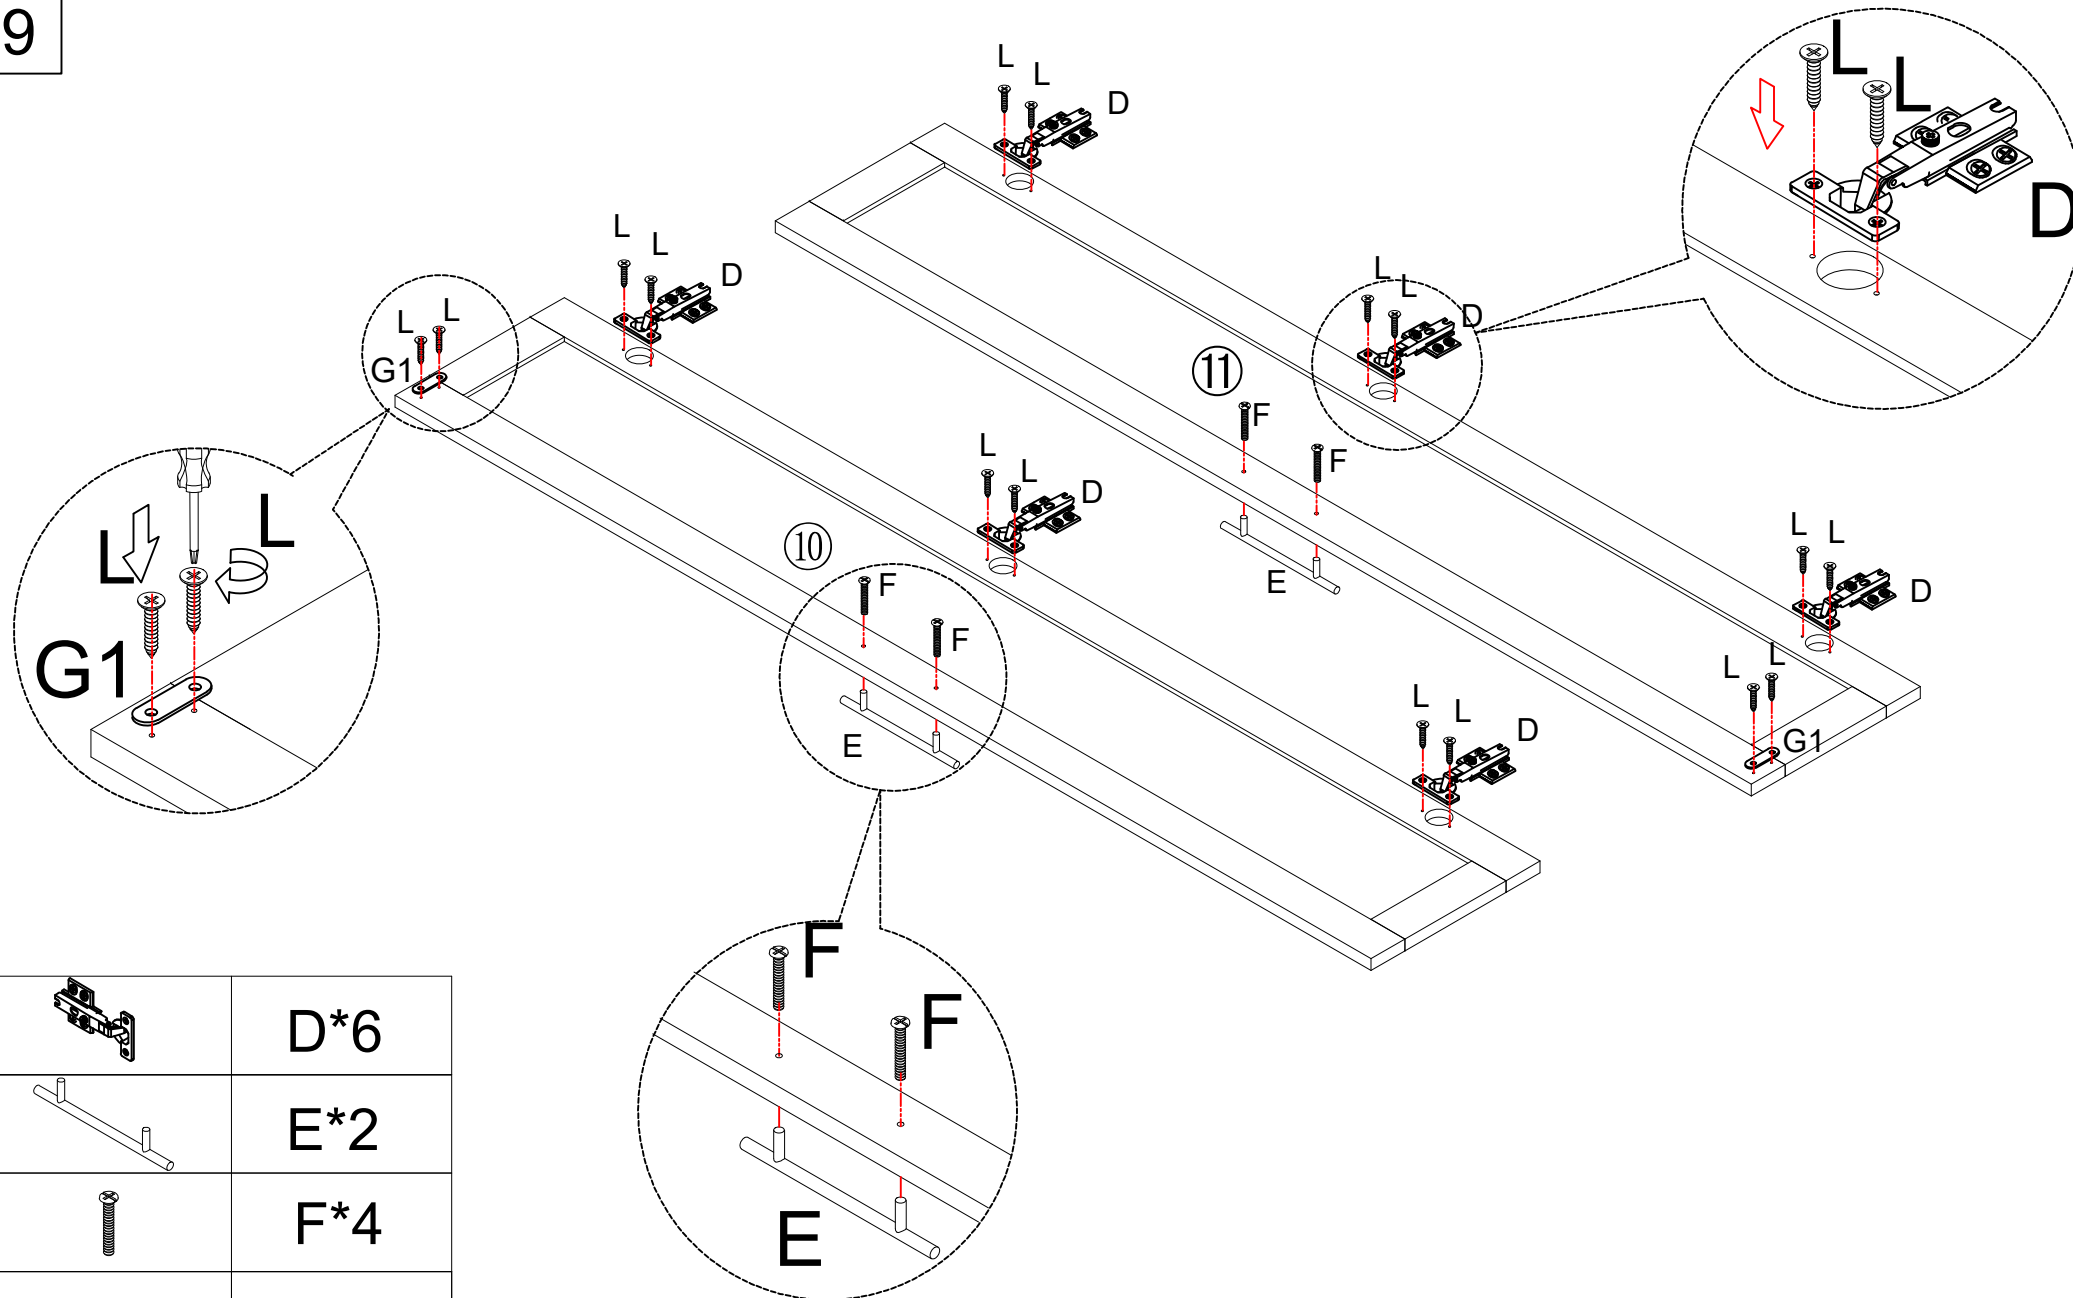



	D*6
	E*2
	F*4
	G1*2
	L*16

10

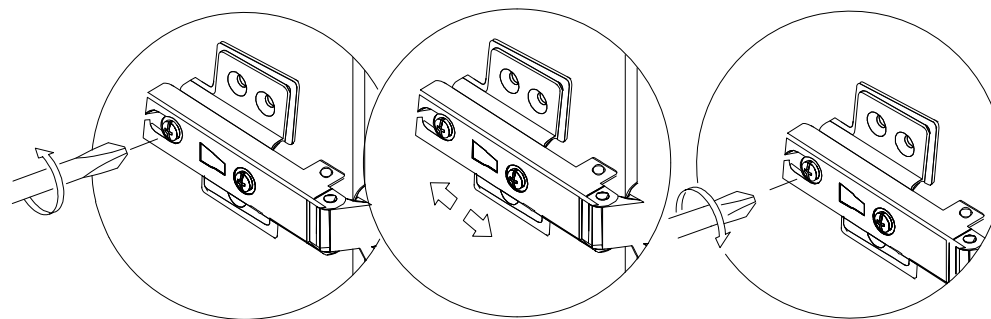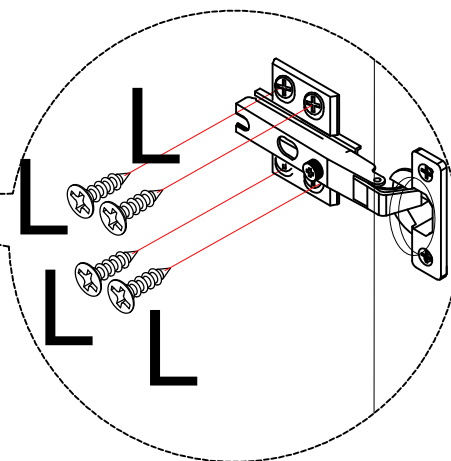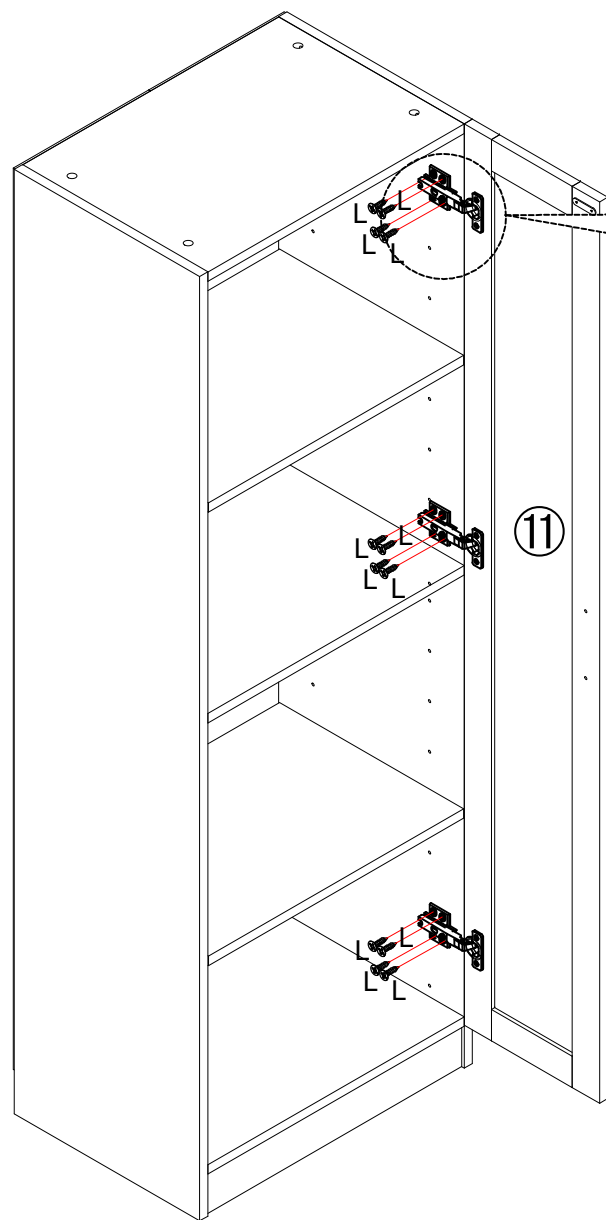



L*12

11

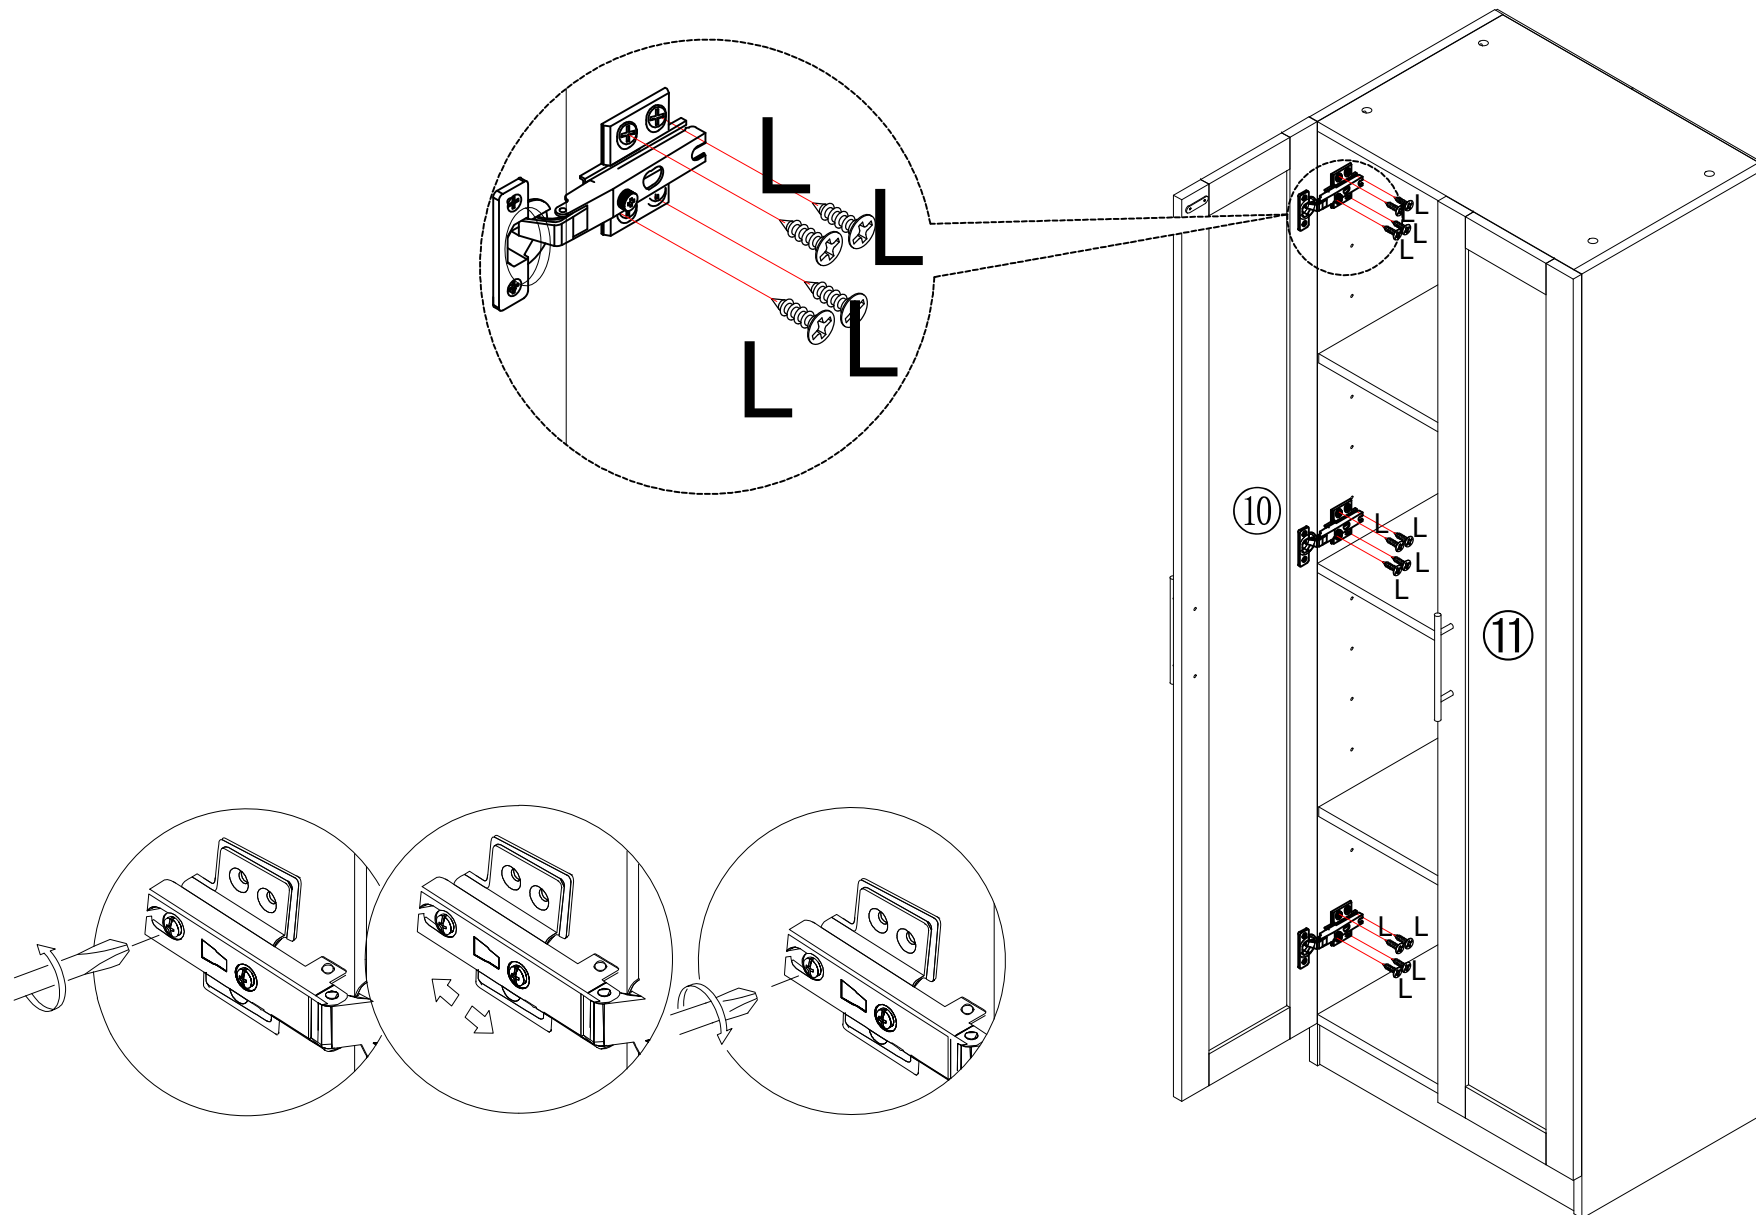

L*12

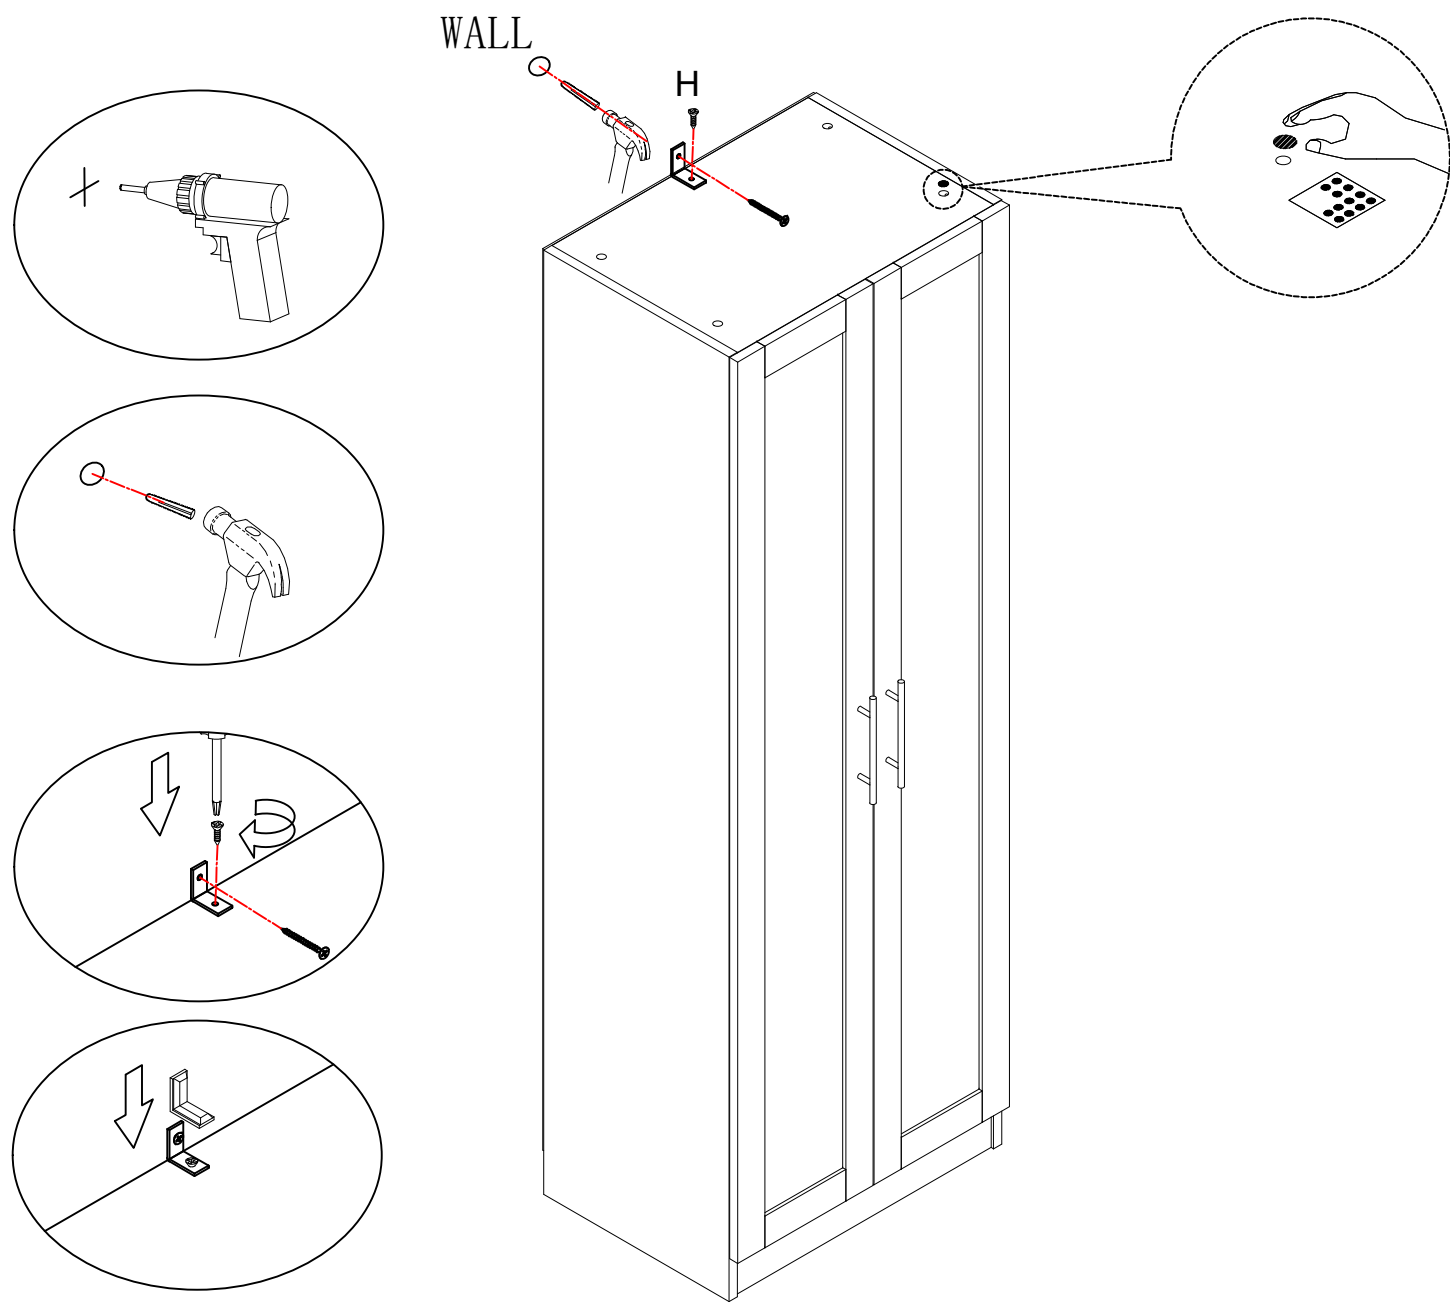

	H*1
	K*26

END