

ASSEMBLY INSTRUCTION

MERCIA FOUR POSTER BED

IMPORTANT: READ THESE INSTRUCTIONS CAREFULLY BEFORE ASSEMBLING OR USING BED FRAME.

PLEASE KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE.

HEALTH & SAFETY:

DO NOT jump on this bed frame.

DO NOT use this bed frame if any parts are missing, damaged or worn.

DO NOT use this bed frame unless all fixings are secured.

Please keep small parts out of reach of children.

Always use on a level, even surface.

WARNING: If this bed is placed on a non-carpeted floor you must place some protection under all legs to stop the bed frame from moving. If this is not adhered to there is no guarantee if the bed frame collapses.

CARE & MAINTENANCE:


Assemble in the room of use.


Periodically check all screws & fixings to ensure they are secure.

DO NOT push the bed frame as this will damage the legs.

Always lift the bed with two people to reposition.

Keep any sharp objects away from the frame.

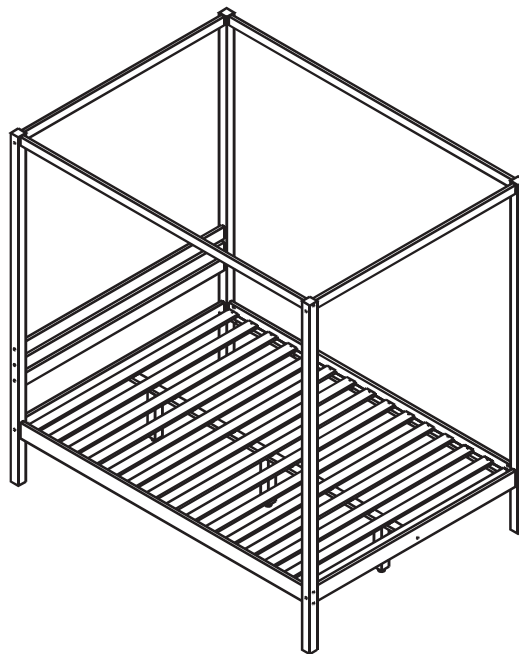

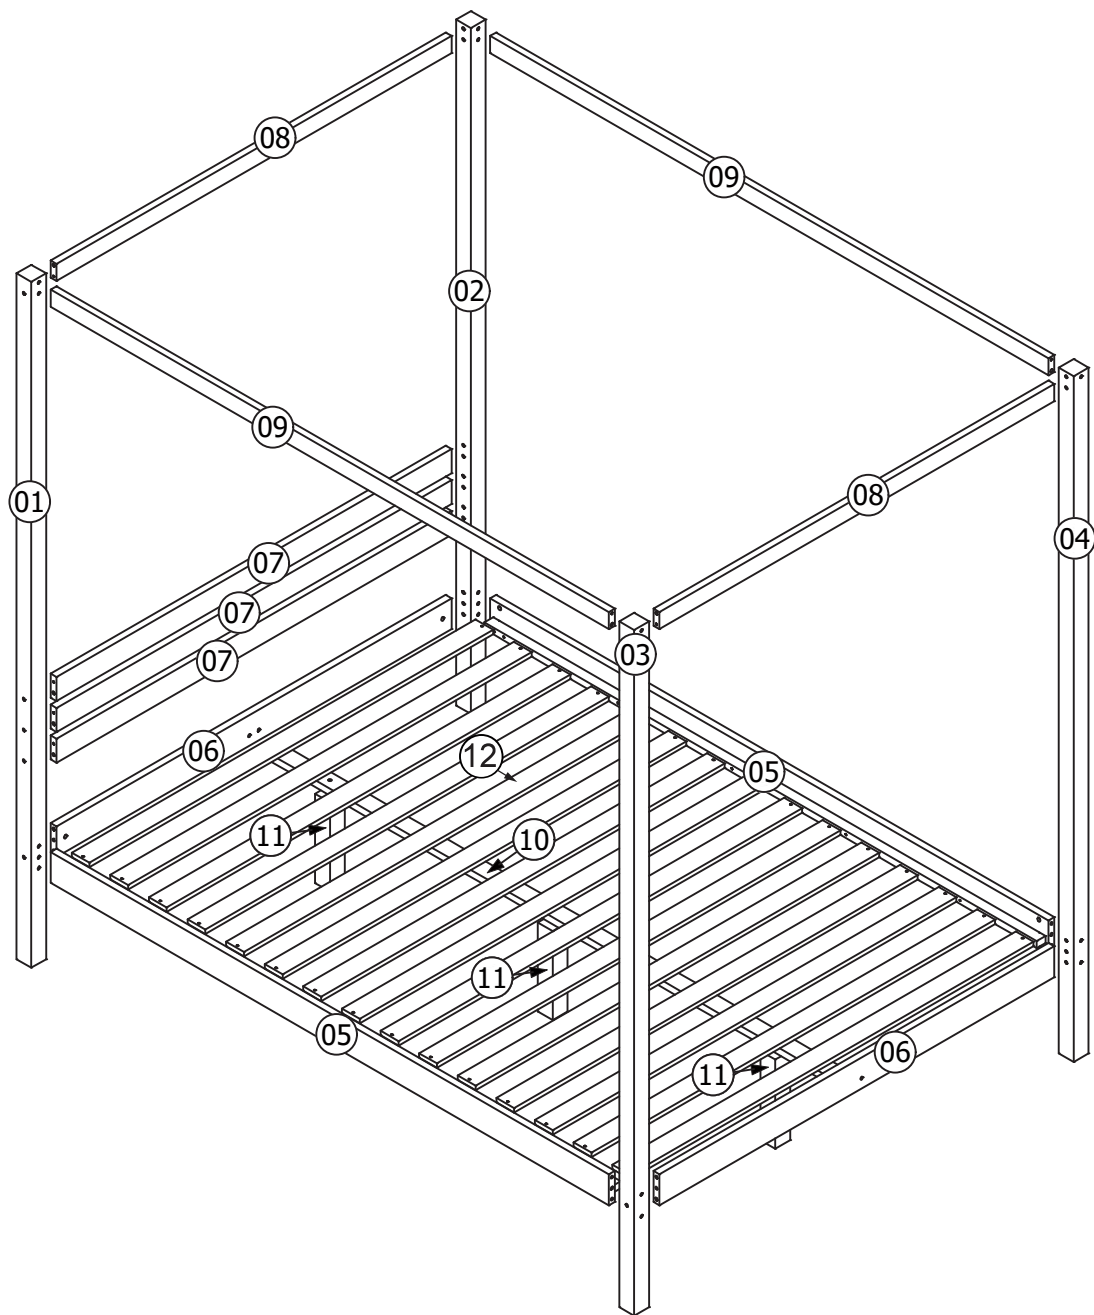















****You will need a screwdriver and a small mallet (not provided).**


****2 PERSON ASSMBLY.**

Parts List			
PART	DESCIRPTION	QTY	BOX
1	HEADBOARD LEG(LEFT)	1	1
2	HEADBOARD LEG(RIGHT)	1	1
3	FOOTEND LEG(LEFT)	1	1
4	FOOTEND LEG(RIGHT)	1	1
5	SIDERAILS	2	1
6	HEADBOARD&FOOTEND BOTTOM PANEL	2	1
7	HEADBOARD UPPER PANEL	3	1
8	TOP FRAME(WIDTH)	2	1
9	TOP FRAME(DEPTH)	2	1
10	CENTRE RAIL	1	1
11	SUPPORT LEG	3	1
12	SLATS	1	2

HARDWARE (IN BOX1)


A	 15mm	 M6x90mm	12
B		Ø10.5x16mm	12
C	 8mm	 Ø8x30mm	28
D	 10mm	 Ø7x60mm	05
E	 15mm	 Ø6x90mm	14
F	 8mm	 Ø4x30mm	30
G		40x40mm	04
H			03
K		4mm	01

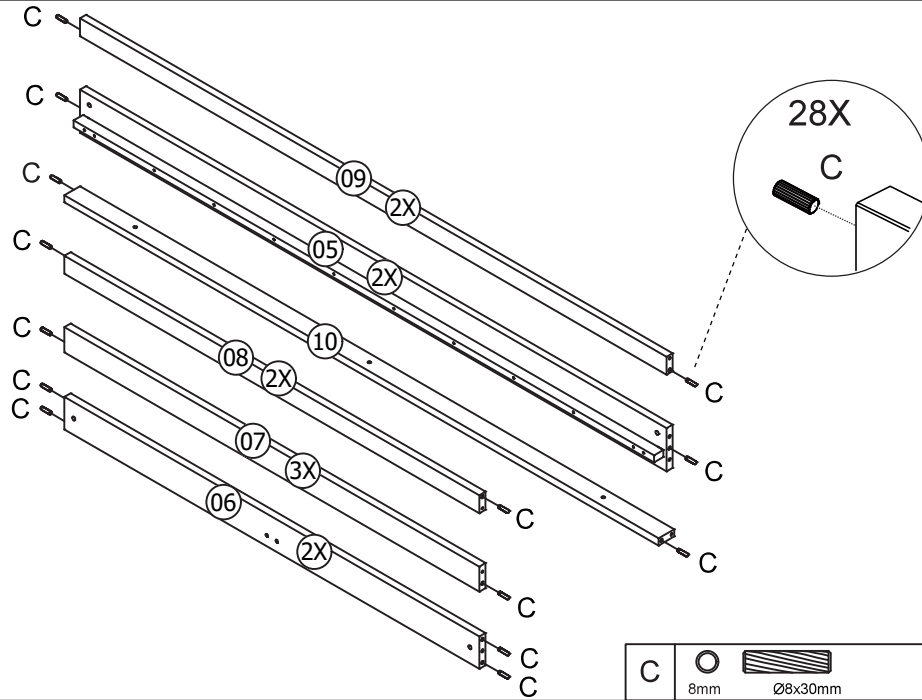

01



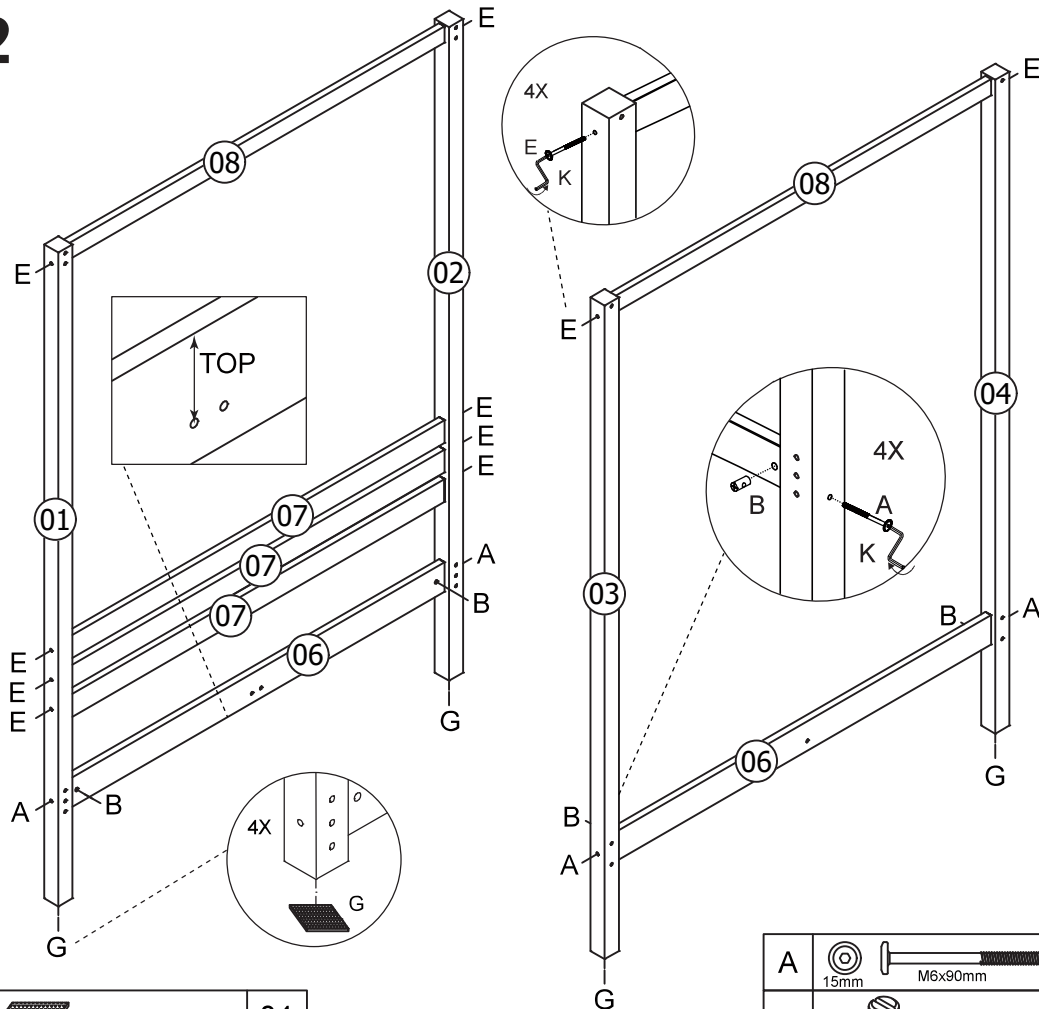


28


02






G	 40x40mm	04
K	 4mm	01


A	 15mm	M6x90mm	04
B		Ø10.5x16mm	04
E	 15mm	Ø6x90mm	10

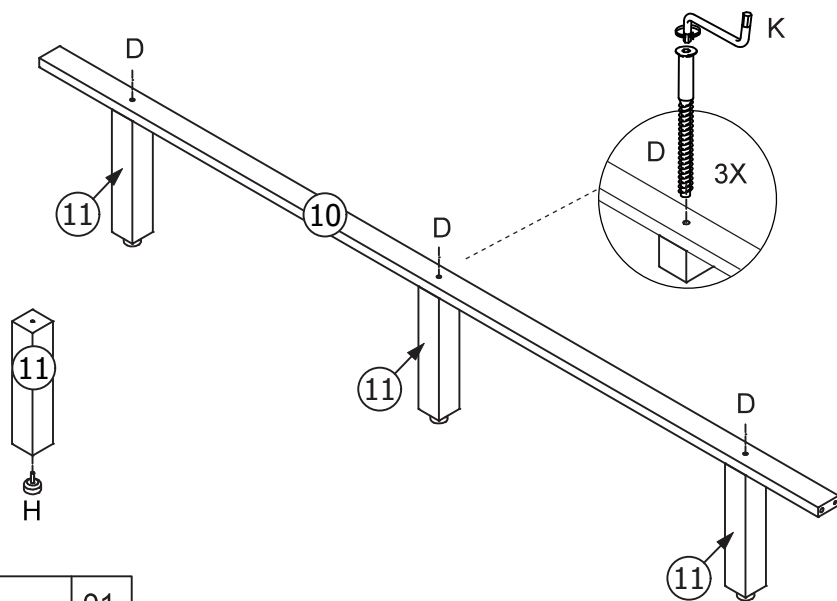


03





K		4mm	01
D		10mm Ø7x60mm	03
H			03


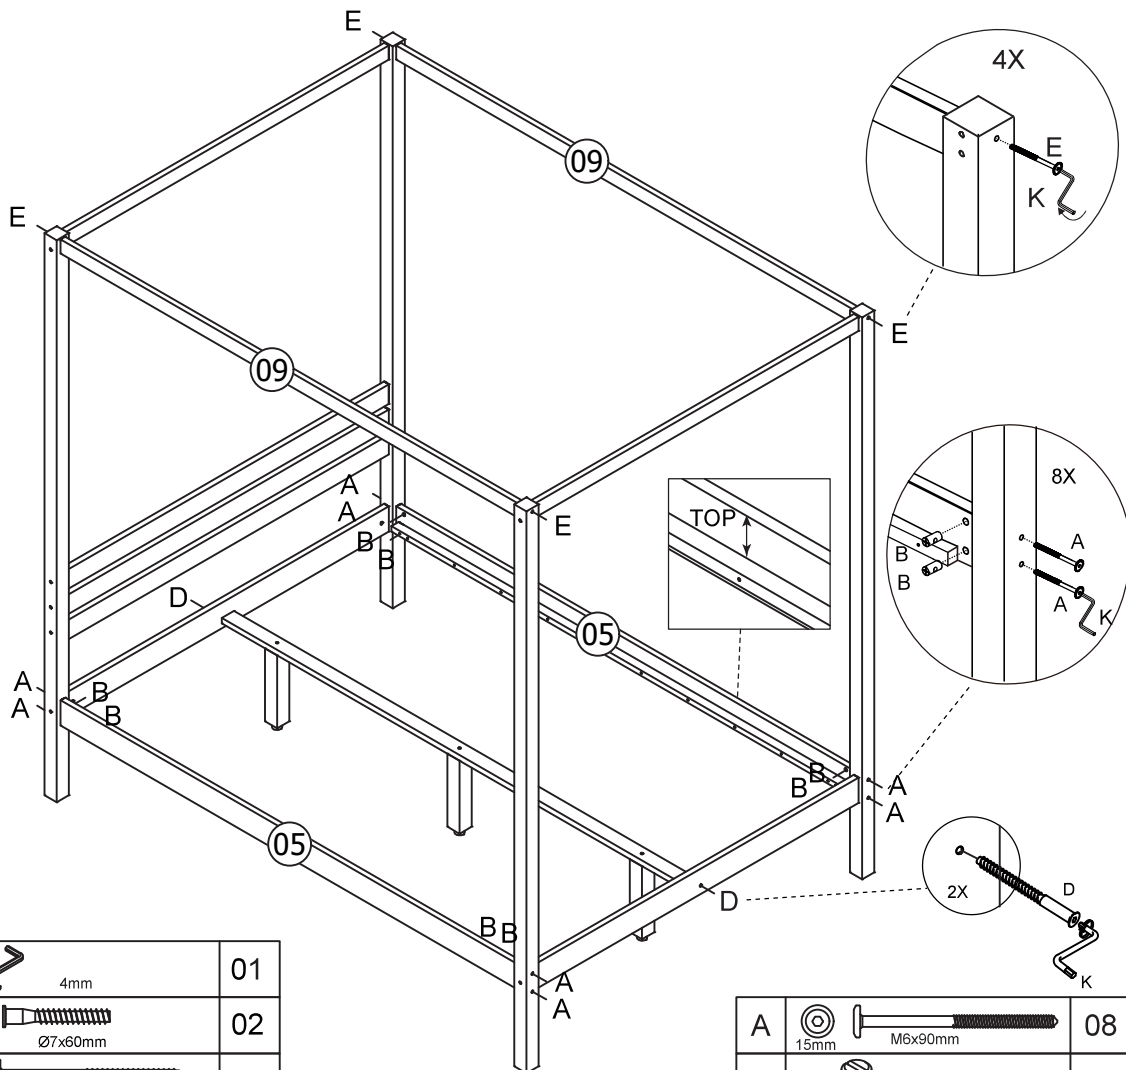
04



K		4mm	01
D		10mm Ø7x60mm	02
E		15mm Ø6x90mm	04


A		15mm M6x90mm	08
B		Ø10.5x16mm	08

05

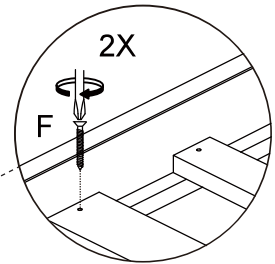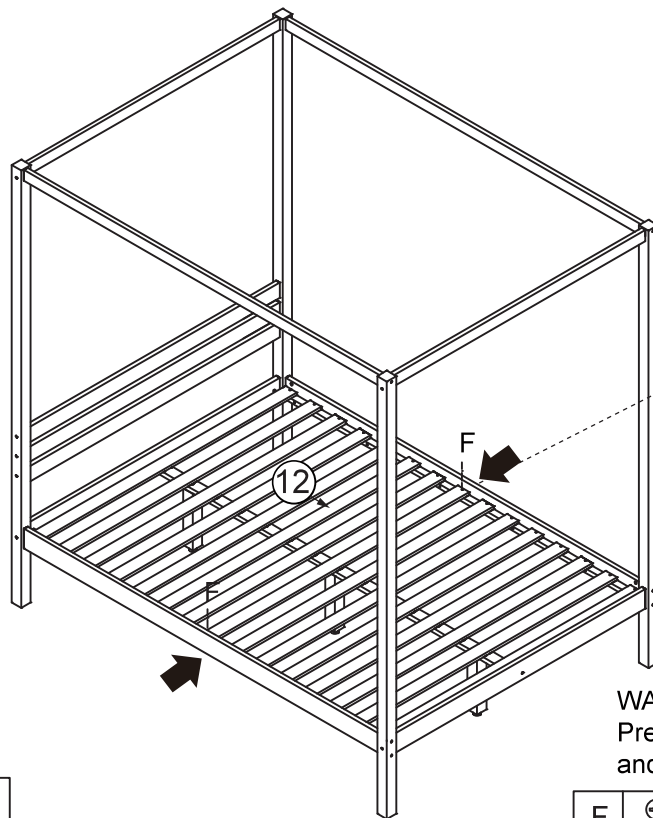



WARNING:
Press the middle of bed sides
and tighten the screw first.





F  8mm  Ø4x30mm

02

06

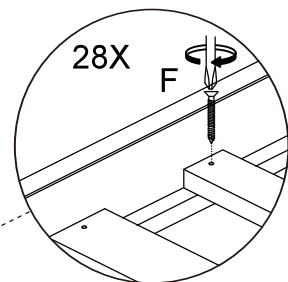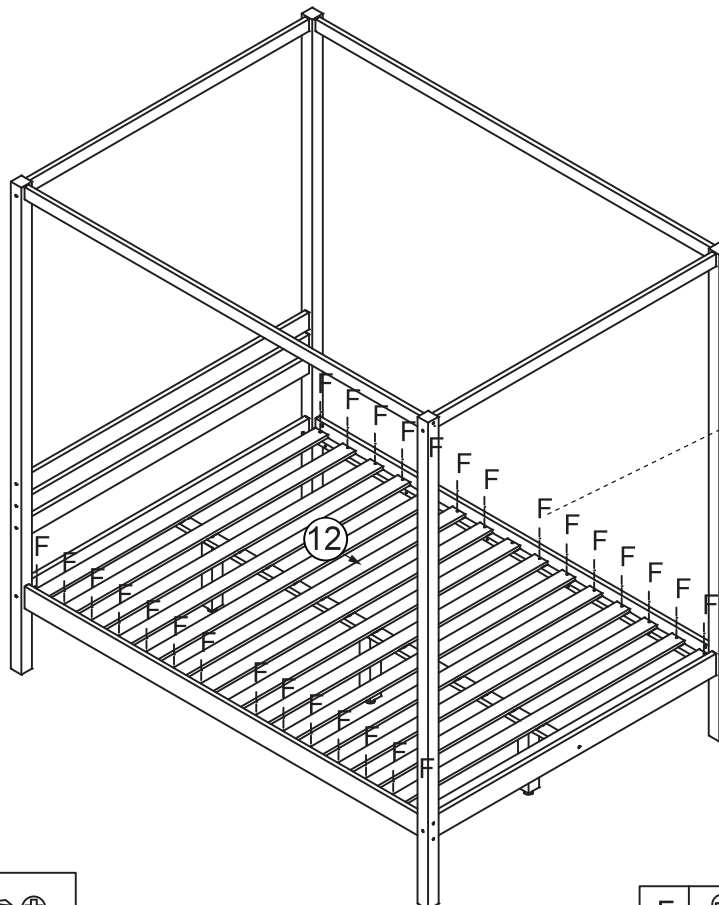

F  8mm  Ø4x30mm

28