




INSTRUCTION SHEET

Canopy Lid Assembly

You've made a great choice in adding an Avante™ Series receptacle to your site. Following the instructions below will help receptacles perform at their best and look great as long as you own them.



CANOPY LID ASSEMBLY

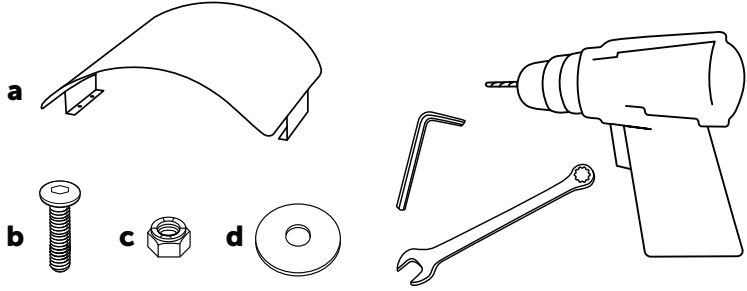


SUPPLIED PARTS:

- a. 1 – Canopy
- b. 4 – 1/4" -20 Screws
- c. 4 – 1/4" -20 Locknuts
- d. 8 – 1/4" Washer


TOOLS REQUIRED:

- Power drill and 17/64 Bit
- 5/32" Allen Wrench
- 7/16" Wrench or Socket


BEFORE YOU BEGIN: Install the two provided 793100 anchor kits to the receptacle. Instructions can be found inside the anchor kit packages. These anchor kits must be installed and failure to do so could result in injury.

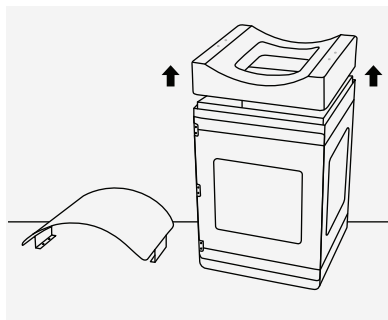


1. Remove lid
Remove lid from receptacle.

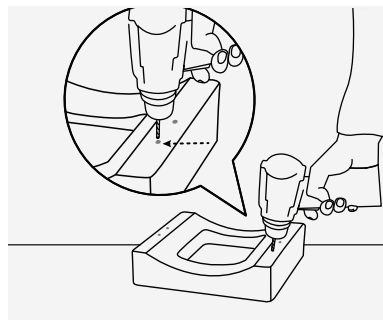


2. Drill canopy lid holes
Locate the 4 dimples on top of the receptacle lid. Using these as pilots, drill through the lid using a 17/64" or equivalent drill bit. Line up the 4 drilled holes in the lid with the 4 holes in the canopy.

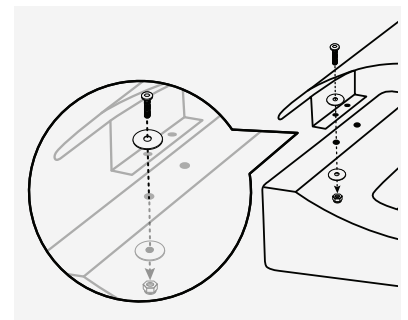


3. Secure canopy to lid
Place washer on screw and feed through the canopy, then through the lid. Place additional washer on the exposed end of the screw inside the lid, followed by locknut.

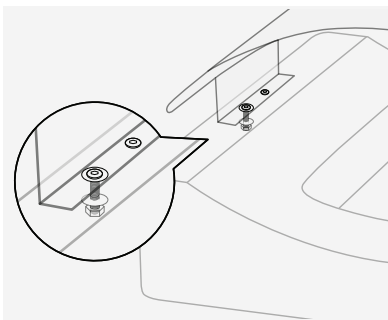

4. Place hardware
Use a 5/32" Allen Wrench and 7/16" wrench or socket to tighten the screw and nut assembly, but only enough to keep it in place. Repeat for all screws.

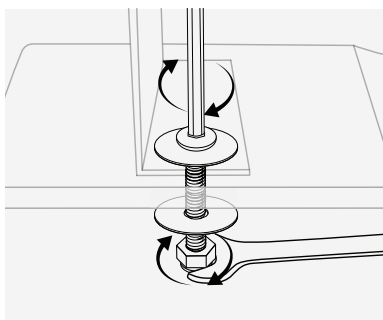

5. Tighten hardware
Once all hardware is in place, use Allen wrench and wrench or socket to tighten all until snug.

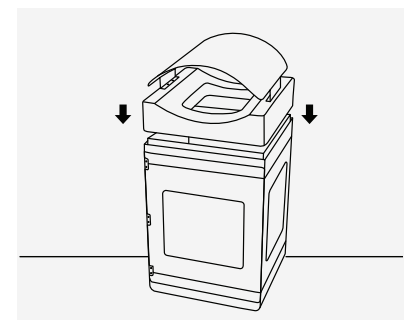

6. Place on receptacle
Place the newly assembled canopy lid on the receptacle.