

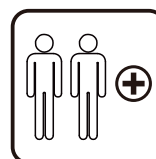
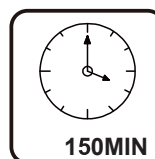
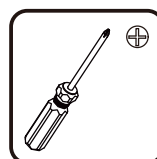
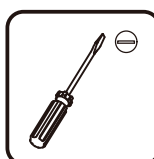



Installation & Assembly

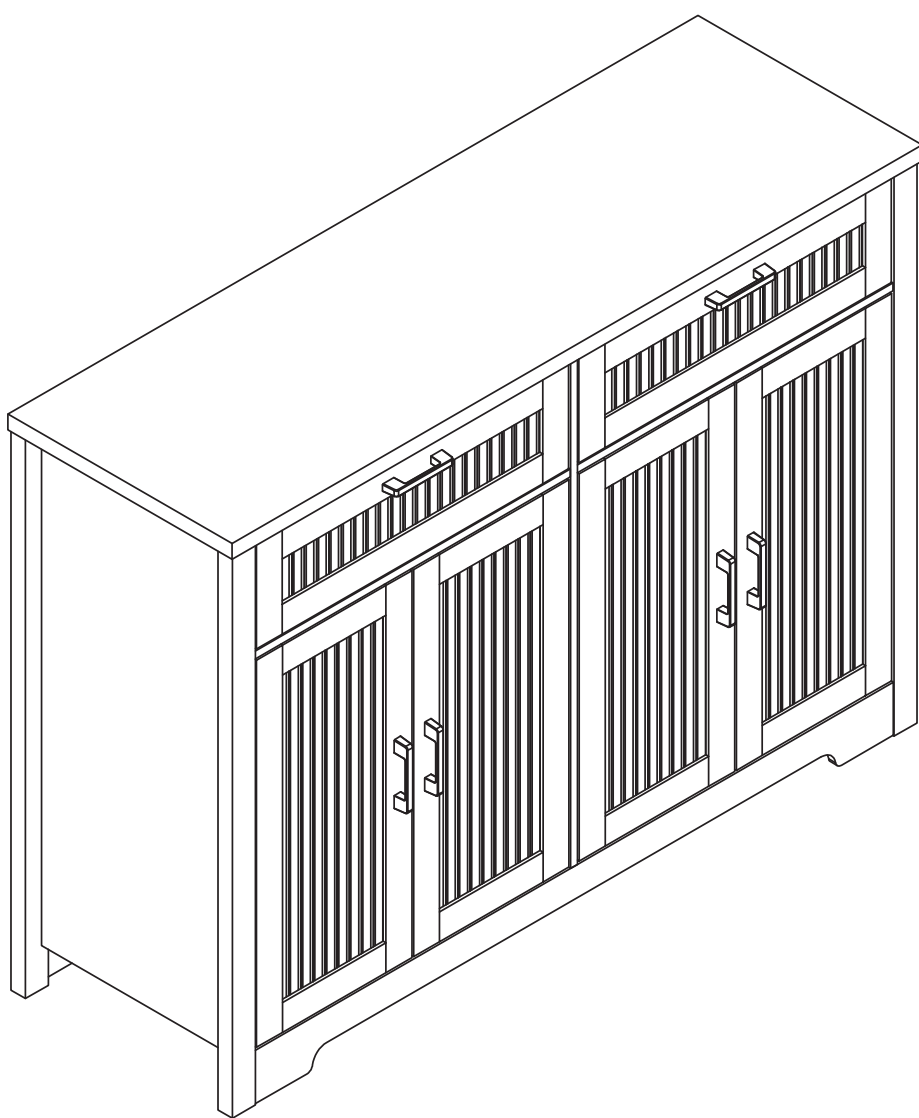


EN_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

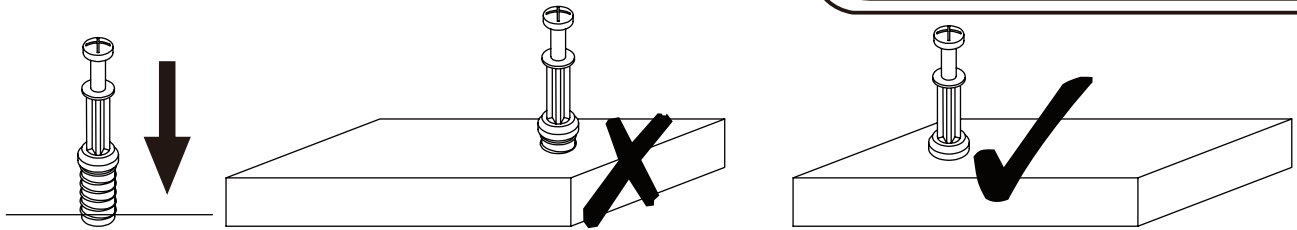


EN_QUICKFIT: Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

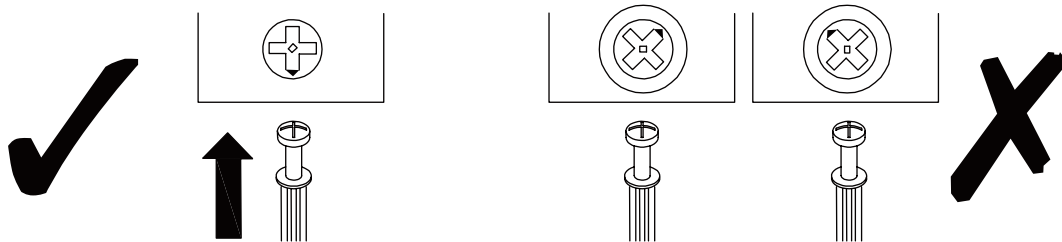












EN_CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.










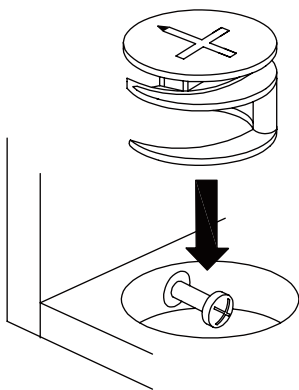





EN_Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.


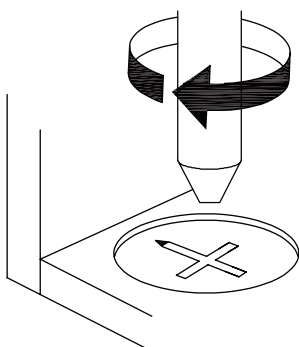










EN_Turn cam lock clockwise to tighten.

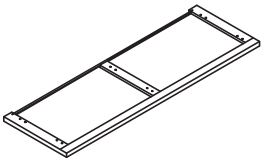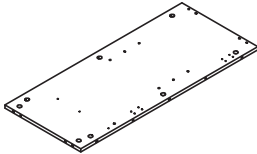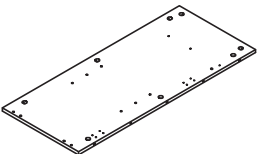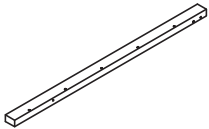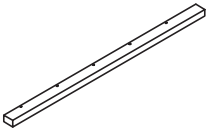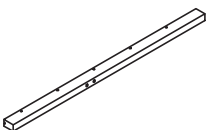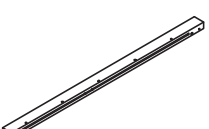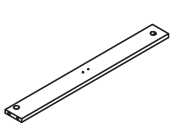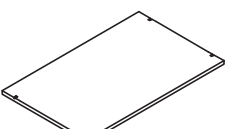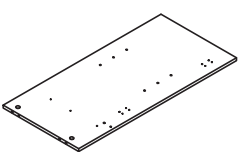NO.	PARTS	QTY	SPARE
①		x1	
②		x1	
③		x1	
④		x1	
⑤		x1	
⑥		x1	
⑦		x1	
⑧		x1	
⑨		x2	
⑩		x1	
⑪		x1	

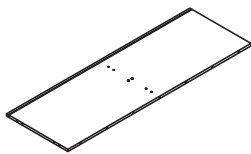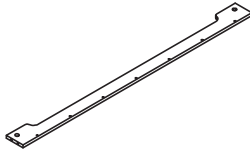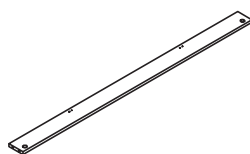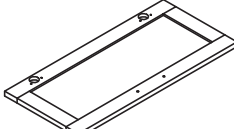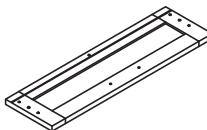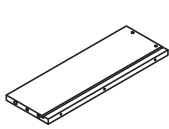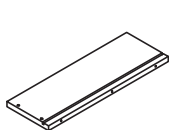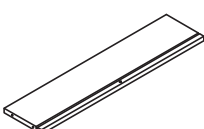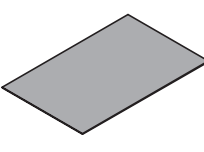
NO.	PARTS	QTY	SPARE
⑫		x1	
⑬		x1	
⑭		x1	
⑮		x1	
⑯		x4	
⑰		x2	
⑱		x2	
⑲		x2	
⑳		x2	
㉑		x2	
㉒		x2	

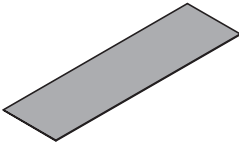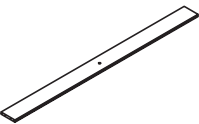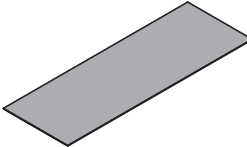NO.	PARTS	QTY	SPARE
②3		x1	
②4		x1	
②5		x1	
	 Hardware Kit	x1	

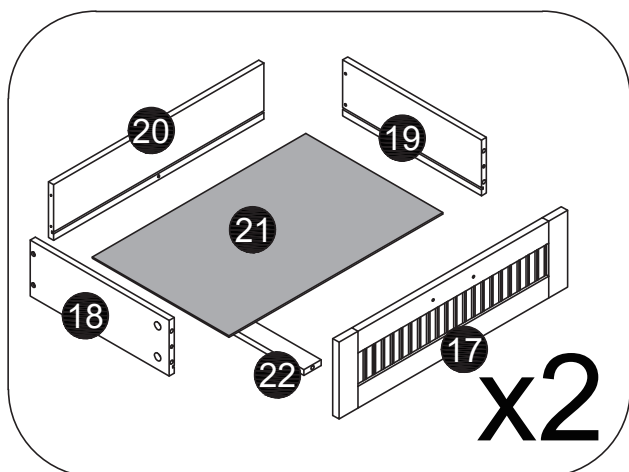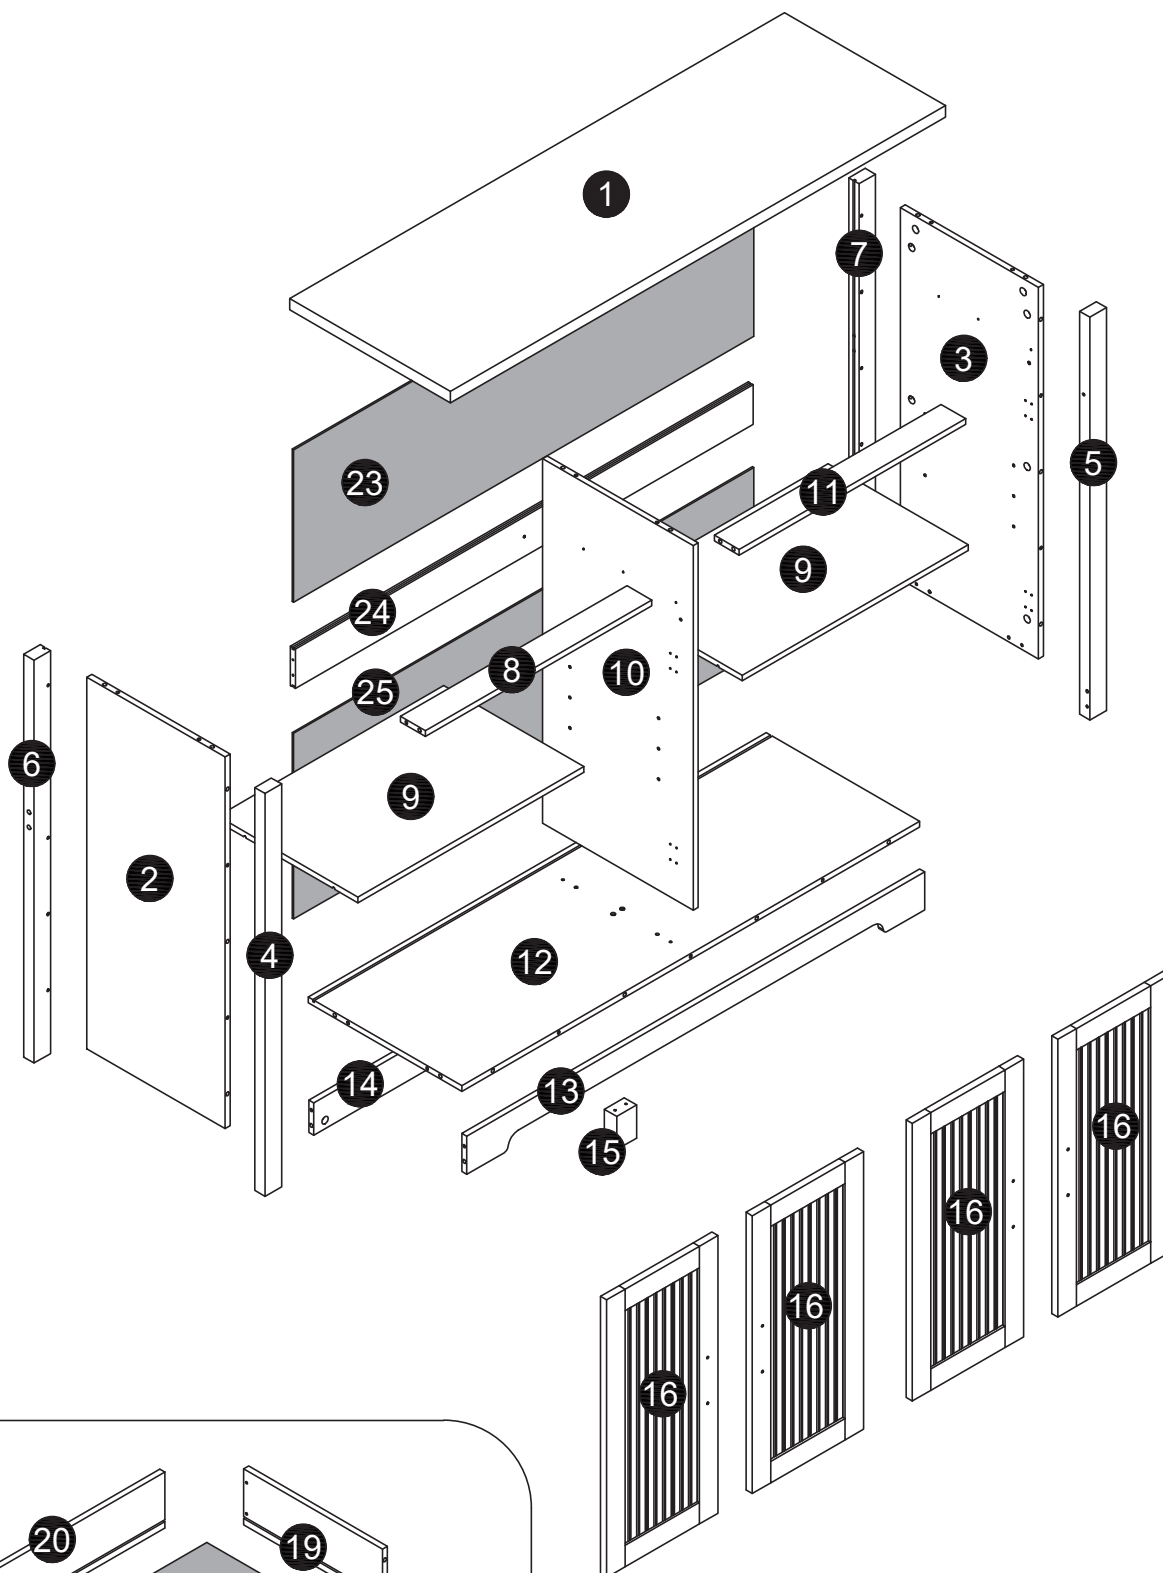

 A x45 Ø6x35mm +3(spare)	 B x45 Ø15x10mm +3(spare)	 C x36 Ø6x30mm +3(spare)	 D x17 Ø4x35mm +1(spare)	 E x80 Ø3.5x12mm +5(spare)	 F x6 F-1  F-2
 G x4	 H x4 Ø4x50mm	 I x2 I-1  I-2	 J x6 +2(spare)	 K x2	 L x8
 M x8 Ø3x16mm +1(spare) M-1  M-2	 N x2 Ø4x14mm N-1  N-2	 O x2 Ø6x30mm	 P x4	 Q x1	 R x2
 CL x2 L330mm	 CR x2 L330mm	 DL x2 L330mm	 DR x2 L330mm		

A x10



B x10




C x4



D x10




F x2





F-1



F-2

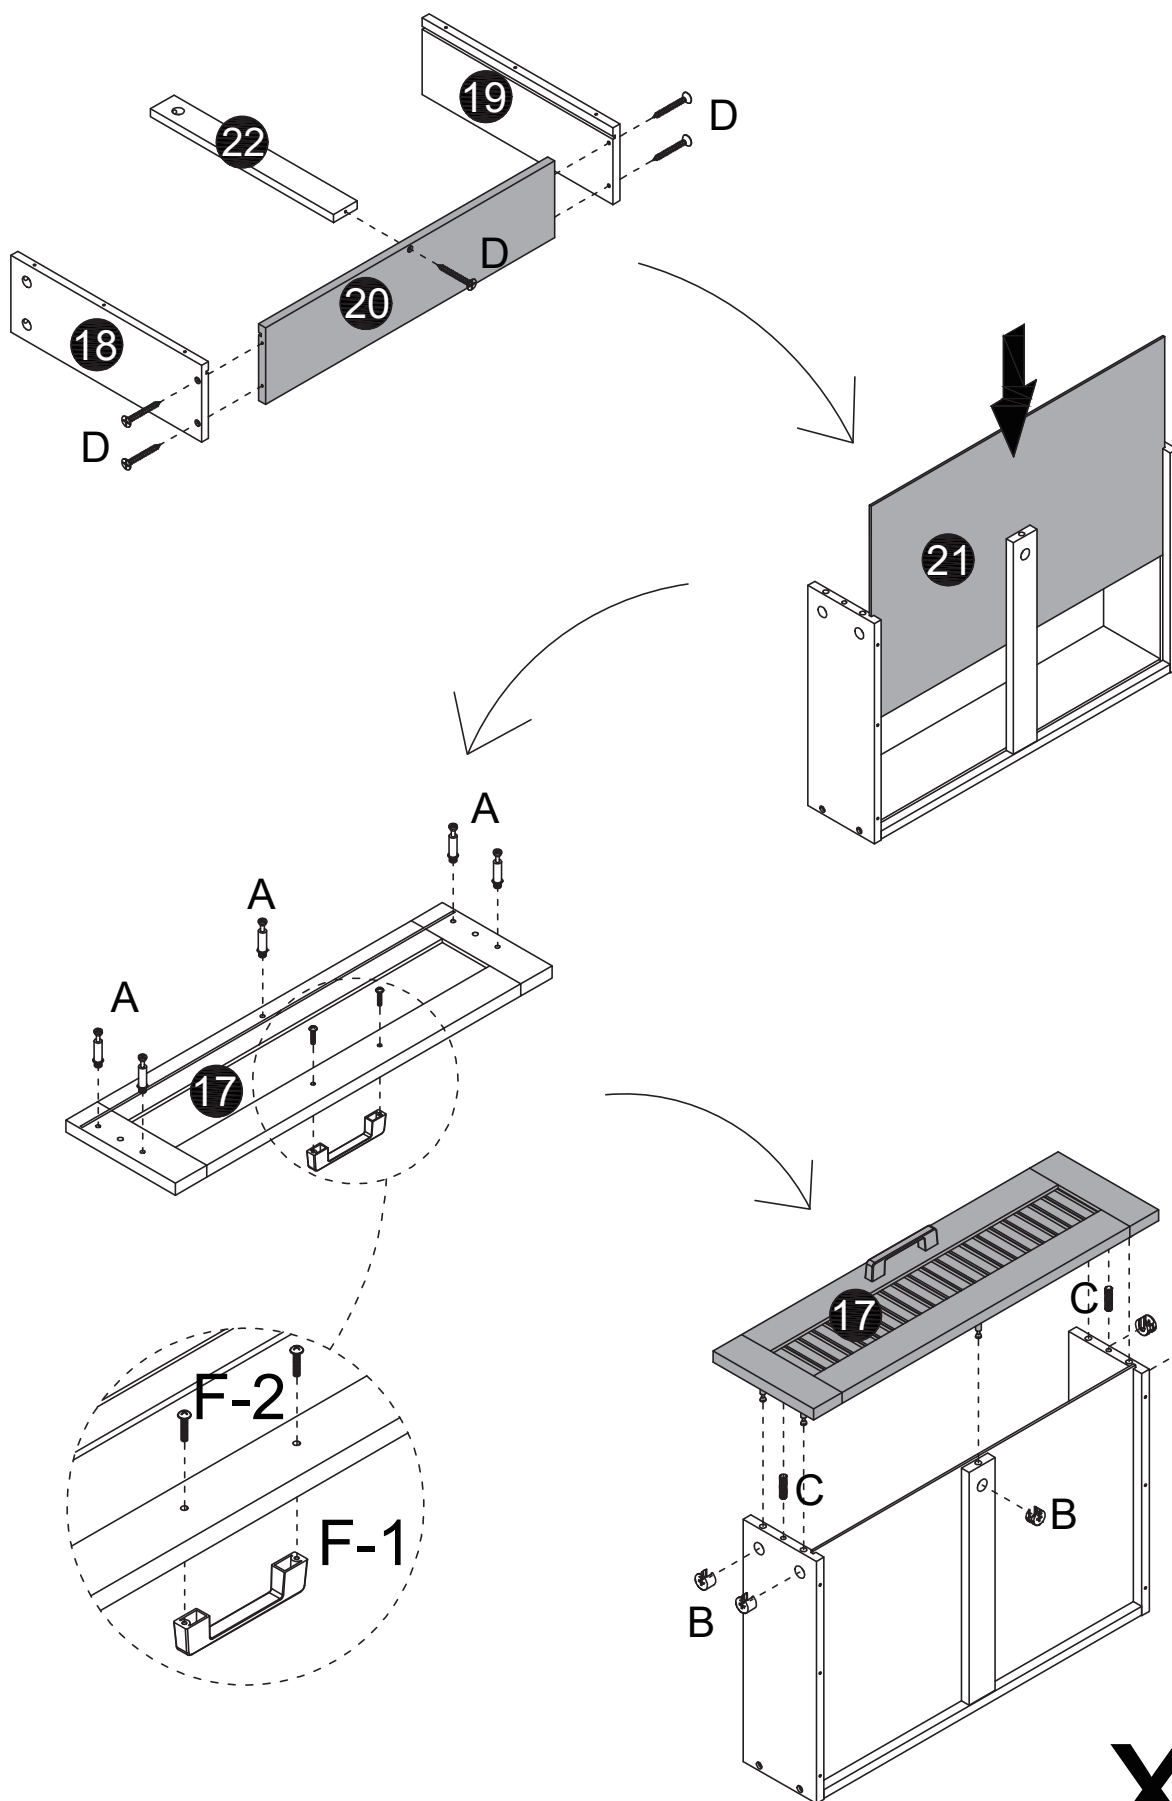

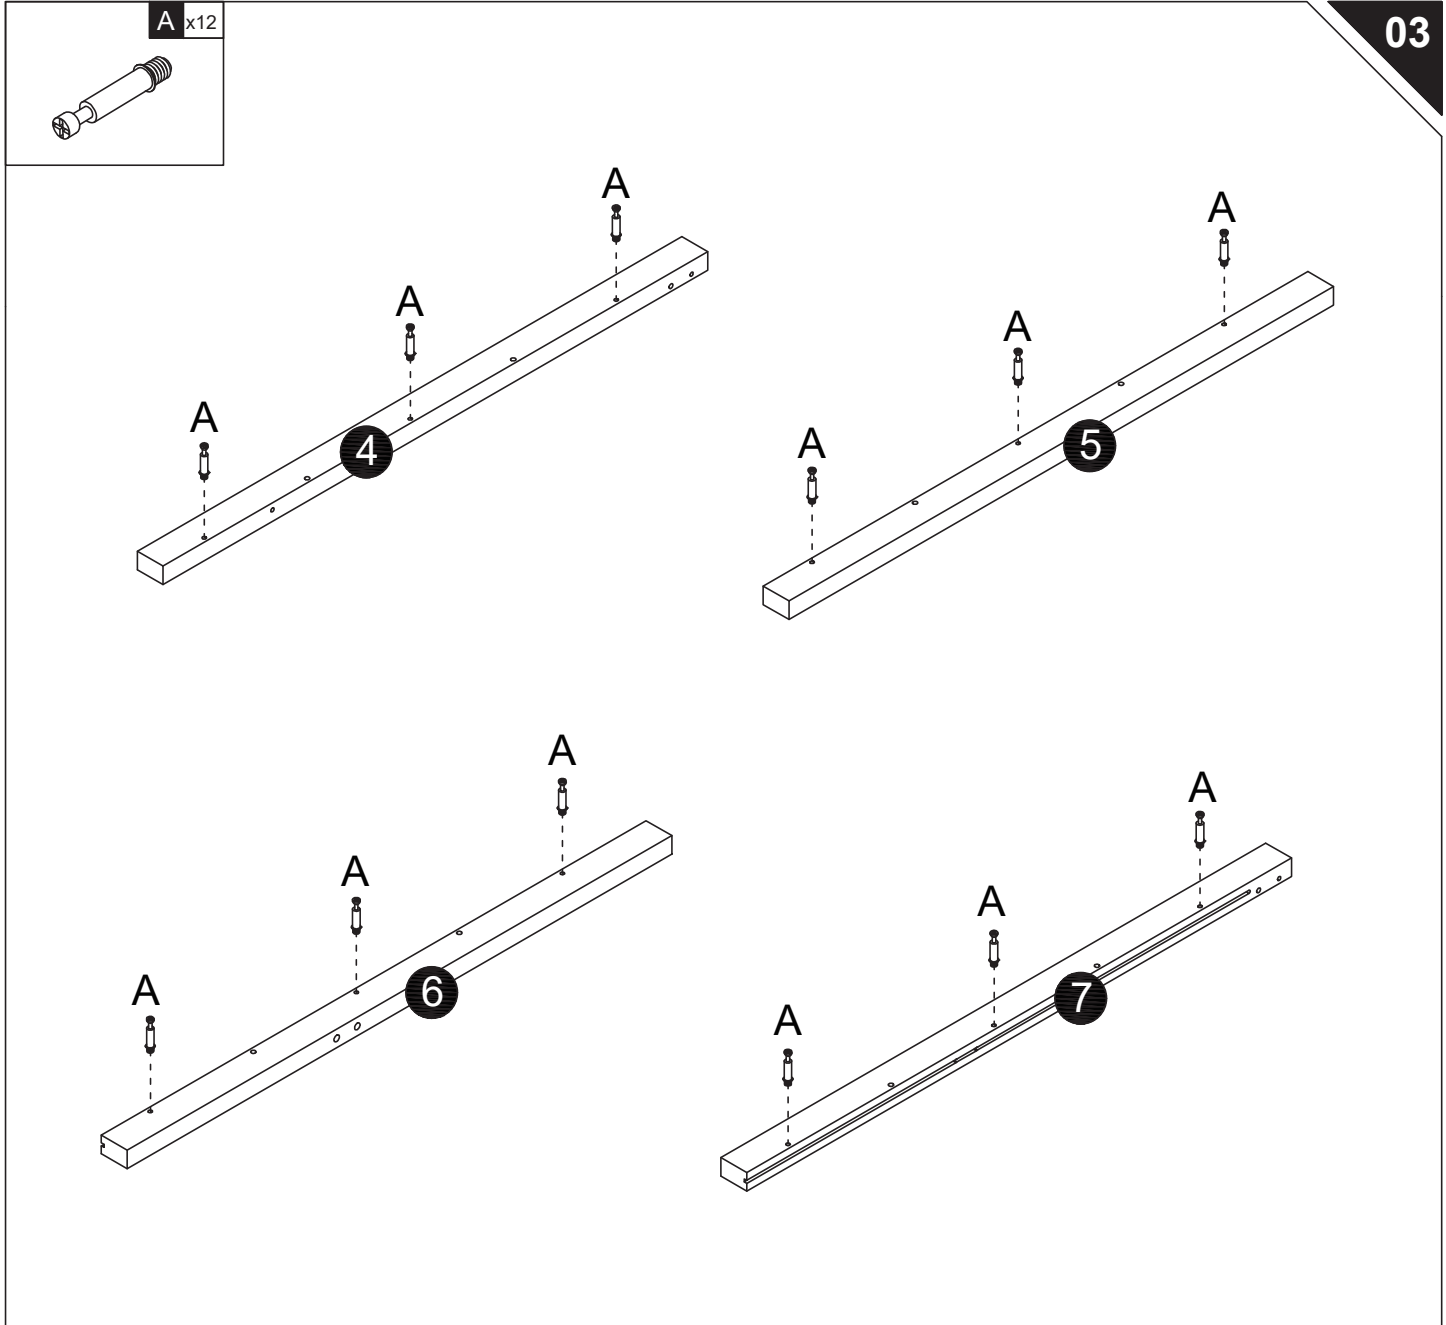
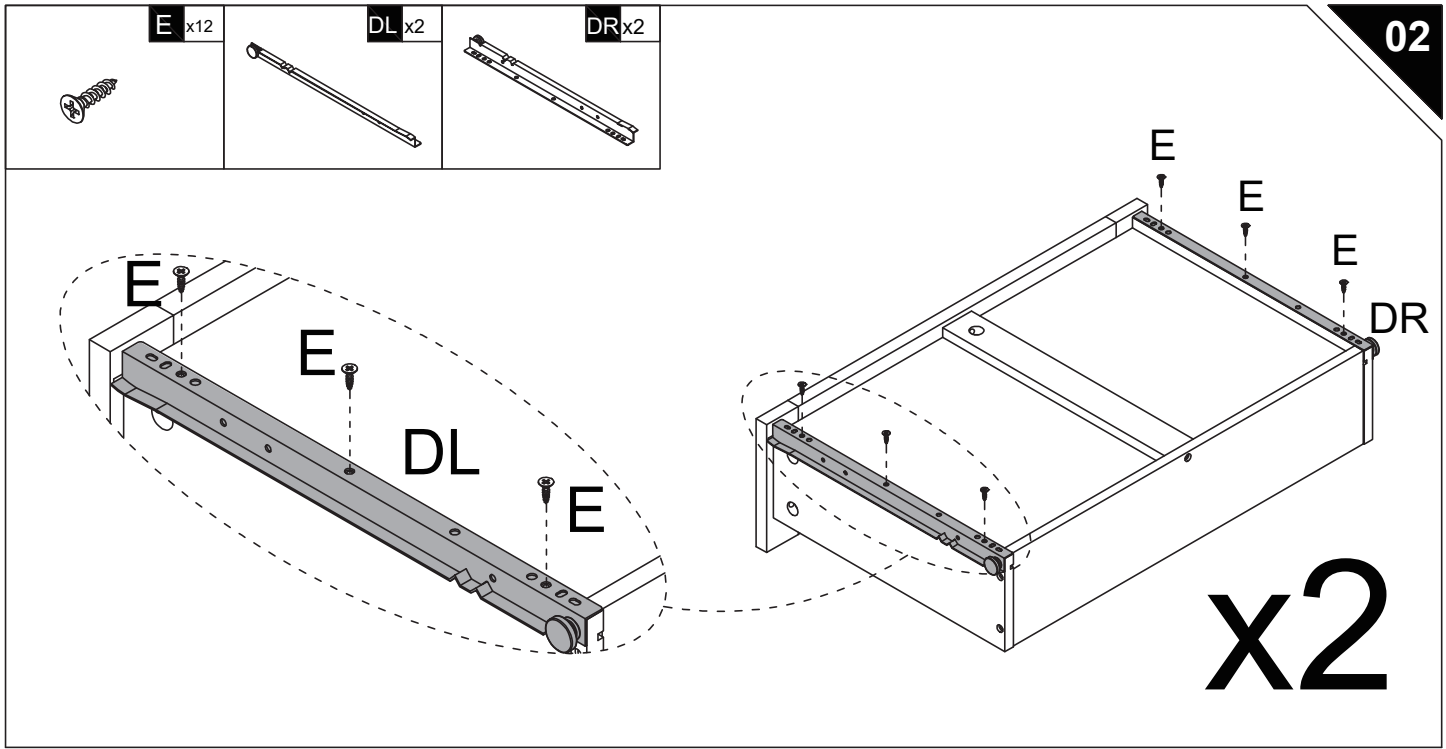




B x12

C x8




04

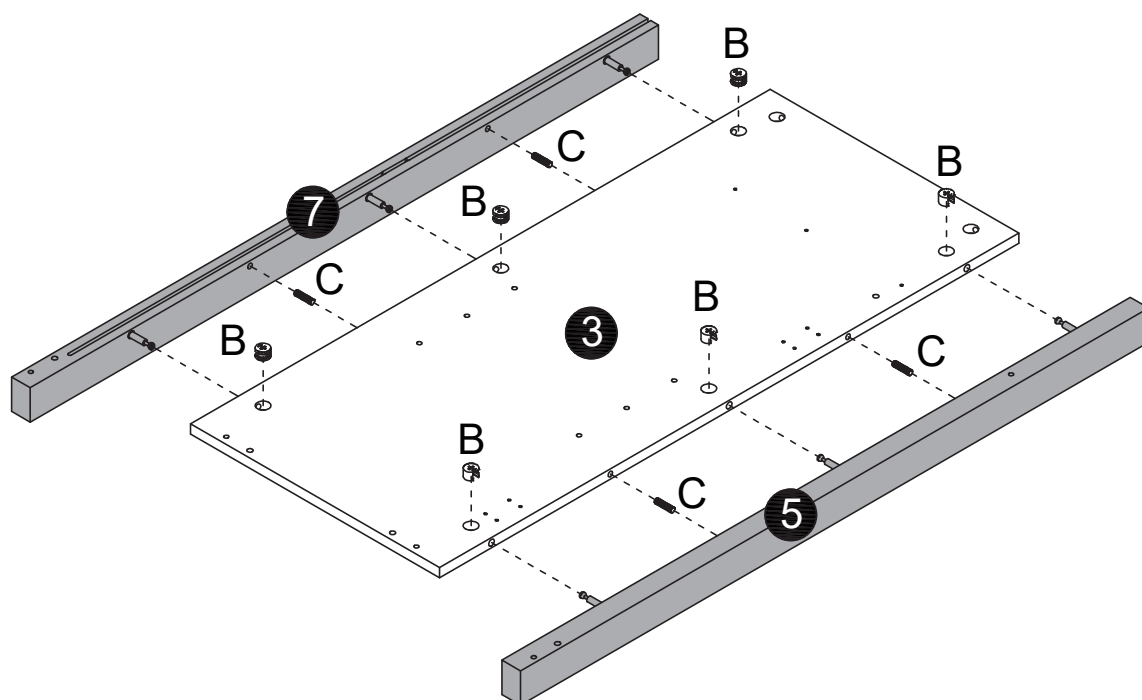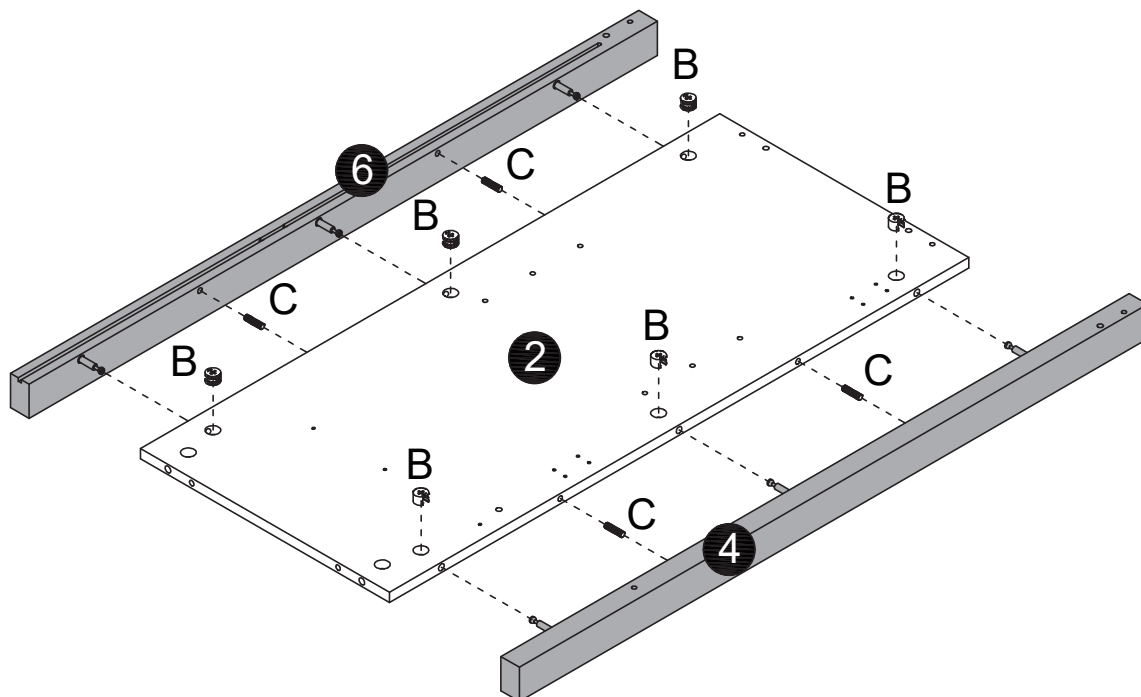

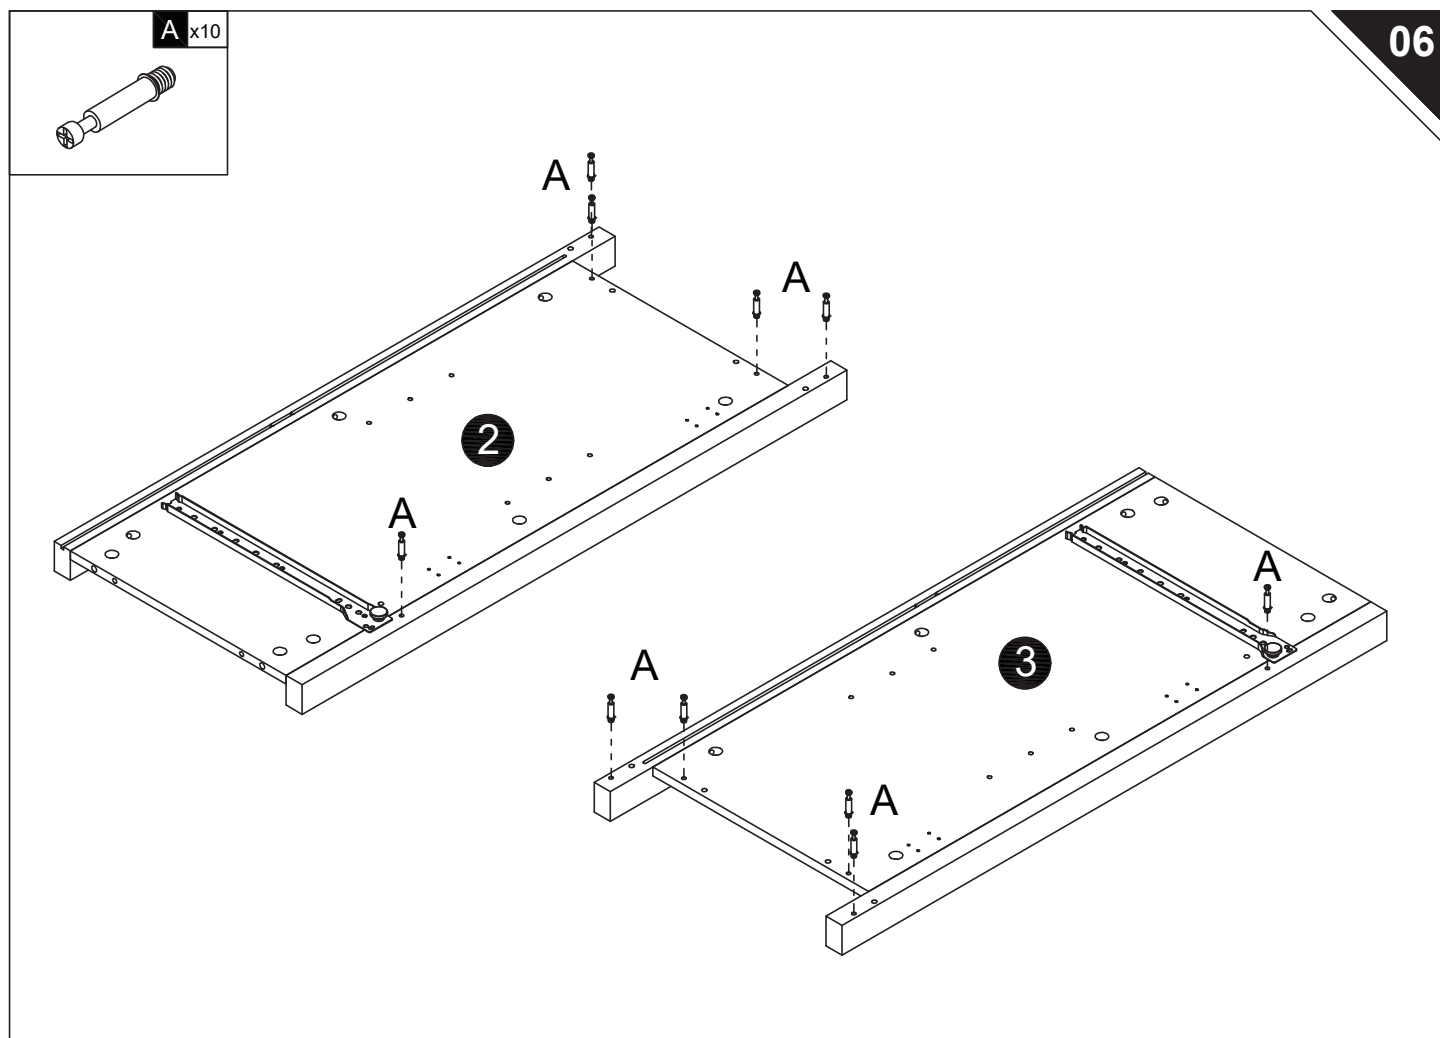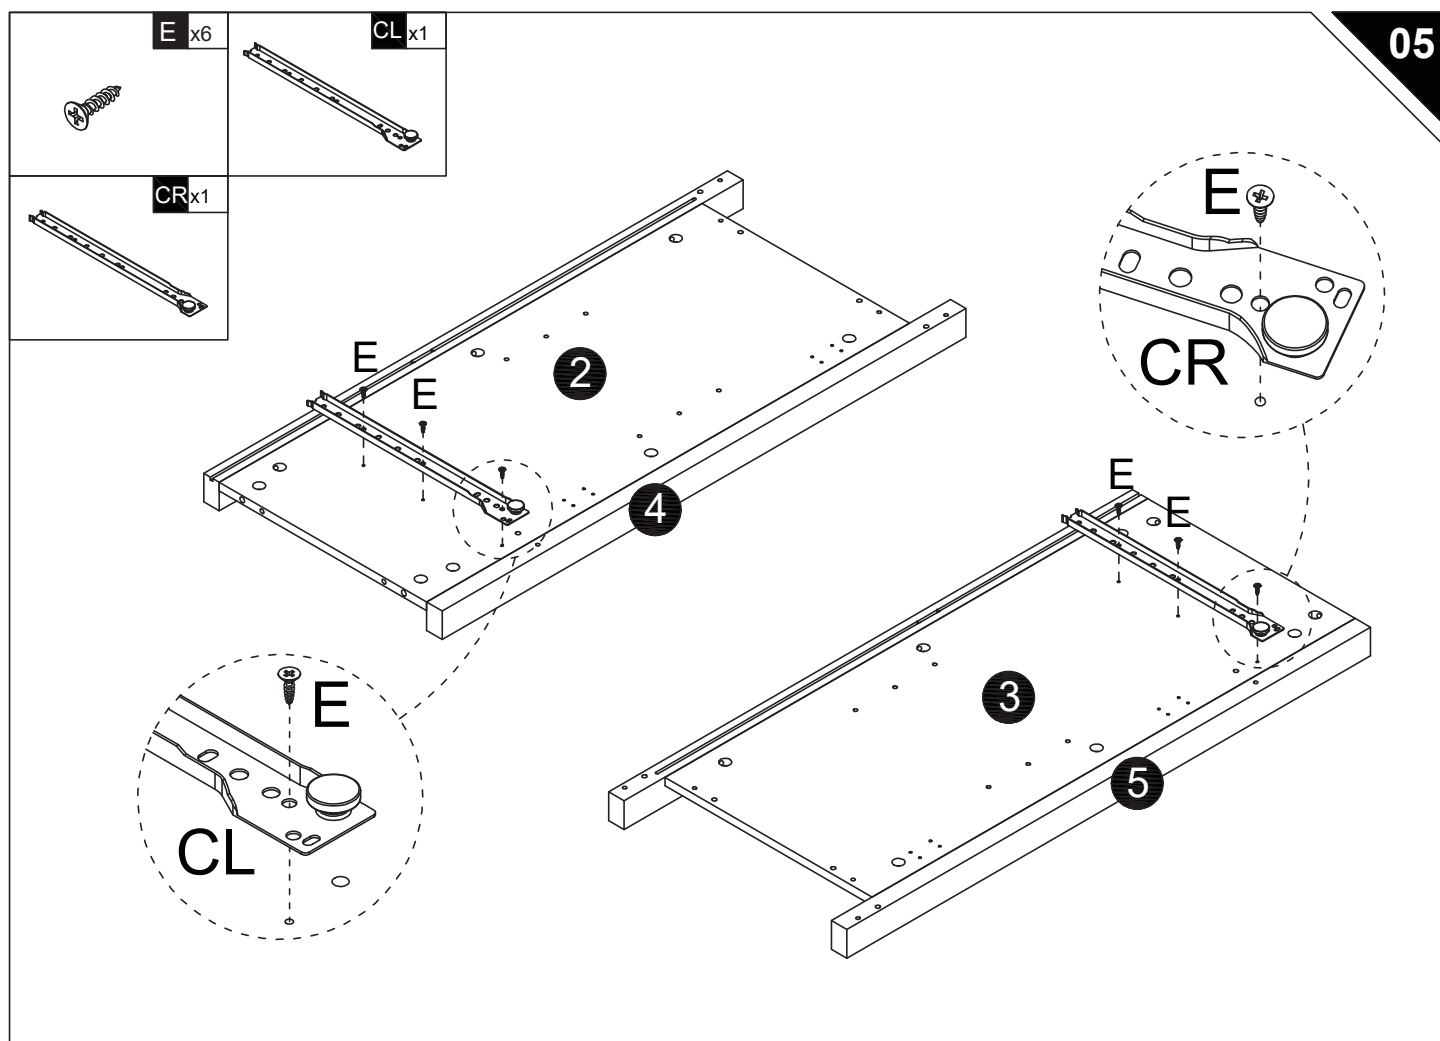

A x2




E x6





CL x1



CR x1

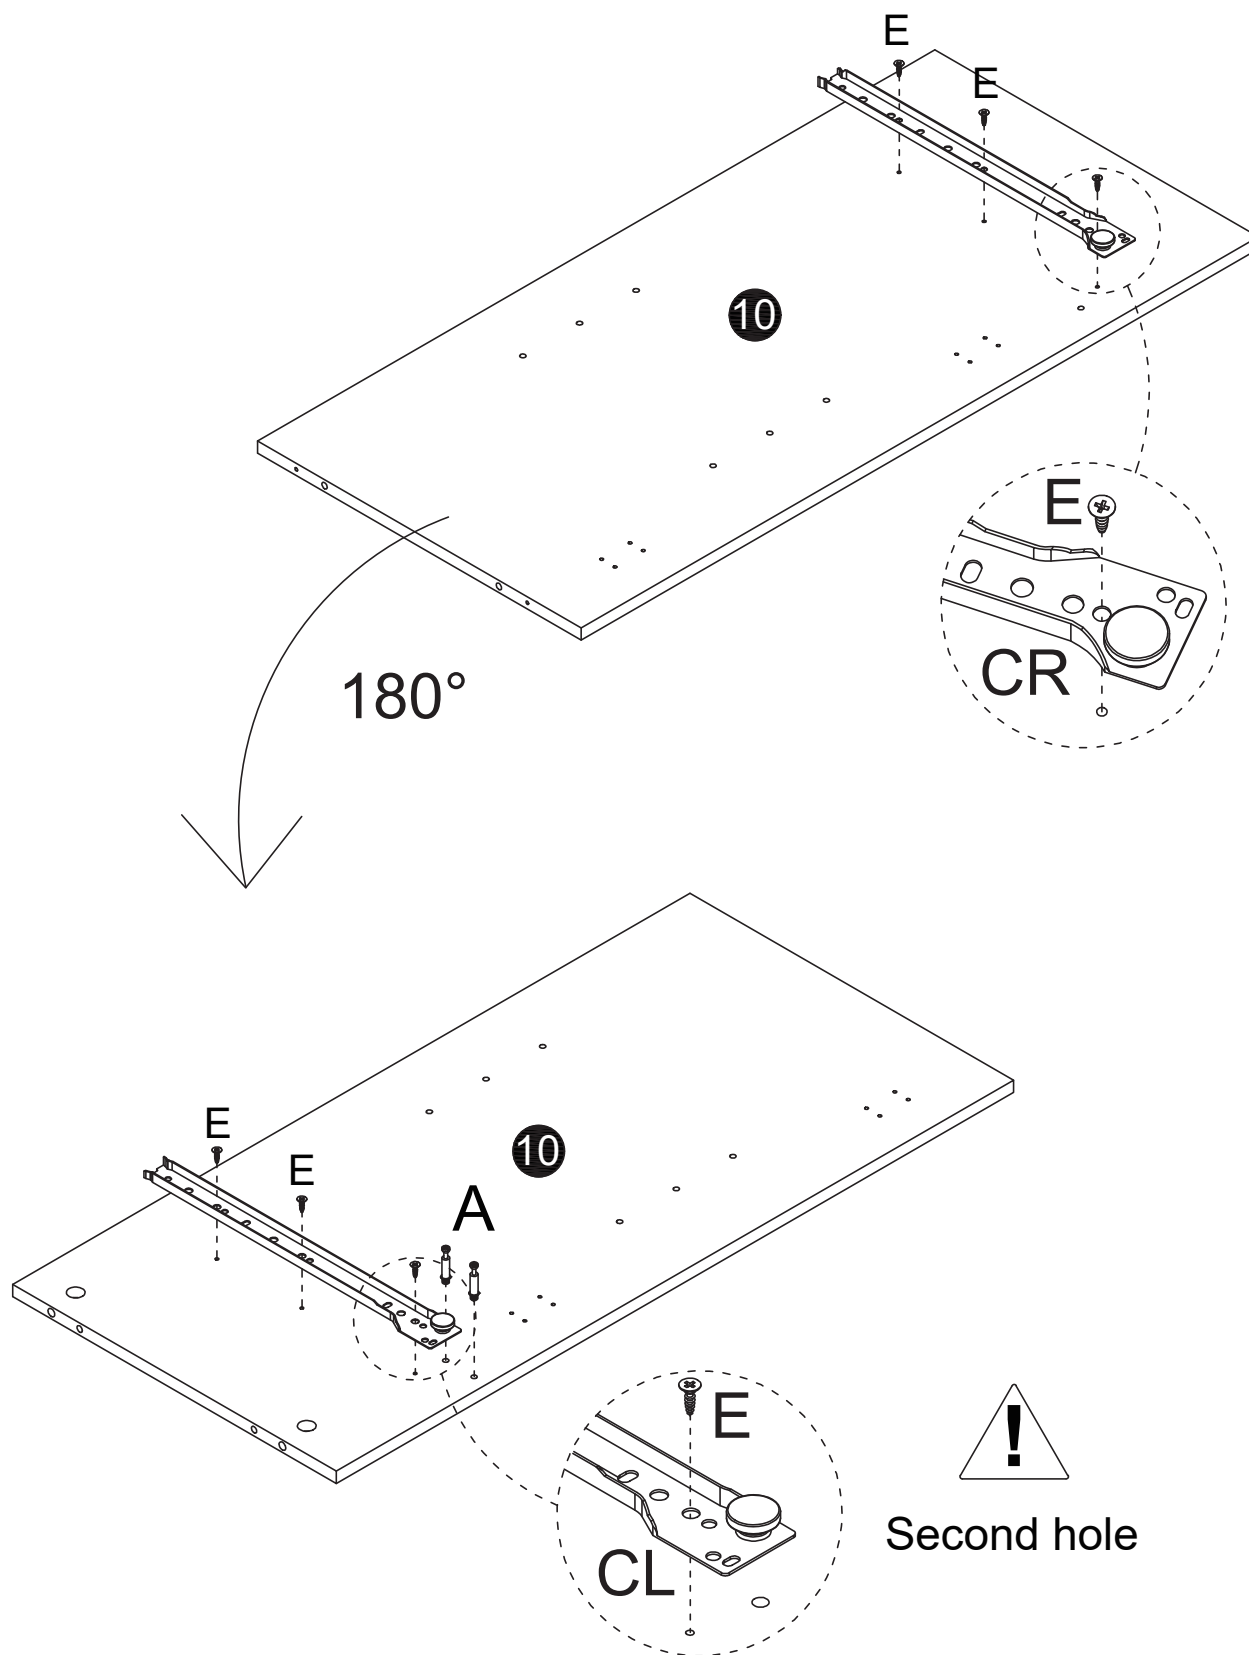

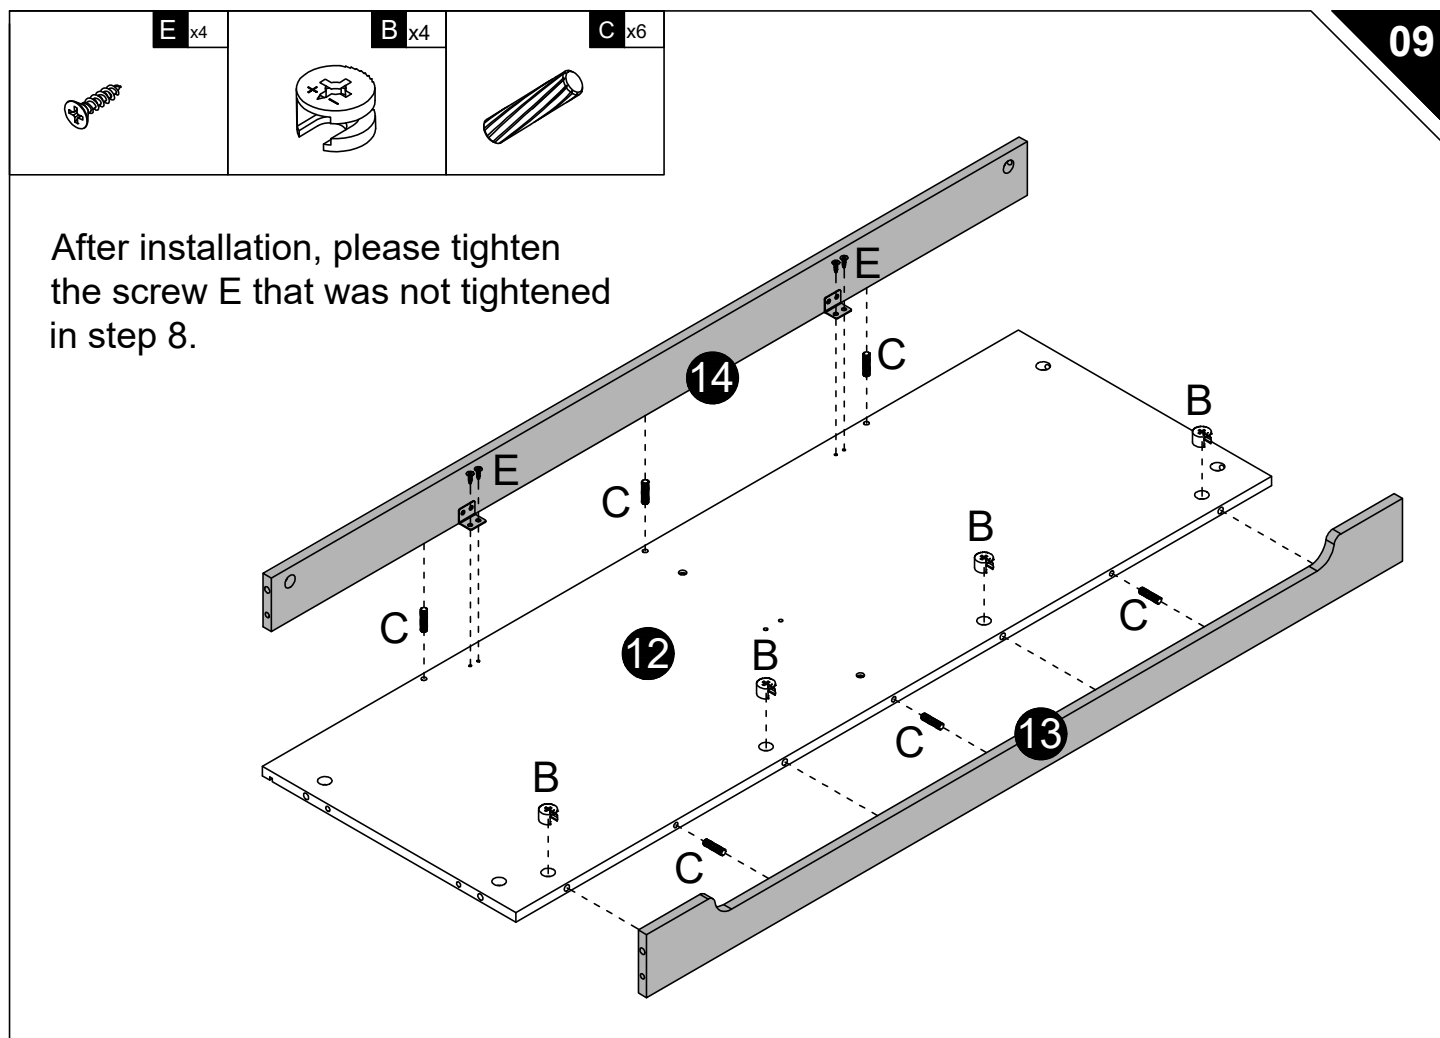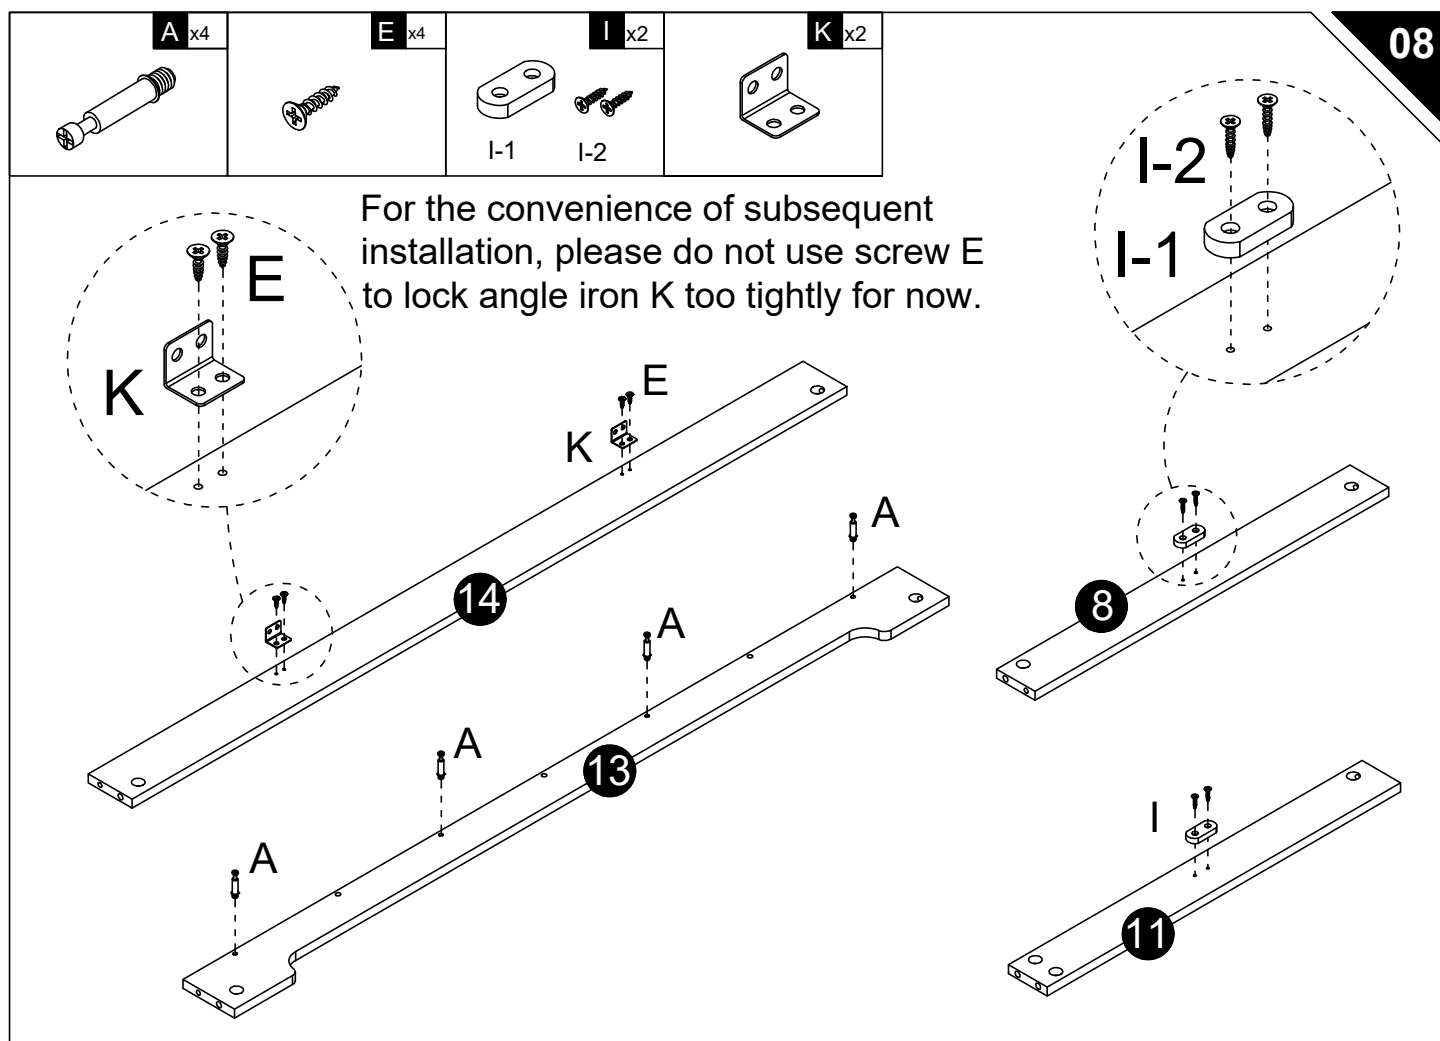



D x2



Q x1




Adjust the height of part #Q to make it flush with plate #14.

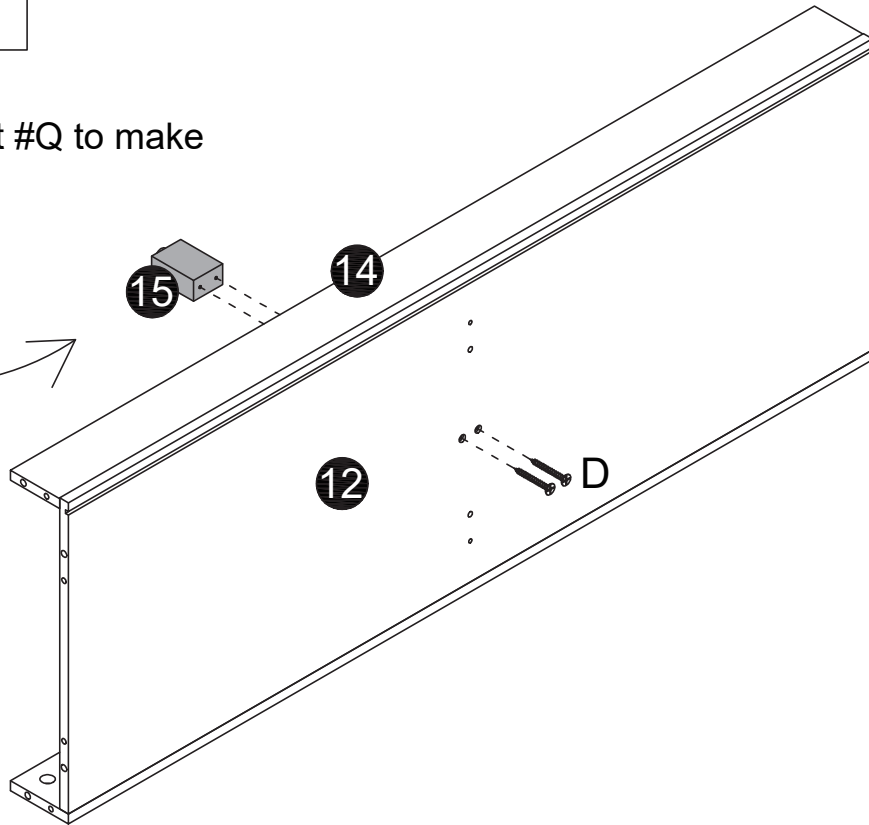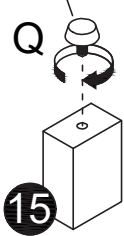

C x2




D x2

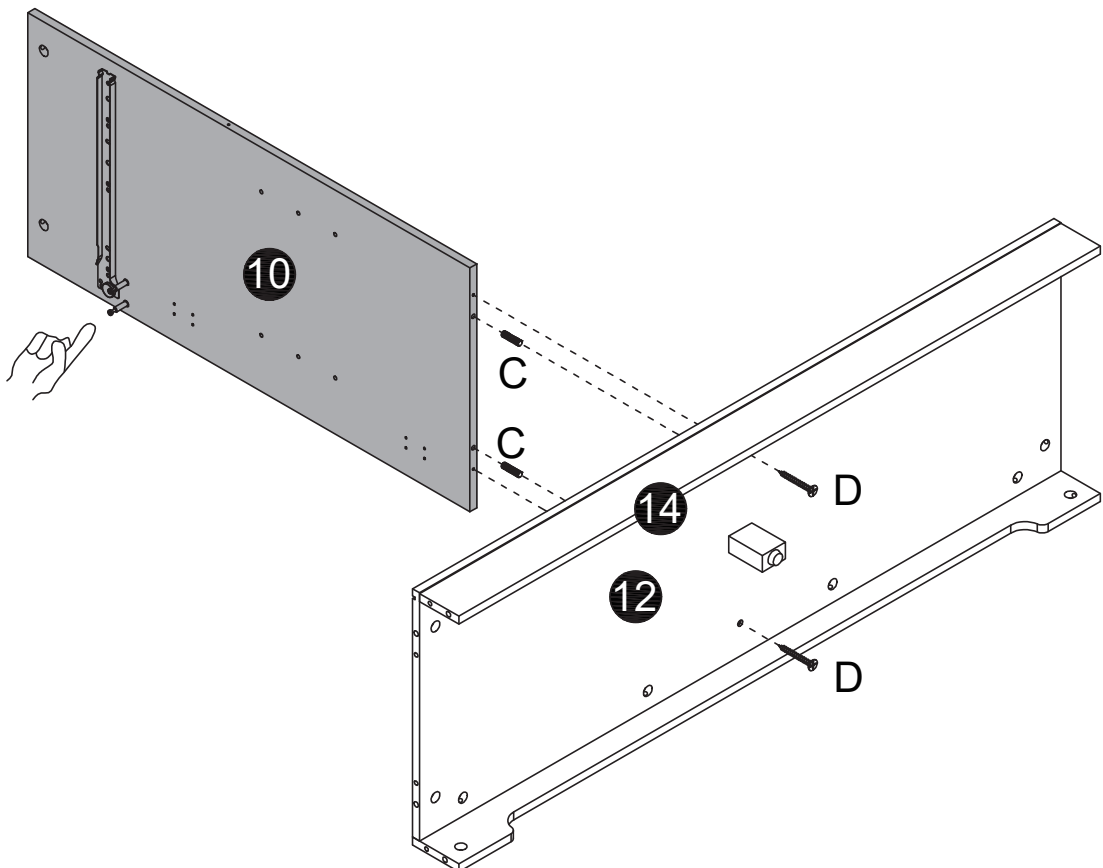

B x2



12

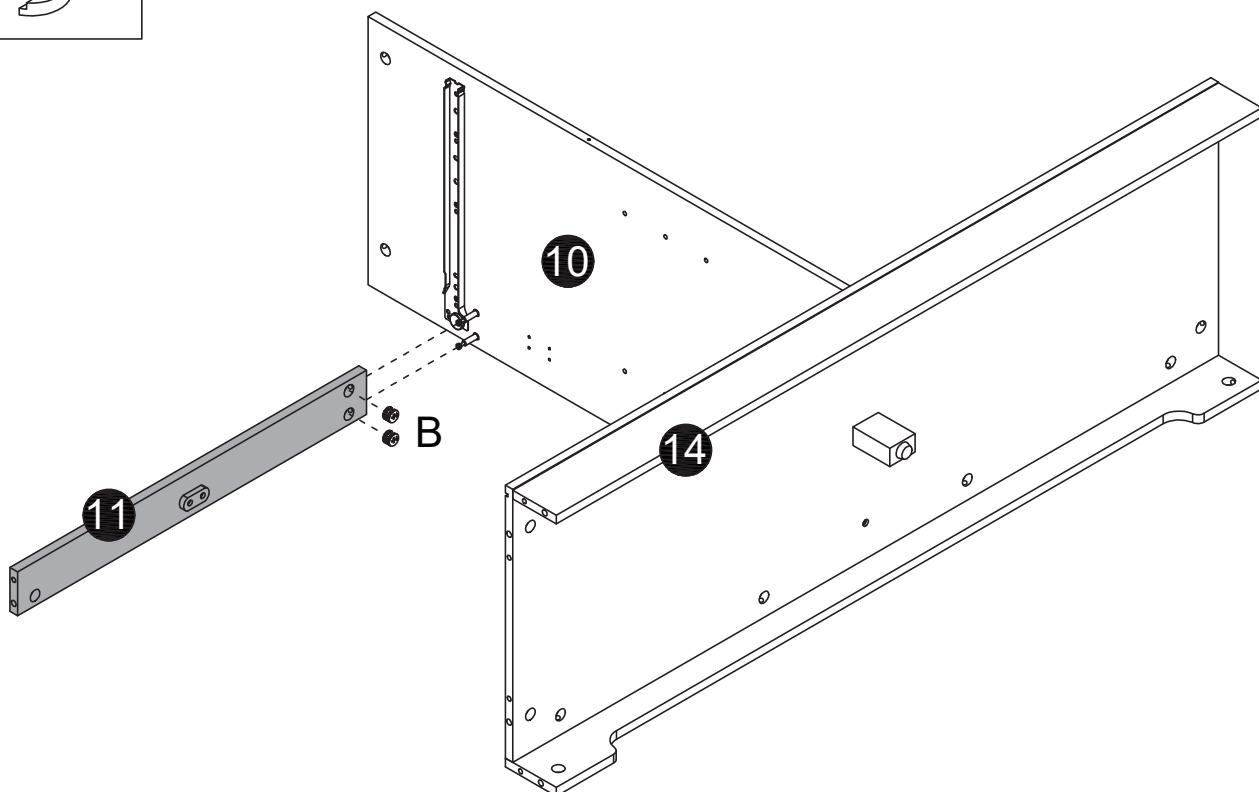


B x5



C x5




13

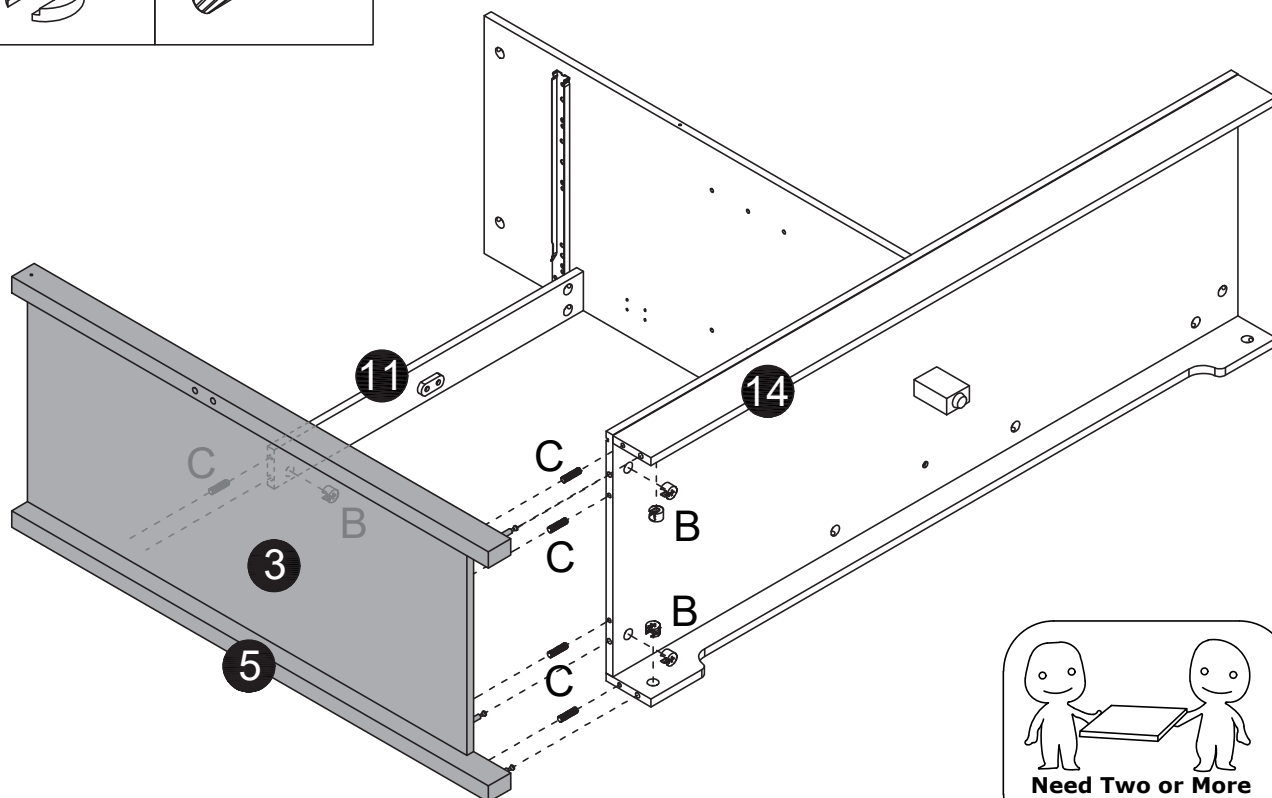

A x1

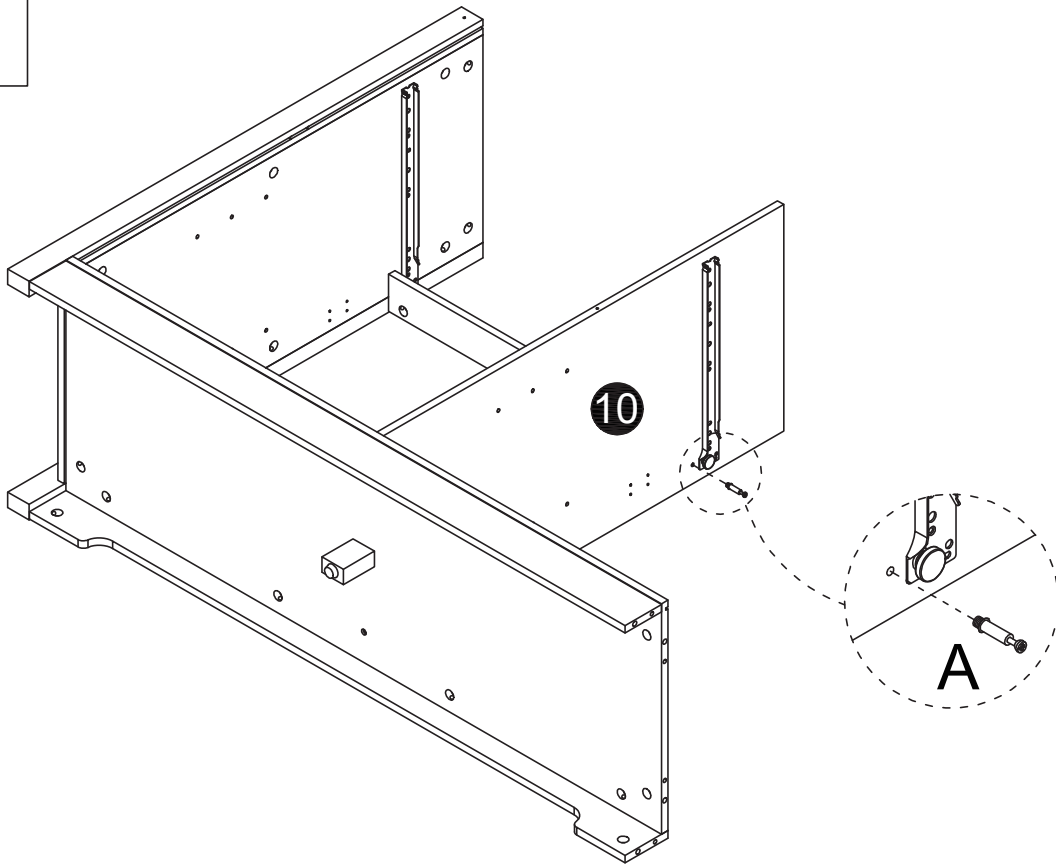



B x1

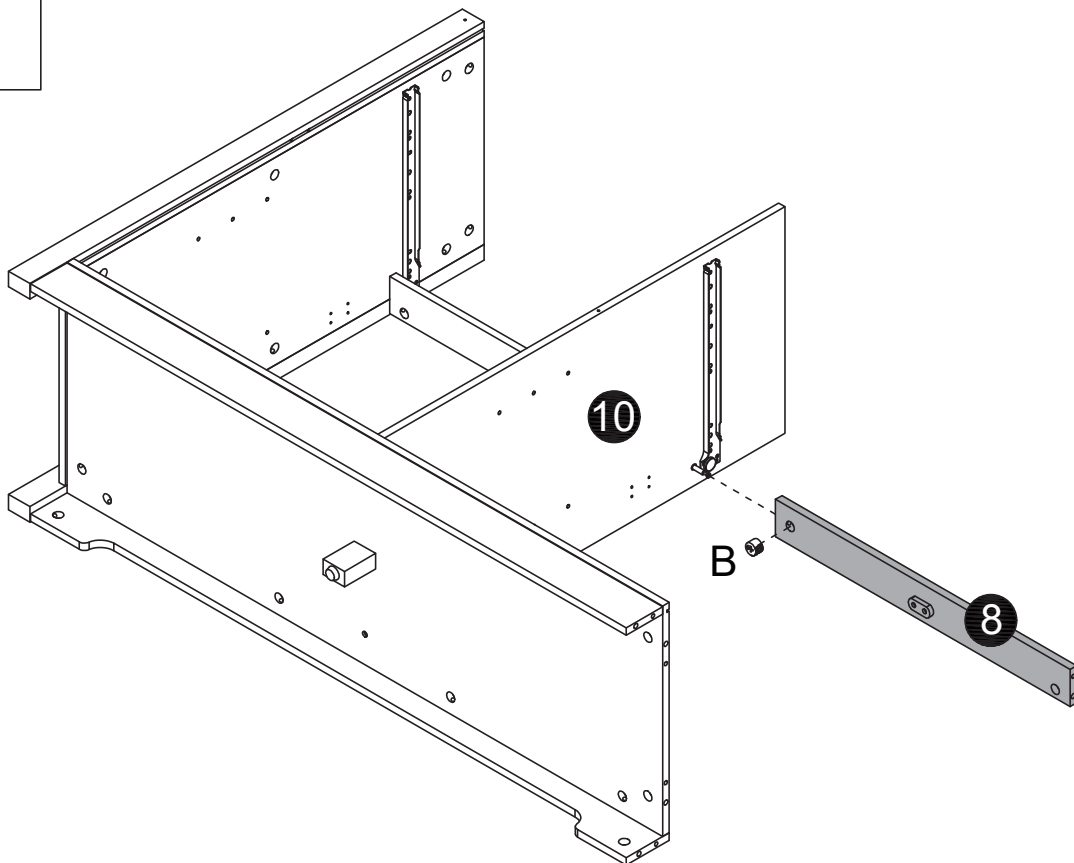



B x5




C x5

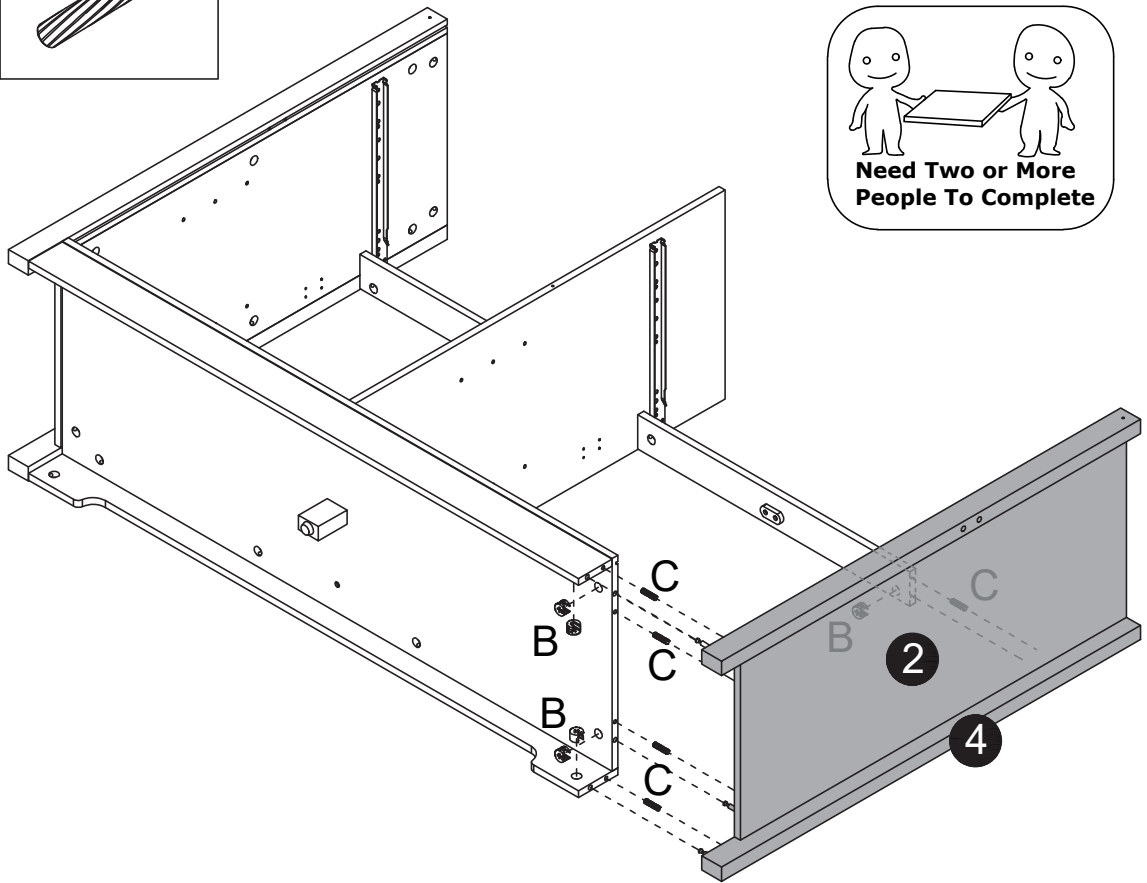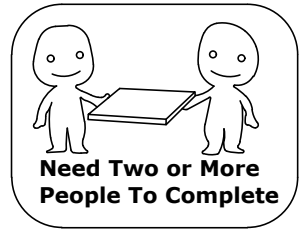



P x4

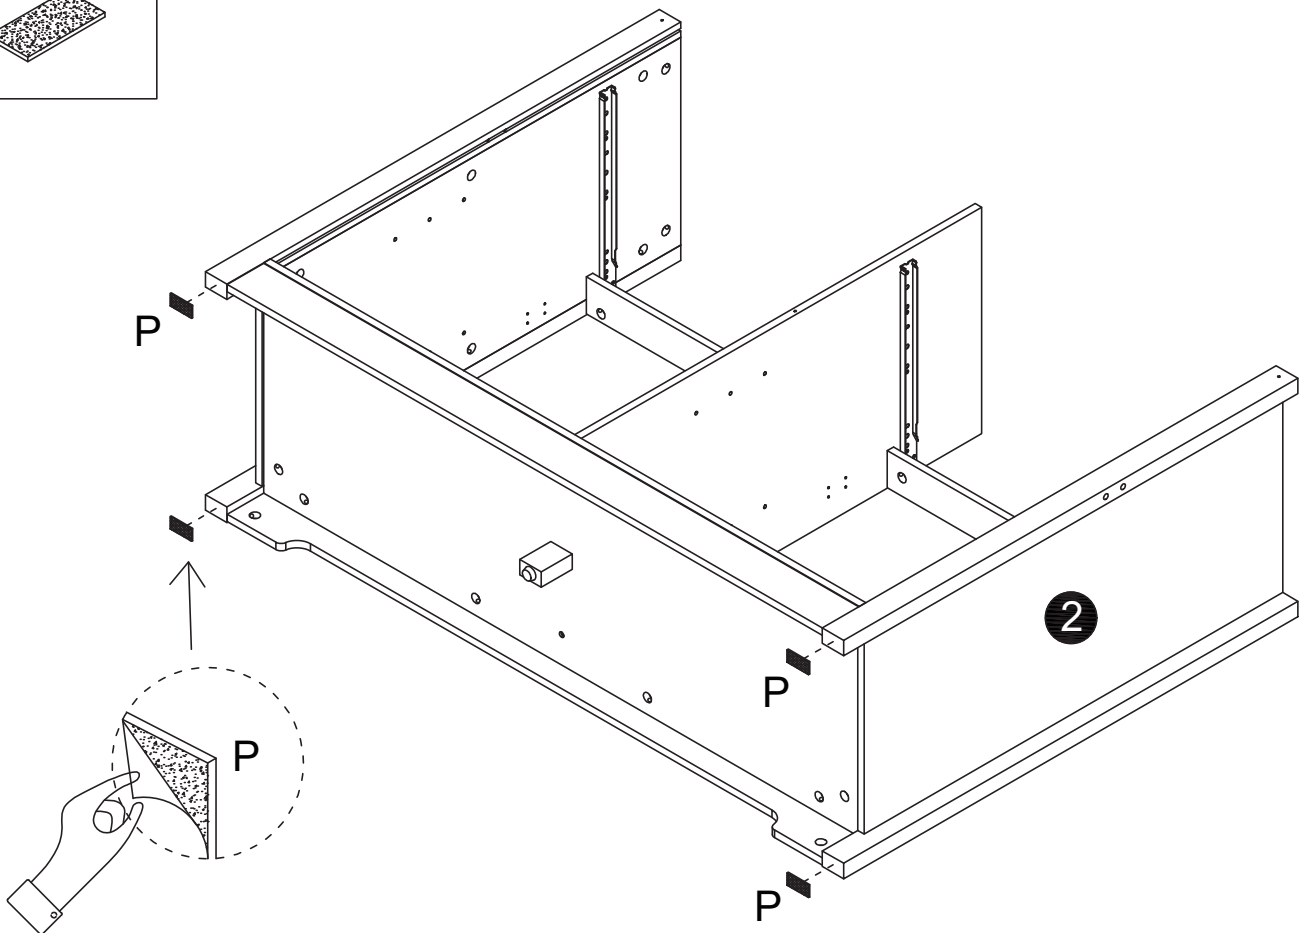


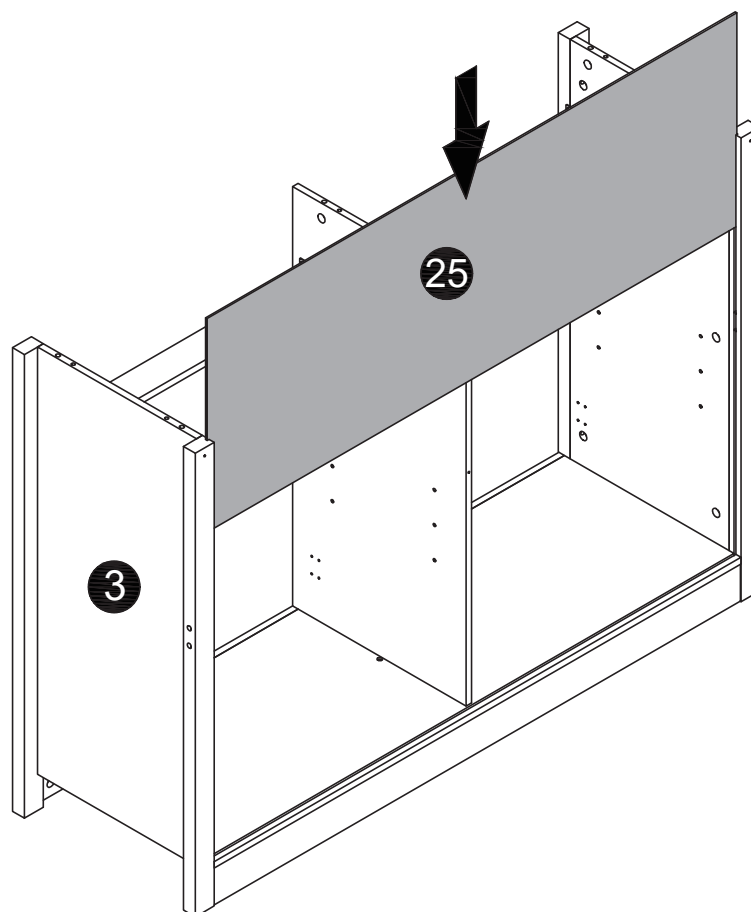



D x1

H x4

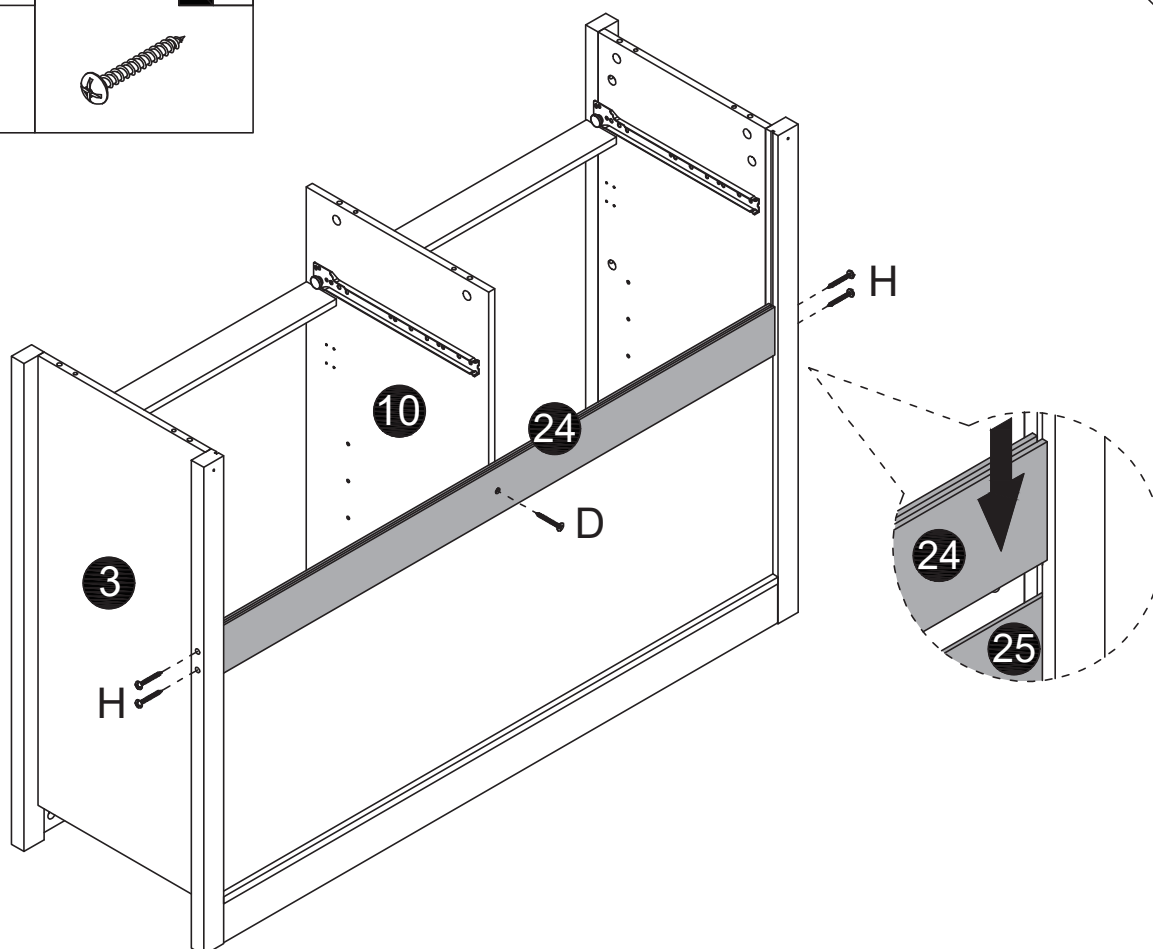

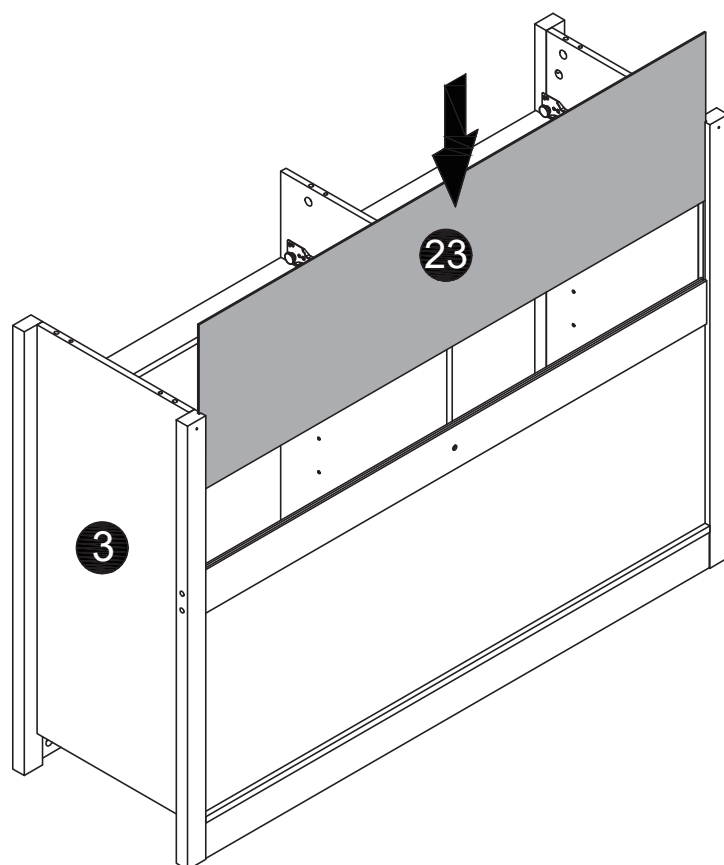


A x6

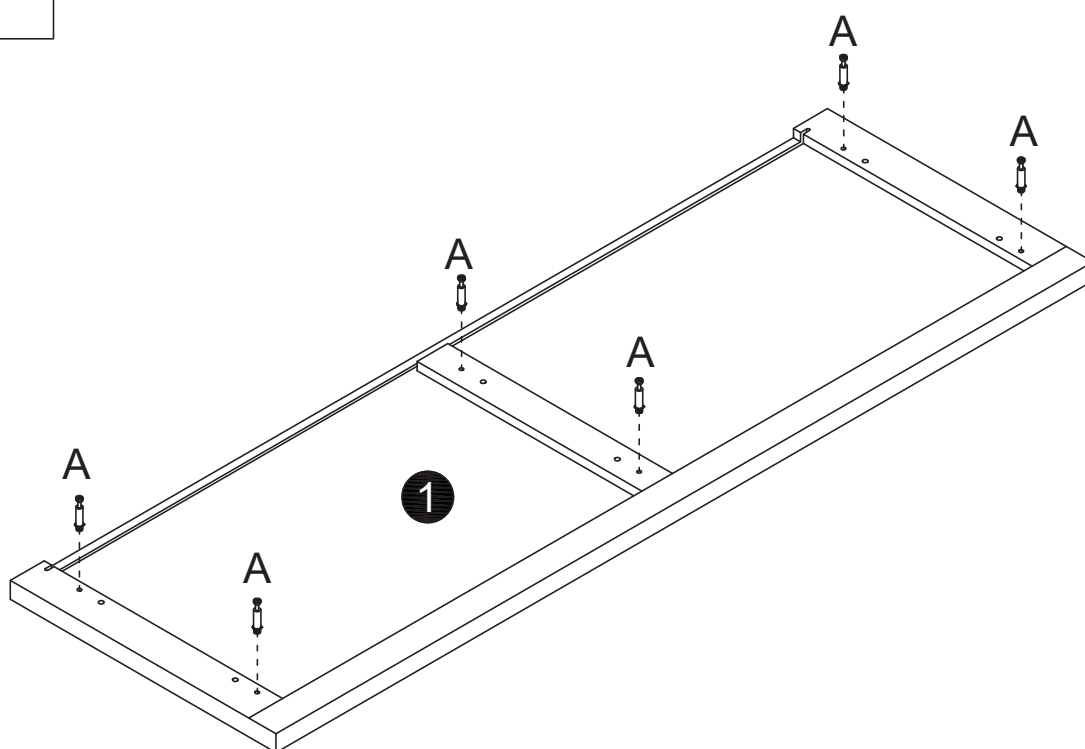

B x6



C x6

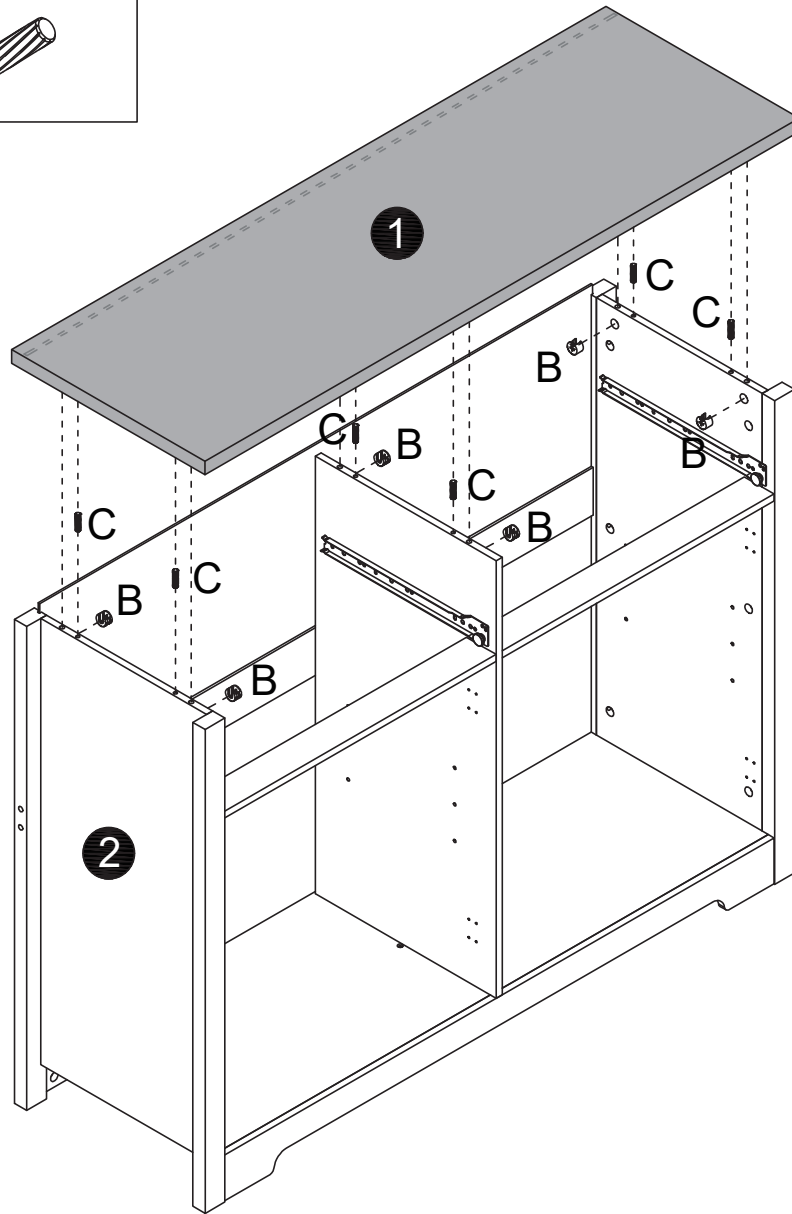

E x16



F x4

L x8





F-1

F-2

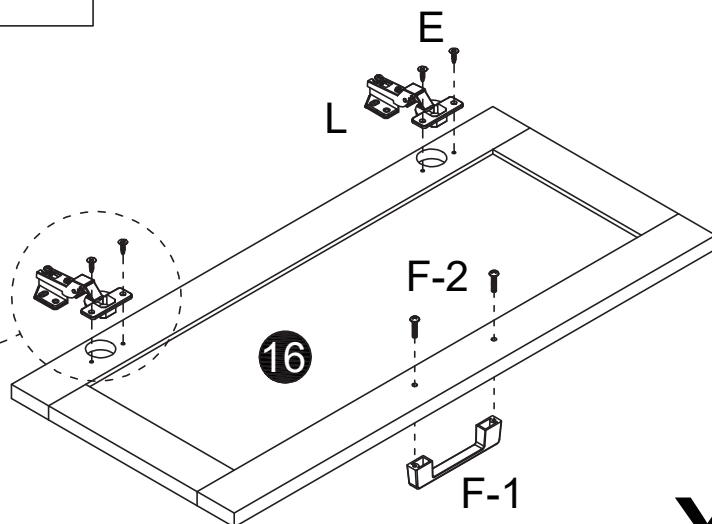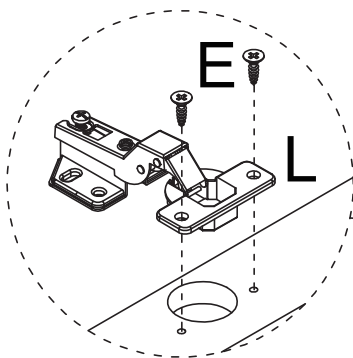


x4

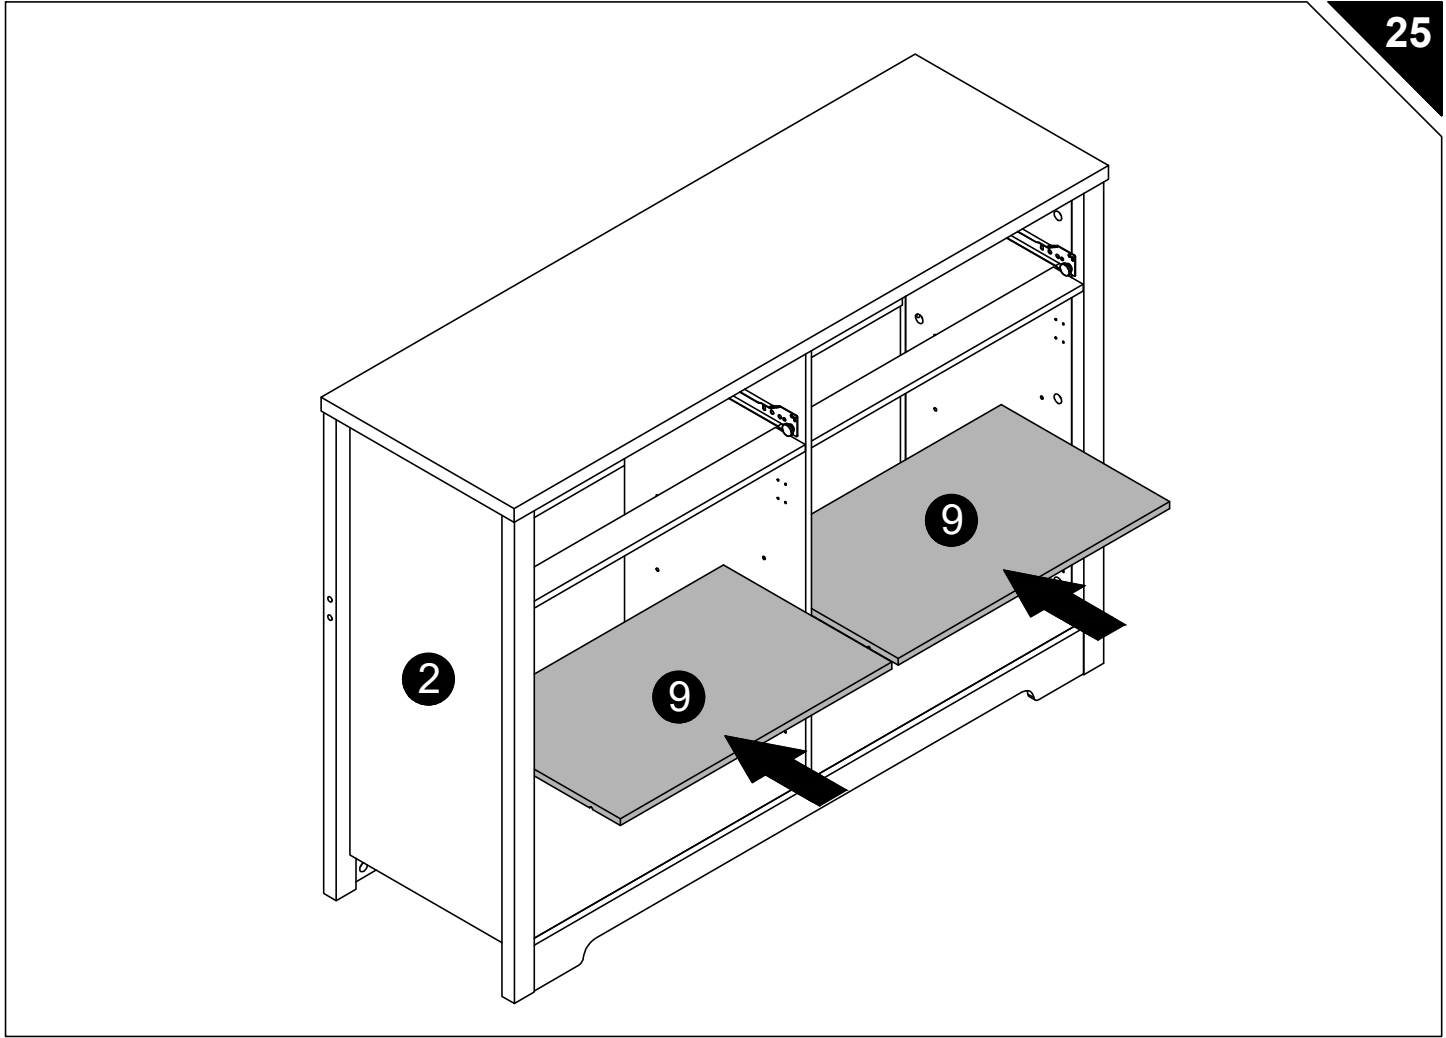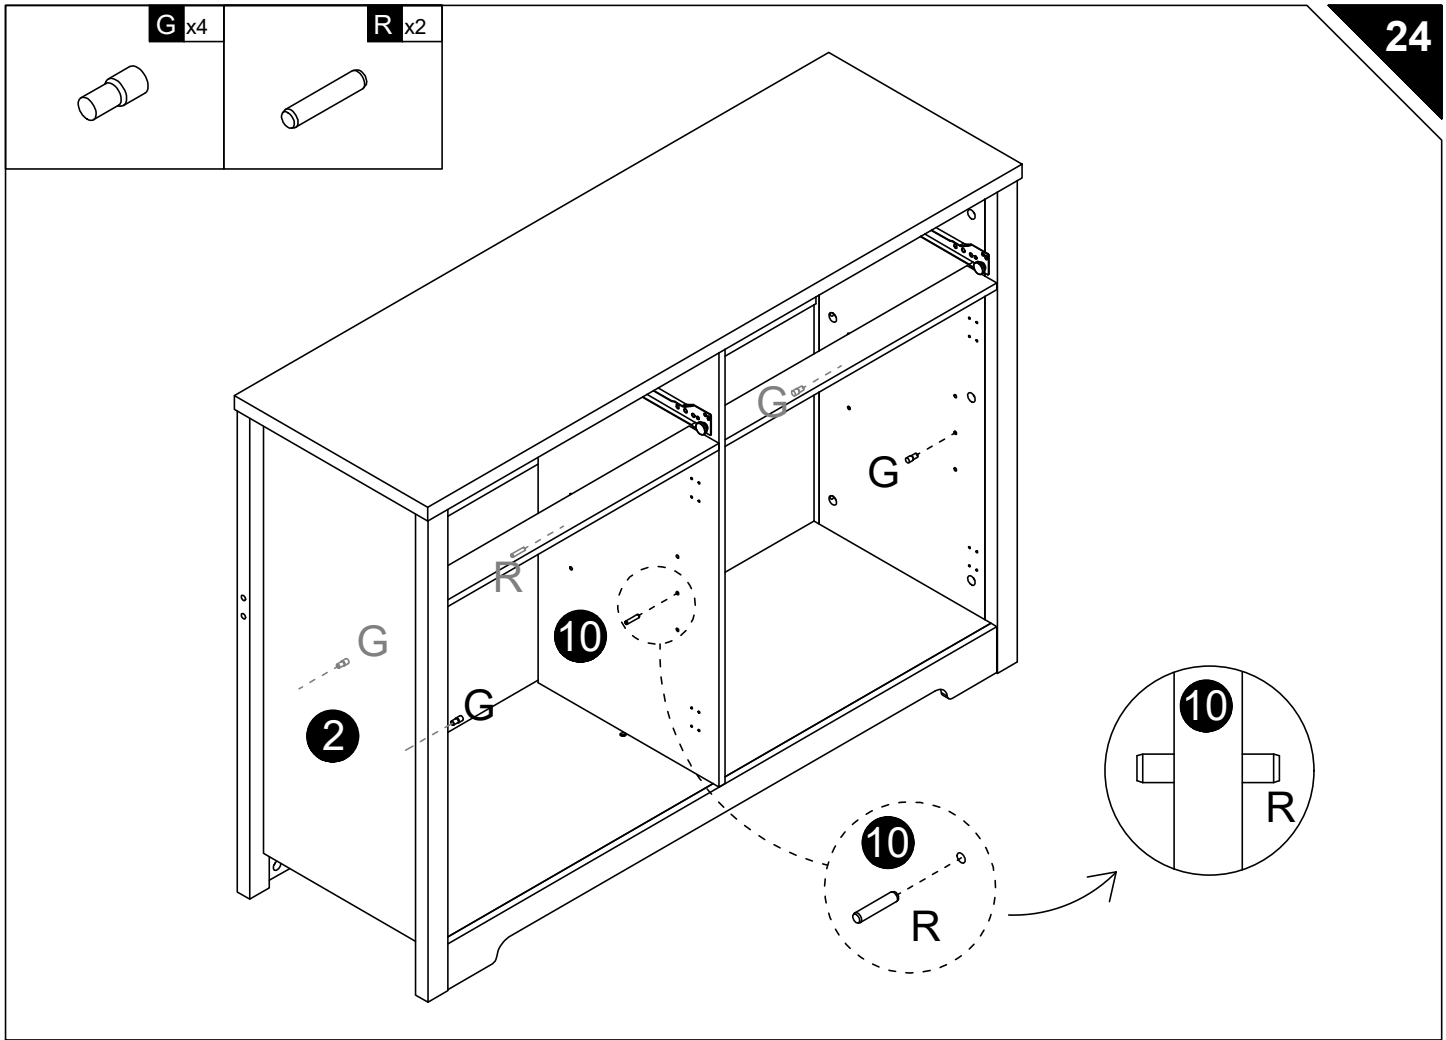


E x16




26

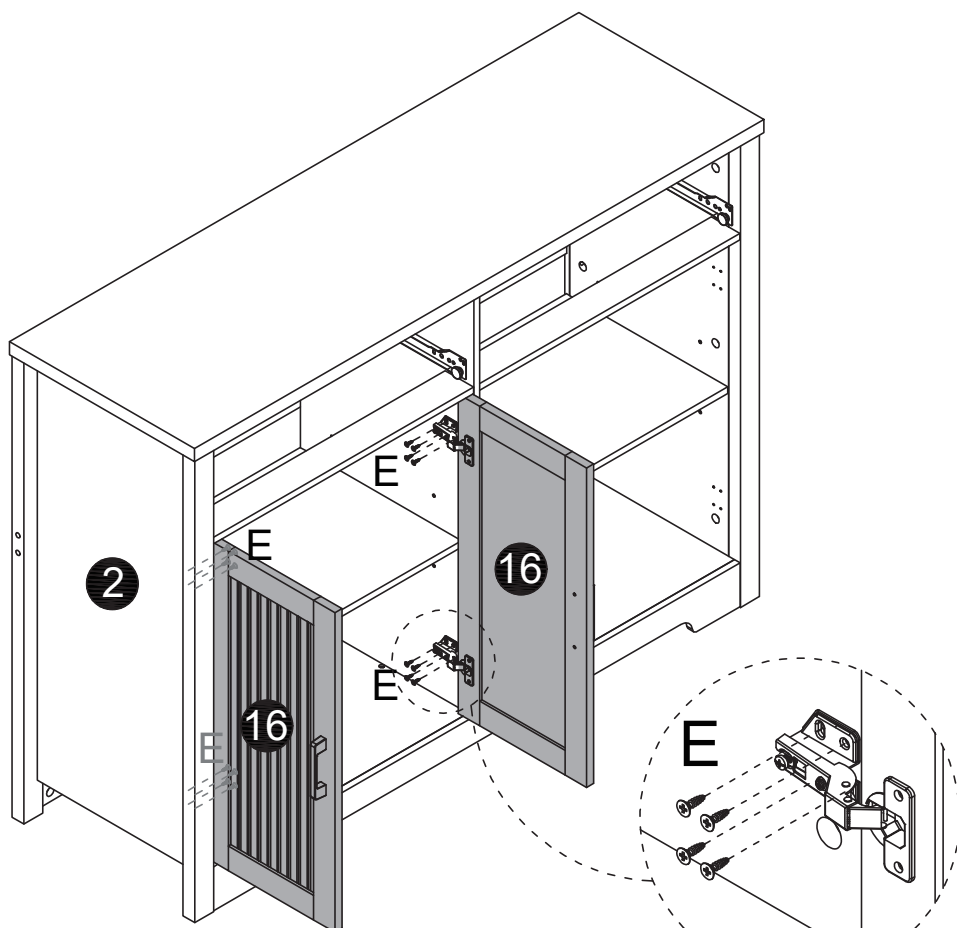

E x16


27

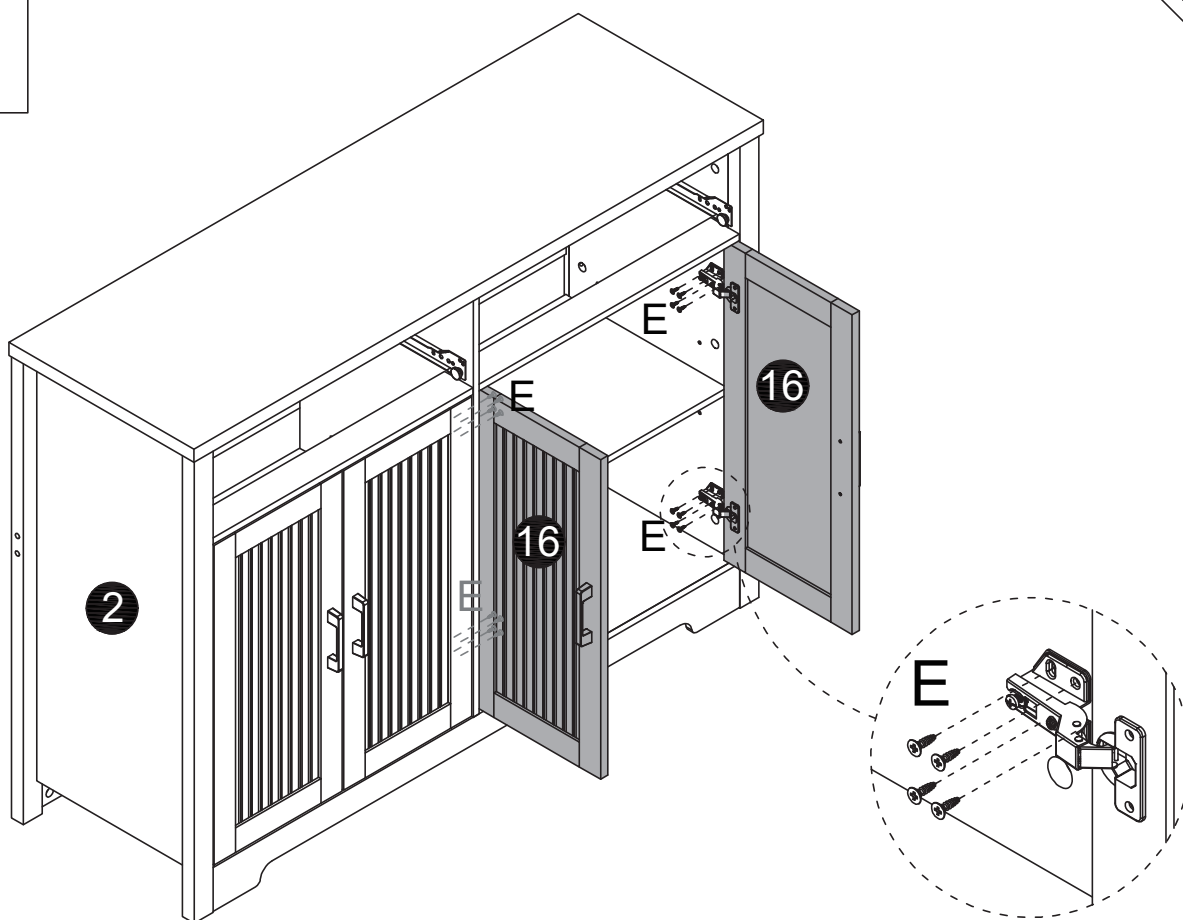

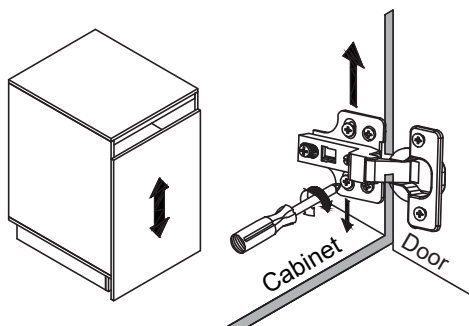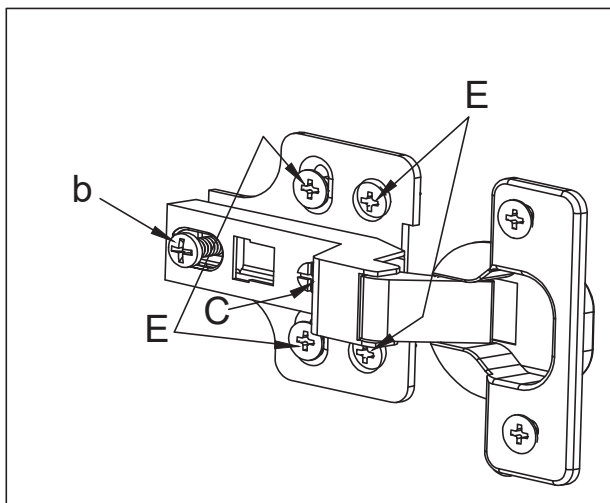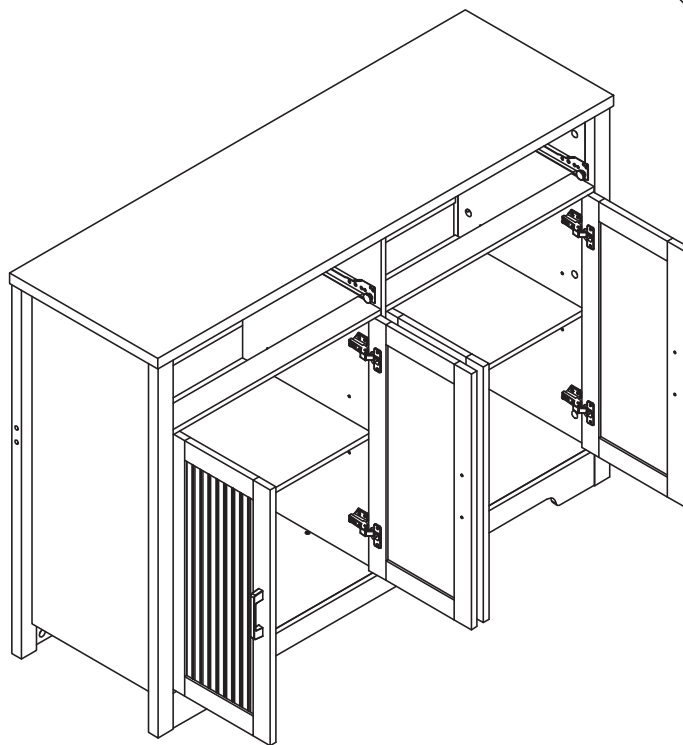


To adjust the vertical height.

Loosen the four screws "E" on both hinges. Two of them are usually in slotted holes which allows you to adjust up or down by a few mm. Then tighten back up.

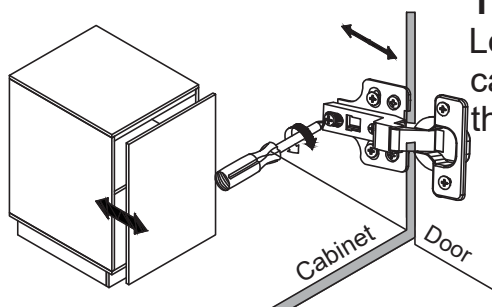



To adjust depth.

Loosen screw "b" and adjust door, if the door can not be adjusted, please loosen screw "c", then try again. Tighten screw "b" and "c".

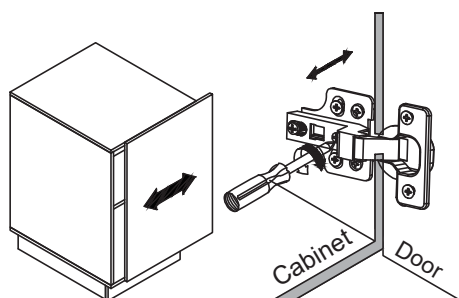

To adjust side ways.

Turning the screw "c" on BOTH hinges on each door.

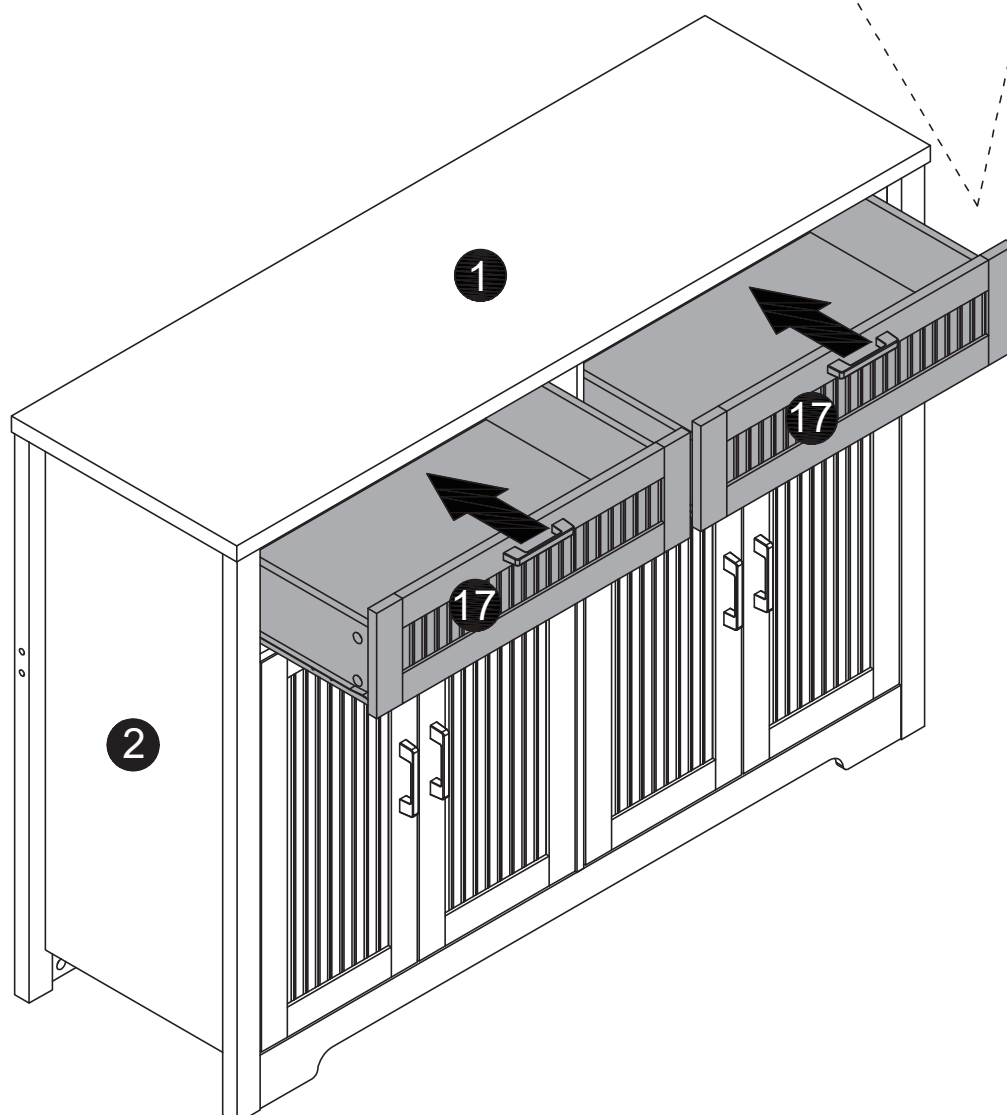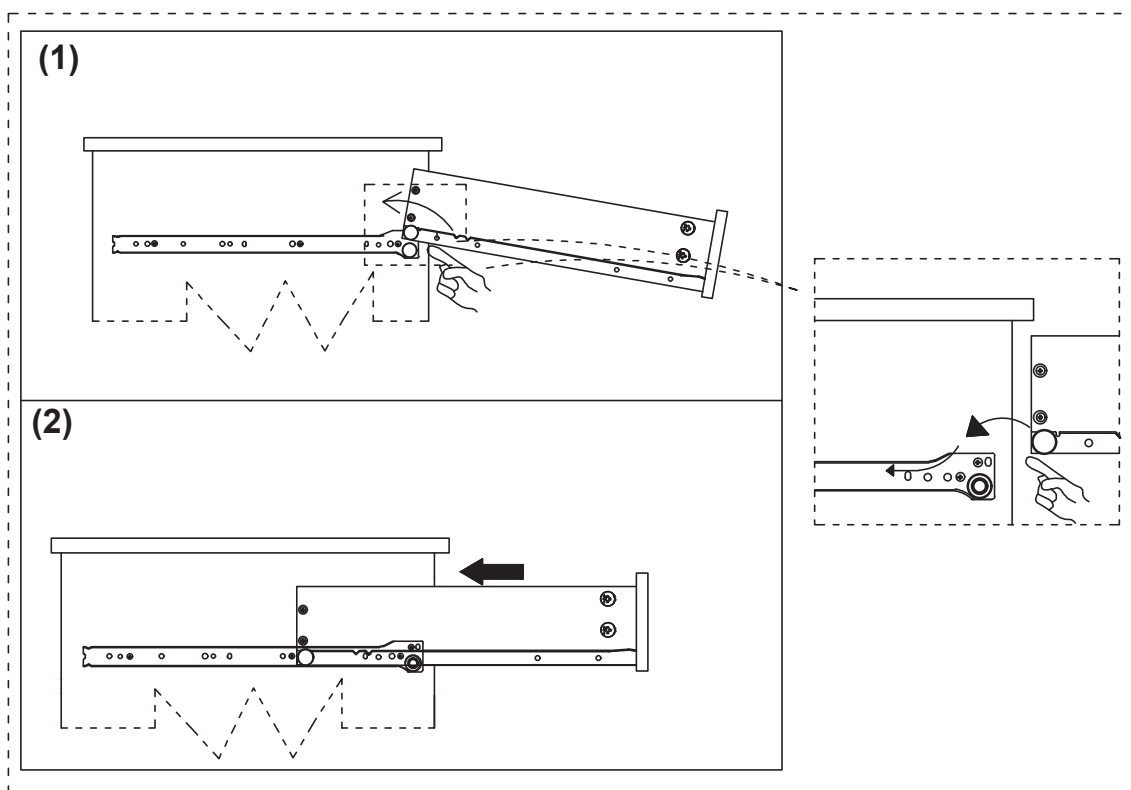

J x6




M x8




M-1




M-2

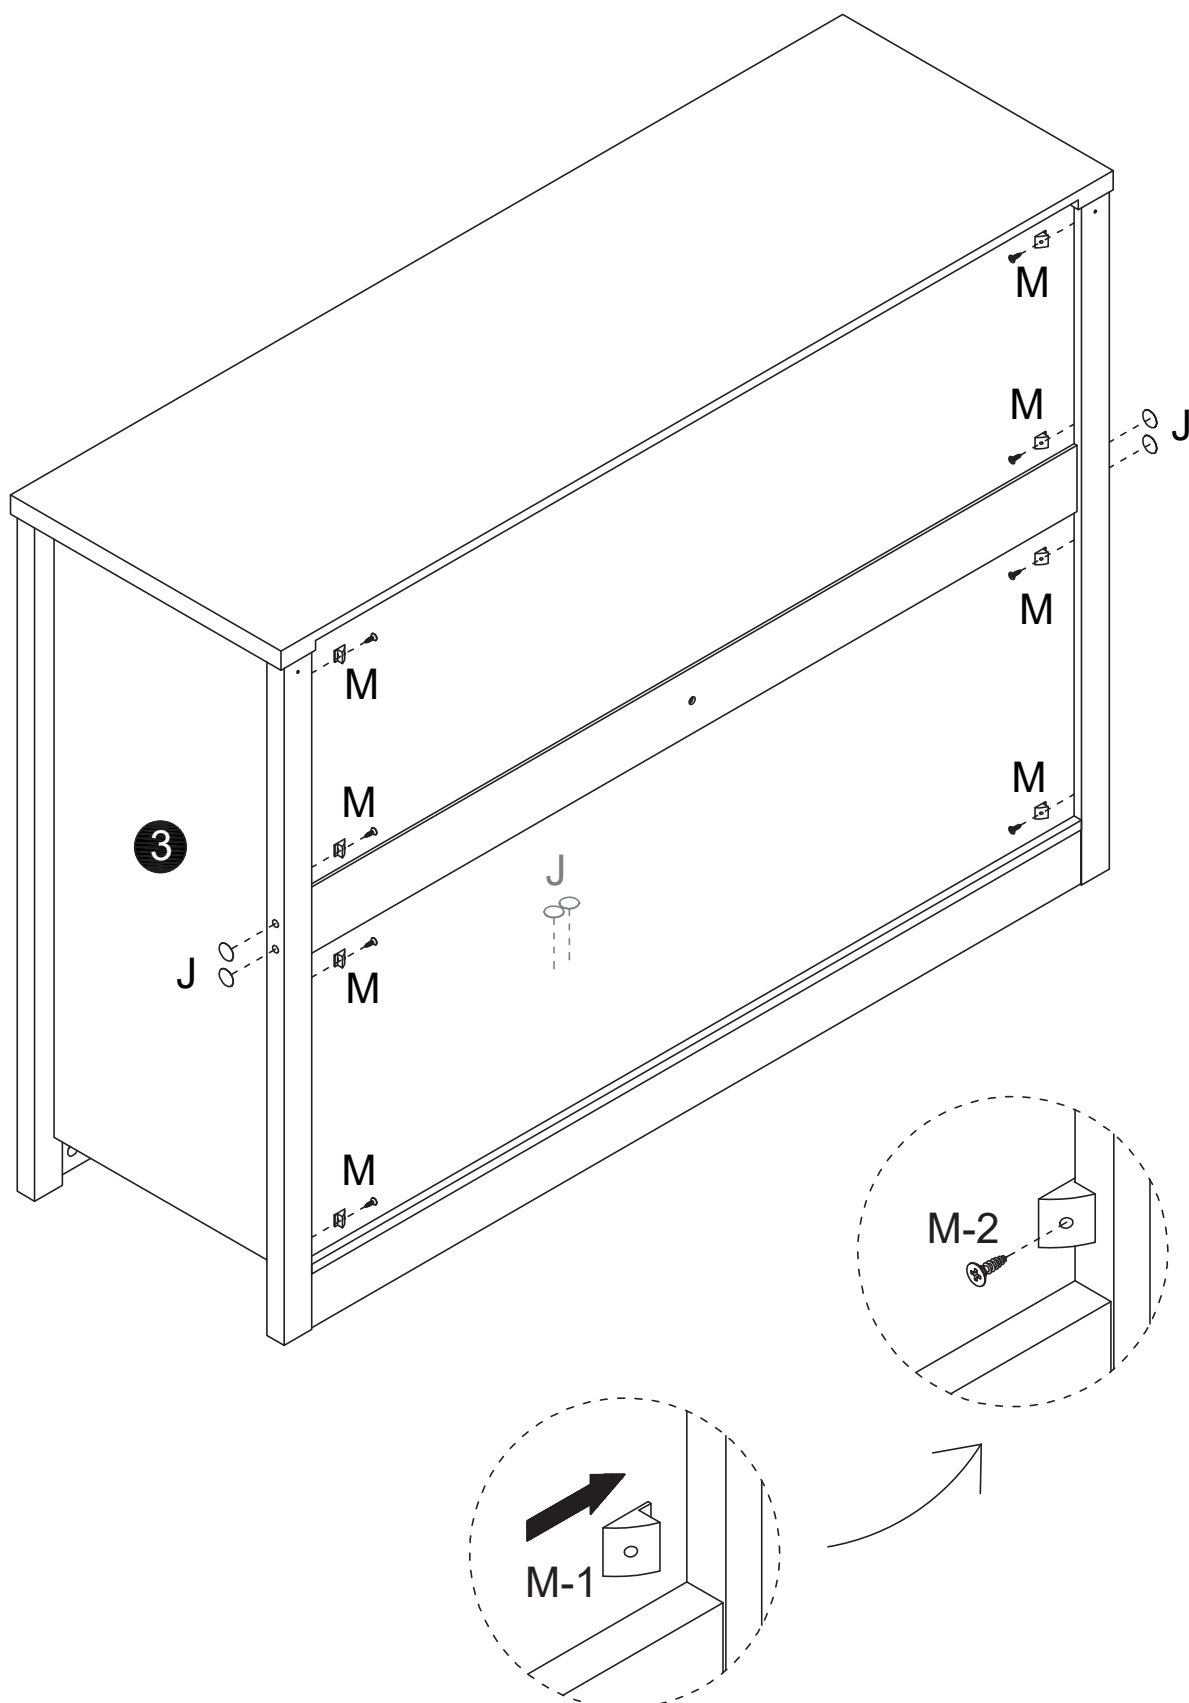

D x2



N x2





N-1




N-2


O x2

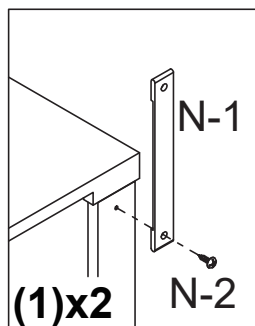


First fix the anti-rewind screw in the reserved hole of the product.

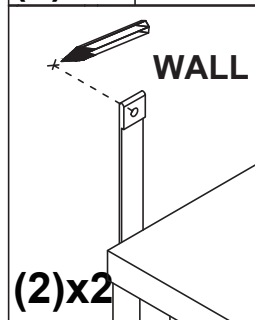


then, use a ruler to measure the approximate height of the product on the wall, and then mark it with a pen.

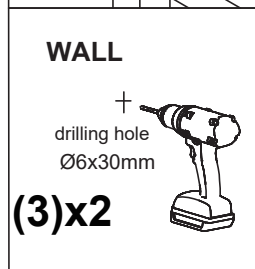

Then use a tape drill to make holes in the wall that are suitable for the product screws.

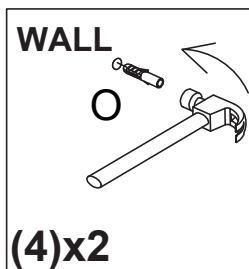

Then, put the expansion bolt into the hole

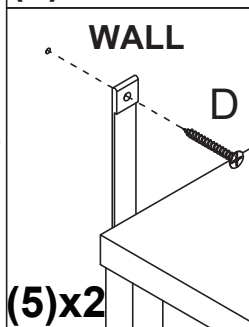

Finally, pass the matching screws through the "anti-rewind" and tighten them to fix them on the wall.

