



ROD SETS INSTALLATION INSTRUCTIONS

NOTE: Finial shown is for illustration purposes only.
It may not represent the style of finial purchased.

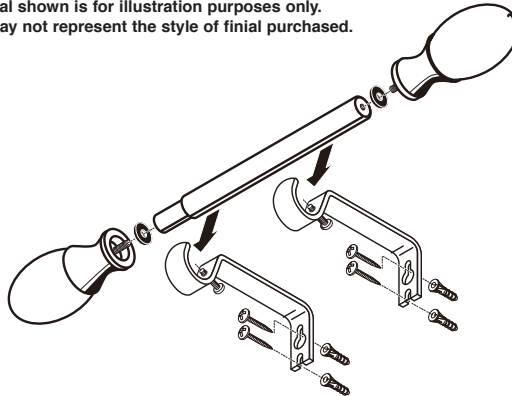


STEP 1:

Place brackets against wall at desired locations.
Mark screw holes with pencil. Be sure marks are
level across opening.

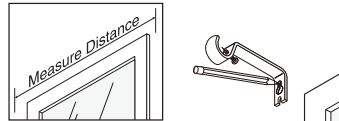


STEP 2:

If screws are going directly into wood trim or wall studs, drill a 1/8" pilot
hole at pencil marks. If screwing into drywall, follow instructions on
enclosed sheet.




STEP 3:

Assemble rod and slide drapery treatment
onto rod.




STEP 4:

Screw finials onto rod. Rotate finial on rod for proper
alignment if required.



STEP 5:

Extend rod to desired width. Lift rod with drapery
and drop into brackets. Adjust draperies to
desired position.

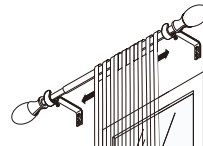

STEP 6:

Lock rods into position by tightening leveling
screw by hand until finger tight. This will prevent
the rod from moving.

