

BED FRAME

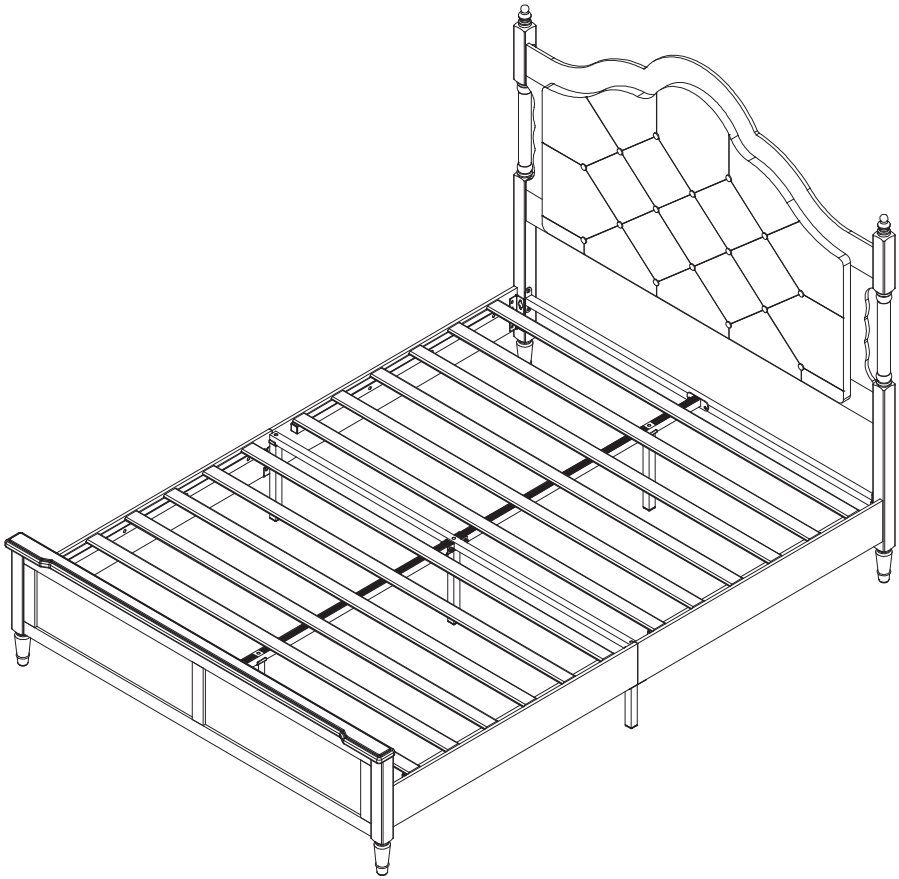

Thank you for choosing our products, please assemble and use it following the instructions.

Assembly Instruction

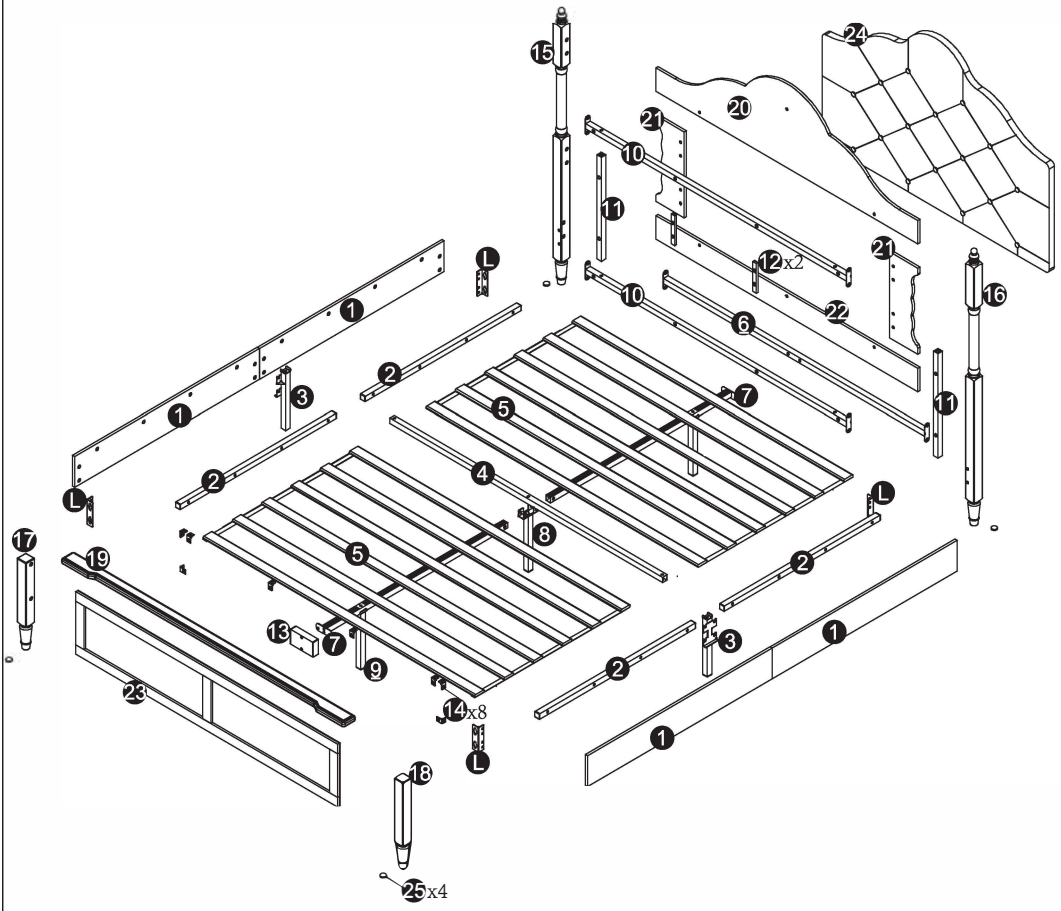


Important Note

HARDWARE NOTE :

1.Two or more people are required for assembly

2.Do not screw on the bolts too tight unless the installation is done. Make sure all bolts are tightly screwed before you use it.

Components

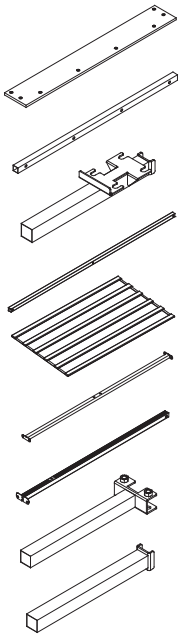

1 x4pcs

2 x4pcs

3 x2pcs

4 x1pcs


5 x2pcs

6 x1pcs

7 x2pcs

8 x1pcs

9 x2pcs

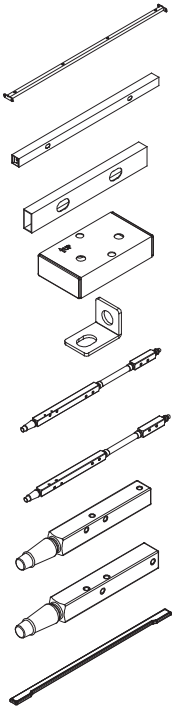

10 x2pcs

11 x2pcs

12 x2pcs

13 x1pcs

14 x8pcs


15 x1pcs

16 x1pcs

17 x1pcs

18 x1pcs

19 x1pcs

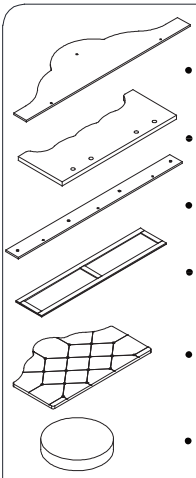

20 x1pcs

21 x2pcs

22 x1pcs

23 x1pcs

24 x1pcs

25 x4pcs



M8x12 A x28pcs

M8x20 B x38pcs

M8x25 C x4pcs


M8x35 D x32pcs


M8x40 E x2pcs


M8x45 F x11pcs


5x5 G x1pc

L x4pc

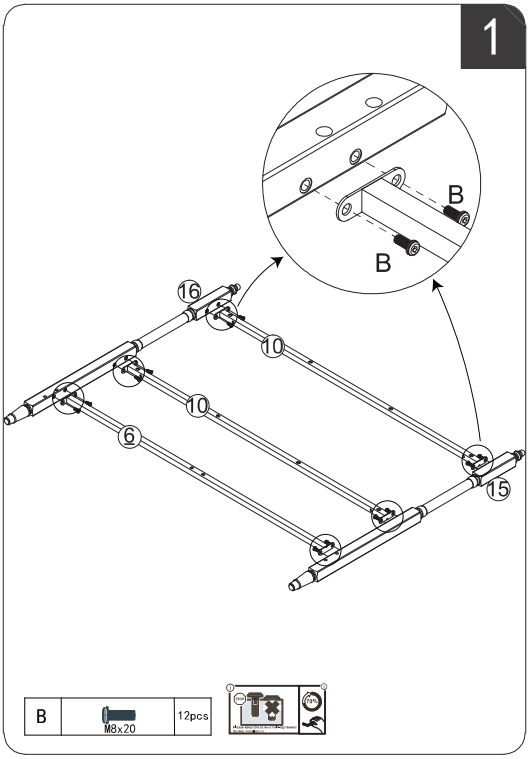

1
B
B
16
10
10
6
15
B
M8x20
12pcs

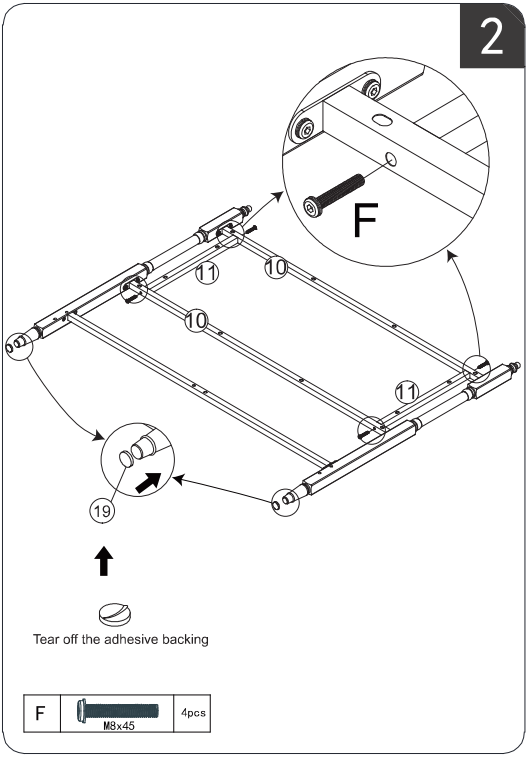
2
F
11
10
10
11
19
Tear off the adhesive backing
F
M8x45
4pcs

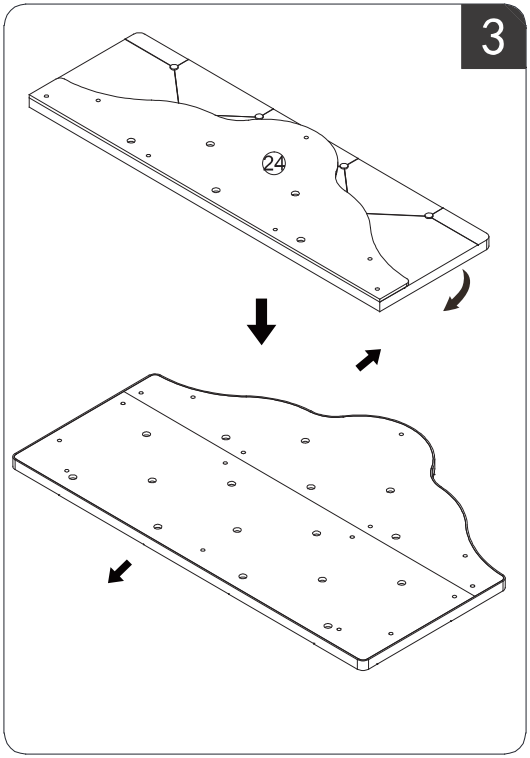
3
24

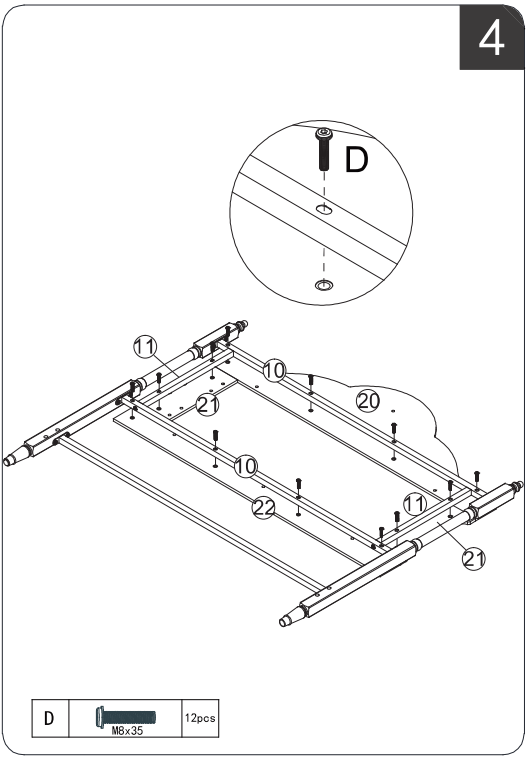

4
D
11
10
21
20
10
22
11
21
D
M8x35
12pcs

5

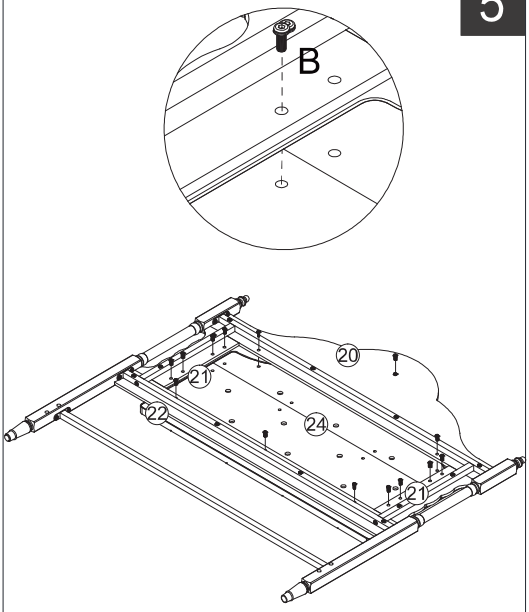

B	M8x20	14pcs


6

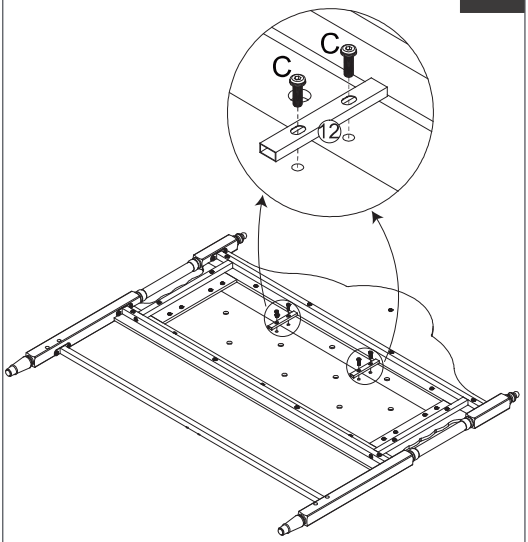

C	M8x25	4pcs

7


x2

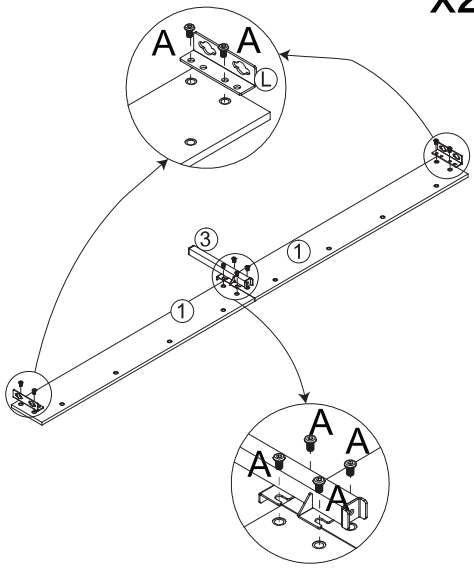


A	M8x12	16pcs


8


x2

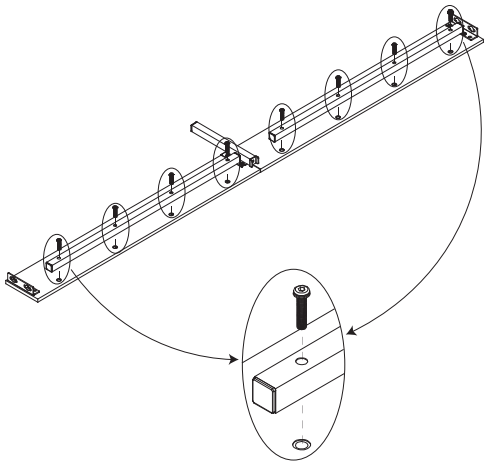


D	M8x35	16pcs

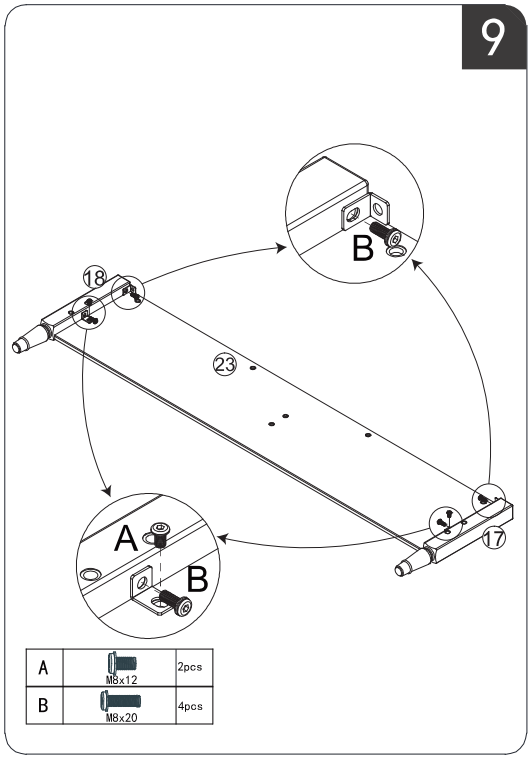

9
B
18
23
17
A
B
A
M8x12
2pcs
B
M8x20
4pcs

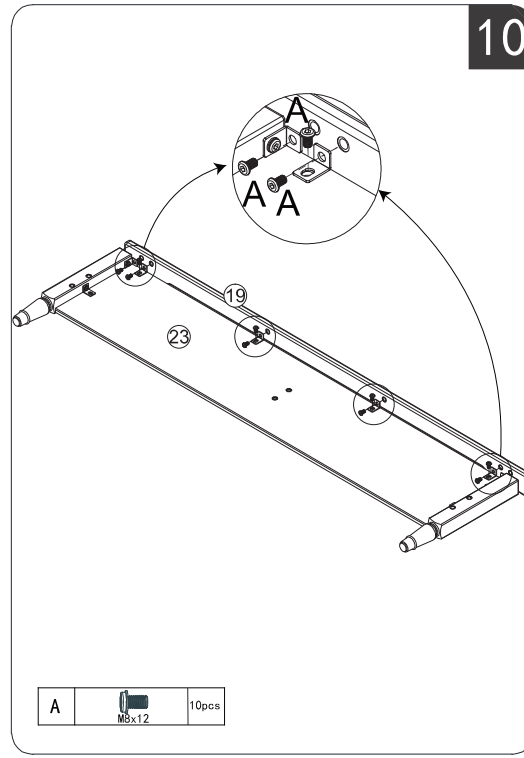
10
A
A
A
19
23
A
M8x12
10pcs

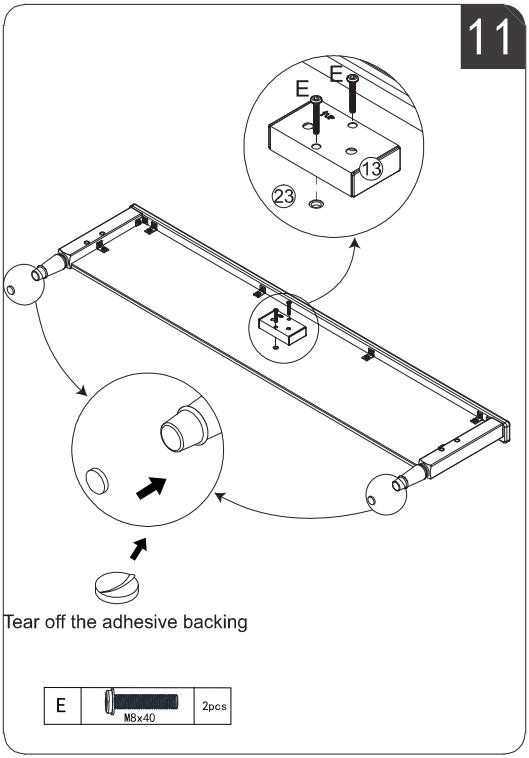
11
E
E
13
23
Tear off the adhesive backing
E
M8x40
2pcs

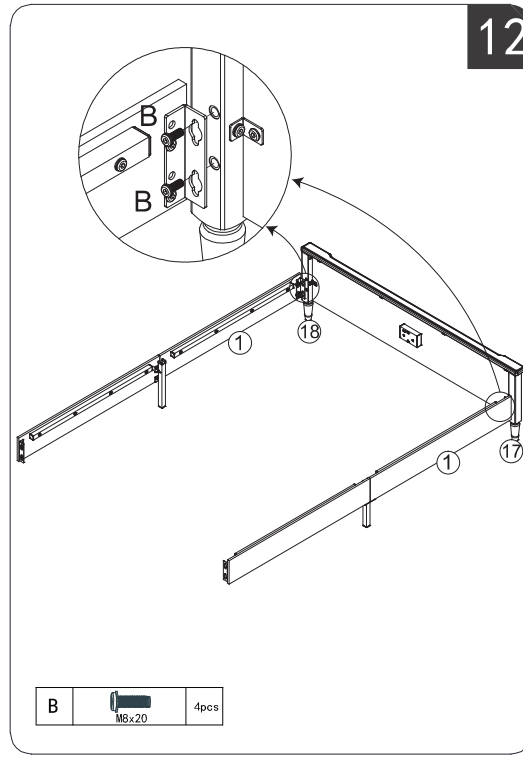

12
B
B
1
18
17
1
B
M8x20
4pcs

13

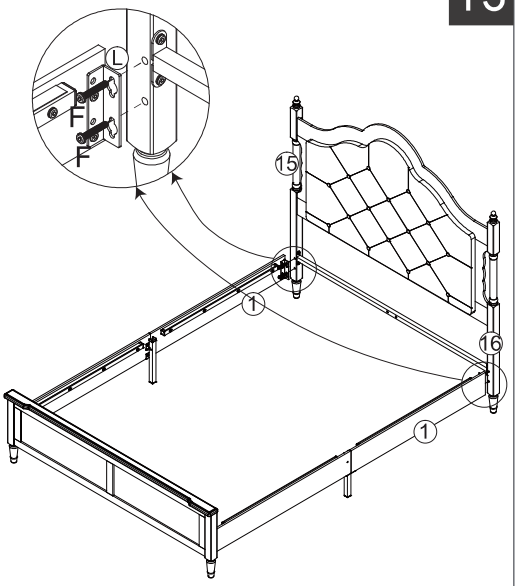


F	M8x45	4pcs

14

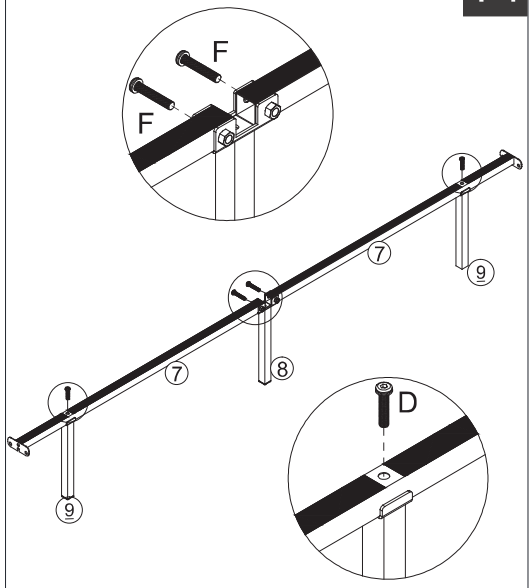


D	M8x35	2pcs
F	M8x45	2pcs

15

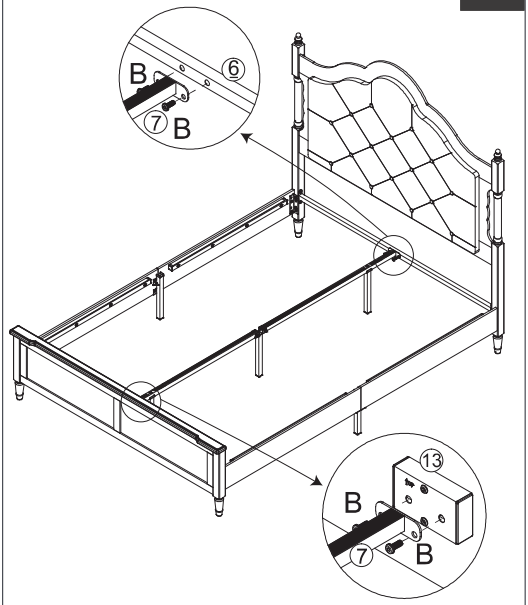


B	M8x20	4pcs


16

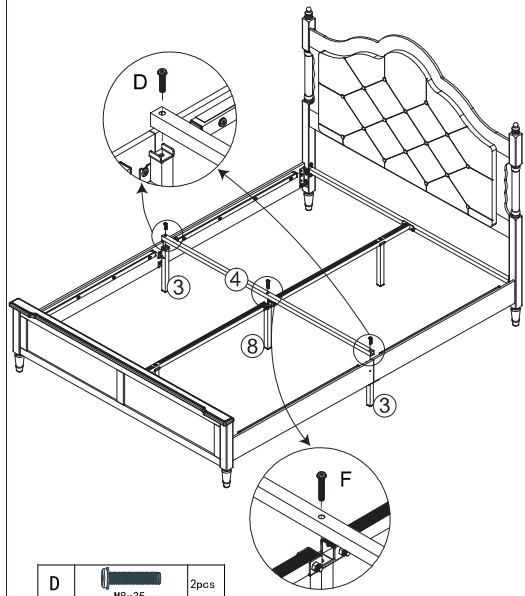

D	M8x35	2pcs
F	M8x45	1pcs

17

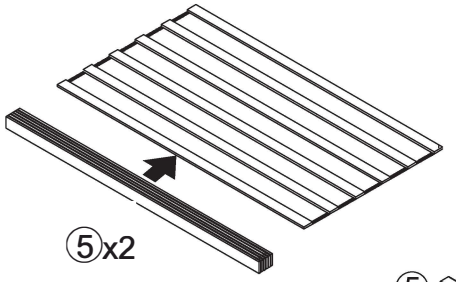

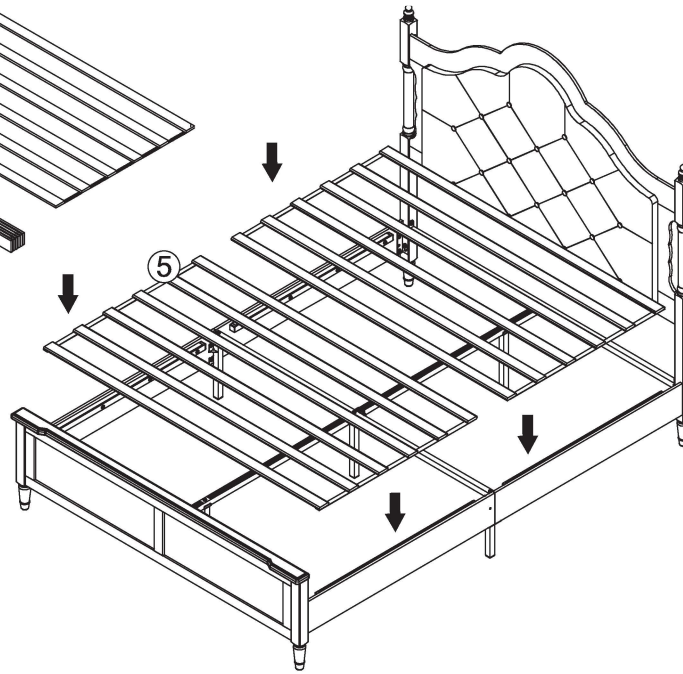

18







Finish