



Underscore® | K-5713

59-3/4" x 35-3/4" drop-in bath

Features

- Integral lumbar support
- Oval basin creates a spacious bathing experience
- Slotted overflow allows for deep soaking



Available Colors/Finishes

Color tiles intended for reference only.

	0	White
	96	Biscuit
	7	Black Black



1-800-4KOHLER (1-800-456-4537)
Kohler Co. reserves the right to make revisions without notice to product specifications.
For the most current specification sheet, go to www.kohler.com USA or www.kohler.ca Canada.
7-30-2026 01:30 - US-CA

THE BOLD LOOK
OF **KOHLER**®

Codes/Standards

CSA B45.5/IAPMO Z124
ASTM E162
ASTM E662

Warranty

See website for detailed warranty information.

KOHLER® Plastic Baths and Shower Bases Lifetime Limited
Warranty

Technical Information

All product dimensions are nominal.

Drain Location:	Center
Drain Hole Diameter:	2-3/16" (56 mm)
Basin Area, Bottom:	43" x 25-5/8" (1093 mm x 651 mm)
Basin Area, Top:	55-9/16" x 28-3/8" (1411 mm x 720 mm)
Water Depth:	16-5/16" (415 mm)
Water Capacity:	72.017 gal (272.6 L)
Minimum Floor Load:	45.8 lbs/ft ²
Weight:	85 lbs (38.6 kg)

Material

- Acrylic

Recommended Products/Accessories

K-23726 Drain treatment

K-23732 Tub & shower cleaner

K-814 Undermount kit for select 59-15/16" Underscore bath
and whirlpool bath models

Required Products/Accessories



- K-7271 Slotted overflow brass bath drain

or



- K-7272 Slotted overflow bath drain



No change in measurements if connected with drain illustrated. (K-7272)

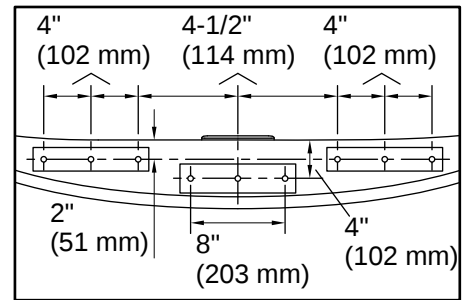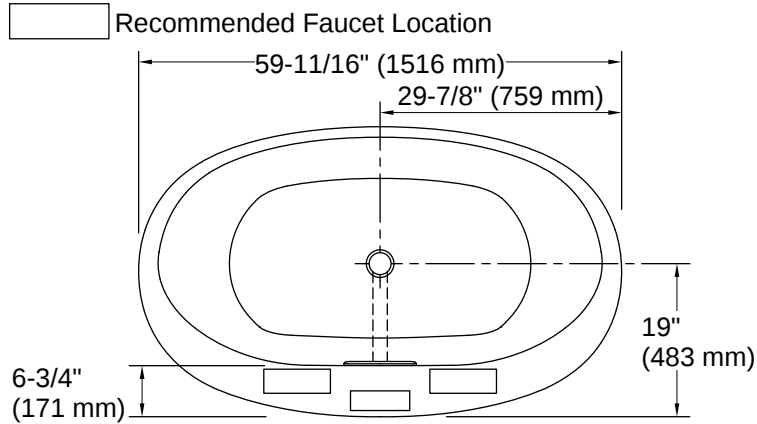

Recommended Faucet Hole Location

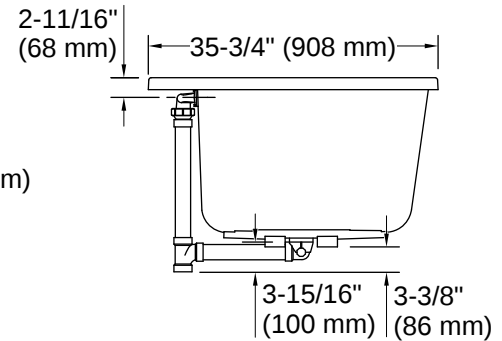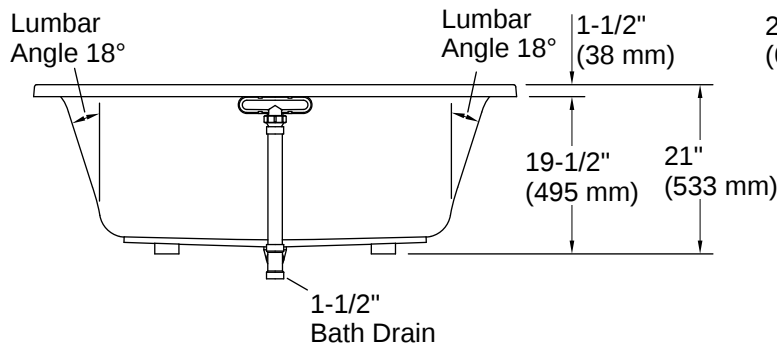

Installation

- Requires Clearflo slotted overflow bath drain (sold separately)
- Center drain
- Drop-in or undermount

Installation Notes

Install this product according to the installation instructions.

Measure your actual product for rough-in details.

The hot water supply should be 70% of the capacity of the bath or greater. Installations will vary.

Kit is required for under-mount installations (sold separately).

If installing a rim-mount faucet, make sure there is no interference with drain overflow before drilling any holes.

Consult local and national codes for minimum air gap requirements if installing a spout on the faucet deck.

