


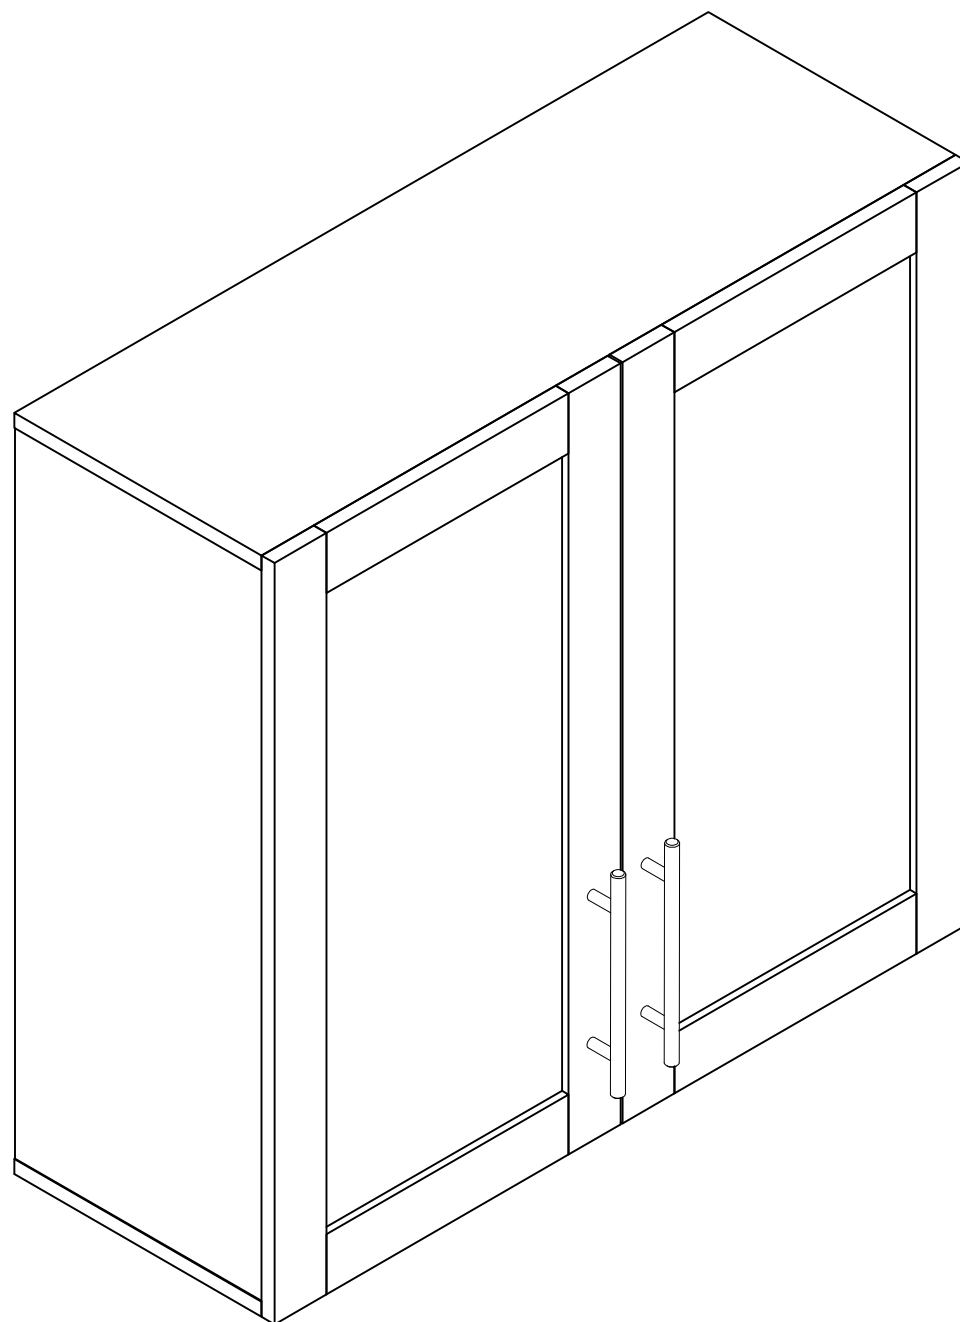
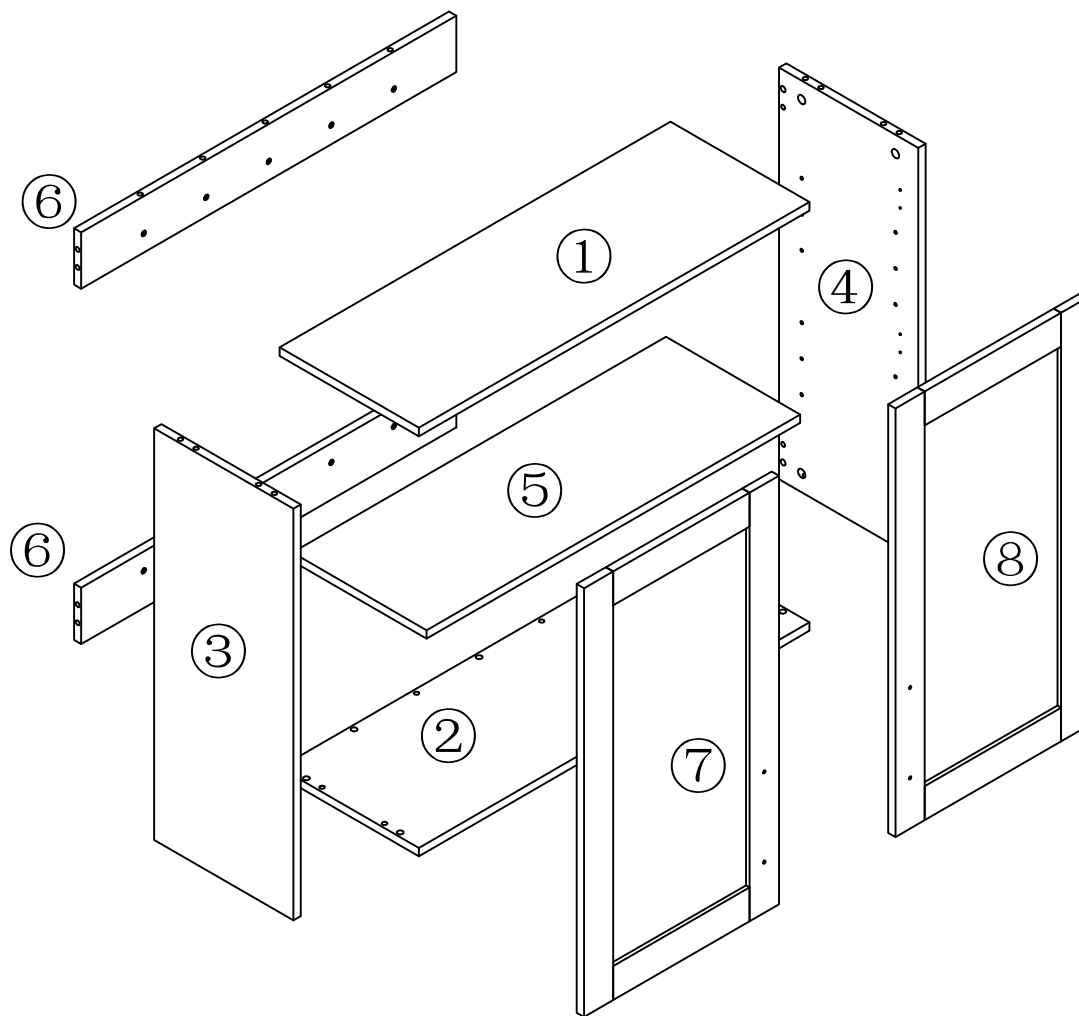

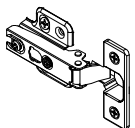


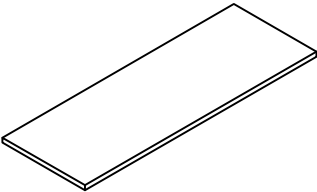
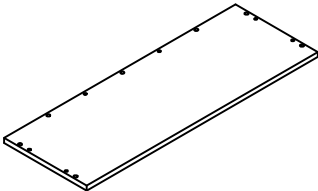
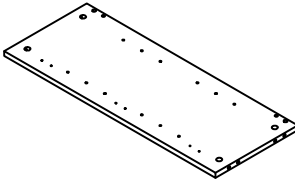
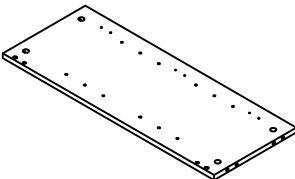
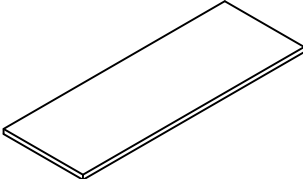


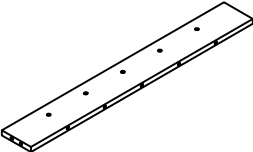

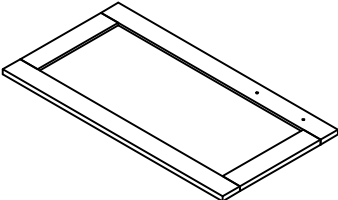

A	B	C	D	E	F	G	H	I	J
									
18PCS	18PCS	16PCS	24PCS	6PCS	2PCS	4PCS	4PCS	10PCS	10PCS


1  800*285 1PS	2  800*285 1PS	3  730*285 1PS	4  730*285 1PS	5  765*275 1PS
6  768*100 2PS	7  760*399 1PS	8  760*399 1PS		

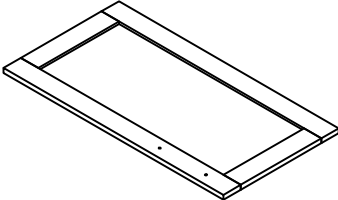


Hardware installation demonstration

NOTE: Please make sure "A" hardware tightened and can't be pulled out!


I

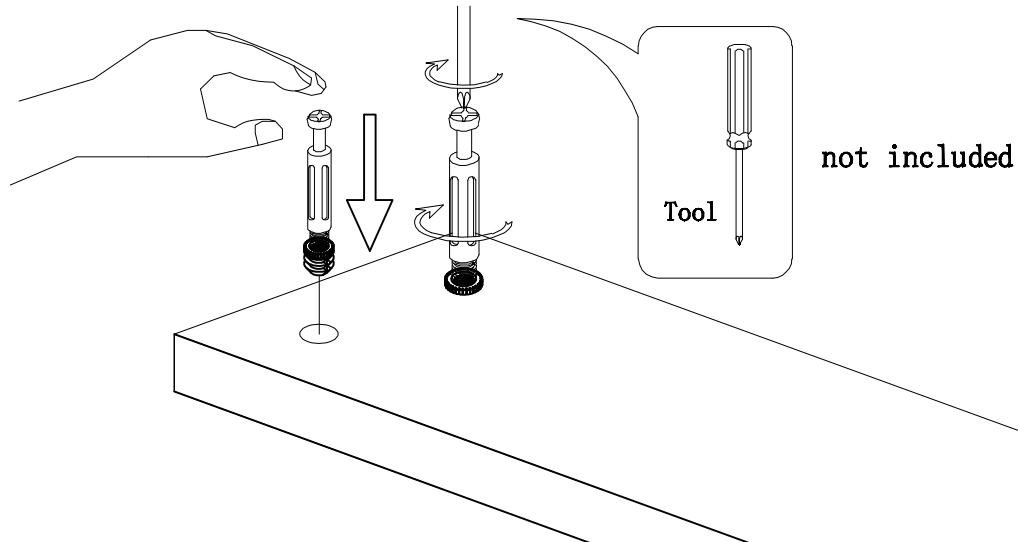

II

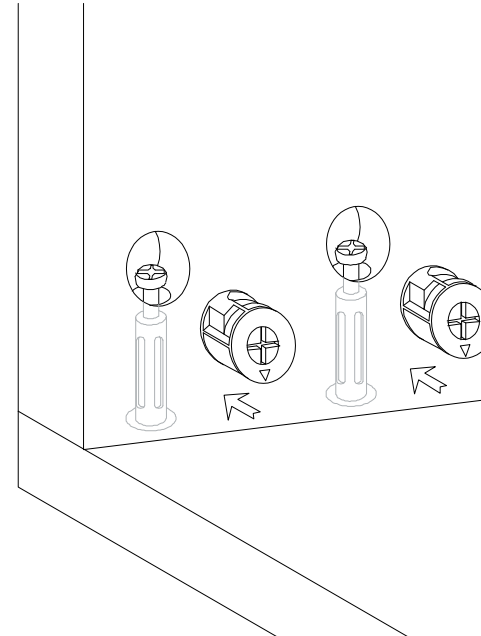

III

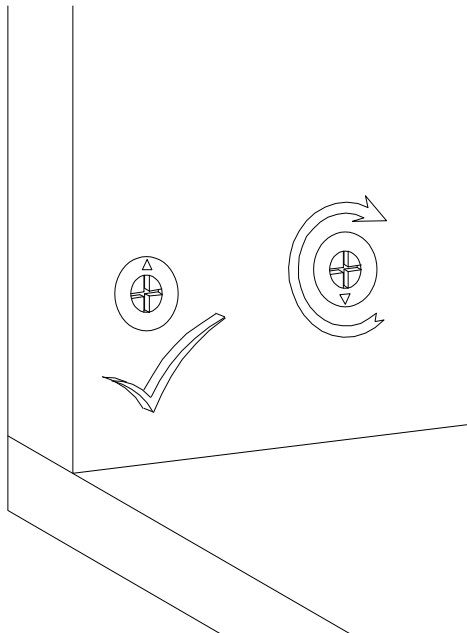


IV



Scan QR code for assembly video

1

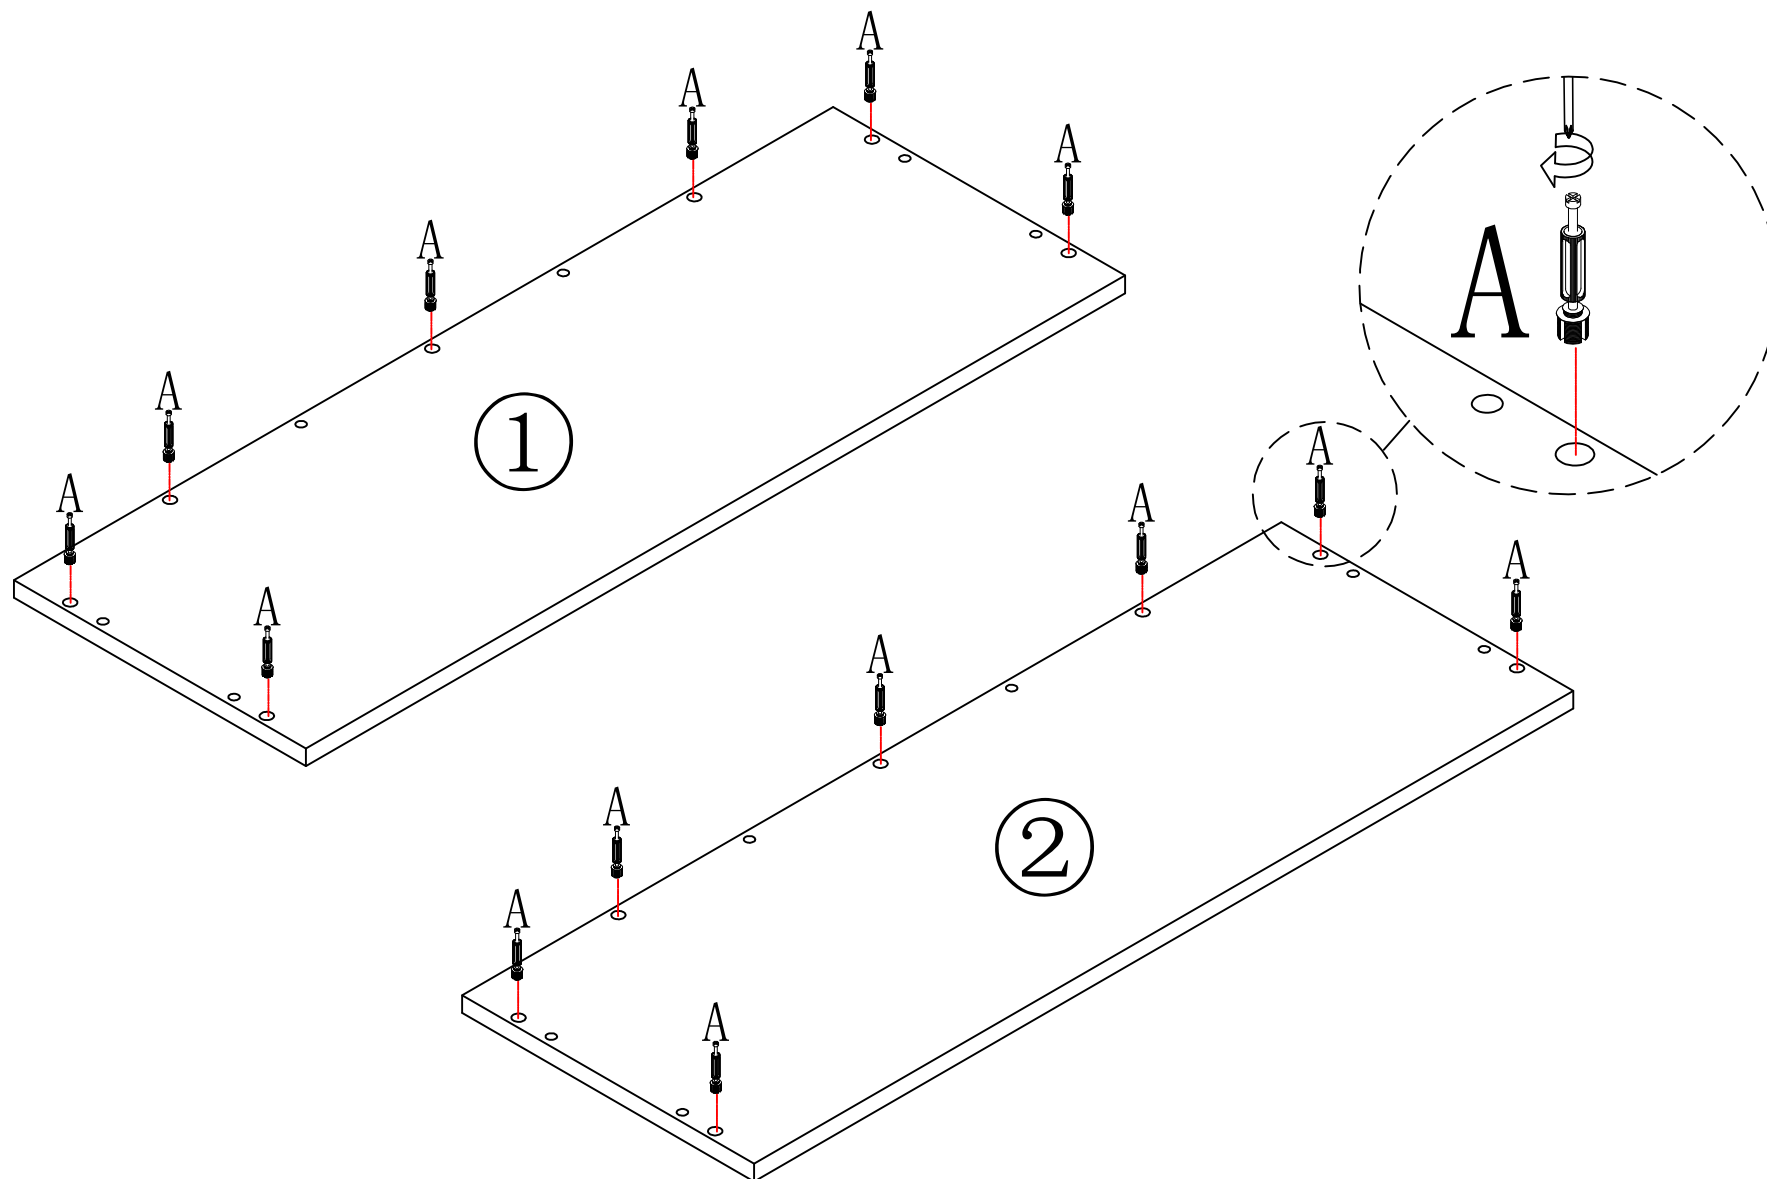


put A on board ① ②




A*14

2

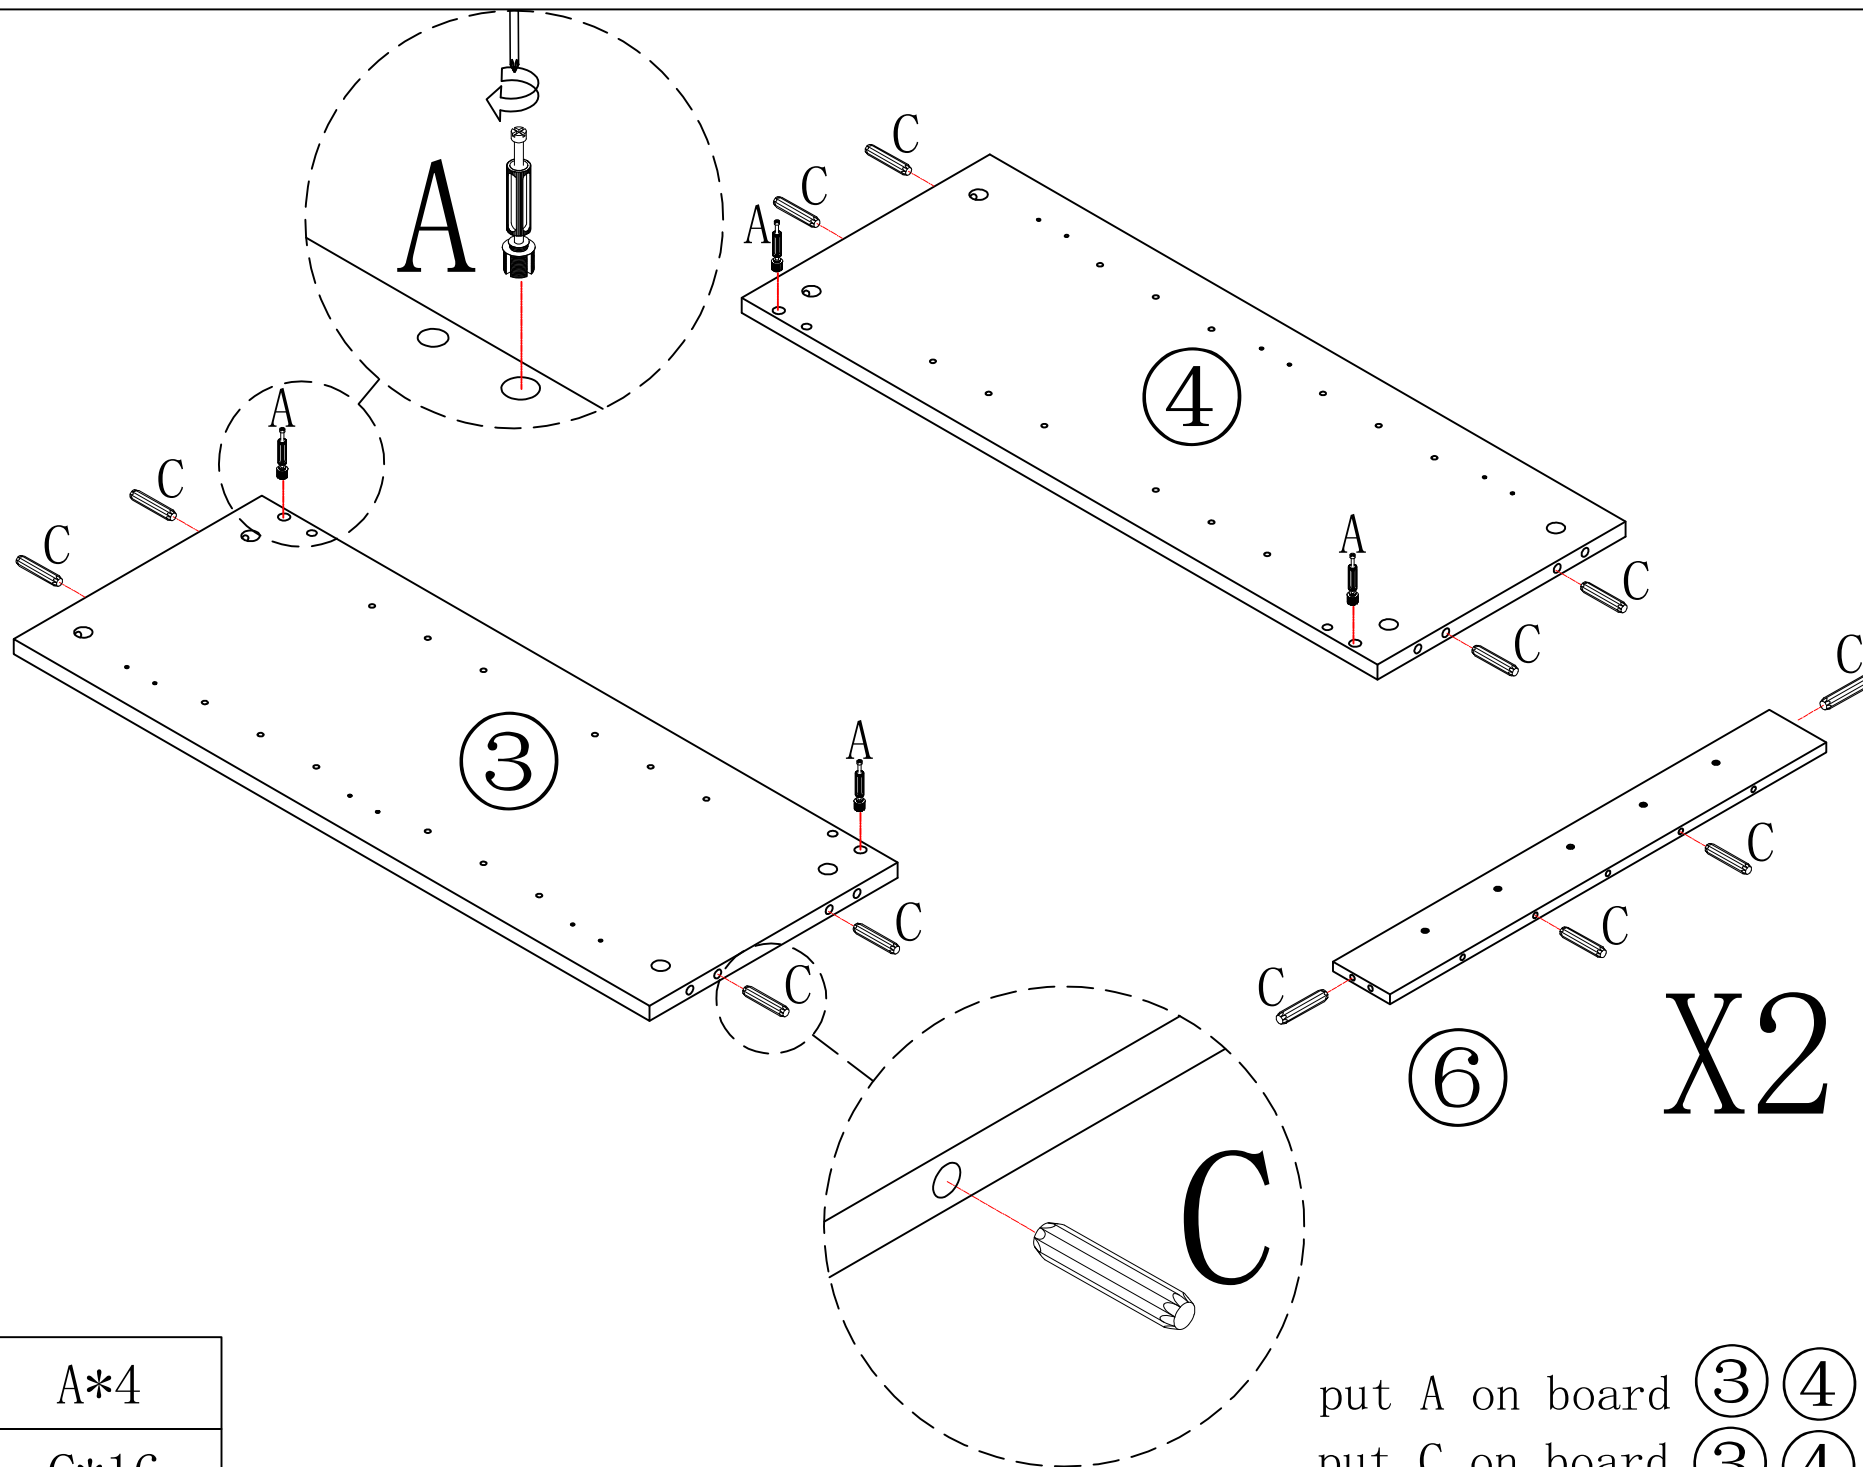

3


Make sure the arrow on the screw align to the hole on the side

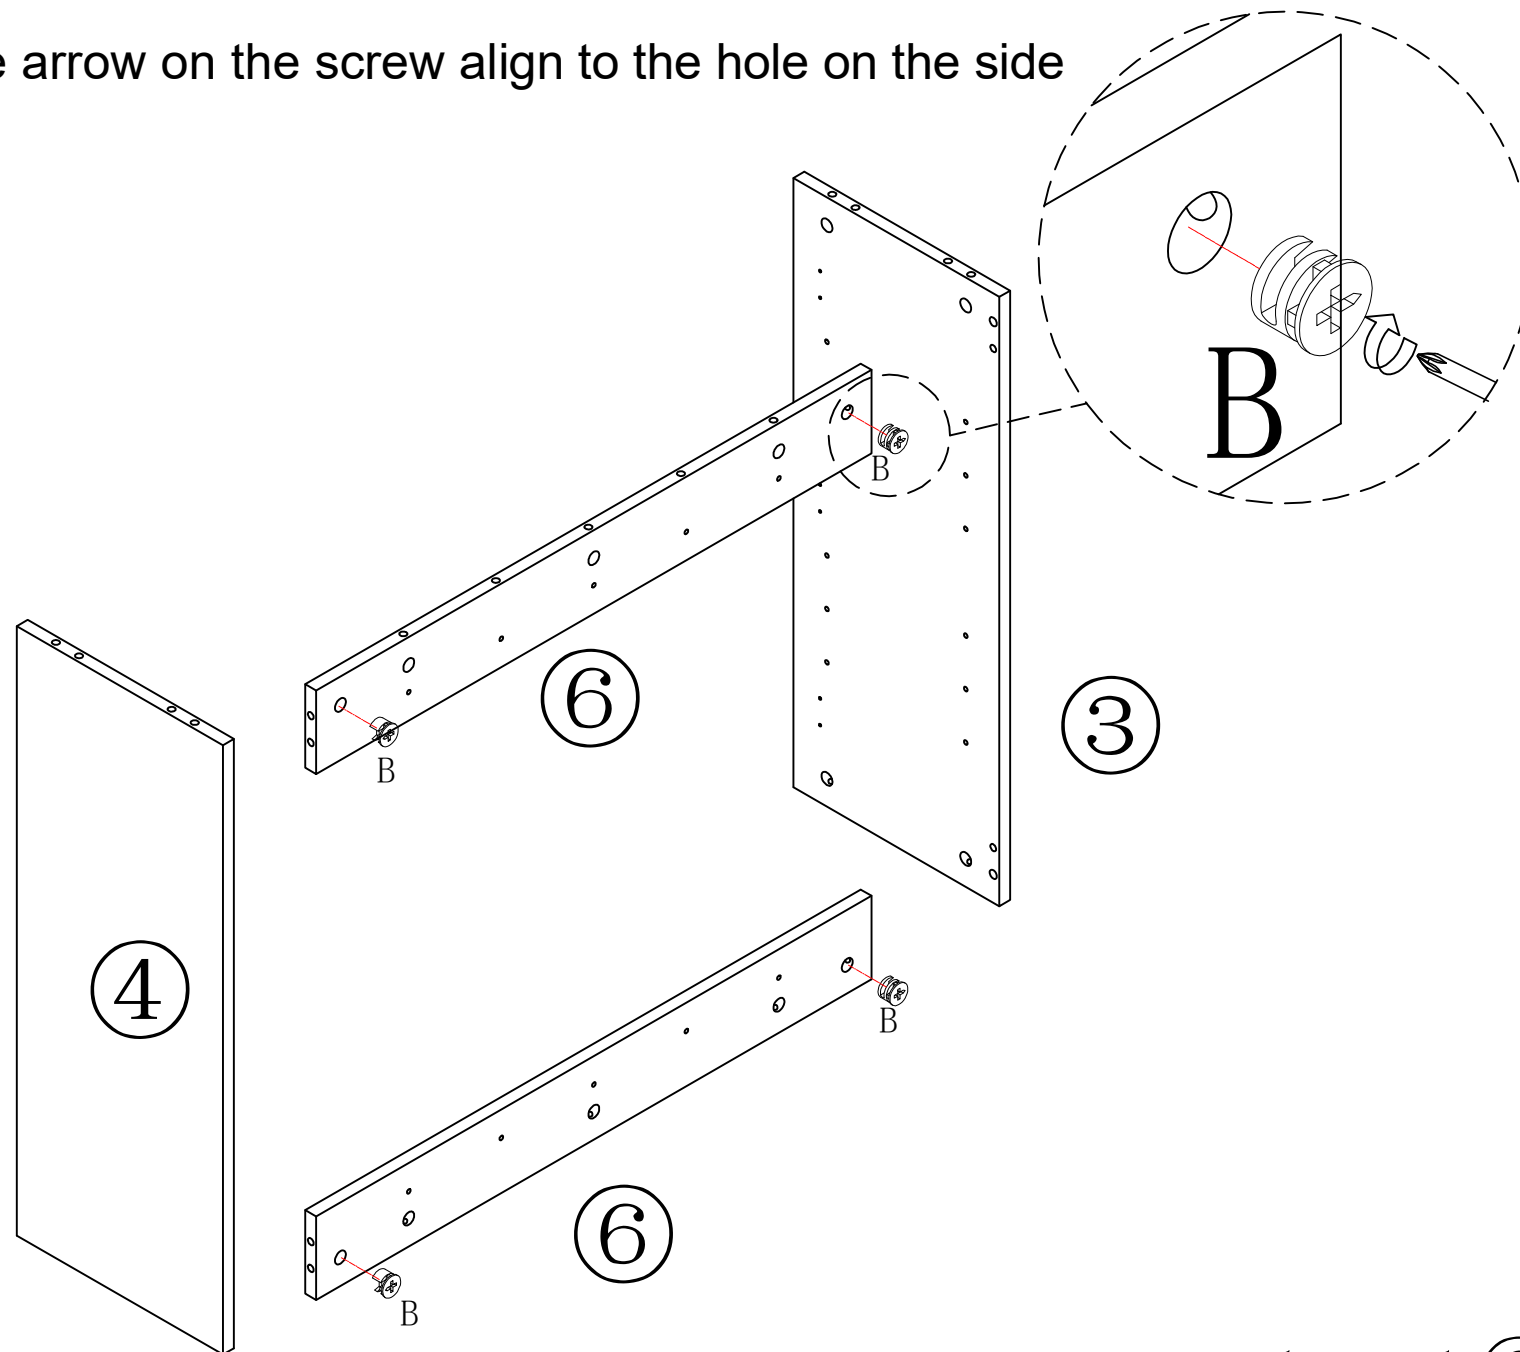

B*4

put B on board ⑥



④

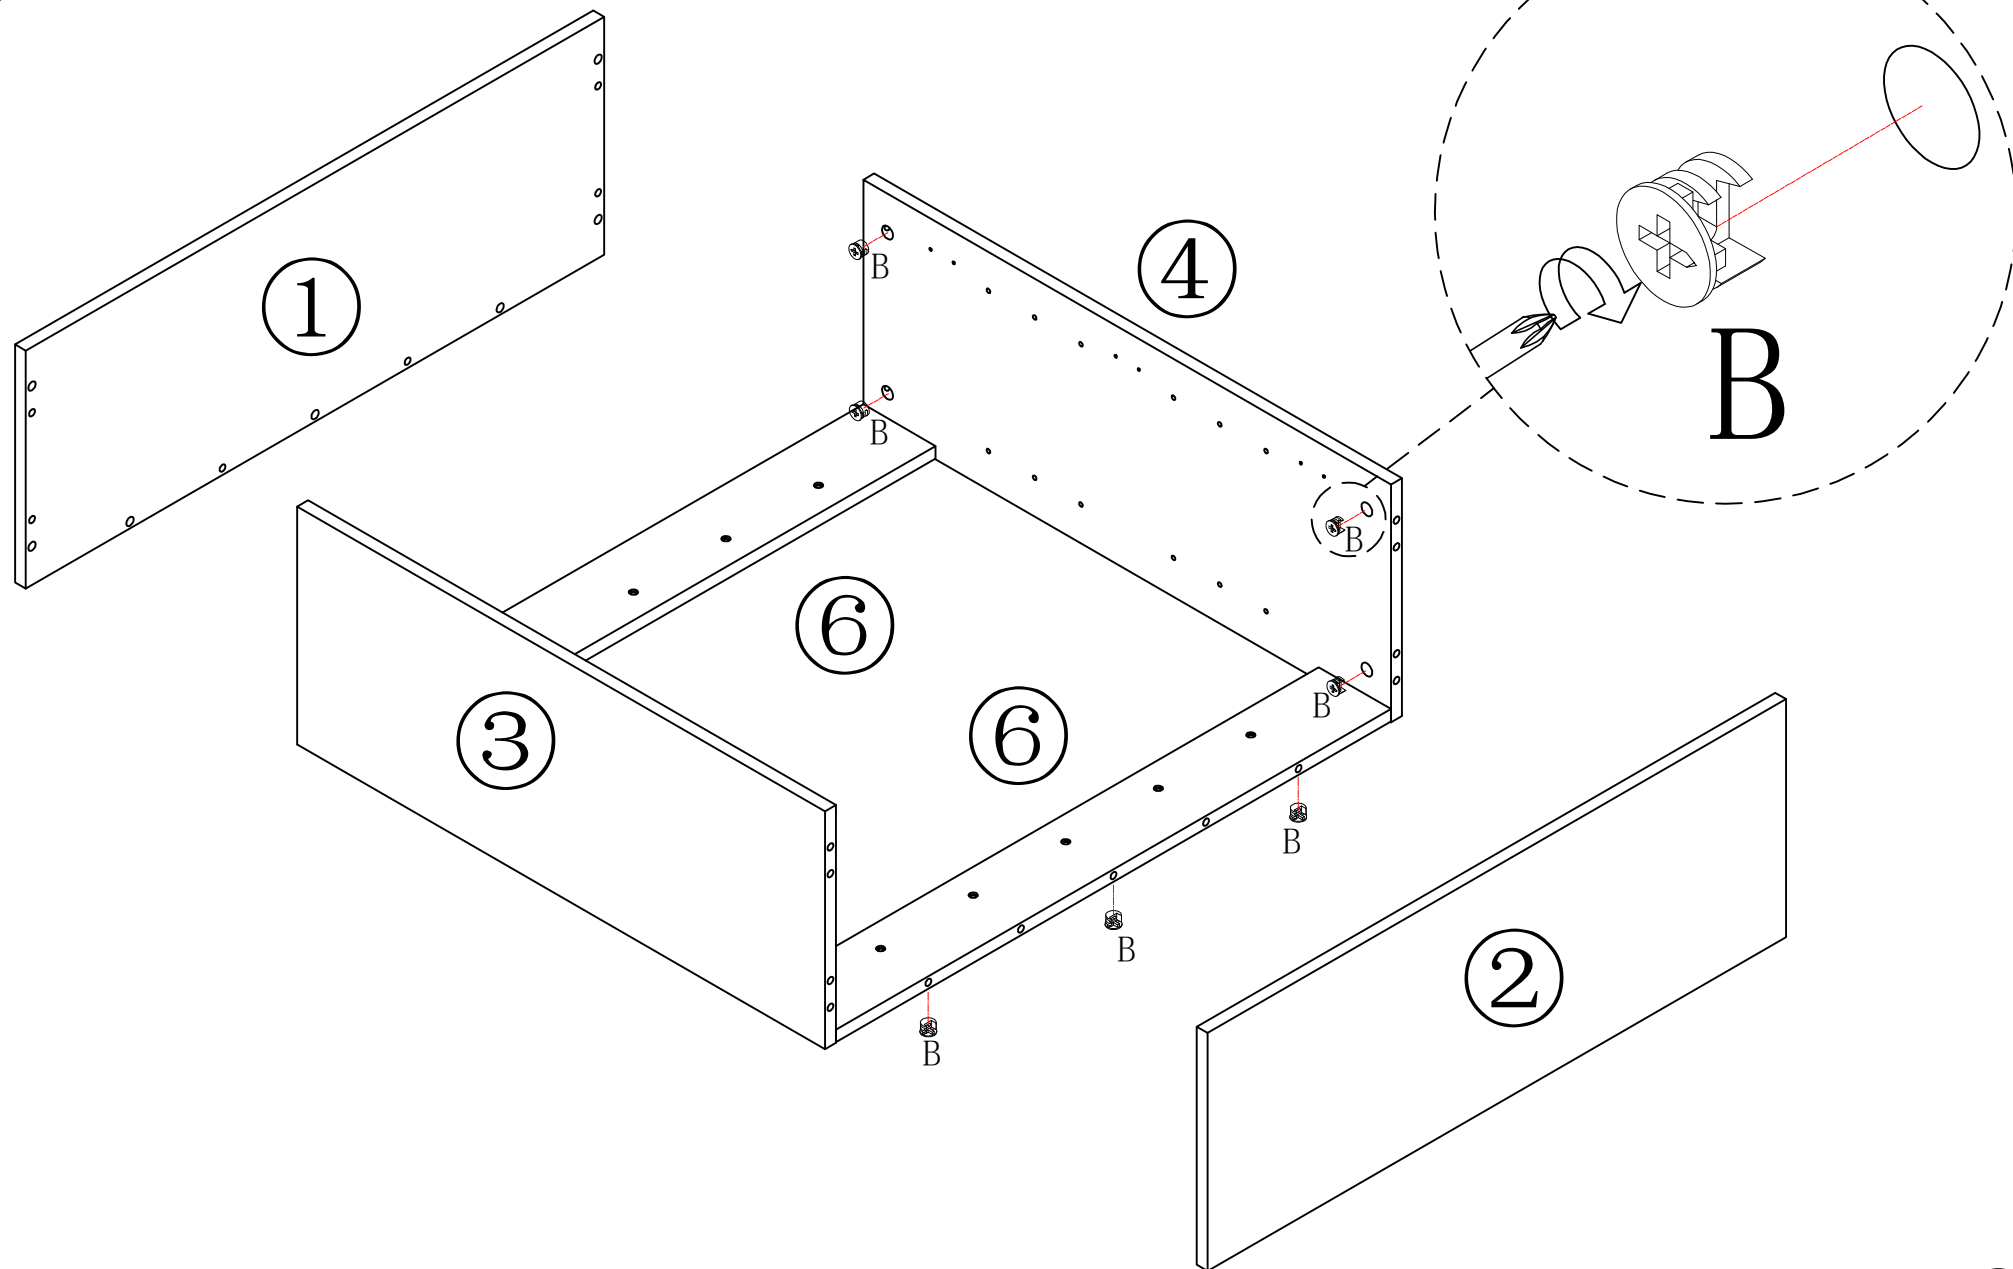

B*14

put B on board ③ ④ ⑥

5




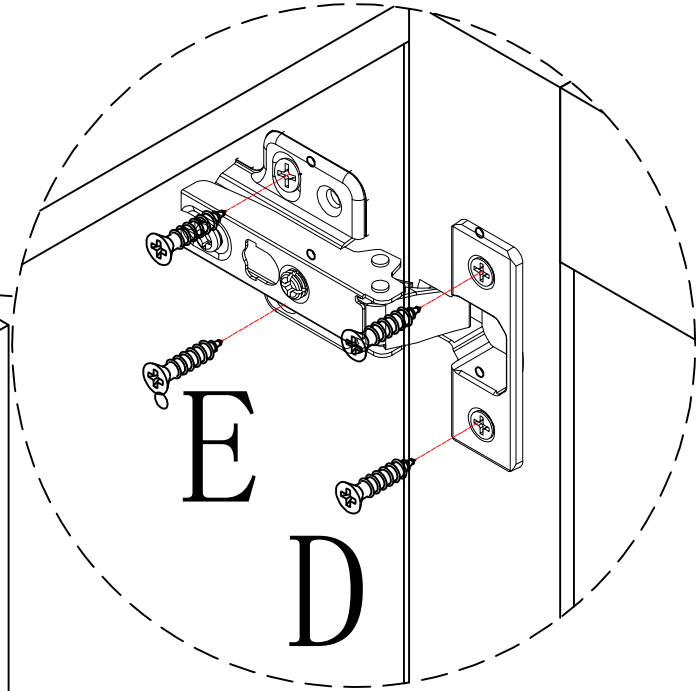
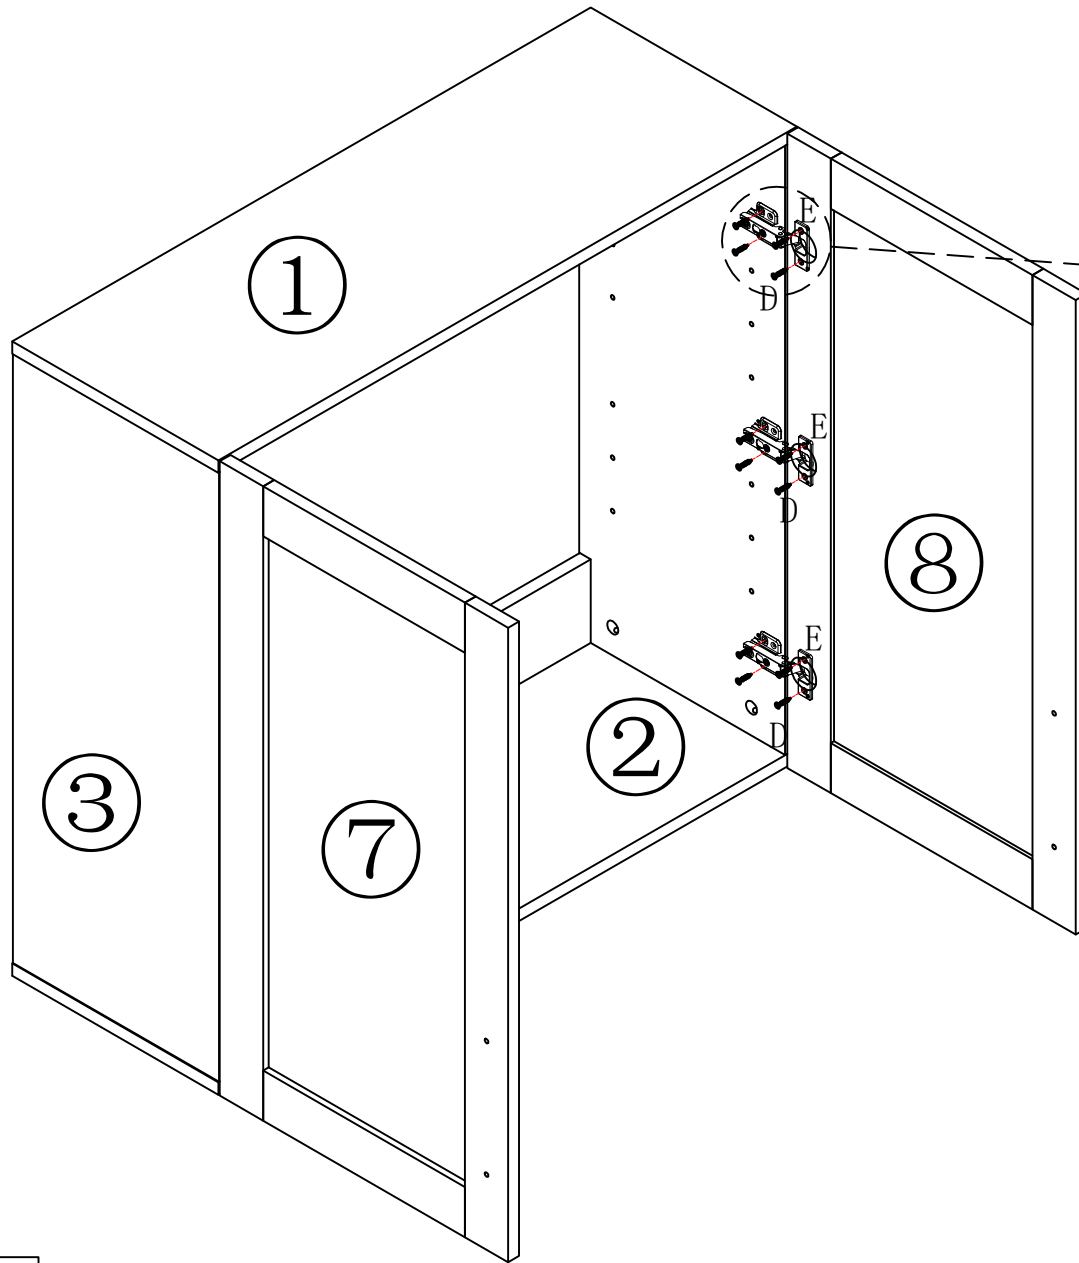


D*24



E*6

⑥

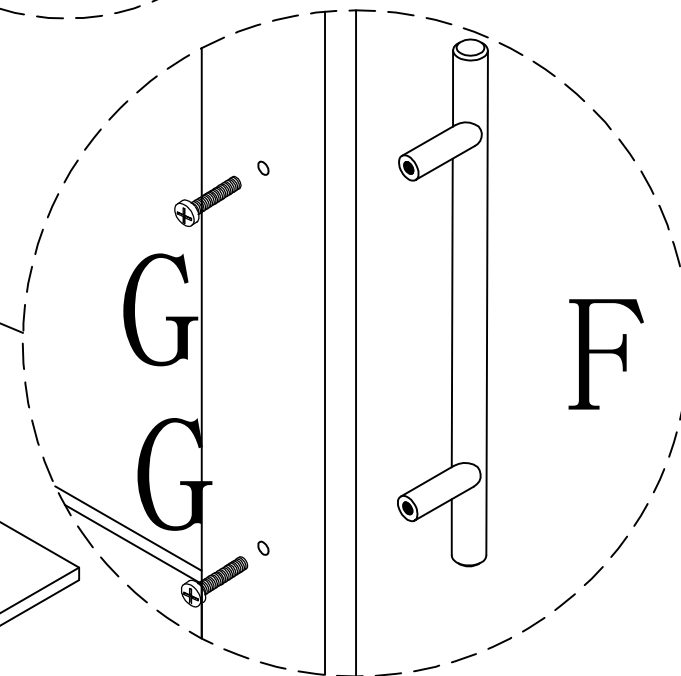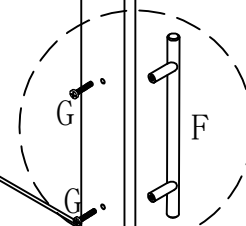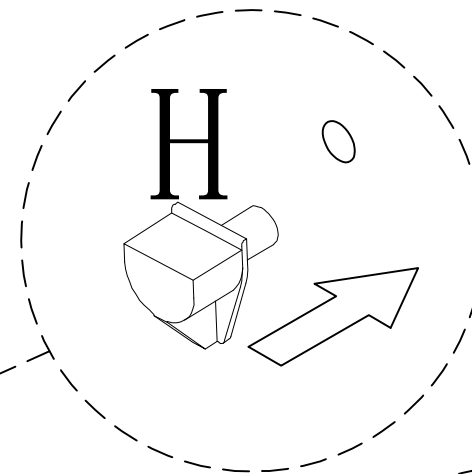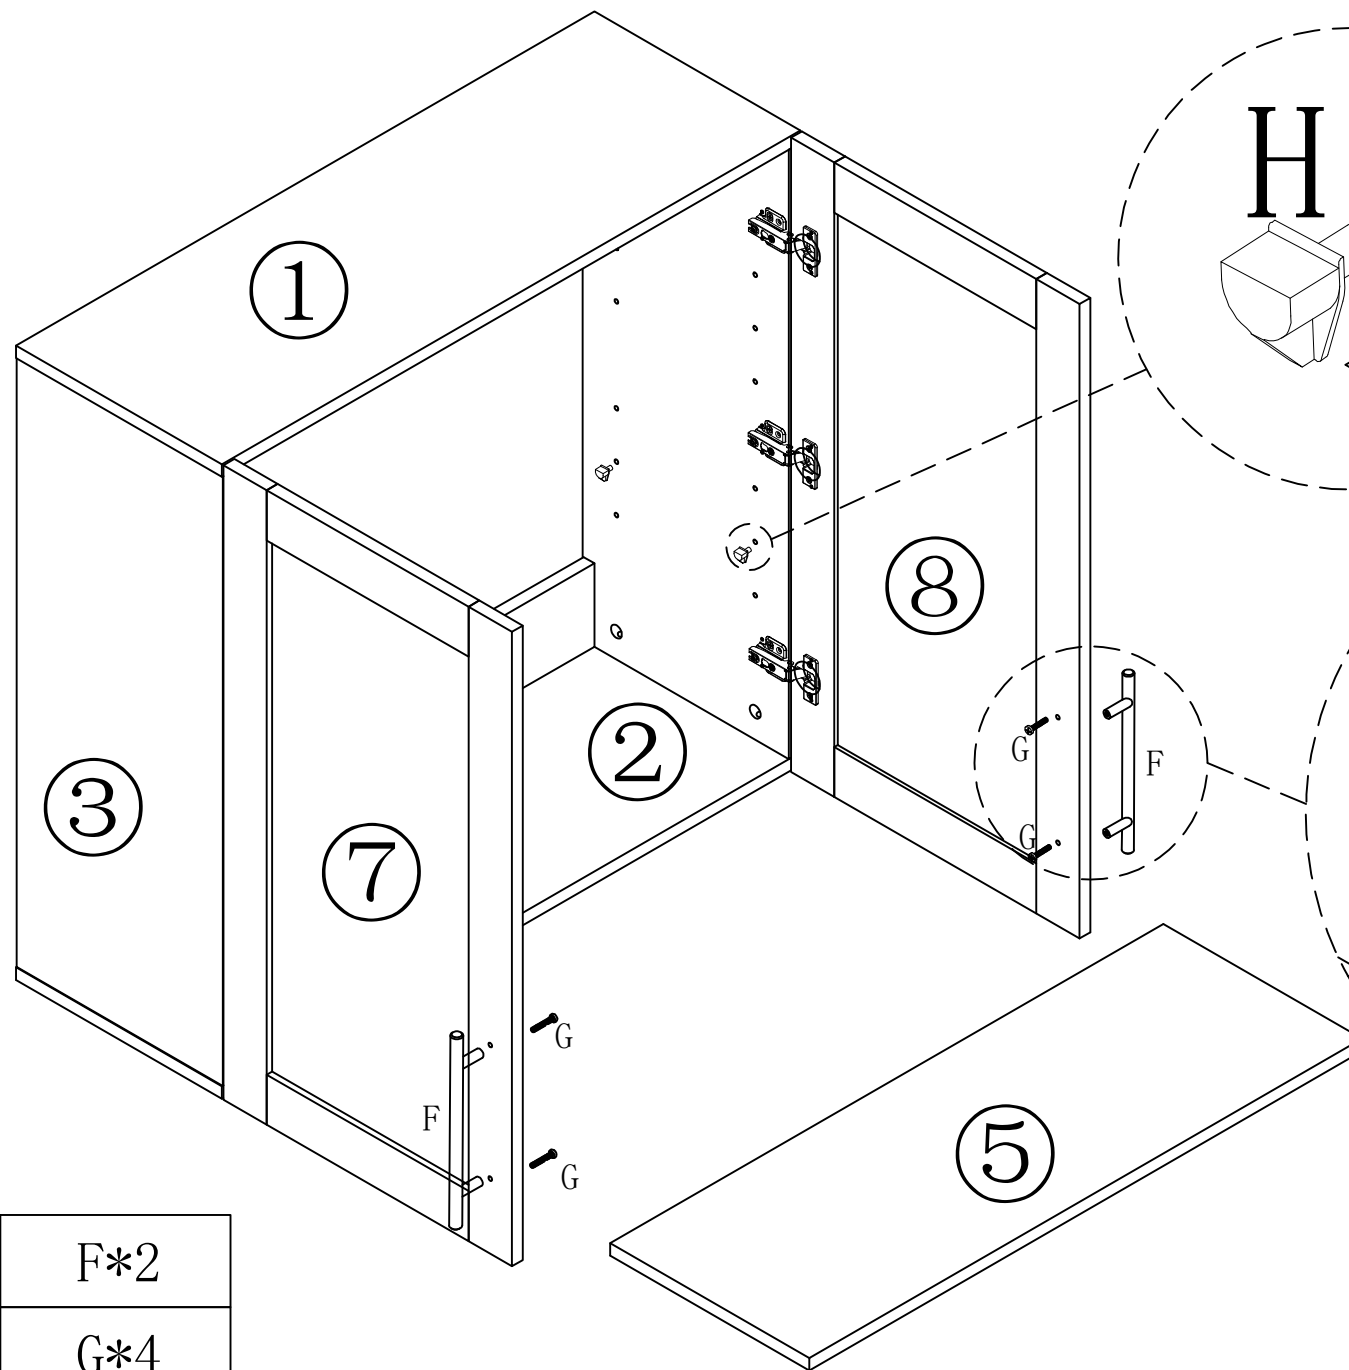

F*2










G*4




H*4

7

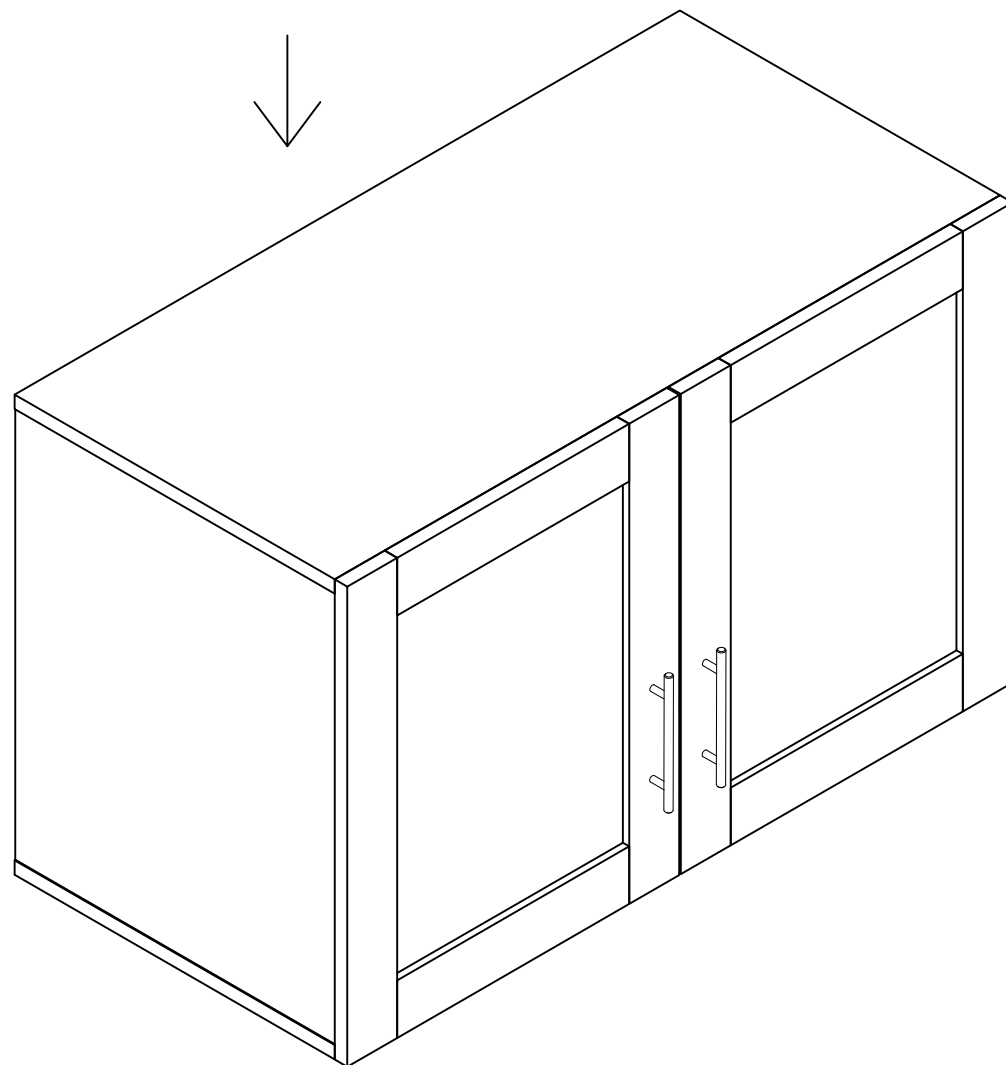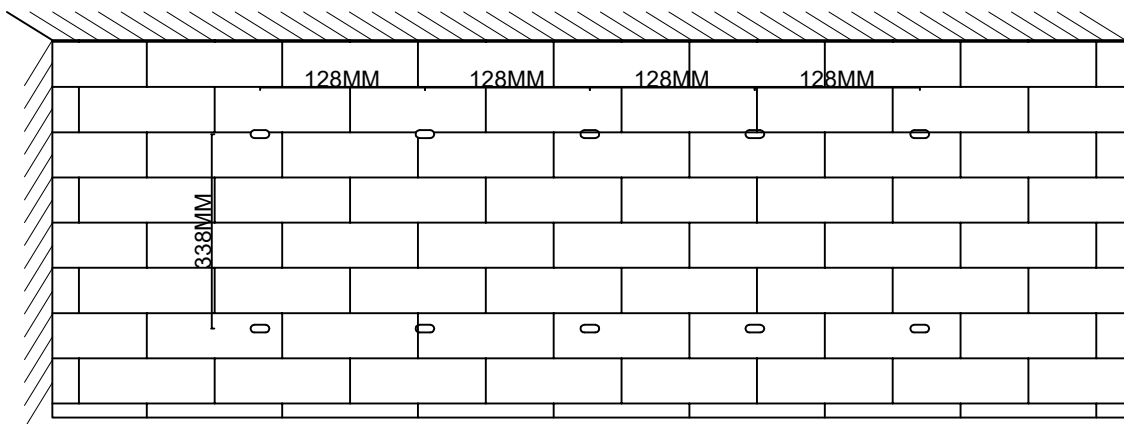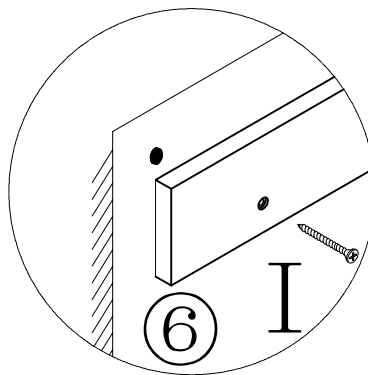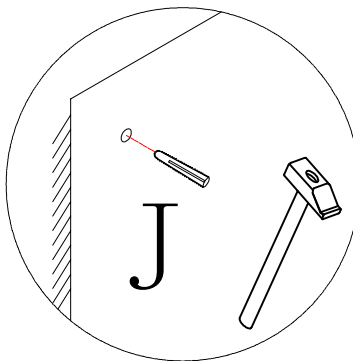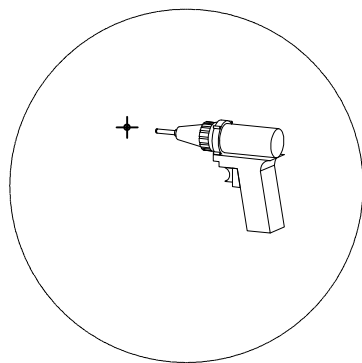


I*10



J*10

8

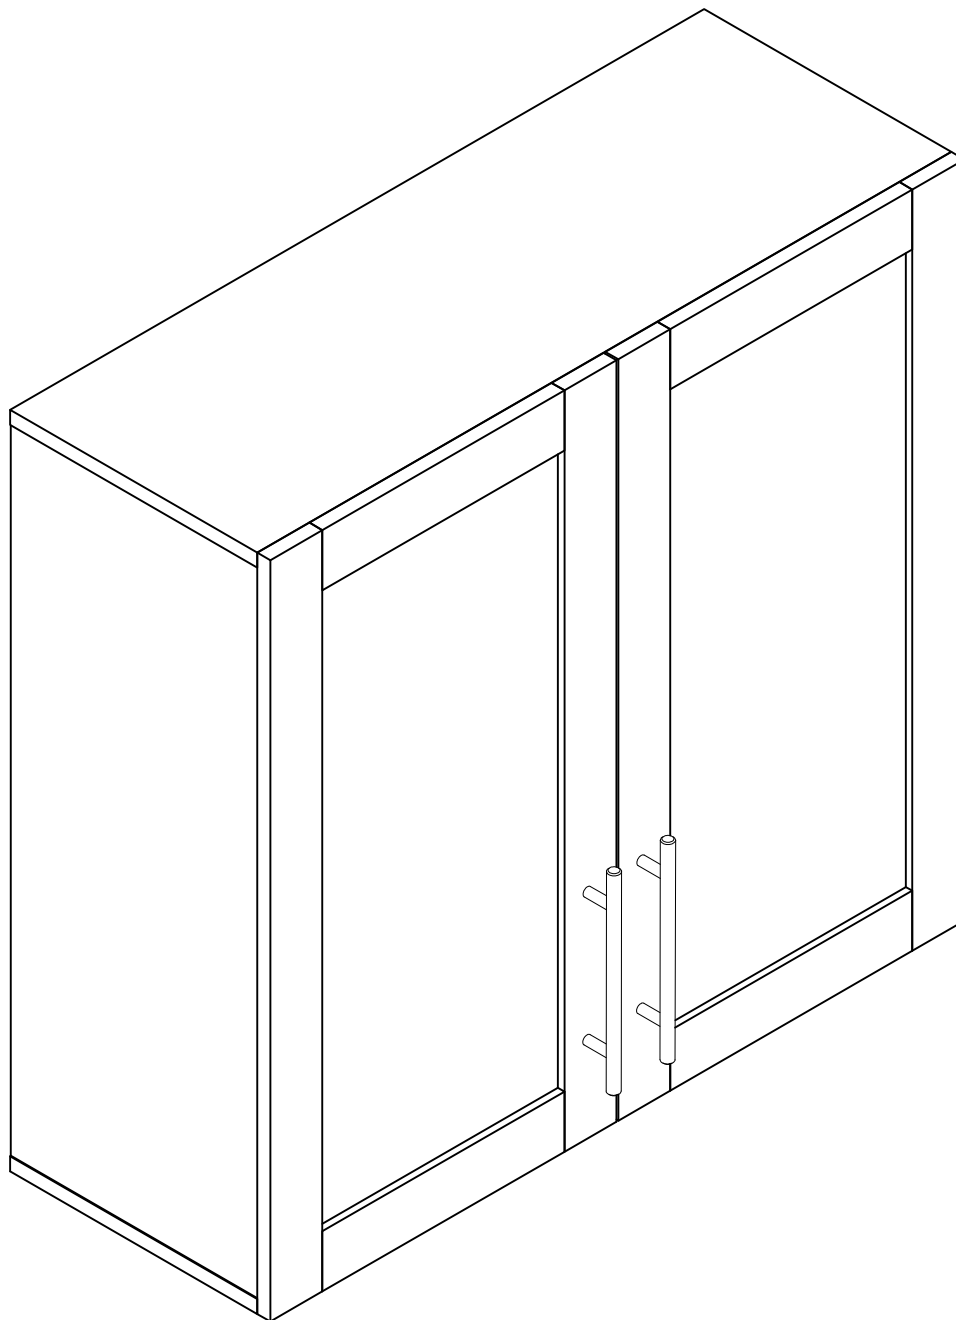

END