ASSEMBLY INSTRUCTIONS

IMPORTANT NOTE: *

- * PLACE ALL WOODEN PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.
- * BEFORE YOU BEGIN, KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP.
- DO NOT TIGHTEN ALL SCREWS UNTIL THE CHAIR IS FULLY SET-UP.


HARDWARE LIST			PART LIST		
Α	JCBC M6 x 50mm + S/W M6 + F/W M6 x 13mm	4PCS	1	BACK FRAME	1P@
			2	FRONT LEG	1PC
В	ALLEN KEY M4 (Ball Shape)	1PC	3	SIDE STRECTHER (L/R)	2PCS
С	JCBC M6 x 30mm + S/W M6 + F/W M6 x 13mm	4PCS	U	, , ,	
			4	SIDE RAIL (L/R)	2PCS
D	FH SCREW #8 x 32mm	4PCS	5	CUSHION SEAT	1PC


CAUTIONS:


(1) DO NOT <u>FULLY-TIGHTEN THE NUT OR NUT BOLTS INITIALLY</u> UNTIL ALL NUTS OR BOLT IS READY ASSEMBLED.


(TO AVOID CAUSING DAMAGES TO THE THREAD, DO NOT <u>OVER-TIGHTEN</u> THE NUTS OR BOLTS.)

(2) KEEP ALL HARDWARE PART OUT OF REACH OF CHILDREN.

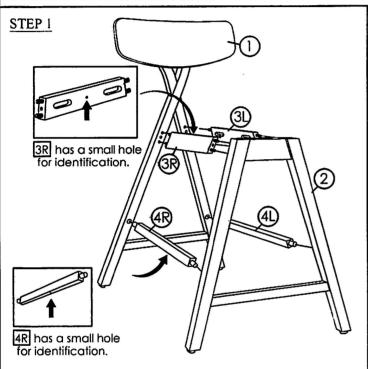

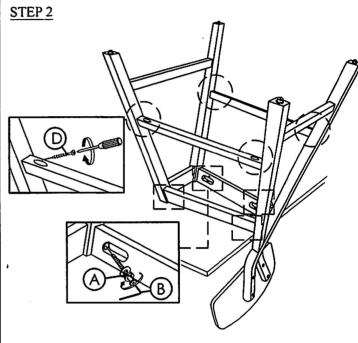

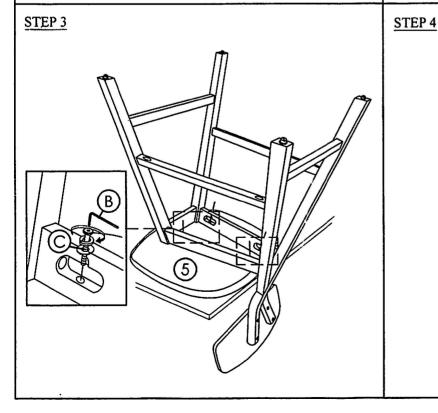

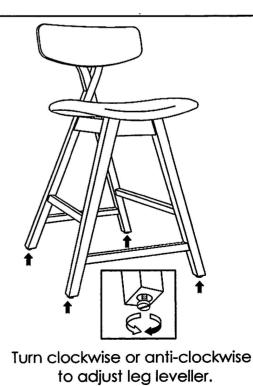

COMPLETED BAR STOOL ASSEMBLY.