


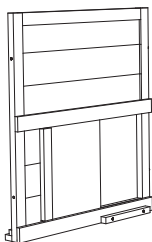
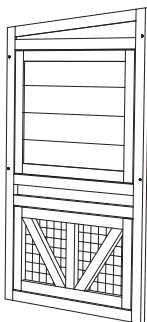
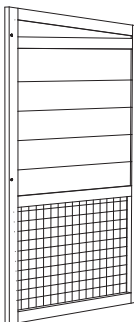
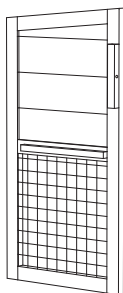
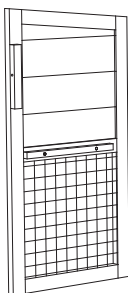
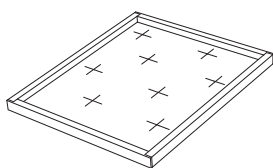

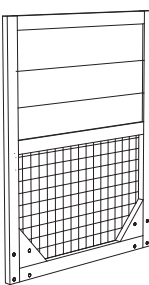
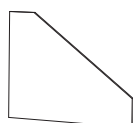
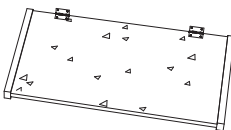
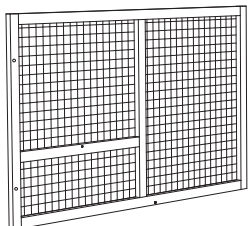
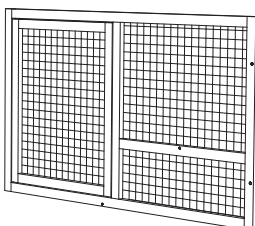


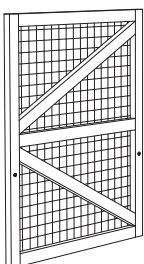
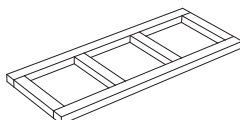
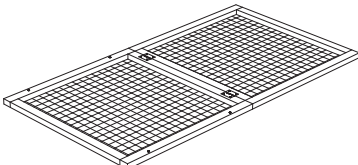
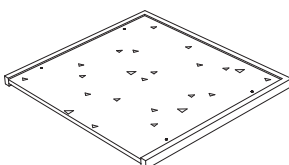



ASSEMBLY INSTRUCTIONS

 A M3.5*55 6PCS	 B M3.5*40 24PCS	 C M3.0*35 18PCS	 D M3.0*16 12PCS
 E M6.0*30 8PCS	 F M6.0*20 14PCS	M3.5*16 5PCS  1PC	 2PCS
M3.0*16 4PCS  1PC	M3.5*16 12PCS  3PCS	 1PC	 1PC
 1PC	                     		


STEP 1

C x6
F x12

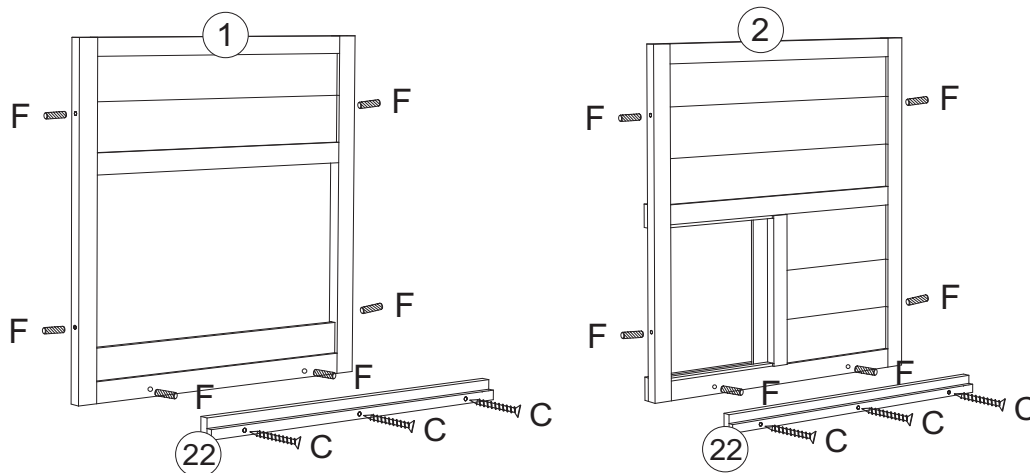


STEP 2

B x8

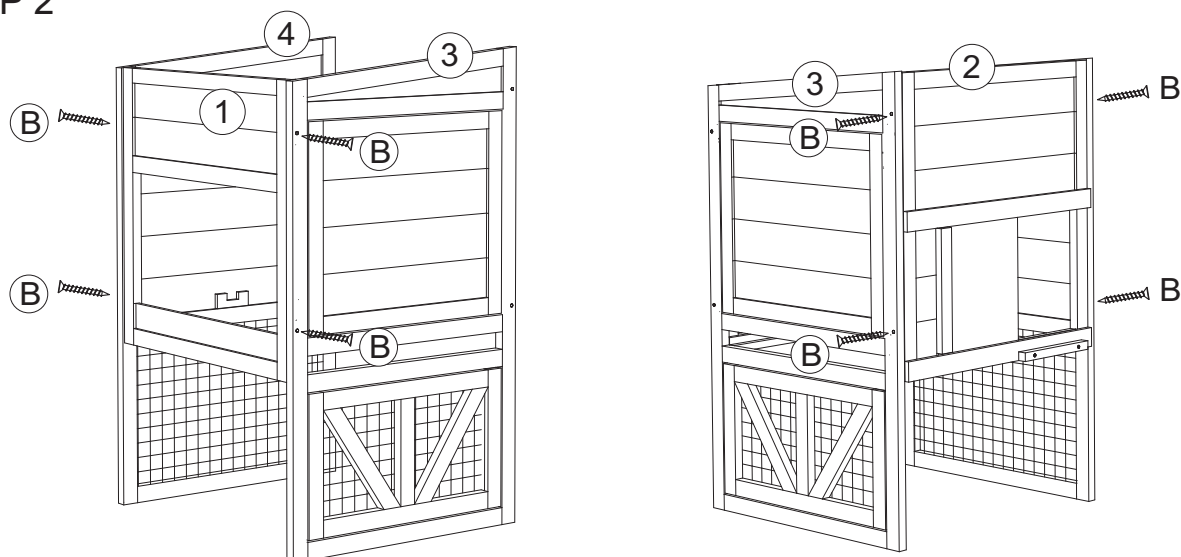

STEP 3


A x2
C x2

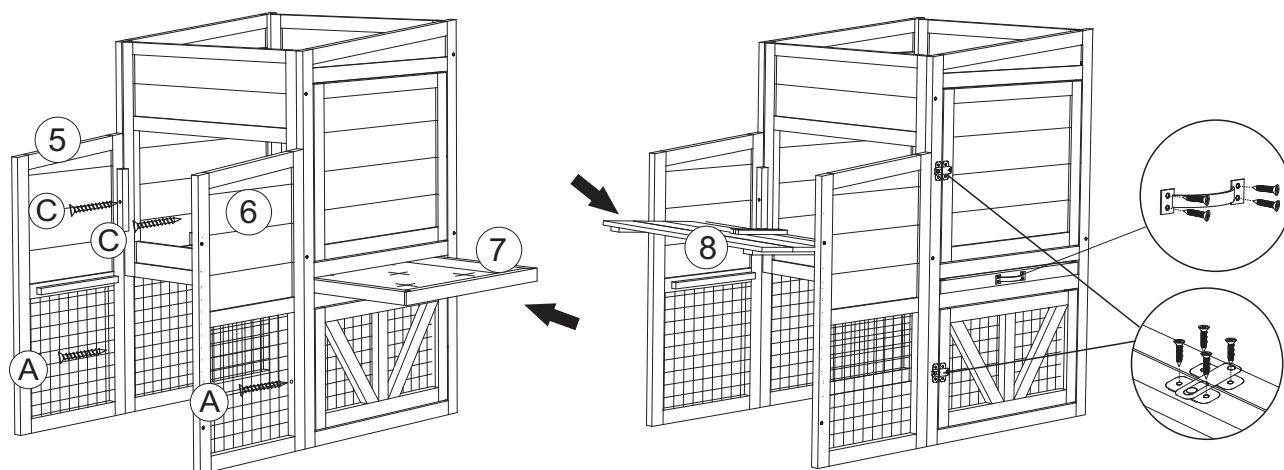

STEP 4


B x4
E x8

First install the wheels
then install the side panels

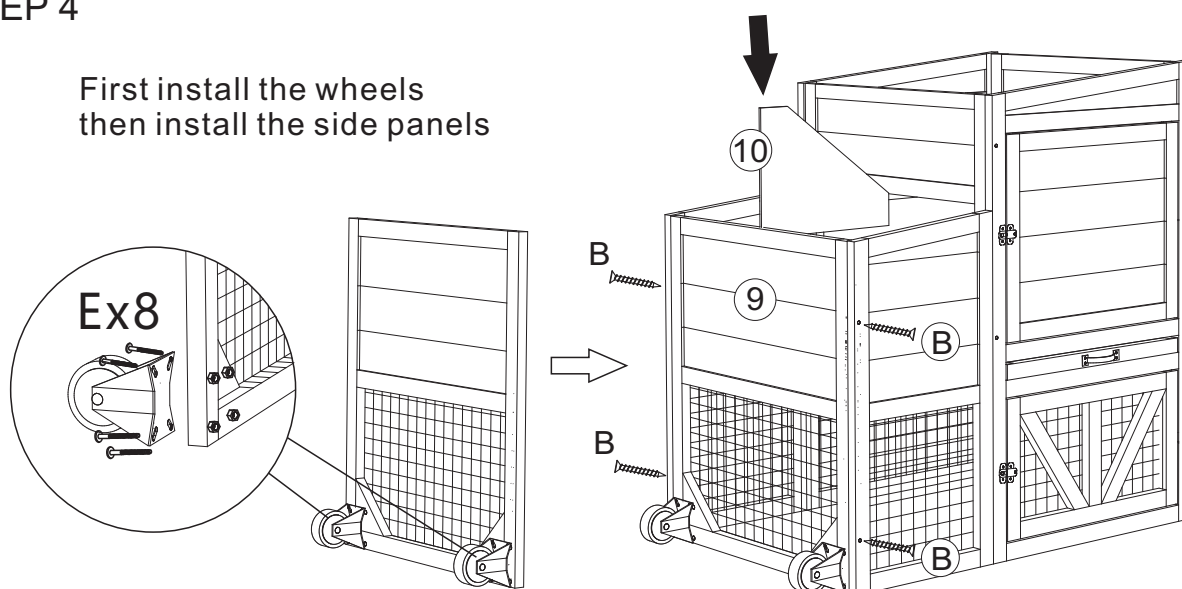


STEP 5

D x8

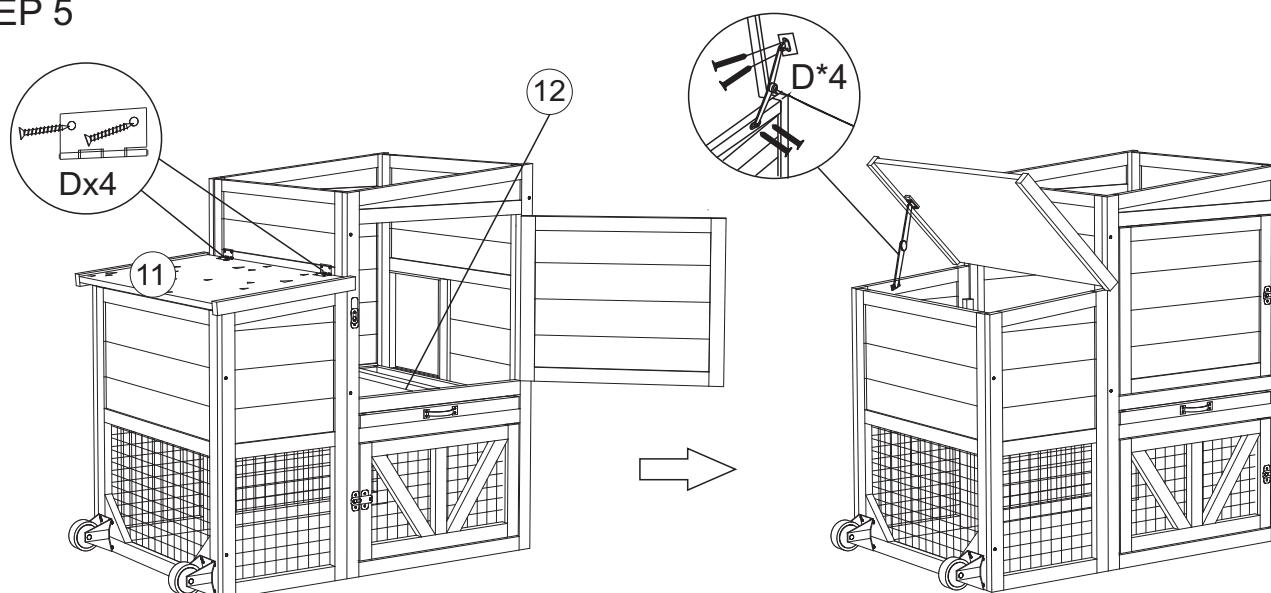


STEP 6

A x2

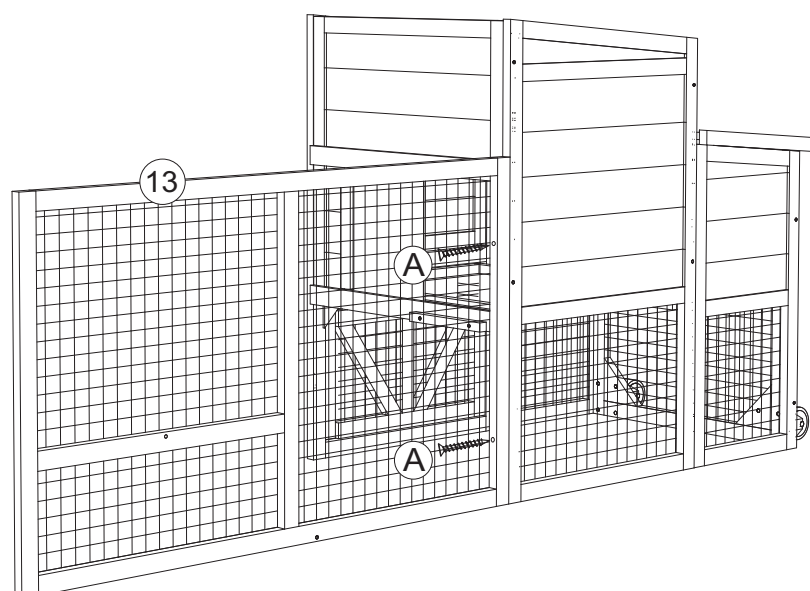


STEP 7

A x2

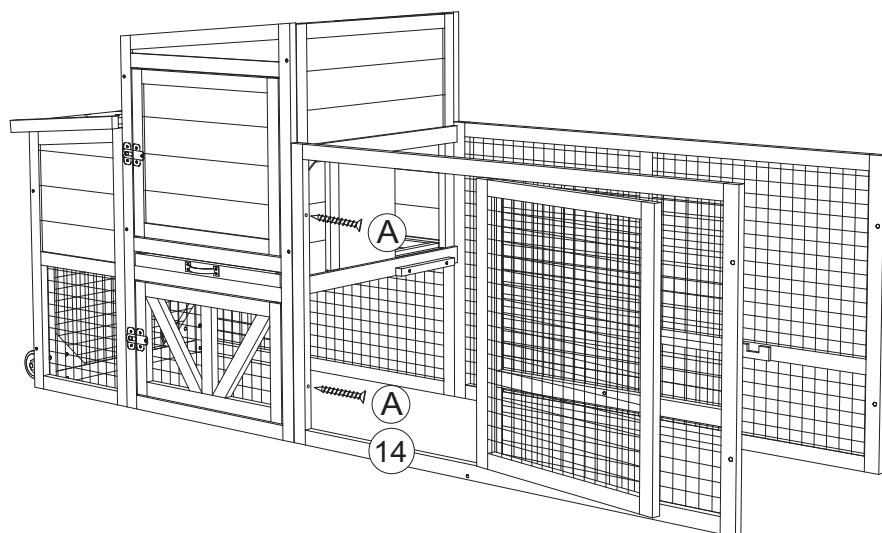

STEP 8

C x4

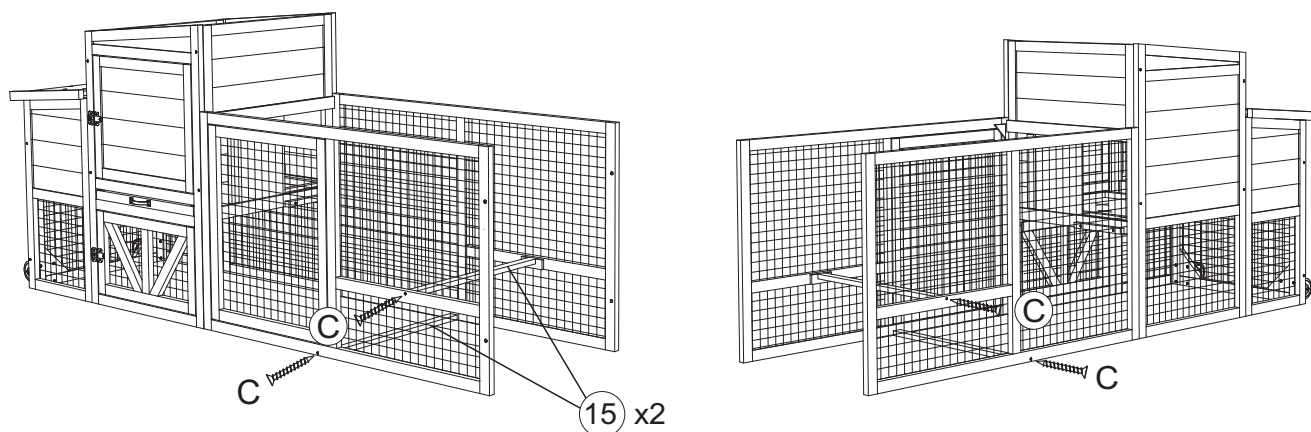


STEP 9

B x4


C x2

F x2

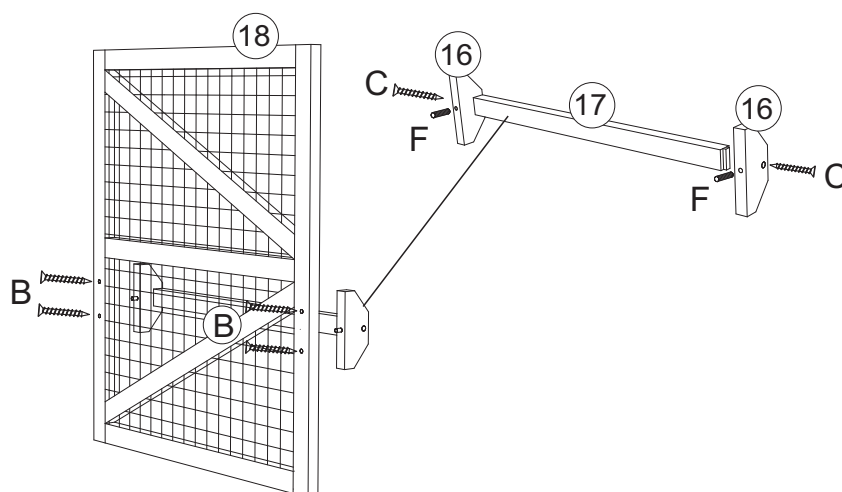


STEP 10

B x4

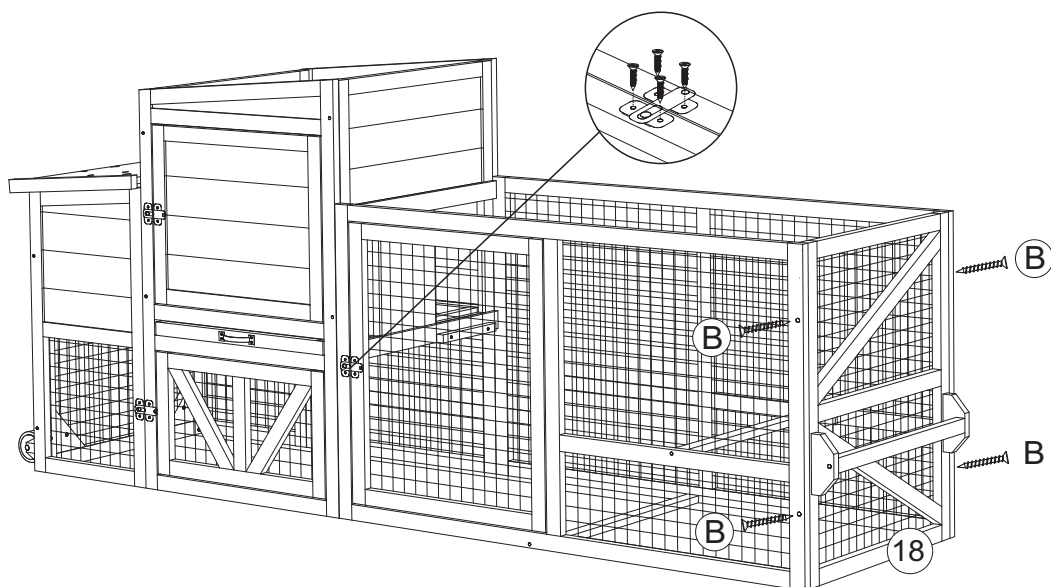

STEP 11

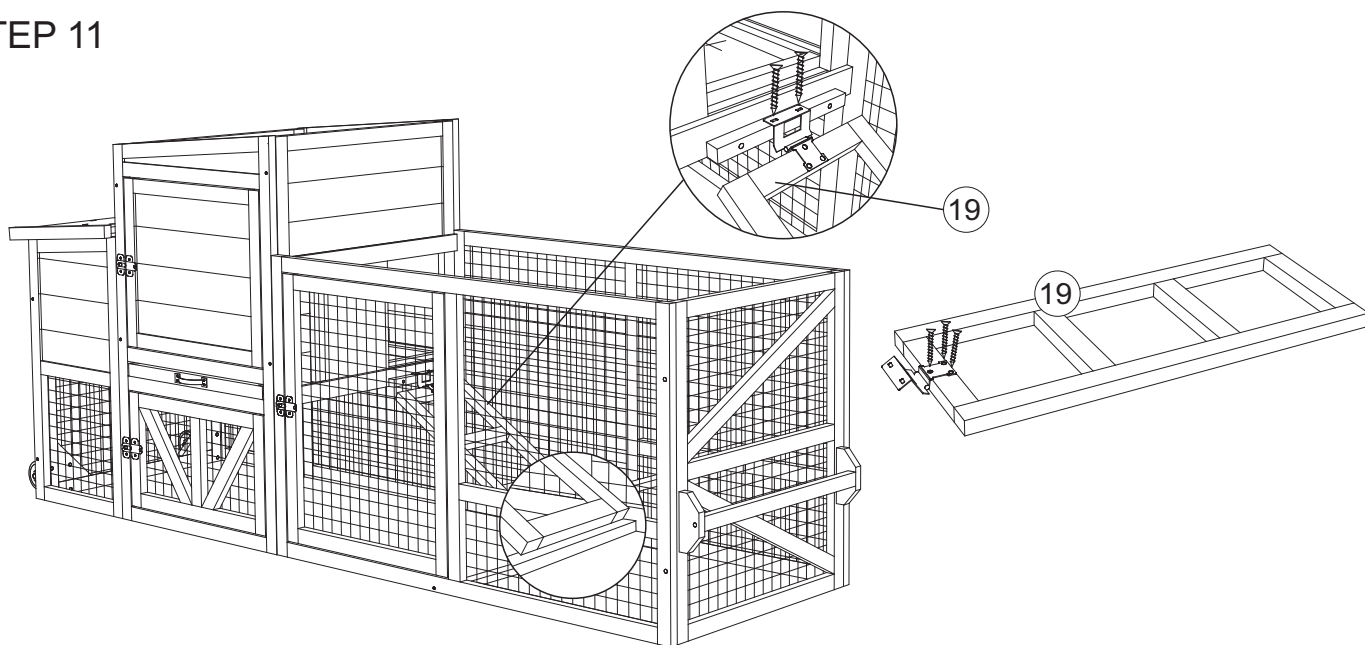

STEP 12

B x4
C x4
D x4

