
Shower Door Installation Guide

SS09A

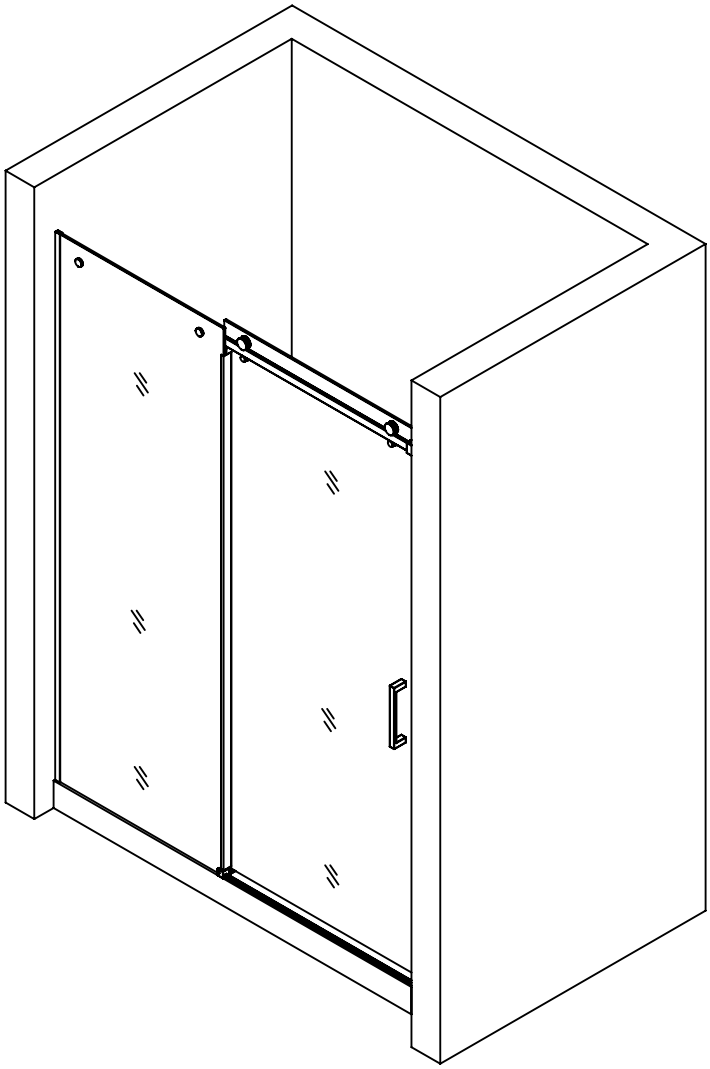



Plz do not just return when meeting difficulties in installation, just contact your seller for help.

Model Specific Preparation


REQUIRED:

Verify that the threshold is level by using a straight edge or a level tool.Adjust the threshold as necessary to ensure it is perfectly horizontal

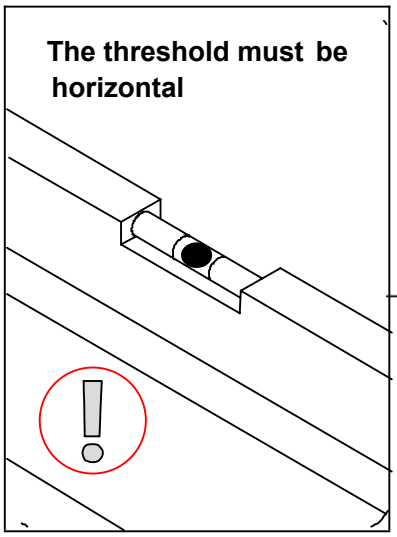

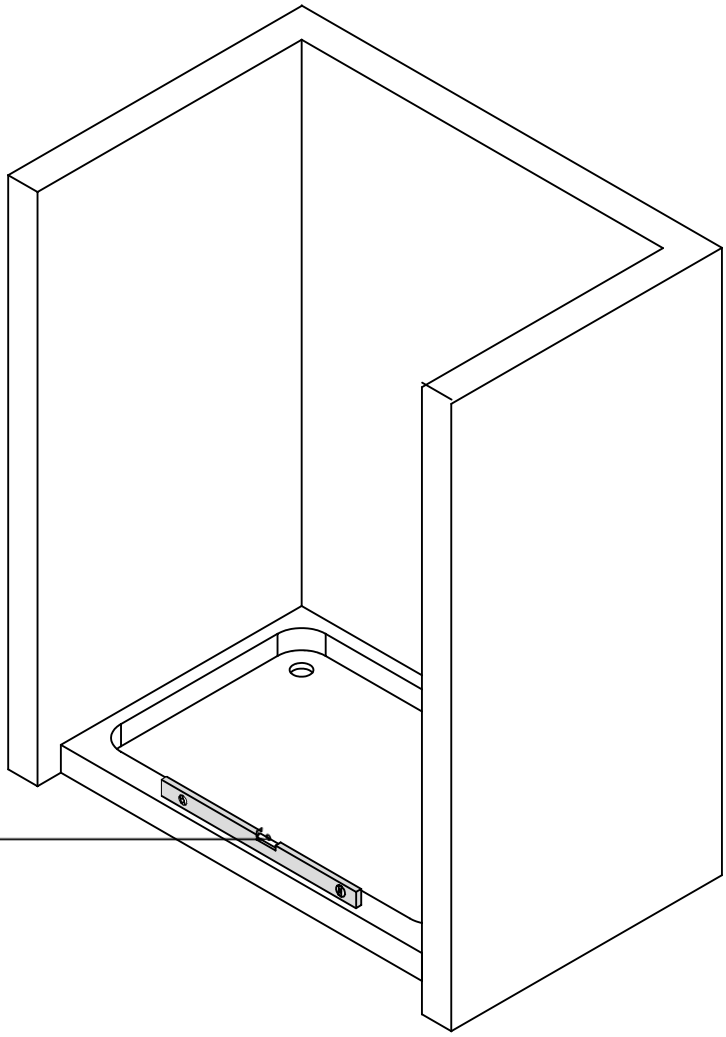

PACKAGE CONTENT

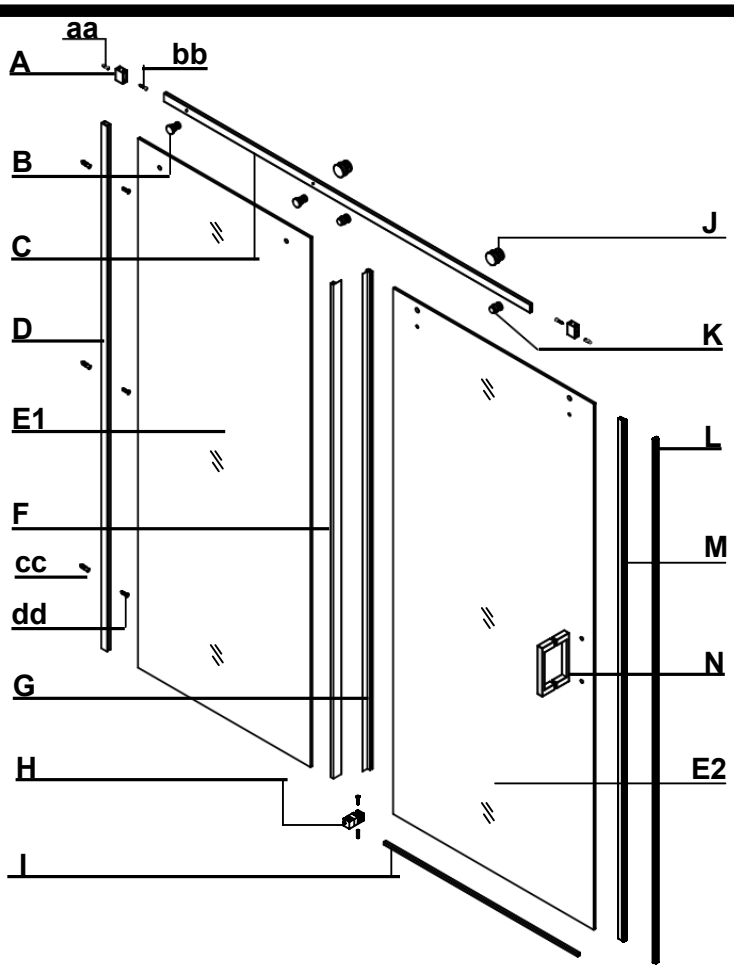

PACKAGE CONTENT


PART#	DESCRIPTION	QTY
A	Rail Bracket	2
B	Glass Railing Stabilizer	2
C	Guide Rail	1
D	Wall Jamb	1
E1	Fixed Panel	1
F	F-type Seal Strip	1
G	F-Type Bulb Seal Strip	1
H	Bottom Guide	1

PART#	DESCRIPTION	QTY
I	Threshold Water Dam	1
J	Roller	2
K	Anti-Jump Knob	2
L	Wall Magnetic Strip	1
M	Door Magnetic Strip	1
N	Handle	1
E2	Sliding Panel	1


NOTE


Please inspect all parts for any missing items before installation!
If any part is missing, please contact us.

PACKAGE CONTENT

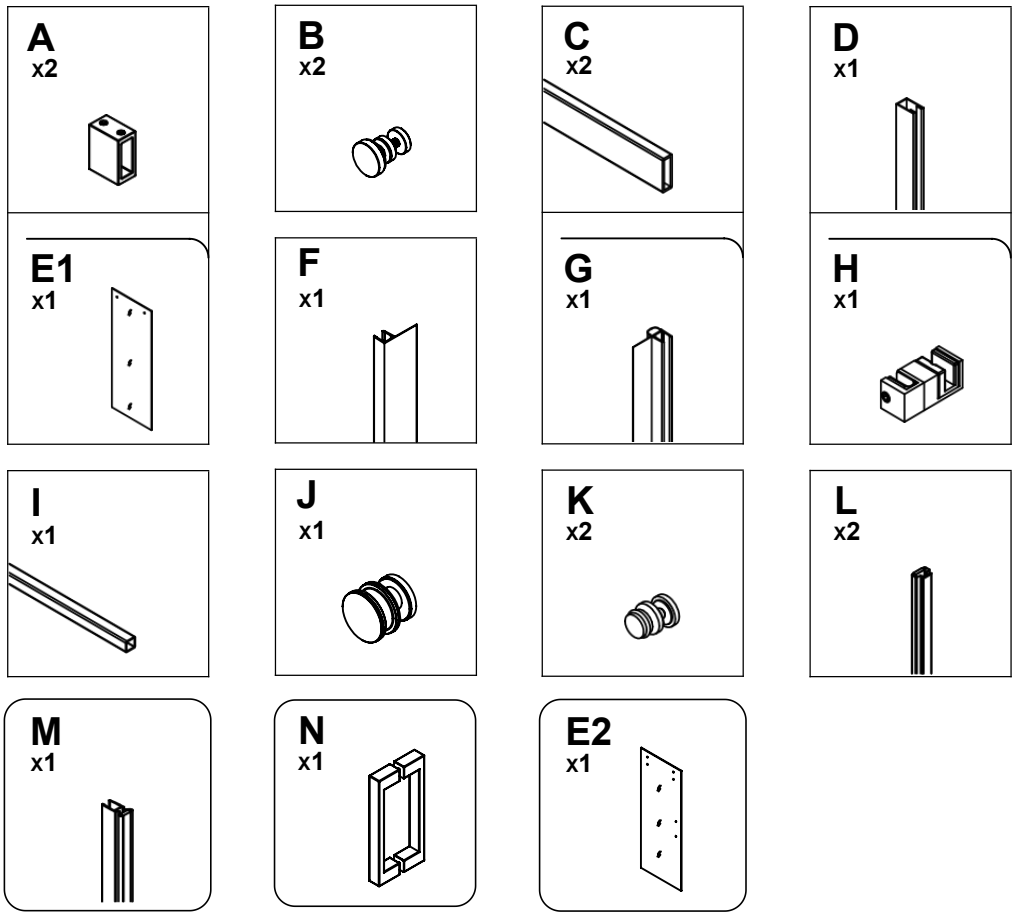

HARDWARE CONTENT

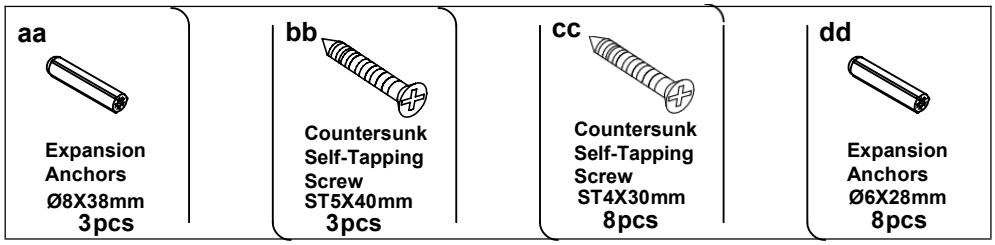

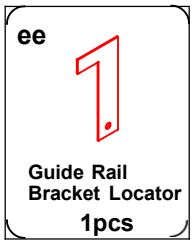

Additional spare parts are included.

NOTE

Inspect all parts for any missing items prior to installation!
Contact us if any parts are missing.


TOOLS REQUIRED

Drill Bits



Ø1/4"&Ø5/16"(6&8mm)dia.
HSS


Screw Driver




Drill



Level

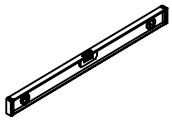


Sealant

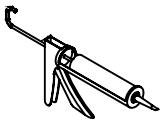


Measuring Tape




Soft Head Hammer

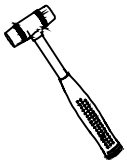


Pencil




Knife

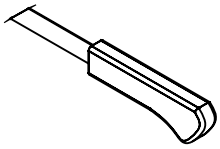

Framing Square



Masonry Drill Bit For Tile Ø6mm




Safety Glasses




Gloves




Glass Suction

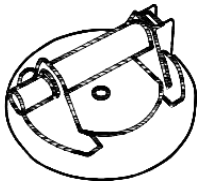


Masking Tape



Hack Saw

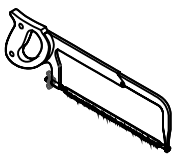

Metal File




SAFETY INFORMATION

CAUTION

Please carefully read the following important safety information before handling or installing this shower door.There is a risk of serious injury while handling this product. To minimize these risks,please note:

- **Always wear safety glasses and gloves while handling.**
- **Always follow the installation instructions.**
- **Inspect the glass for damage before installation.**
- **Extreme caution should be taken while handling the glass during installation, as the tempered glass may shatter if it comes into contact with a hard surface.**
- **Do not cut or modify the tempered glass, as it will shatter if cut.**
- **Carefully remove the product from its packaging and keep the packaging until the installation is complete.**
- **Inspect all parts for damage or missing items. If there is any damage or missing parts prior to installation, please contact your seller for help.**
- **Cover the drain with tape to prevent the loss of small parts.**
- **The shower base and finished walls should be installed before beginning the shower door installation.**
- **During installation, protect the shower floor with a drop cloth to prevent damage.**
- **This product should be installed by two people who are familiar with construction requirements.Professional installation is recommended!**
- **Keep this installation manual for future reference.**

NOTE: Two people should perform this installaton.

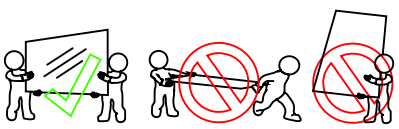



1 Install **Wall Jamb (D)**


NOTE

1.Position **Wall Jamb (D)** 7/32" (5.5mm) from edge. Use a level to ensure vertical alignment.

2.Mark the corresponding holes in the **Wall Jamb (D)** with a pencil.

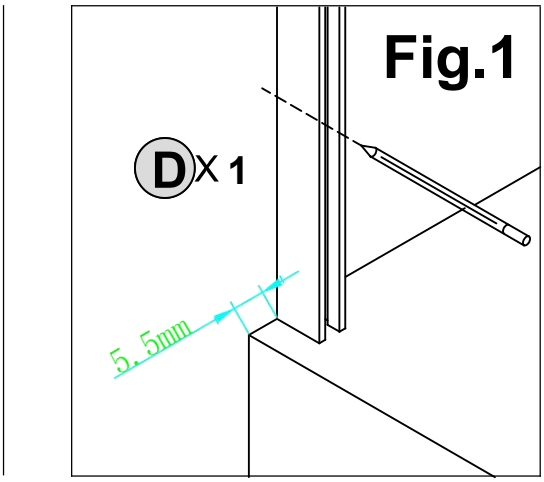

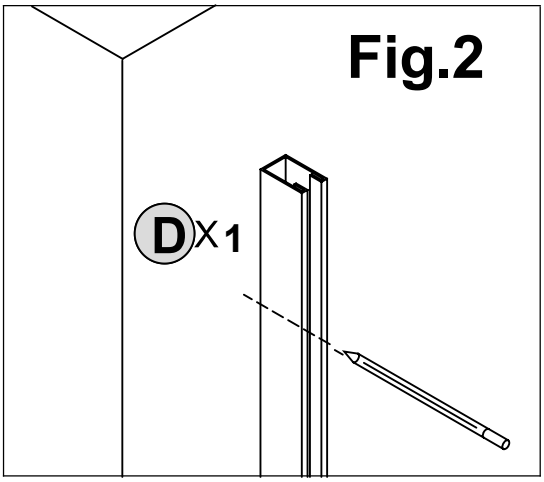


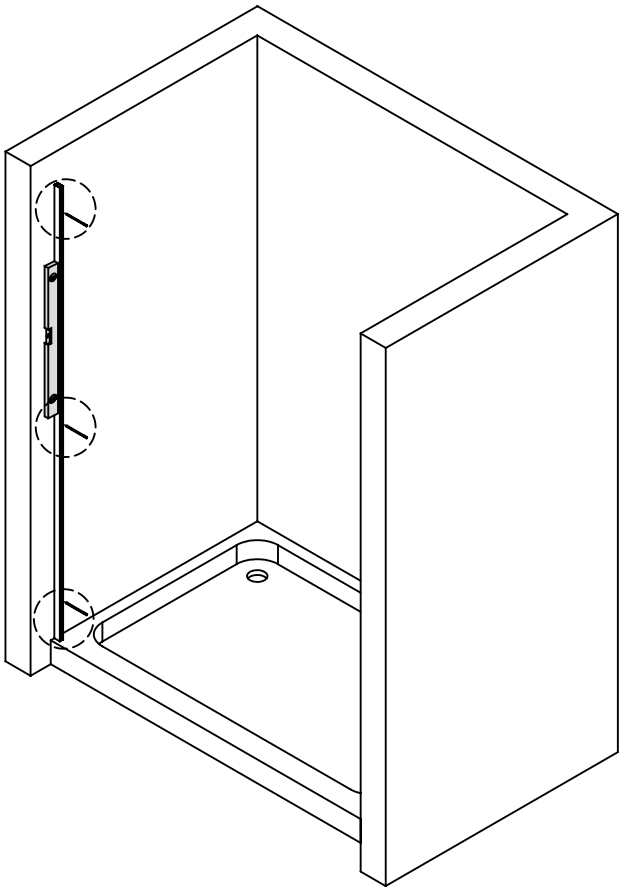



2 Secure **Wall Jamb (D)**


NOTE

1.Remove **Wall Jamb (D)**. Drill **Ø6mm** holes at marked positions.
2.Insert **expansion anchors (dd)** into holes using a soft-head hammer.
3.Secure **Wall Jamb (D)** to the wall with **ST4×30 screws (cc)**. Ensure it remains vertical.

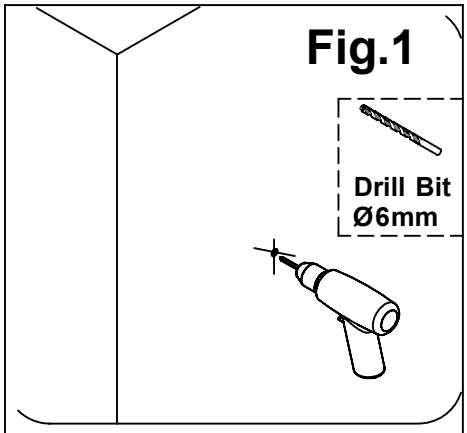

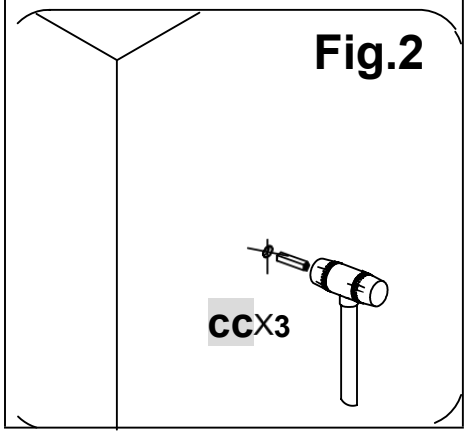

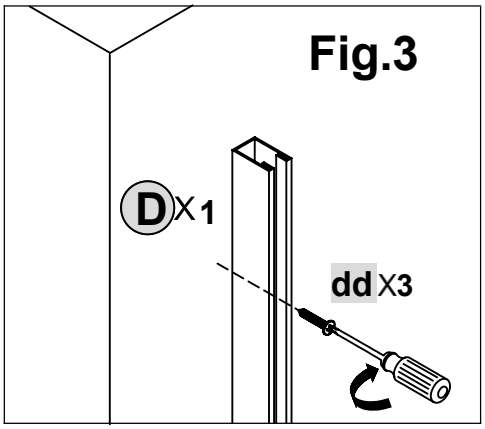


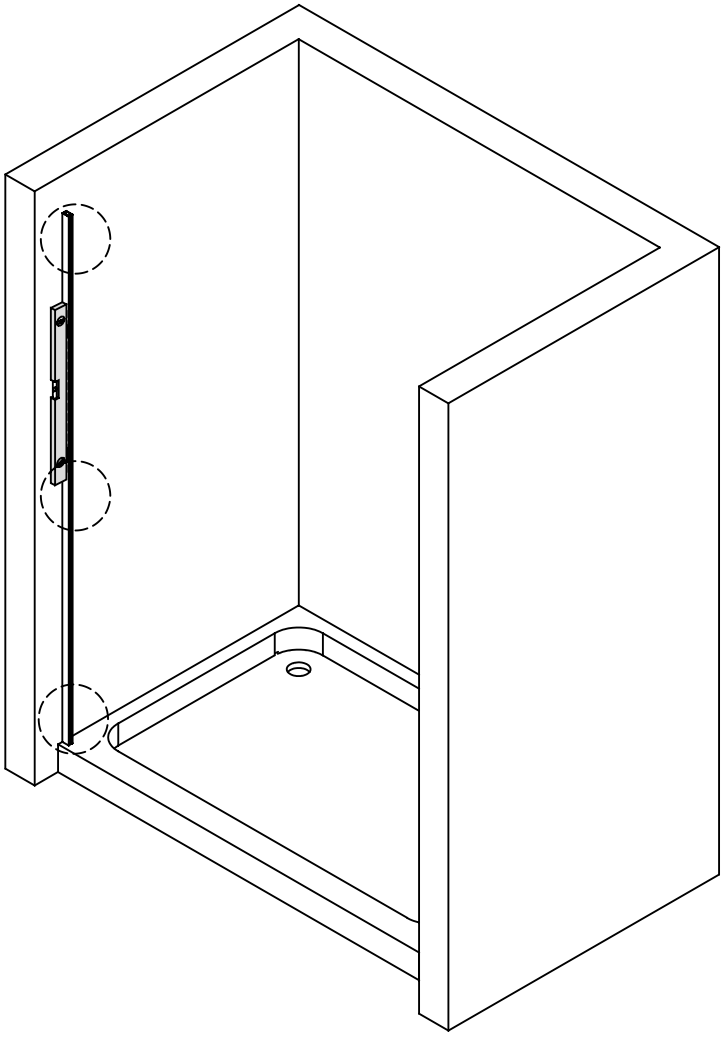


3 Install **Rail Bracket (A)**

NOTE

1.Place Guide **Rail Bracket Locator (ee)** flush with the top of **Wall Jamb (D)**. Mark hole positions.
2. Drill **Ø8mm** holes at marks.
3. Insert **expansion anchors Ø8×38mm (aa)** into holes.

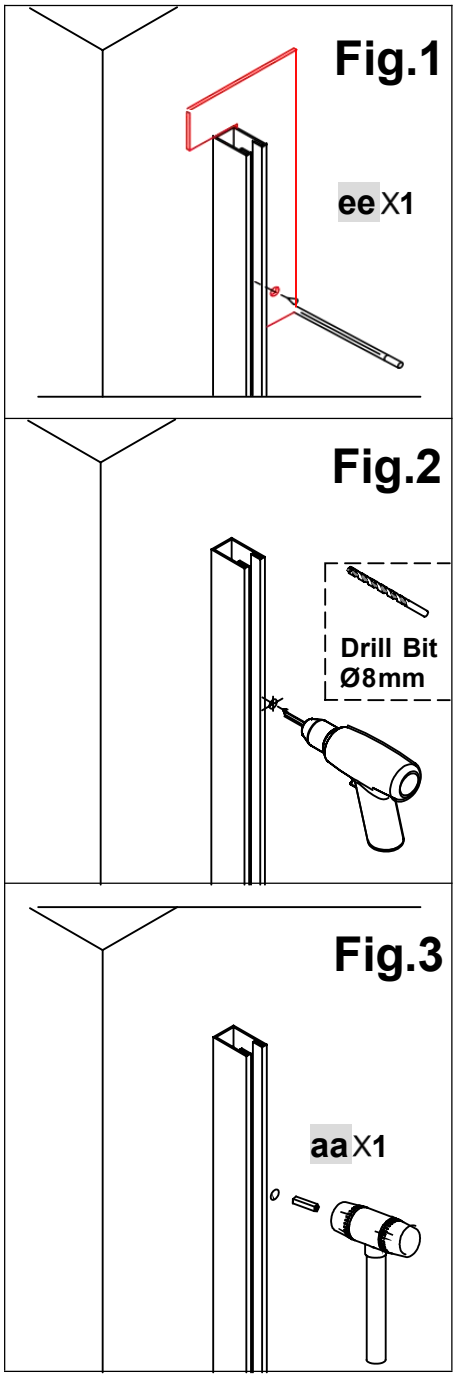

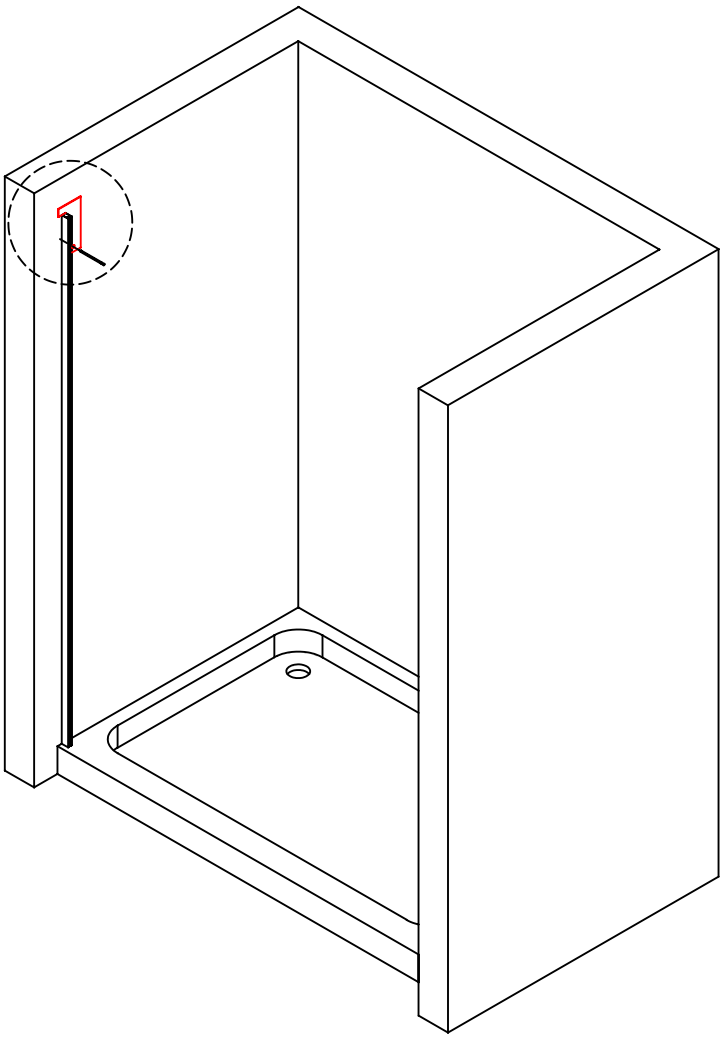


4 Install **Rail Bracket (A)** & **Fixed Panel (E1)**


NOTE


1.Unscrew **Rail Bracket (A)** base.


2.Secure **Rail Bracket (A)** base to the wall with **ST5×40mm screws (bb)**.

3. Lift **Fixed Panel (E1)** and clip into **Wall Jamb (D)**.

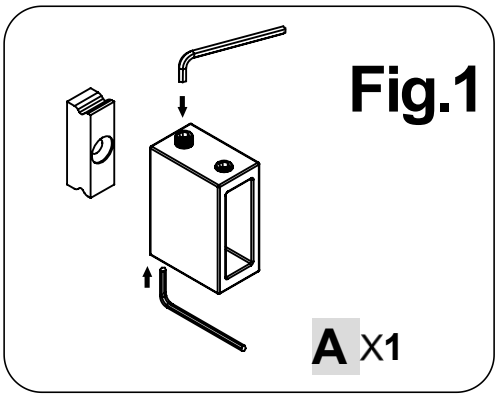

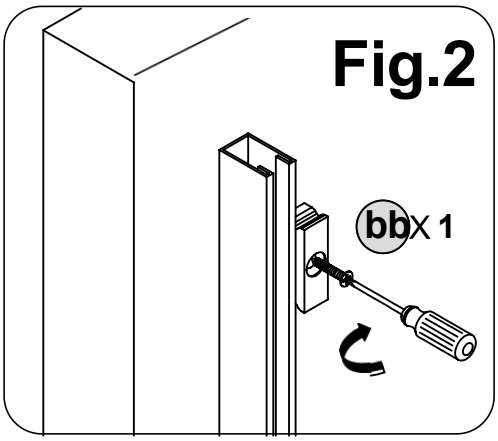

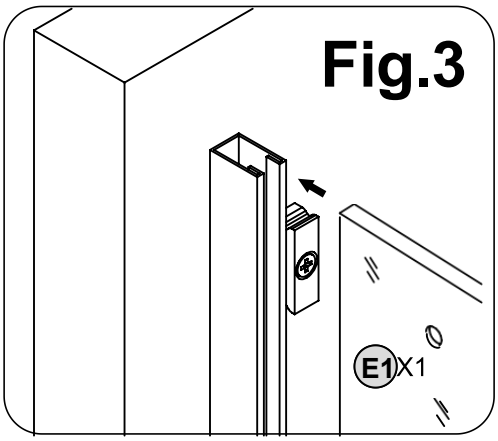


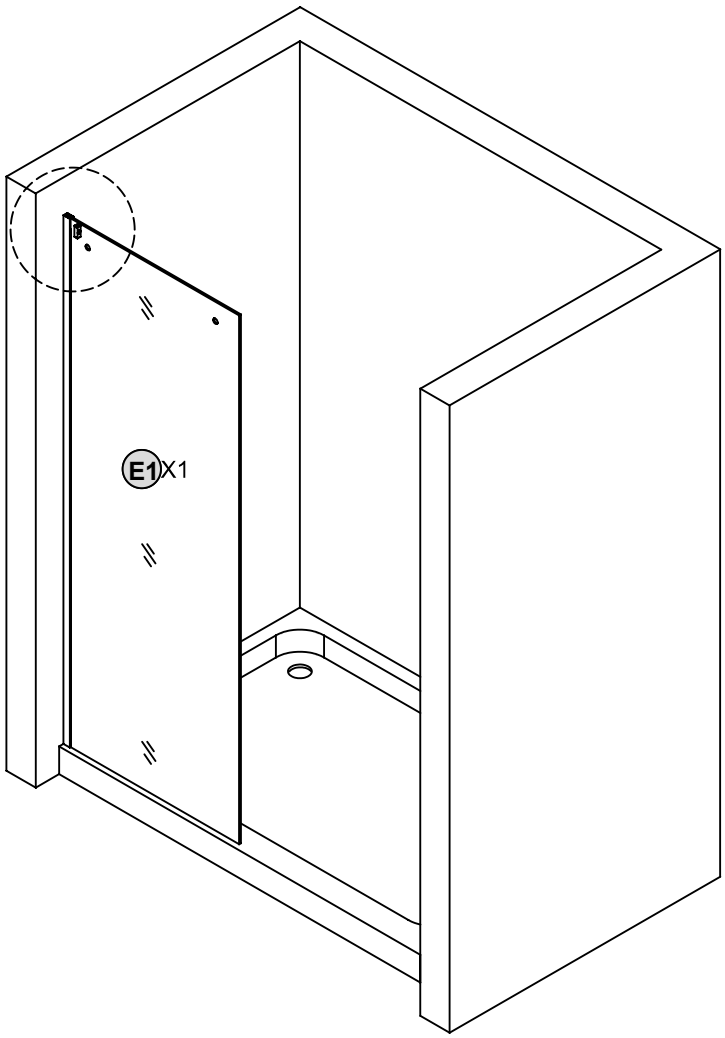


5 Guide Rail (C) Adjustment

NOTE

Measure and cut excess length from **Guide Rail (C)** on the **Sliding panel (E2) side only.** Note:**Do not cut the fixed panel (E1) side**.

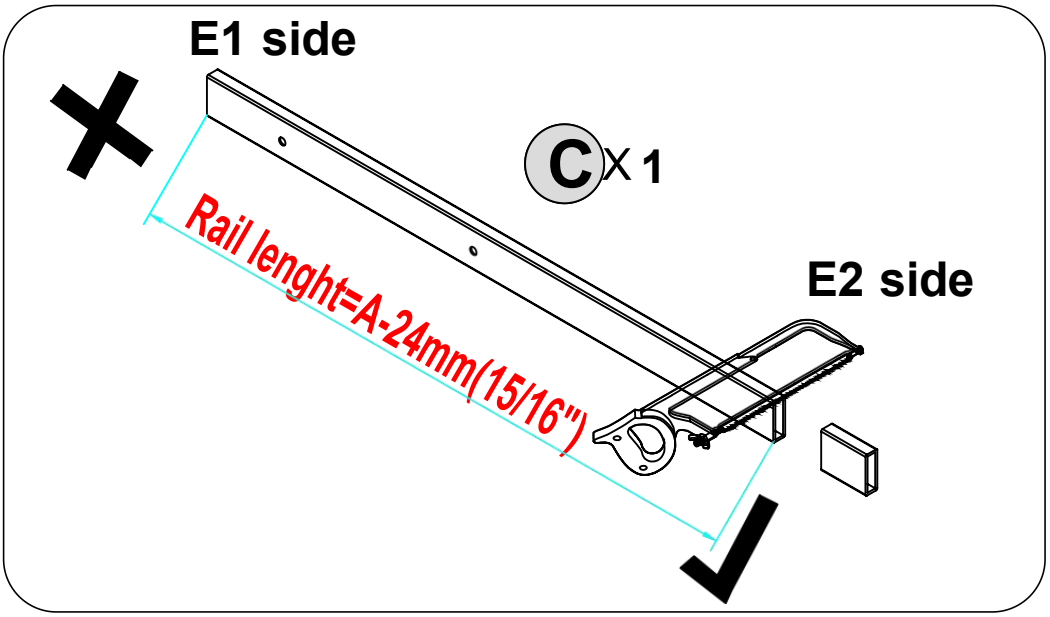


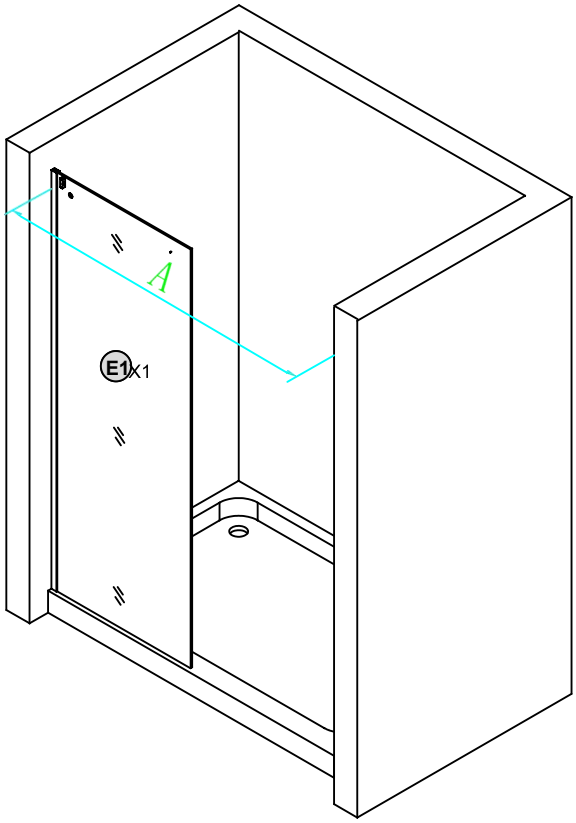



6 Install **Guide Rail (C)**


NOTE


1.Loosen set screws on **Rail Brackets (A)**. Slide brackets onto **Guide Rail (C)**.
2.Attach one **Rail Bracket (A)** to the wall bracket base.
3.Level **Guide Rail (C)** with a level tool. Mark around bracket edges.

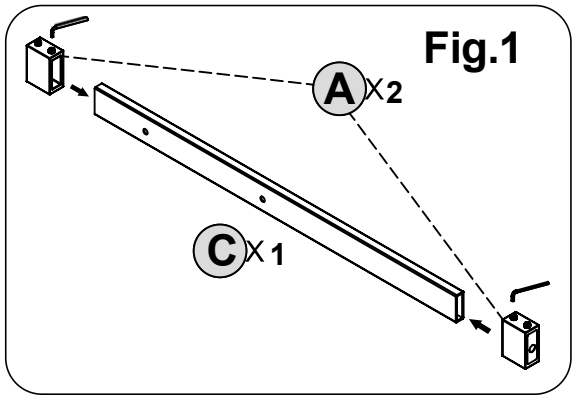

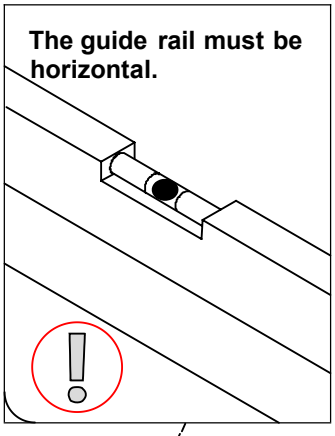

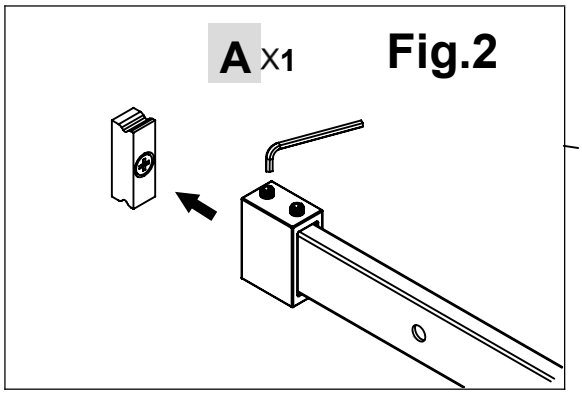

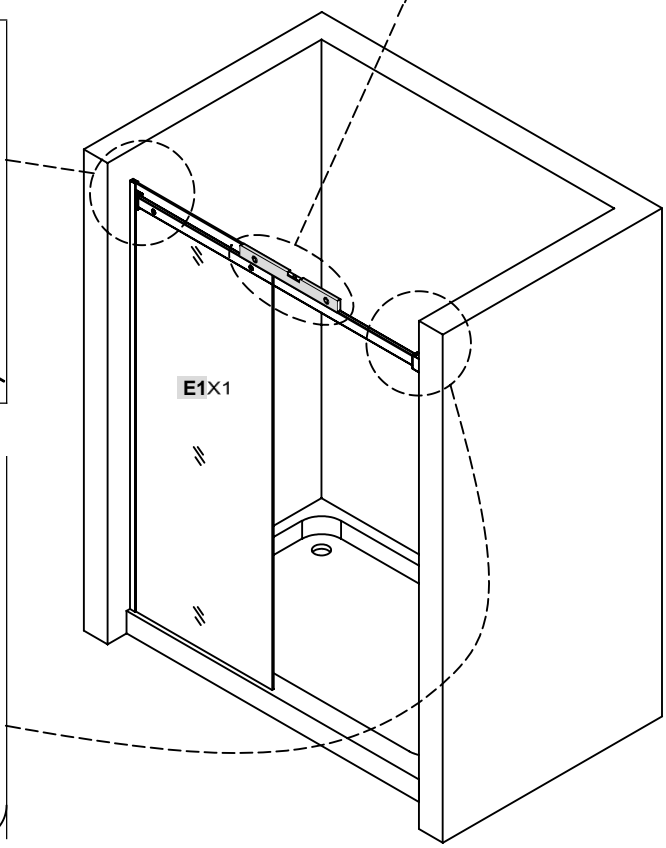

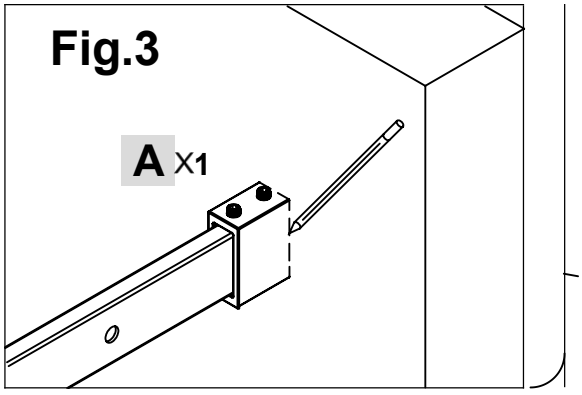

7 Secure **Guide Rail (C)**


NOTE


1.Remove **Guide Rail (C)** and brackets. Mark center points of bracket positions.


2.Drill **Ø8mm** holes at marks.


3.Insert **expansion anchors (aa)** into holes.,


4.Secure **Rail Bracket (A)** bases with **ST5×40mm screws (bb).**

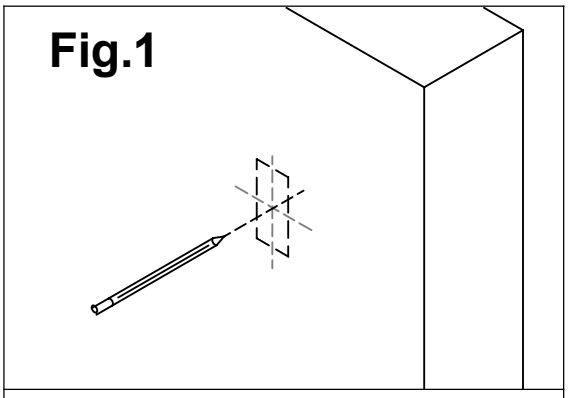

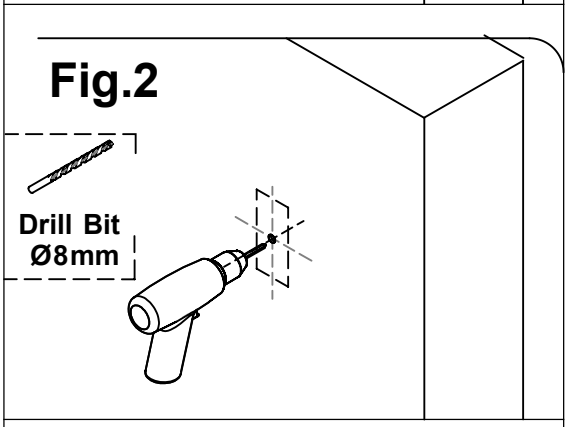

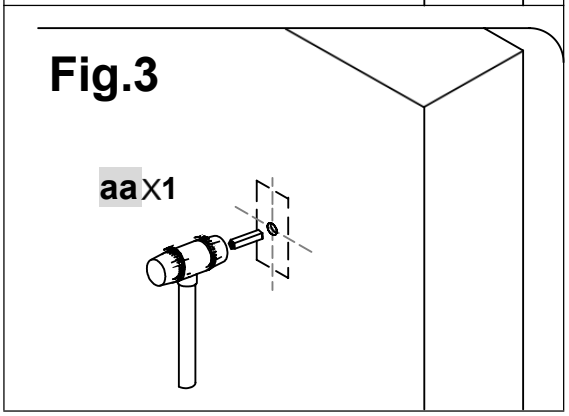

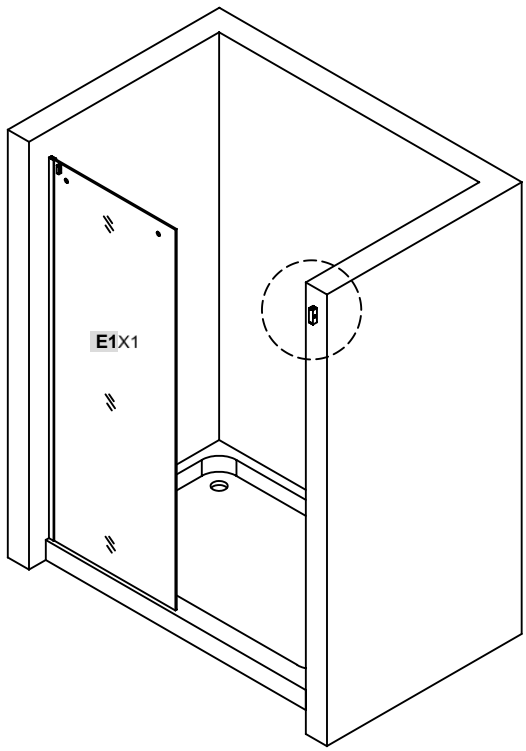

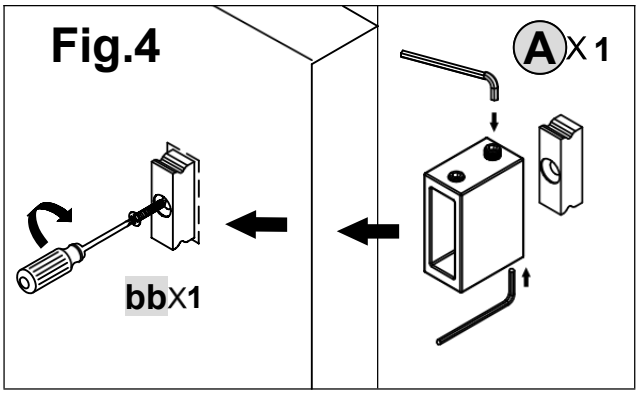


8 Mount **Guide Rail (C)**


NOTE


1.Attach left/right **Rail Brackets (A)** to wall bases.


2.Tighten set screws on brackets and **Guide Rail (C)** with an Allen wrench.


3.Align holes on **Fixed Panel (E1)** with **Guide Rail (C)**. Secure with **Glass Railing Stabilizers (B)**.

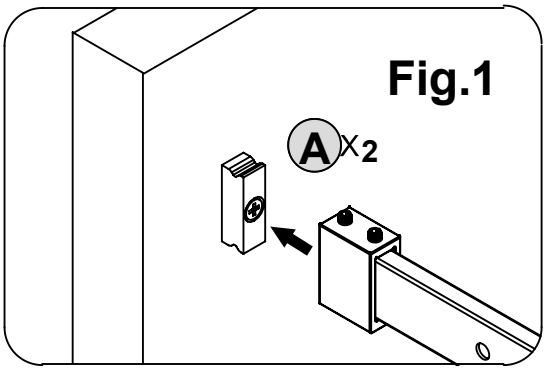

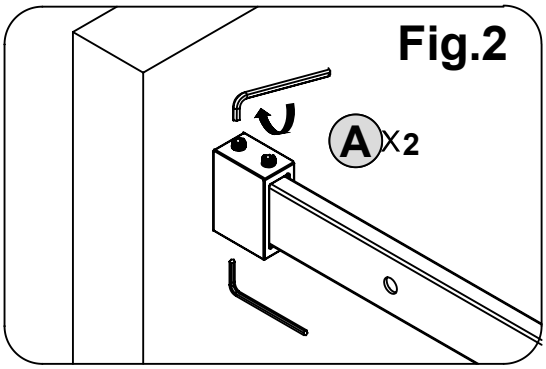

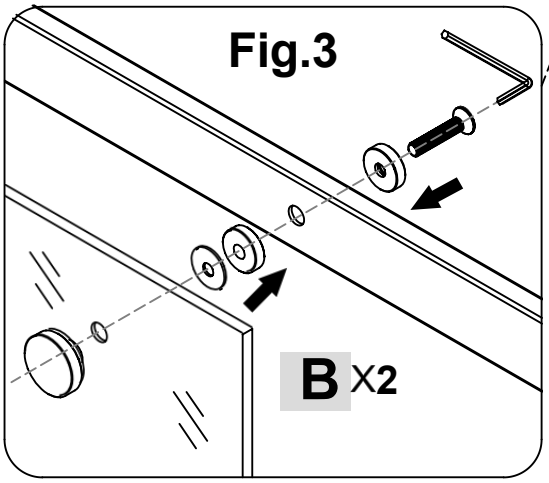

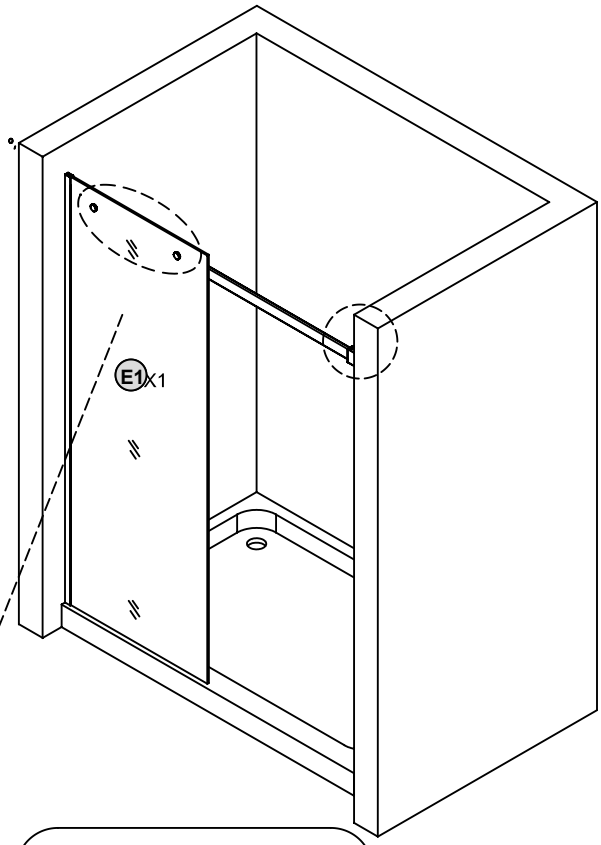


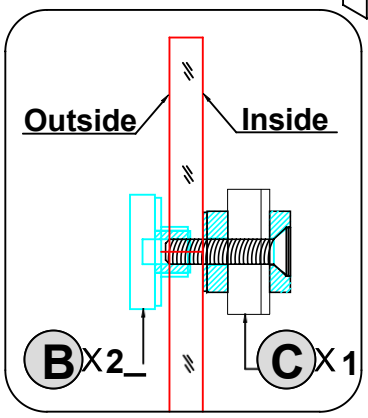



9 Install **Bottom Guide (H)**


NOTE


1.Loosen set screw on **Bottom Guide (H)**. Clip the **Fixed Panel (E1)** angle into **Bottom Guide (H)** slot and mark holes.
2.Drill **Ø6mm** holes at marks.
3.Insert **expansion anchors (dd)**.
4.Secure **Bottom Guide (H)** to floor with **ST4×30 screws (cc)**. Tighten set screw.

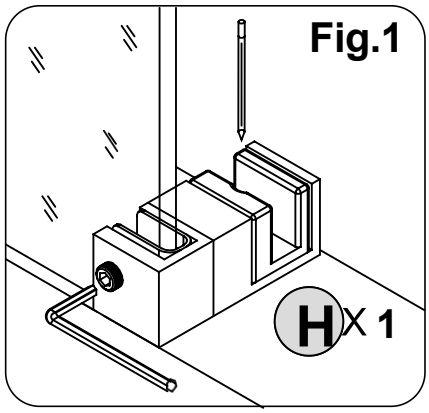


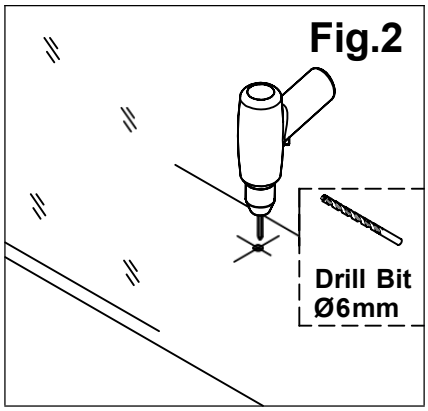

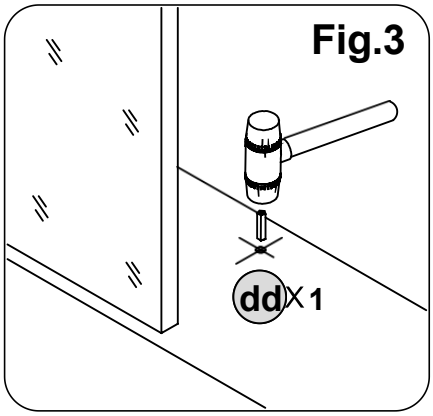

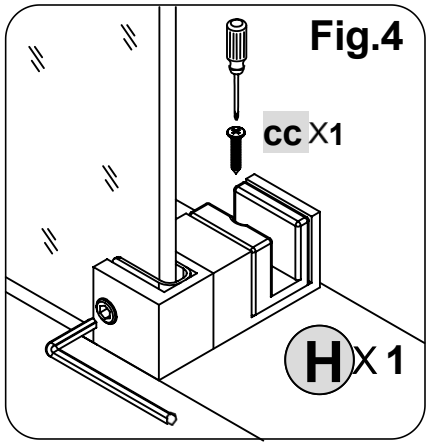

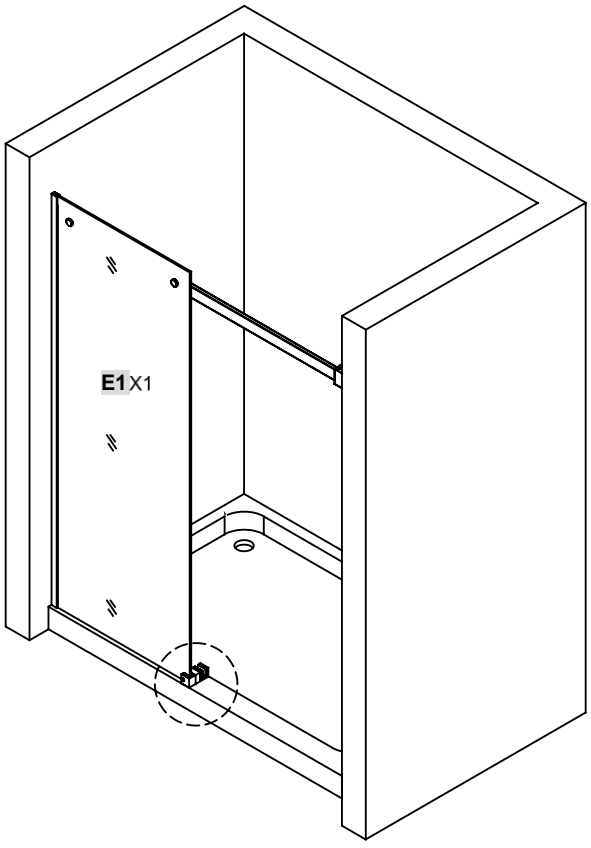


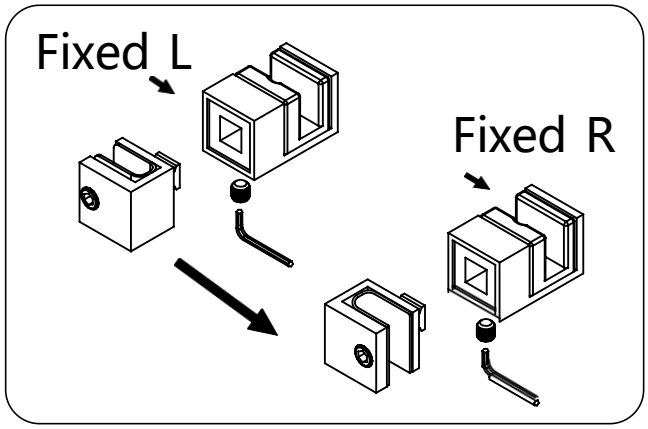


10 Install **Rollers (J)** on **Sliding Panel (E2)**


NOTE

Roller wheels face **OUTWARD**

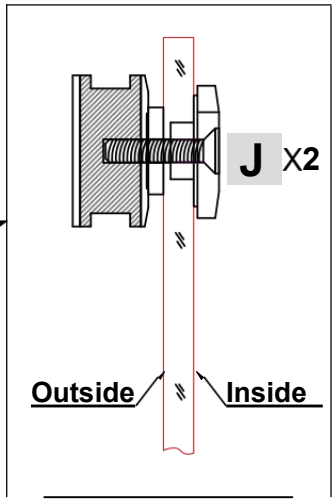


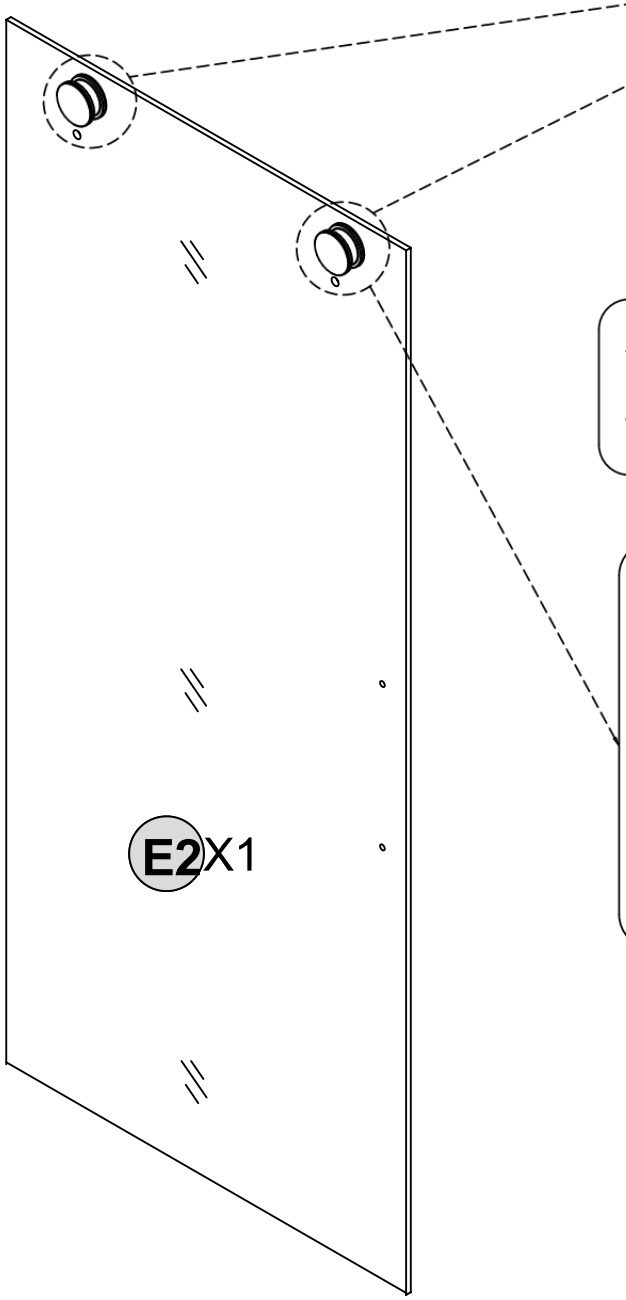


Attach **Rollers (J)** to **Sliding Panel (E2)** with wheels facing OUTSIDE. Tighten screws.

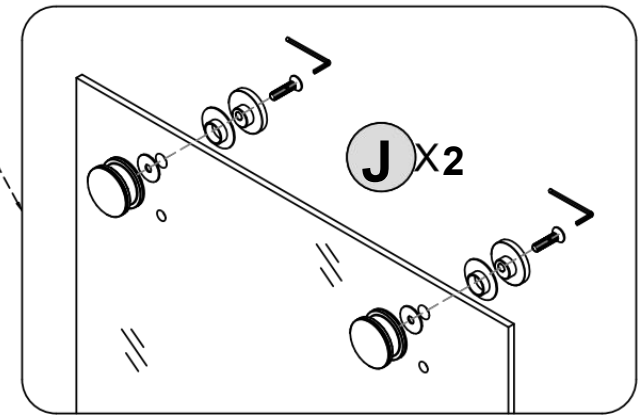


11 Install **Sliding Panel (E2)**

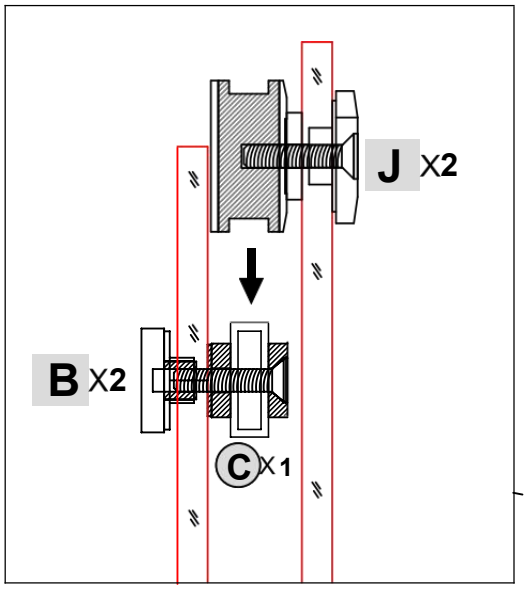


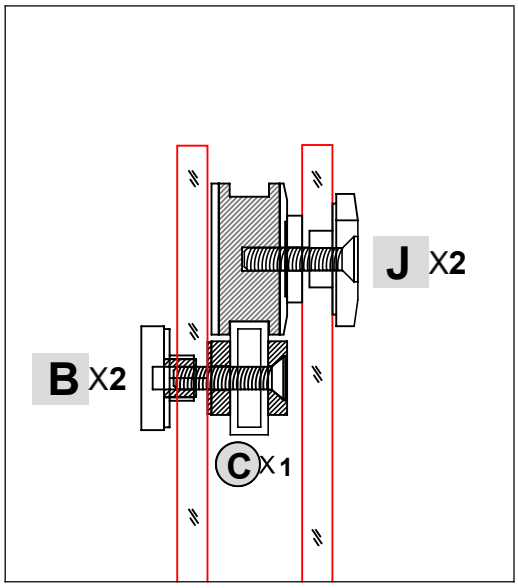

NOTE


Lift **Sliding Panel (E2)** and engage rollers into **Guide Rail (C)**. Insert bottom into **Bottom Guide (H)** slot.

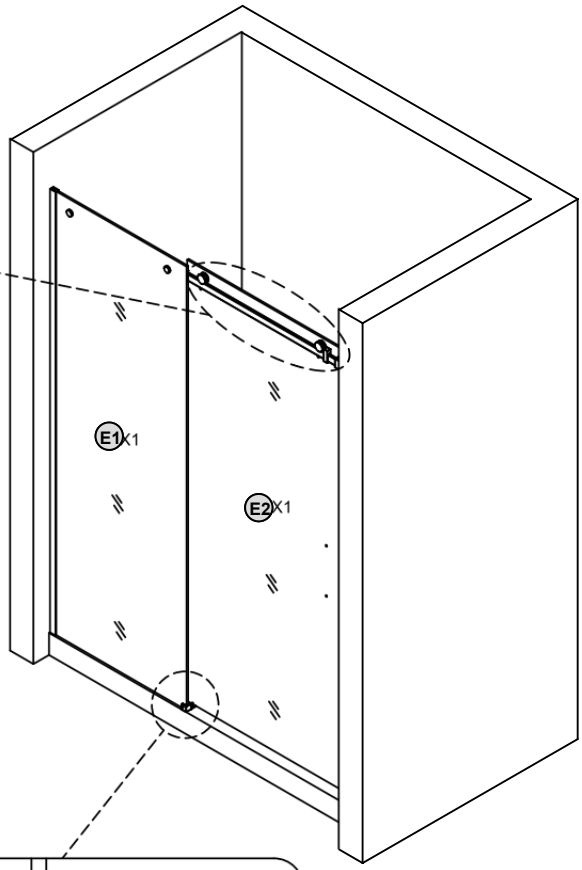

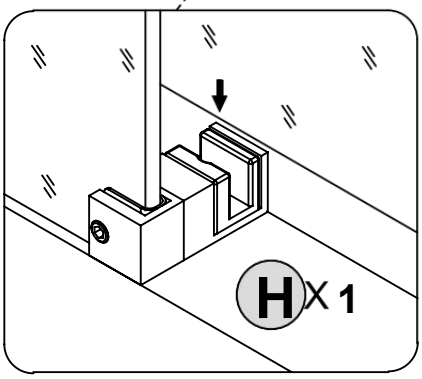


12 Adjust **Sliding Panel (E2)** Height

NOTE Rotate to adjust **Roller (J)** height to ensure smooth sliding. Align door edge parallel to the wall for a sealed closure.

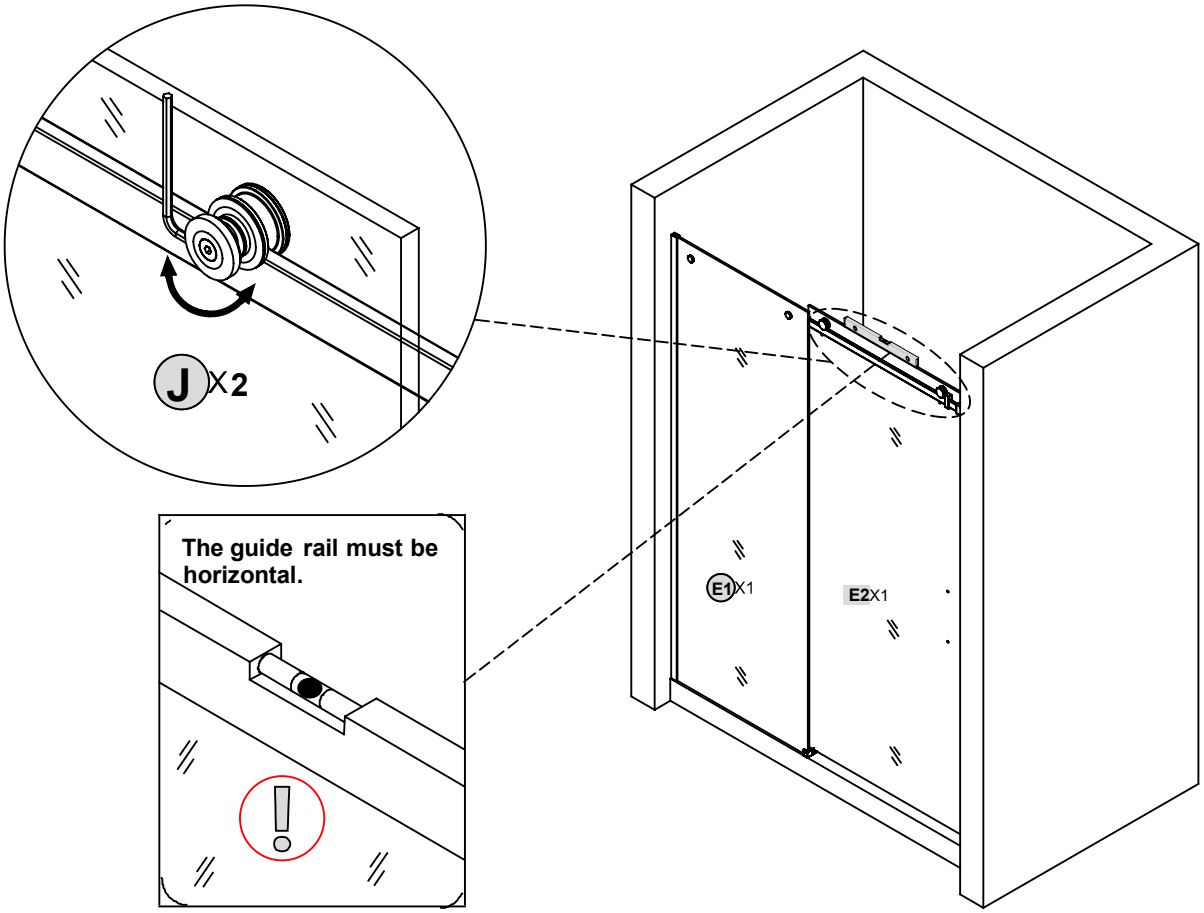


NOTE

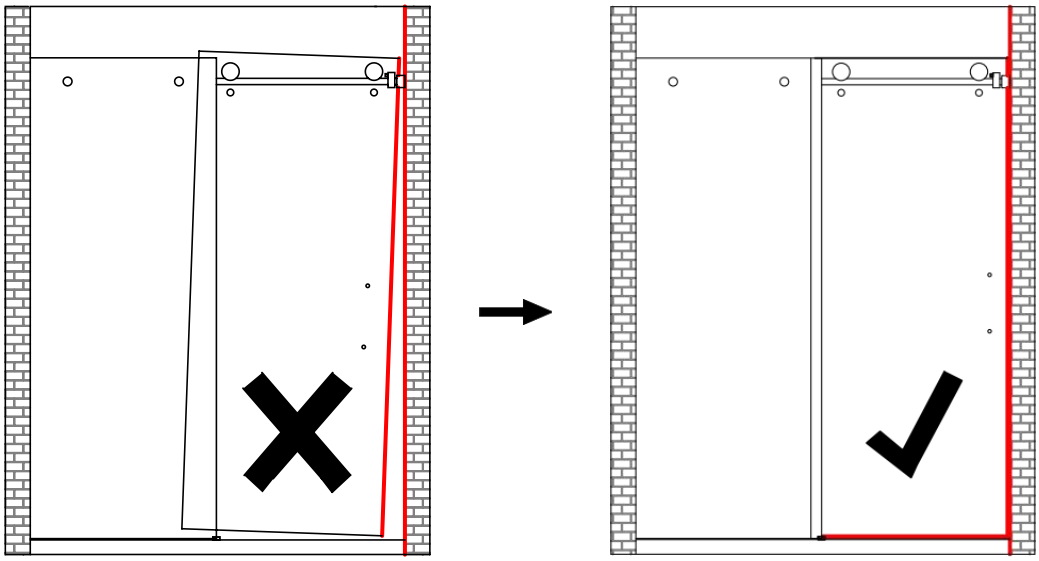



13 Install **Anti-Jump Knobs (K)**

NOTE

Install **Anti-Jump Knobs (K)** on **Sliding Panel (E2)**

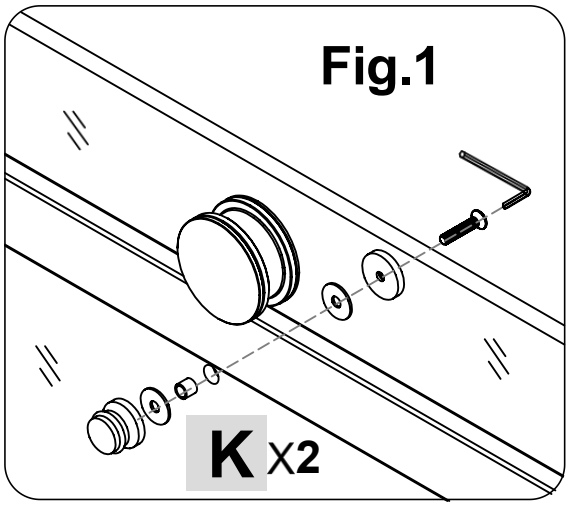

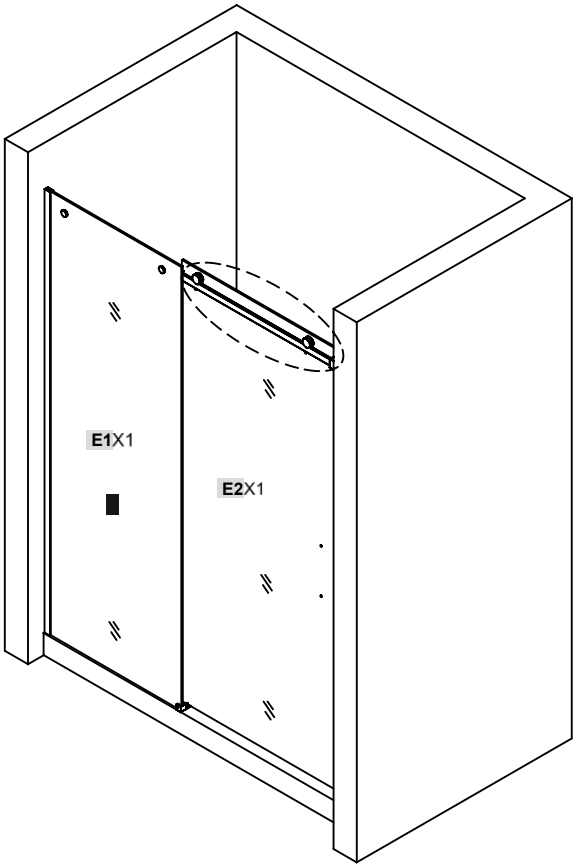

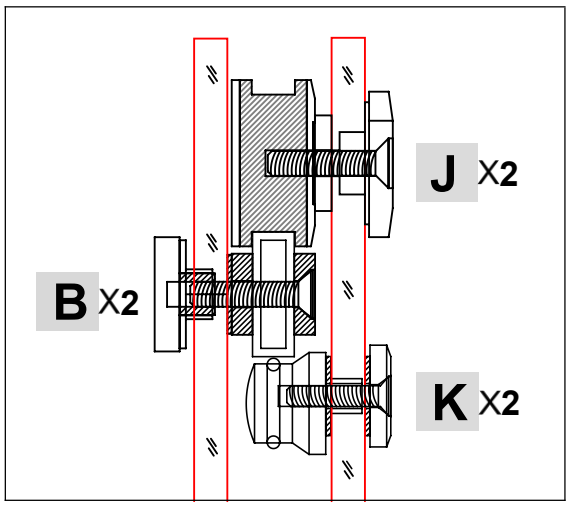

14 Install **Threshold Water Dam (I)**

NOTE

1.Measure and cut excess length from **Threshold (I)**.
2.Apply silicone sealant to the bottom of **Threshold (I)**.
3.Install **Threshold (I)** 6.4mm from the edge of **Bottom Guide (H)**.

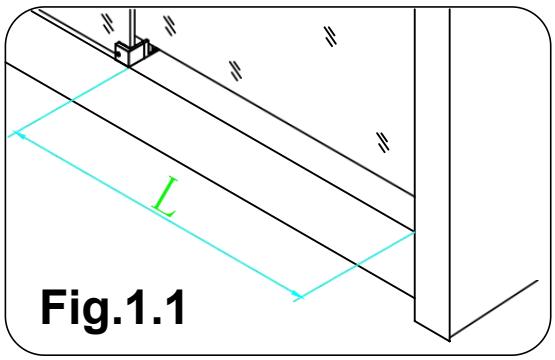


Fig.1.1

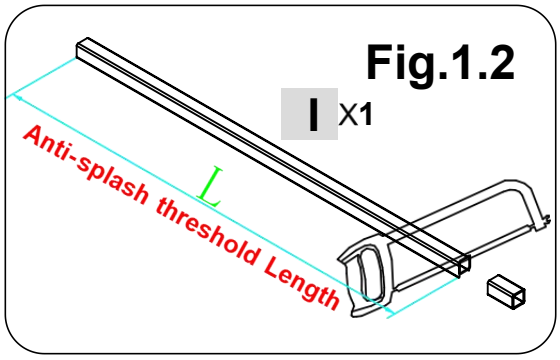
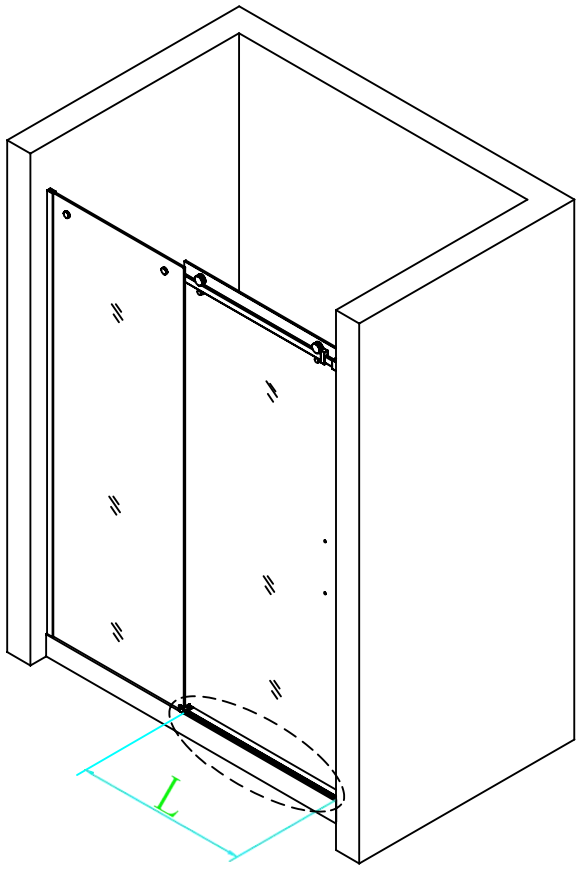
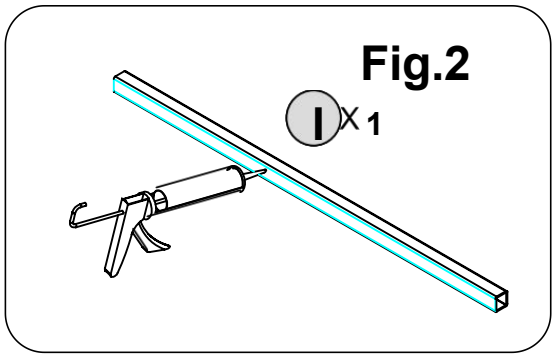


Fig.1.2
I X1




Fig.2
I X1


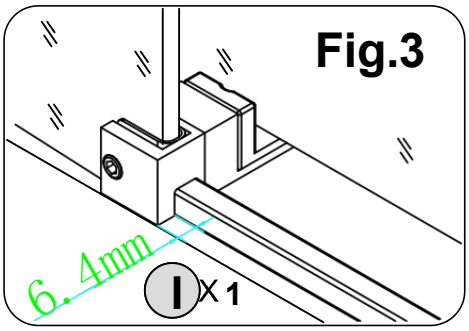


Fig.3
I X1

15 Install **Seals (G, M, F)**

NOTE


1.Clip **Door Magnetic Strip (M)** onto closure side of **Sliding Panel (E2).**
2.Clip **F-Type Bulb Seal Strip (G)** onto other side of **Sliding Panel (E2).**
3.Clip **F-type Seal Strip (F)** onto **Fixed Panel (E1)**.

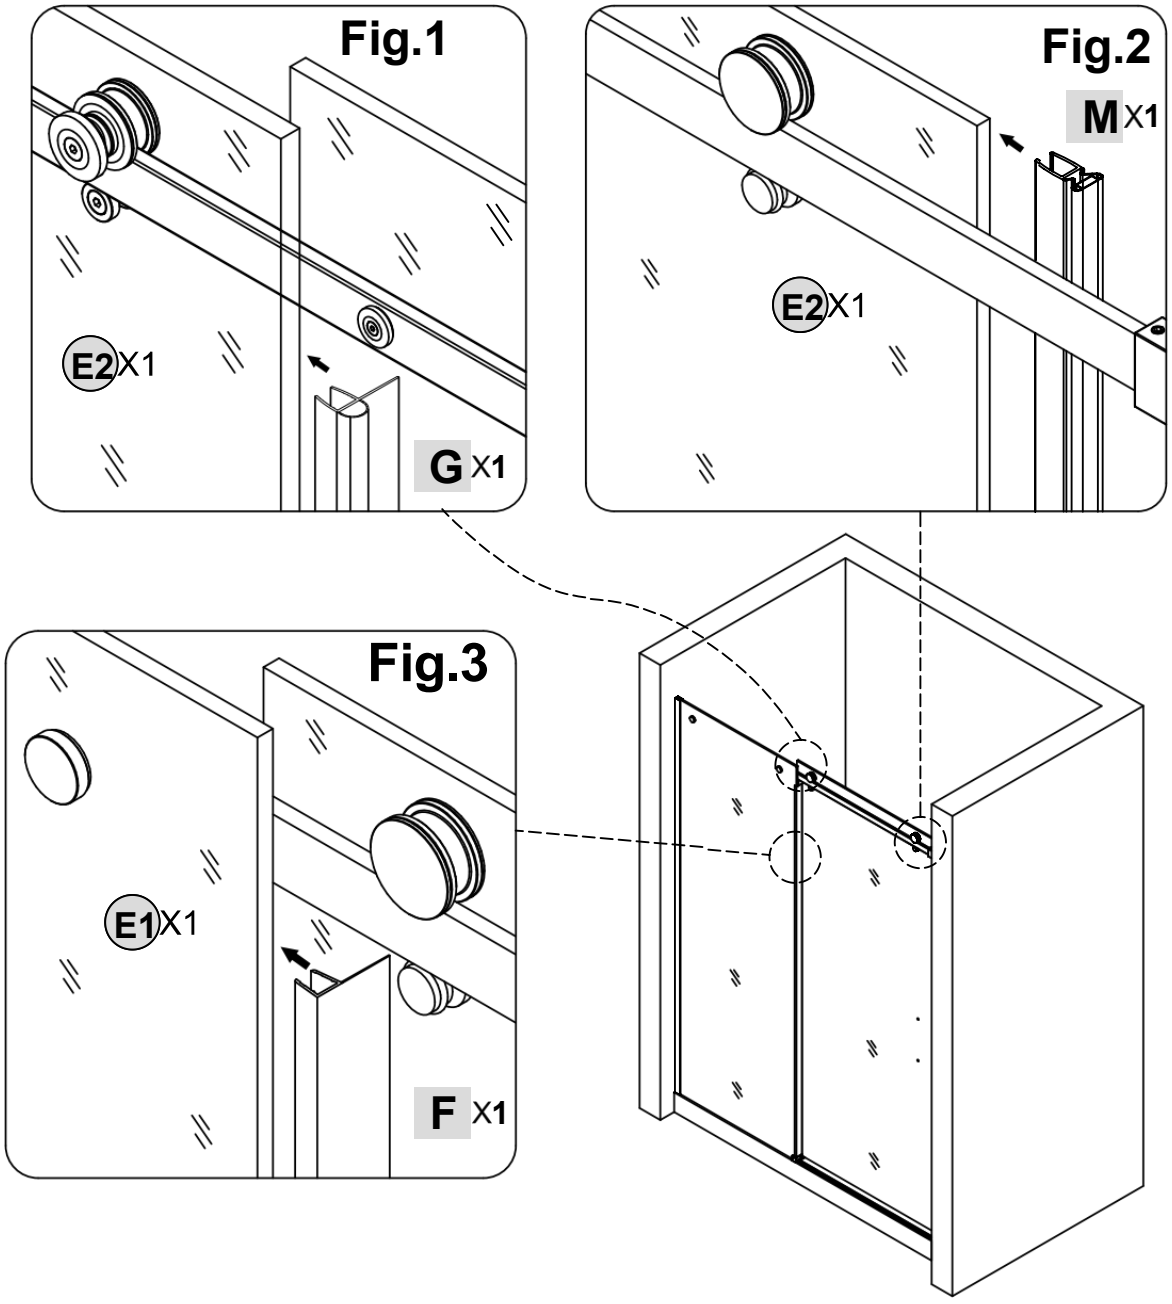



16 Install **Wall Magnetic Strip (L)**


NOTE


1.Attach **Wall Magnetic Strip (L)** to **Door Magnetic Strip (M)**.
2.Remove 3M backing from **Wall Magnetic Strip (L)**.
3.Slide **Sliding Panel (E2)** to align strip flush with the wall.
4.Open door and press strip firmly onto the wall.

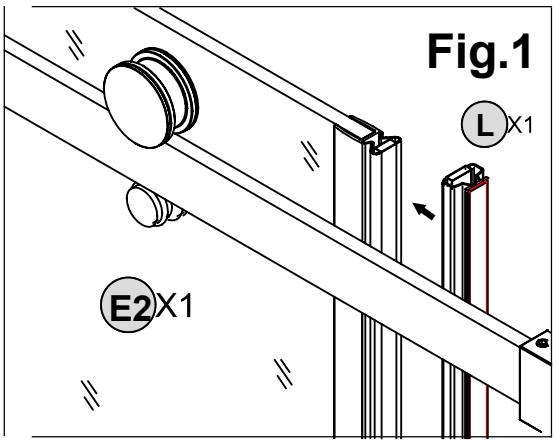

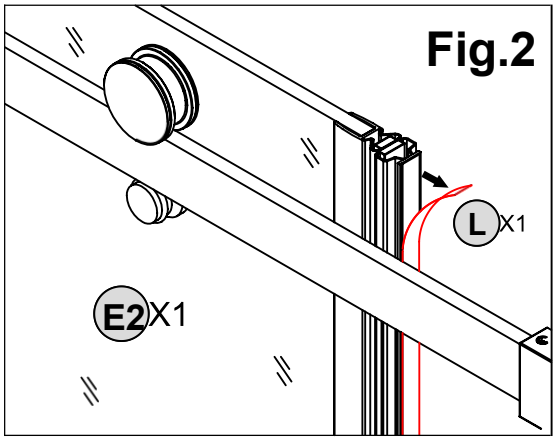

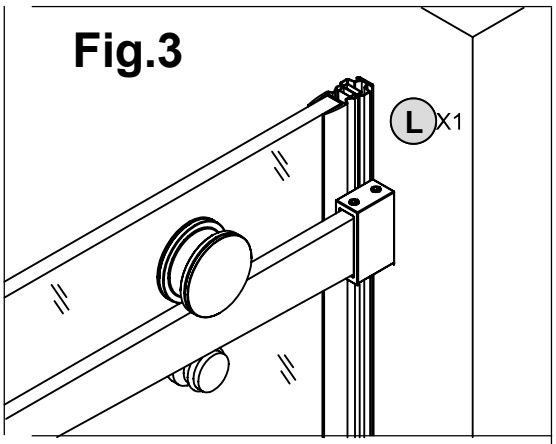

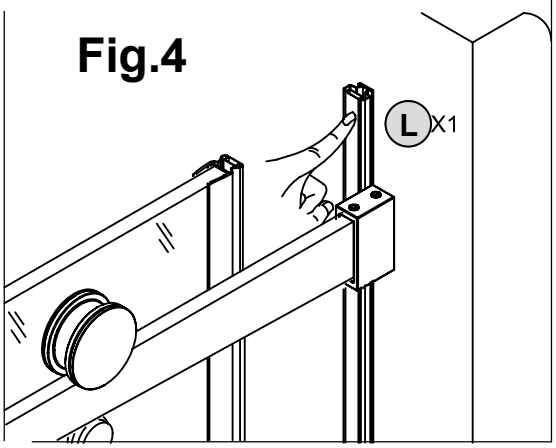


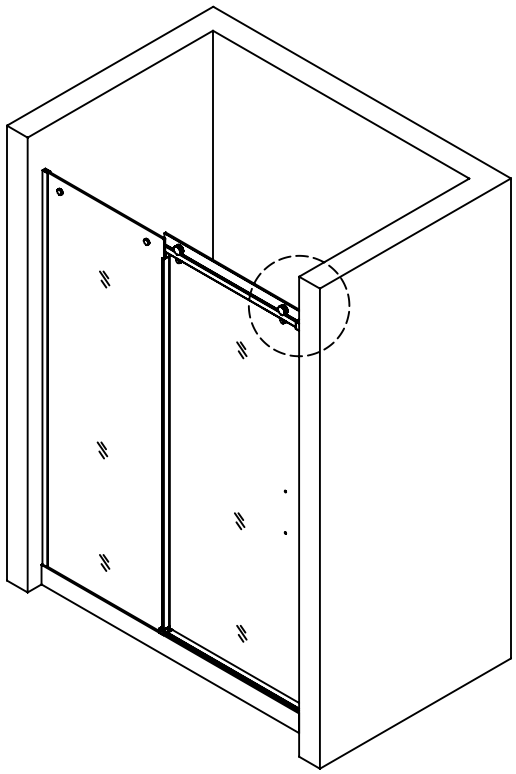


17 Install **Handle (N)**

NOTE

Mount **Handle (N)** on **Sliding Panel (E2)**.
Use all plastic washers to protect the glass.

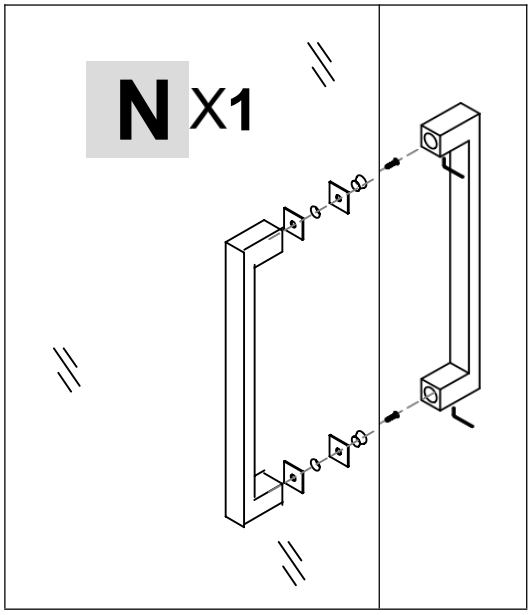

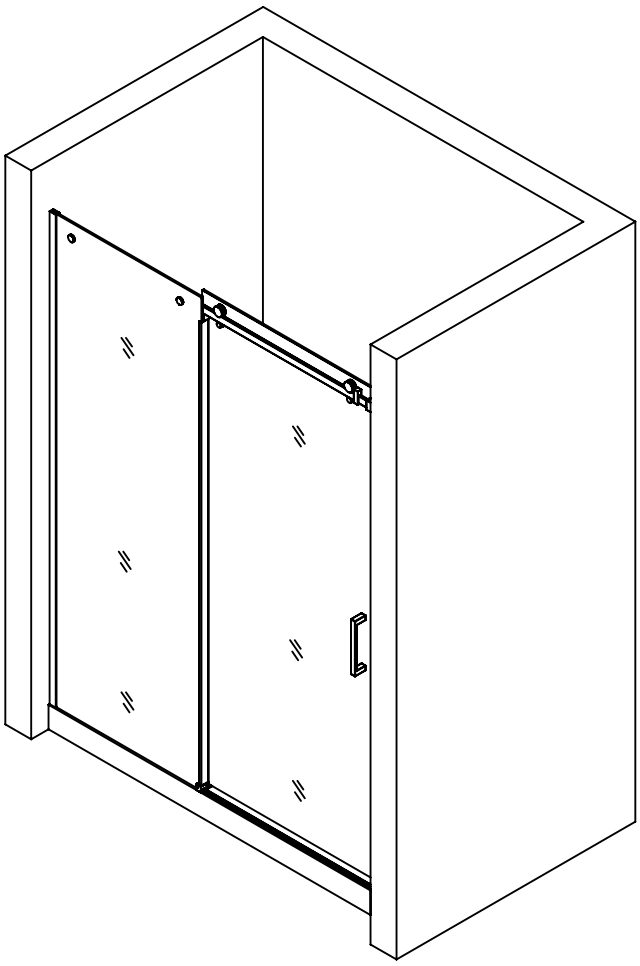


18 SEALING

NOTE The surfaces need to be clean and free of debris before applying silicone.

NOTE Make sure the shower door is tightly closed and opens smoothly。 Apply high-quality silicone sealant along the bottom of the fixed glass and the bottom of the lower water barrier.

! Allow 24 hours for the silicone to cure before using the shower.



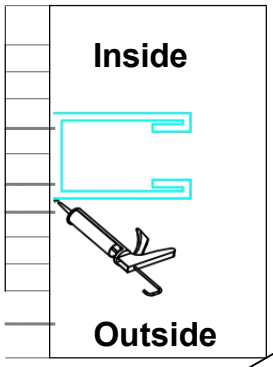

! Apply Silicone Sealant,(not supplied).

Apply silicone around the fixed glass and the lower water barrier.

