


Assembly Instruction

Note:


- 1. Should be assembled on flat ground to keep balance.**
- 2. Before completing the installation, do not tighten the screws.**

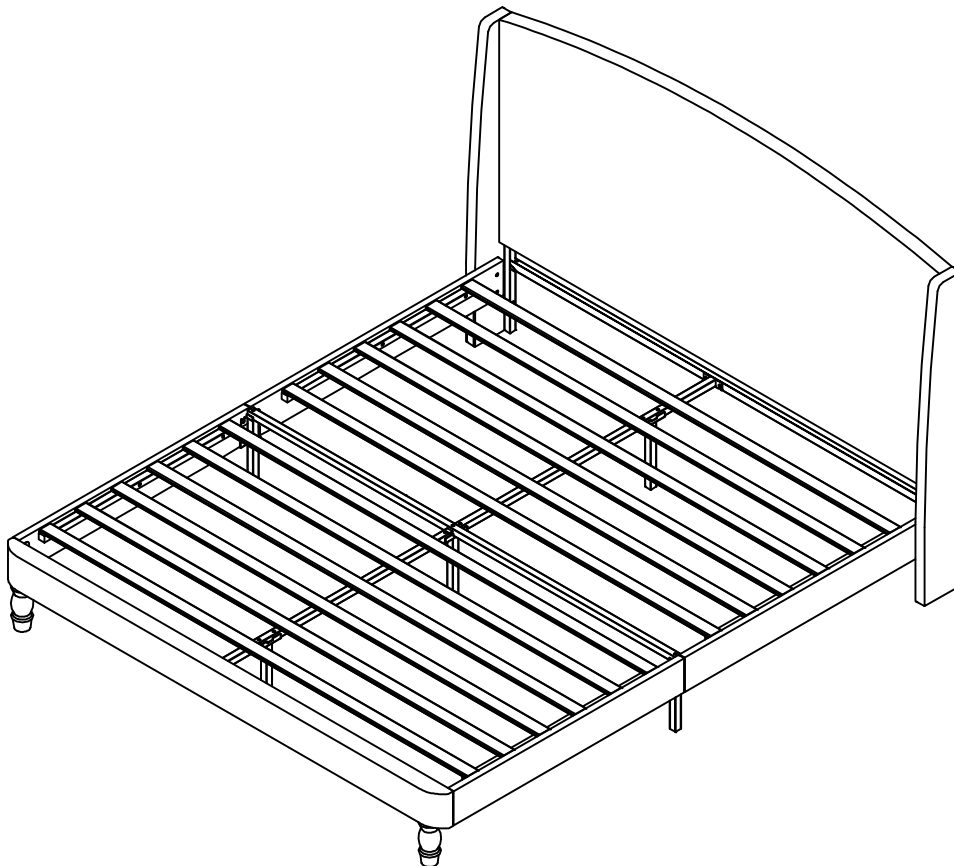

It needs at least two people to install.




Before starting the assembly, you must read the whole manual and follow the instructions.













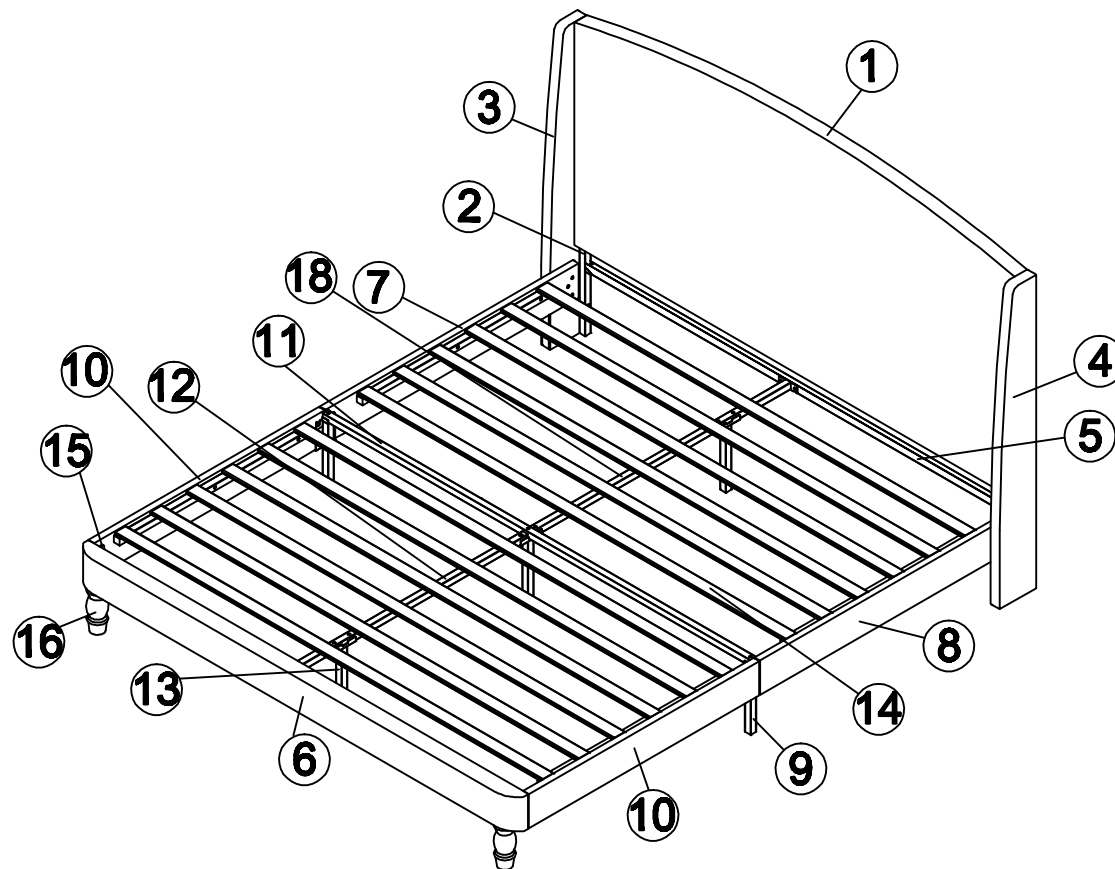


Assembly Instruction


Hardware arts

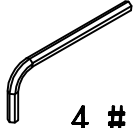 Ⓐ M6x 40 2pcs	 Ⓑ M8x20 26pcs+2	 Ⓒ M8x35 18pcs+1	 Ⓓ M8x45 15pcs+1	 Ⓔ 4 # 1pc	
---	---	---	---	---	--


Part list

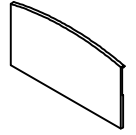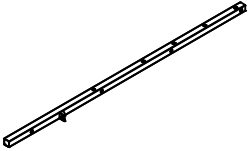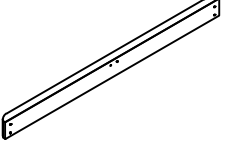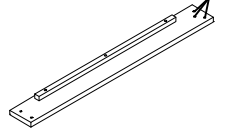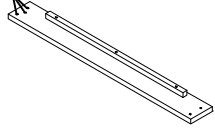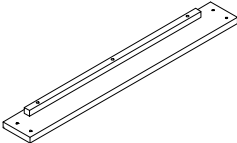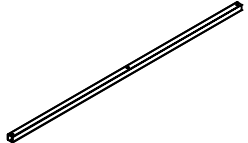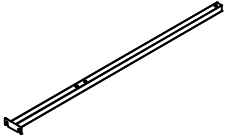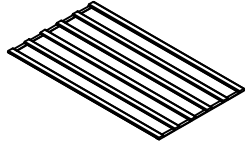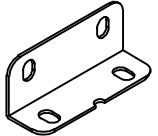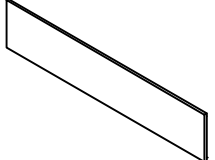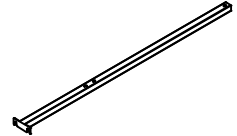 ① 1 PC	 ② 2 PCS	 ③ 1 PC	 ④ 1 PC	 ⑤ 1 PC	 ⑥ 1 PC	Through-hole  ⑦ 1 PC
Through-hole  ⑧ 1 PC	 ⑨ 2 PCS	 ⑩ 2 PCS	 ⑪ 1 PC	 ⑫ 1 PC	 ⑬ 3 PCS	 ⑭ 2 PCS
 ⑮ 2 PCS	 ⑯ 2 PCS	 ⑰ 1 PC	 ⑱ 1 PC	 ⑲ 3 PCS		Page 3/11

Assembly Instruction

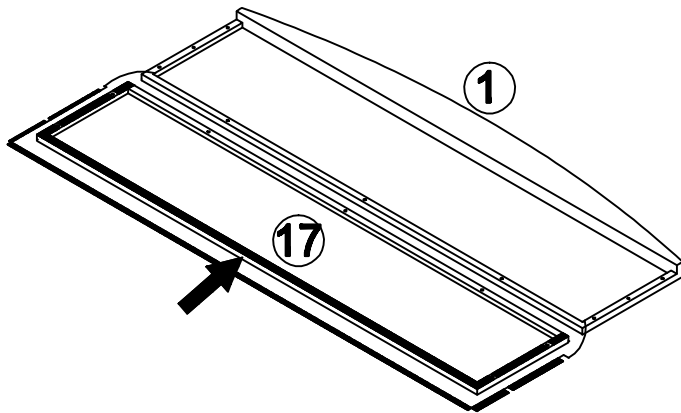


Place component (17) on the surface cloth of component (1) and press it tightly against the upper head of the bed.

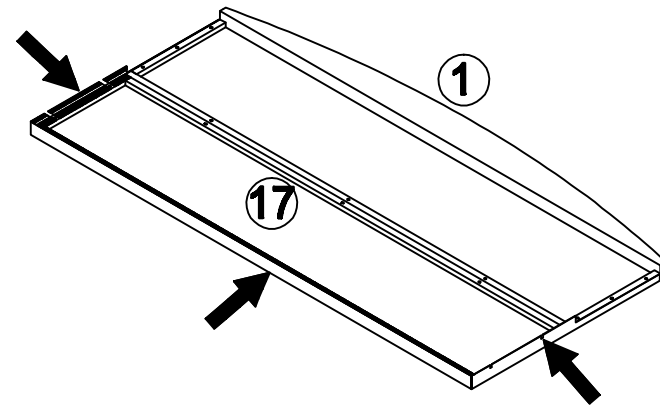


Attach the headboard veneer tightly to the Velcro of component (17).

Assembly Instruction

C		M8x35	10pcs
E			1pc

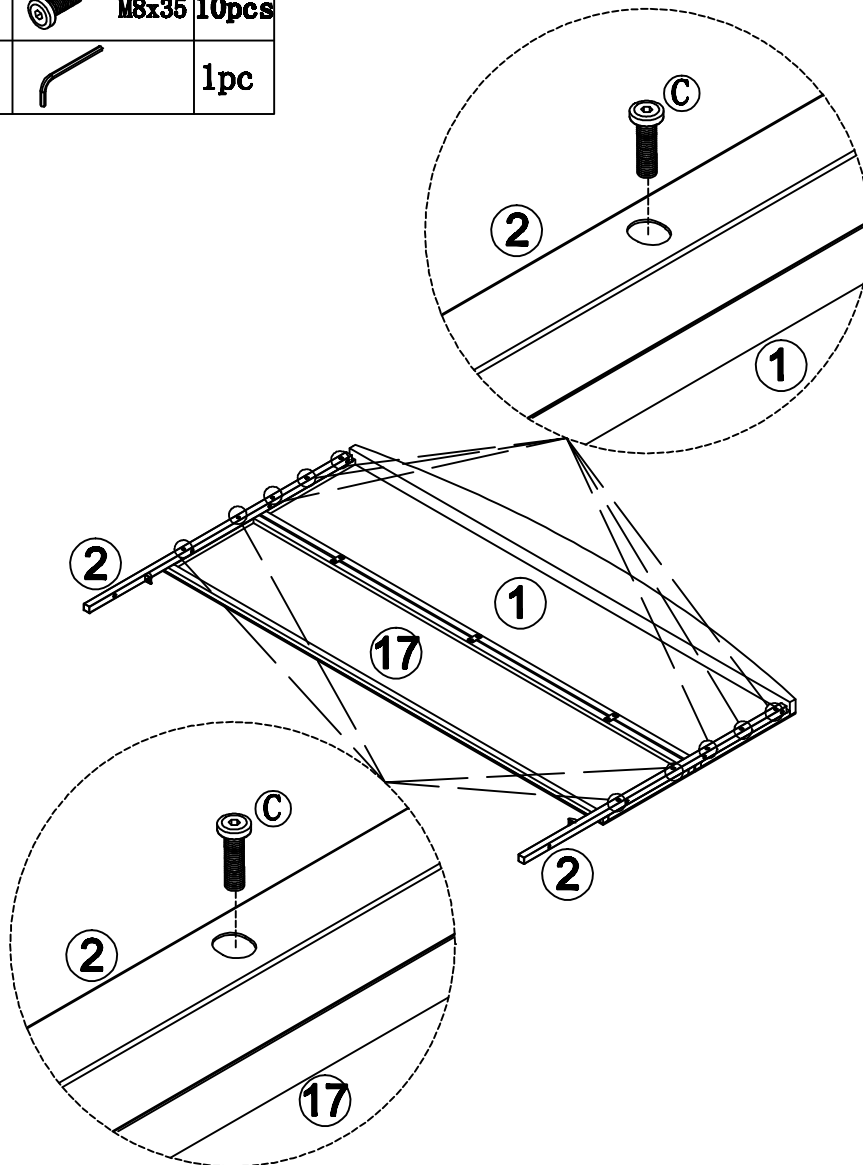


B		M8x20	6pcs
E			1pc

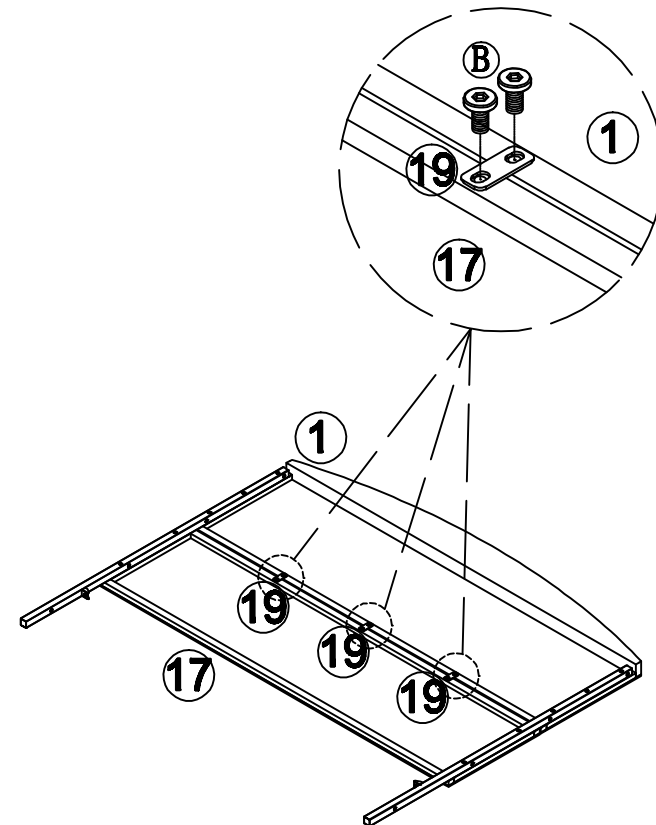


Assembly Instruction

D		M8x45	4pcs
E			1pc


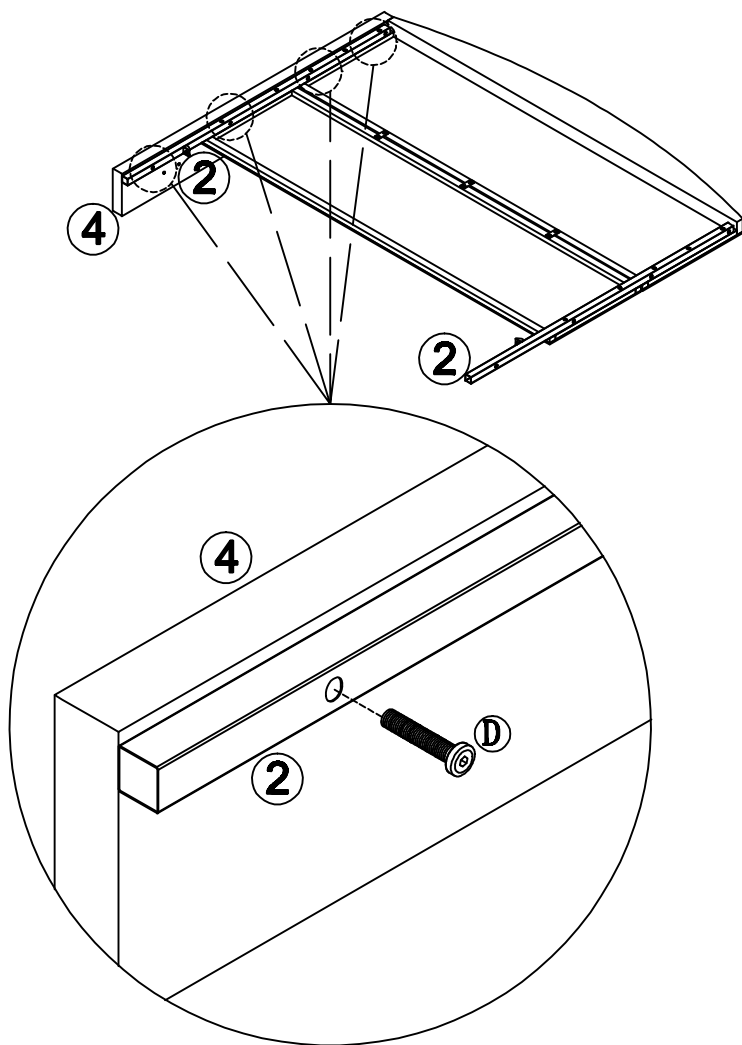


D		M8x45	4pcs
E			1pc

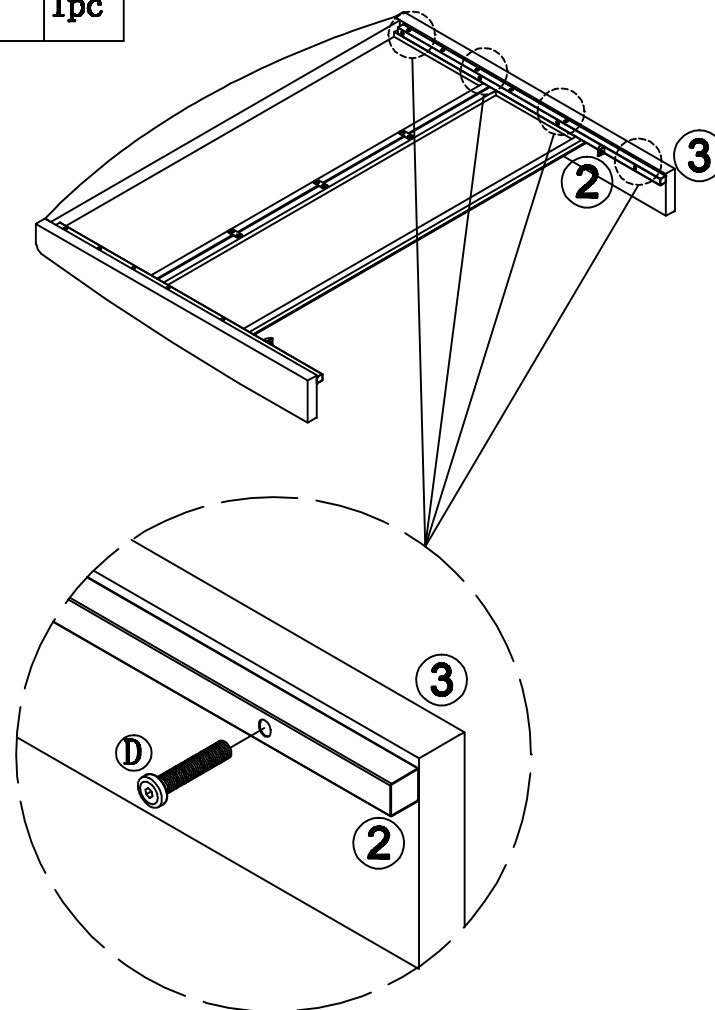


Assembly Instruction

A	 M6x 40	2pcs
E		1pc

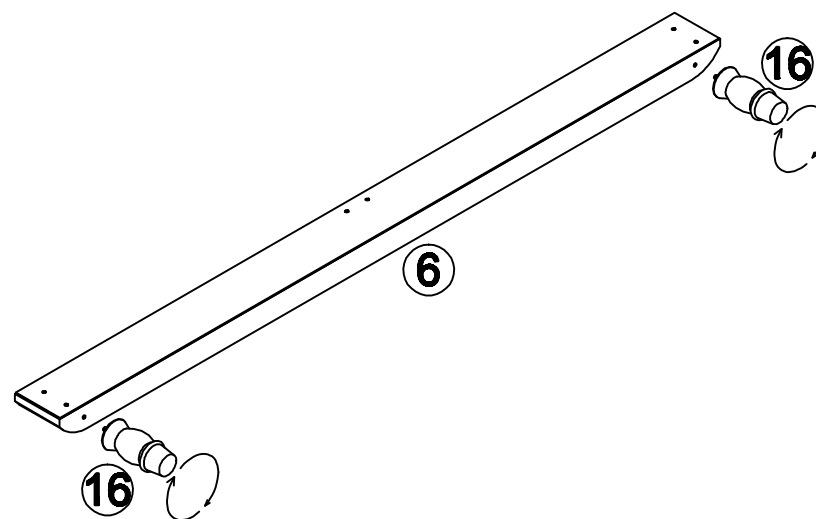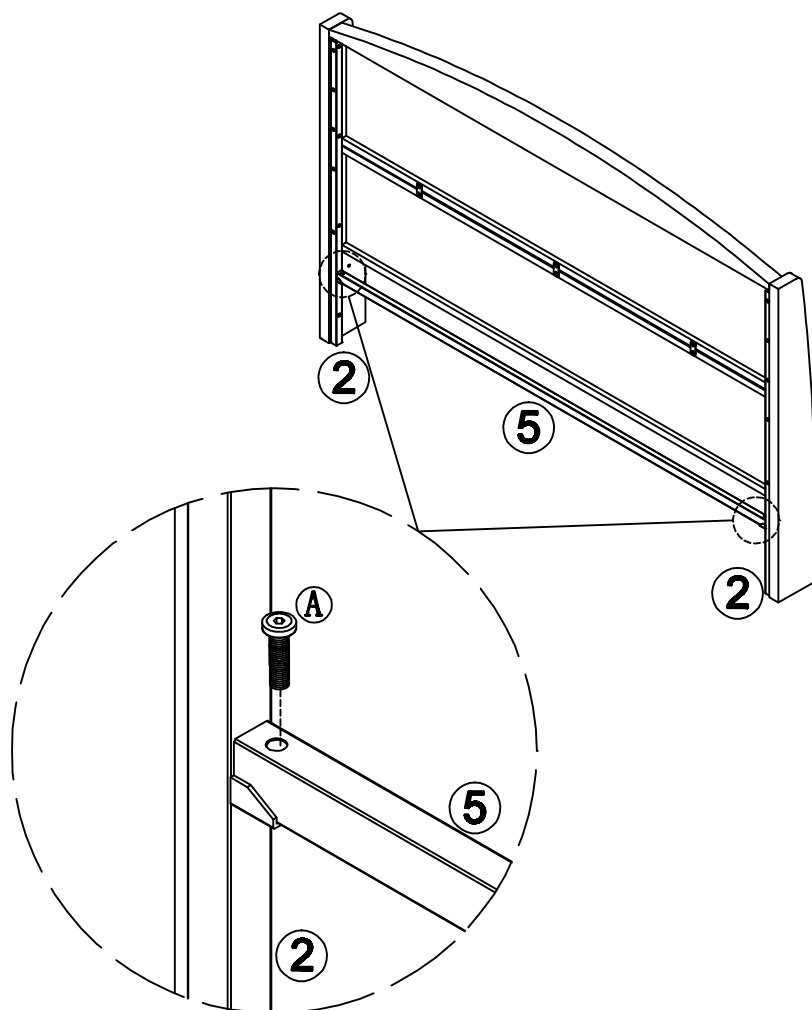


Assembly Instruction

B		M8x20	6pcs
E			1pc

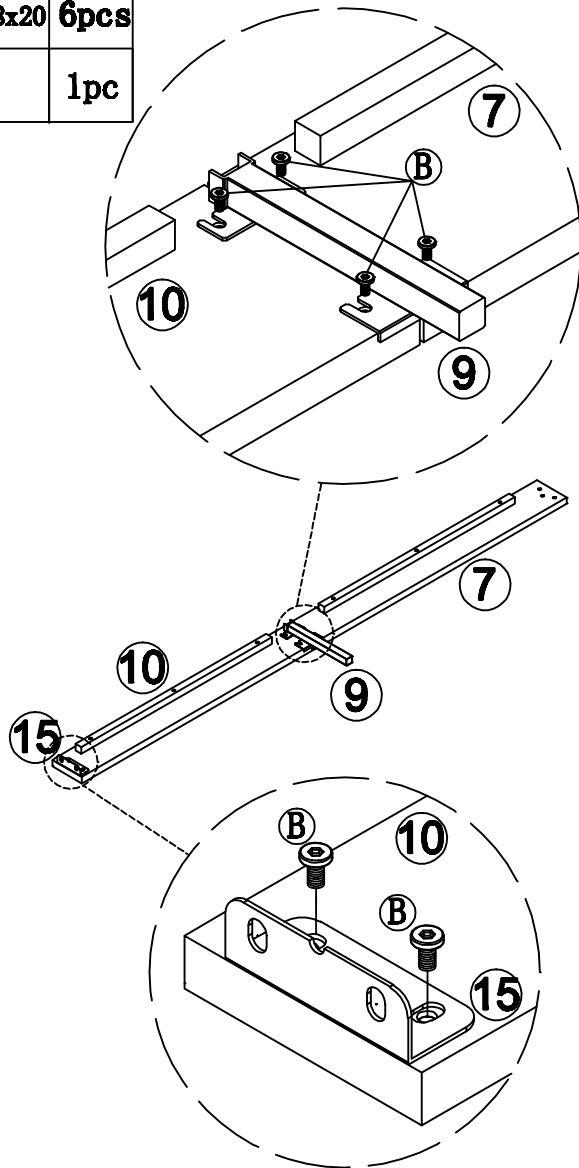


B		M8x20	6pcs
E			1pc

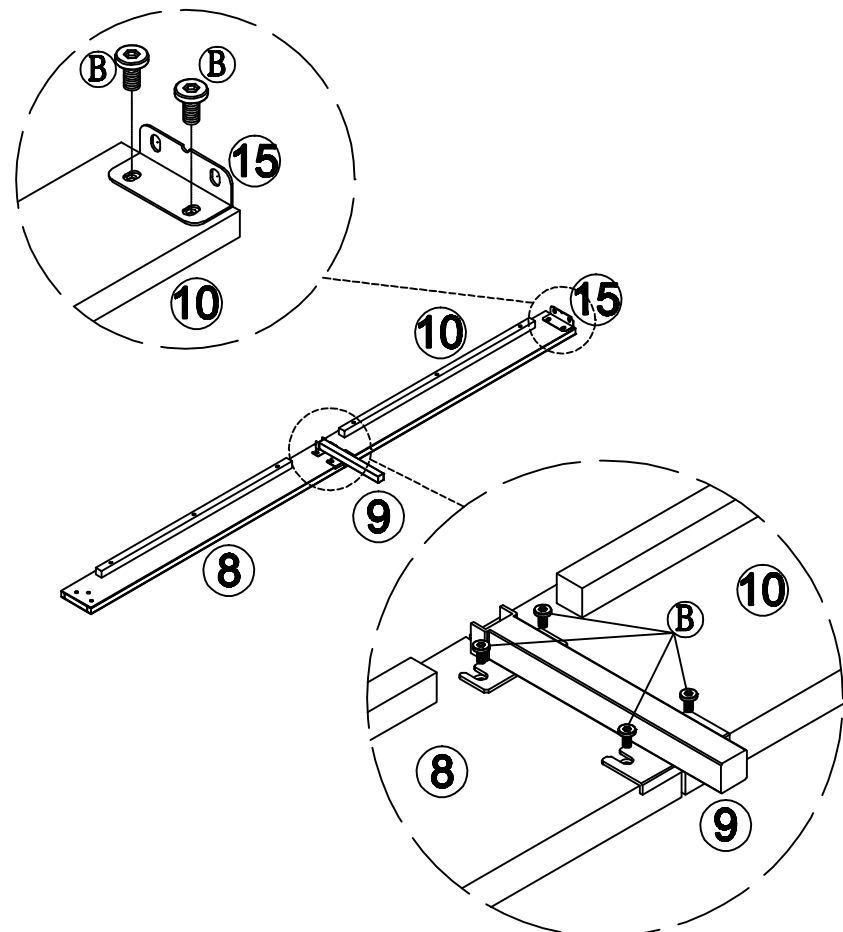


Assembly Instruction

B	 M8x20	4pcs
E		1pc

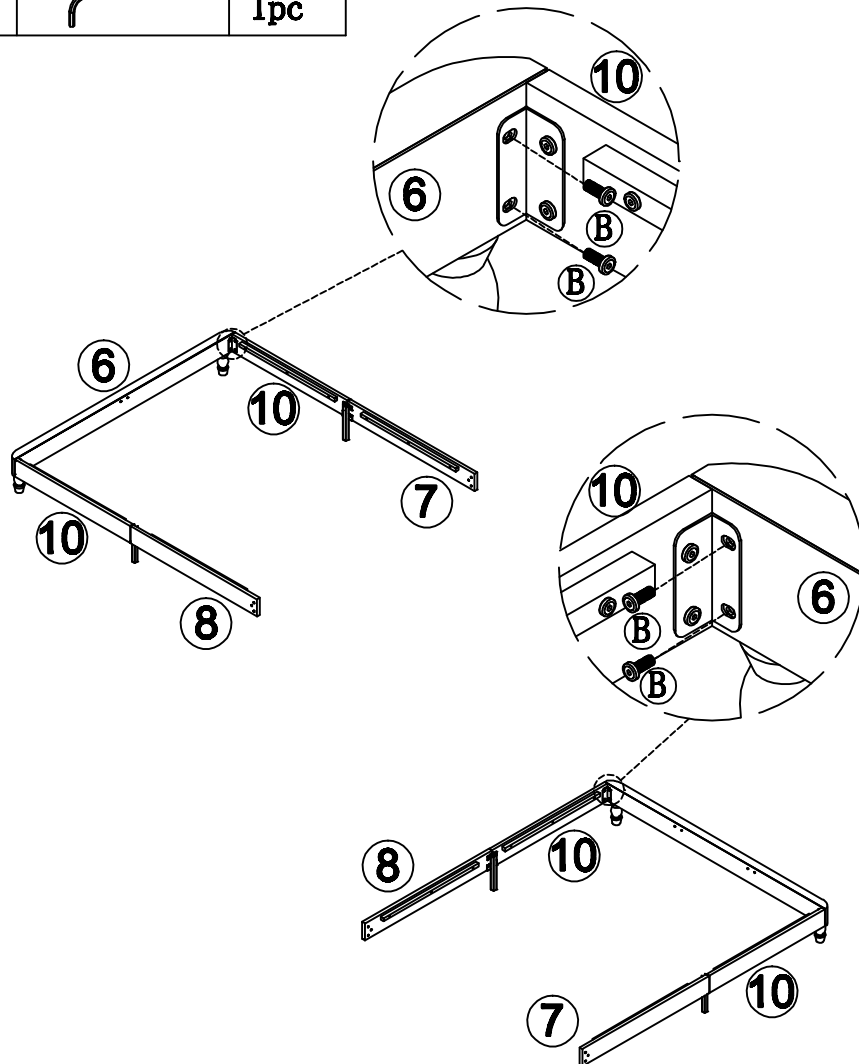


D	 M8x45	6pcs
E		1pc

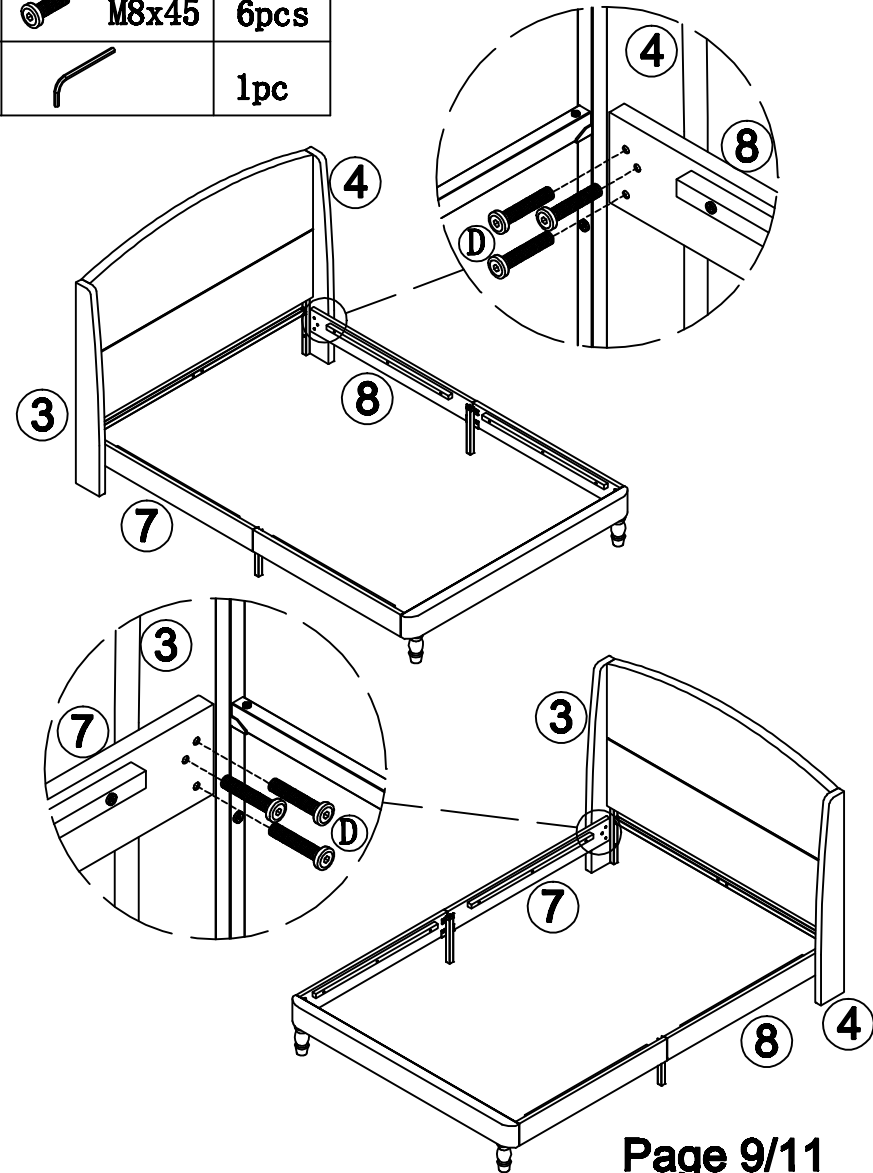


Assembly Instruction

C		M8x35	2pcs
D		M8x45	1pc
E			1pc

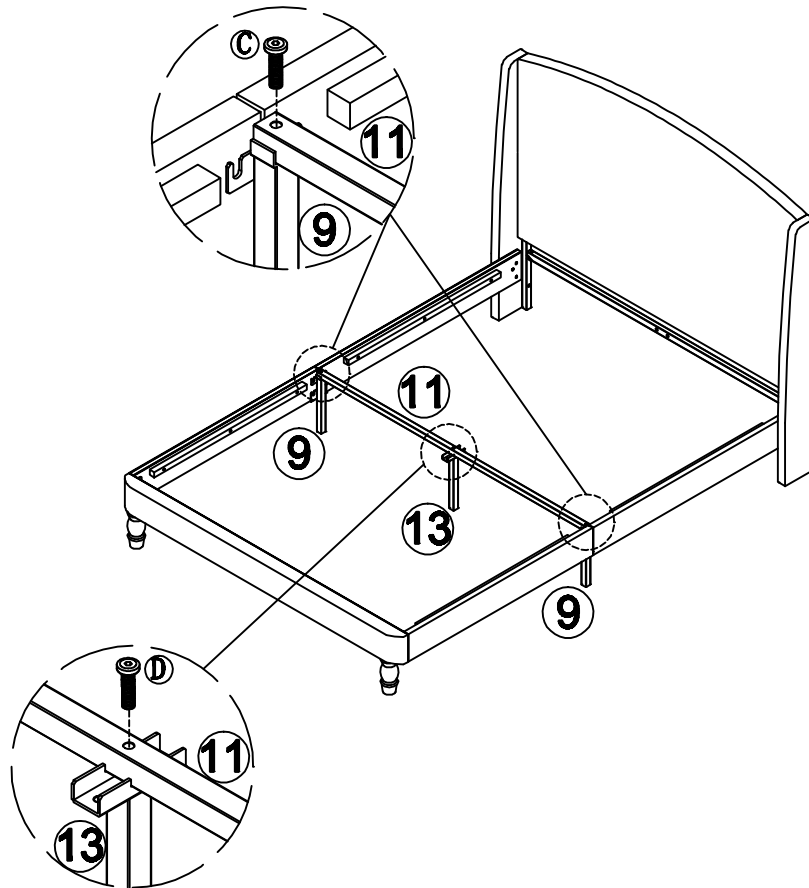

B		M8x20	4pcs
C		M8x35	2pcs
E			1pc

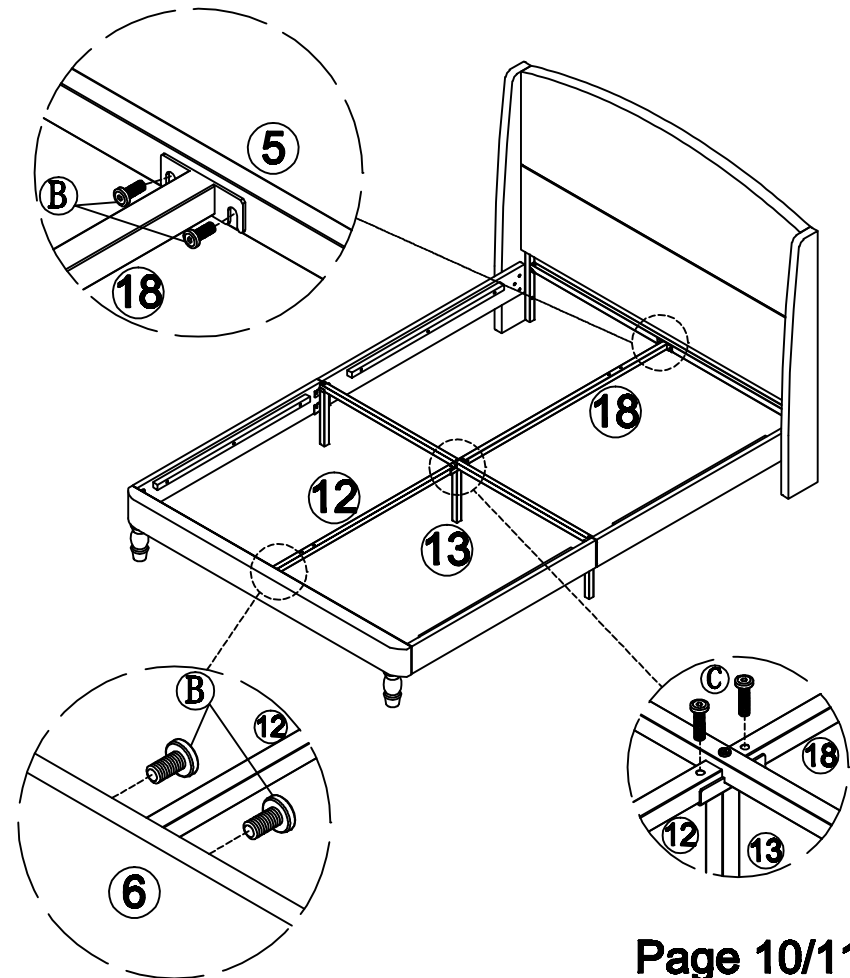

Assembly Instruction

C	 M8x35	4pcs
E		1pc

