

7 DRAWERS DRESSER CUSTOMER MANUAL



 WARNING



Children have died from furniture tipover.

To reduce the risk of furniture tipover:




- ALWAYS install tipover restraint provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

This is a permanent label.

Do not remove!




ASSEMBLY STRUCTURE REFERENCE DIAGRAM

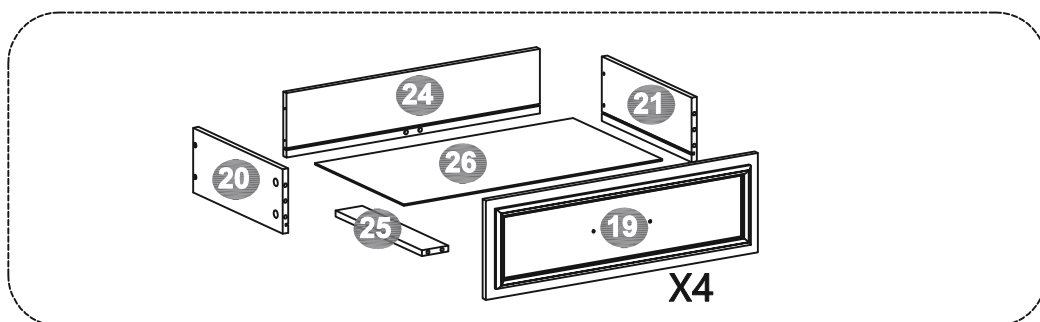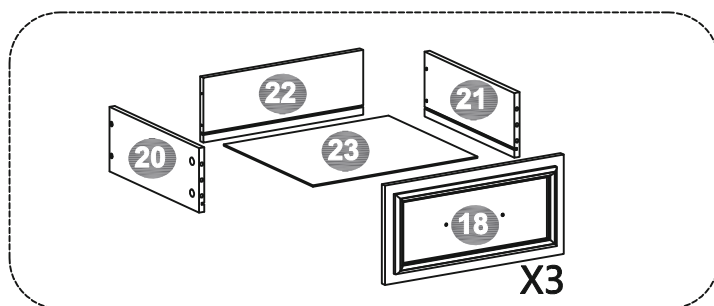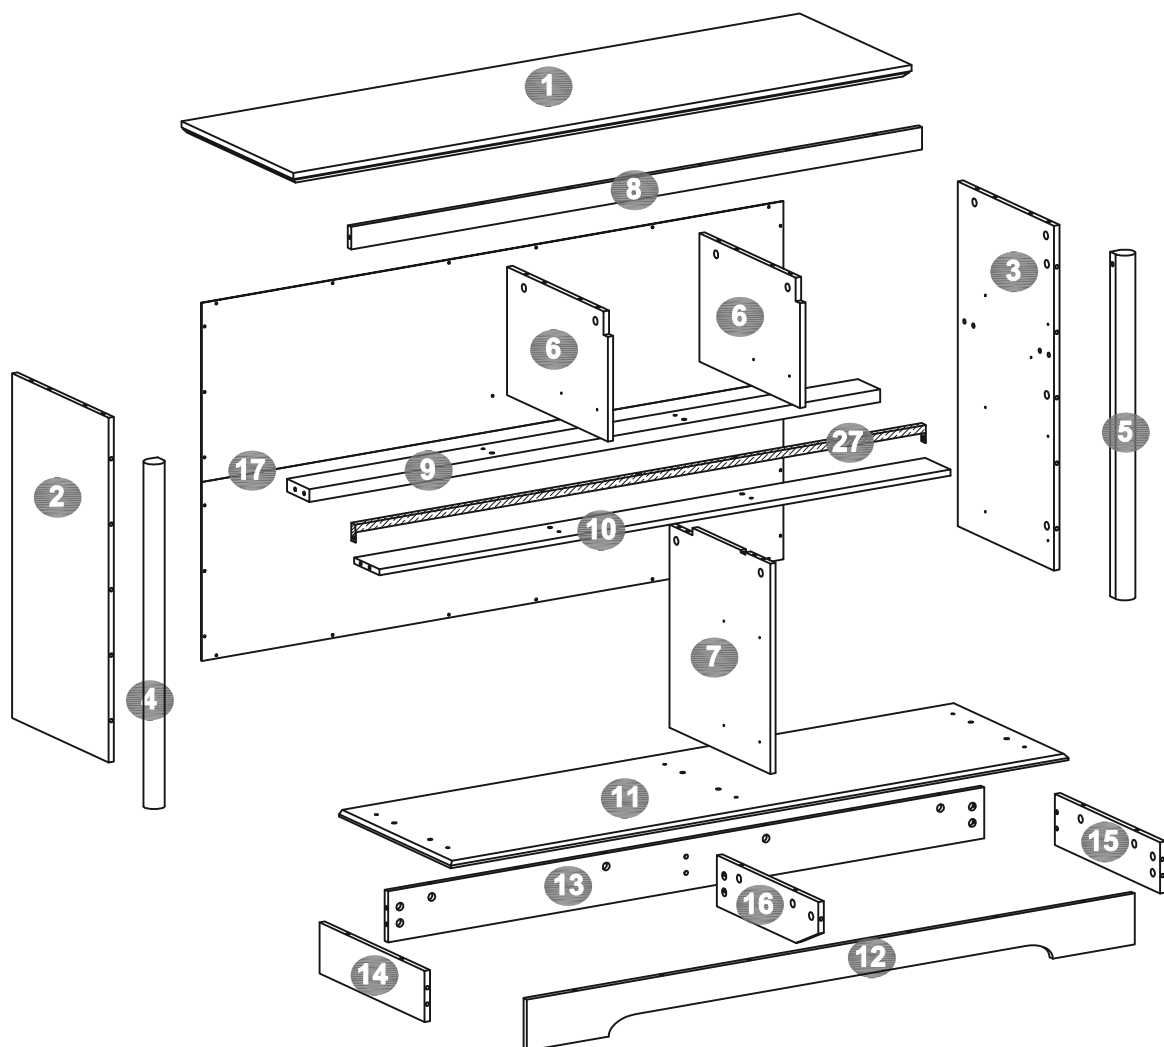

PARTS

A



X 91+3

B



Ø15 x 9mm
X 91+3

C



Ø6 x 30mm
X 52+1

D



ST3 x 12mm
X 84+2

E



ST3.5 x 12mm
X 2

F




ST3.5 x 35mm
X 28+1

G




ST3 x 14mm
X 26+1

H

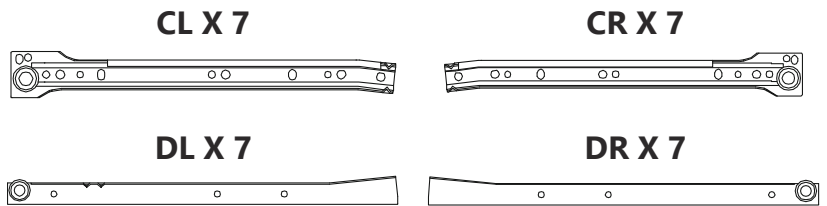


Attention: there are 4 kinds of slides in our product, in which 2 are **Boards slides**, which marked as **CL & CR** and contains 7 pieces respectively, and the other 2 are the **Drawer slides**, which marked as **DL & DR** and contains 7 pieces respectively.

I



X 7

J



M4 x 18mm
X 14+1

K




ST4 x 35mm
X 3

L



ST4 x 50mm
X 10+1





M

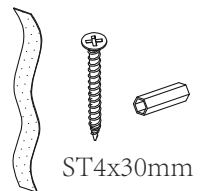


ST4x30mm

X 2

The hardware quantities listed above are required for proper assembly. Some extra hardware may also have been included.

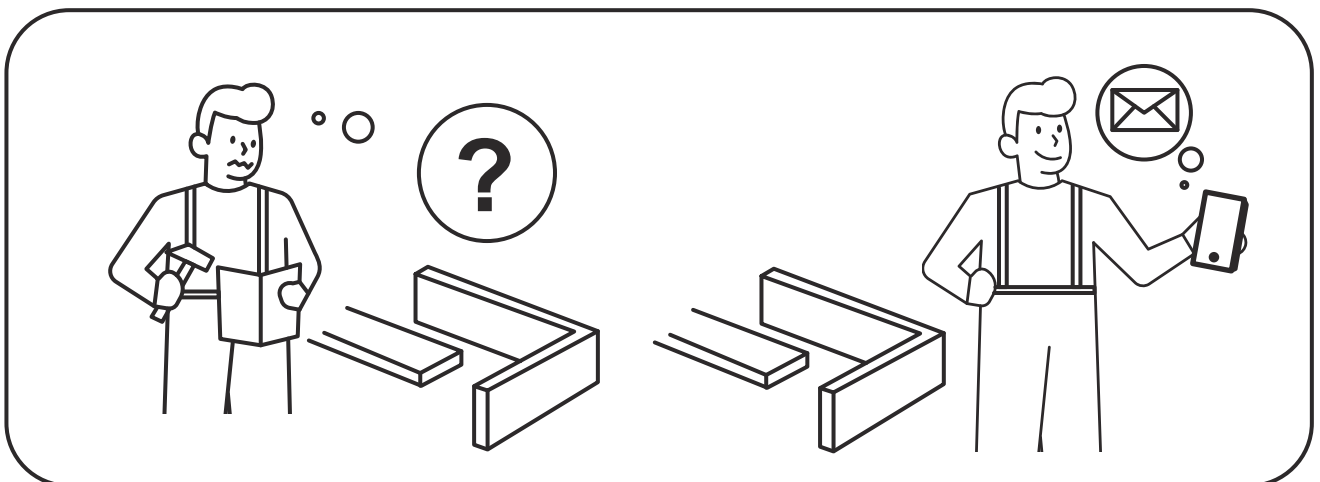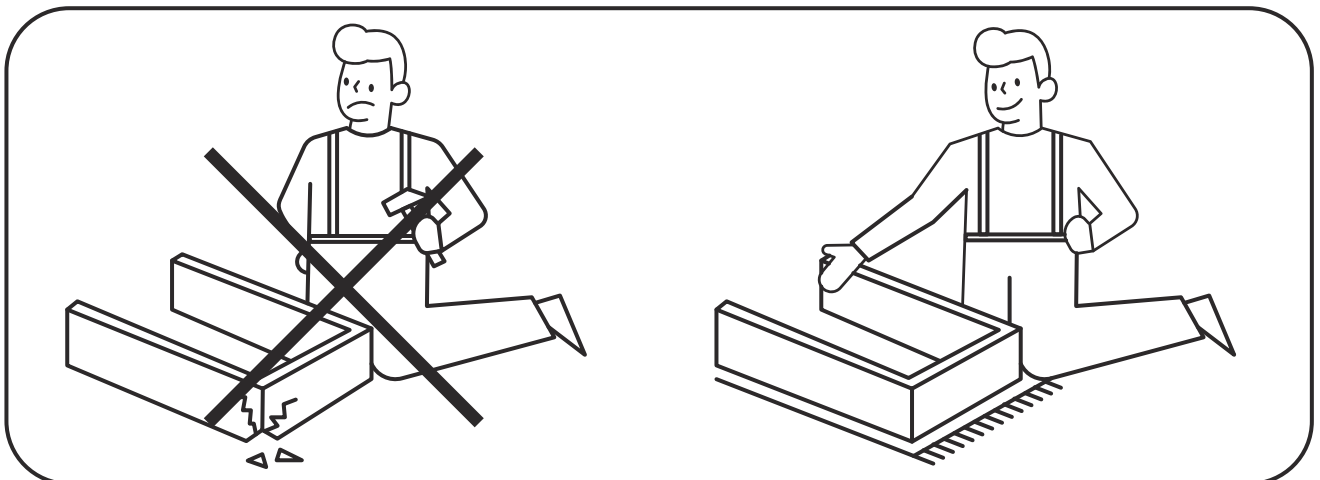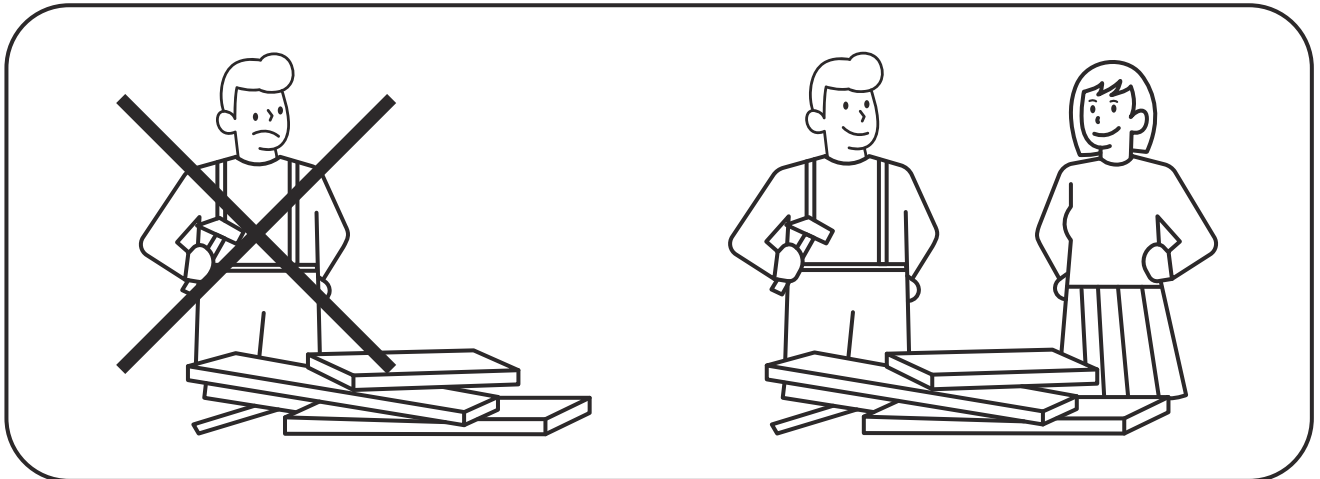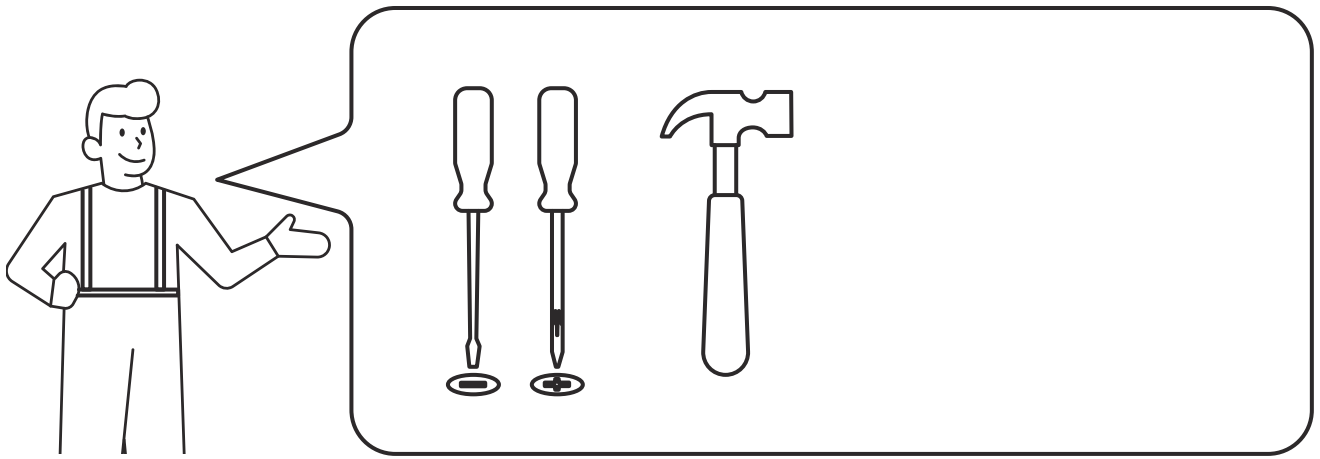


How to work the Knock Down (kd) assembly system

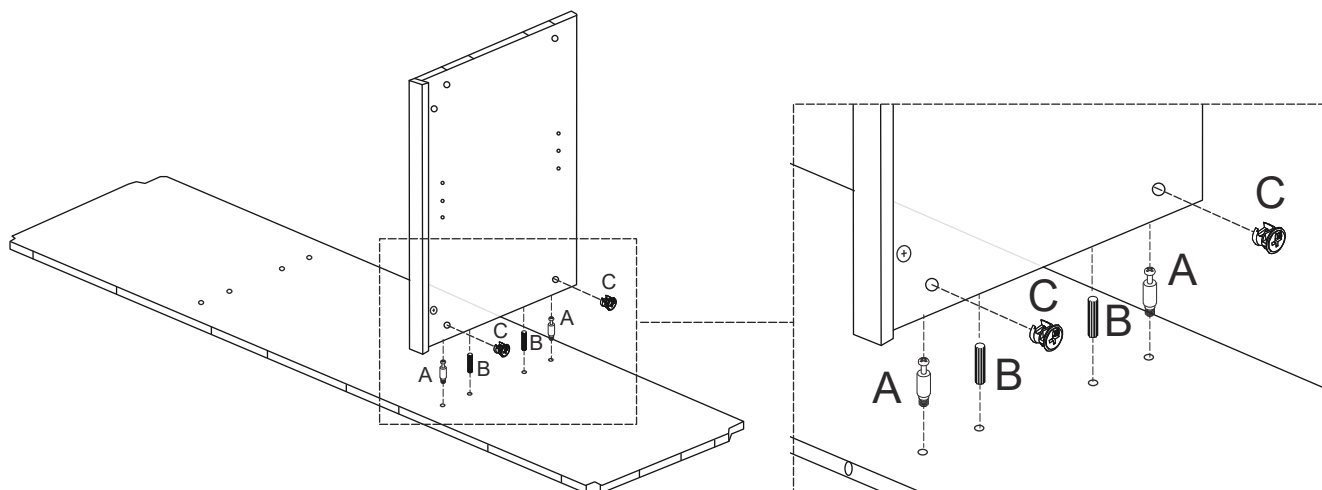


How to install Wood Dowel


Insert the wood dowel [B] at least half way by tapping lightly with a rubber mallet, IF NECESSARY.

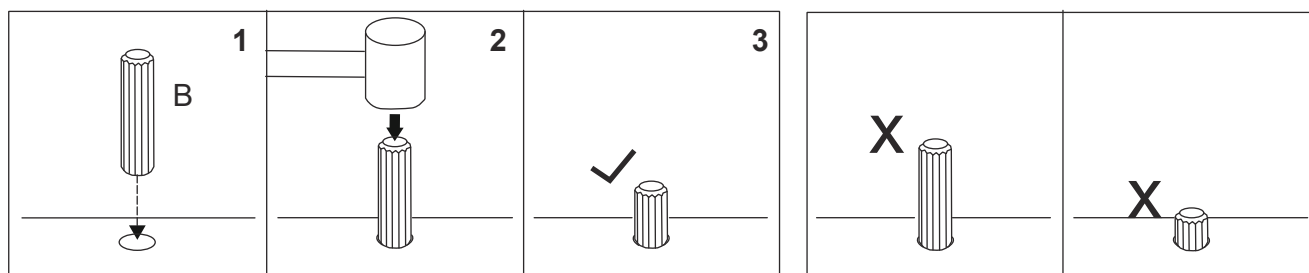

How to use the Cam Lock system

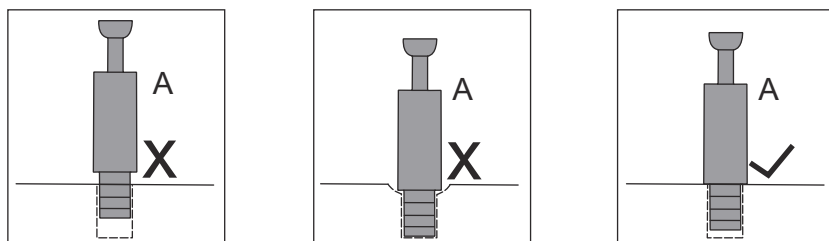


1. Screw the cam bolt [A] into the threaded insert on the panel.
2. Connect both panels together making sure cam bolt [A] goes into the pre-drilled large hole on the end of panel for cam lock [C].
3. Insert the cam lock [C] into the pre-drilled large hole on the panel. **Make sure the cross slot of cam lock [C] faces out.**
4. Rotate the cam lock [C] **clockwise** with a self-supplied philips screwdriver to lock the cam bolt [A] in place.

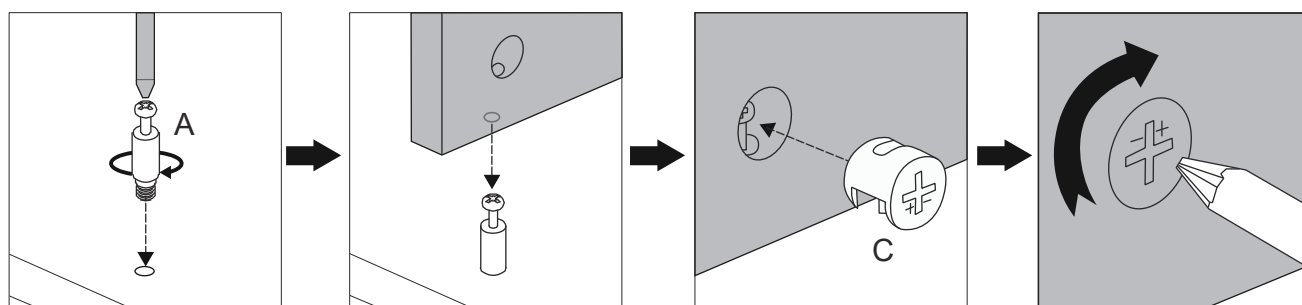


Before installing the product, observe the general structure.

It is divided into 5 parts in total:

1. Install the Boards and Slides(②&③&⑥&⑦)
2. Install the Top Panel (①) & Frame Part (⑧&⑨&⑩& ⑪)
3. Install the Back Panel (⑰)
4. Install the Drawers
5. Install the Drawers Slides

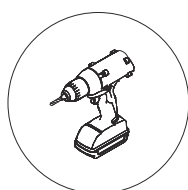


We recommend using a power drill to assemble.

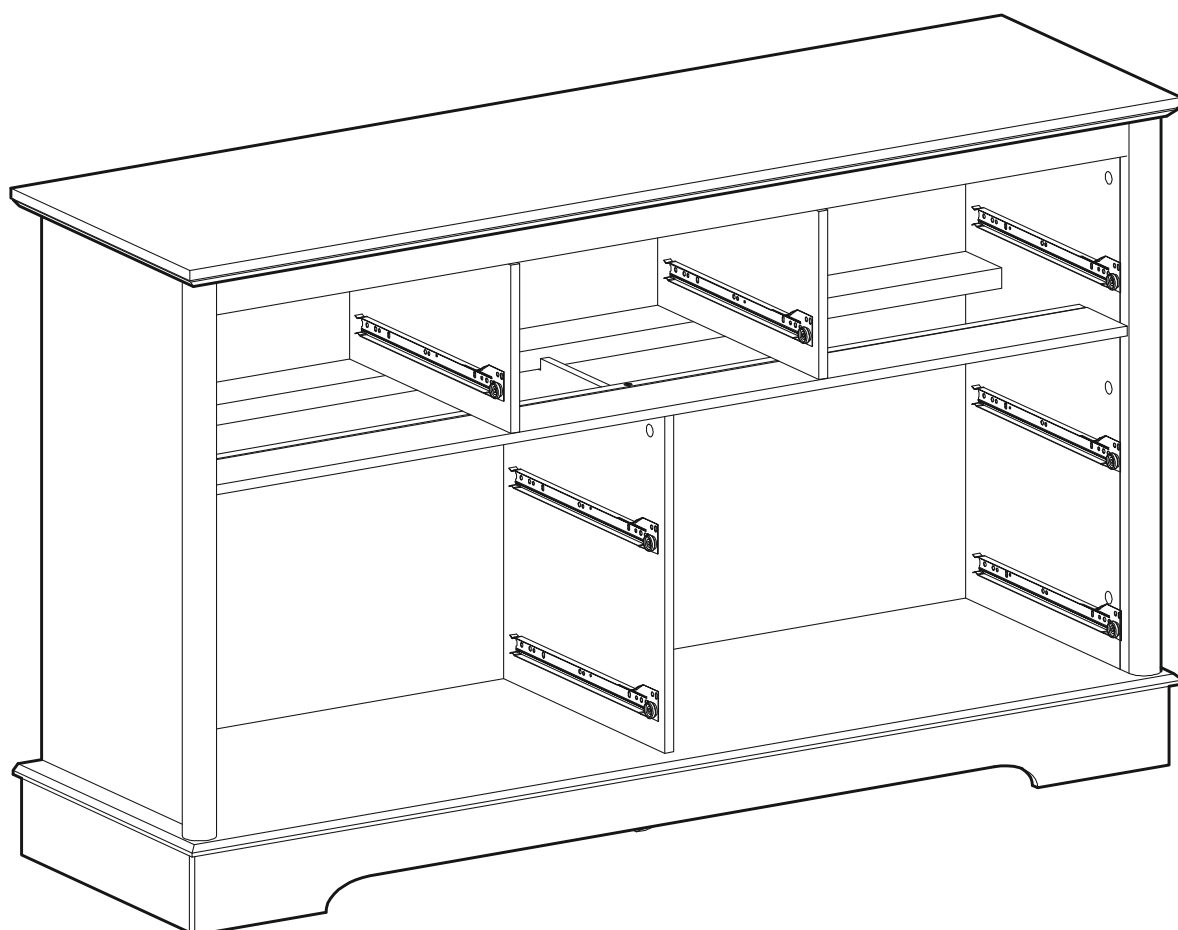

Step 1


Using Screws (D) to assemble Slide (CL) to Board (⑥).

Screwing one more screw in this position for reinforcement.

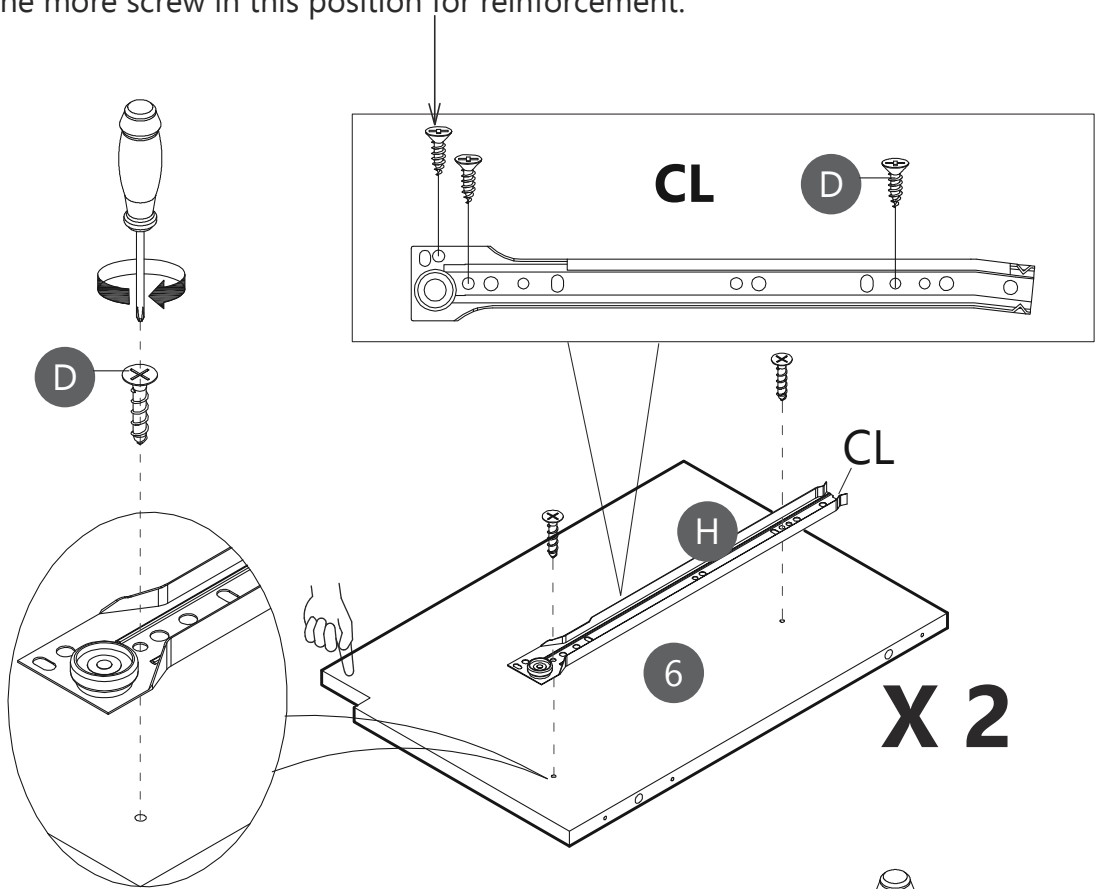


Using Screws (D) to assemble Slide (CR) to Board (⑥).

Screwing one more screw in this position for reinforcement.

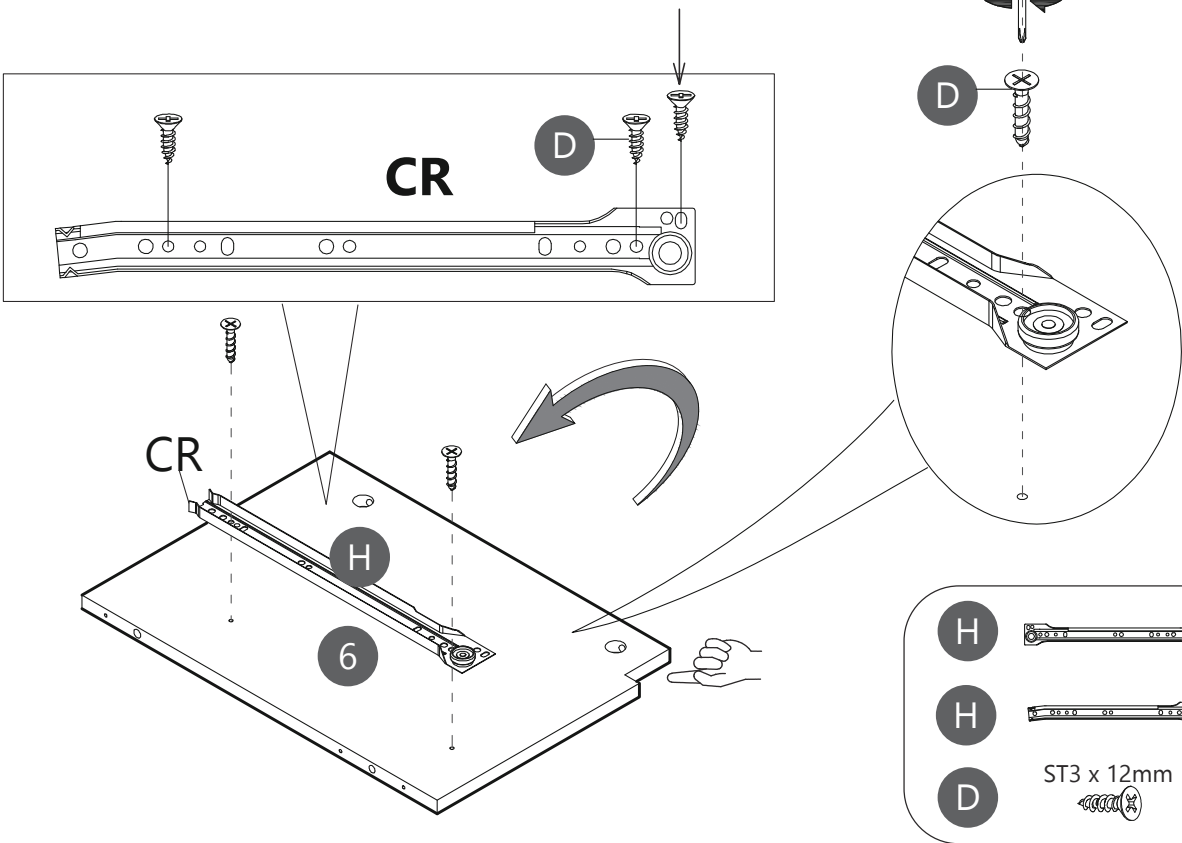

Display. Non-installation steps

Reference to the completion of the installation:
checking the position of the slides and screws in the board.

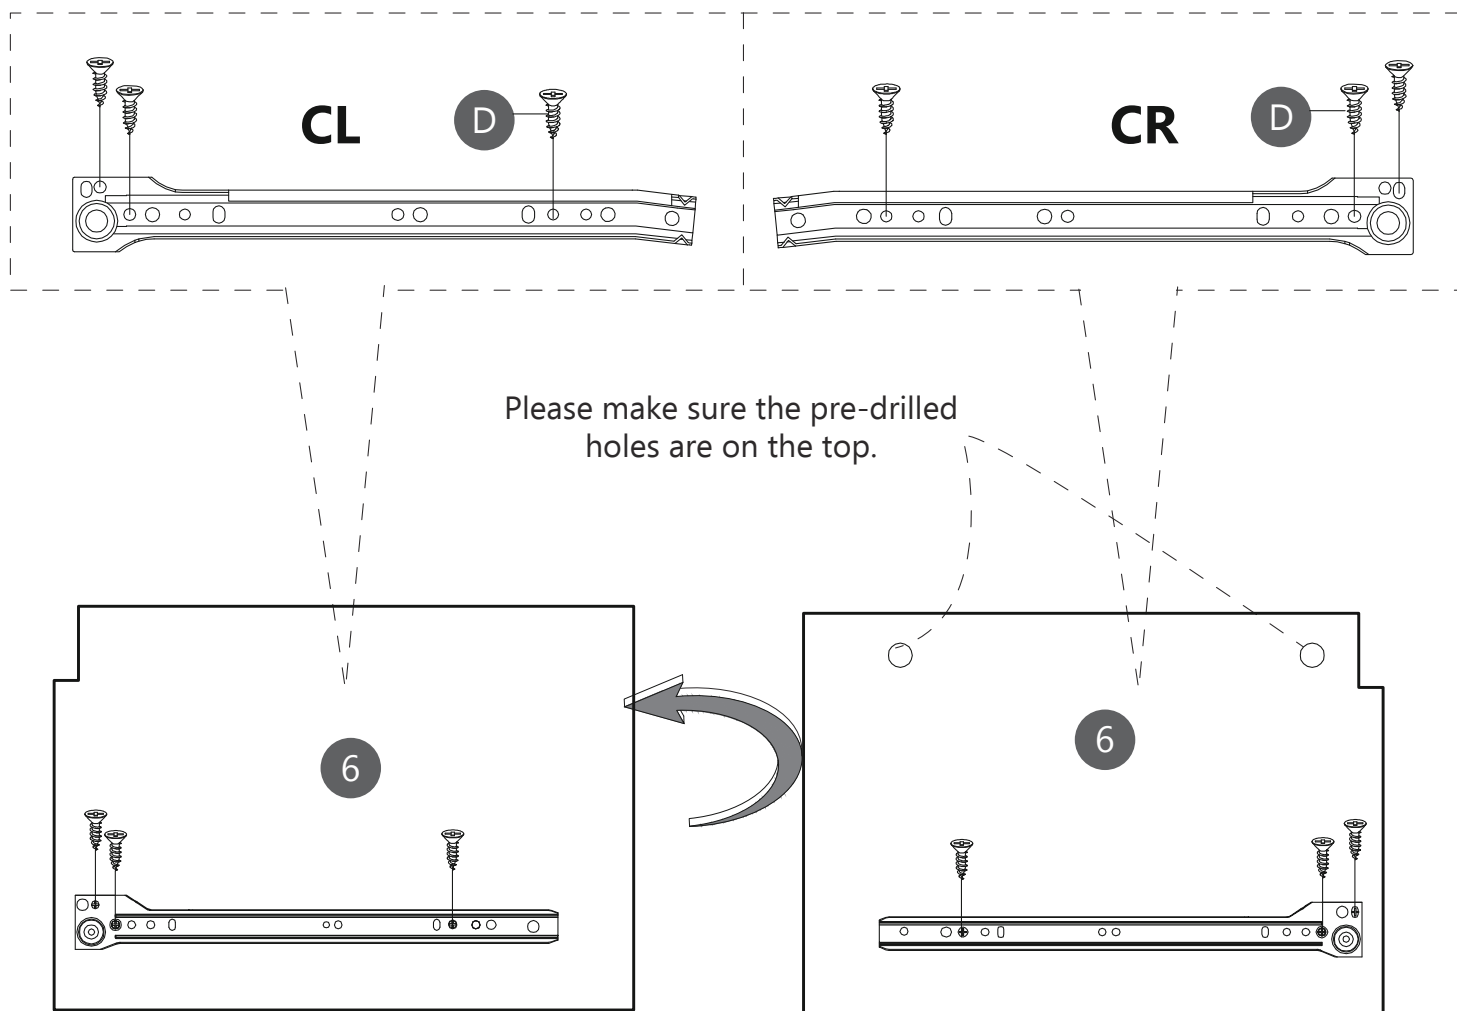


TIP: The screws for the slide must be tightened very tightly, and don't tilt the screws, otherwise the drawers will get stuck and won't fit in.

Step 2


Using Screws (D) to assemble Slide (CL) to Board (⑦).

Screwing one more screw in this position for reinforcement.

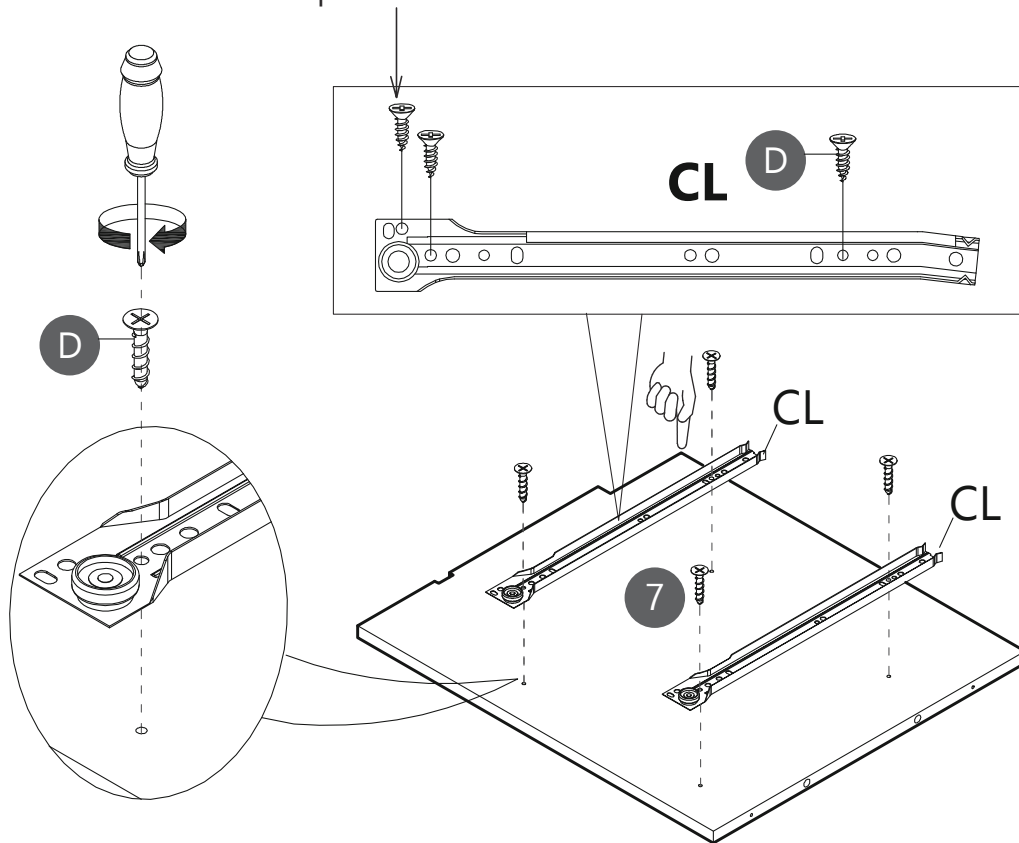


Using Screws (D) to assemble Slide (CR) to Board (⑦).

Screwing one more screw in this position for reinforcement.

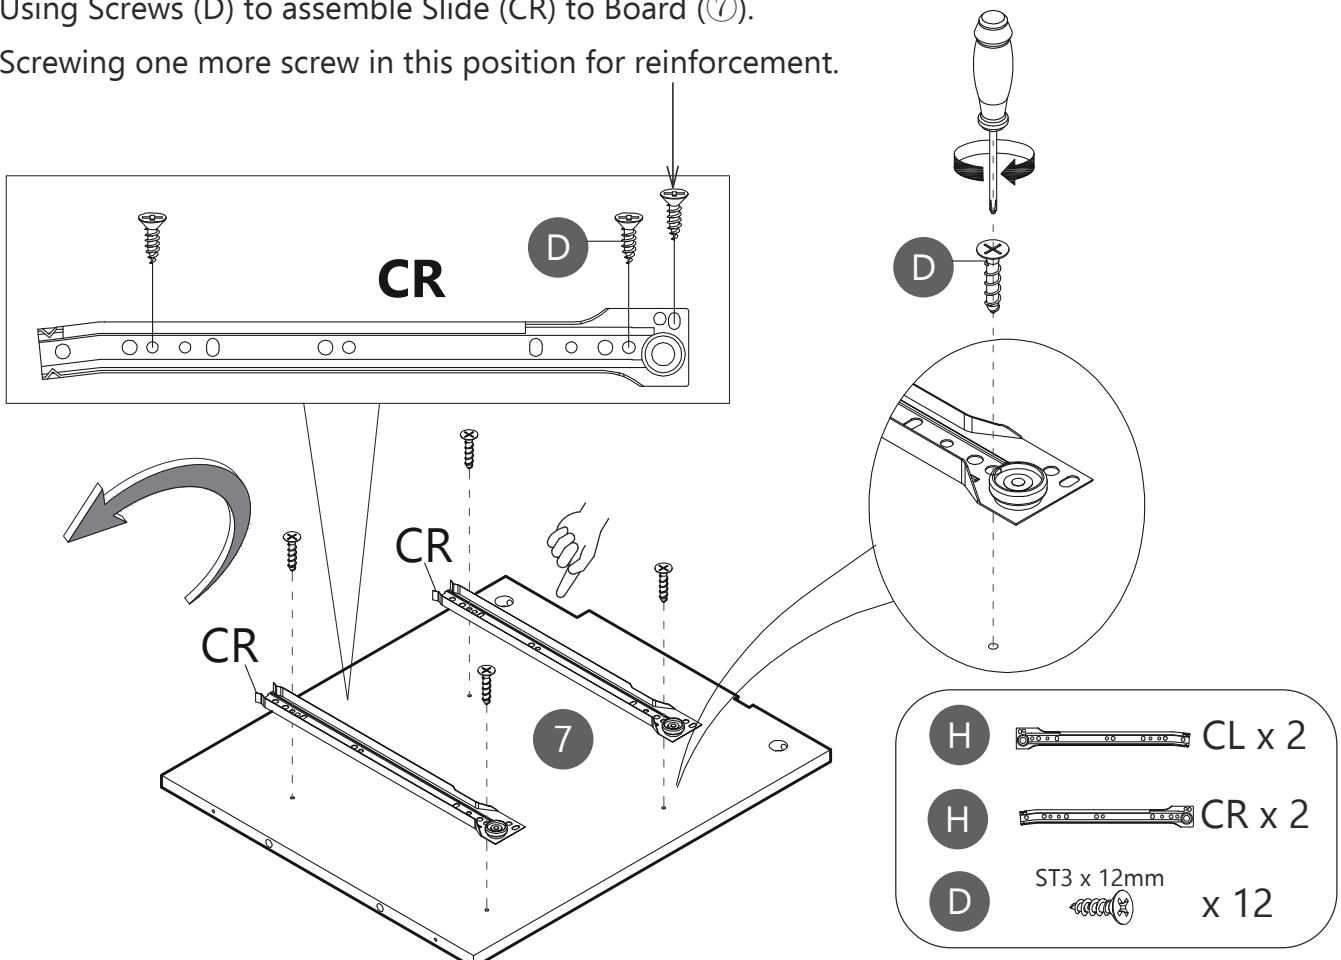

Display. Non-installation steps


Reference to the completion of the installation:
checking the position of the slides and screws in the board.

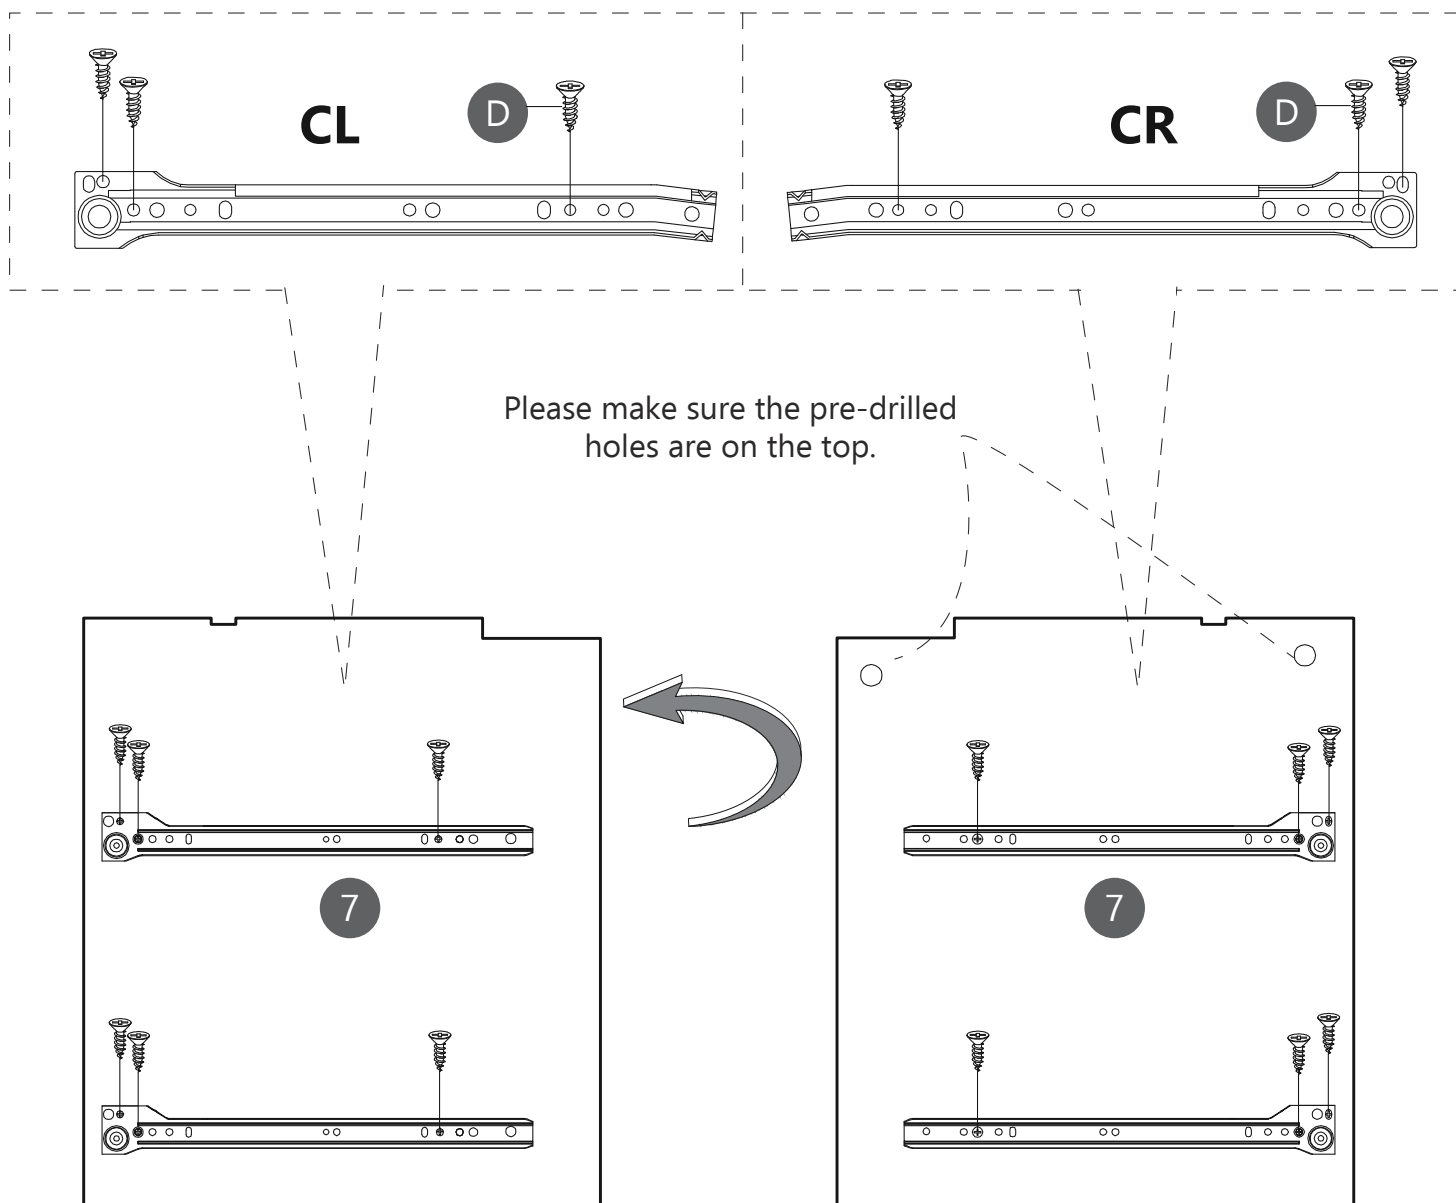



TIP: The screws for the slide must be tightened very tightly, and don't tilt the screws, otherwise the drawers will get stuck and won't fit in.

Step 3

Inserting Wooden Dowel (C) into Board (⑥), then attach Board (⑥) to Board (⑨&⑩). Using Screws (L) secure Board (⑥) to Board (⑨&⑩).

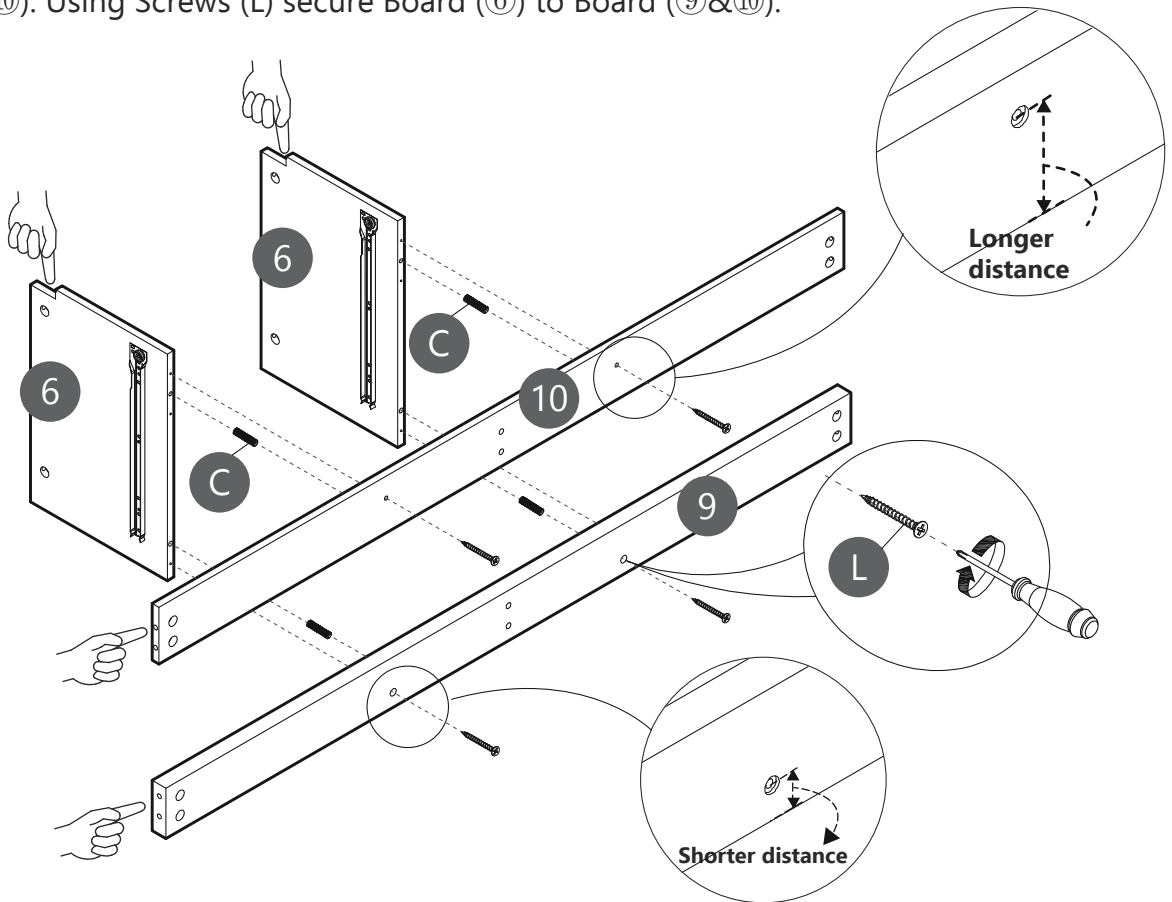


Securing Cam Bolt (A) into Board (⑨&⑩).

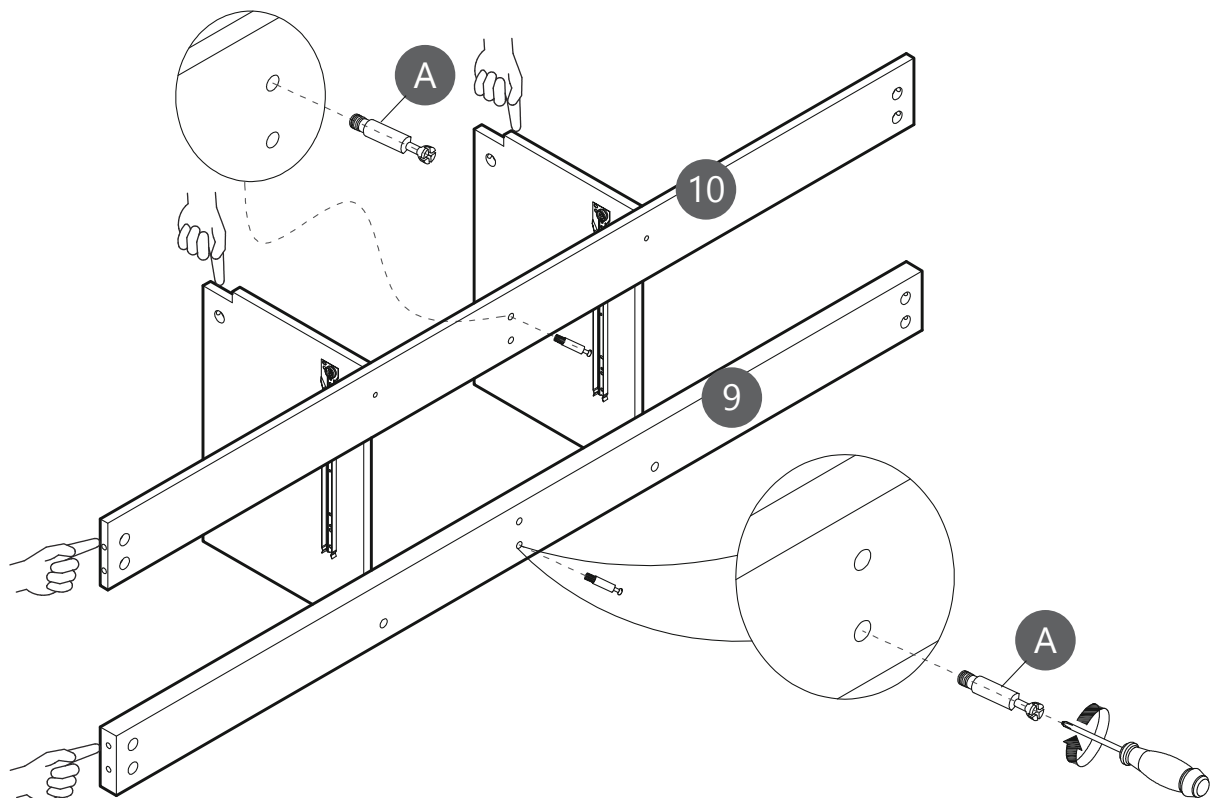



Step 4

Using Screws (K) secure Steel Pipe (27) to Board (7).

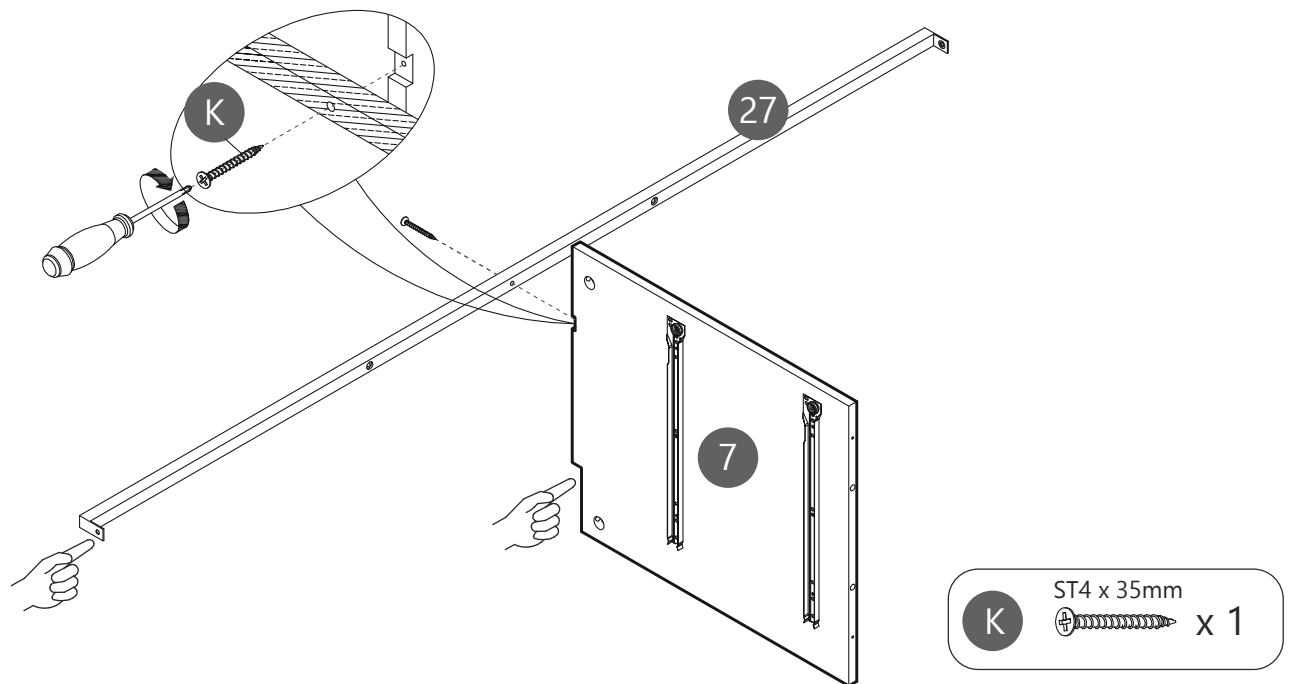


Step 5

Inserting Wooden Dowel (C) into Board (9&10), then attach Board (9&10) to Board (7). Using Cam Lock (B) secure Board (9&10) to Board (7).

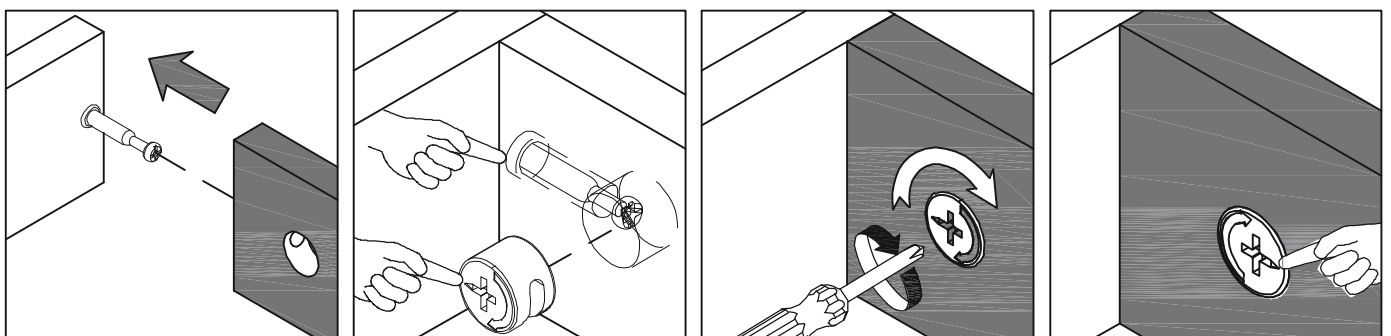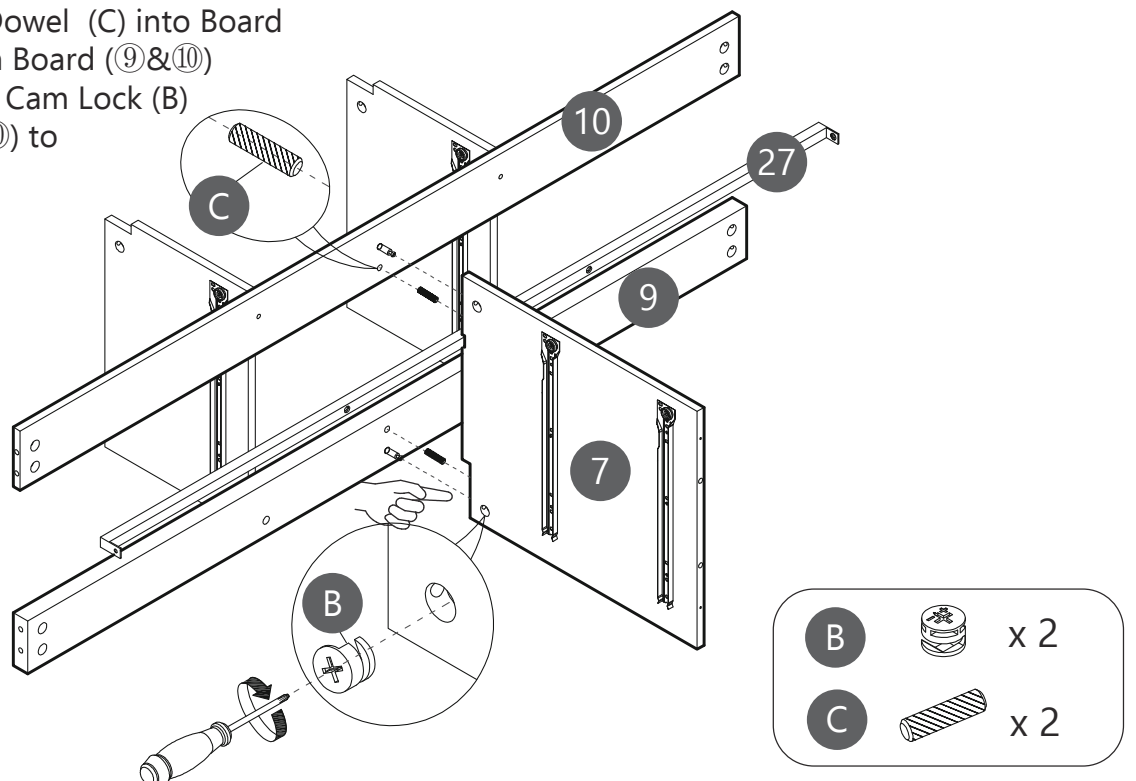


Step 6

Securing Cam Bolt (A) into Board (④&⑤).

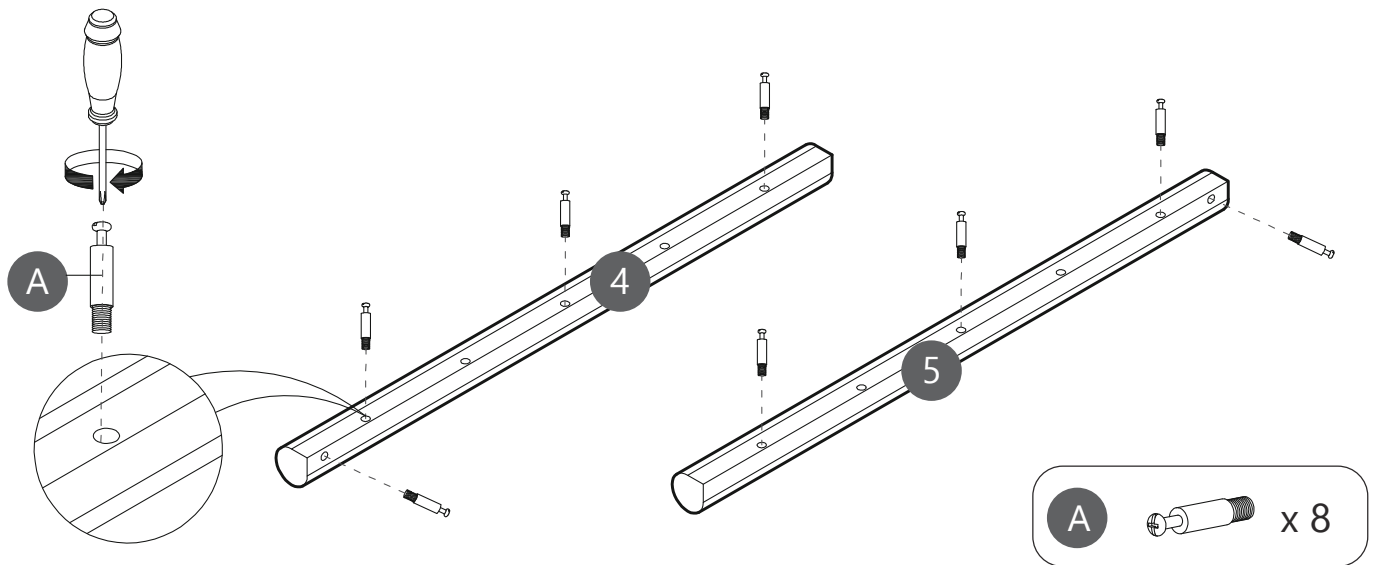


Step 7

Inserting Wooden Dowel (C) into Board (②), then attach Board (②) to Board (④).
Using Cam Lock (B) secure Board (②) to Board (④).

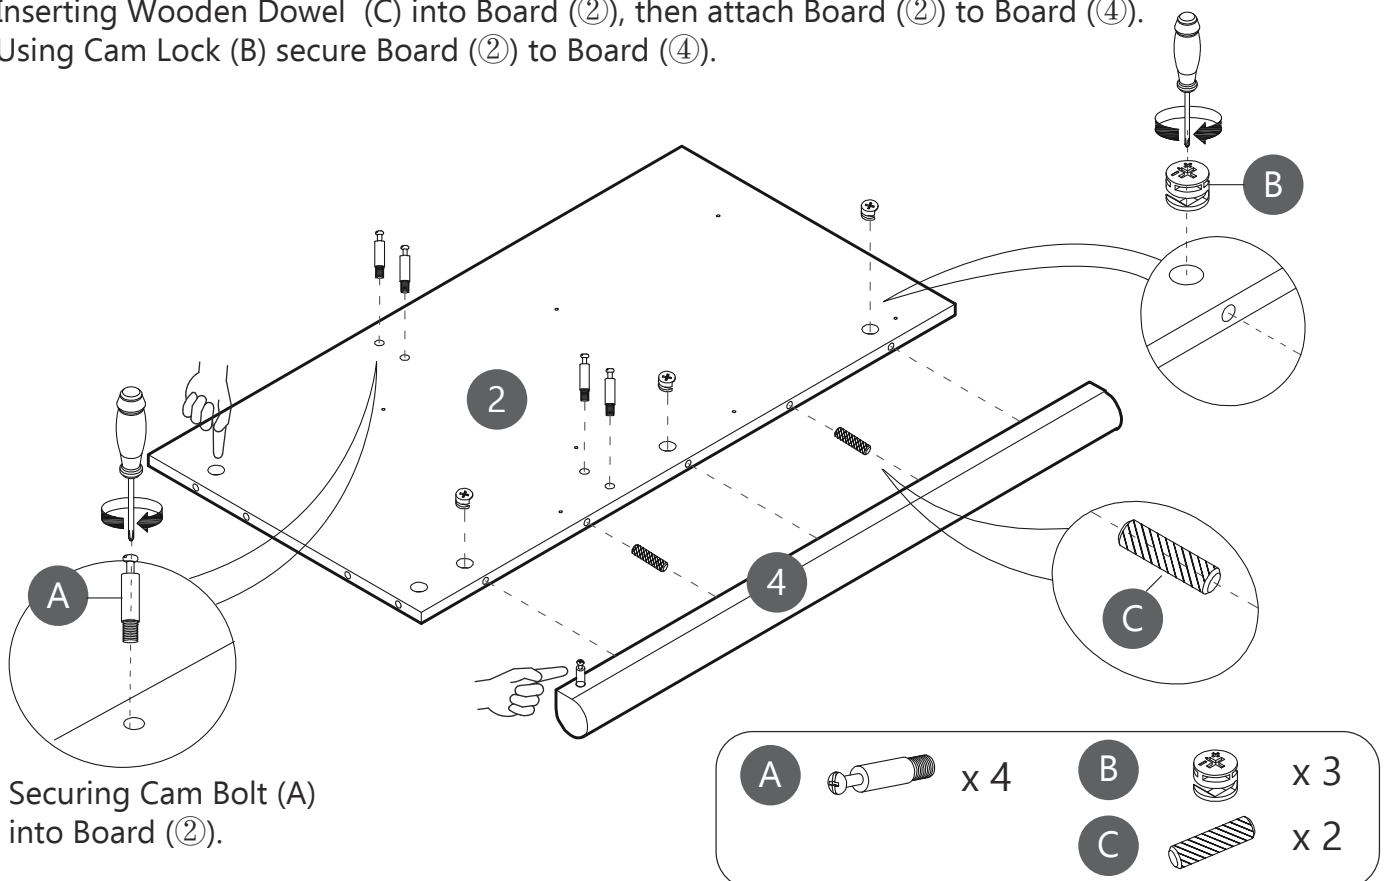



Securing Cam Bolt (A)
into Board (②).




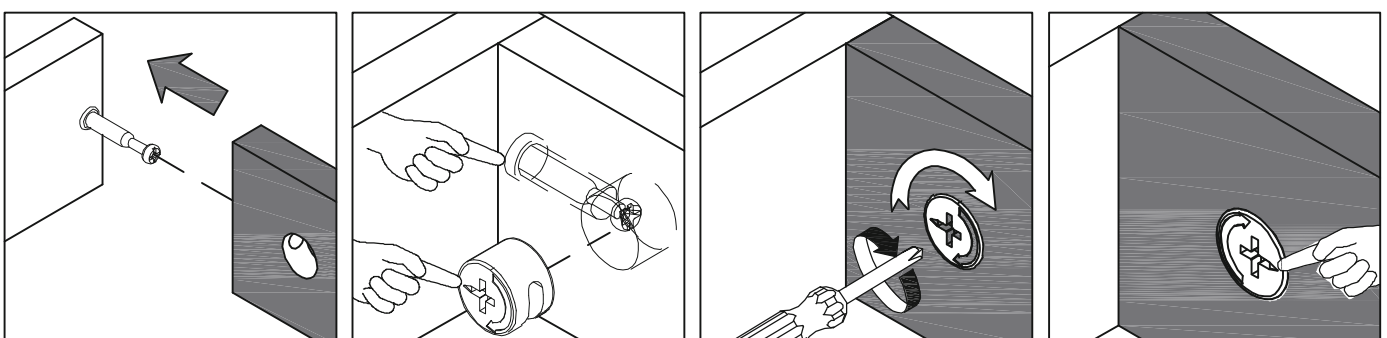


Step 6

Inserting Wooden Dowel (C) into Board (③), then attach Board (③) to Board (⑤). Using Cam Lock (B) secure Board (③) to Board (⑤).

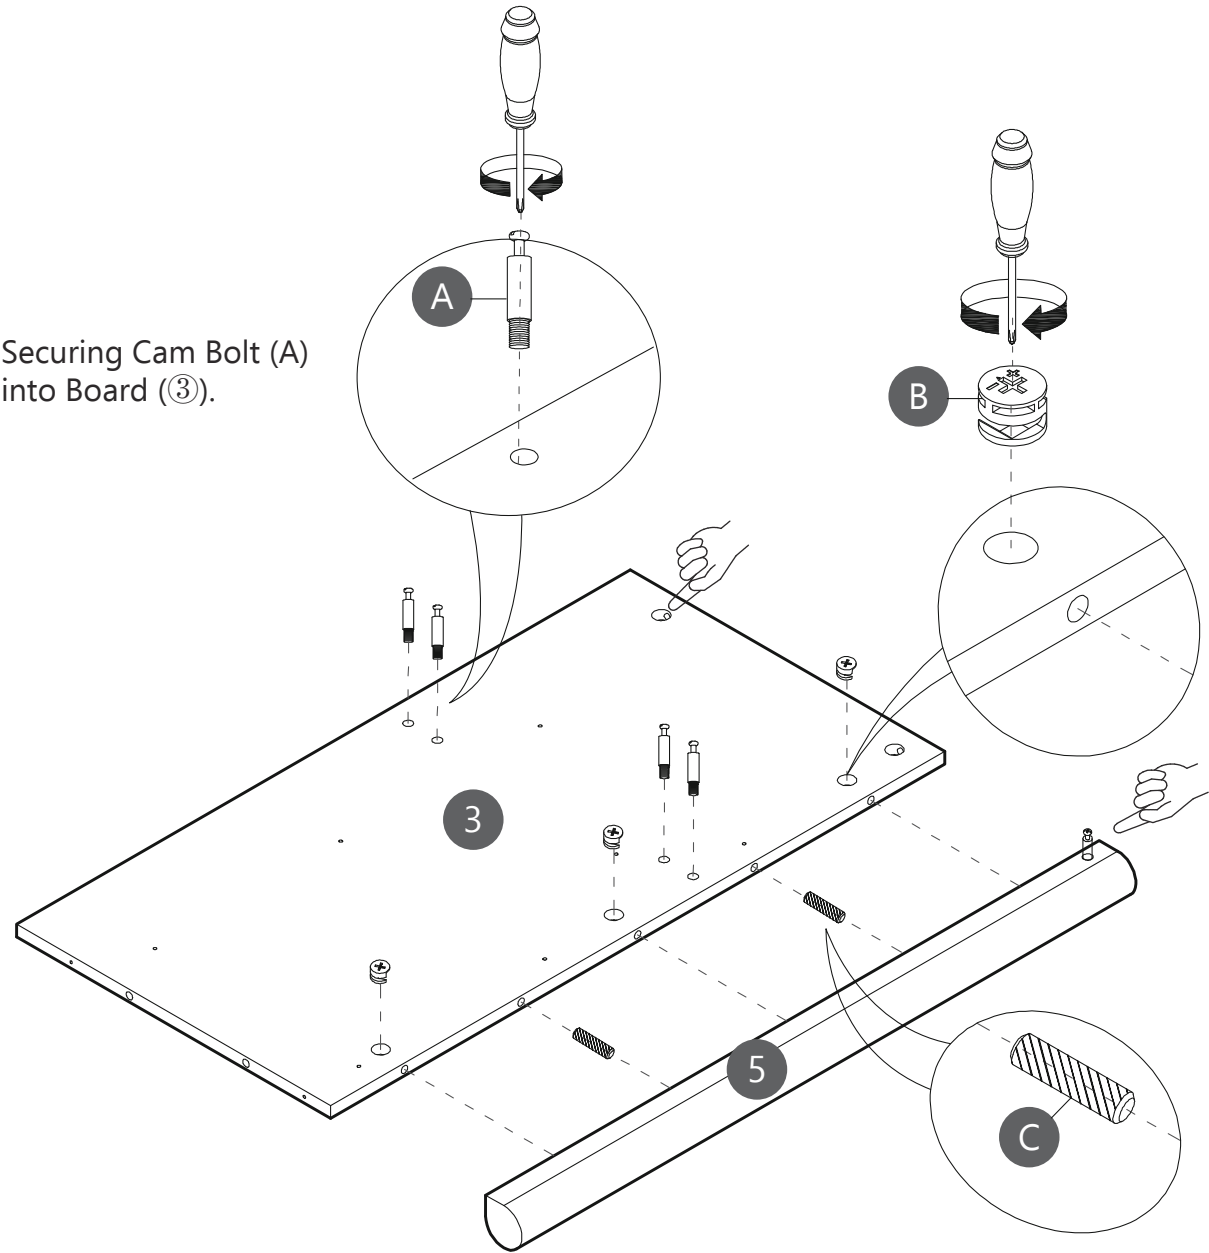


- | | | | | | |
|----------|--|-----|----------|---|-----|
| A |  | x 4 | B |  | x 3 |
| | | | C |  | x 2 |

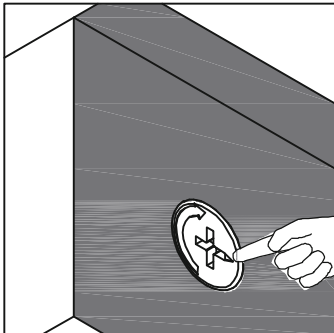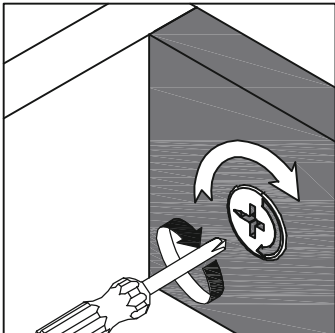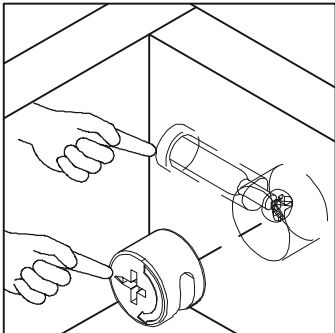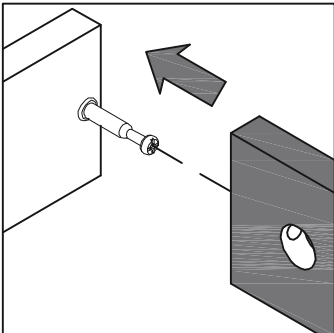

Step 8

Using Screws (D) to assemble Slide (CL) to Board (②).


Screwing one more screw in this position for reinforcement.

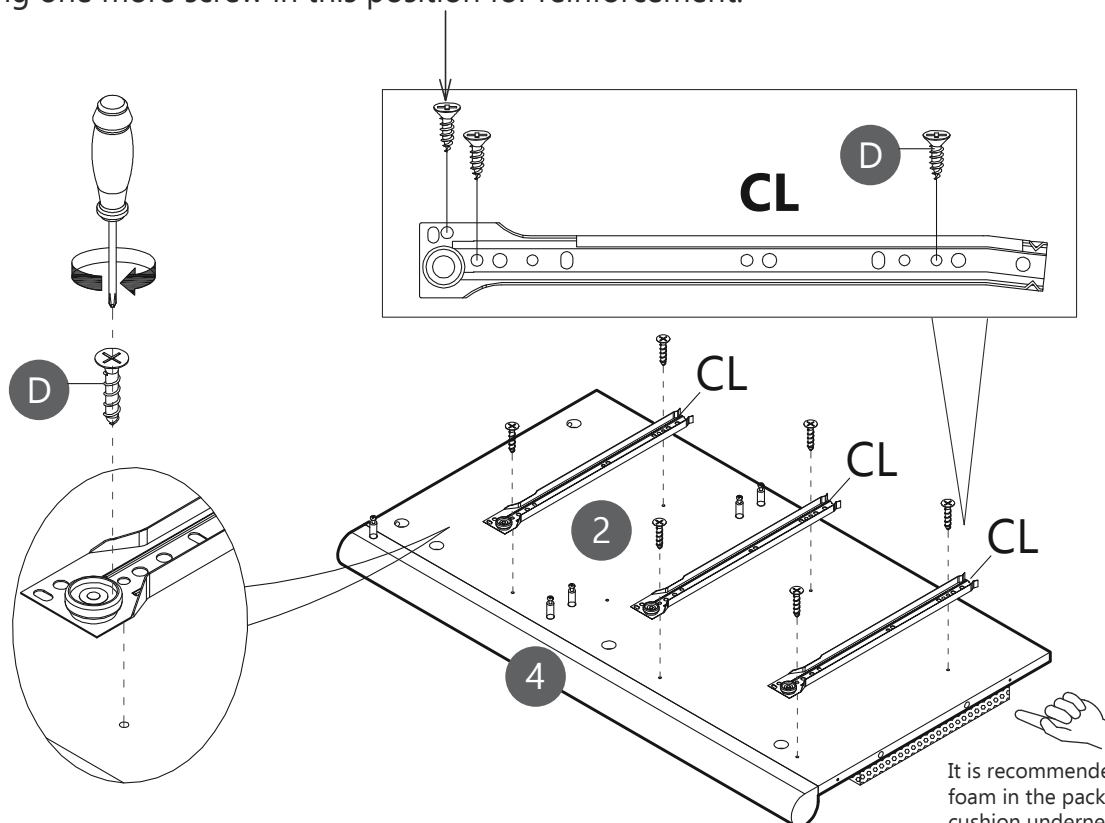

It is recommended to use the foam in the packaging as a cushion underneath, which will make it easier to install the rail.

Using Screws (D) to assemble Slide (CR) to Board (③).


Screwing one more screw in this position for reinforcement.

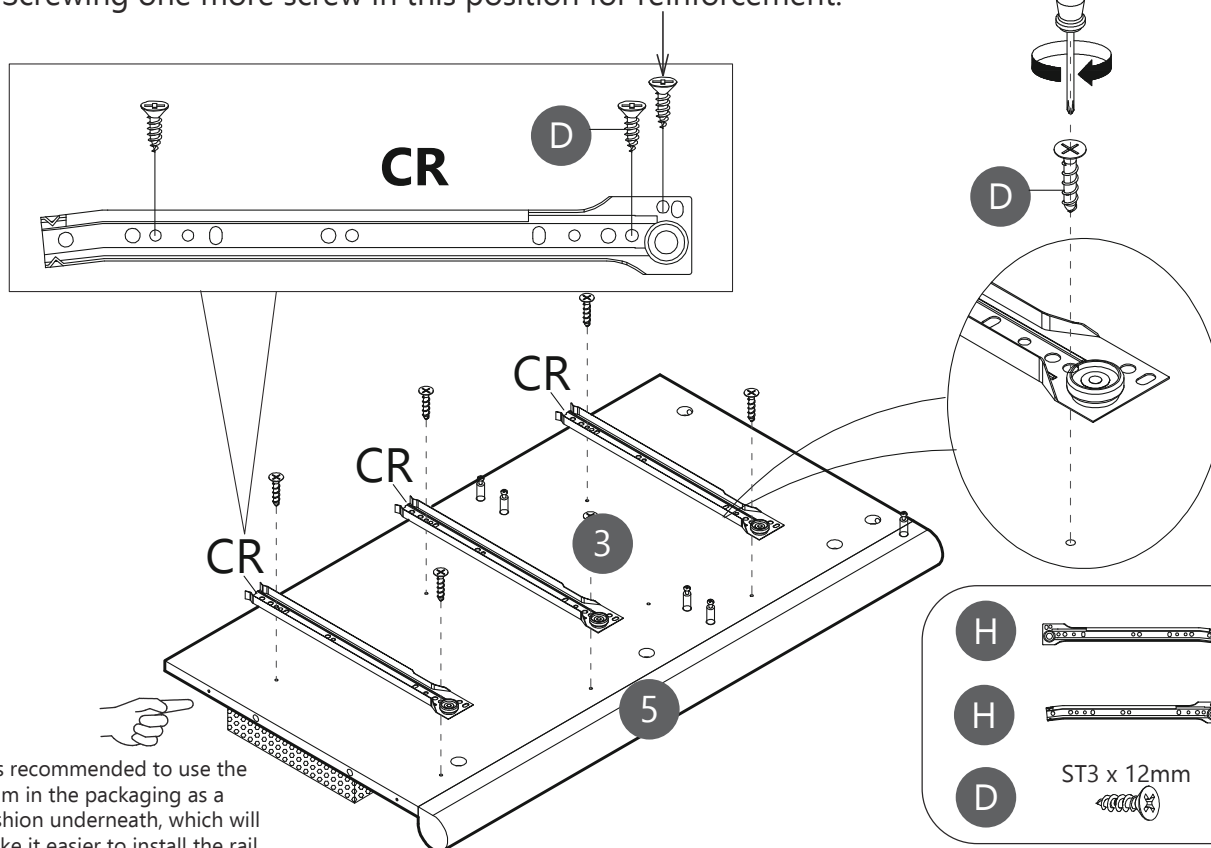

It is recommended to use the foam in the packaging as a cushion underneath, which will make it easier to install the rail.

Display. Non-installation steps


Reference to the completion of the installation:
checking the position of the slides and screws in the board.

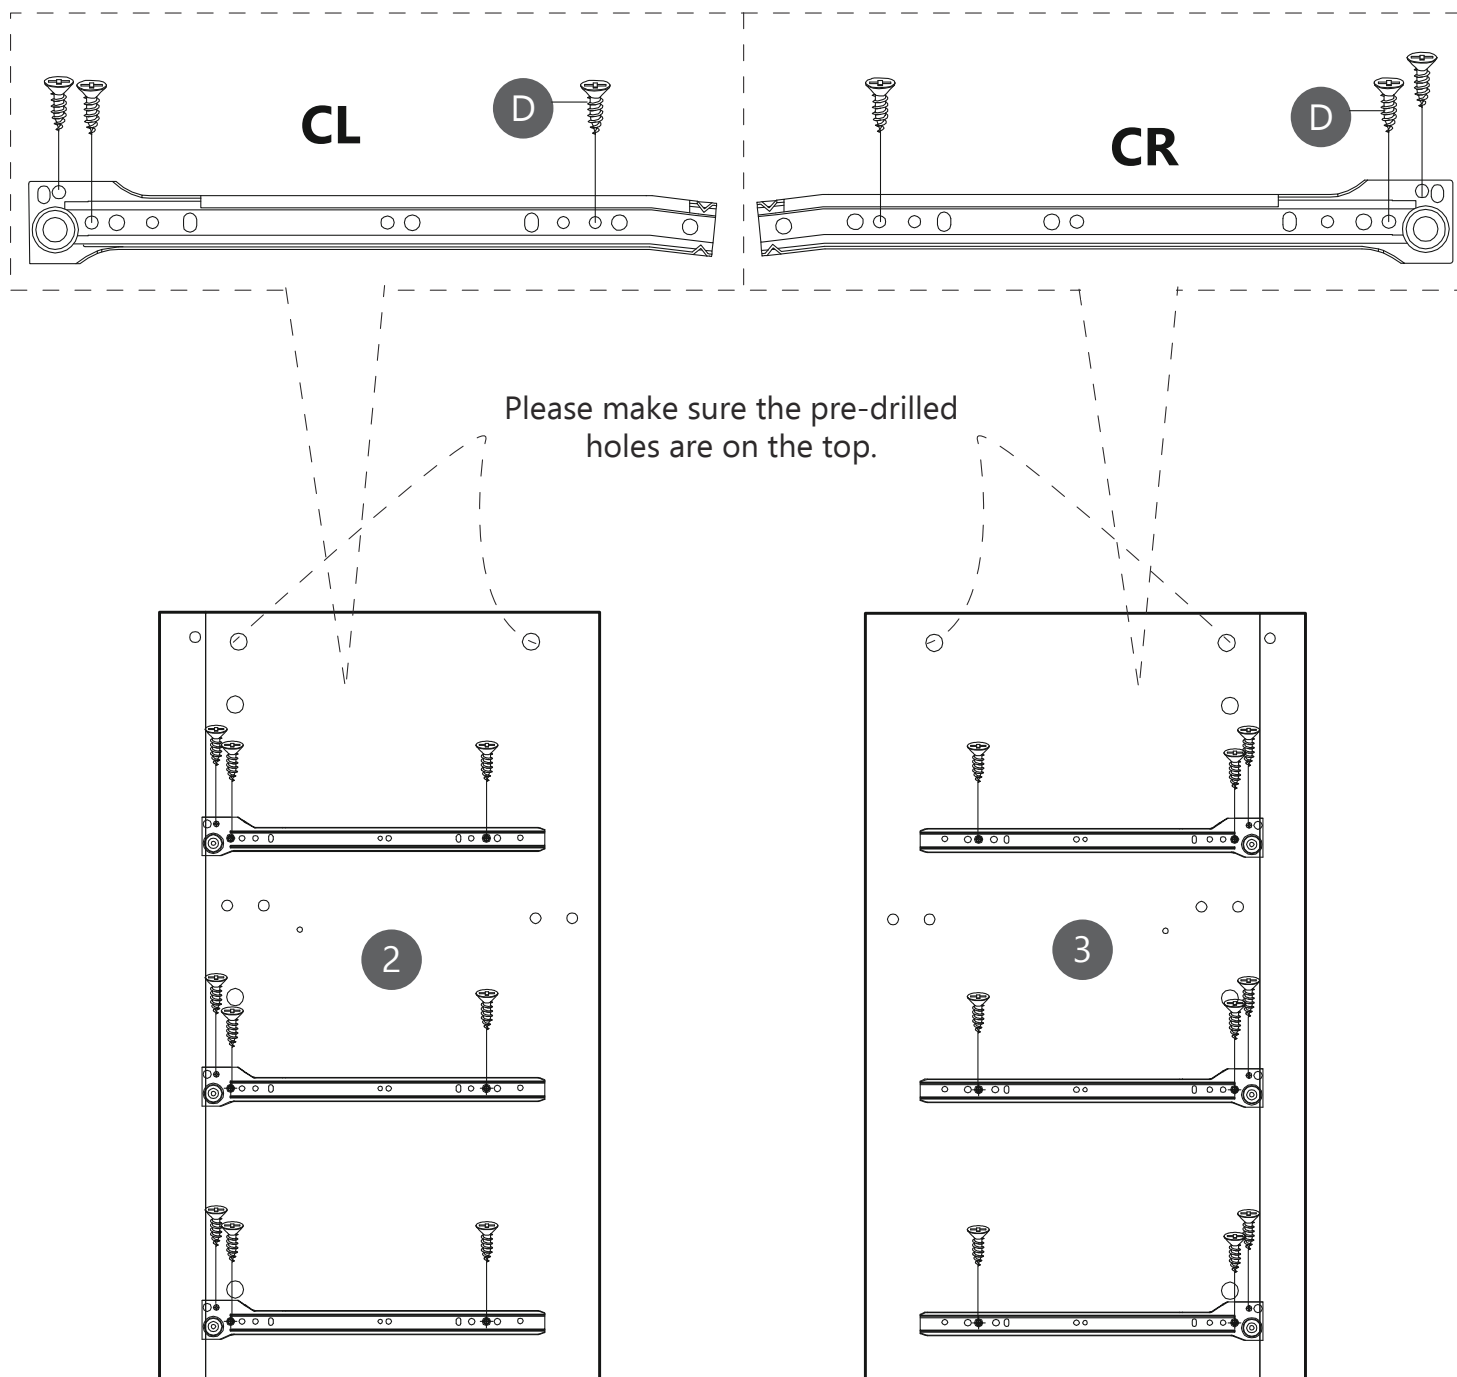

TIP: The screws for the slide must be tightened very tightly, and don't tilt the screws, otherwise the drawers will get stuck and won't fit in.



Step 9

Using Cam Lock (B) secure Board (2) to Board (8&9&10).

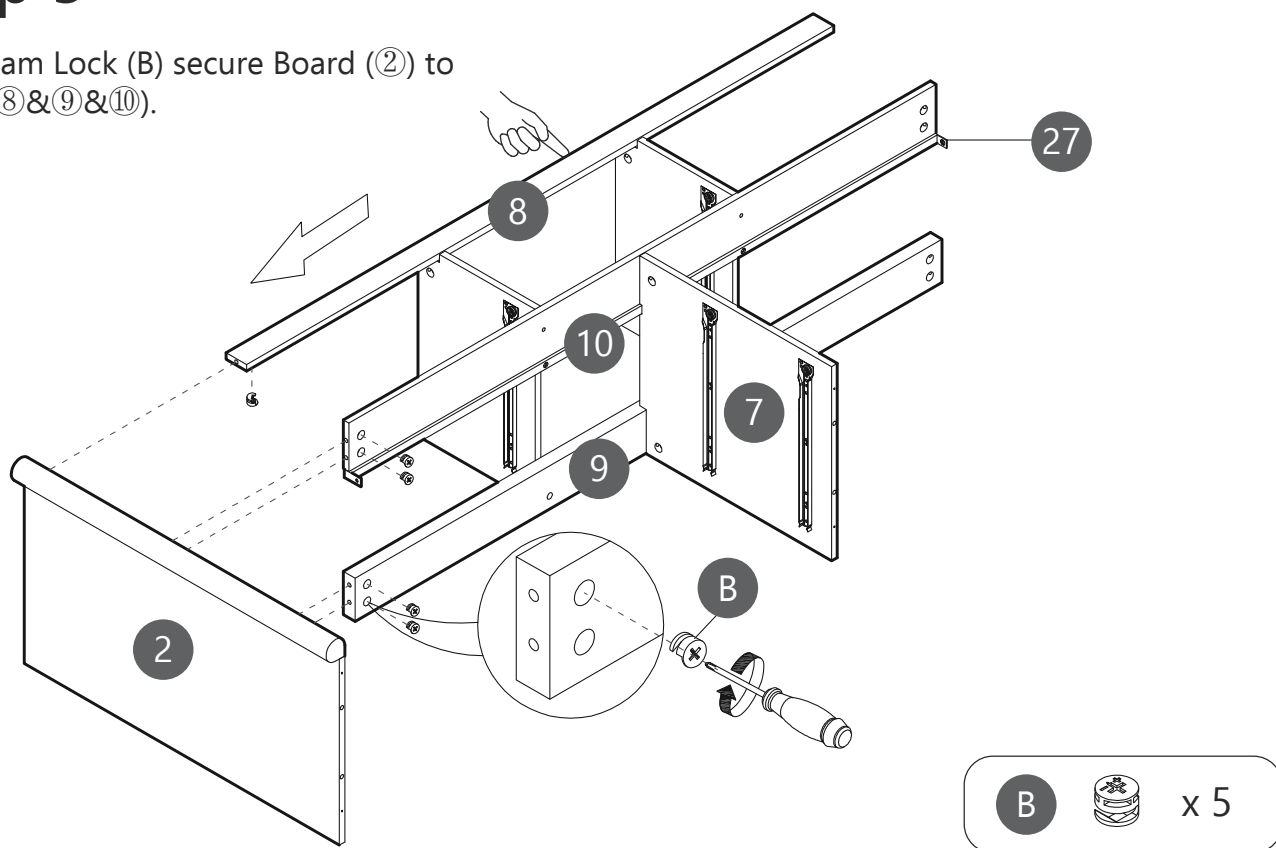


Step 10

Using Cam Lock (B) secure Board (③) to Board (⑧&⑨&⑩).

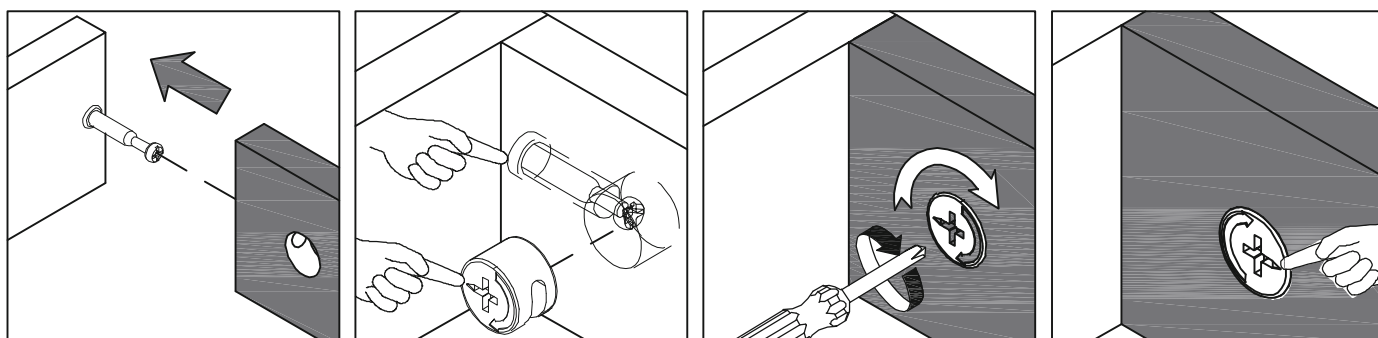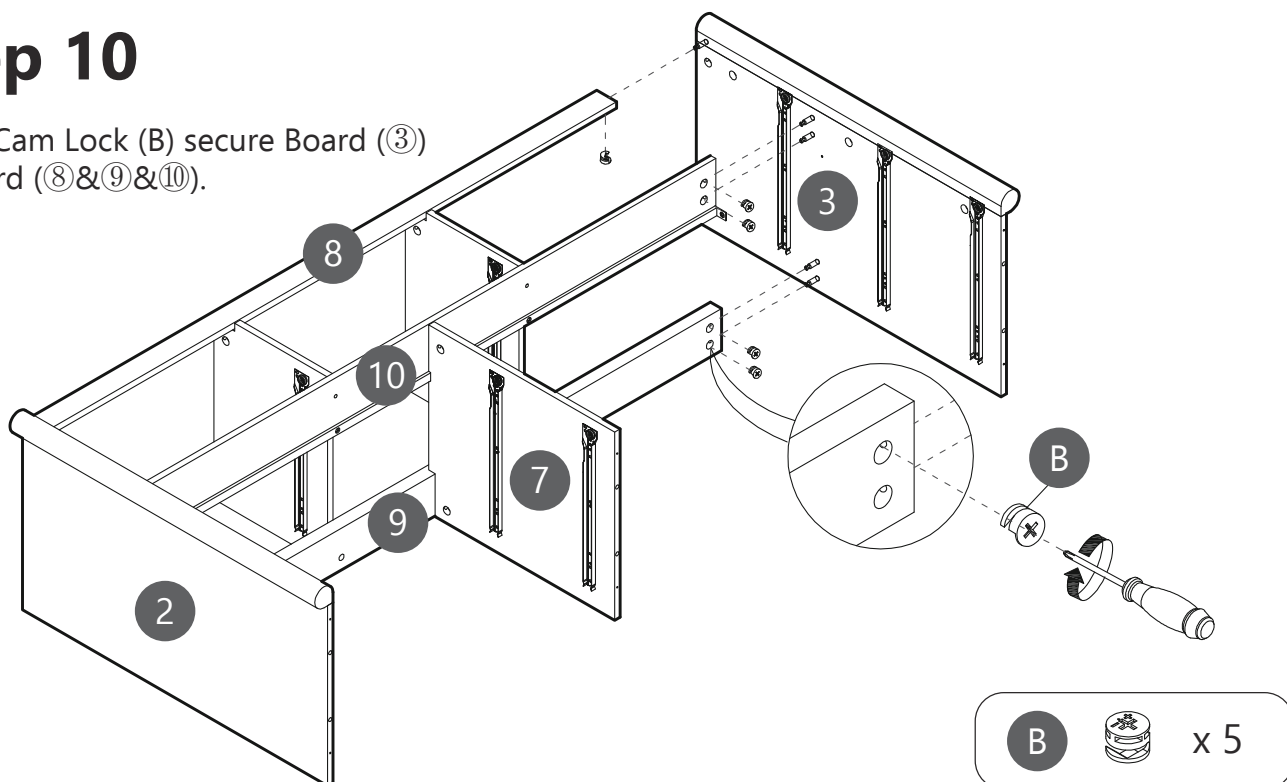


Step 11

Using Screws (E) secure Steel Pipe (27) to Board (2&3).
Using Screws (K) secure Steel Pipe (27) to Board (6).

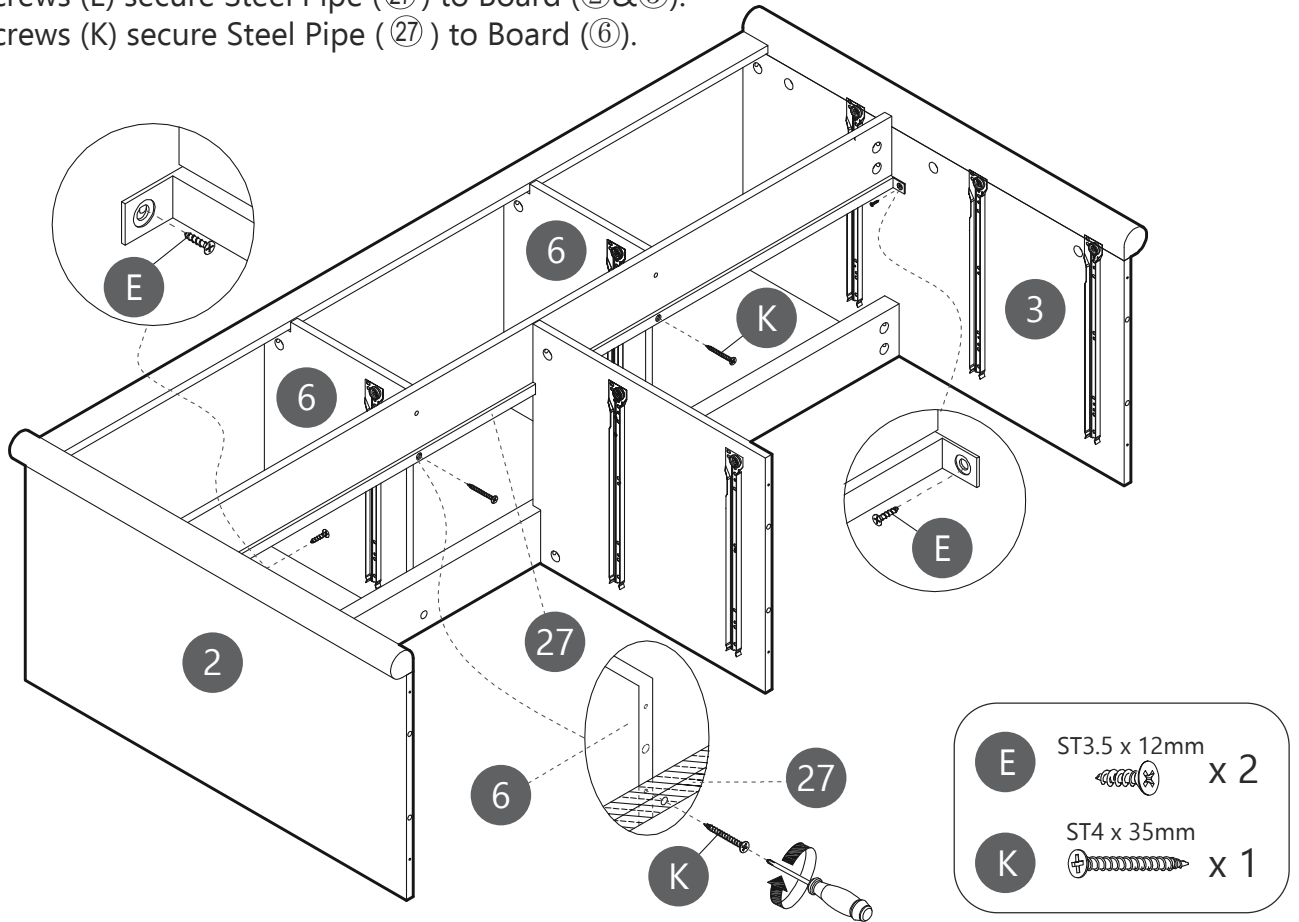


Step 12

Securing Cam Bolt (A) into Board (11).

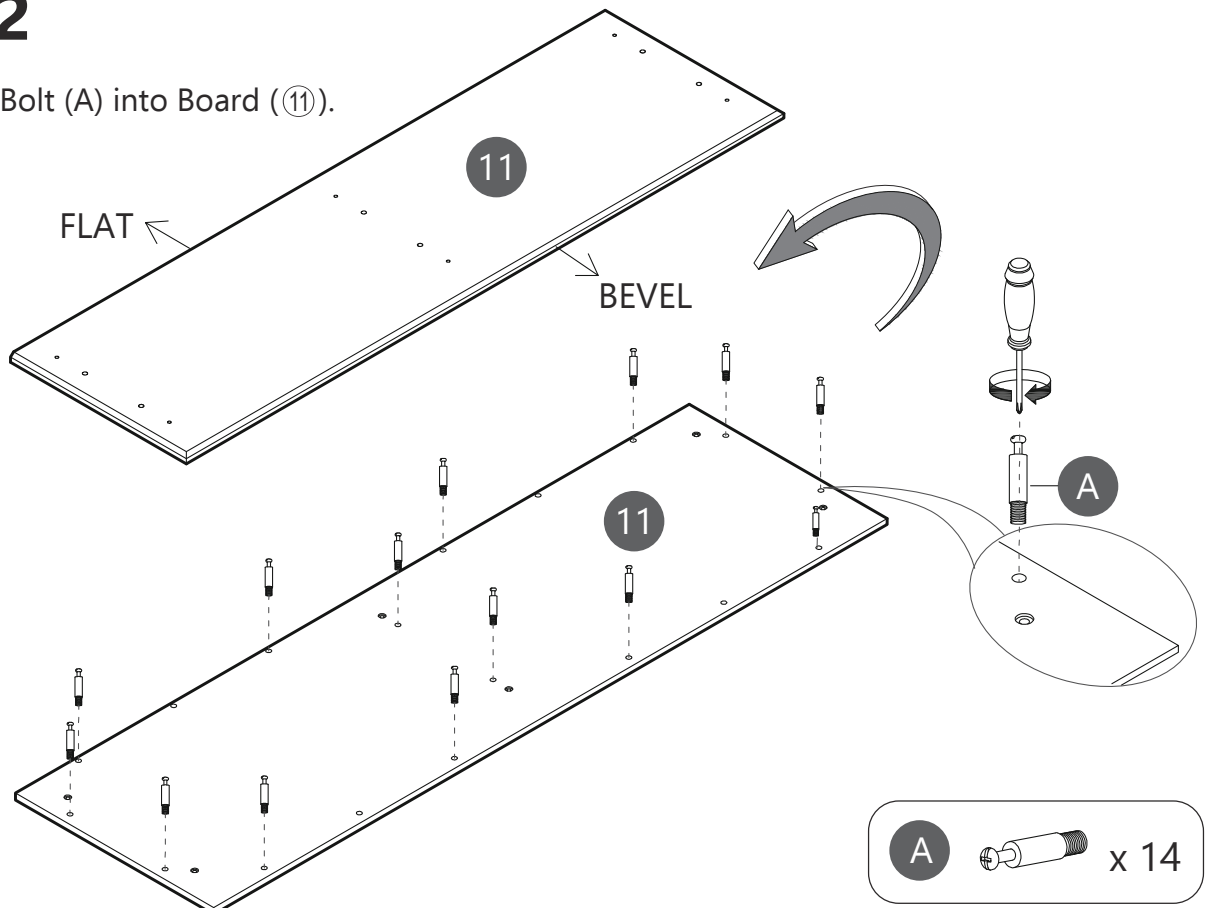


Step 13

Inserting Wooden Dowel (C) into Board (②&③&⑦), then attach Board (⑪) to Board (②&③&⑦). Using Screws (L) secure Board (⑪) to Board (②&③&⑦).

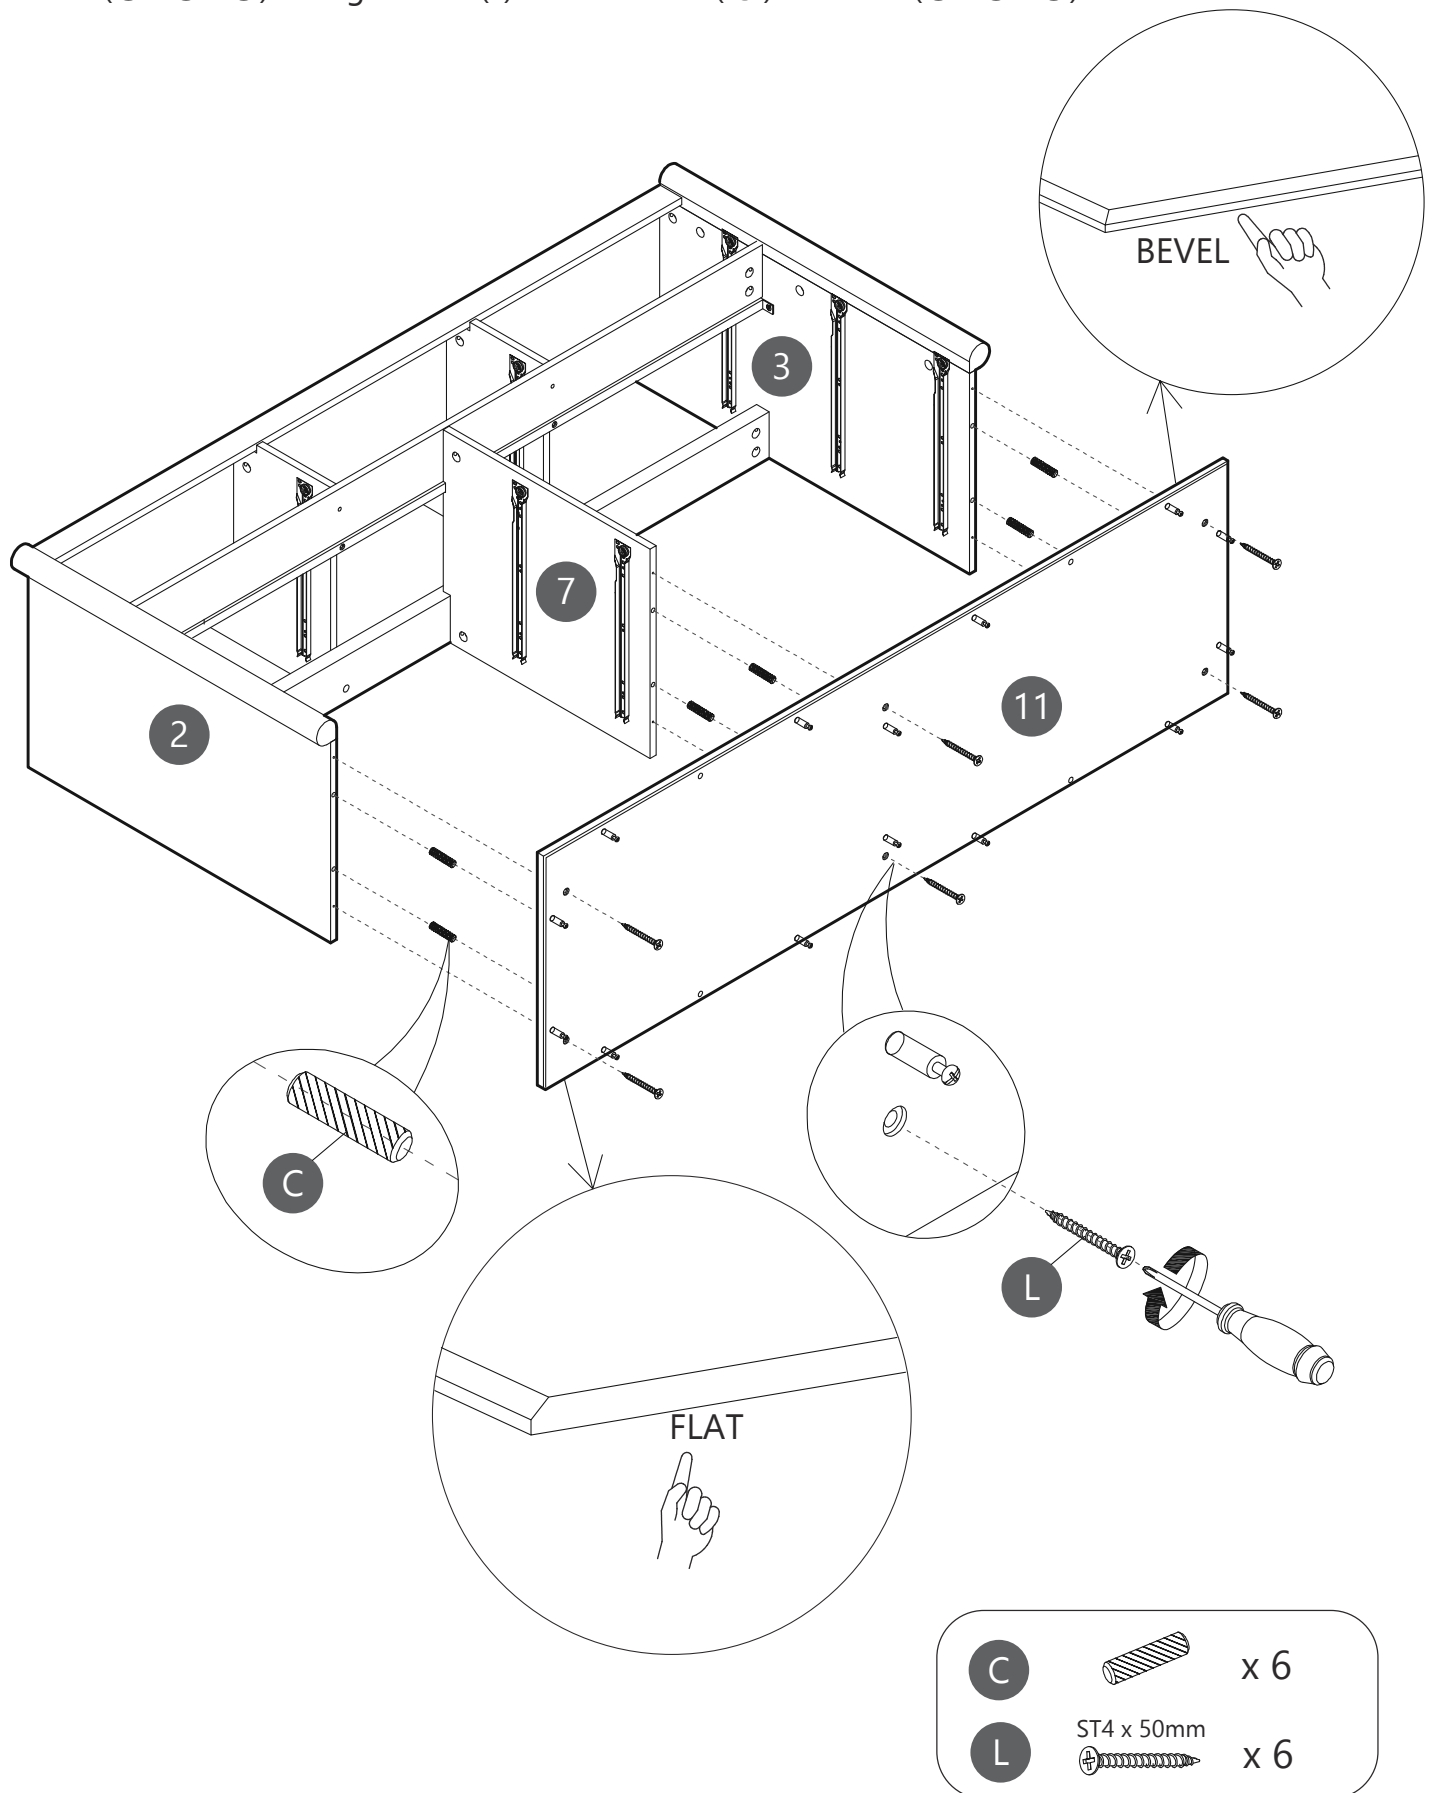



Step 14

Securing Cam Bolt (A) into Board (12 & 13 & 14 & 15).

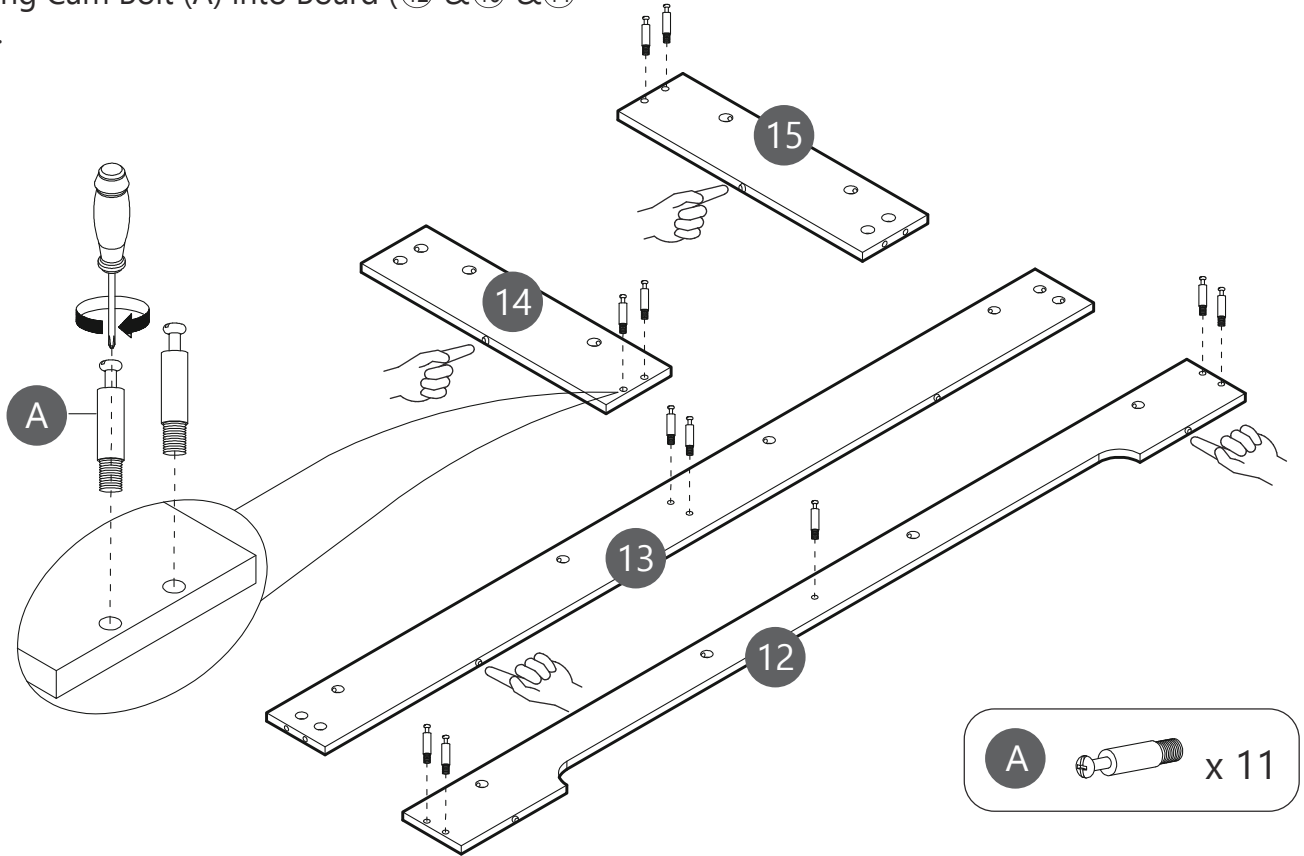


Step 15

Attach Board (14 & 15 & 16) to Board (13).
Using Cam Lock (B) secure Board (14 & 15 & 16) to Board (13).

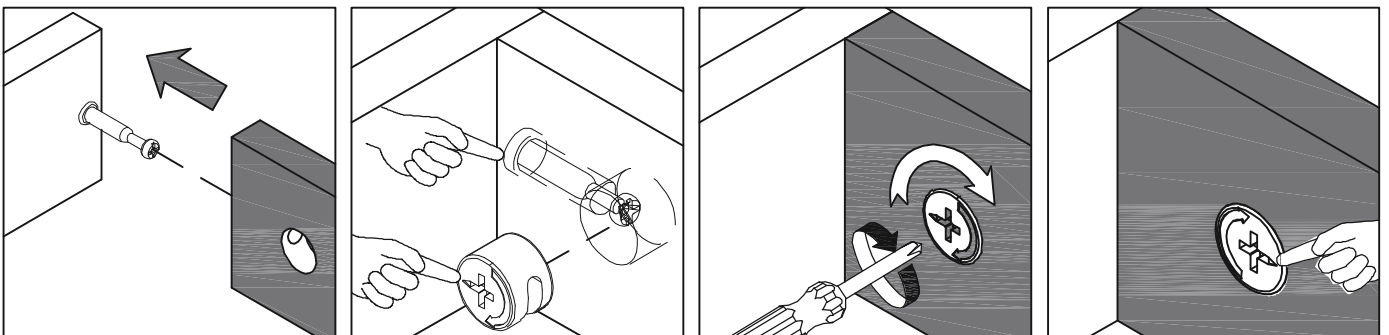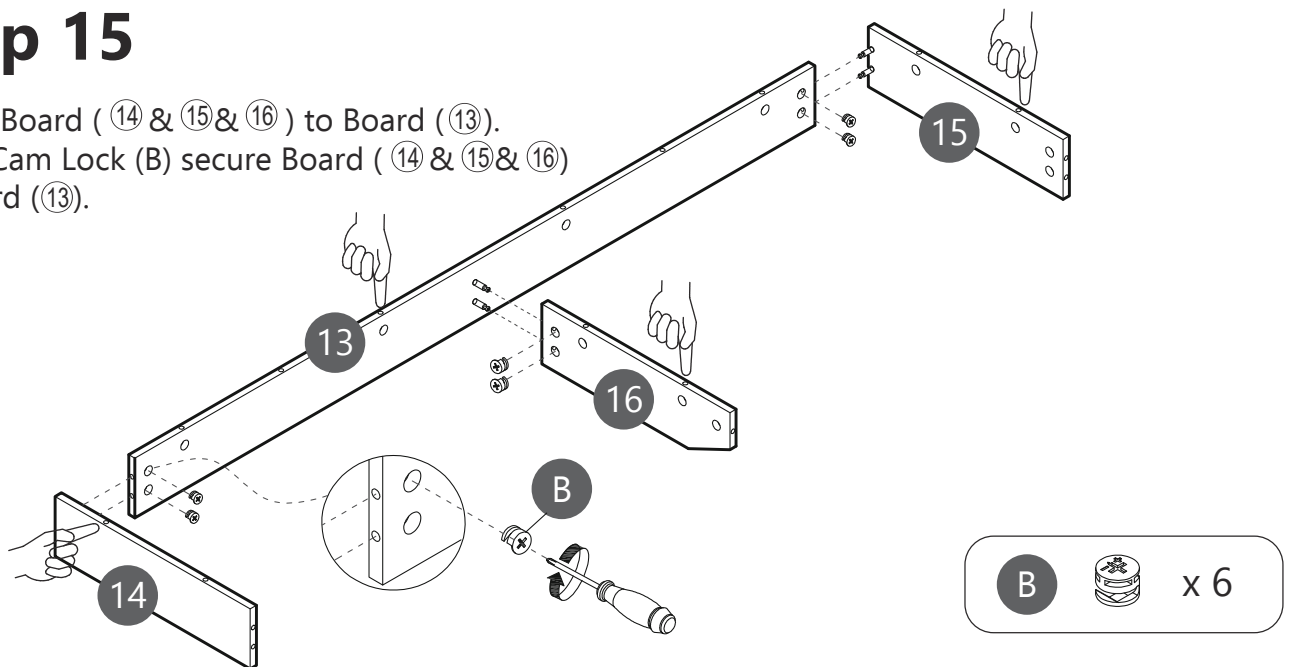



Step 16

Attach Board (⑭ & ⑮ & ⑯) to Board (⑫).
Using Cam Lock (B) secure Board (⑭ & ⑮ & ⑯)
to Board (⑫).

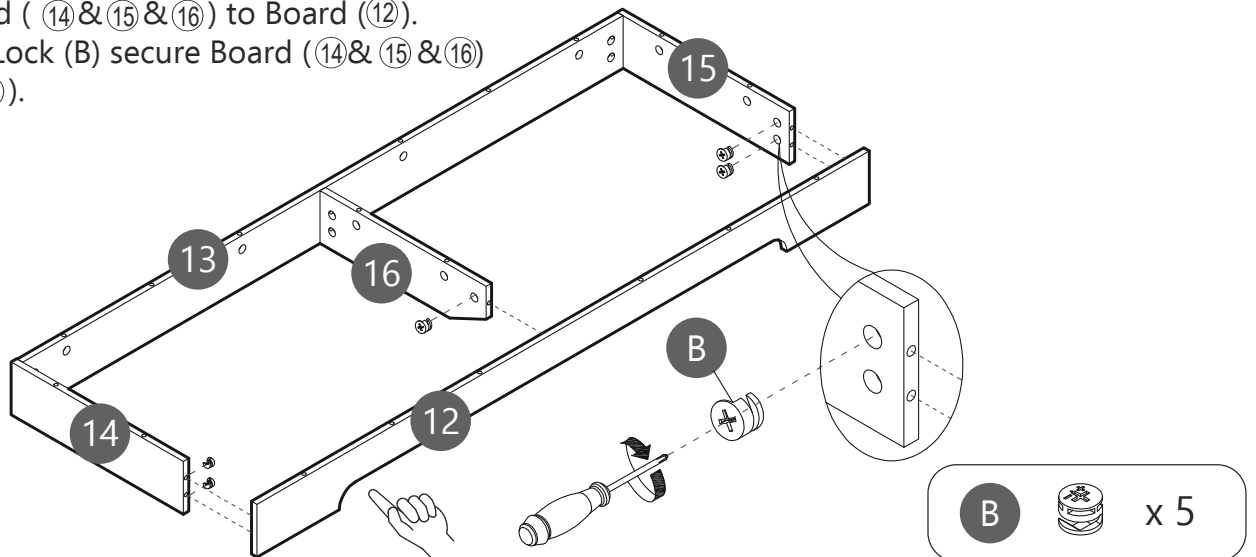


Step 17

Inserting Wooden Dowel (C) into Board (⑪),
then attach Board (⑫ & ⑬ & ⑭ & ⑮ & ⑯)
to Board (⑪). Using Cam Lock (B) secure
Board (⑫ & ⑬ & ⑭ & ⑮ & ⑯)
to Board (⑪).

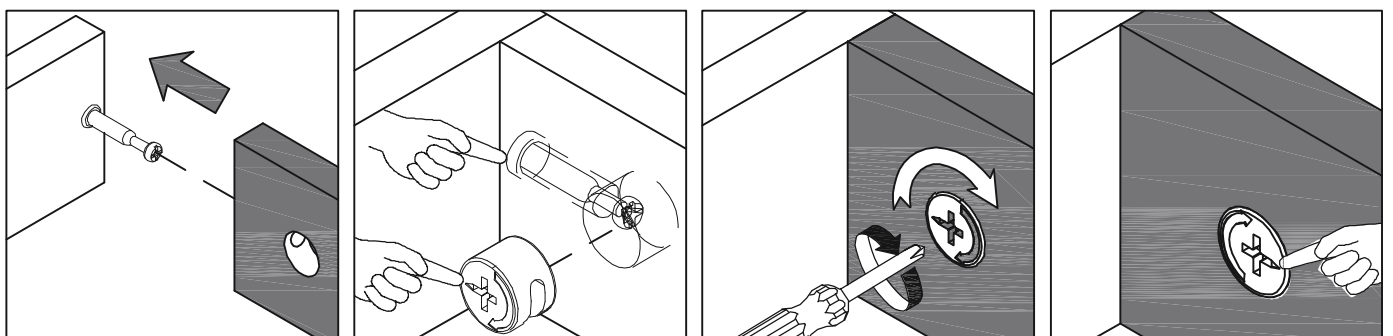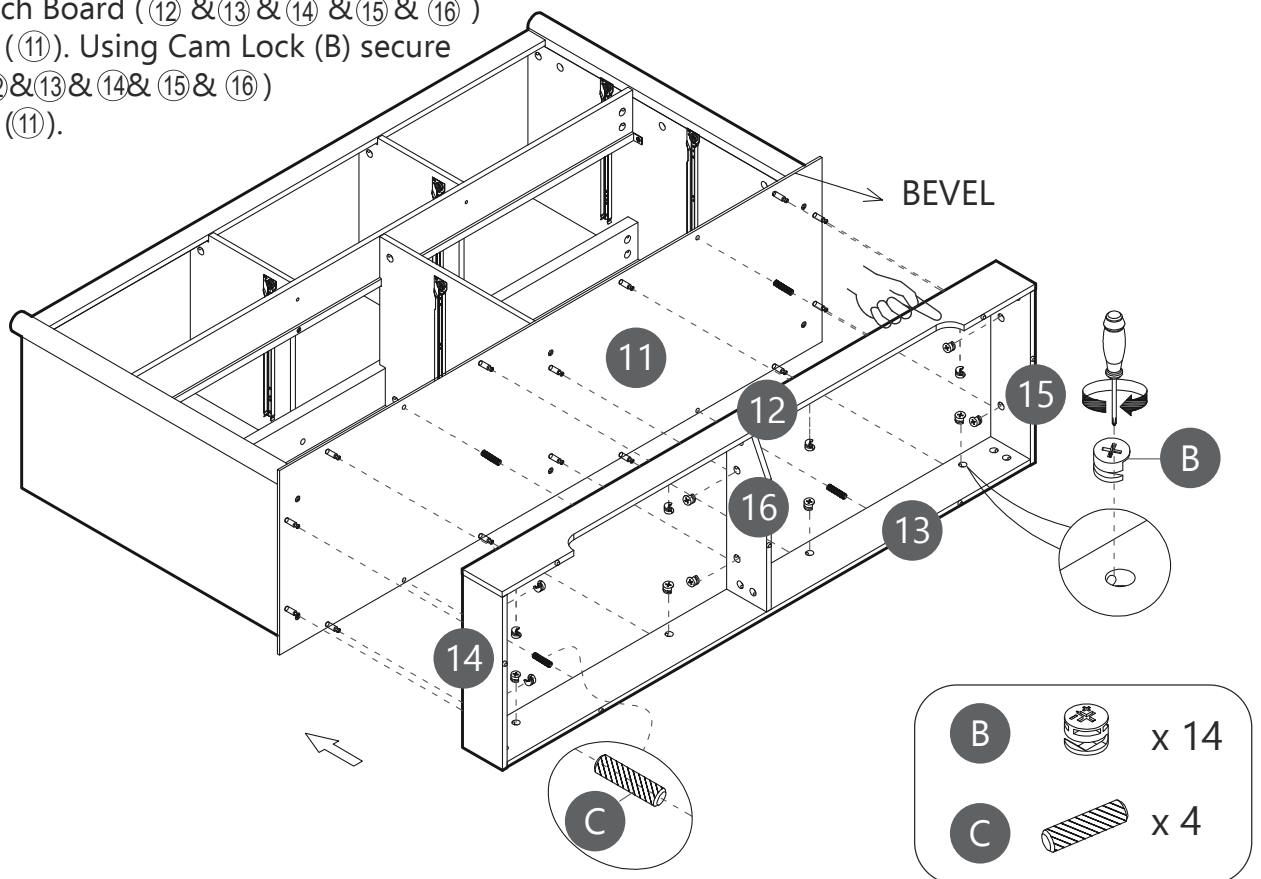



Step 18

Securing Cam Bolt (A) into Board (①).

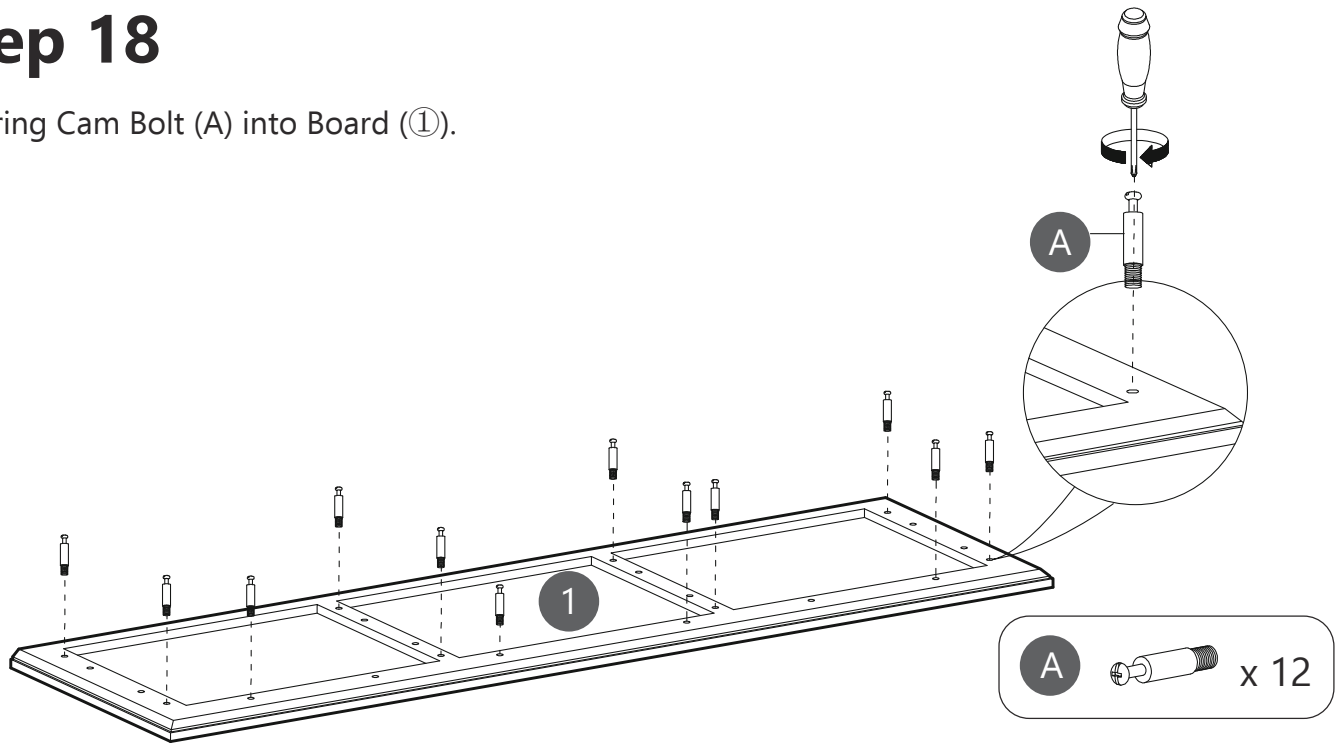


Step 19

Inserting Wooden Dowel (C) into Board (②&③&⑥&⑧), then attach Board (①) to Board (②&③&⑥&⑧). Using Cam Lock (B) secure Board (①) to Board (②&③&⑥&⑧).

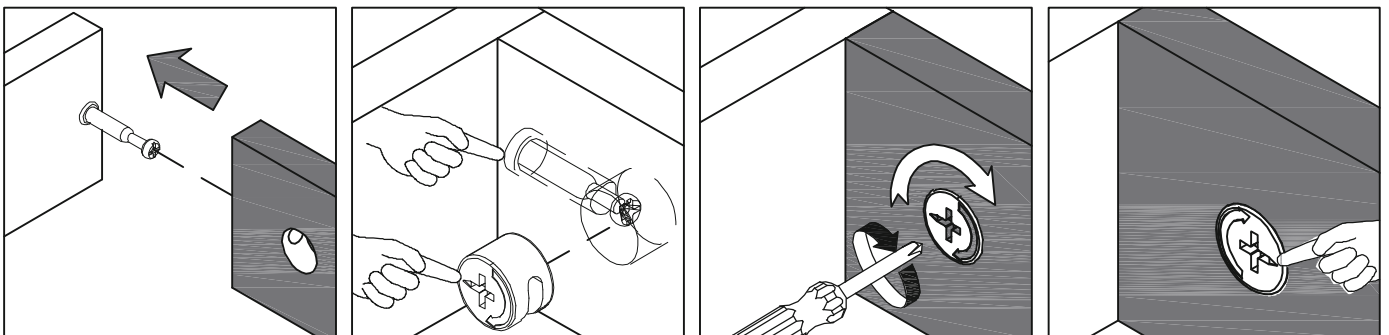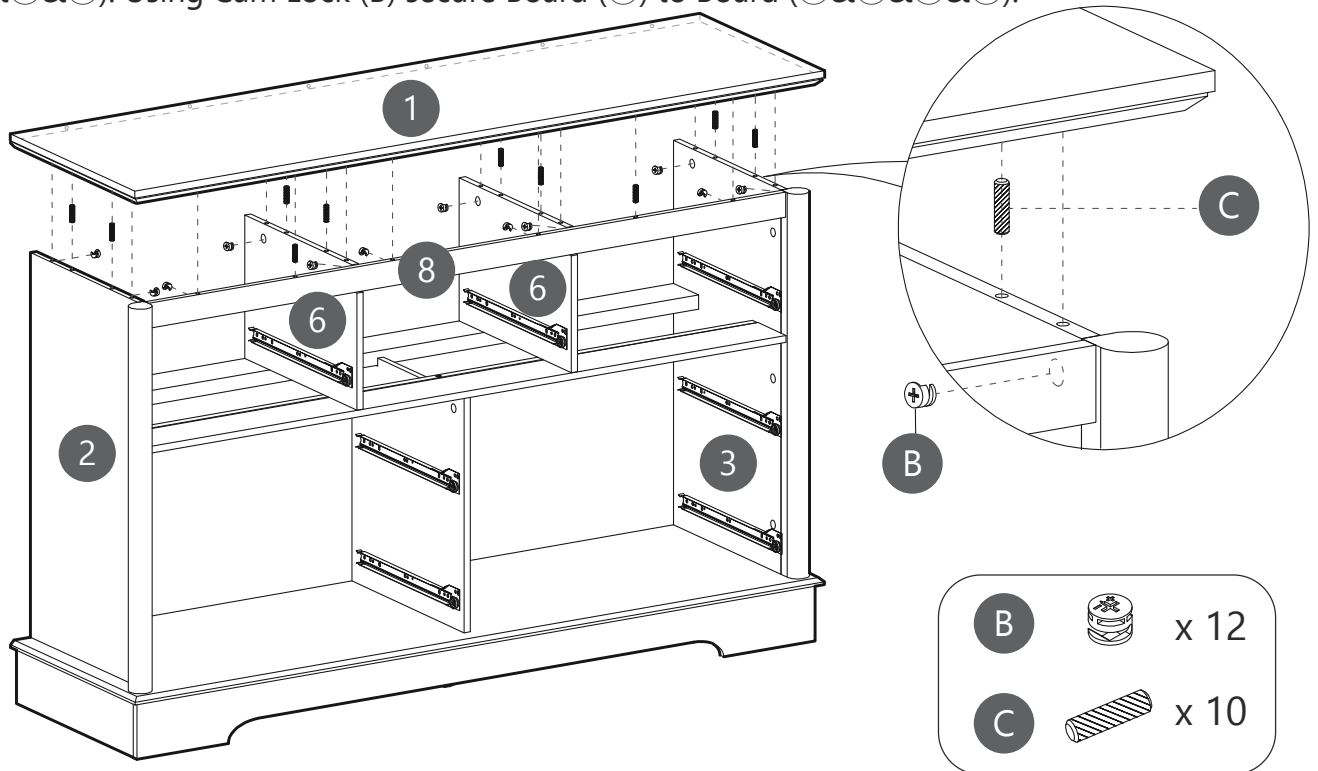

Step 20


Using Screws (G) through Anti-tipping Belt (M) to assemble Back Panels (17) to the main body.

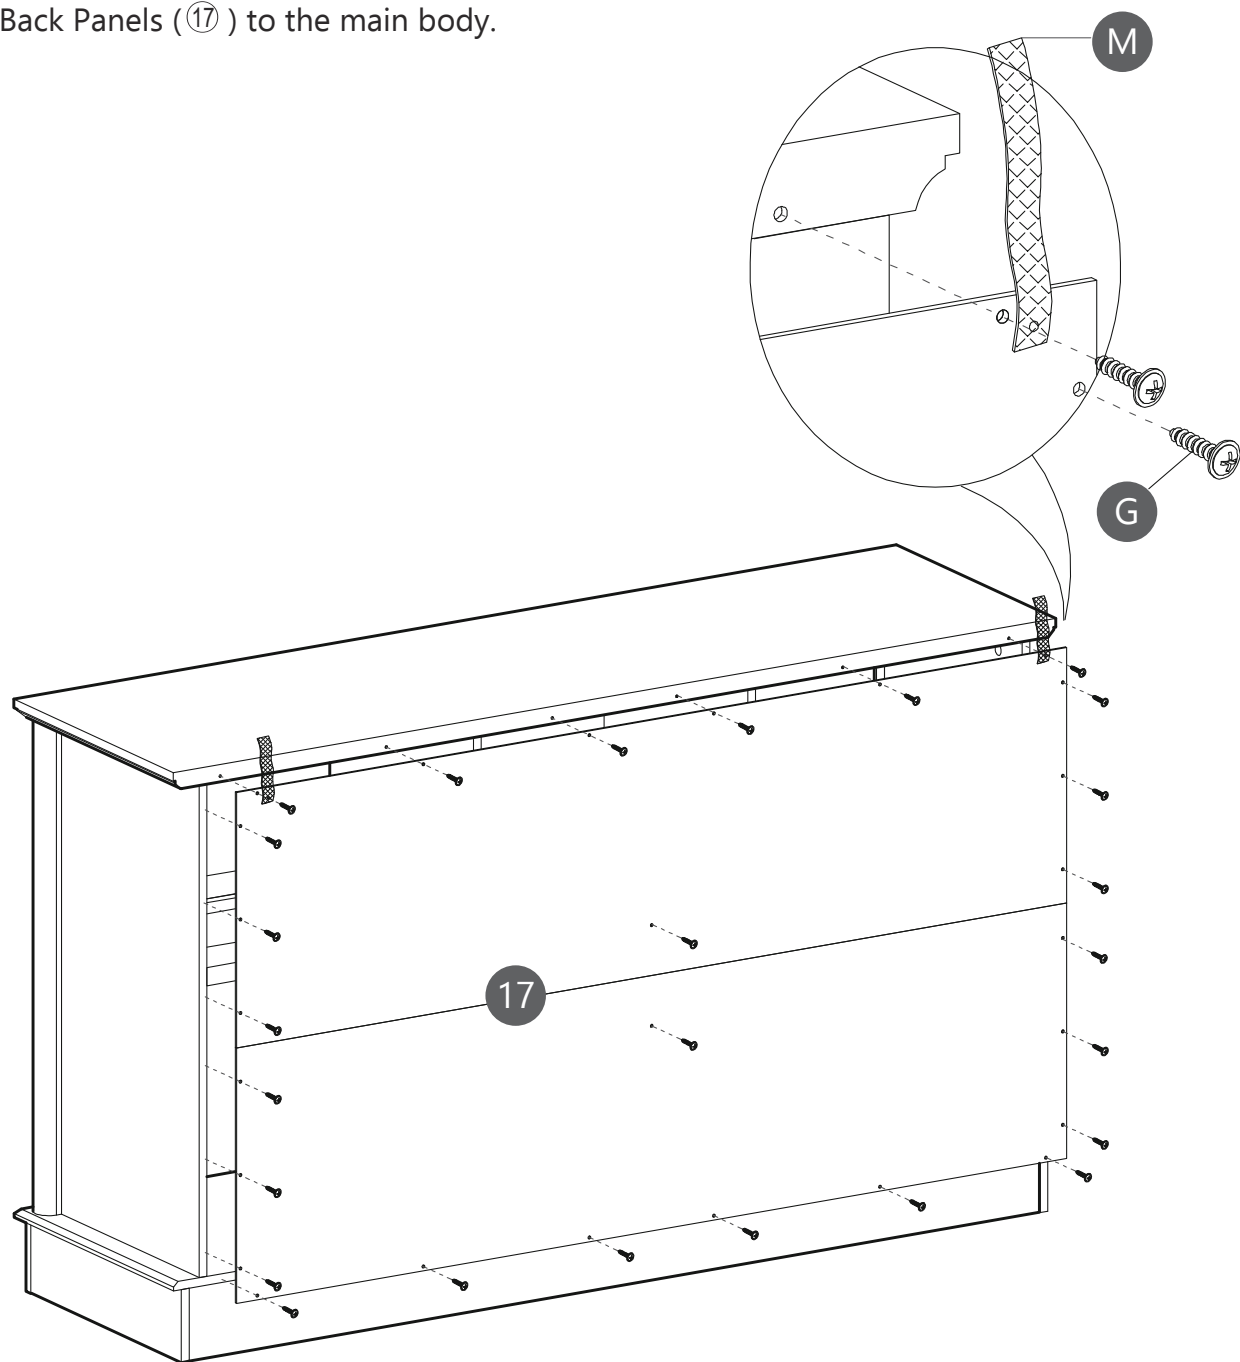

G		ST3 x 14mm	x 26
M			x 2



Step 21

Inserting Wooden Dowel (C) into Board (18).
Securing Cam Bolt (A) into Board (18).

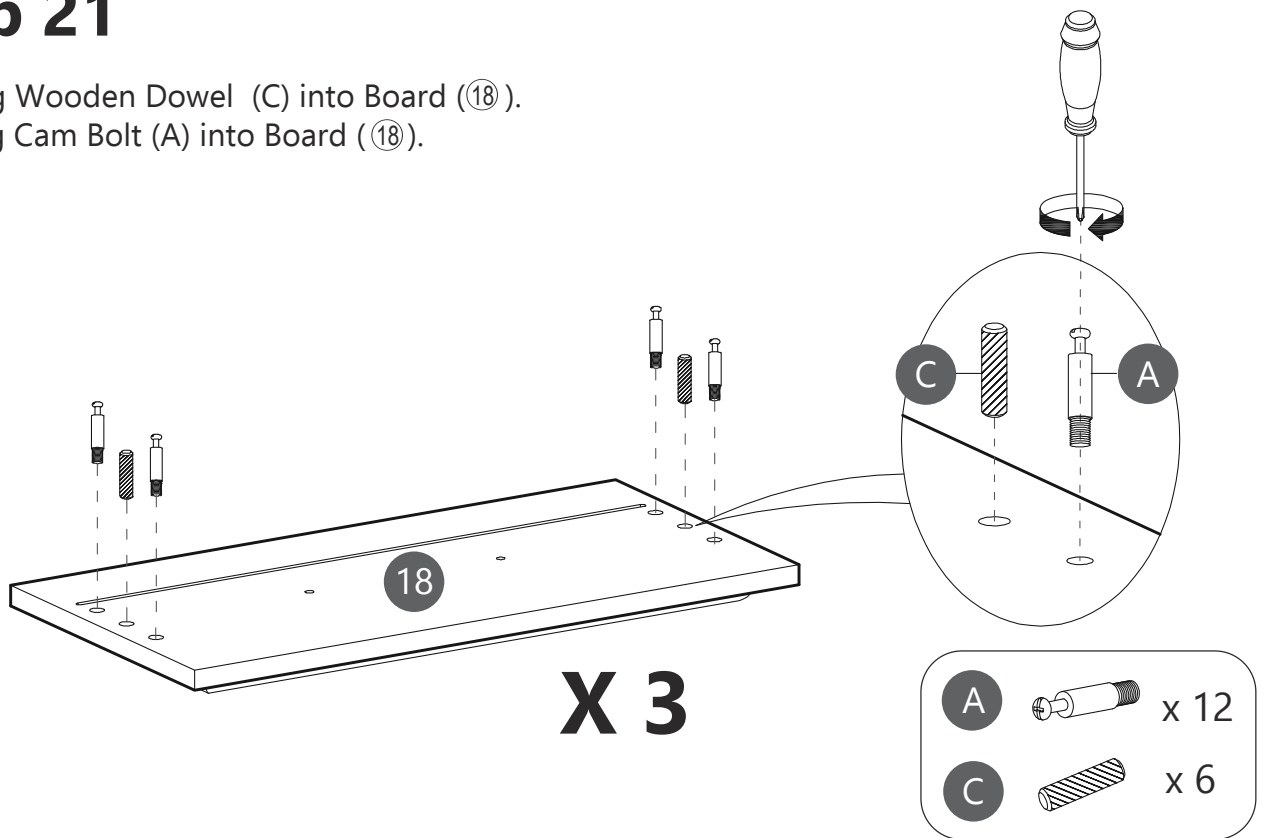


Step 22

Attach Board (20 & 21) to Board (18). Using Cam Lock (B) to secure Board (20 & 21) to Board (18).

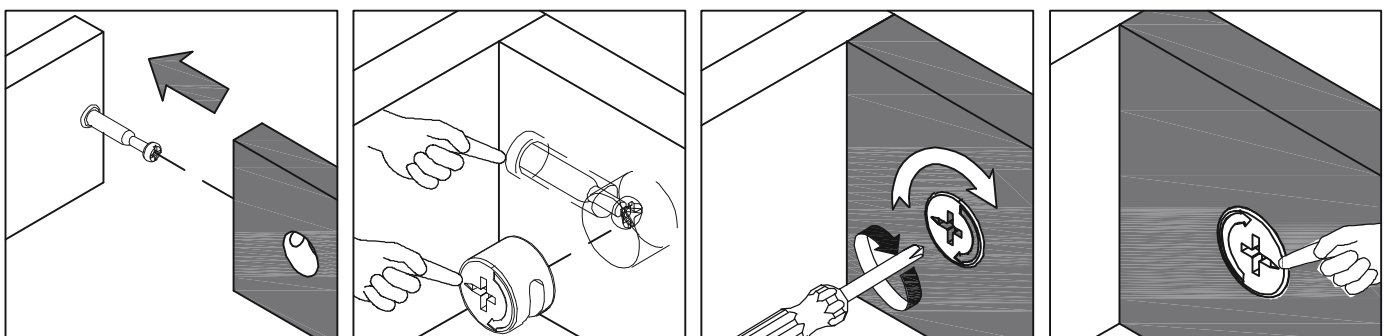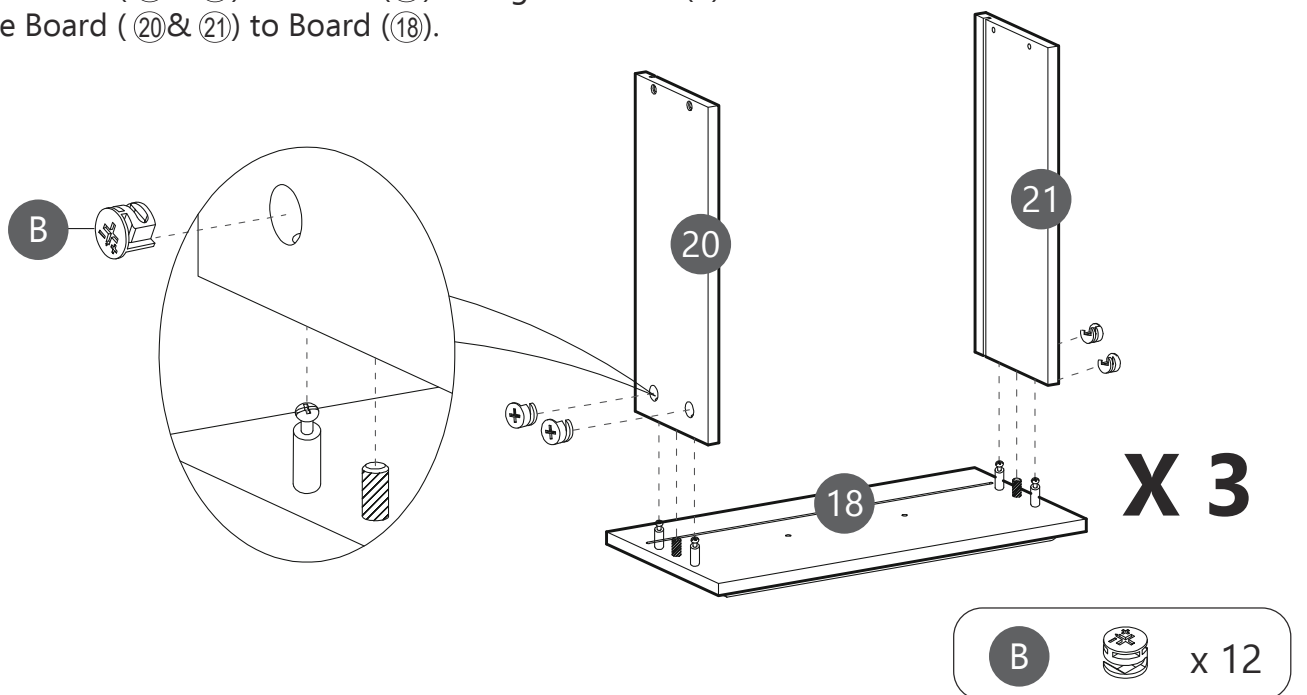


Step 23

Sliding drawer bottom panels (23) into grooves.

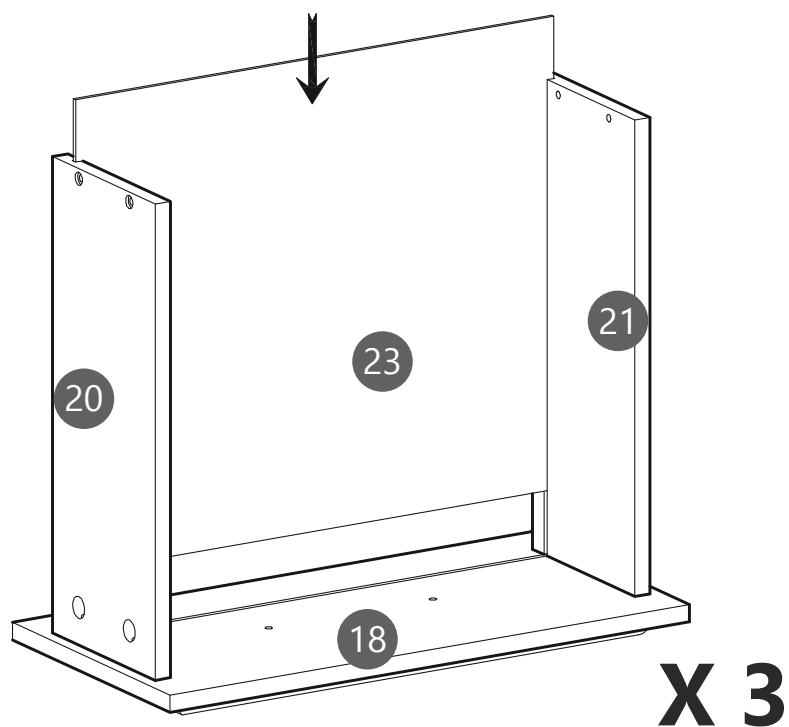

Step 24

Using Screws (F) to assemble Board (22) to the Board (20 & 21).

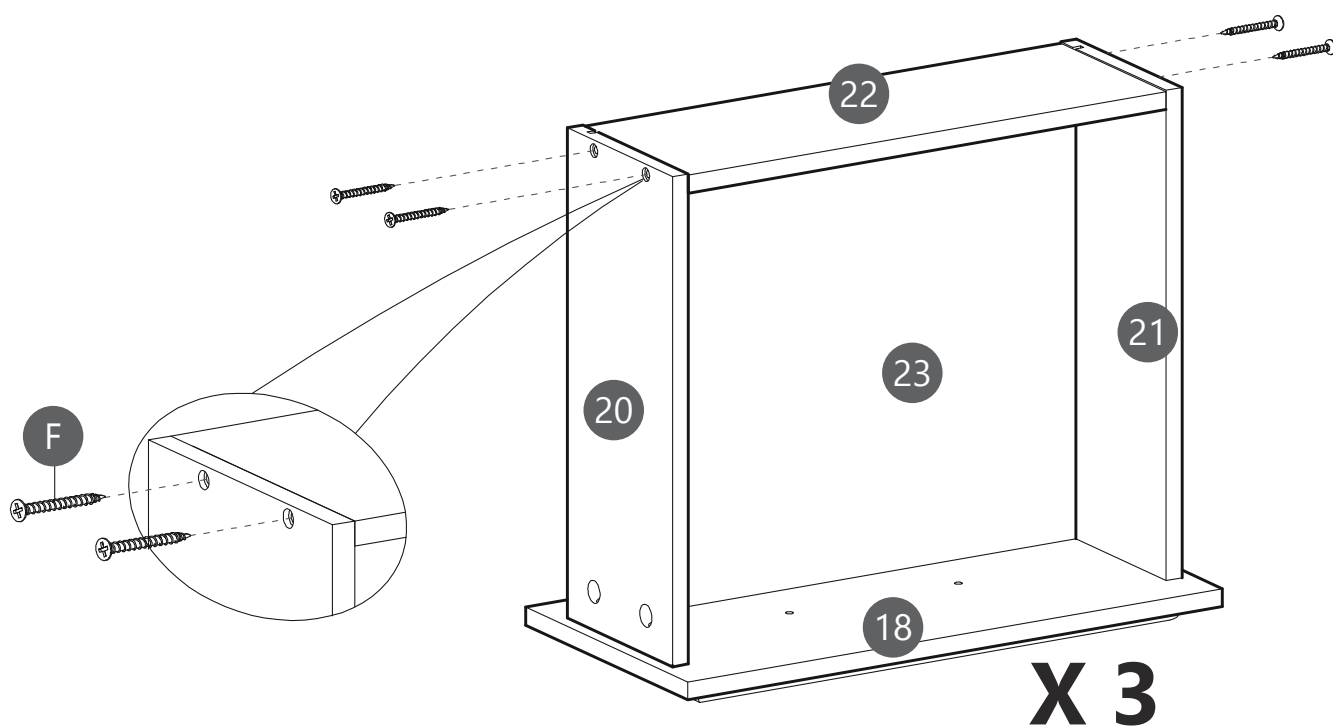

F

ST3.5 x 35mm




x 12

Step 25



Inserting Wooden Dowel (C) into Board (19).

Securing Cam Bolt (A) into Board (19).

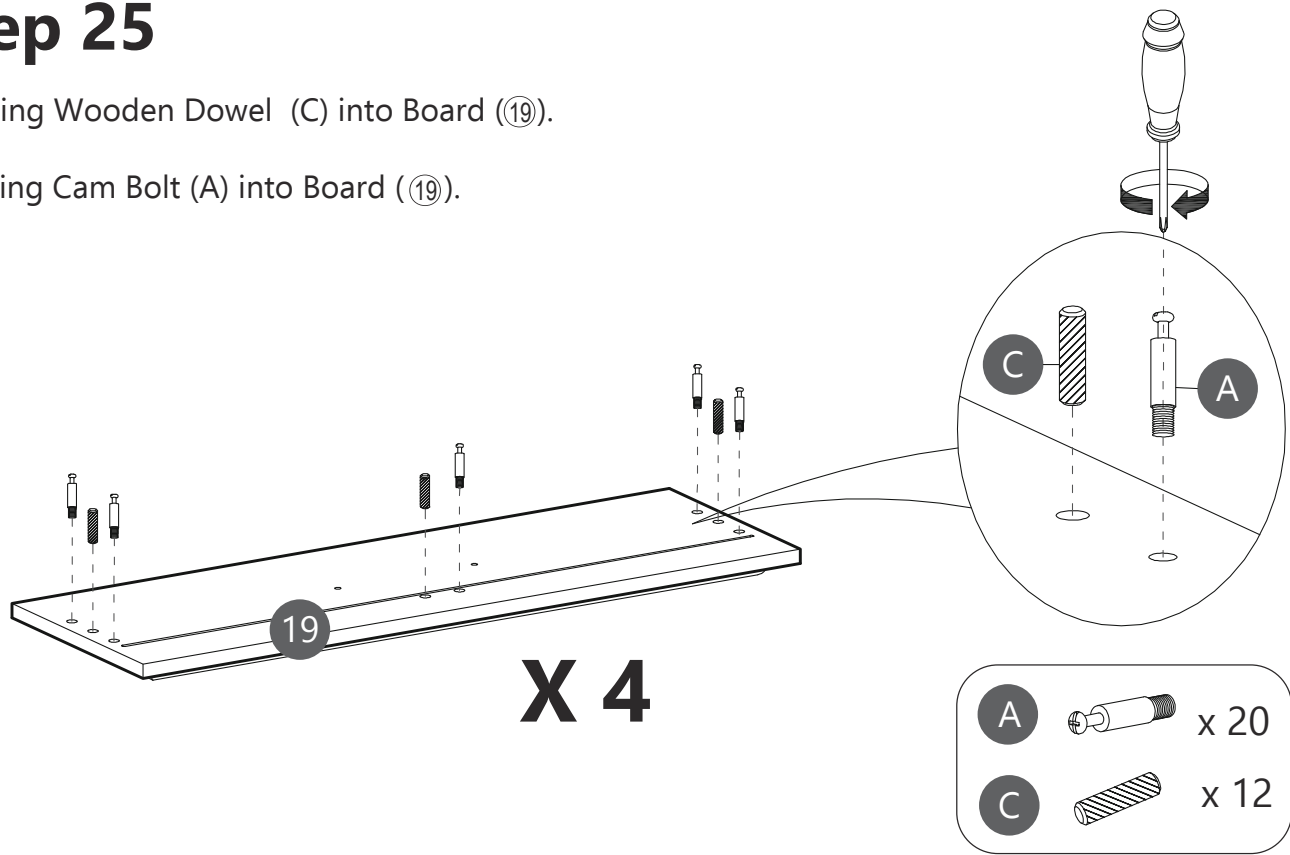


Step 26

Attach Board (20 & 21 & 25) to Board (19). Using Cam Lock (B) to secure Board (20 & 21 & 25) to Board (19).

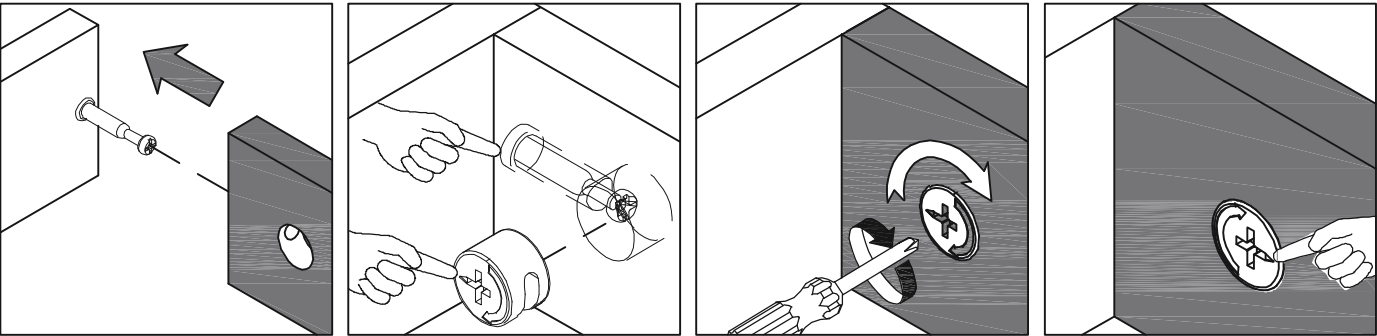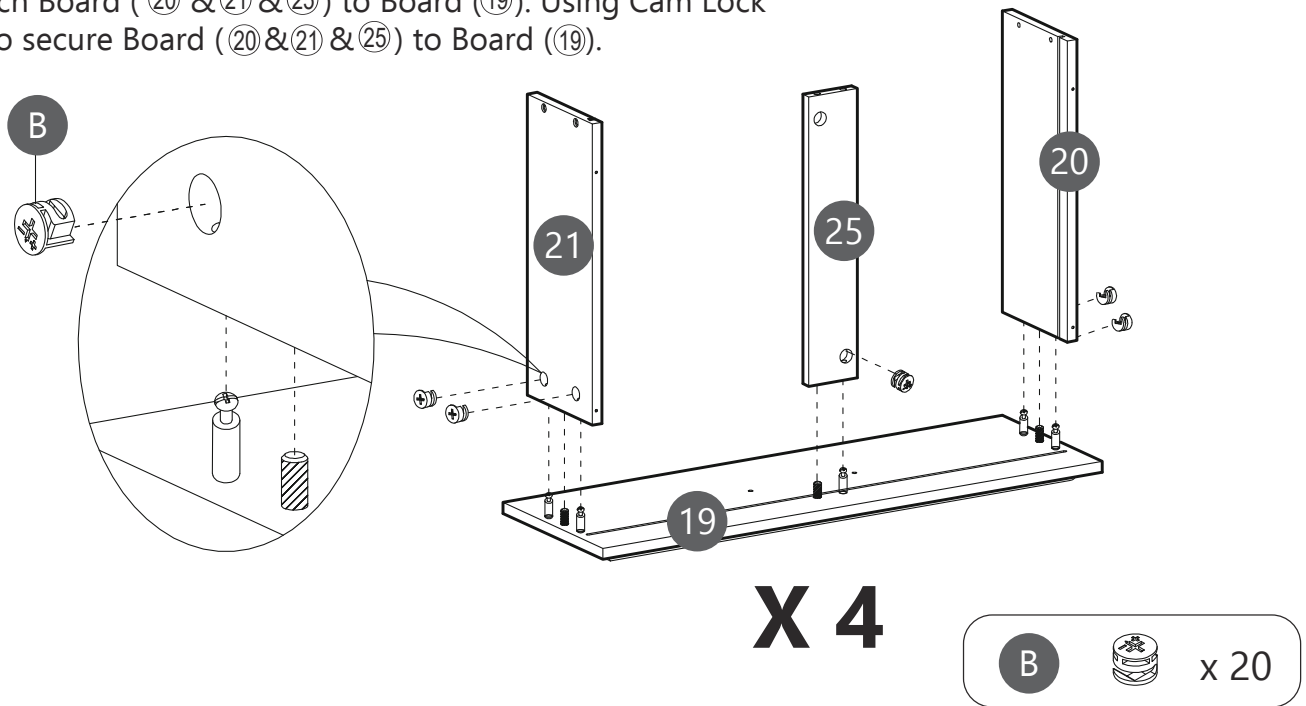

Step 27


Sliding drawer bottom panels (26) into grooves.

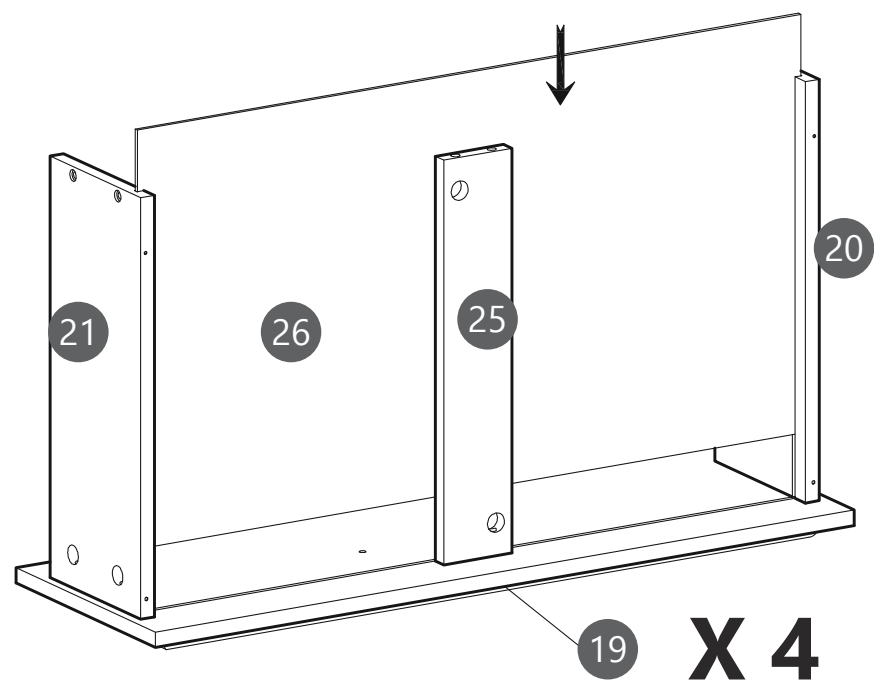

Step 28

Inserting Wooden Dowel (C) into Board (24).




Securing Cam Bolt (A) into Board (24).

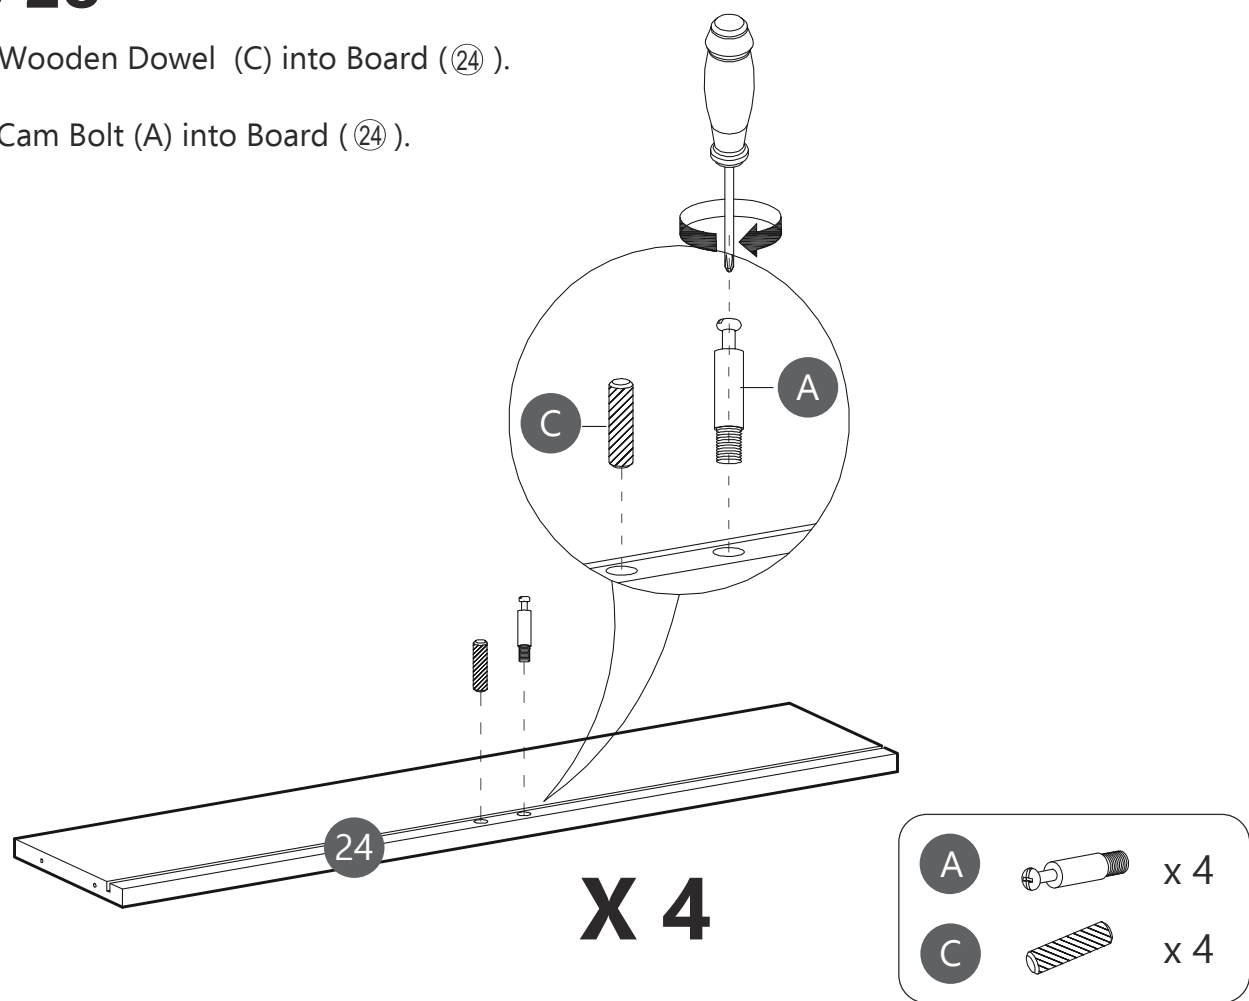

Step 29


Attach Board (24) to Board (25). Using Cam Lock (B) to secure Board (24) to Board (25).

Using Screws (F) to assemble Board (24) to the Board (20 & 21).

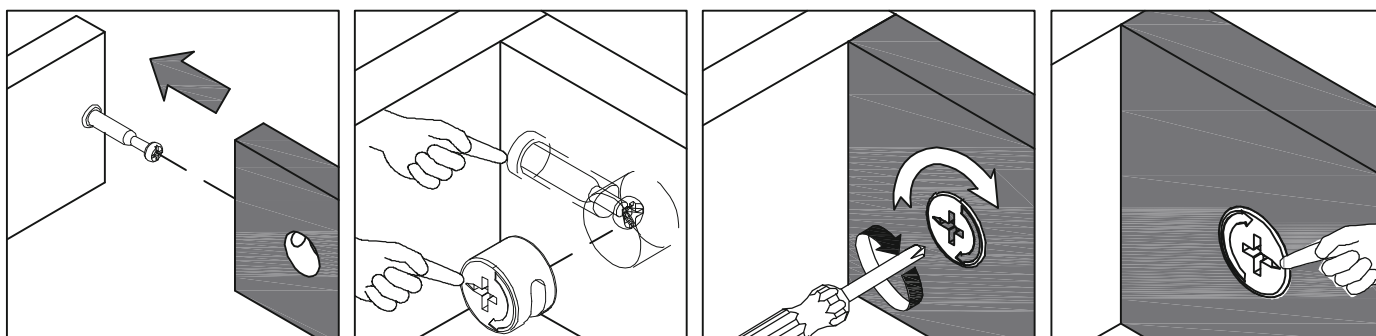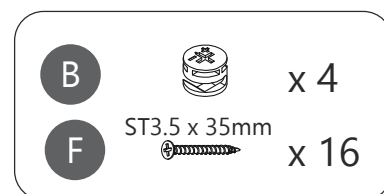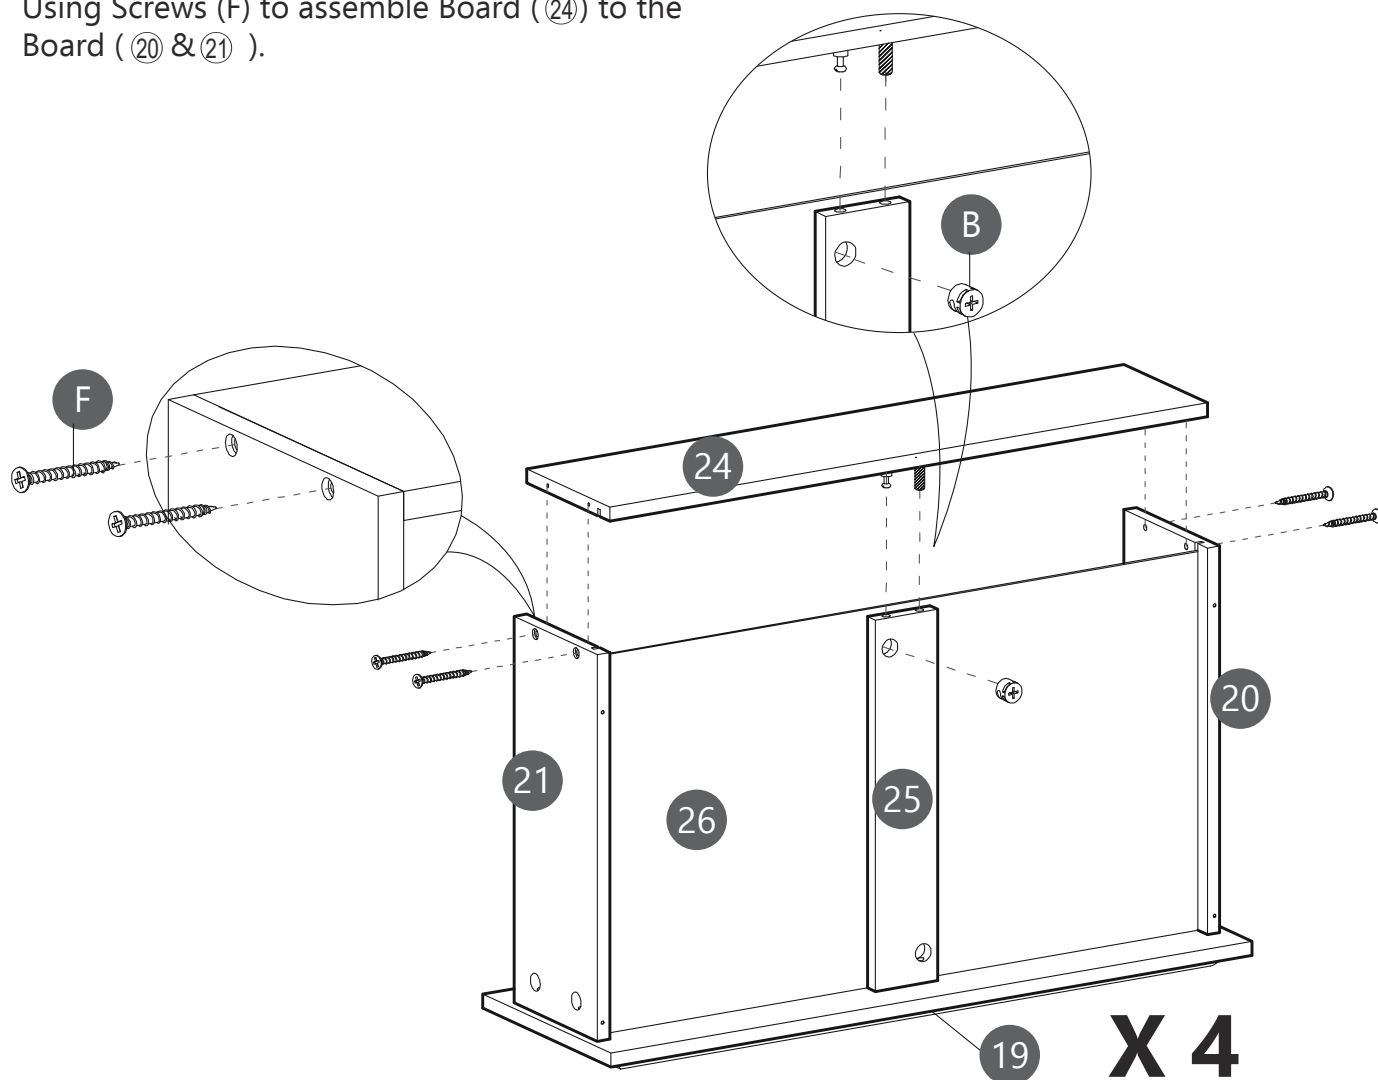


Step 30

Using Screws (J) to assemble Handle (I) to the Board (18).

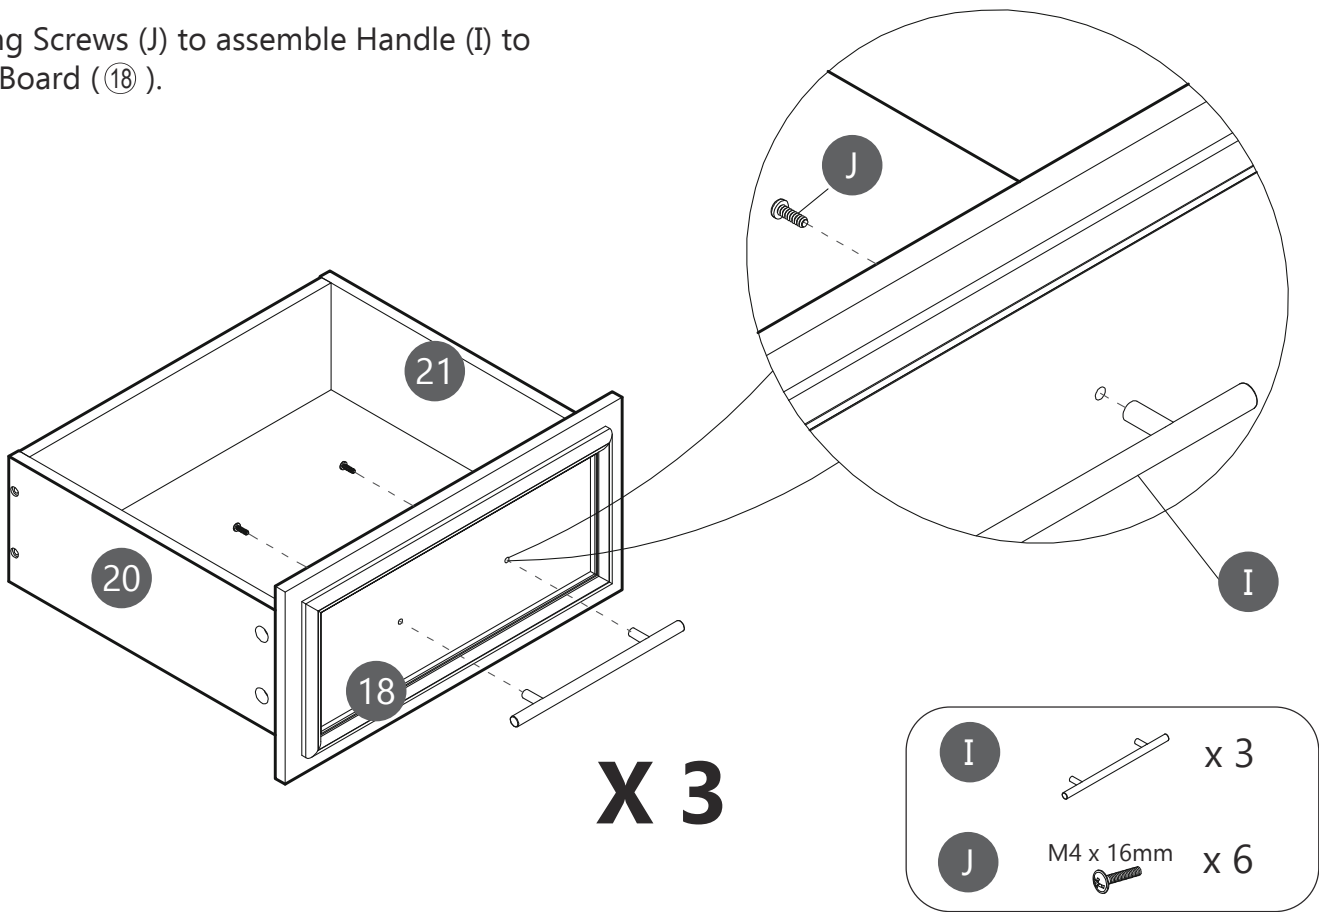

Step 31


Using Screws (J) to assemble Handle (I) to the Board (19).

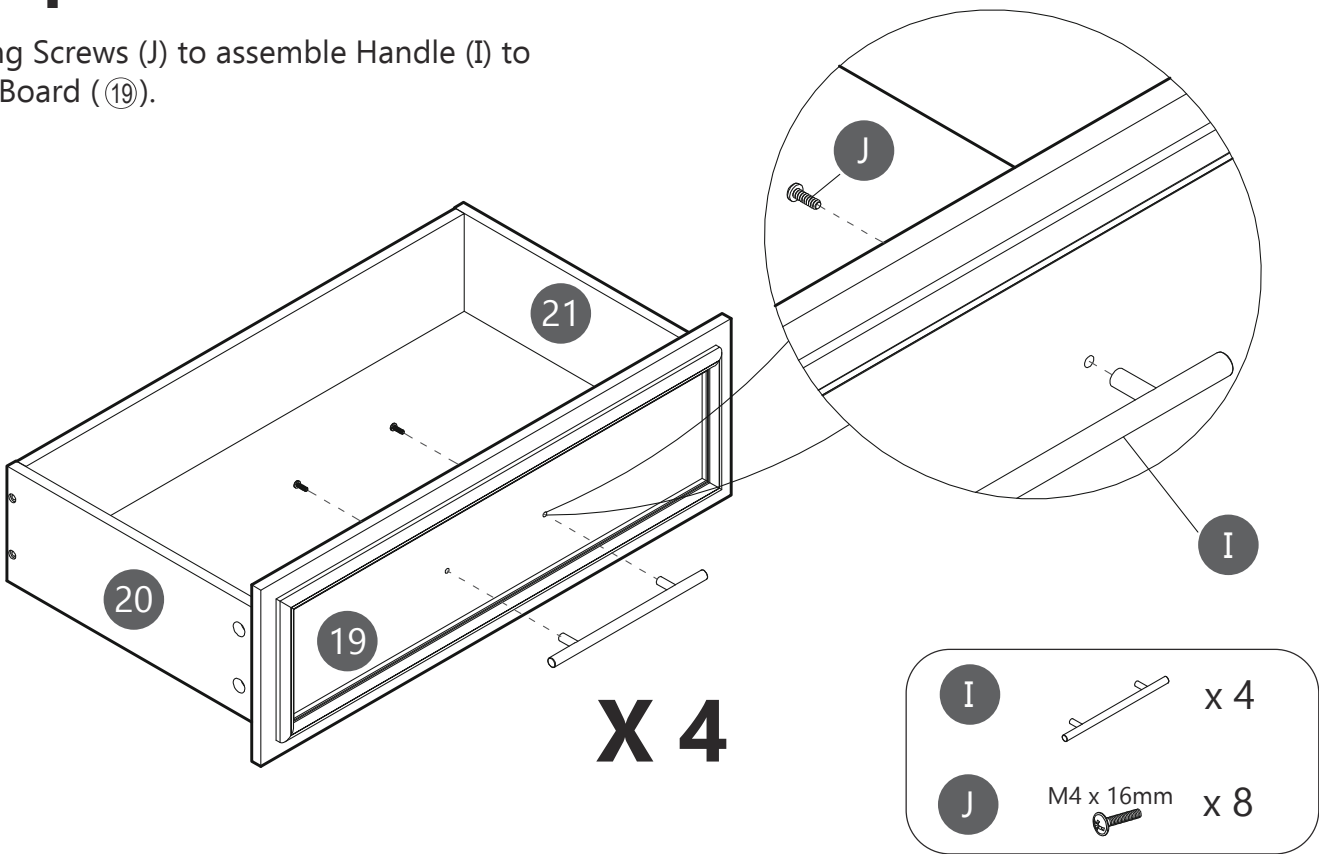

Step 32

Using Screws (D) to assemble Slide (DL) to Board (20).


Using Screws (D) to assemble Slide (DR) to Board (21).

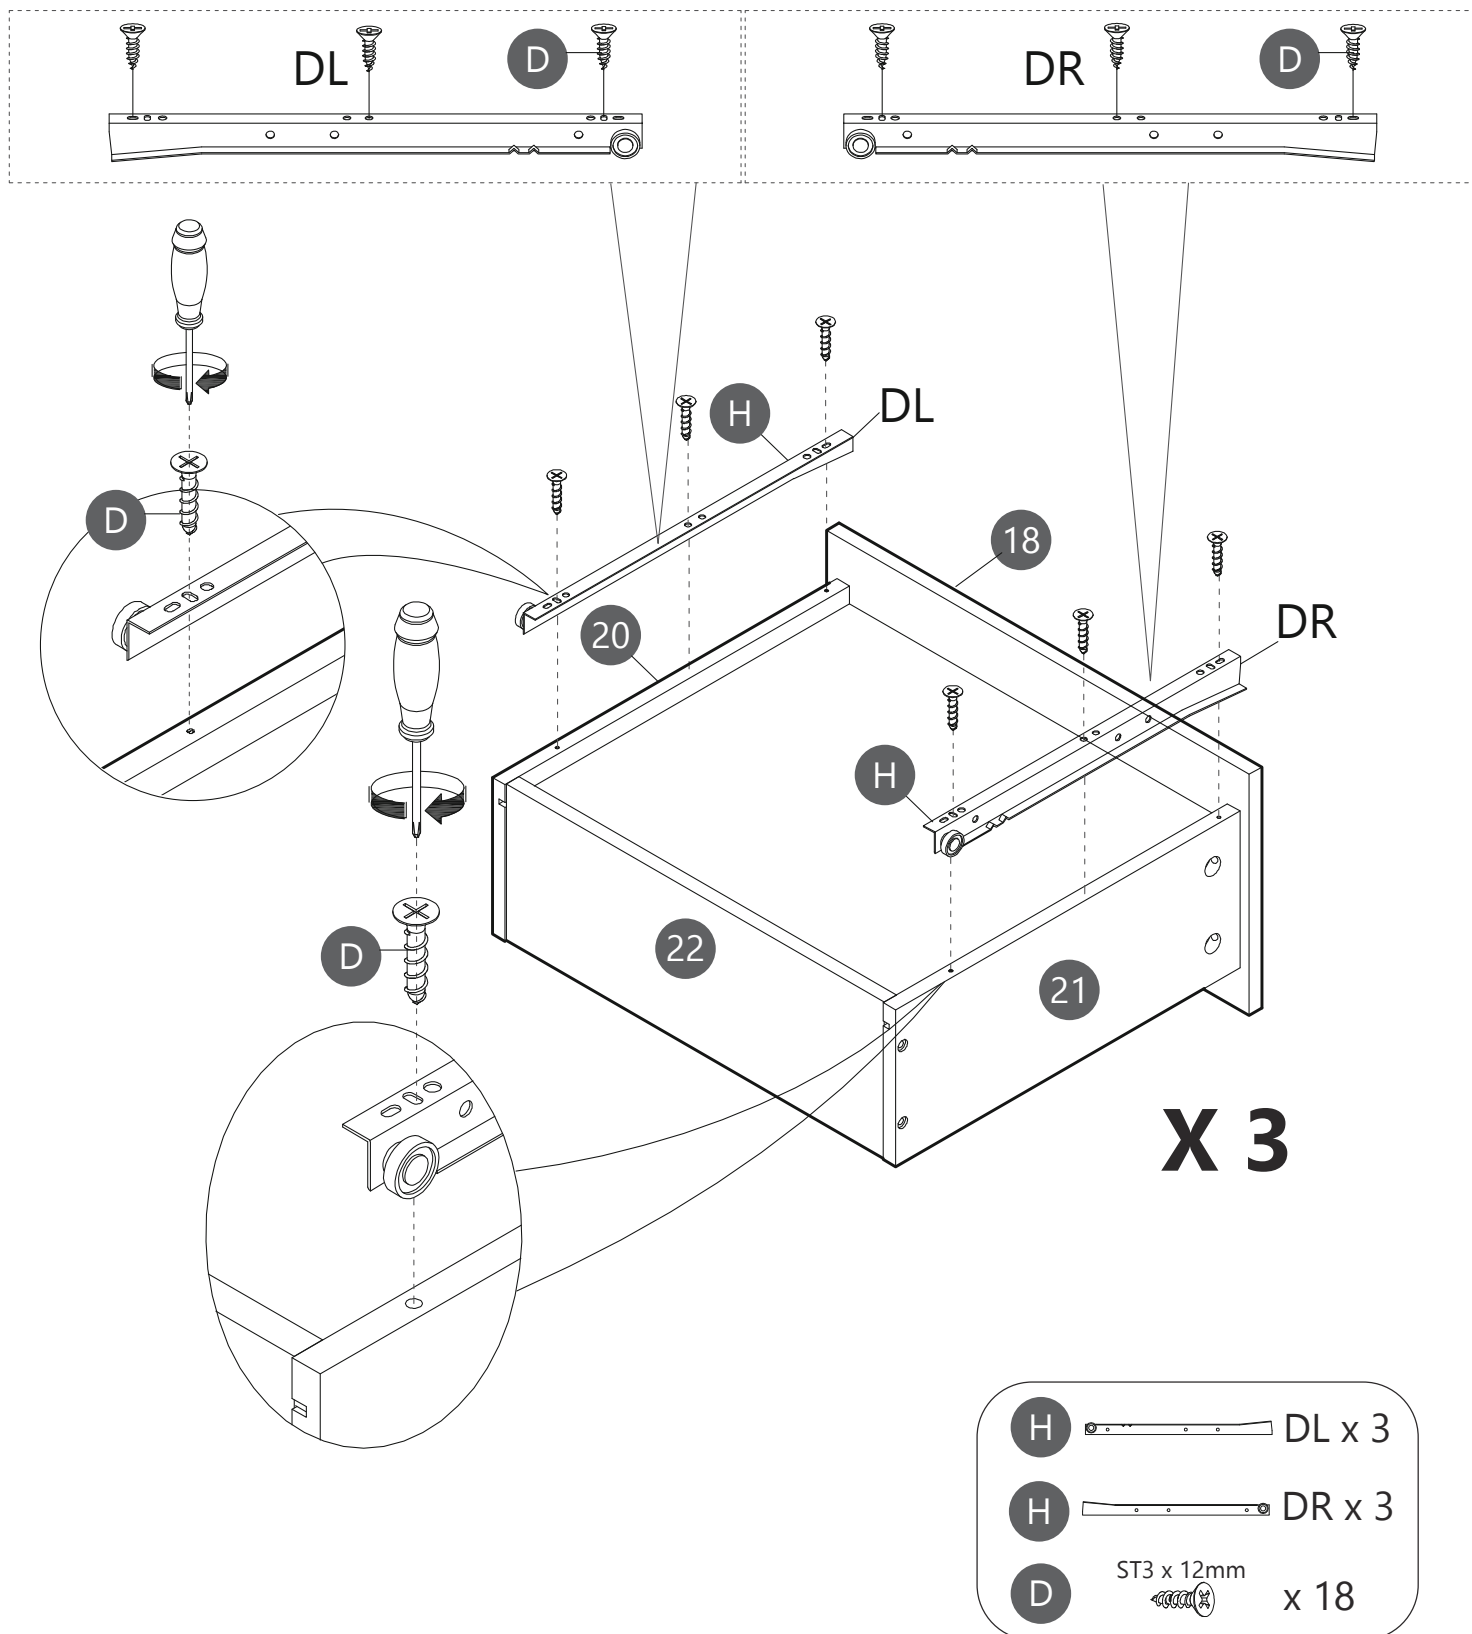

Step 33

Using Screws (E) to assemble Slide (DL) to Board (20).

Using Screws (E) to assemble Slide (DR) to Board (21).

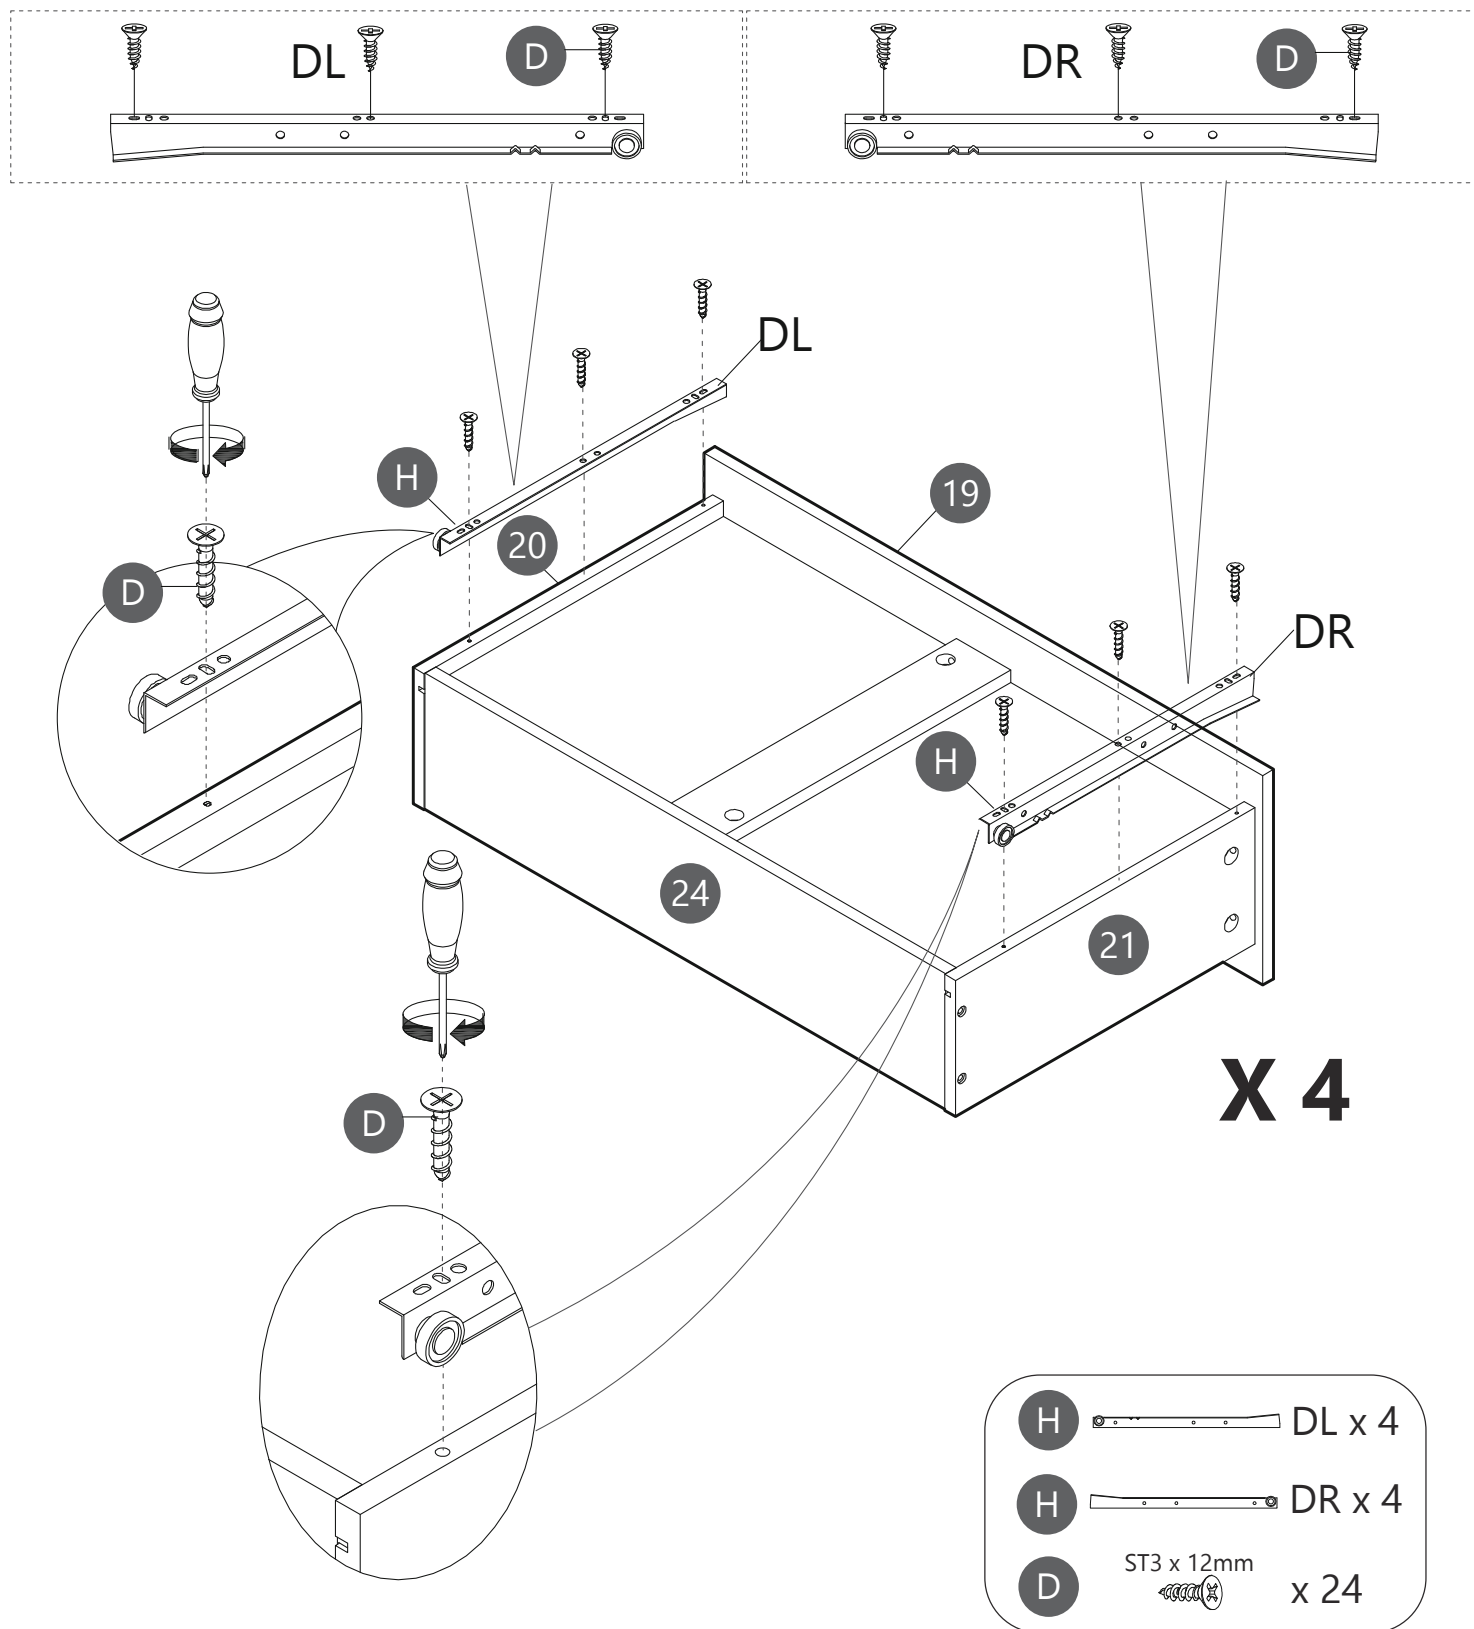


Step 34

Assembled the drawers as per diagram.


Pay attention to the **ORDER** of the drawers.

When you put the drawer, please note that the drawer wheels on top of the wheels of the slide, then check whether the drawer is smooth when pulled out. Otherwise, the drawer will not be aligned with other drawers.

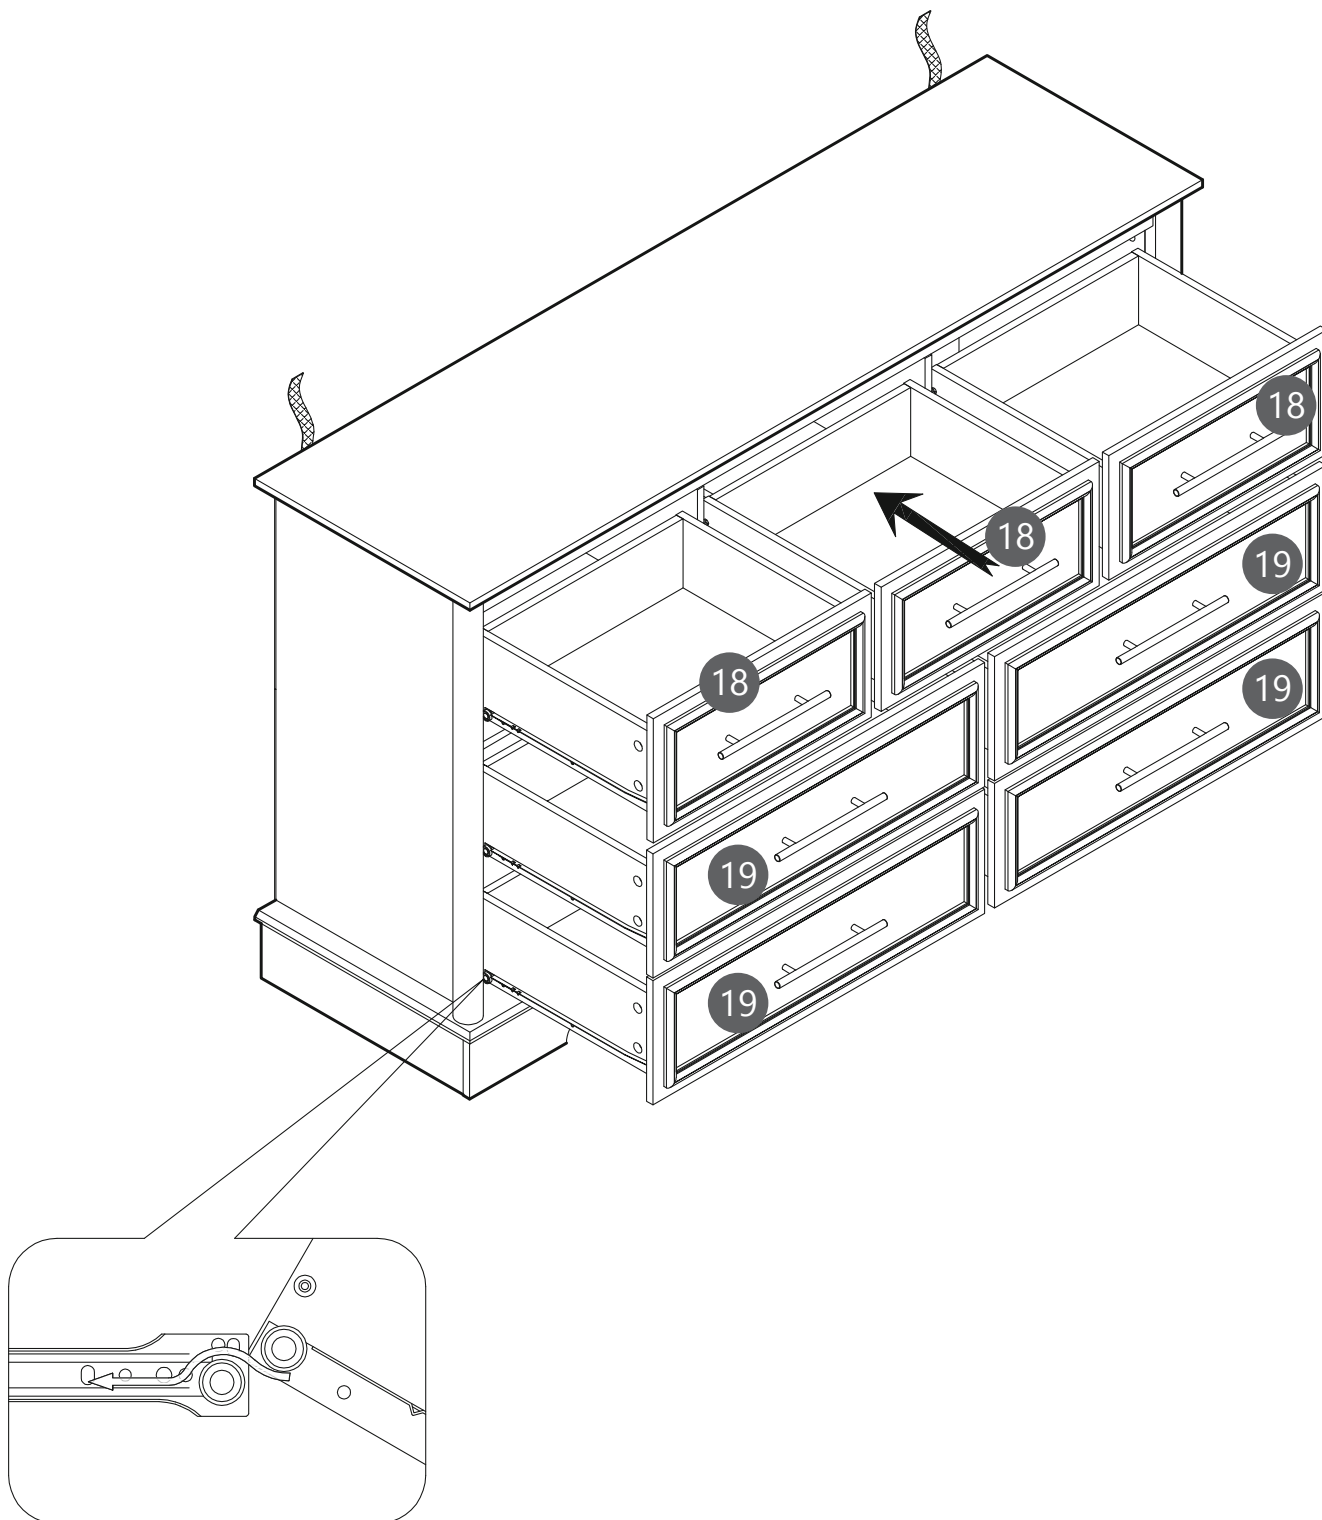


Step 35

Drill 2 holes in the wall and Hammer the (M) in.

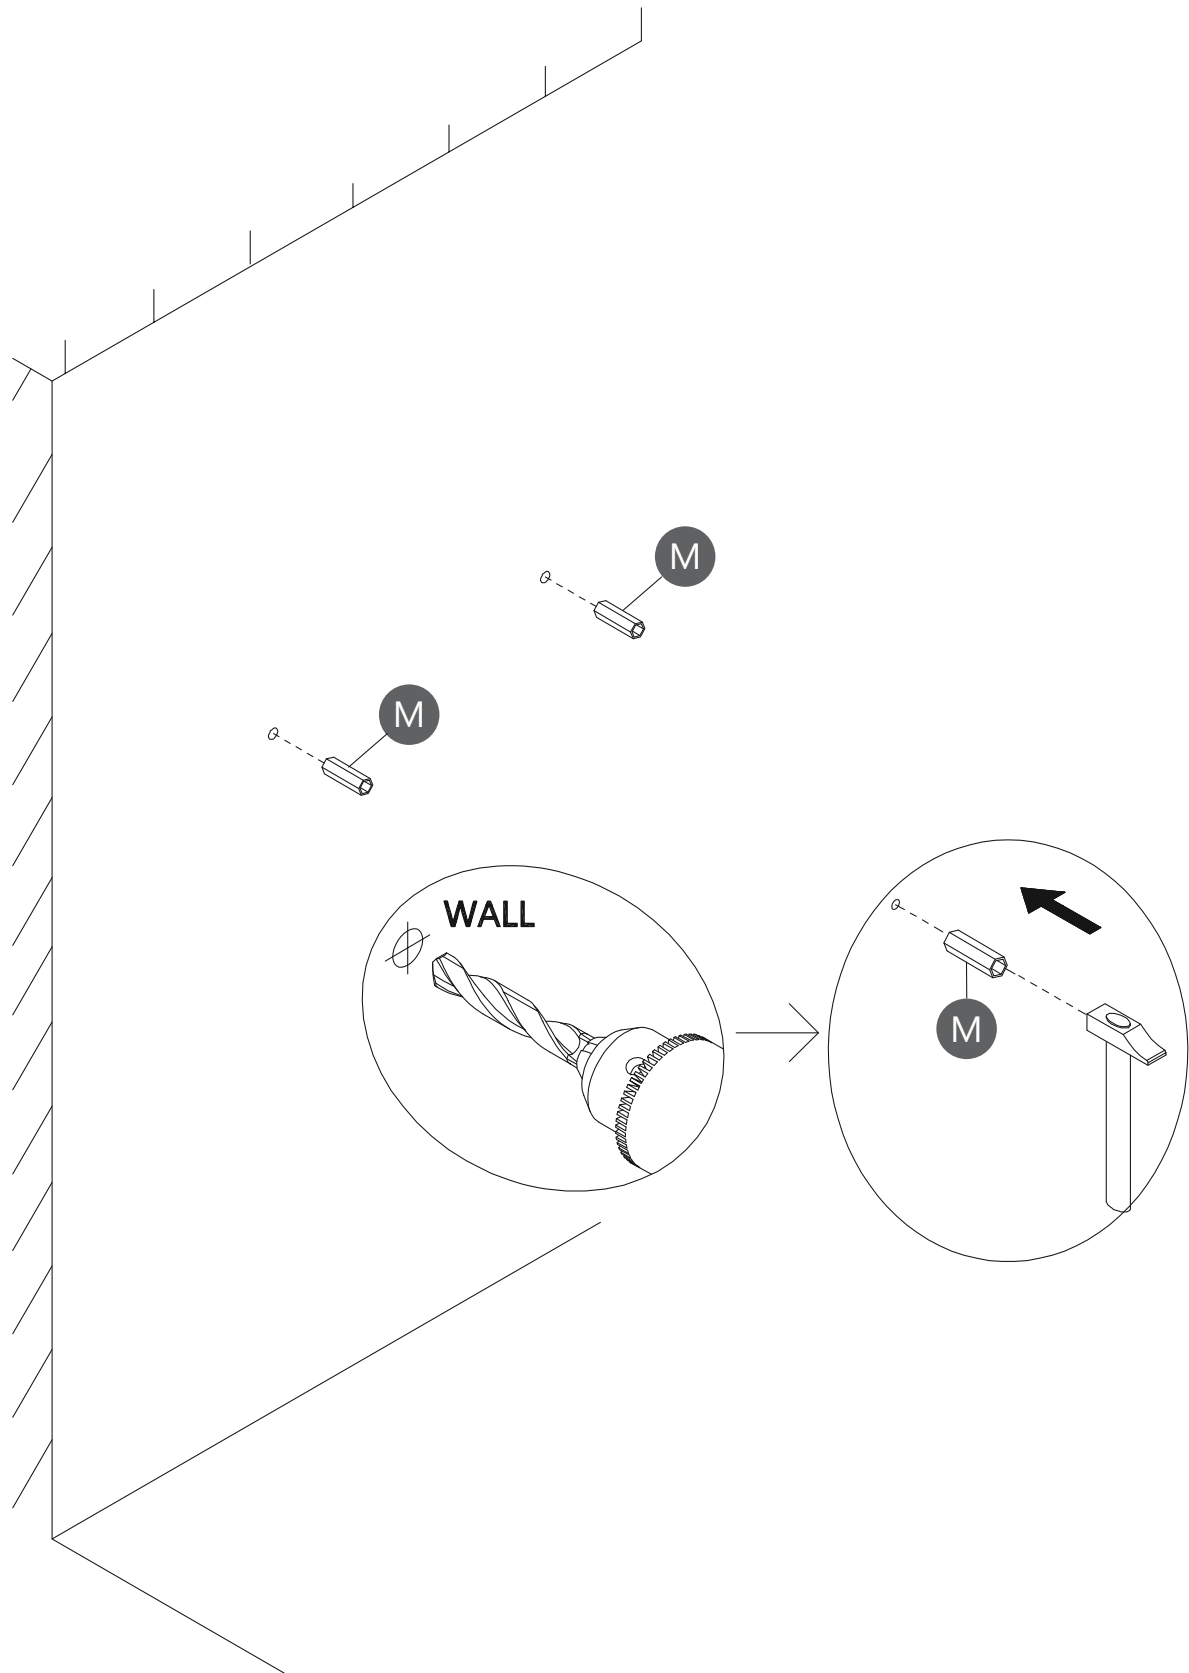

Step 36

Using Screw (M) attach Anti-tipping Belt into Nut (M) to wall.

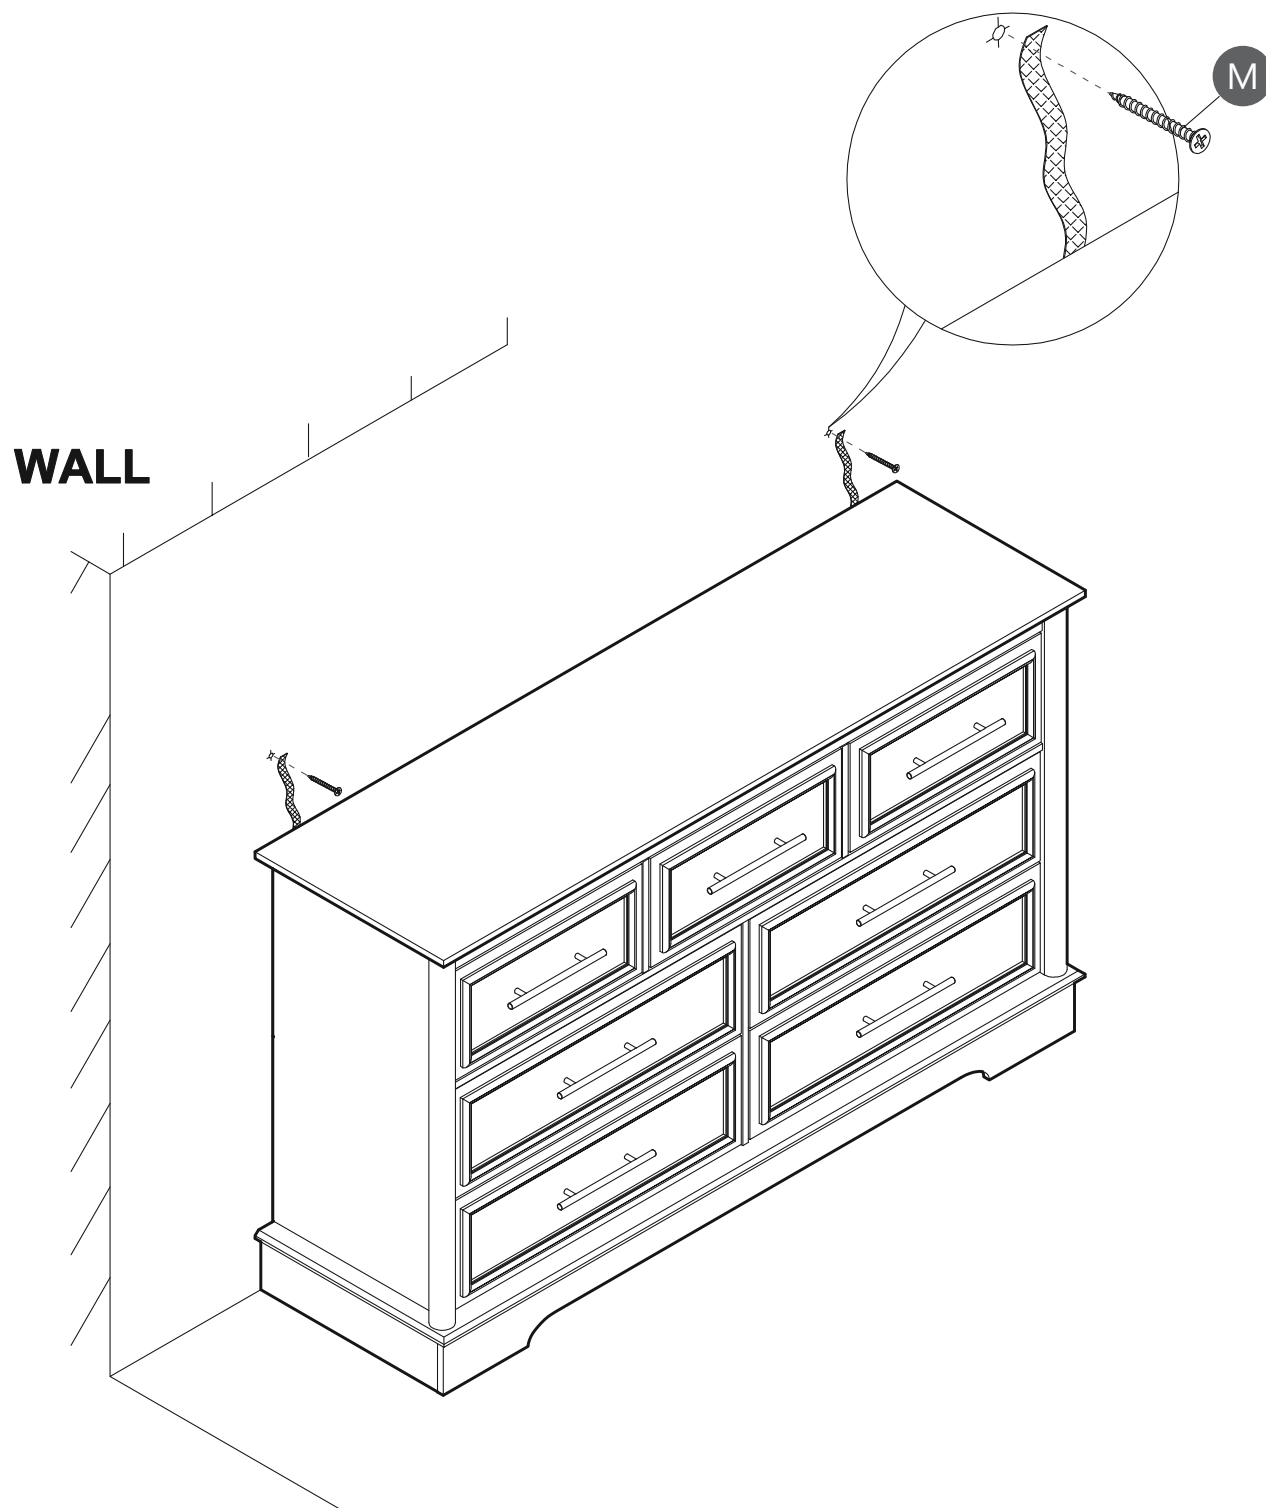

M

ST4 x 30mm



x 2