

PLASTIC GARDEN SHED 6x4.4FT

Instructions for Assembly



WARNING

Please read the instruction manual carefully before assembly.
Please assembly strictly in accordance with the instruction.
Please double-check to ensure that all parts of the package contents intact.
To avoid injury, work gloves are recommended during assembly.


Level the ground surface | Nivelez la surface du sol | Nivela la superficie del suelo | Ebnen Sie die Bodenoberfläche | Maak de bodem vlak | Livellare la superficie del terreno | Nivela a superfície do solo



Recommendation: Construct a wooden or concrete base as a foundation | Recommandation: fabriquez une base en bois ou en béton en guise de fondation | Recomendación: construya una base de madera o de cemento a modo de cimiento | Empfehlung: Bauen Sie als Fundament eine Grundfläche aus Holz oder Beton | Aanbeveling: maak een houten of betonnen ondergrond als fundering | Raccomandazione: Costruire una base di legno o di cemento come fondamenta | Recomendação: Construa uma base de madeira ou de cimento como fundação


Option | Opción | optie | opzione | opção

A

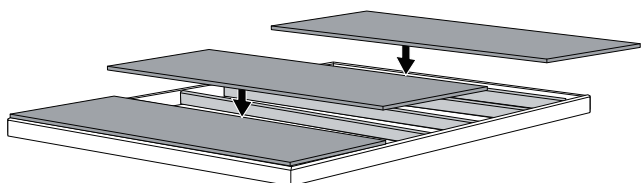

Option | Opción | optie | opzione | opção

B

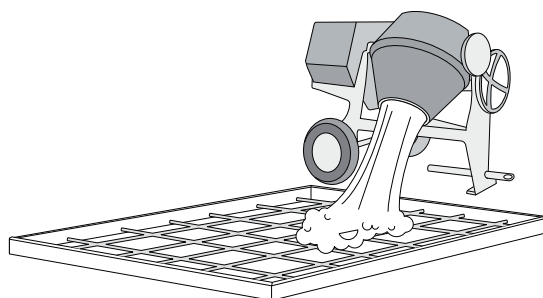

External floor measurements are: | Les mesures externes de la étage sont: | Las medidas del suelo externo son: | Die Außen-Bodenmaße betragen: | De afmetingen van de externe vloer zijn: | Le dimensioni esterne del pavimento sono: | As medidas externas do chão são:



BEFORE STARTING ASSEMBLY | AVANT DE COMMENCER LE MONTAGE | **ANTES DE EMPEZAR EL ARMADO** | VOR MONTAGEBEGINN | **VOORDAT U BEGINT TE MONTEREN** | PRIMA DI INIZIARE L'ASSEMBLAGGIO | **ANTES DE INICIAR A MONTAGEM**

Read the care and safety guidelines at the end of this manual | Check to ensure that there are no missing or damaged parts BEFORE starting or arranging assembly | Remove all parts from the package(s) and spread them out on a clean work surface | Review all assembly instructions | Assemble all the parts according to the directions in this manual. Do not skip any steps.

Lisez les instructions de précaution et de sécurité à la fin de ce manuel | Assurez-vous qu'il n'y a pas de pièces manquantes ou endommagées AVANT de commencer ou d'organiser l'assemblage | Retirez toutes les pièces du/des paquet(s) et étalez-les sur une surface de travail propre | Lisez toutes les instructions de montage | Assemblez toutes les pièces selon les instructions de ce manuel. Ne sautez aucune étape.

Lea las instrucciones de precauciones y seguridad que están al final de este manual | Asegúrese de que no faltan piezas ni están dañadas ANTES de comenzar o disponer el montaje | Saque todas las piezas del paquete o paquetes y póngalas sobre una superficie de trabajo limpia | Revise todas las instrucciones de montaje | Monte todas las piezas según las instrucciones de este manual. No se saltee ningún paso.

Lesen Sie die Sicherheitsrichtlinien am Ende des Benutzerhandbuchs durch | Prüfen Sie bitte VOR dem Zusammenbau, dass keine Teile beschädigt sind oder fehlen | Nehmen Sie alle Teile aus der Verpackung und breiten Sie sie auf einer sauberen Arbeitsfläche aus | Gehen Sie noch einmal die komplette Aufbauanleitung durch | Bauen Sie alle Teile entsprechend der Anleitung in diesem Handbuch zusammen. Lassen Sie dabei keinen Arbeitsschritt aus.

Lees de richtlijnen voor zorg en veiligheid achterin deze handleiding | Controleer dat er geen onderdelen mankeren, of beschadigd zijn, VOORDAT u met de montage begint | Haal alle onderdelen uit het pakket (of uit de pakketten) en leg ze open op een schoon werkoppervlak | Bekijk alle montagehandleidingen | Monteer alle onderdelen volgens de aanwijzingen van deze handleiding. Sla geen stappen over.

Leggere le linee guida di assistenza e sicurezza alla fine di questo manuale | Assicurarsi che non ci siano parti mancanti o danneggiate PRIMA di iniziare l'assemblaggio | Estrarre tutti i componenti dall'imballo e posizionarli su una superficie di lavoro pulita | Consultare tutte le istruzioni di montaggio | Assemblare tutti i componenti secondo le istruzioni contenute nel manuale. Non saltare nessuna fase.


Leia as diretrizes de cuidados e segurança que constam da parte final deste manual | Verifique para se assegurar de que não há peças em falta ou danificadas ANTES de começar a preparar a montagem | Retire todas as peças da embalagem e espalhe-as numa superfície de trabalho limpa | Reveja todas as instruções de montagem | Monte todas as peças de acordo com as instruções do manual. Não salte quaisquer passos.

REQUIRED TOOLS | OUTILS EXIGÉS | **HERRAMIENTAS NECESARIAS** | BENÖTIGTE WERKZEUGE | **BENODIGD GEREEDSCHAP** | ATTREZZATURA OCCORRENTE | **FERRAMENTAS NECESSÁRIAS**



SPATULA | SPATULE | **ESPÁTULA** | SPACHTEL | **SPATEL** | SPATOLA | **ESPÁTULA**

- Use spatula (part “SG8”) for easier insertion of panel into profile.
- Utilisez la spatule (partie “SG8”) pour une meilleure insertion du panneau dans le profil.
- Utilice una espátula (pieza “SG8”) para una mejor inserción del panel en el perfil.
- Benutzen Sie den Spachtel (Bezeichnung “SG8”), um die Platten leichter in die Nut einführen zu können.
- Gebruik spatel (onderdeel SG8) voor het gemakkelijk invoeren van het paneel in het profiel.
- Utilizzare la spatola (parte SG8) per inserire il pannello più facilmente nel profilo.
- Utilize uma espátula (peça “SG8”) para facilitar a inserção do painel no perfil.




SG8x2




ASSEMBLY REQUIRES TWO PEOPLE | LE MONTAGE DOIT ÊTRE EFFECTUÉ PAR DEUX PERSONNES | **SE NECESITAN DOS PERSONAS PARA ARMARLO** | ZWEI PERSONEN ZUR MONTAGE NOTWENDIG | **MONTAGE VEREIST TWEE PERSONEN** | L'ASSEMBLAGGIO RICHIEDE DUE PERSONE | **A MONTAGEM EXIGE DUAS PESSOAS**

PARTS LIST

NO.	PART.	Qty.
F1198-1		2
F1198-2		1
B1198-1		3
B1198-2		1
B1198-3		1
B1198-4		1
D601-1		1
D601-7		1
D601-8		1
D601-9		1
D601-10		1
D601-11		1
R1293-1		2
R1293-2		1
R1293-3		1
B207-1		4
B207-2		2
B825-1		4
B825-2		2
T1670-2		1
T1670		1
S91670		1


NO.	PART.	Qty.
S11620		1
S11156		2
S1190		2
S11700		4
S21235		1
S31146		2
S3860		4
S51650		1
S61650		1
S51650R		1
S51650L		1
S71304		1
S61650R		1
S61650L		1
S10613		2
S8613		2
C1665		1
C1677		1
SG102		2
SG103		2
SG10		1
SG101		1

PARTS LIST


NO.	PART.	Qty.
M01		4
M03-6L		1
M03-7		1
SG1		2
BY		2
M04		1
SG2		4
SG6		4
SG7-2		1
SG7-1		1
SG8		2
SG9		5
Drill		1
DC		2
SG12		2
Z410		96
Z420		113
Z425		4
ZW413		30

NO.	PART.	Qty.
SG13		2
SG14		2
SG15		2
LOCK		1


ROOF PARTS

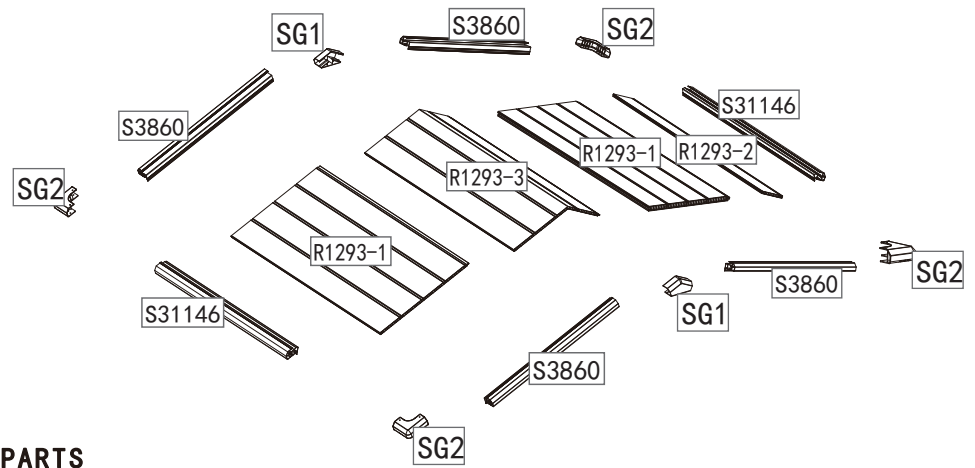


WALL AND WINDOW PARTS

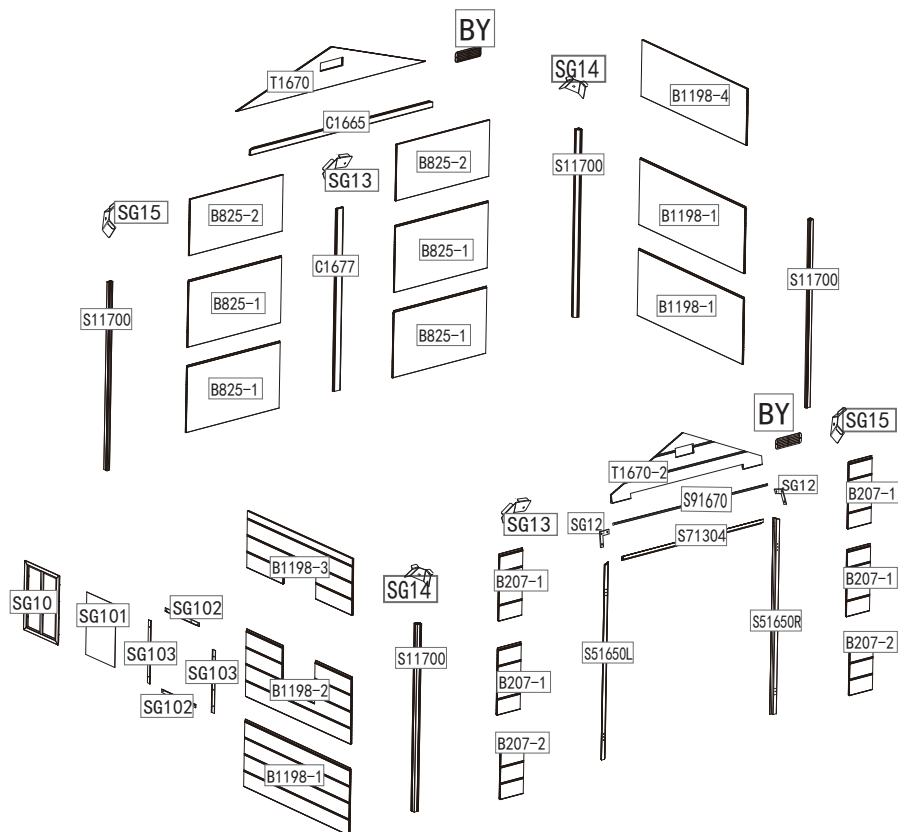

DOOR PARTS

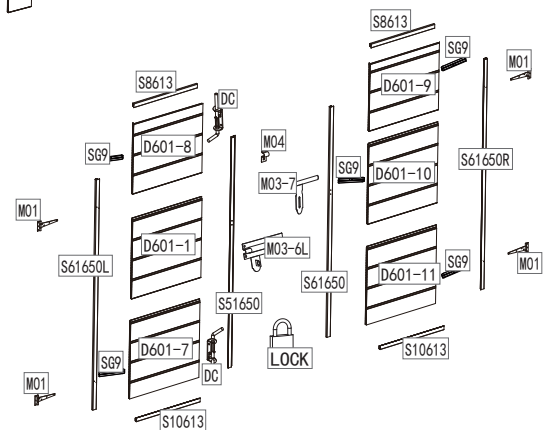

FLOOR PARTS


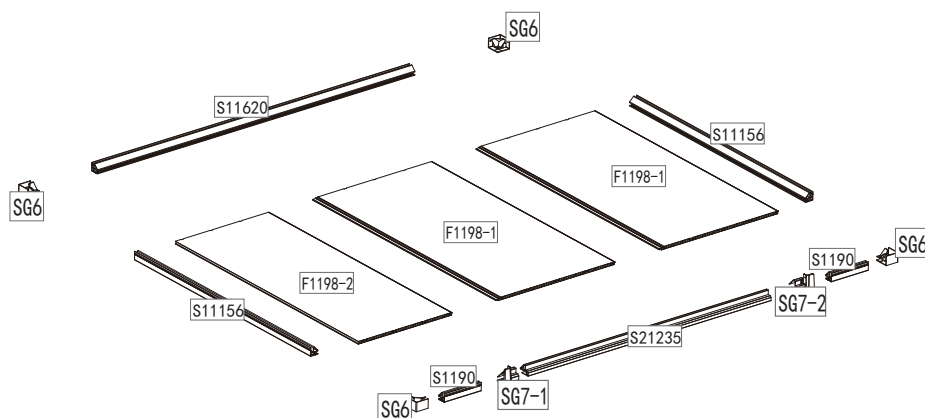


FLOOR ASSEMBLY


● Use spatula (part "SG8") for easier insertion of panel into profile



Note: The crease line of the floor must be underneath

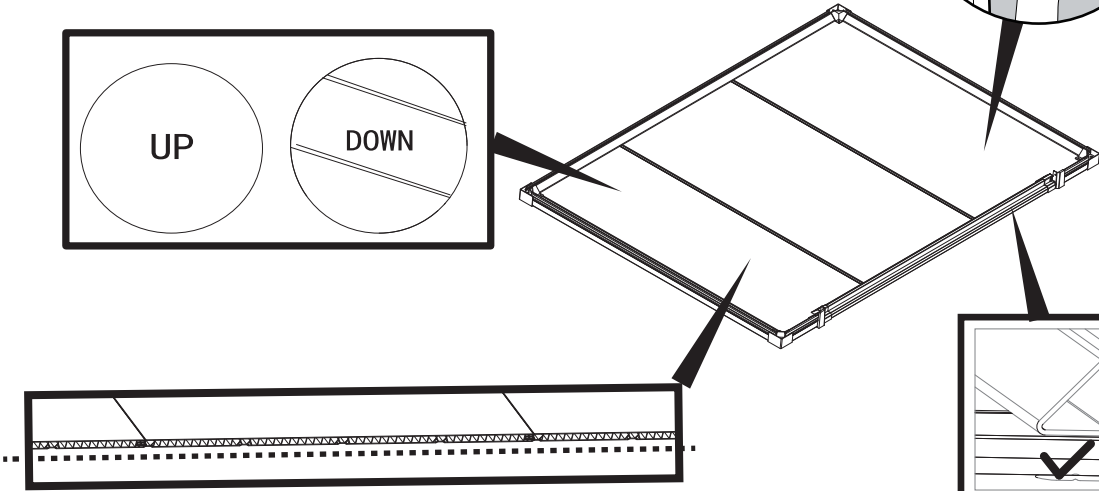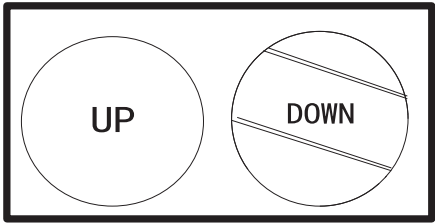


● The floor boards must be straight


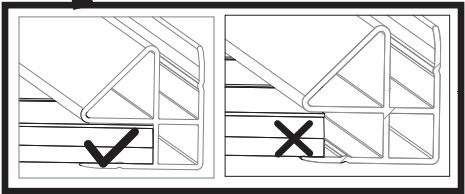


● Fully fit the panel inside the profile


Step 1

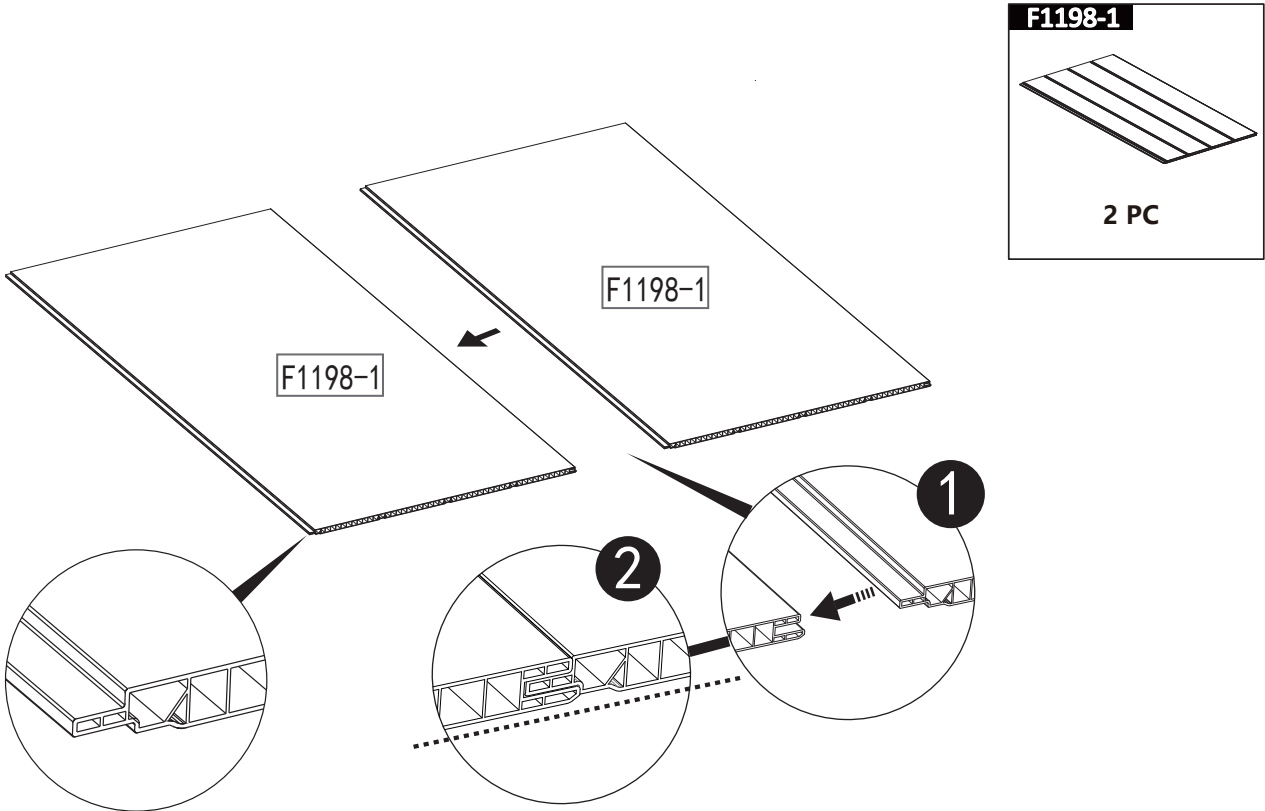


Step 2

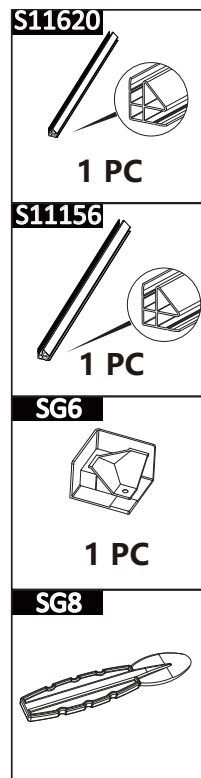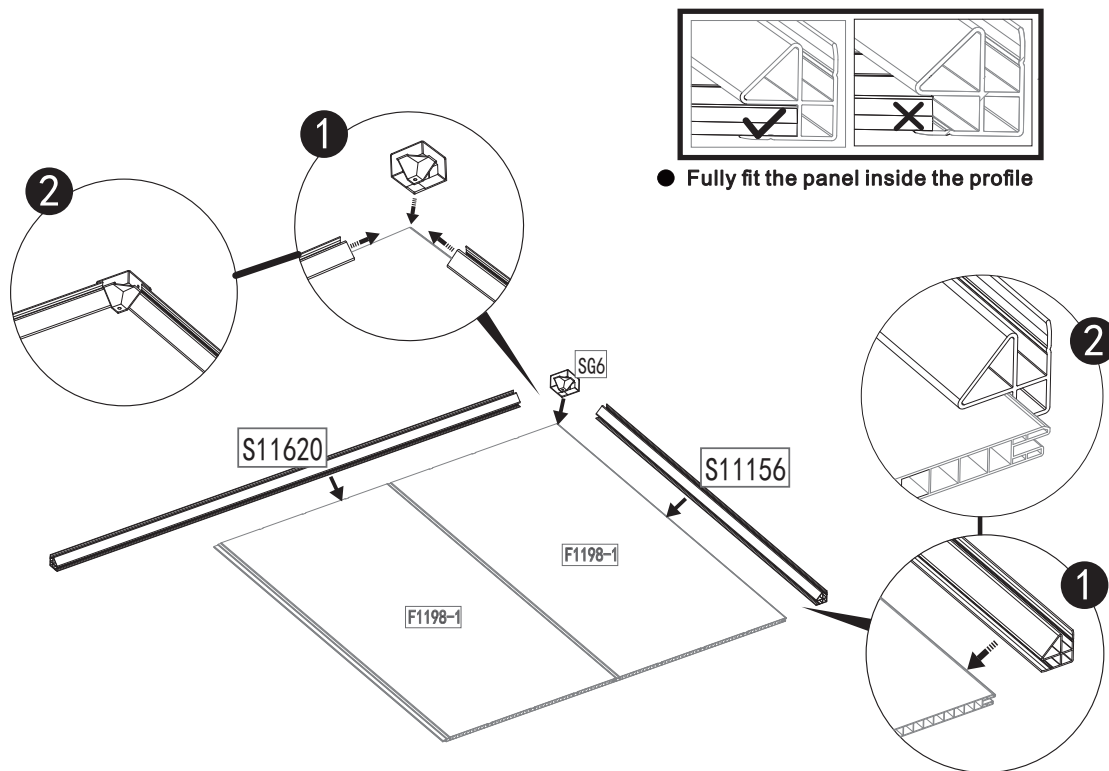


Step 3

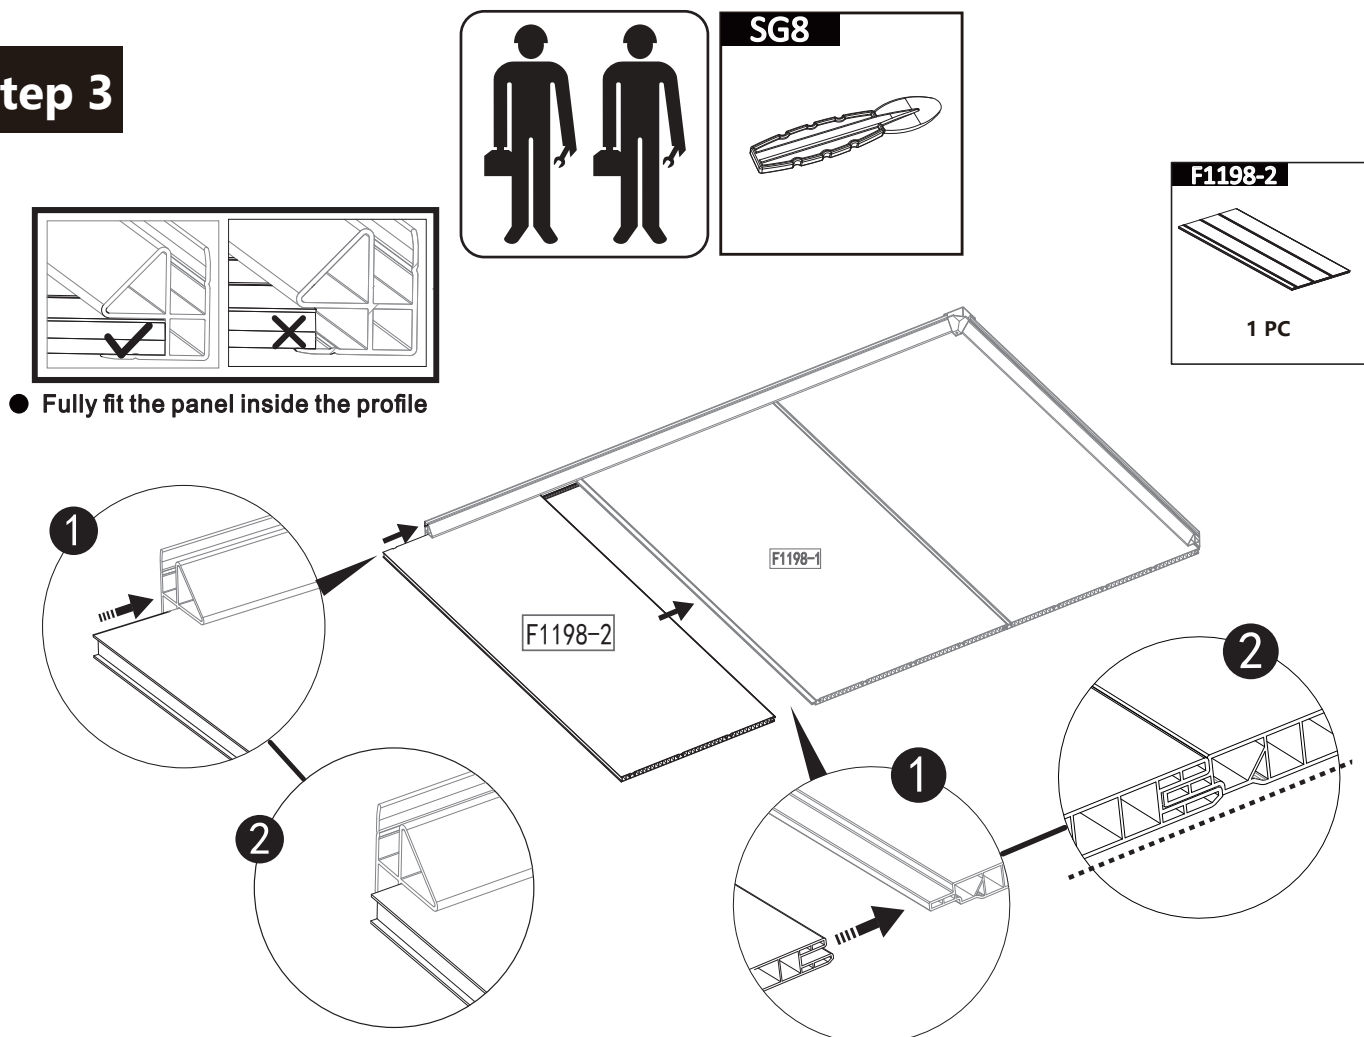


Step 4

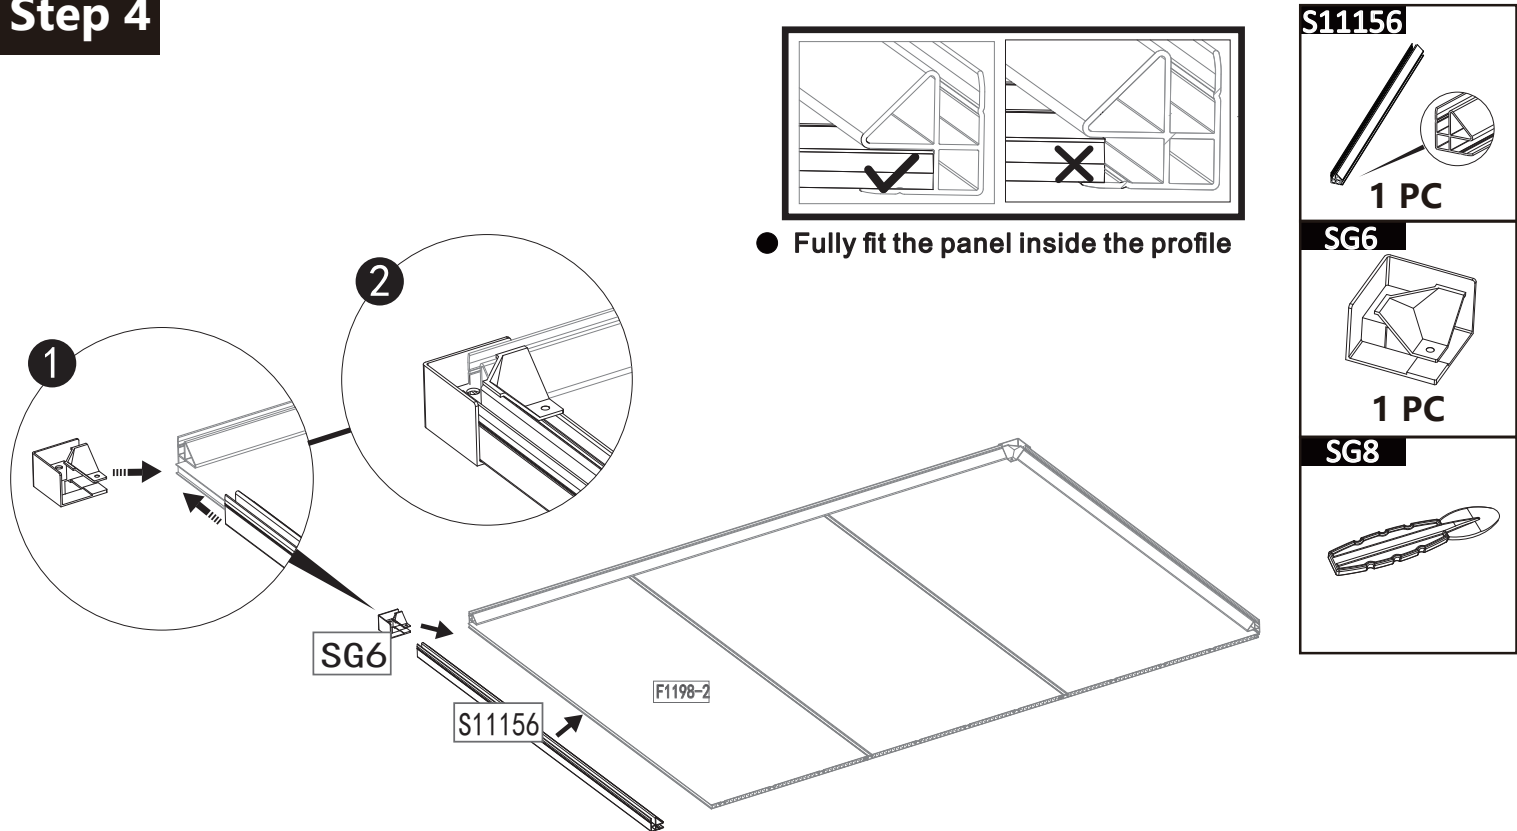

Step 5

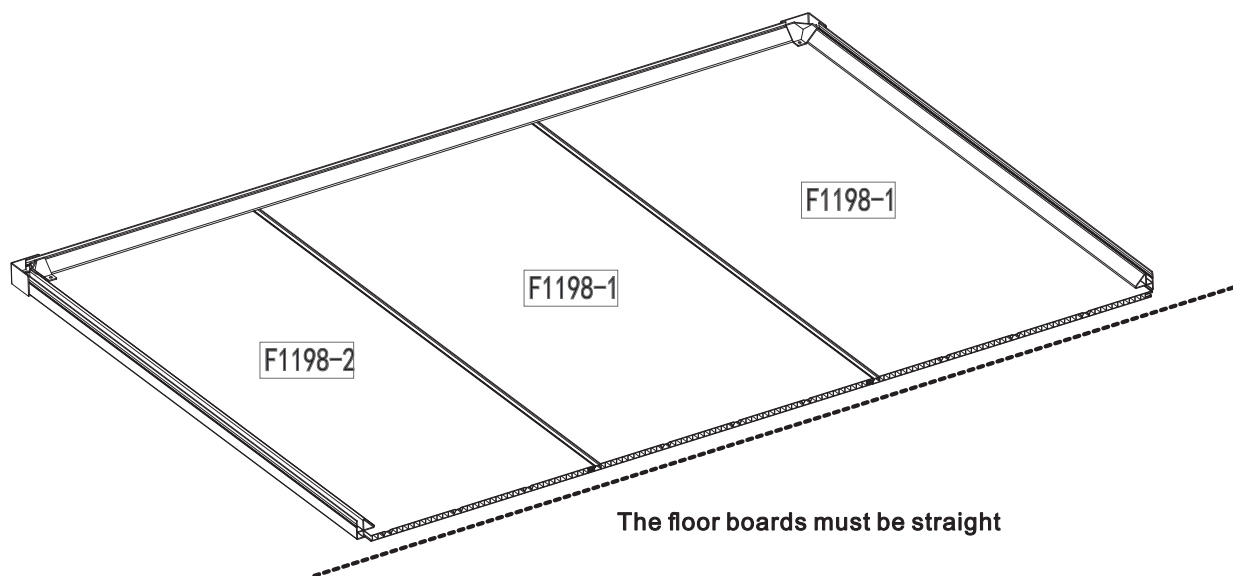

Step 6

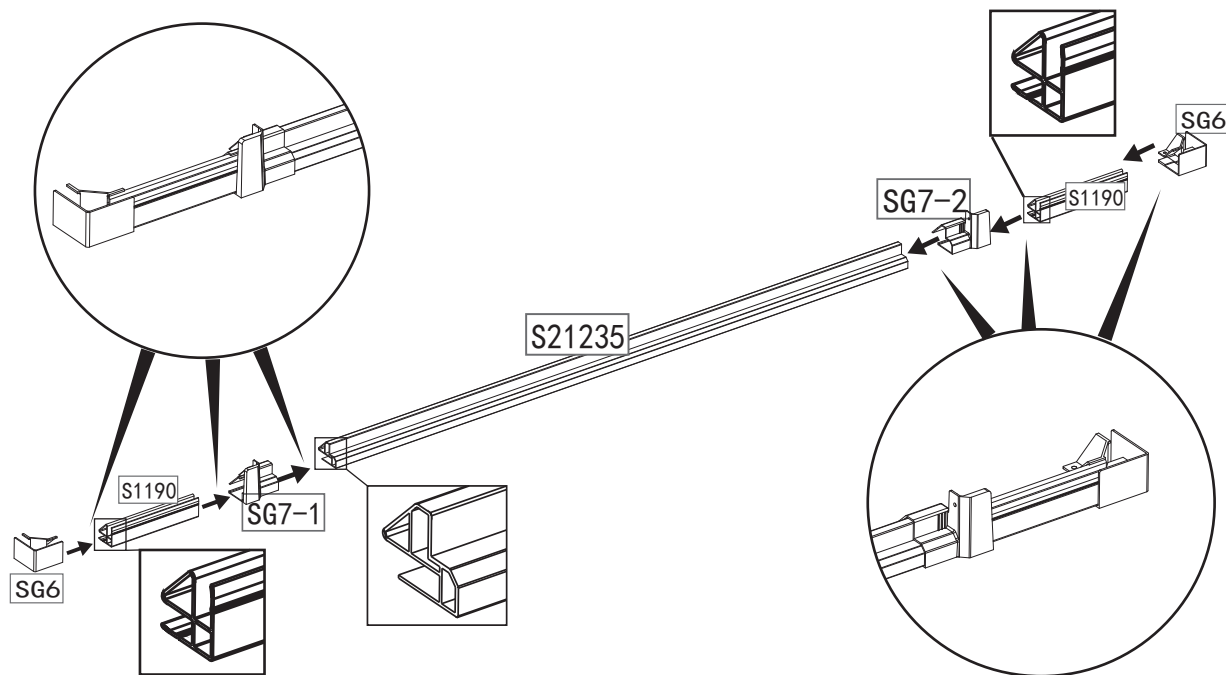

SG6




2 PC

S1190




2 PC

S21235




1 PC

SG7-2




1 PC

SG7-1



1 PC



Step 7

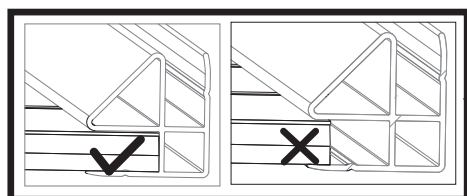




- Fully fit the panel inside the profile




SG8

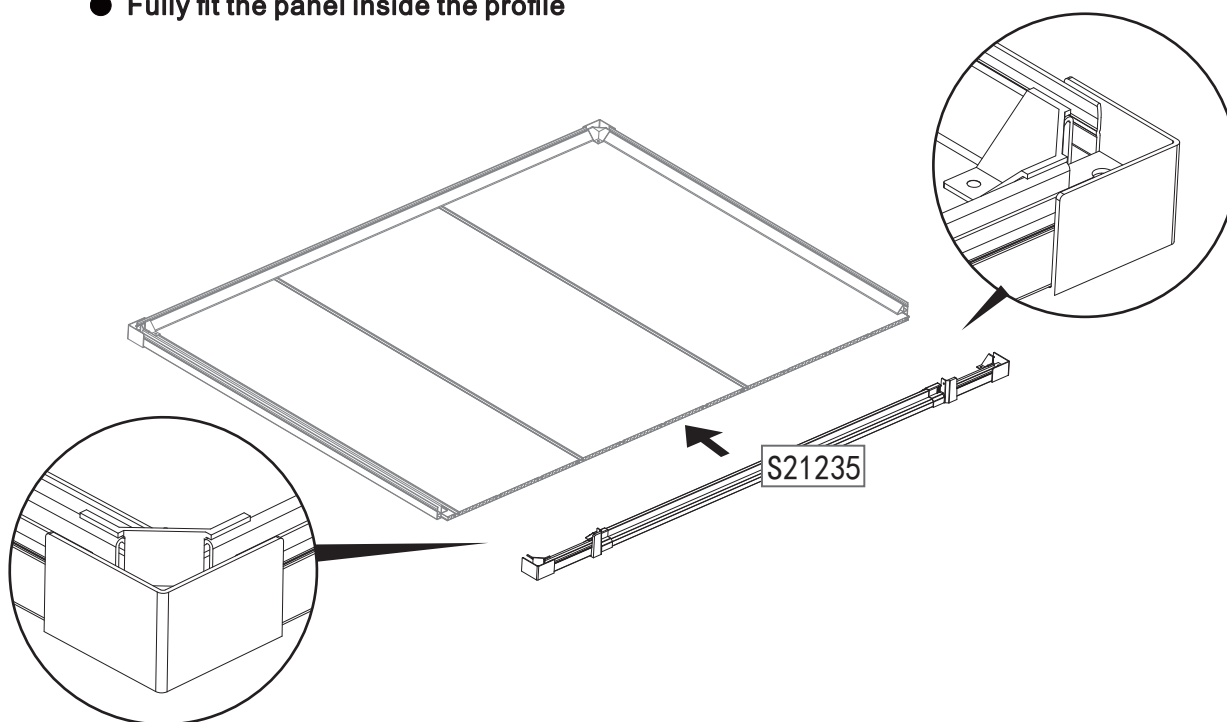


Step 8

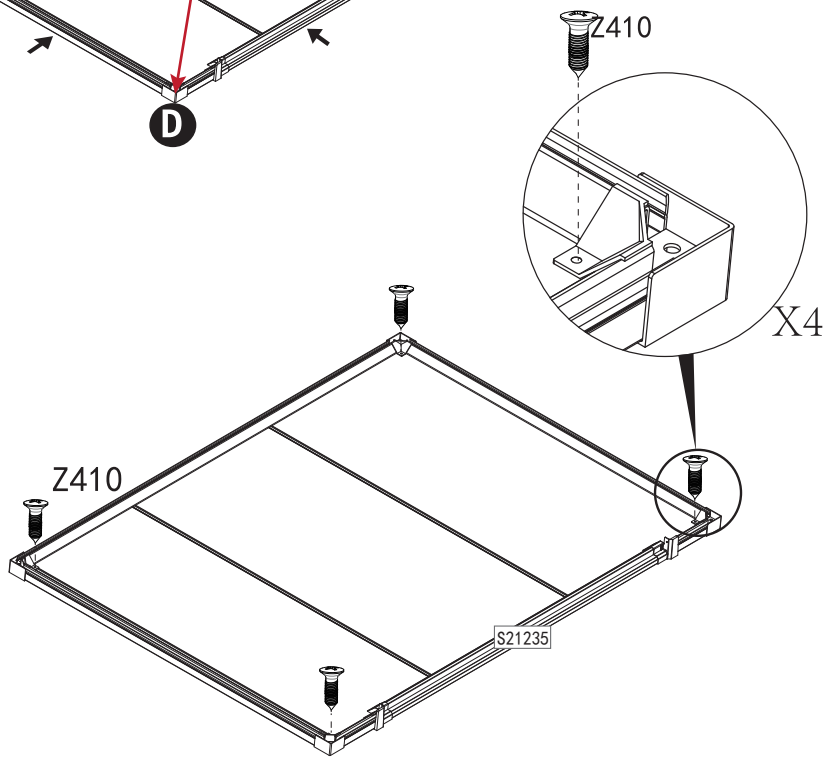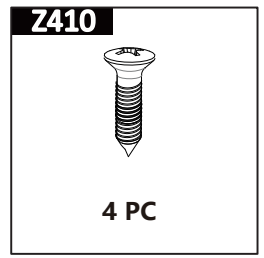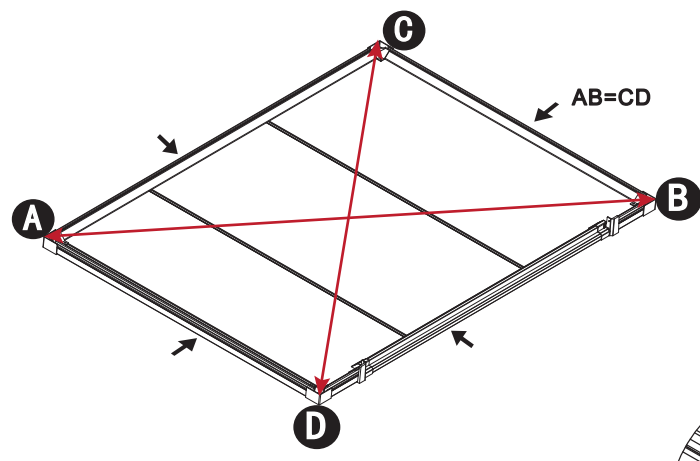


Step 9

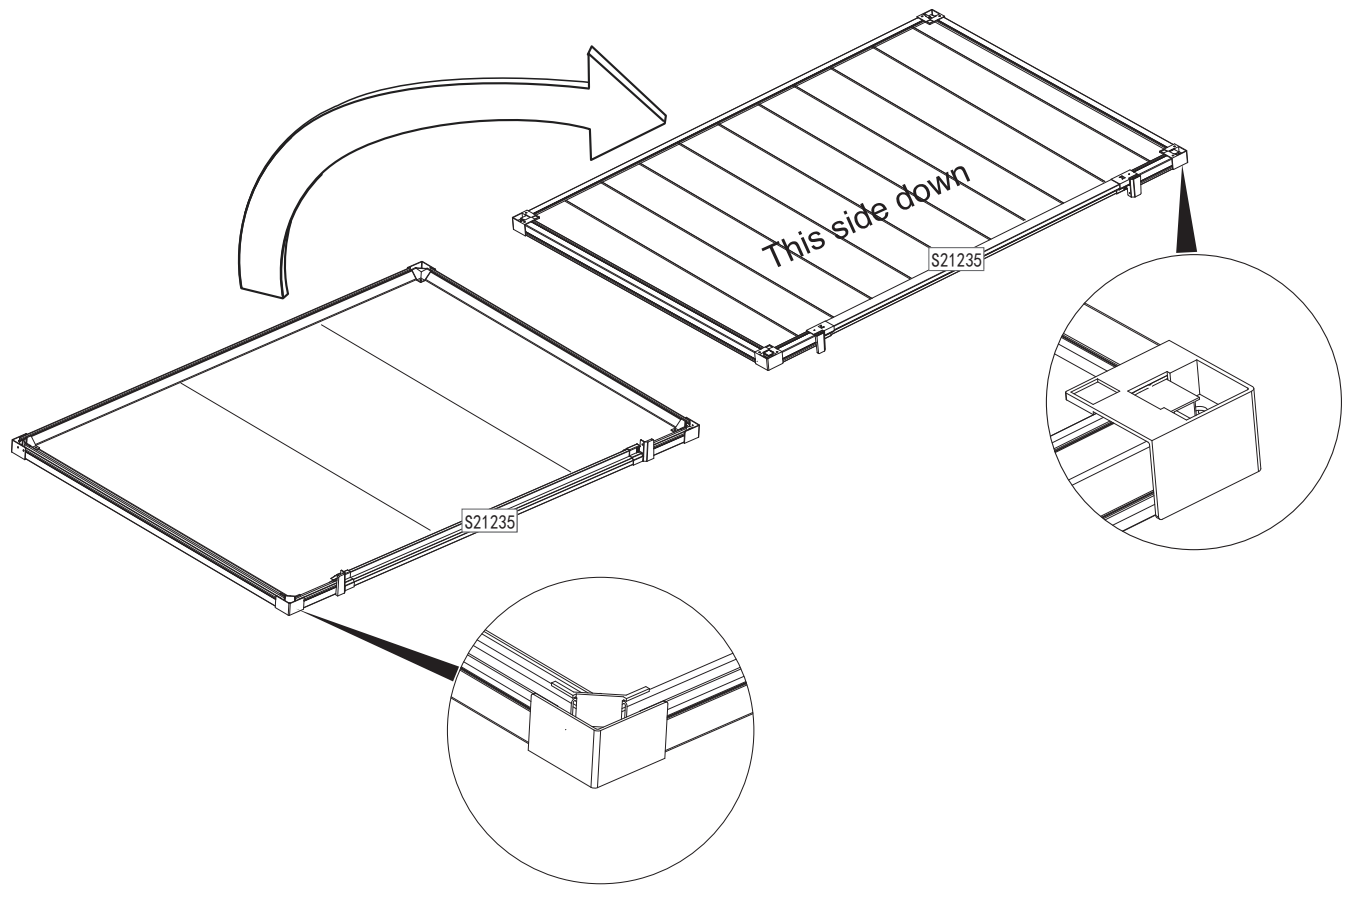


Step 10

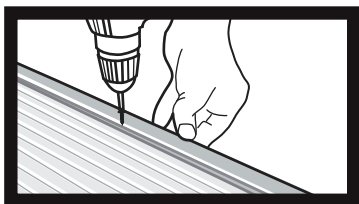


Screw along the marked lines in profile

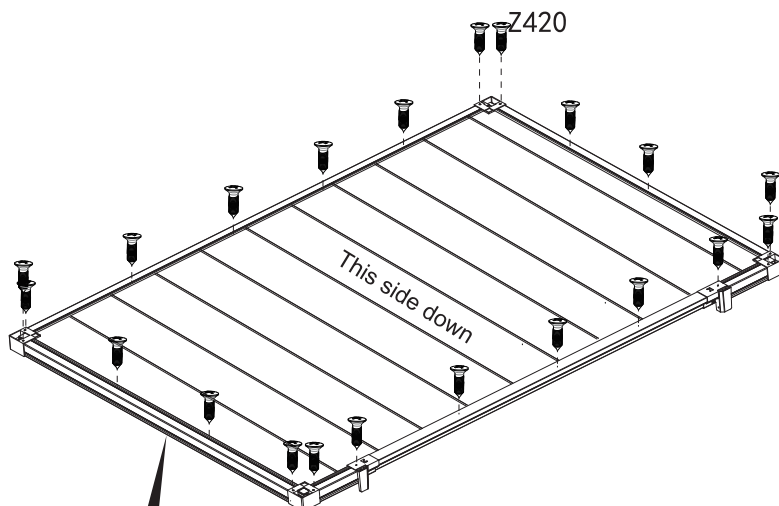


Z420




21 PC

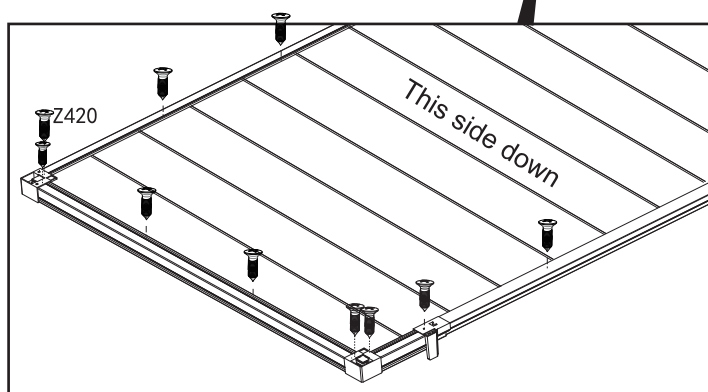


Step 11

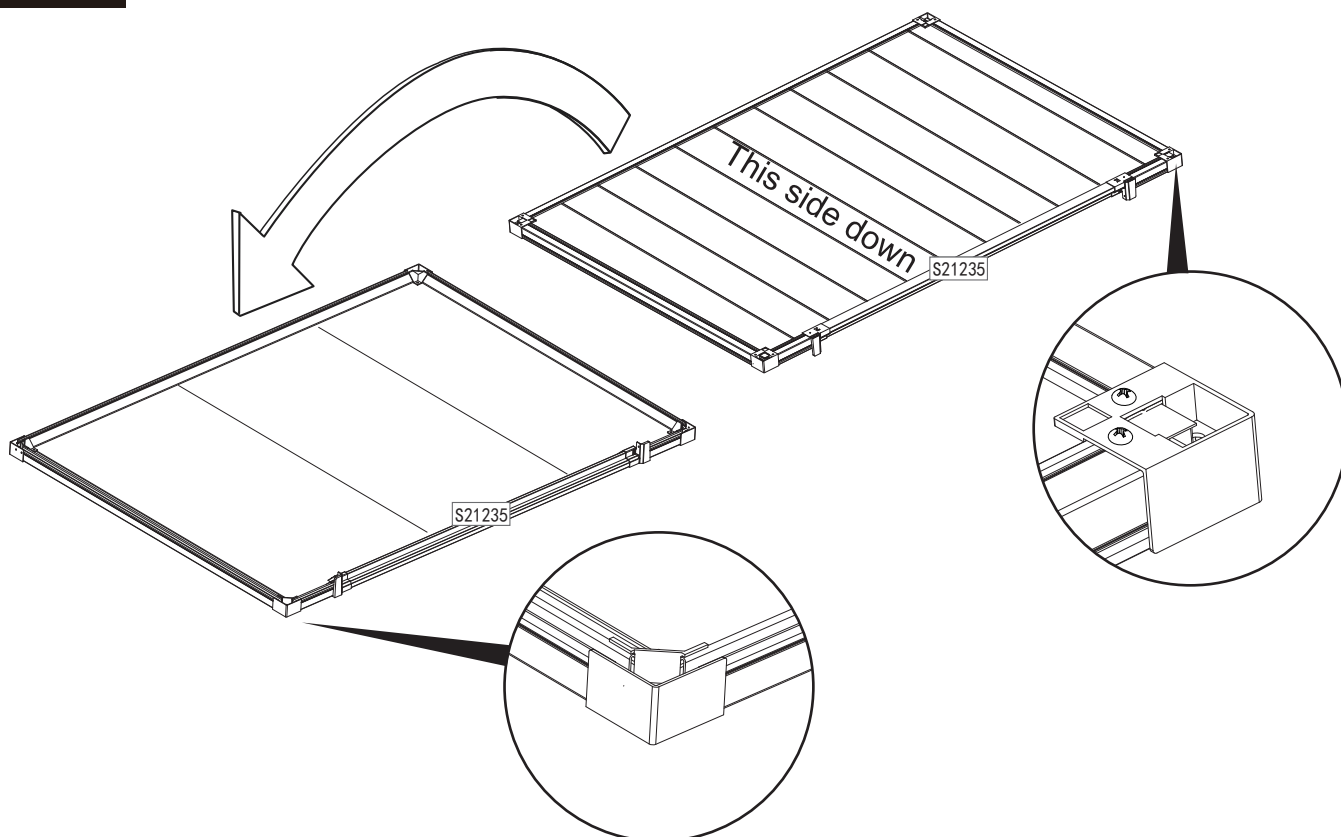


FLOOR ASSEMBLY

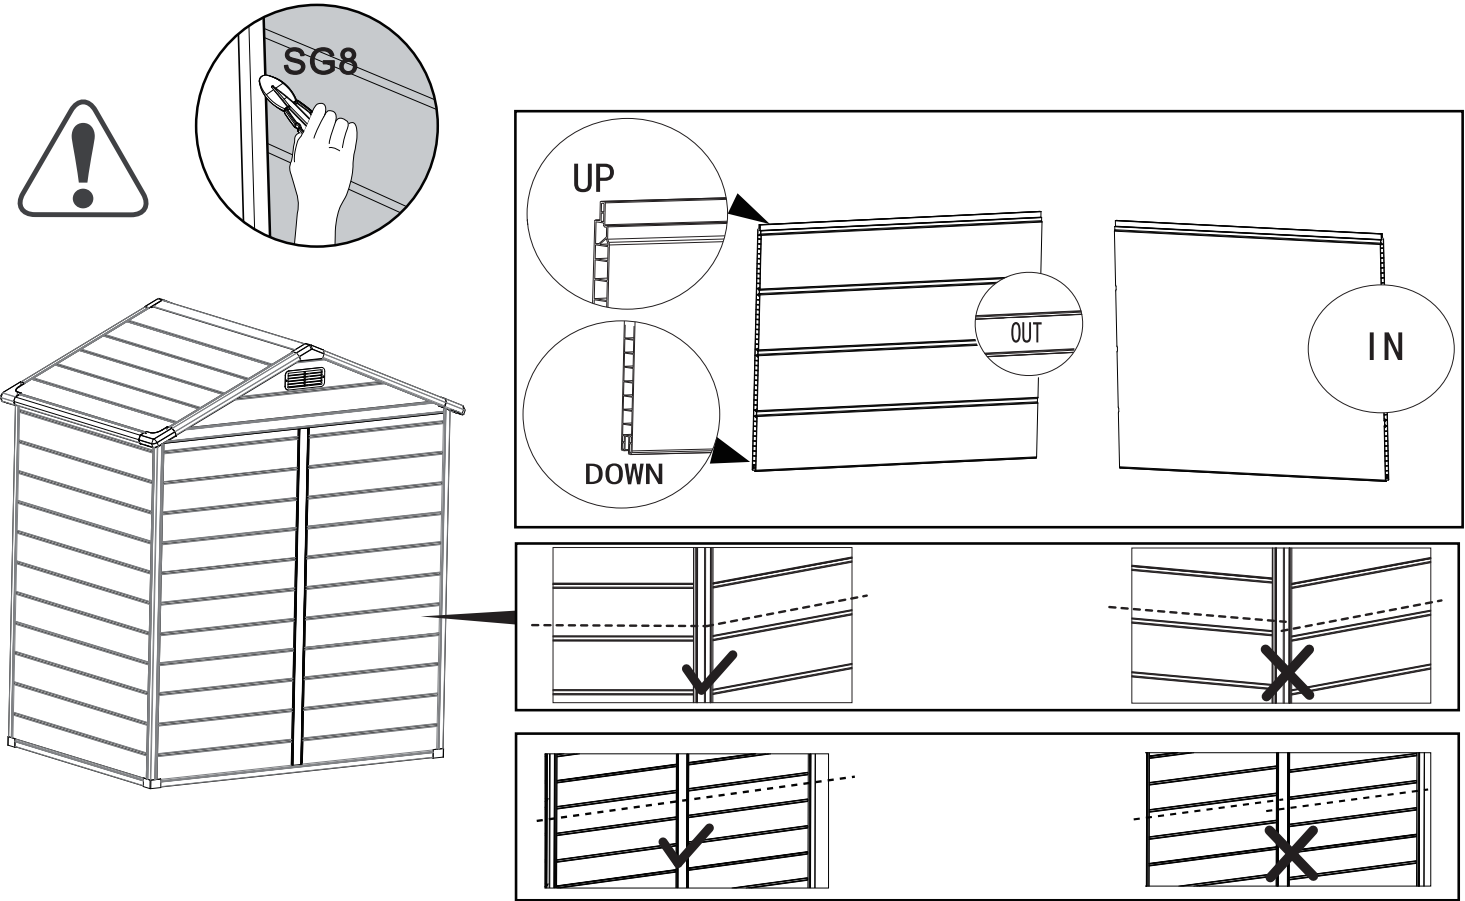



Step 12

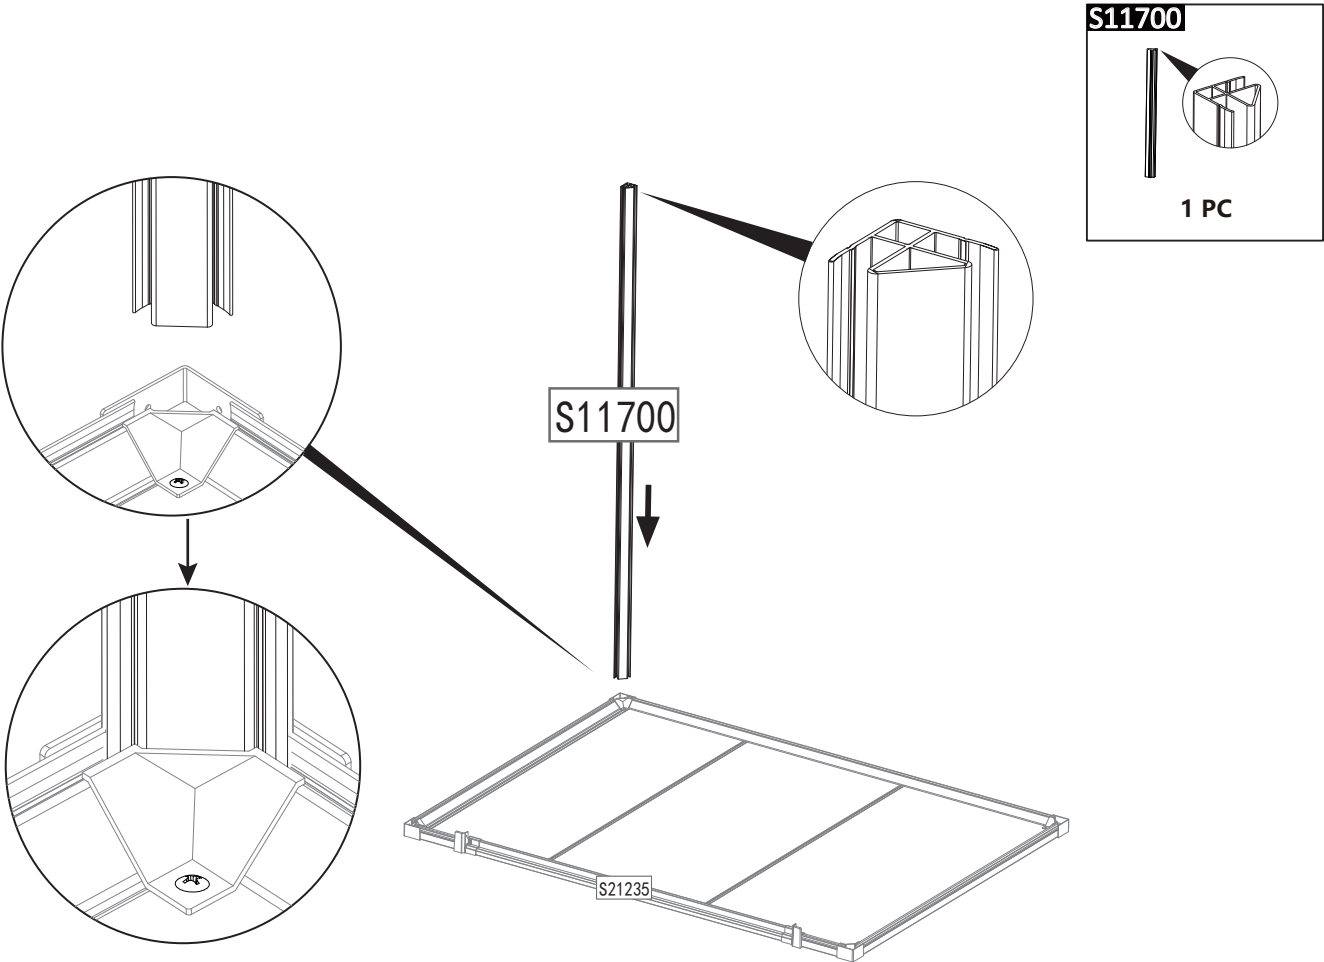

Step 13

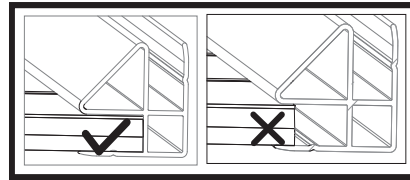


● Fully fit the panel inside the profile

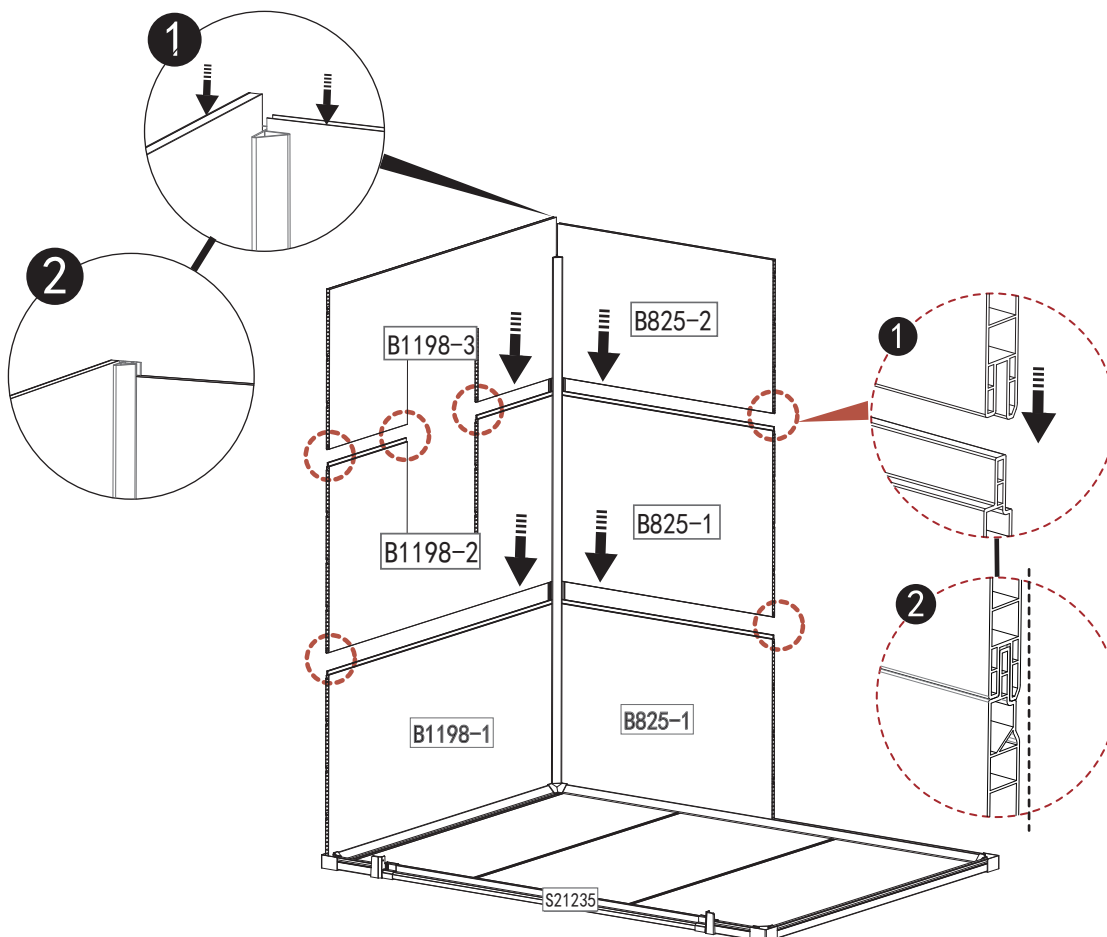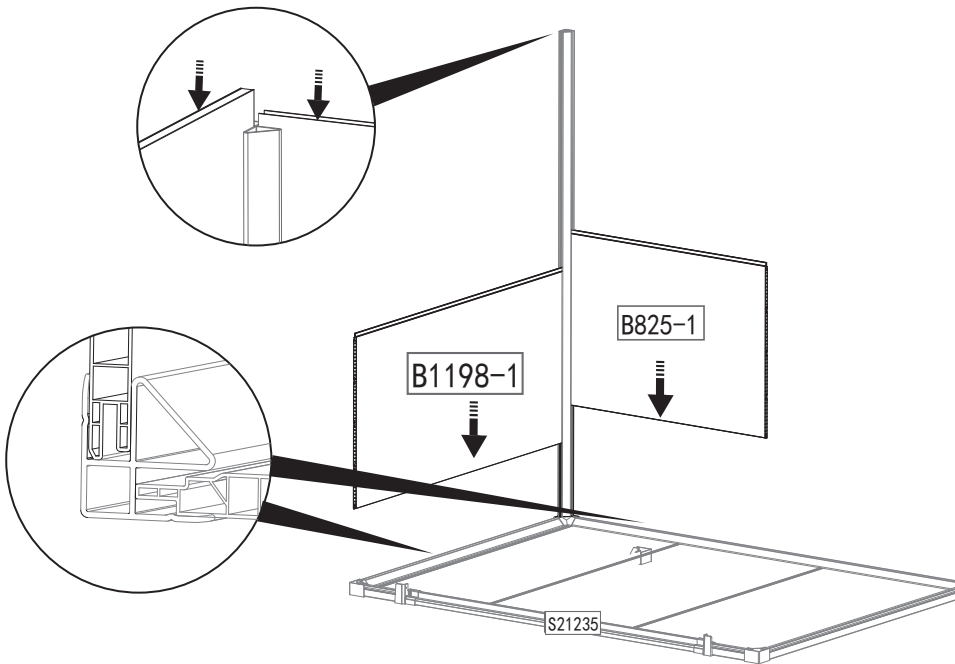


B1198-1
1 PC
B1198-2
1 PC
B1198-3
1 PC
B825-1
2 PC
B825-2
1 PC
SG8



Step 14

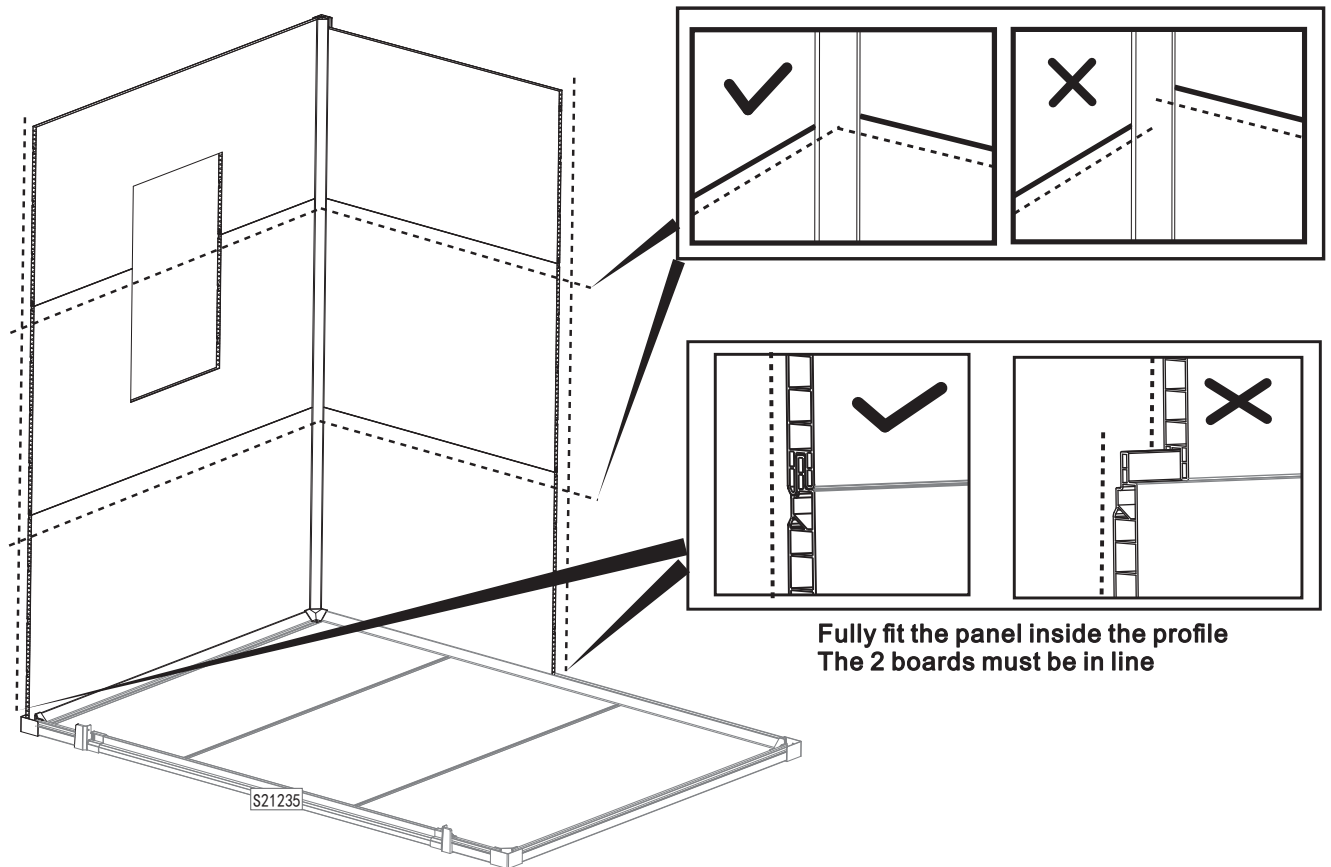


Step 15

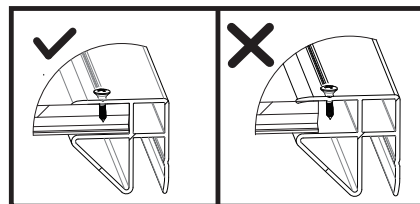


Screw along the marked lines in profile

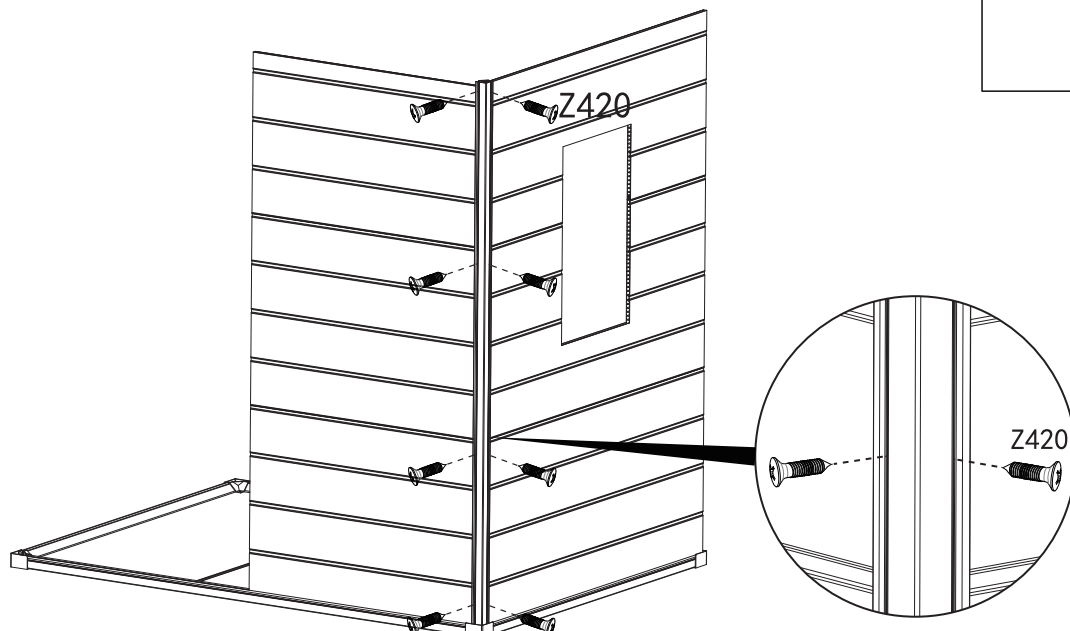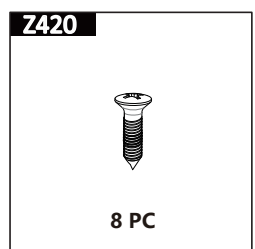

Step 16

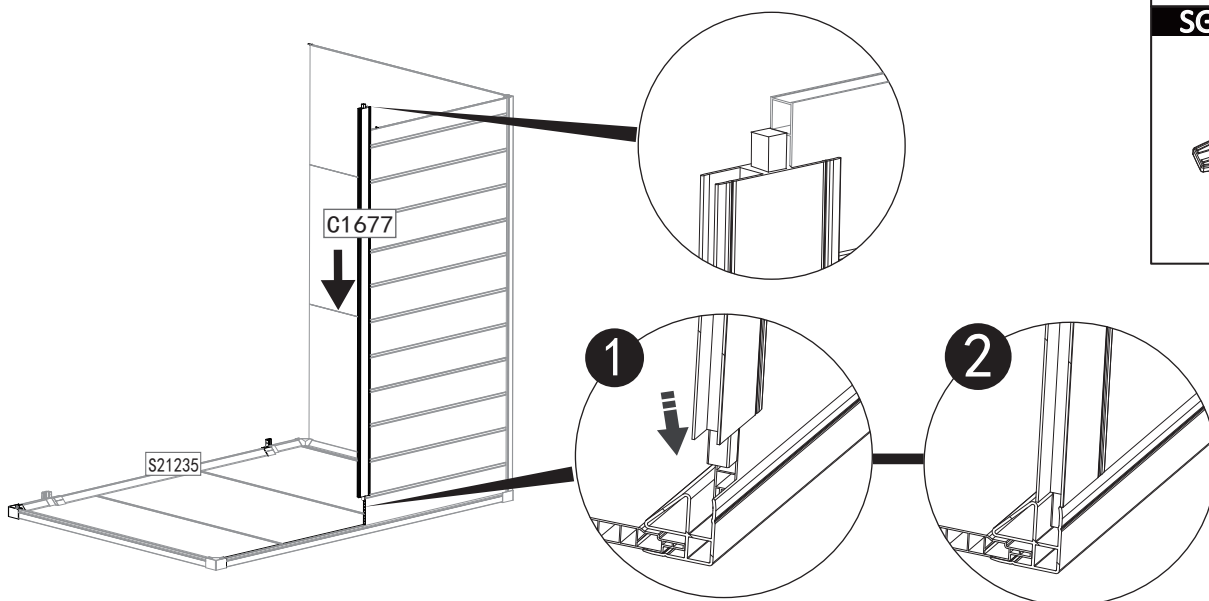

C1677

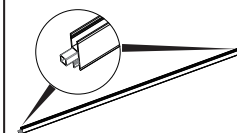


1 PC

SG8




Step 17

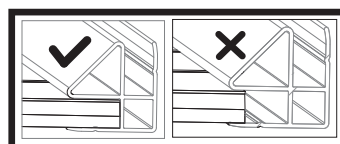


Fully fit the panel inside the profile

B825-1

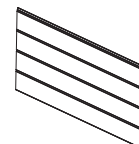



2 PC

B825-2



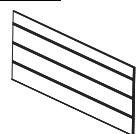


1 PC



SG8

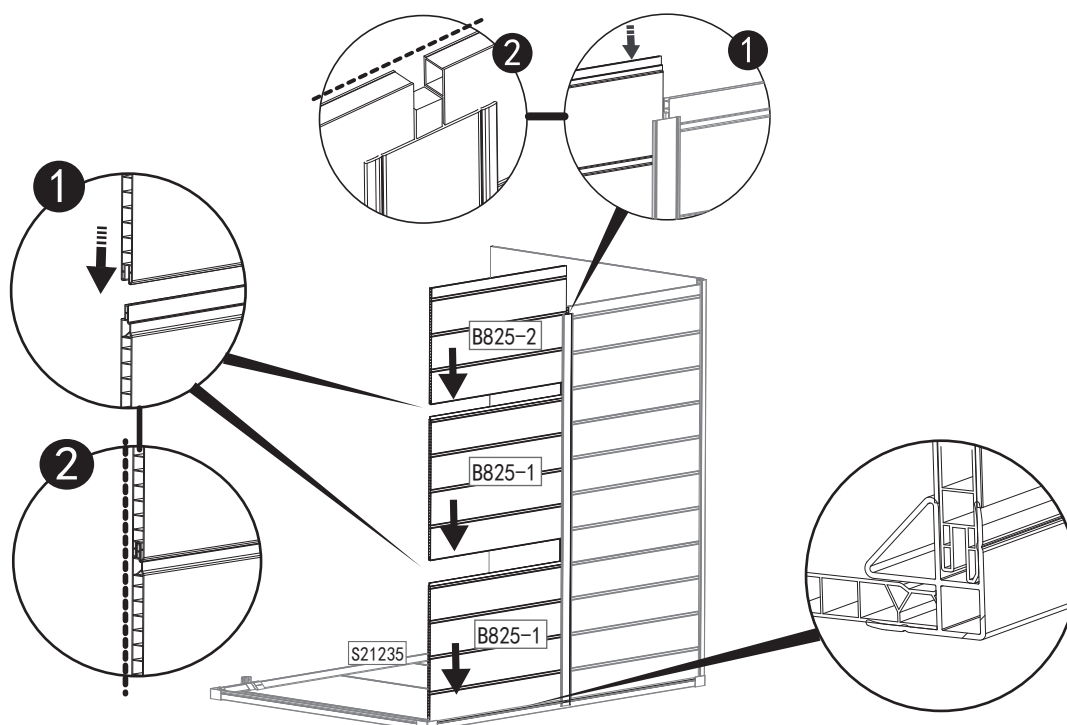


Step 18

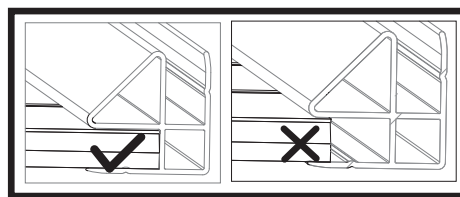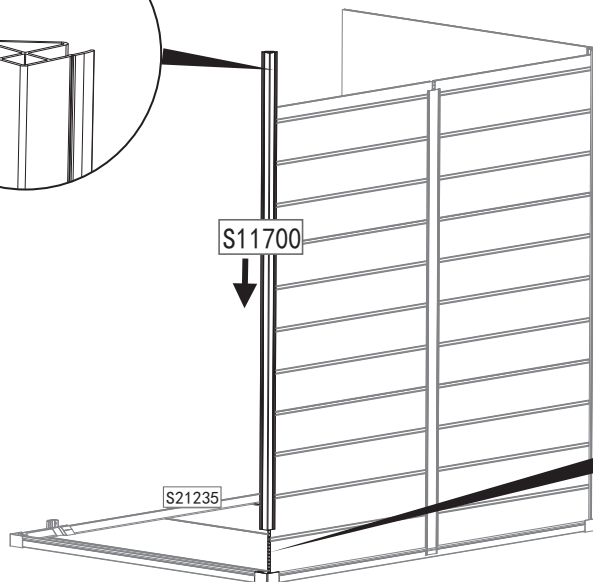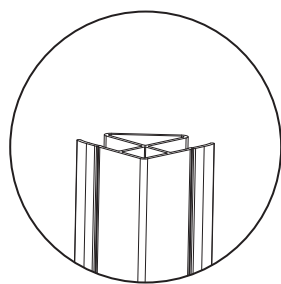



● Fully fit the panel inside the profile

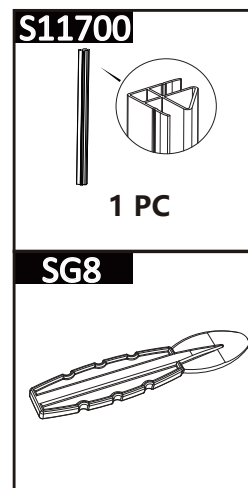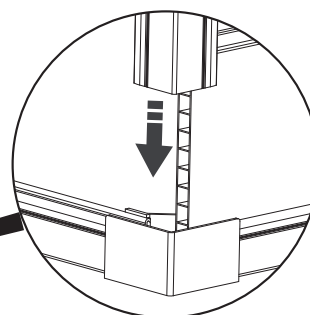


Step 19

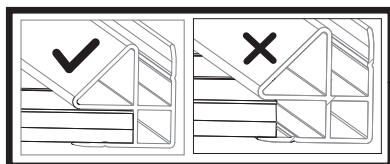


Fully fit the panel inside the profile

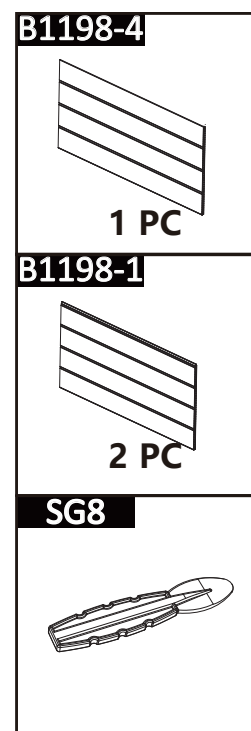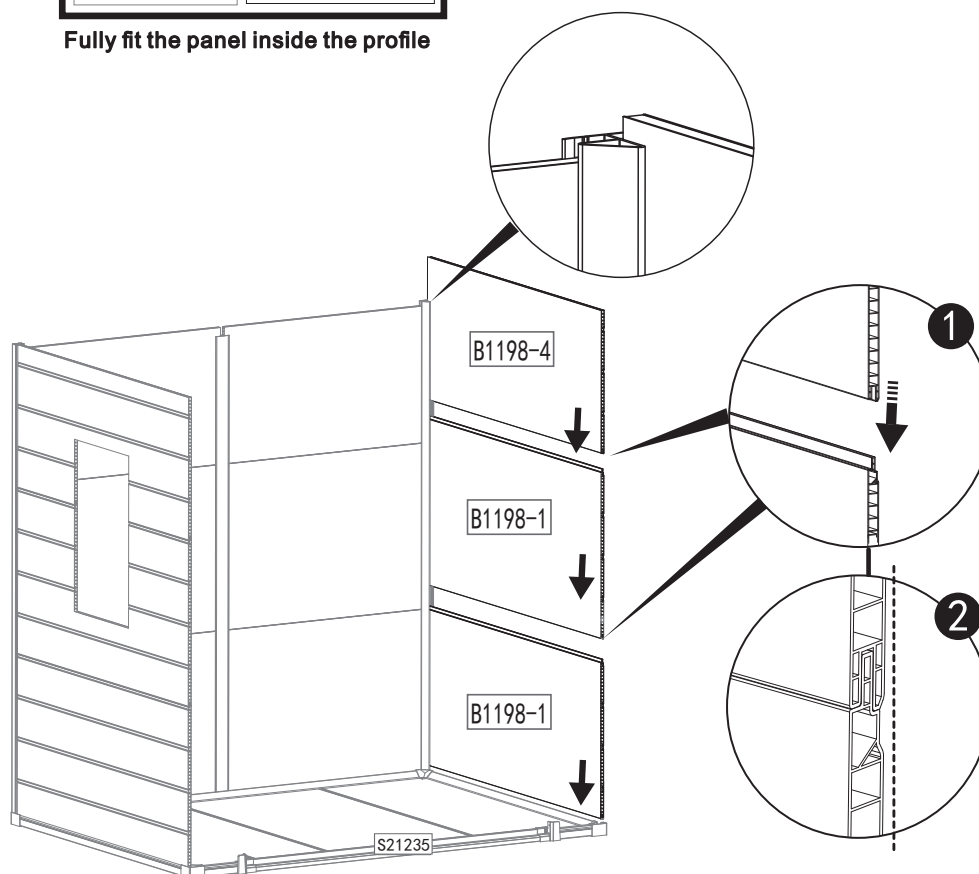


Step 20

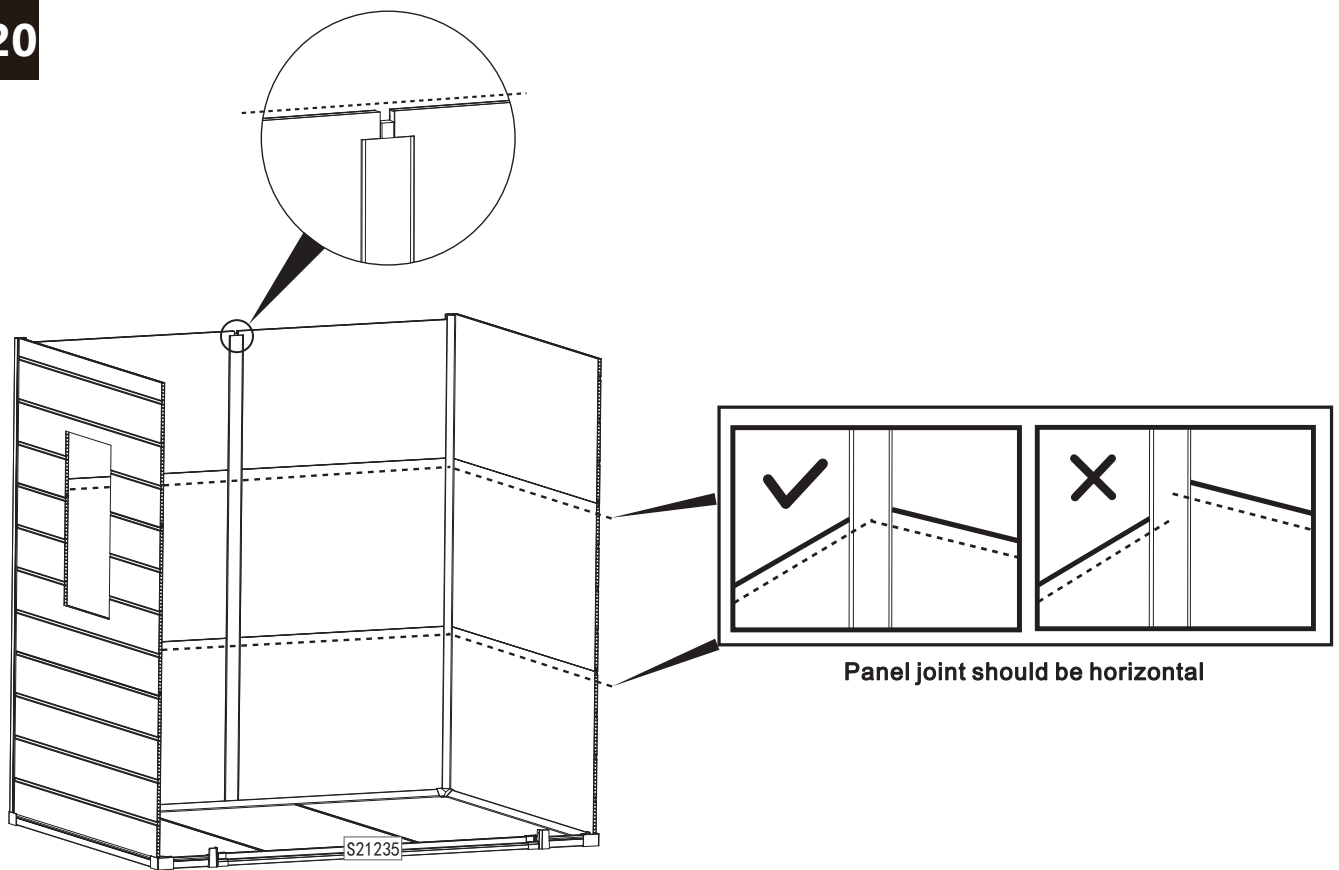


Step 21

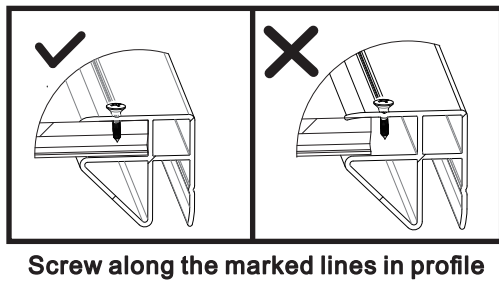



Z420





8 PC

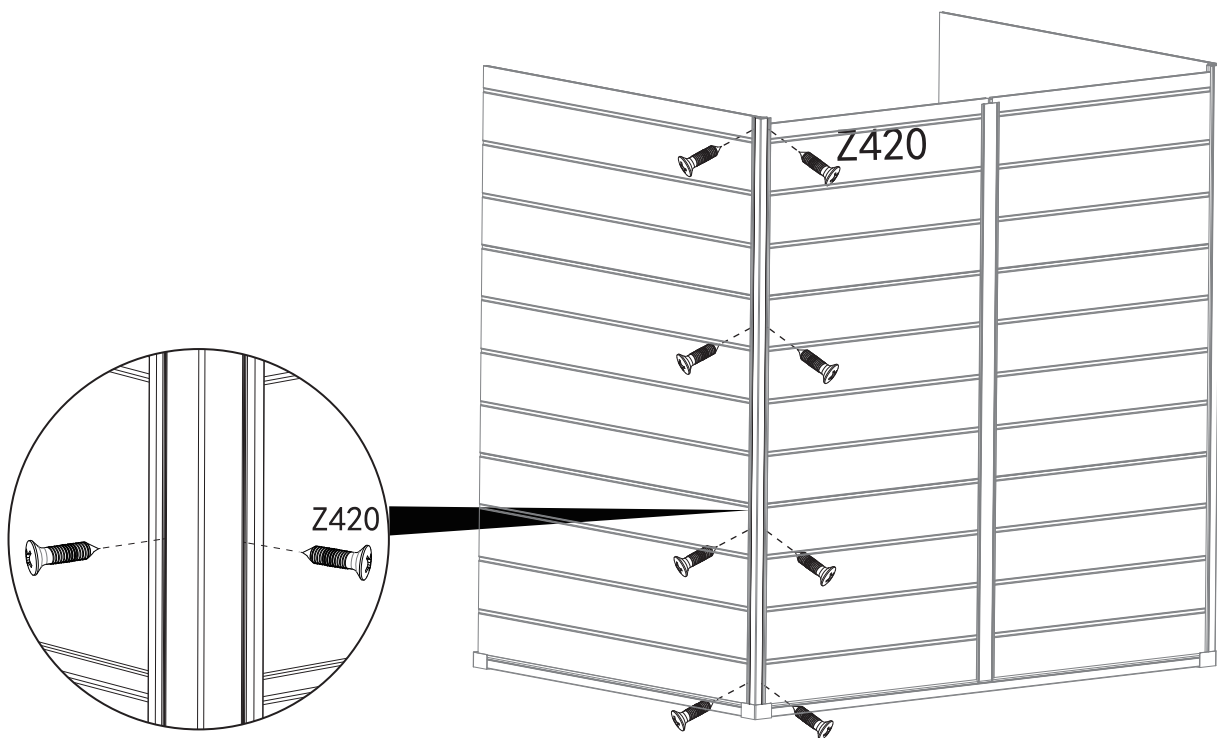




Step 22

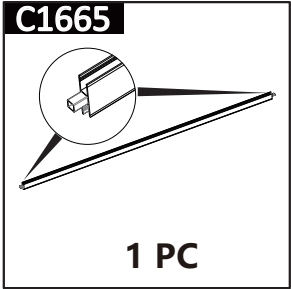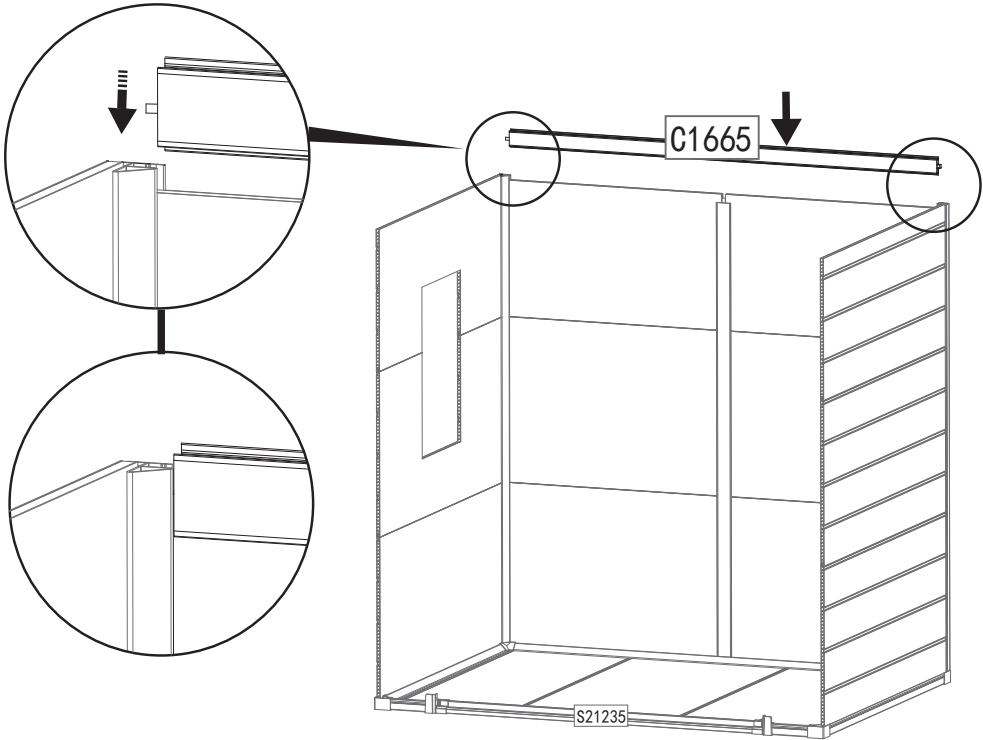

Step 23

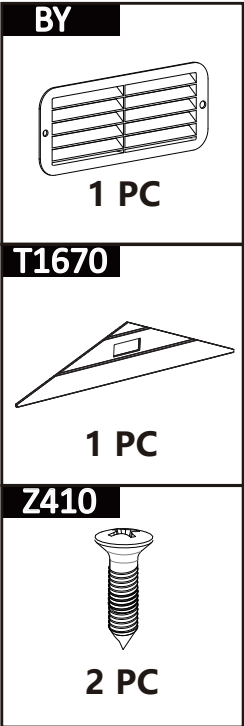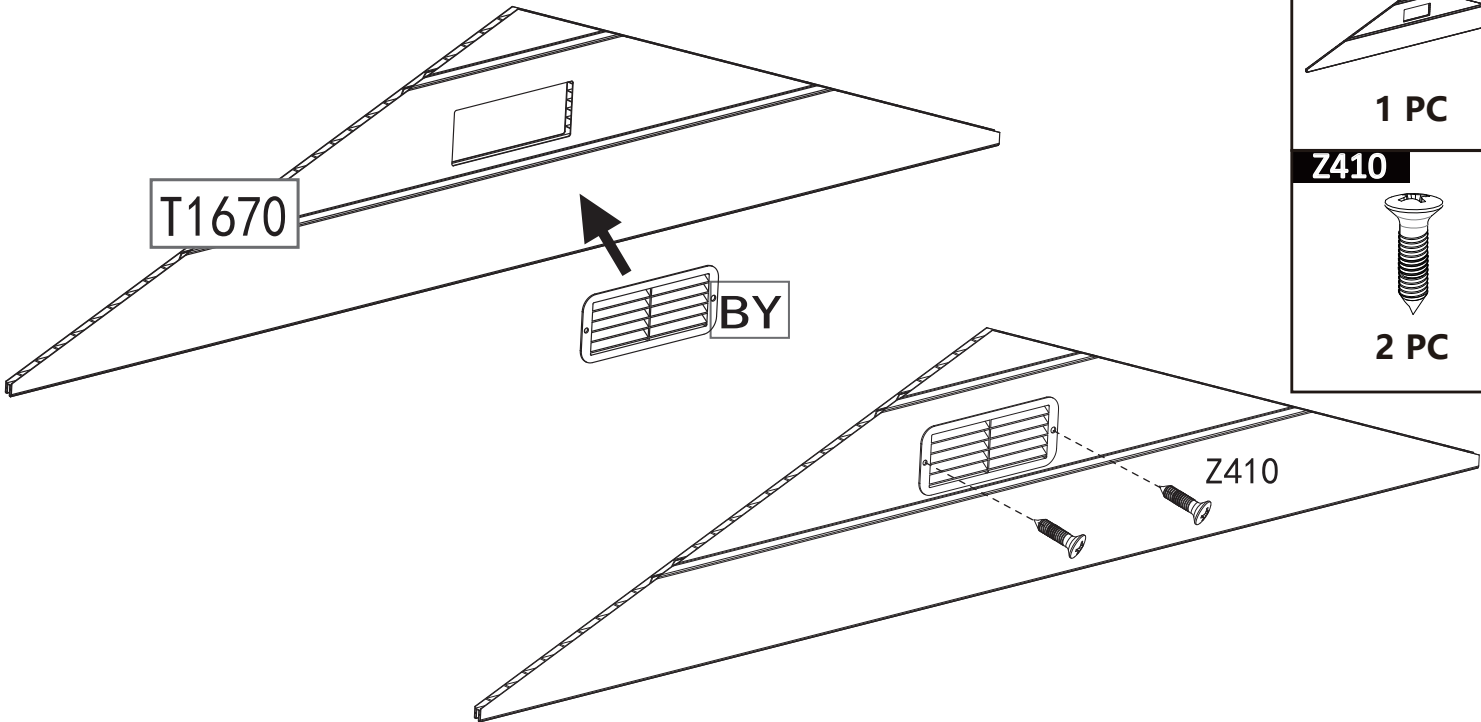


Step 24

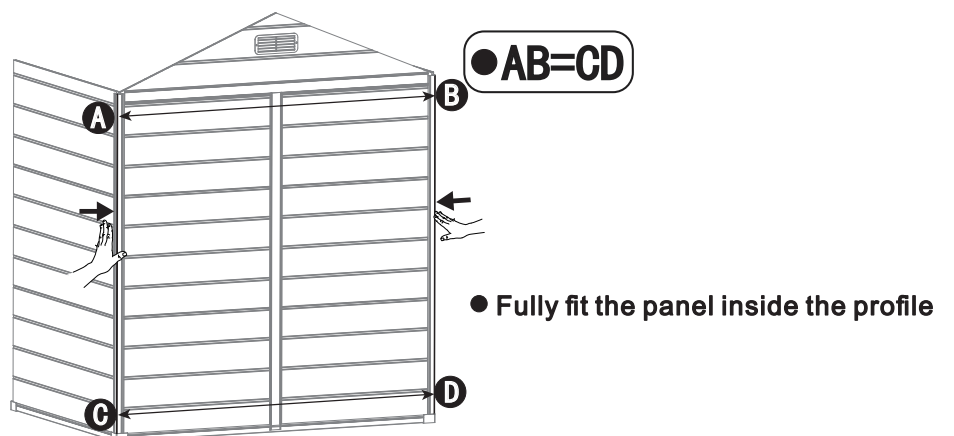
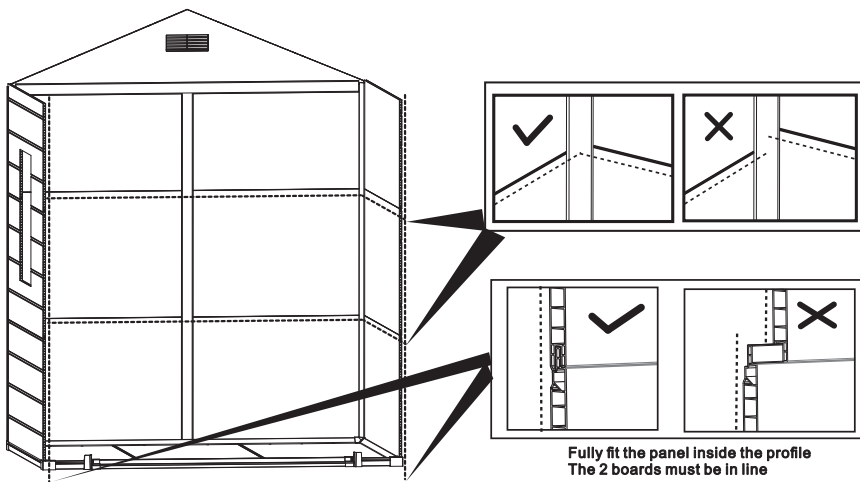
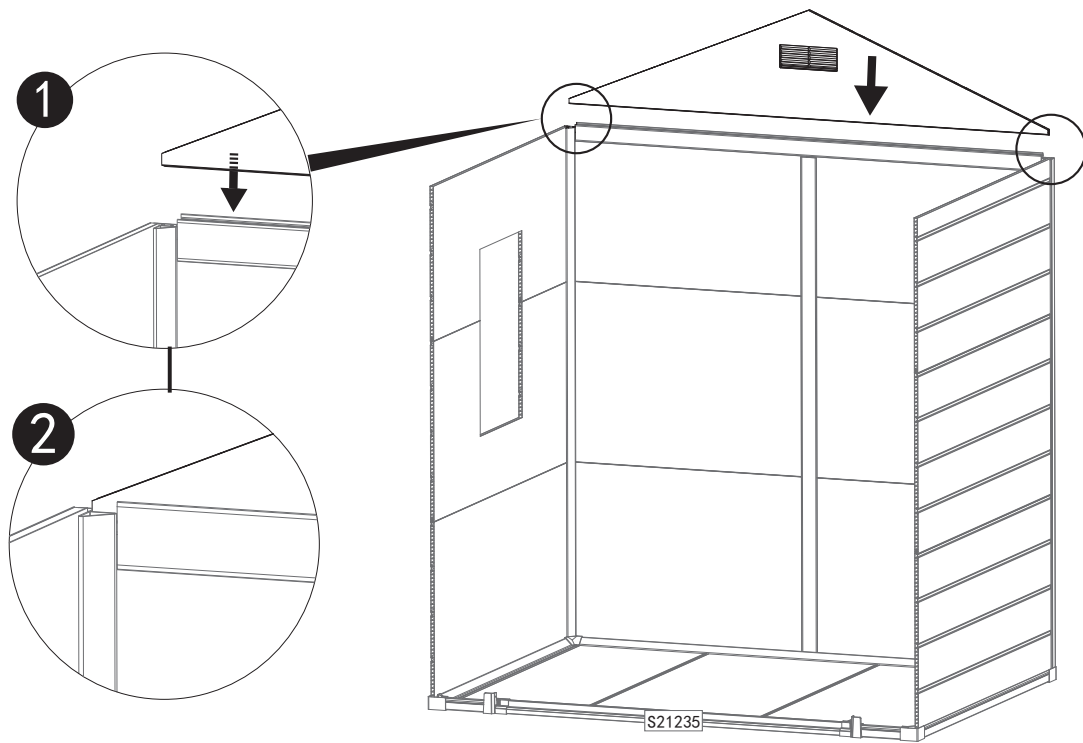


Step 25

Z410




16 PC

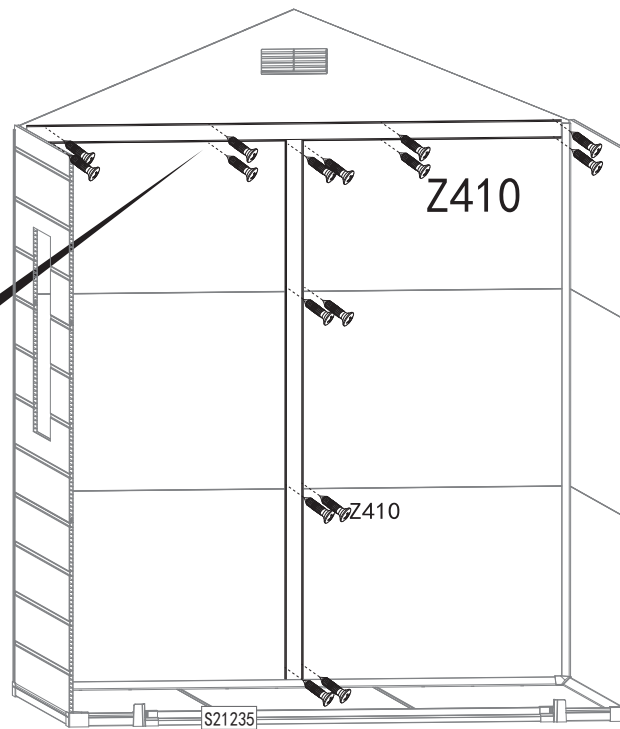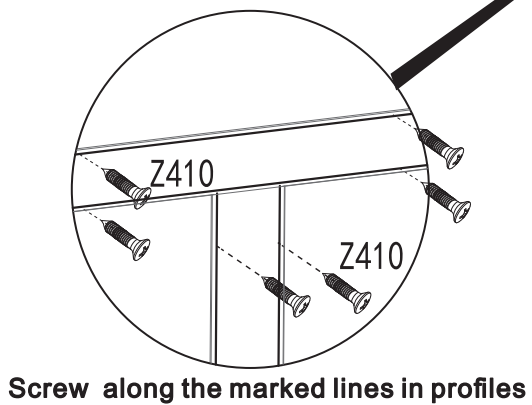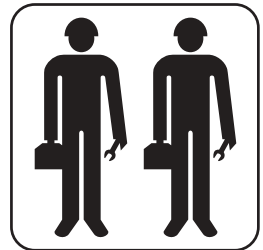


Screw along the marked lines in profiles

Step 26

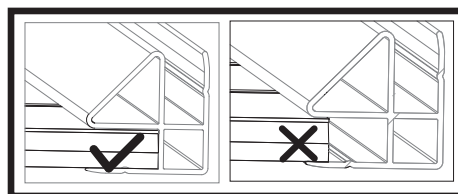


● **Fully fit the panel inside the profile**



S11700

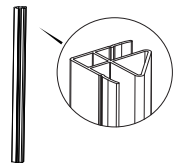


2 PC

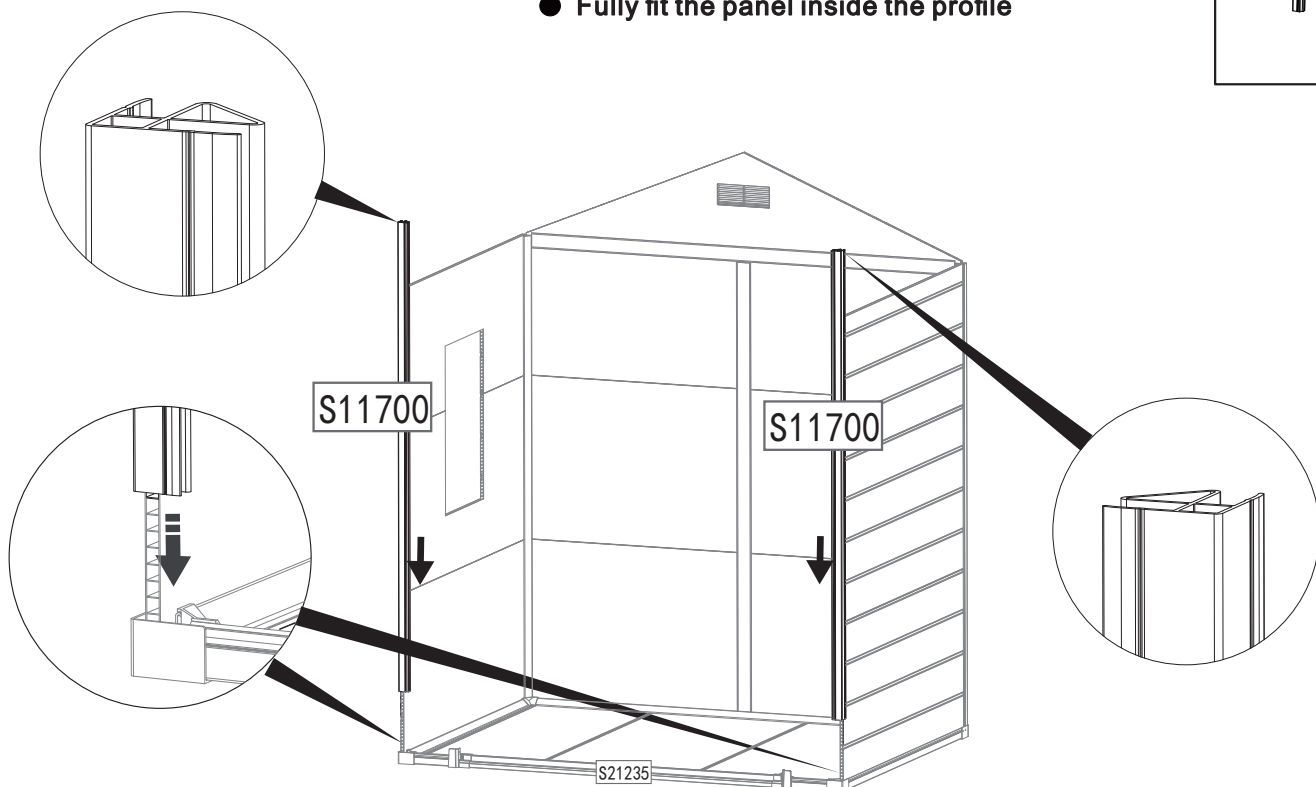



Step 27

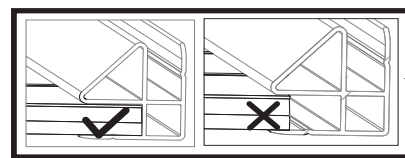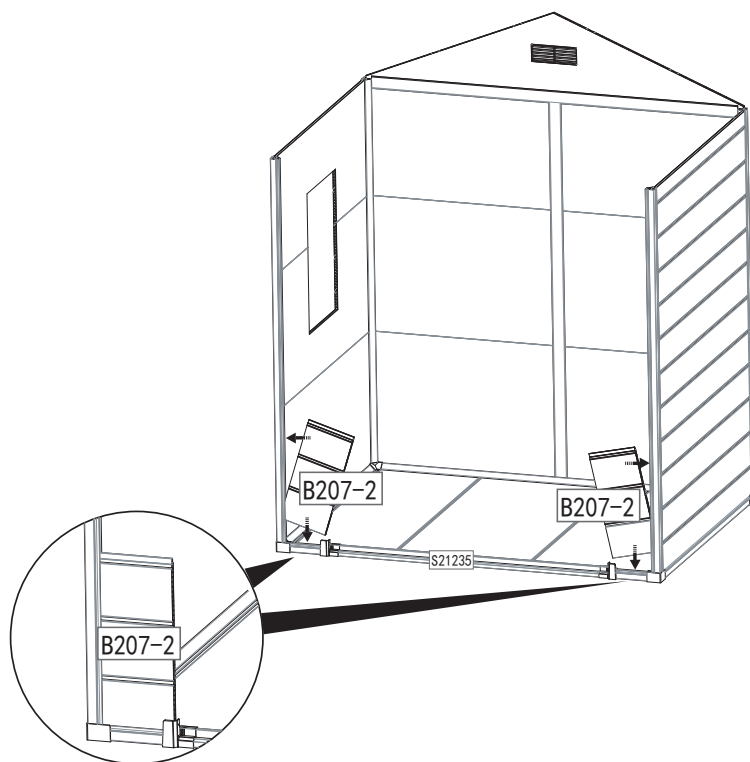


● Fully fit the panel inside the profile

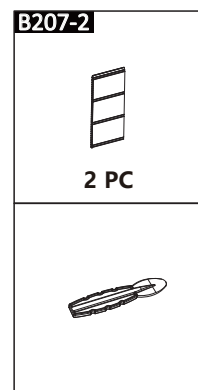


Step 28

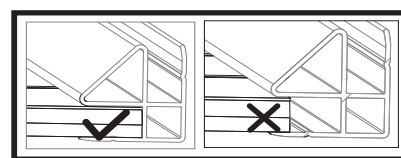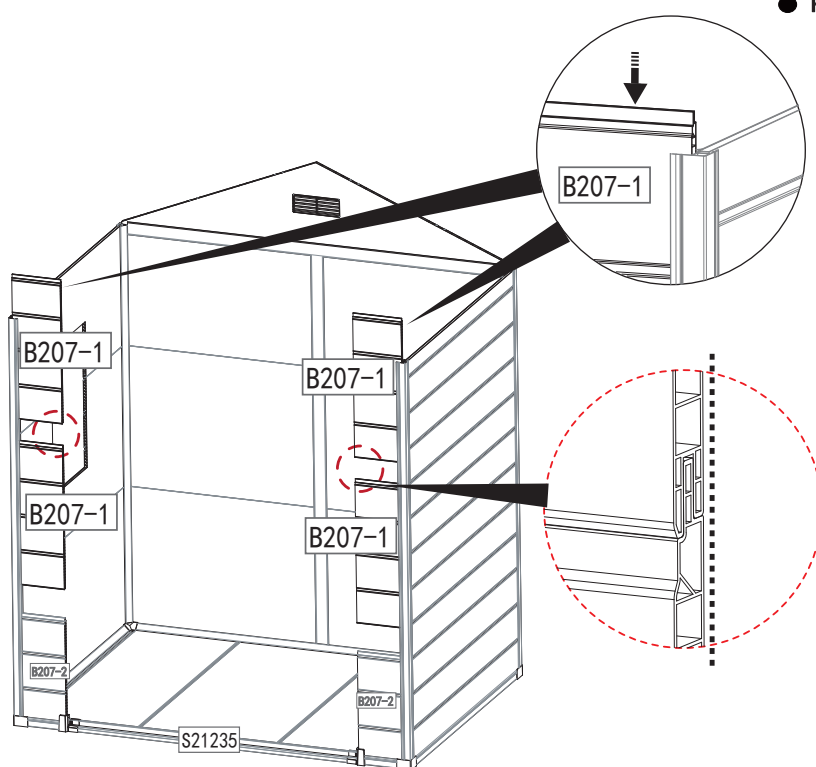

● Fully fit the panel inside the profile

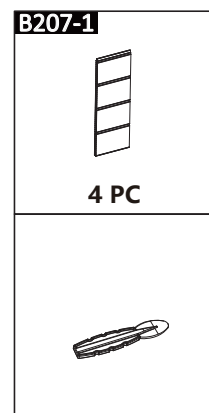

Step 29

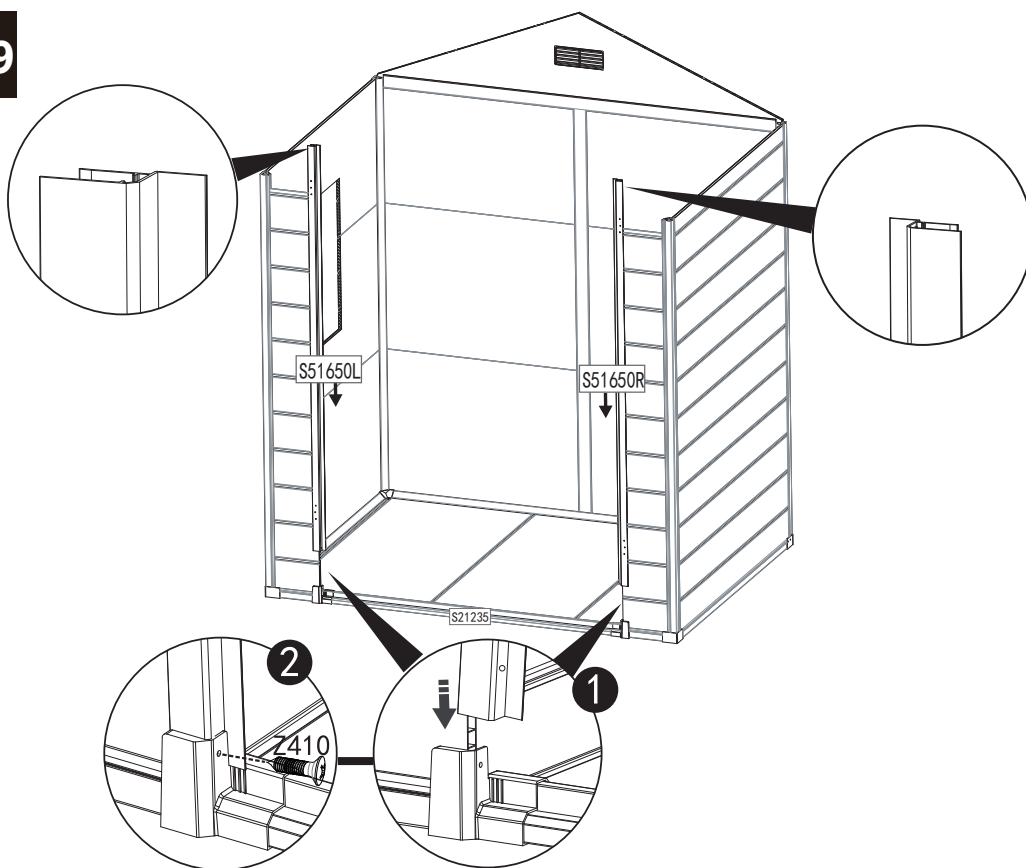


S51650L

1 PC
S51650R


1 PC
Z410

2 PC

Step 30

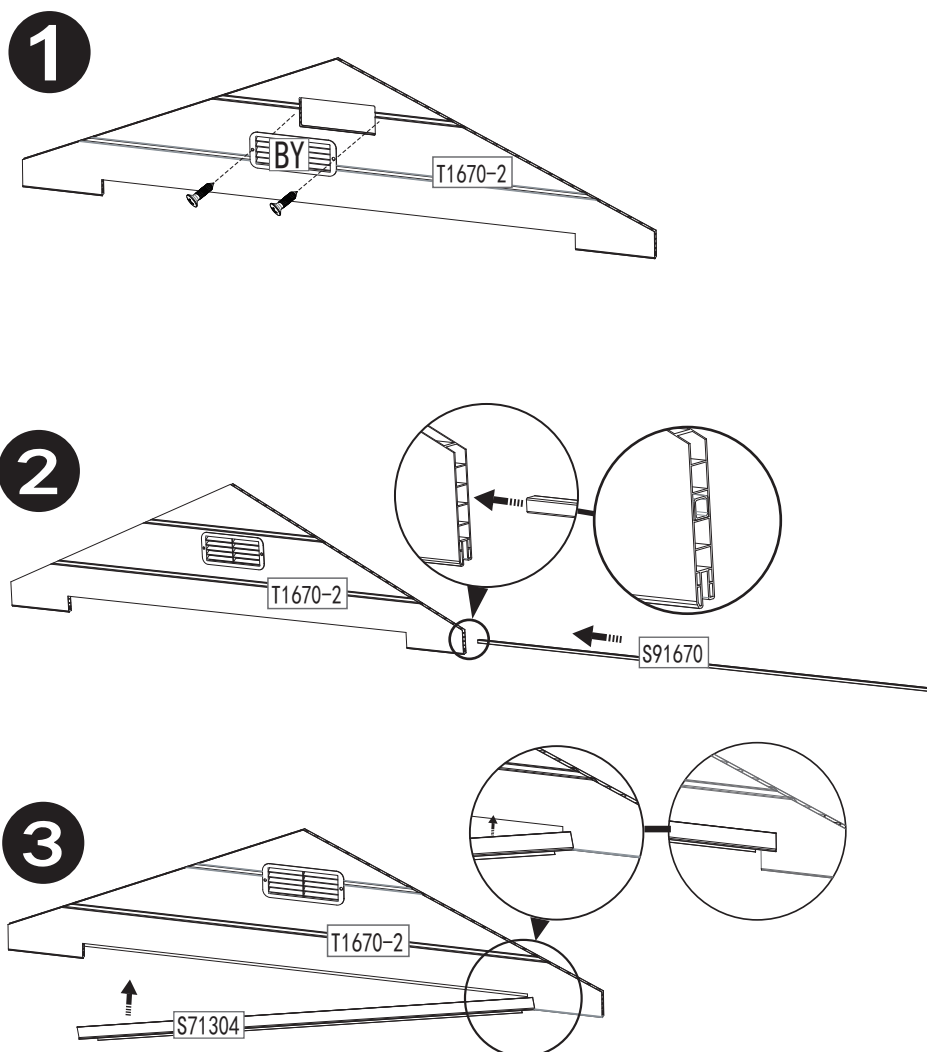

T1670-2


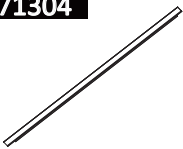
1 PC
S71304

1 PC
BY

1 PC
S91670

1 PC
Z410



2 PC

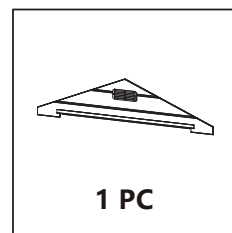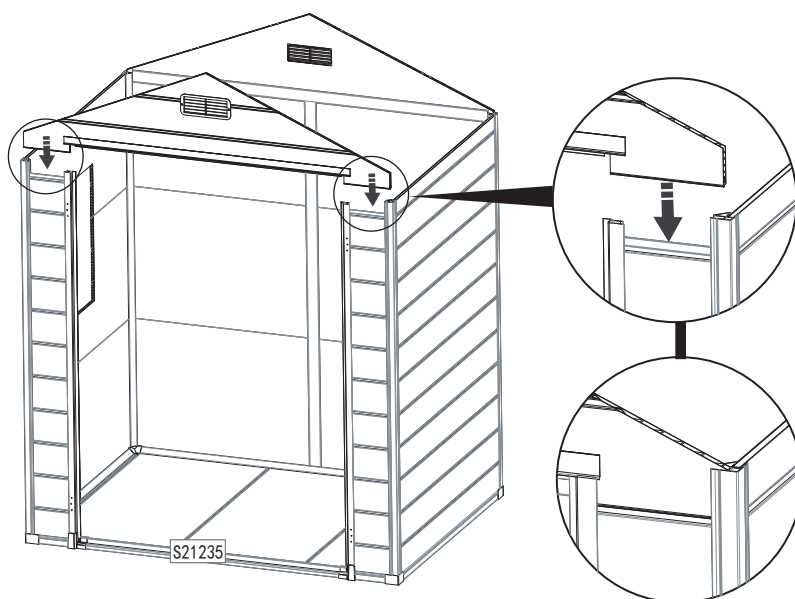Step 31



1 PC

Step 32

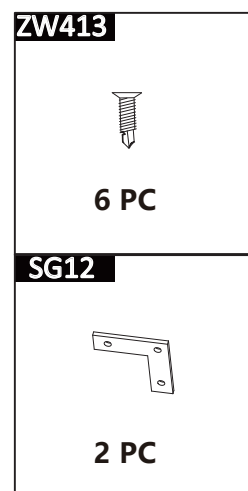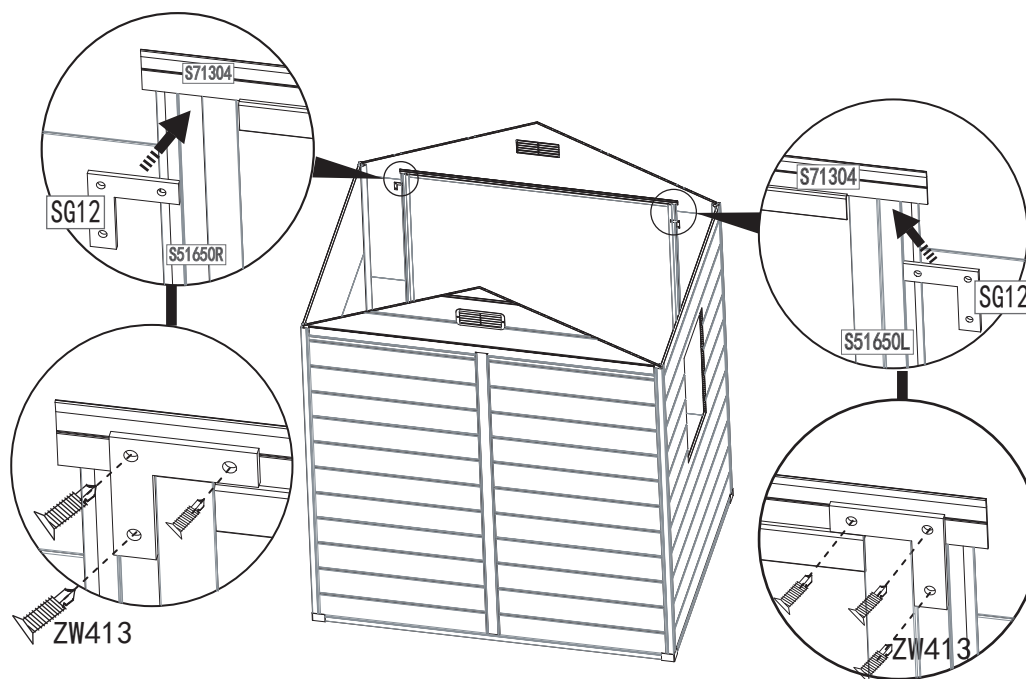

6 PC


SG12




2 PC

Step 33

AB=CD


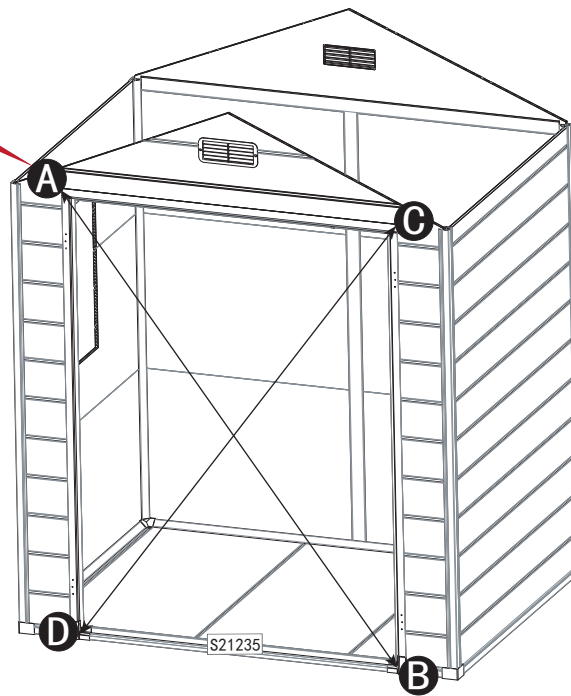


Z420





16 PC

Screw when the boards are in position

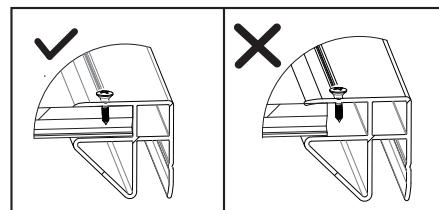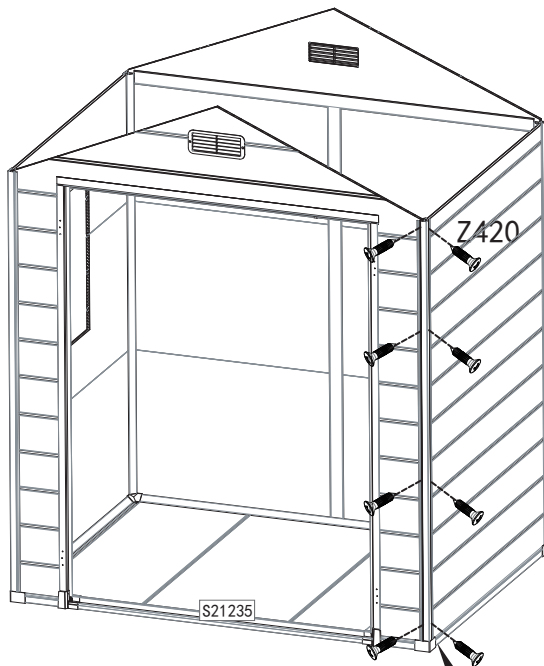


**Fully fit the panel inside the profile
Screw along the marked lines in profiles**

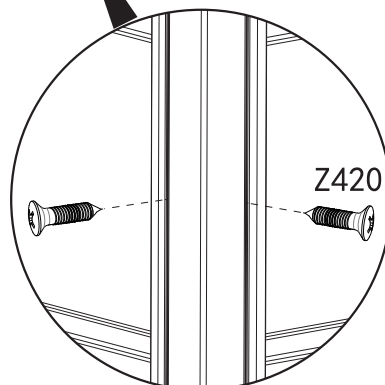
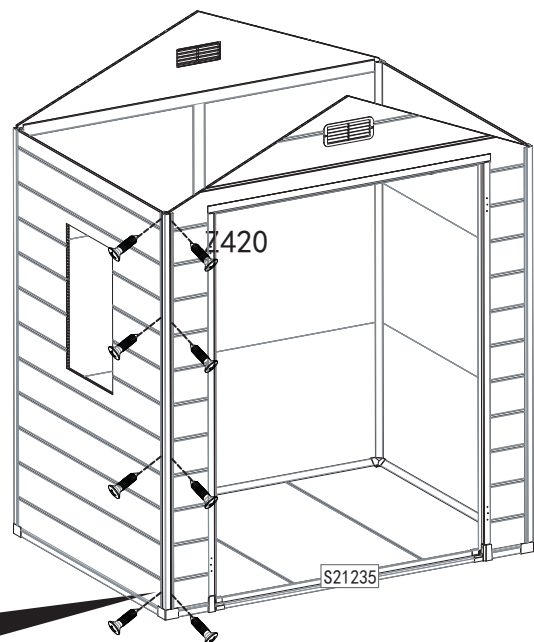


Step 34

Screw when the boards are in position


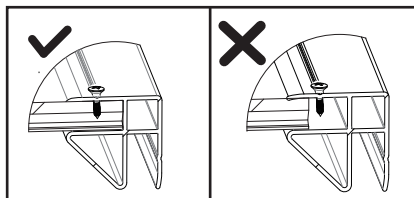


Screw along the marked lines in profiles

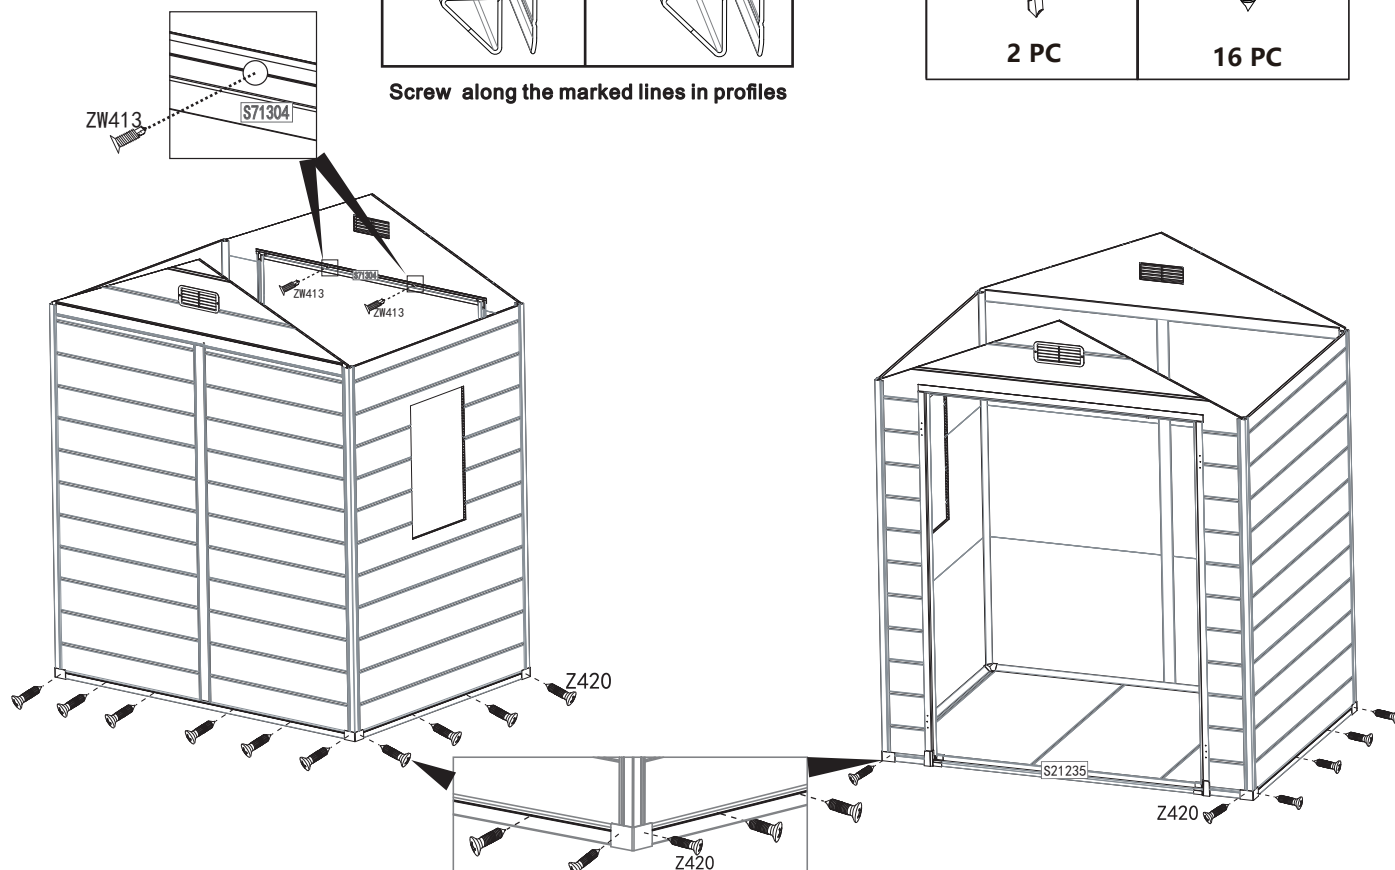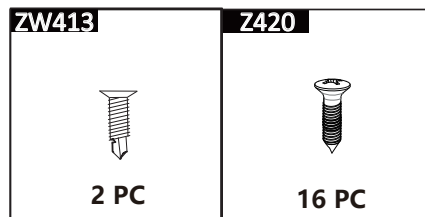






WINDOW PARTS

Step 35

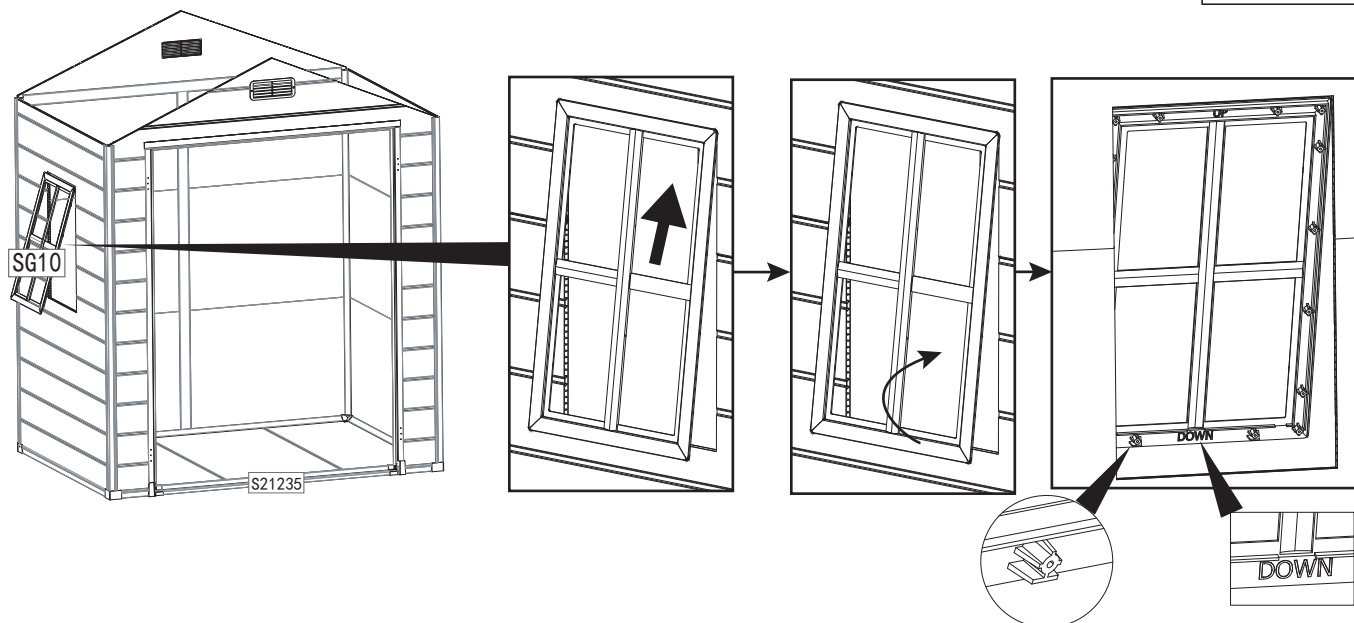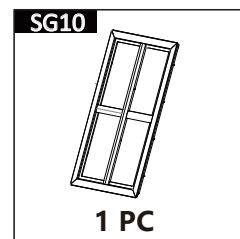

Step 36


- Remove the film before fixing SG101

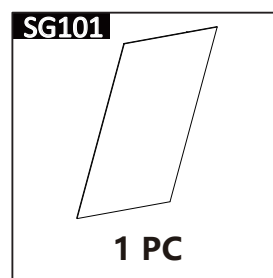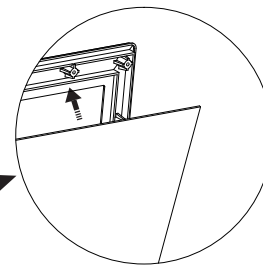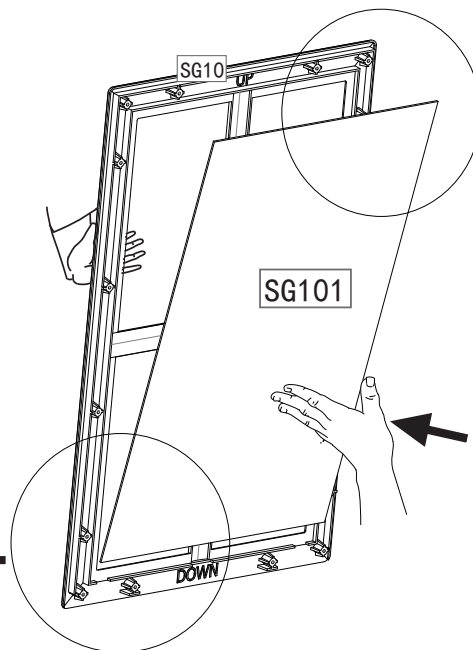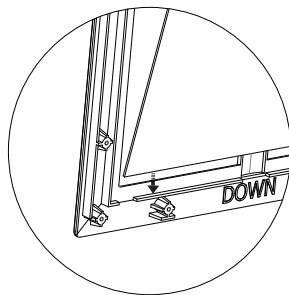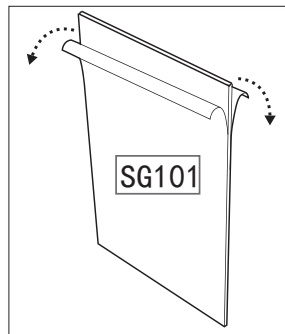





- Need two persons to fix SG101, one person presses it, and the other person assembles it.

Step 37






The press plate boss section shall be pressed against SG101

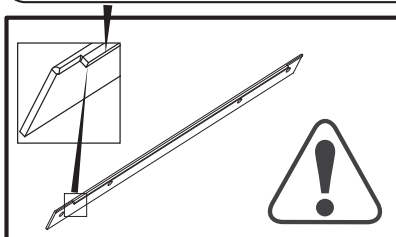

- Press tightly to avoid falling down
- Please note the side with bending edge be pressed to SG101
- It's better to fix just one screw on each SG102&SG103 before each one adjust into right location.

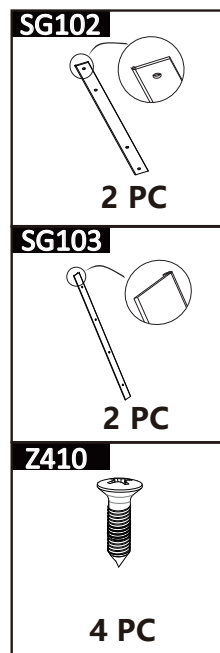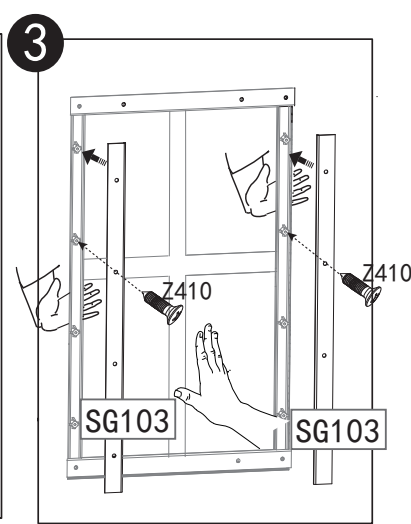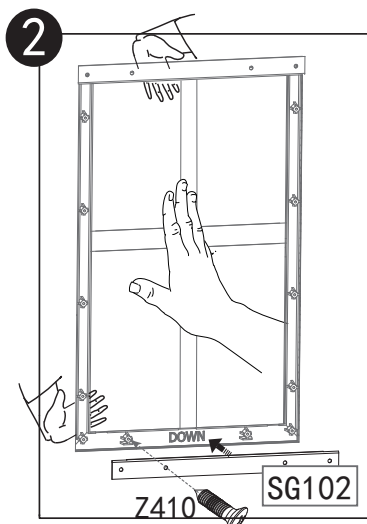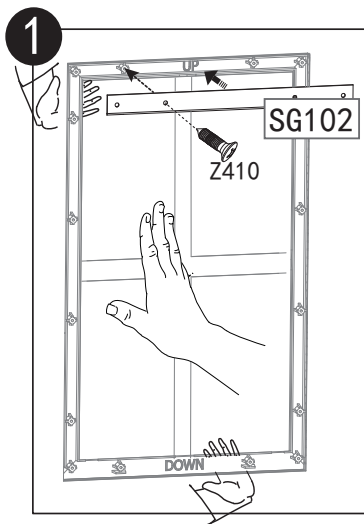


Step 38

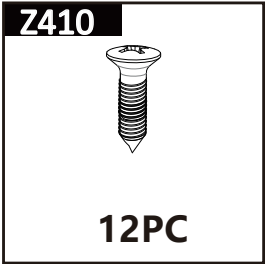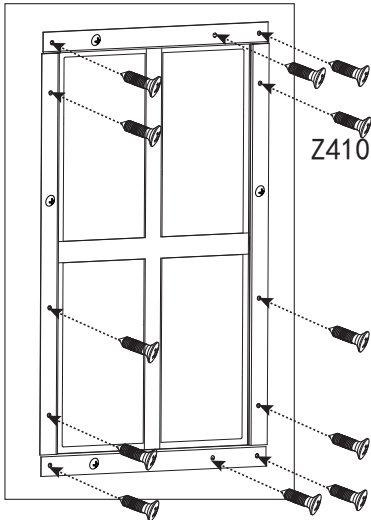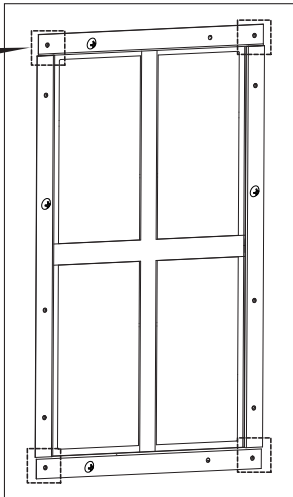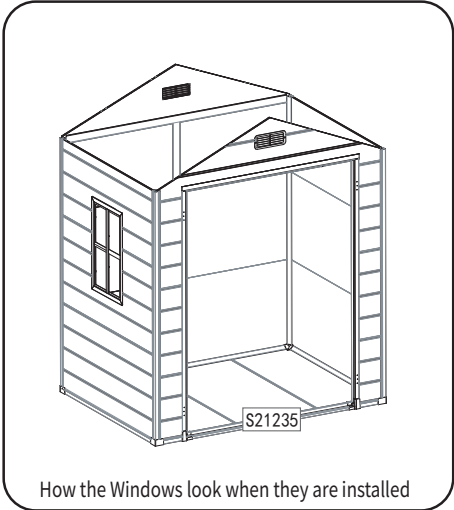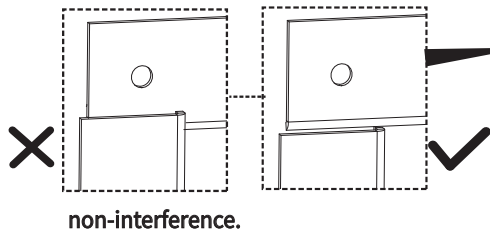


● Adjust SG102&SG103 in right location, then fix all screws



ROOF PARTS

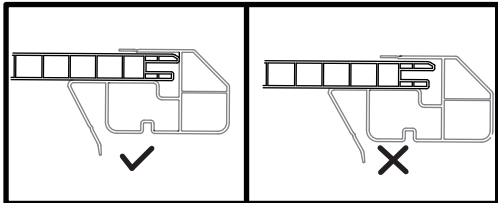

Fully fit the panel inside the profile


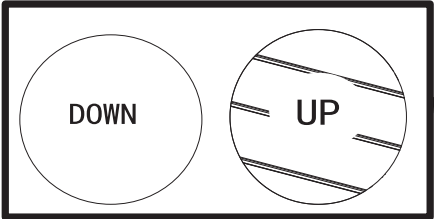


The stripes should be upwards

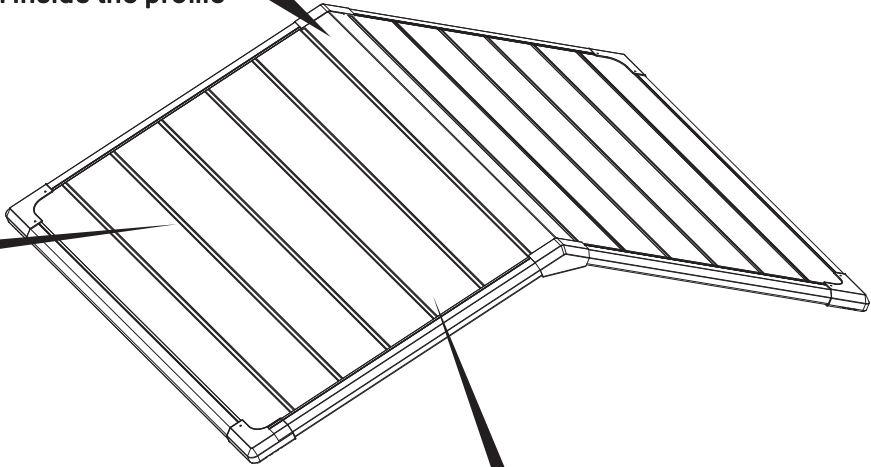


The boards must be straight



Step 39

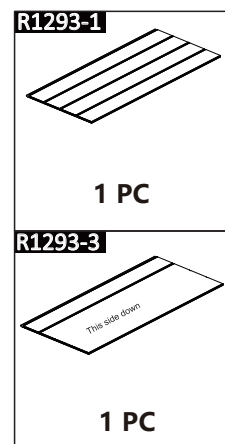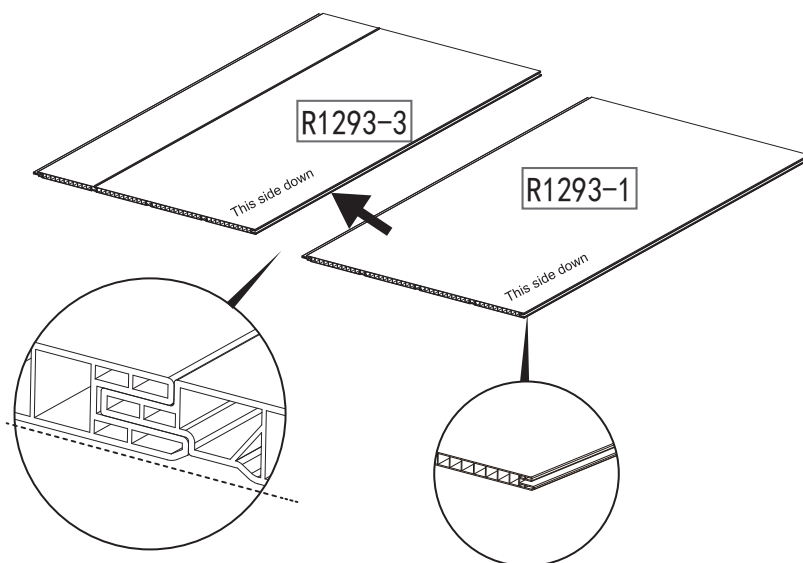

Step 40



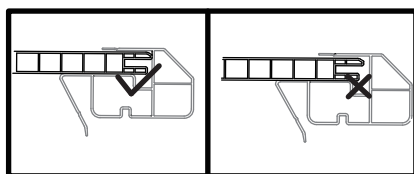


Fully fit the panel inside the profile

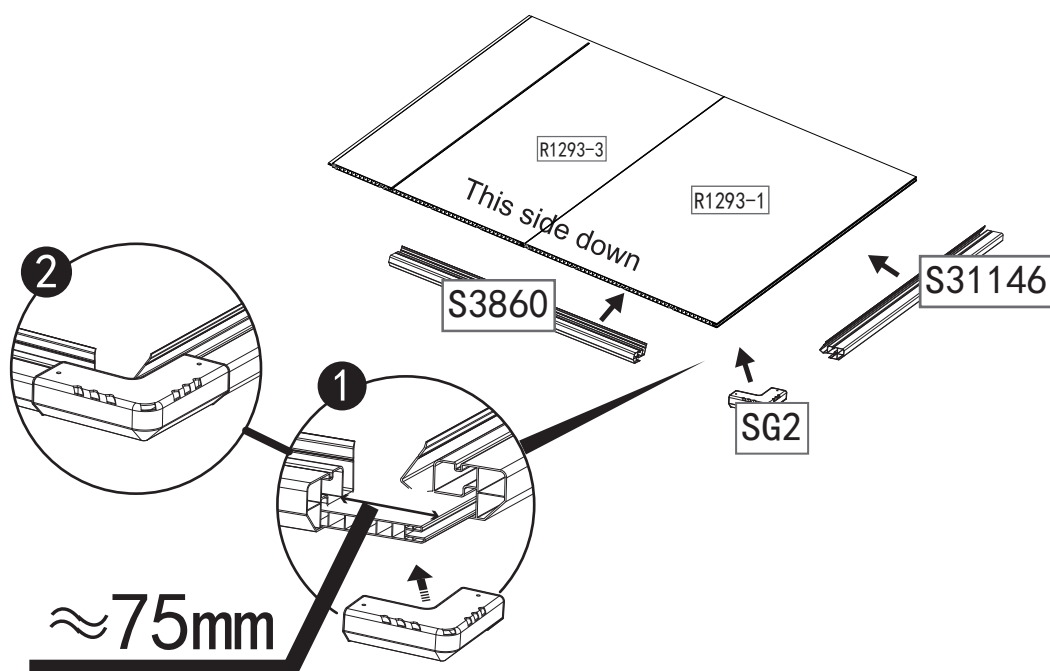
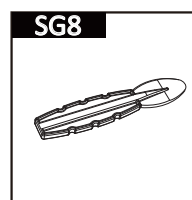


● Please note the measurement dimensions



Step 41

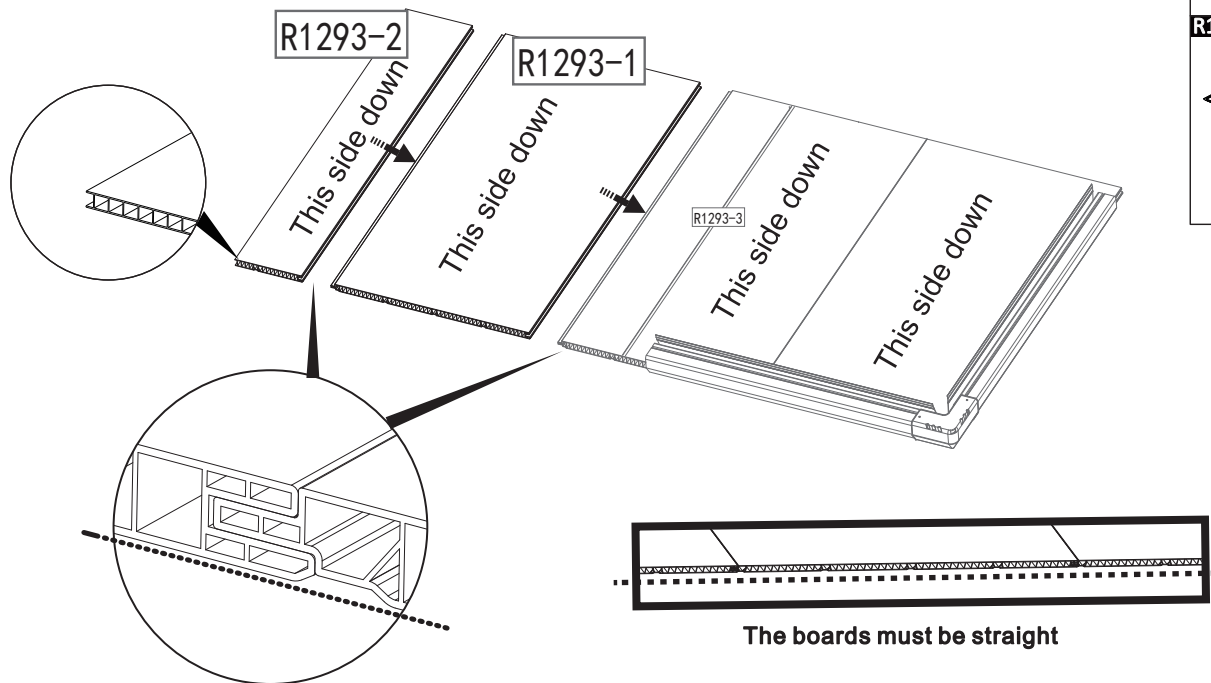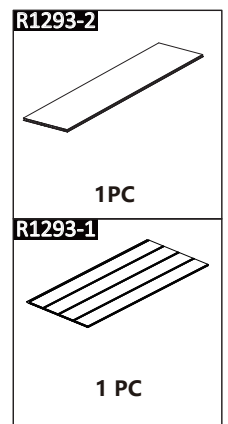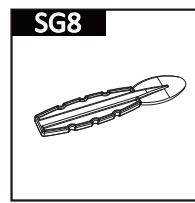


Step 42

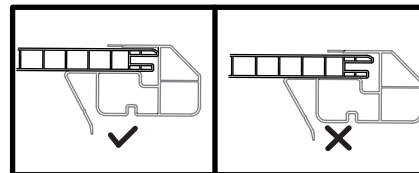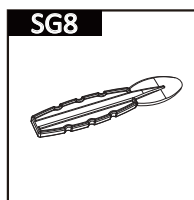


Fully fit the panel inside the profile

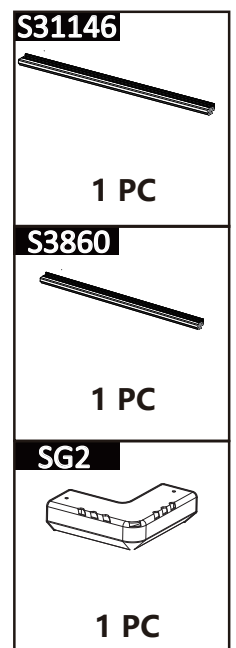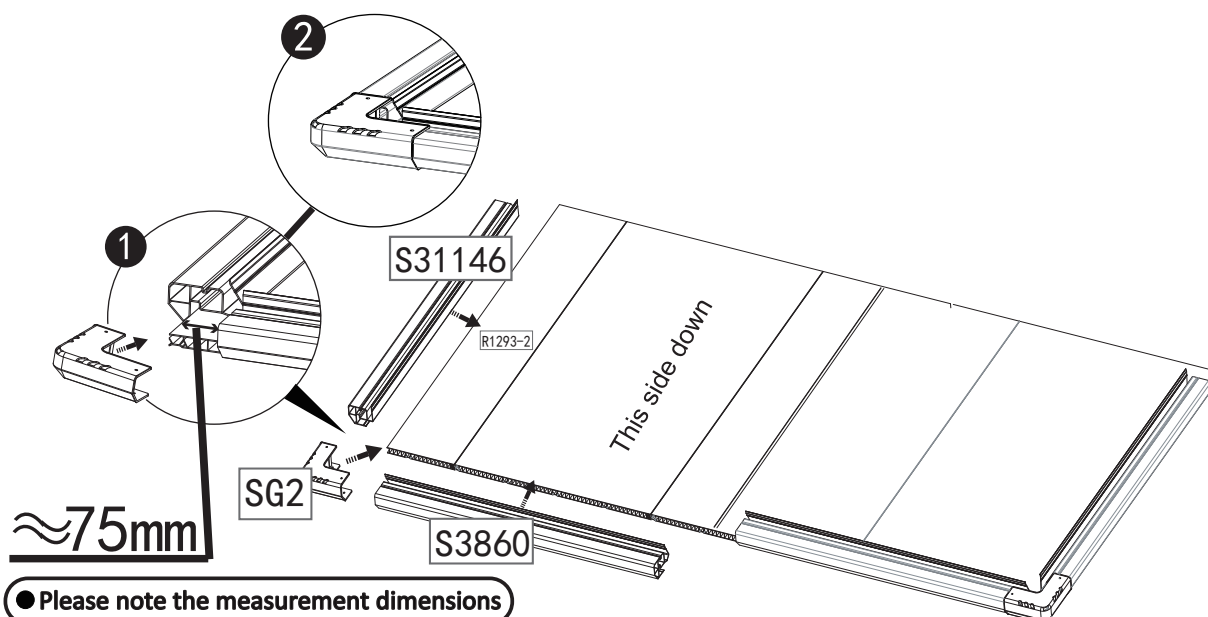


Step 43

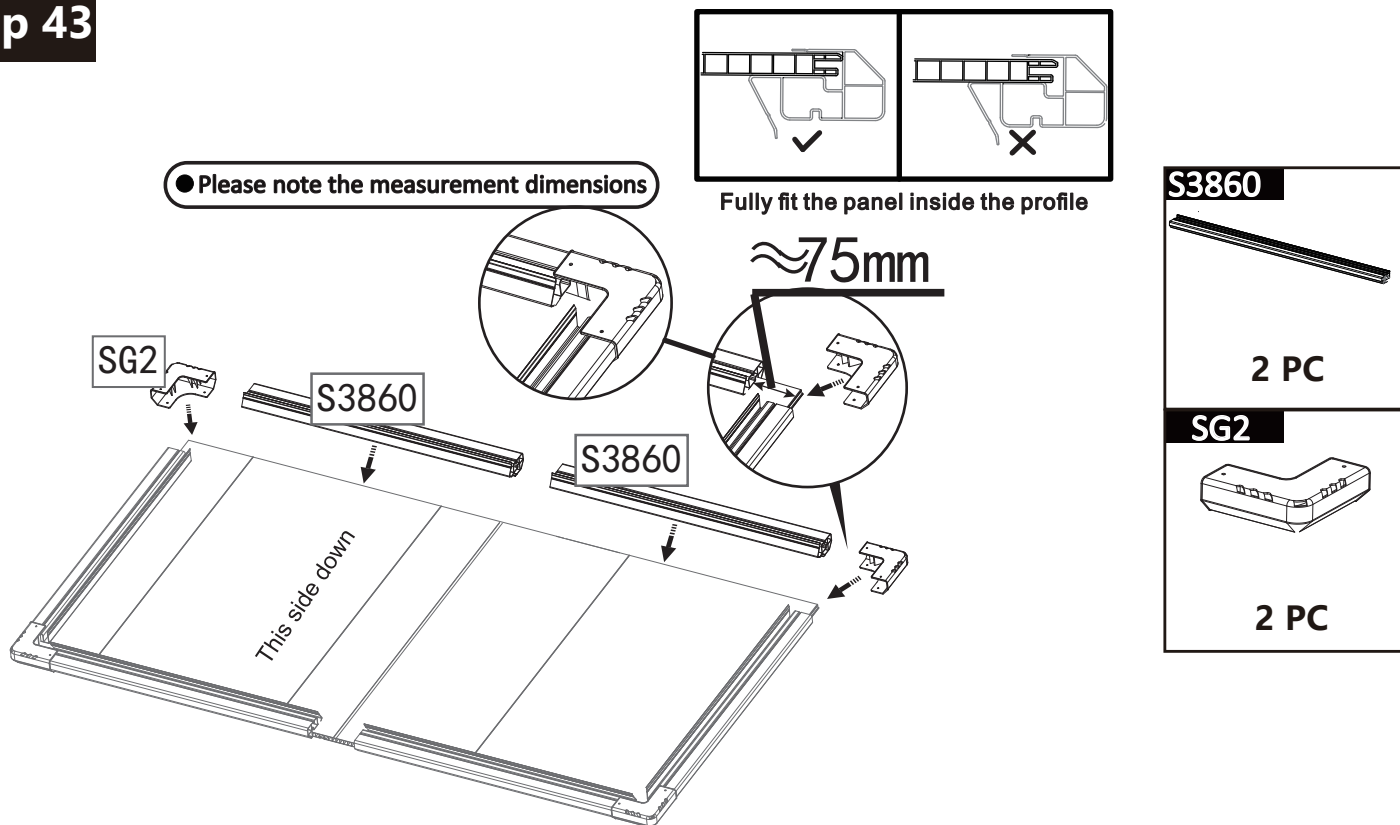

Step 44

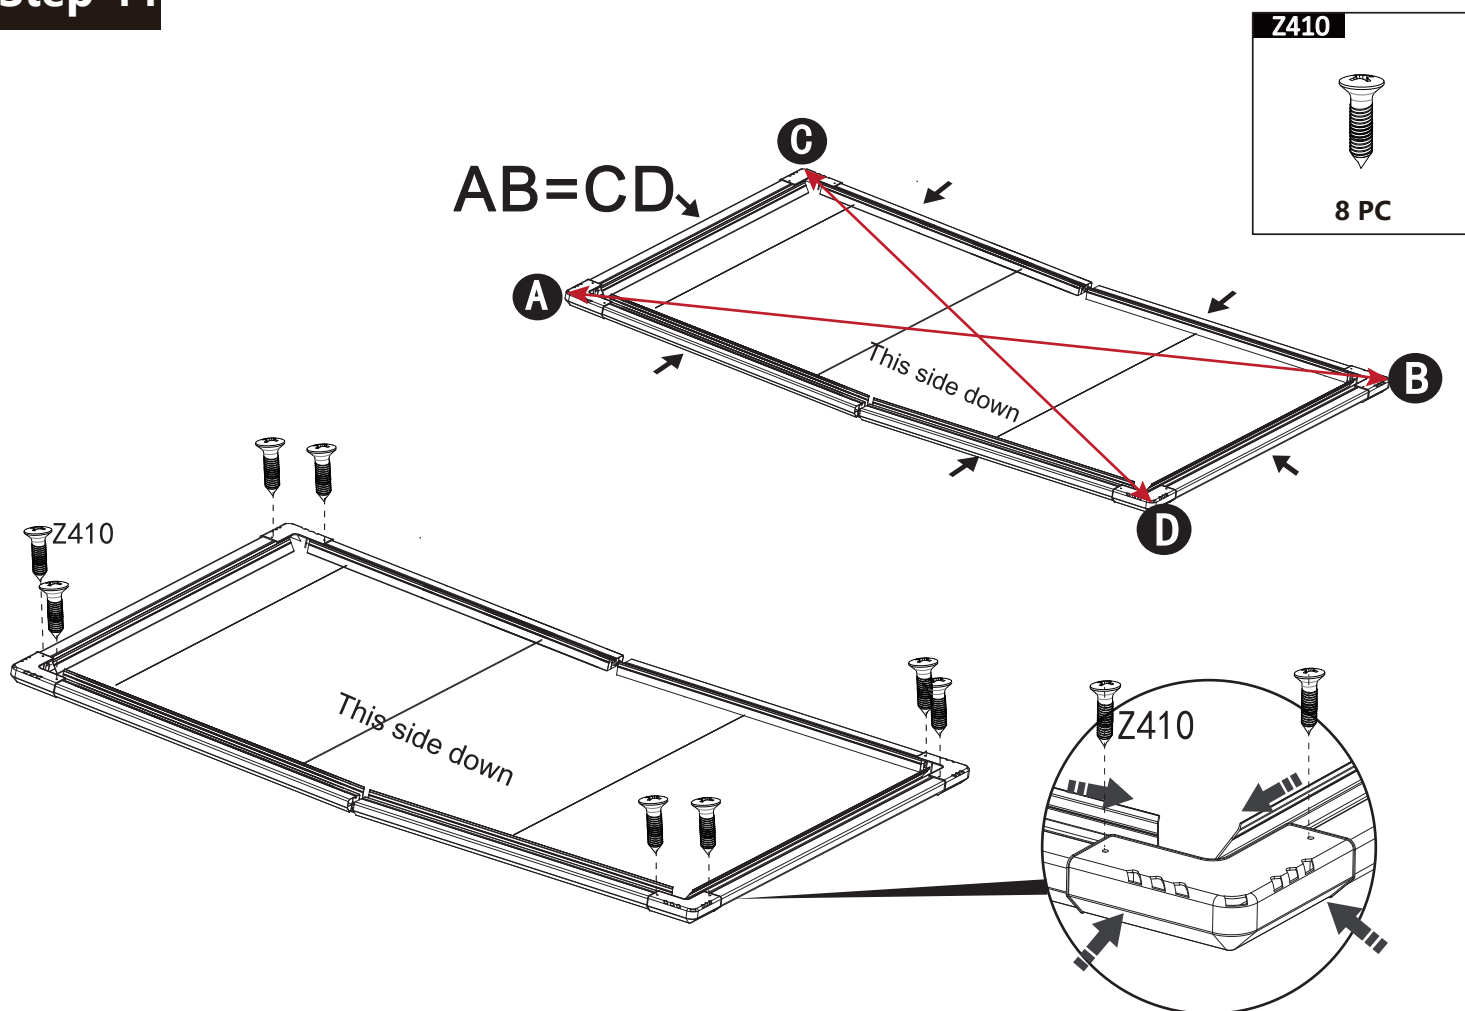

Step 45

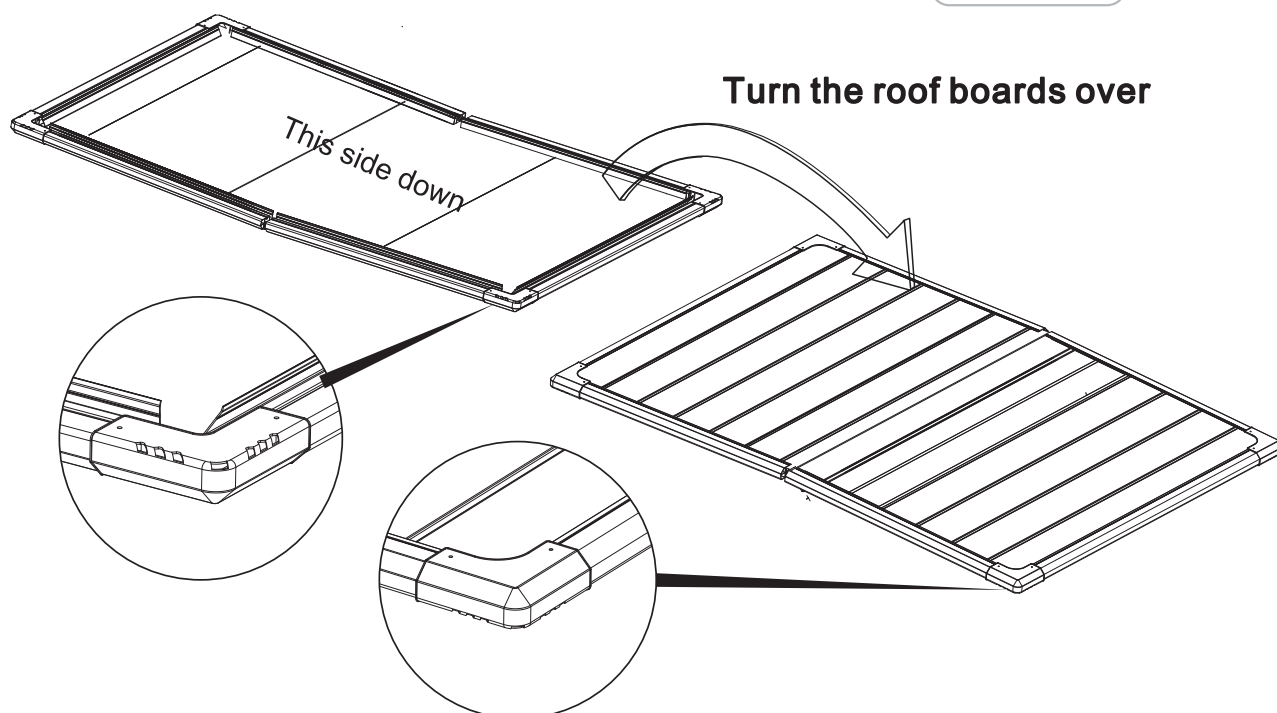



Step 46

Z420




26 PC



- The distance from the profile edge to the first screw is about 40mm.

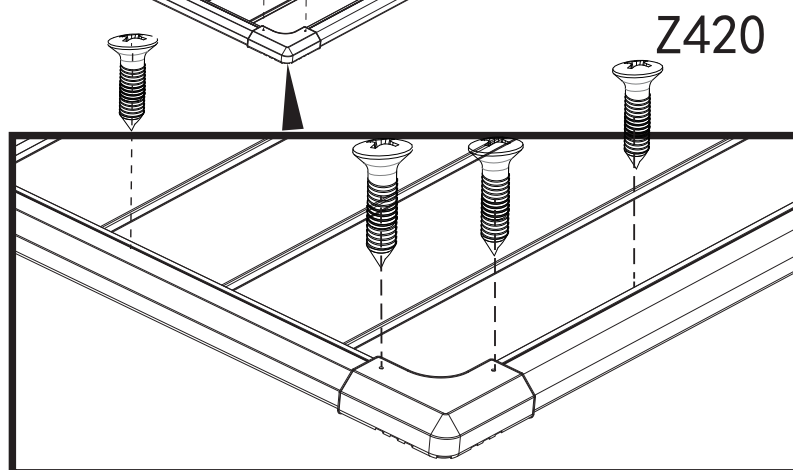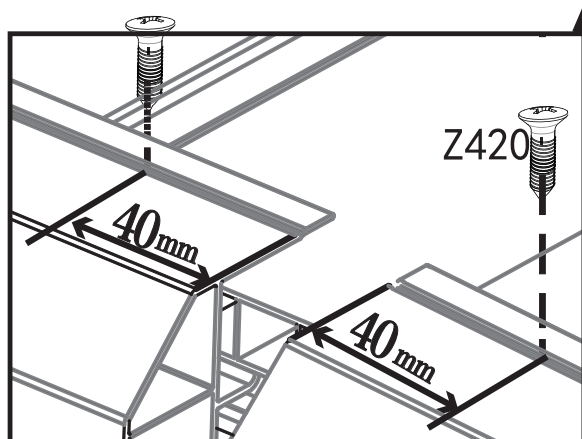


Step 47

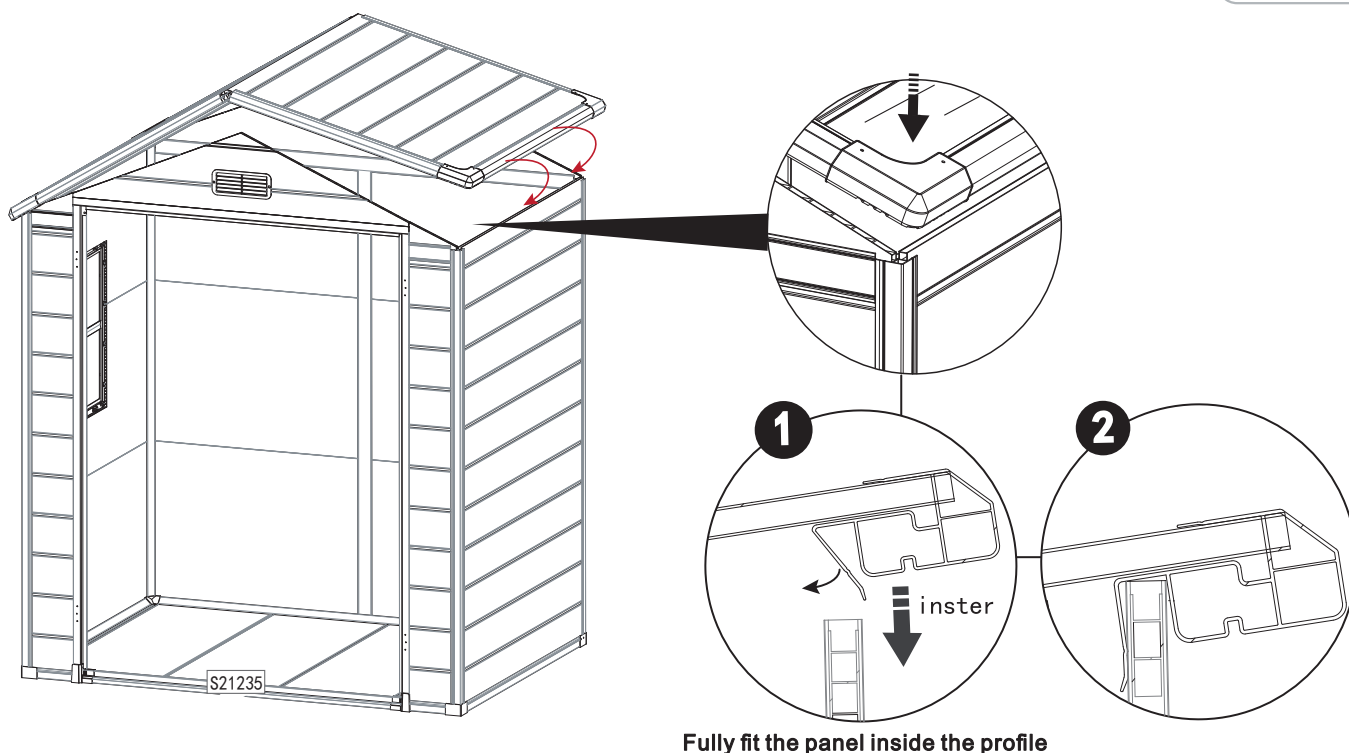


Step 48

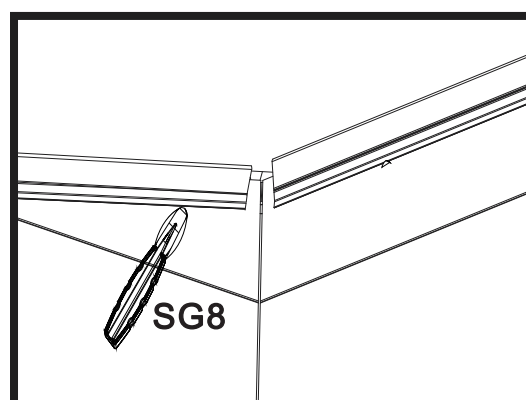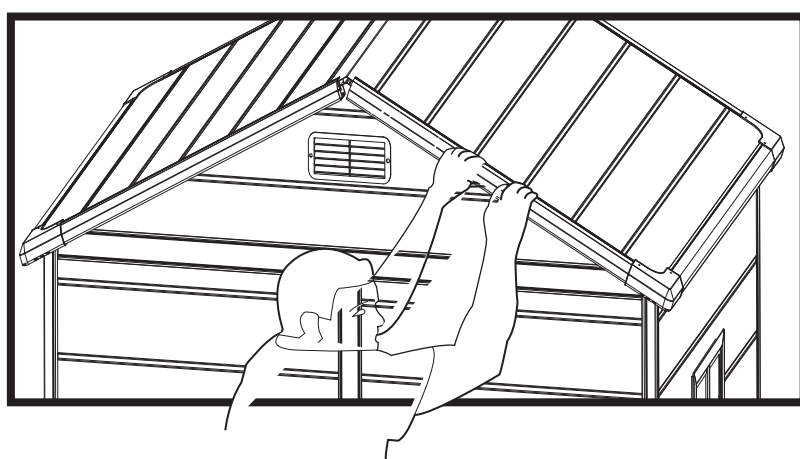


Fully fit the panels inside the profiles of roof

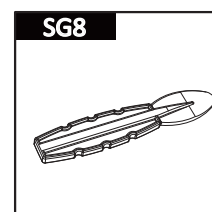



Step 49

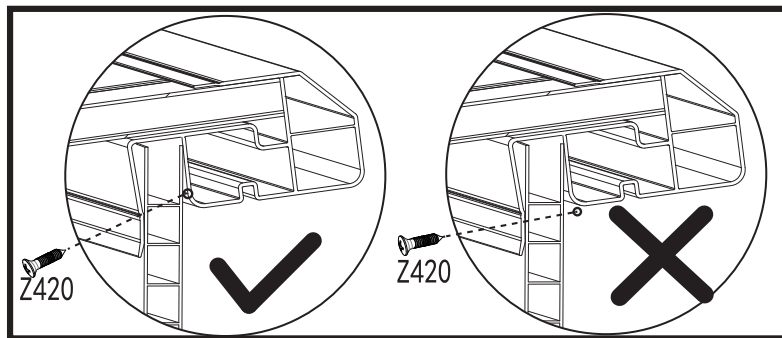


Z420



18 PC

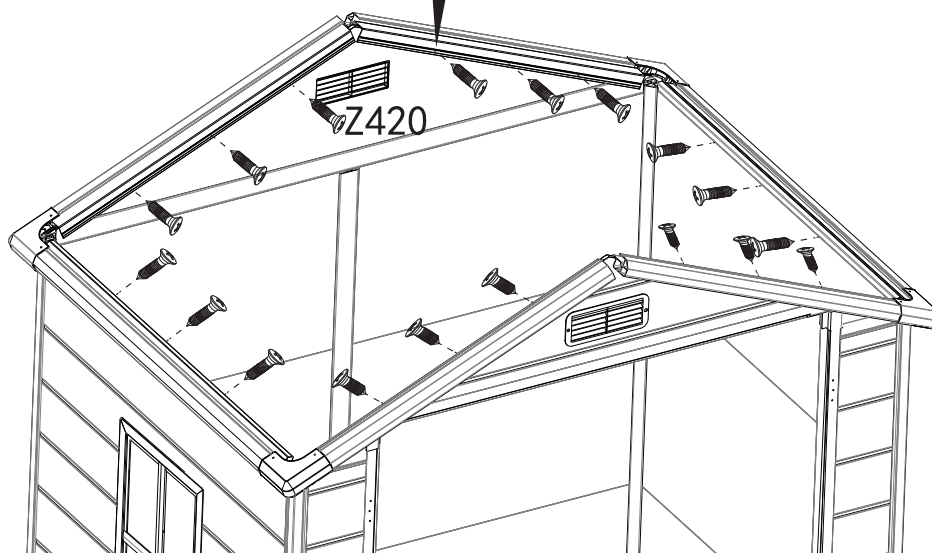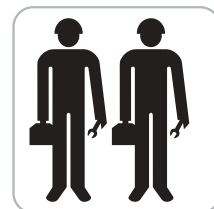

Step 50

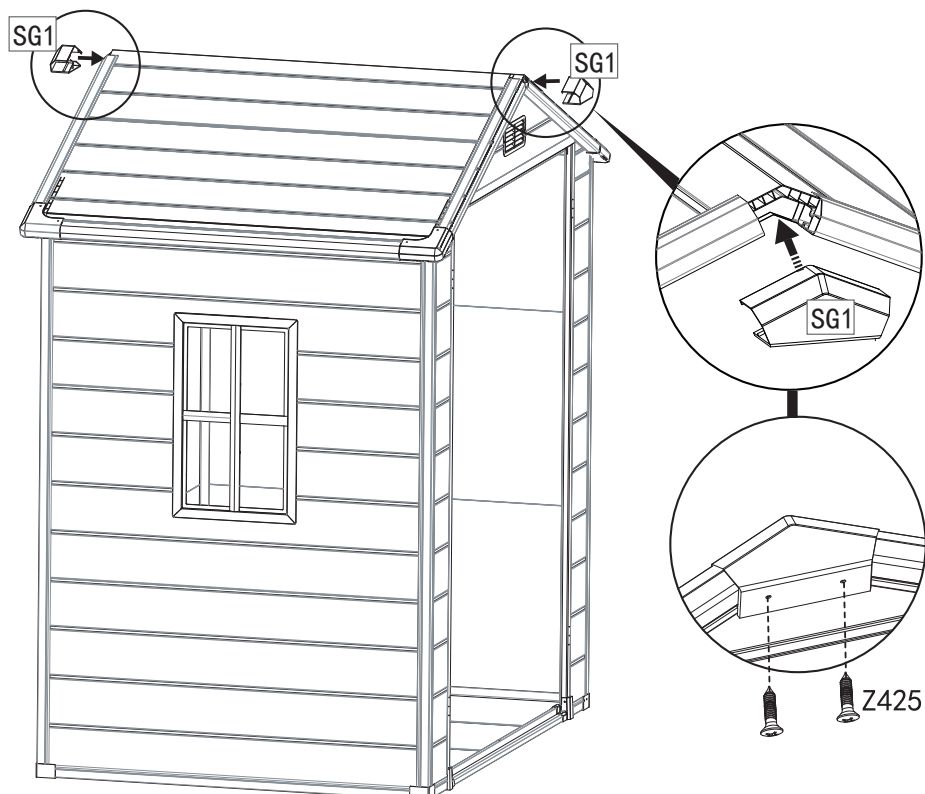


Z425





4 PC


SG1



2 PC

Step 51

SG14	SG13	SG15	Z410
			
2 PC	2 PC	2 PC	8 PC

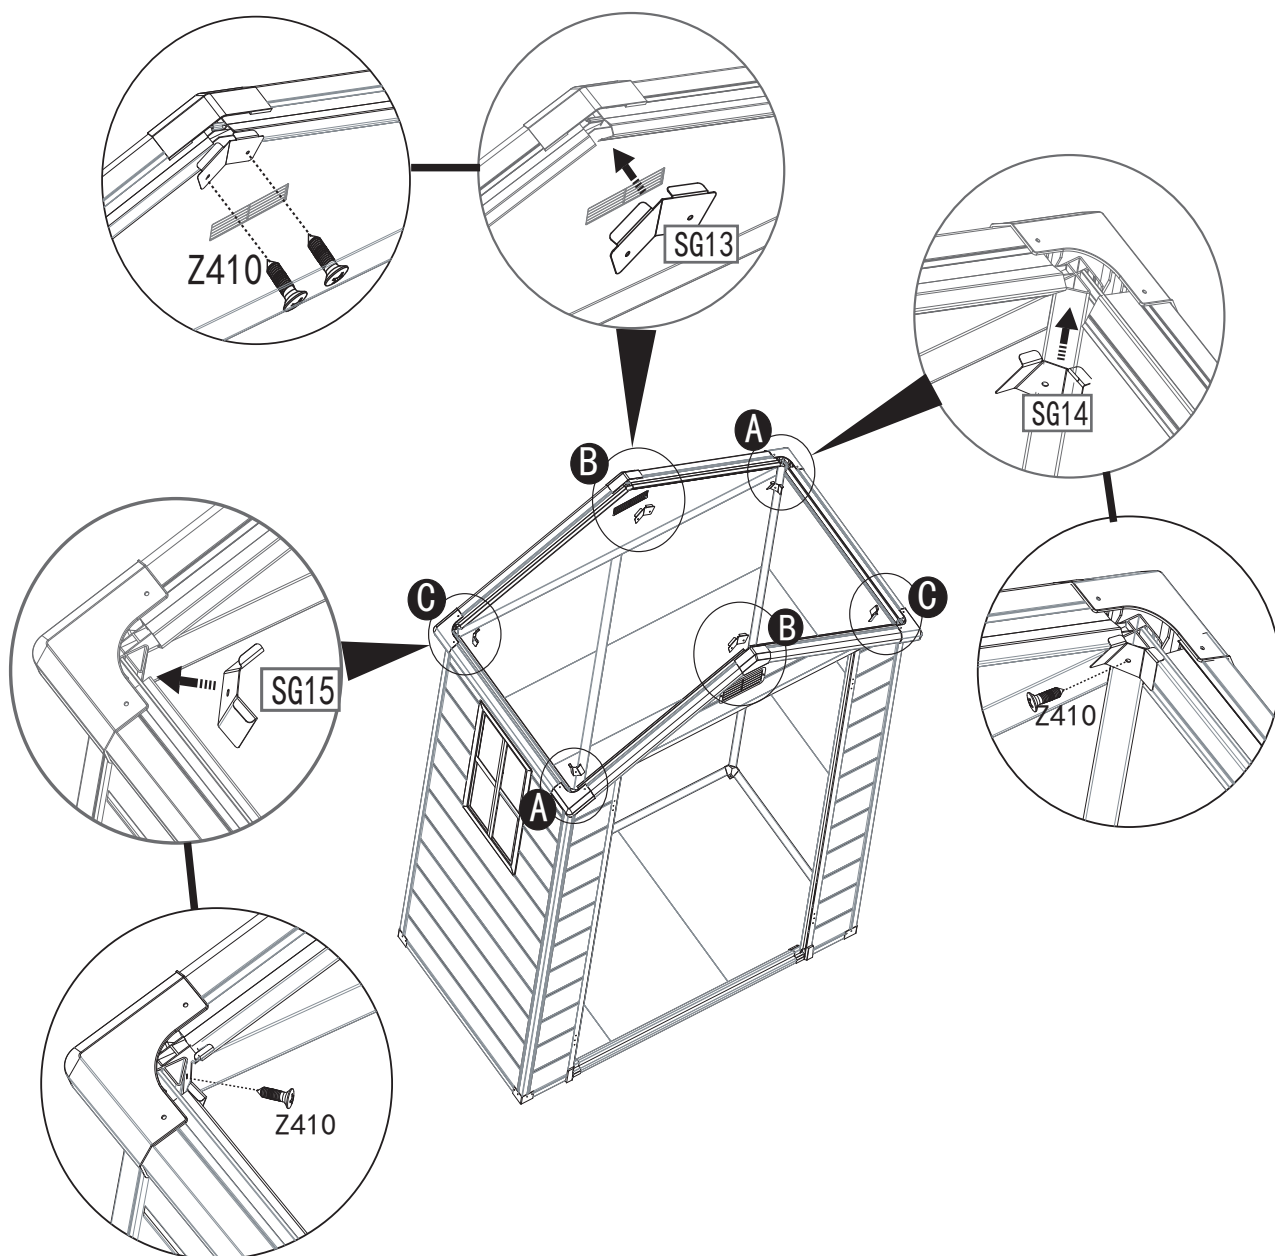

DOOR SECTION




Door mount this is above

UP


UP

RIGHT DOOR

LEFT DOOR

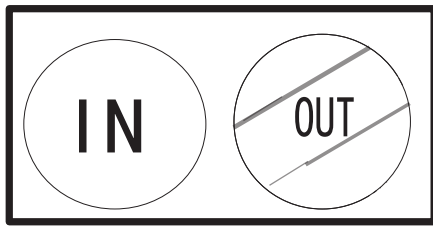








The stripes should be outside




The boards must be straight

Step 52

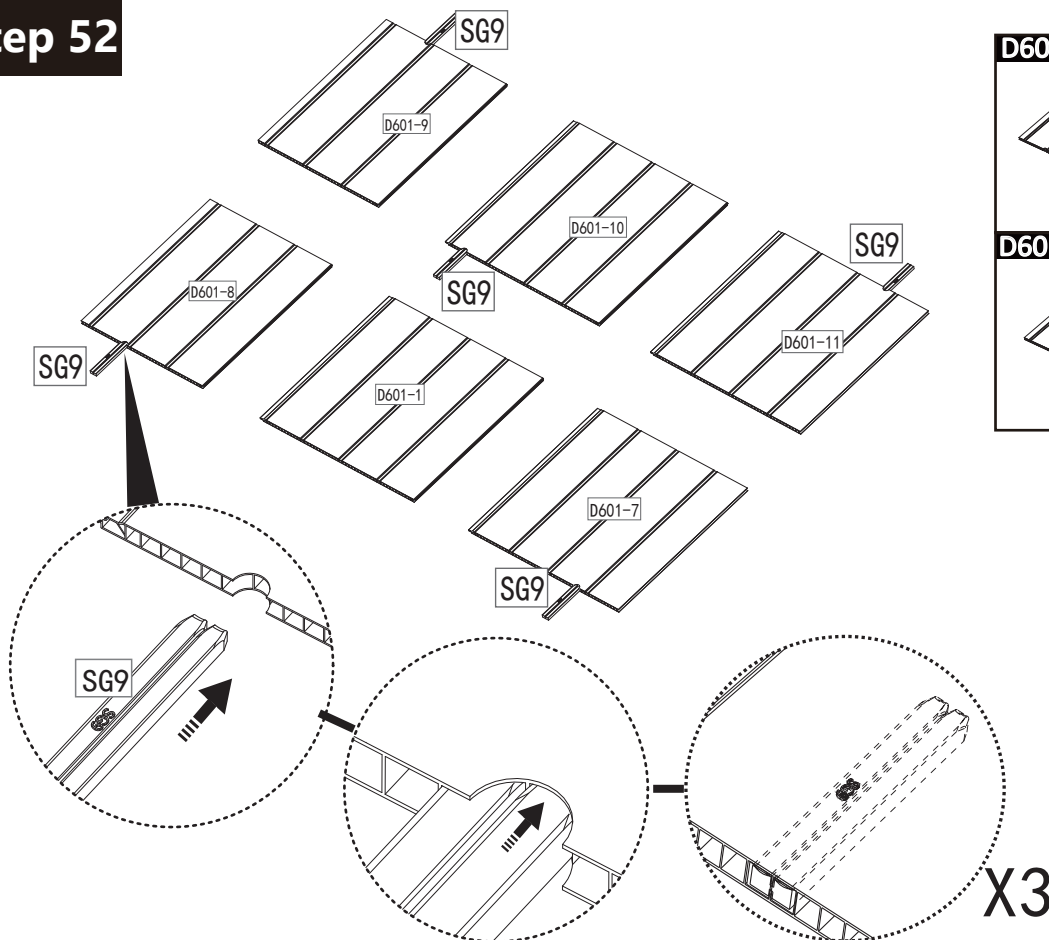


D601-8  1 PC	D601-1  1 PC
D601-9  1 PC	D601-10  1 PC
	D601-7  1 PC
	D601-11  1 PC
	SG9  5 PC

Step 53

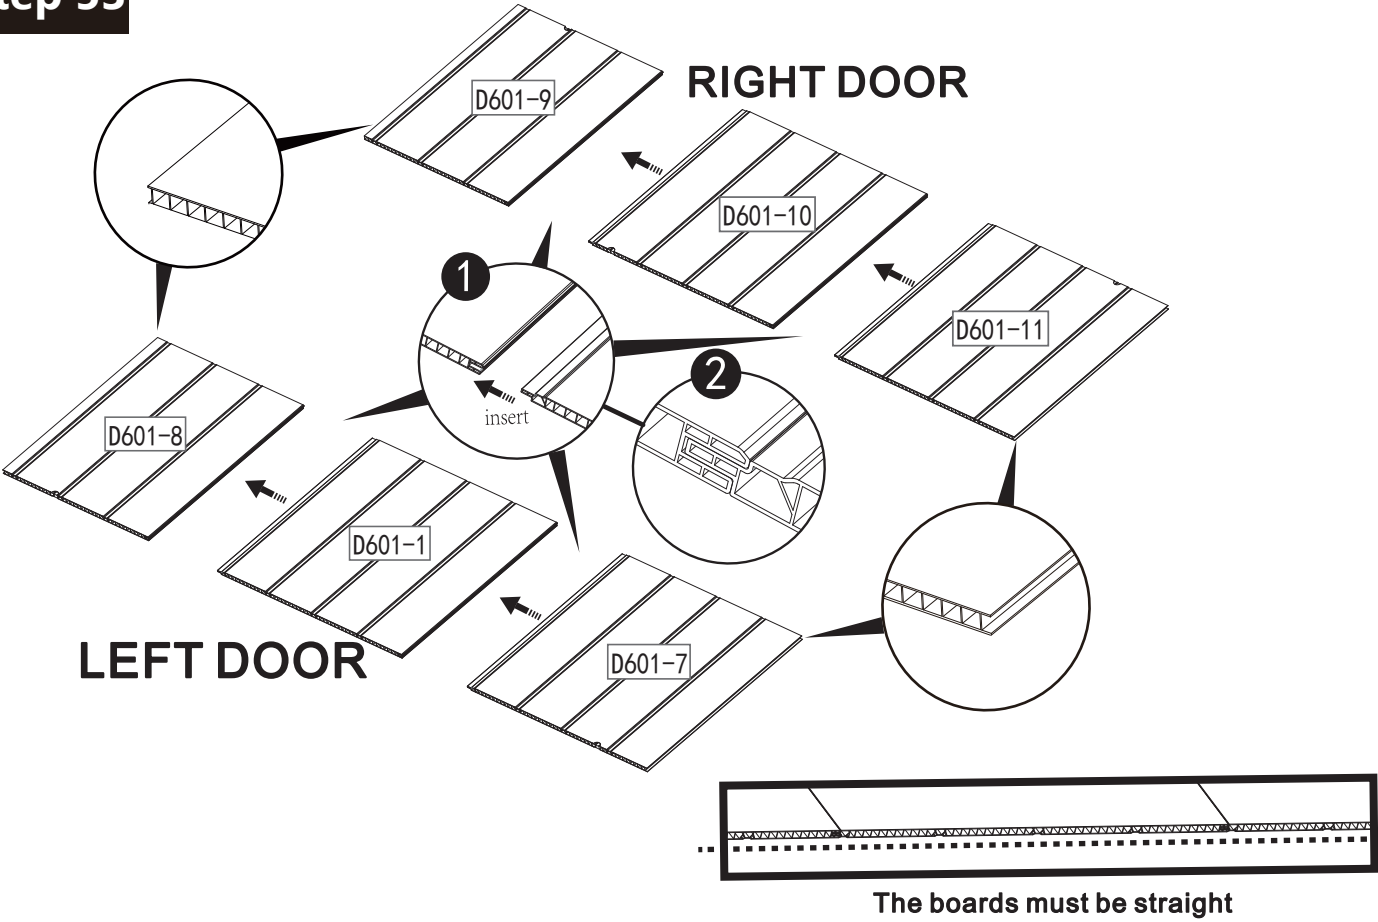


Step 54

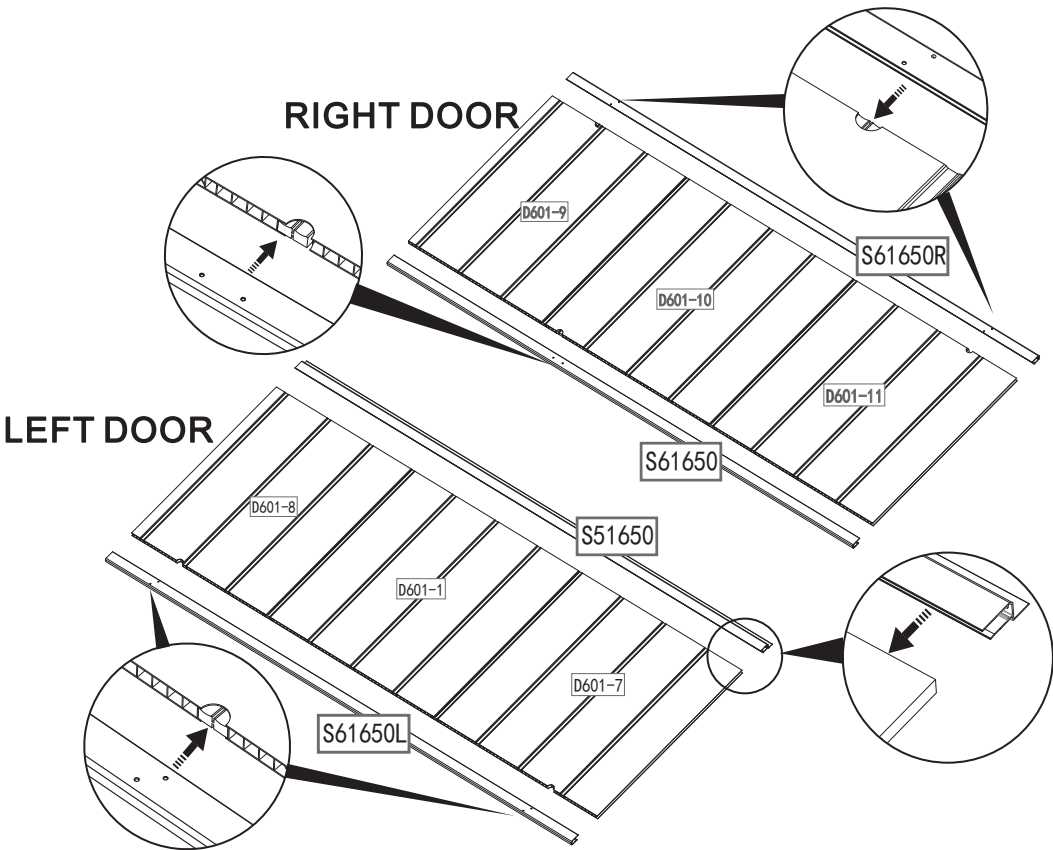


S61650R
1 PC
S61650
1 PC
S61650L
1 PC
S51650
1 PC


Step 55

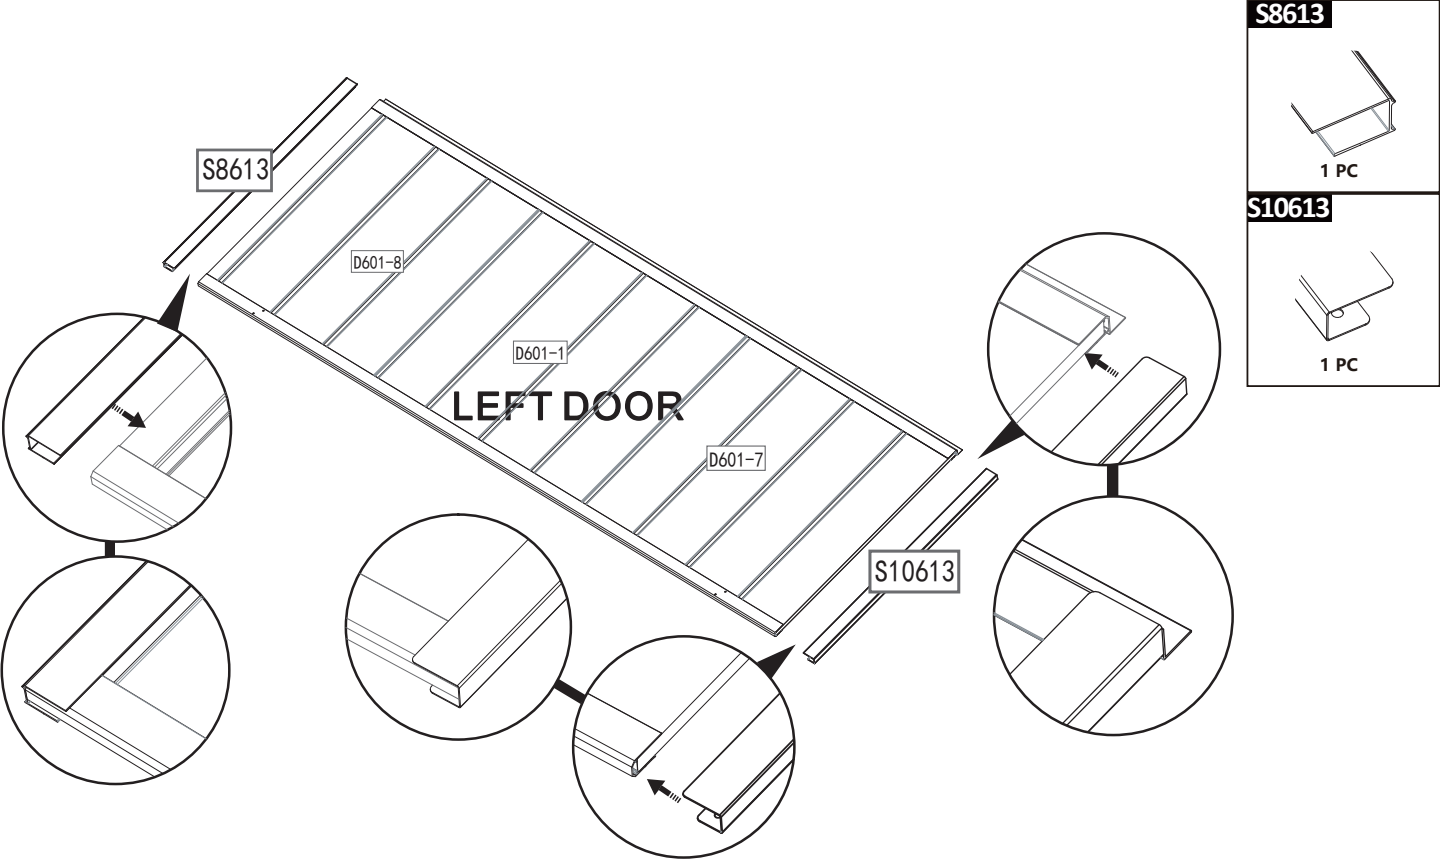


Step 56

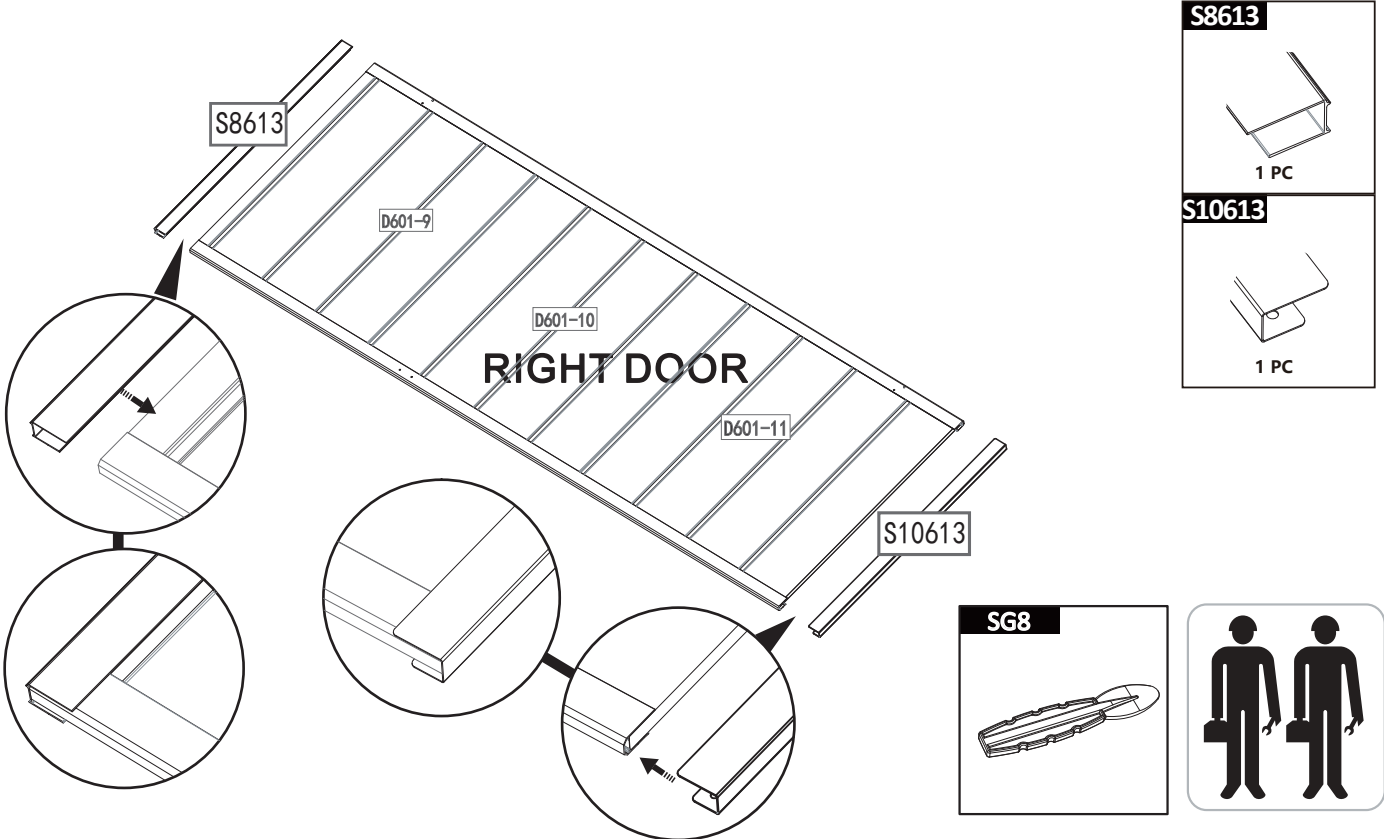



Step 57

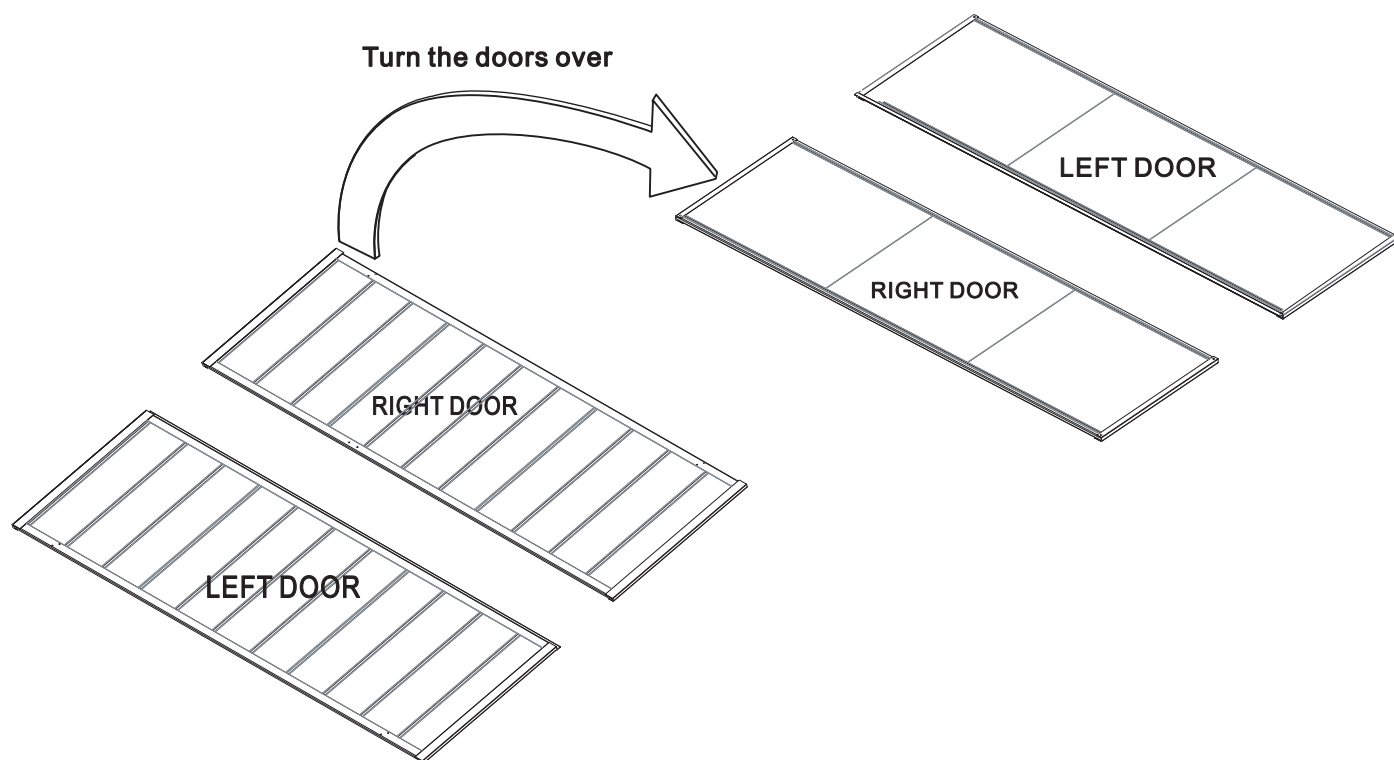



Step 58

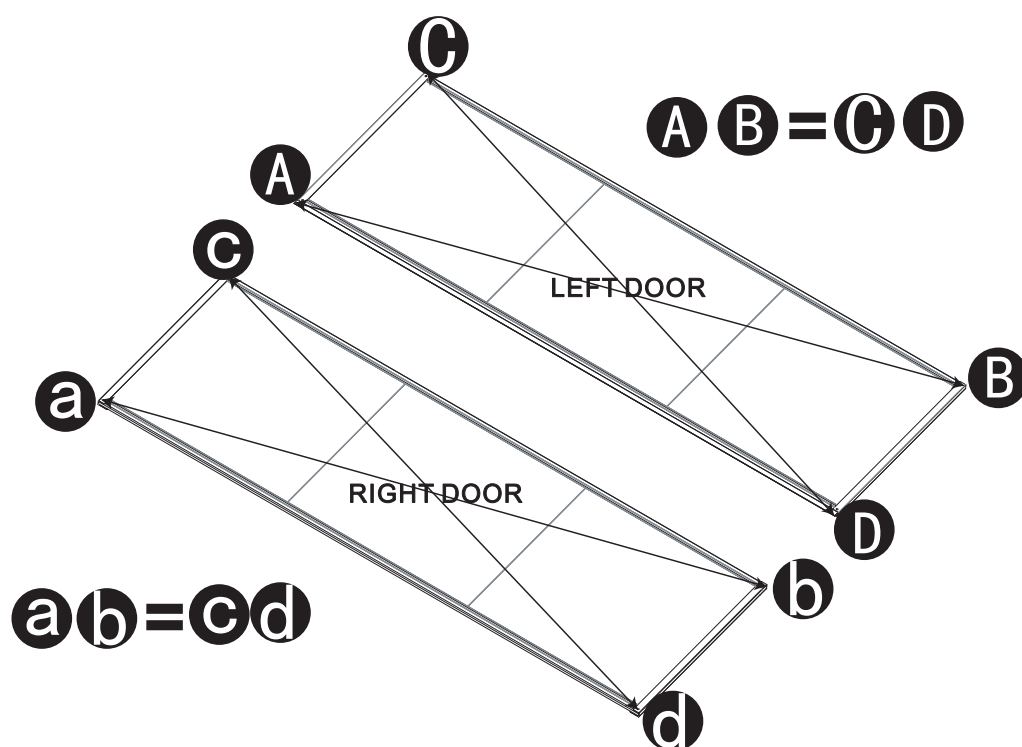


Step 59

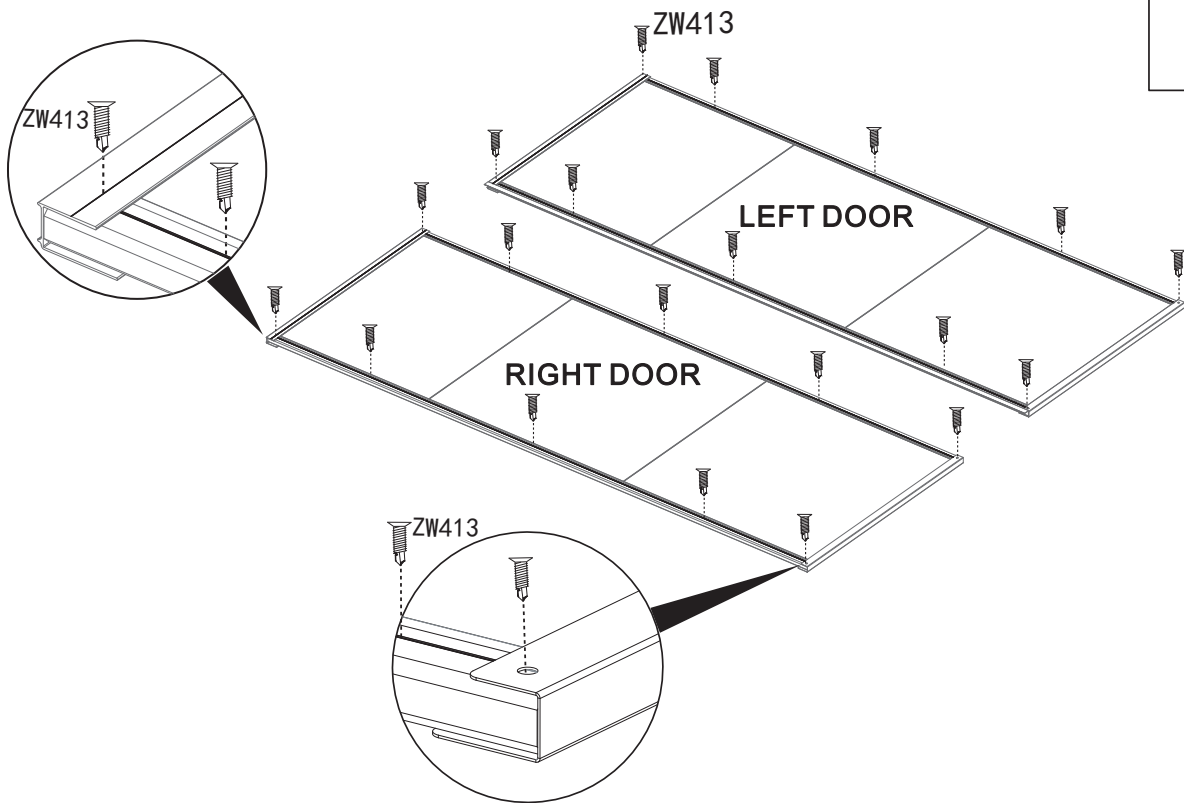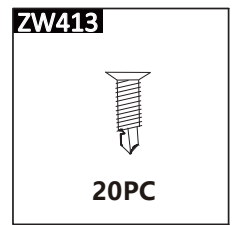






Step 60

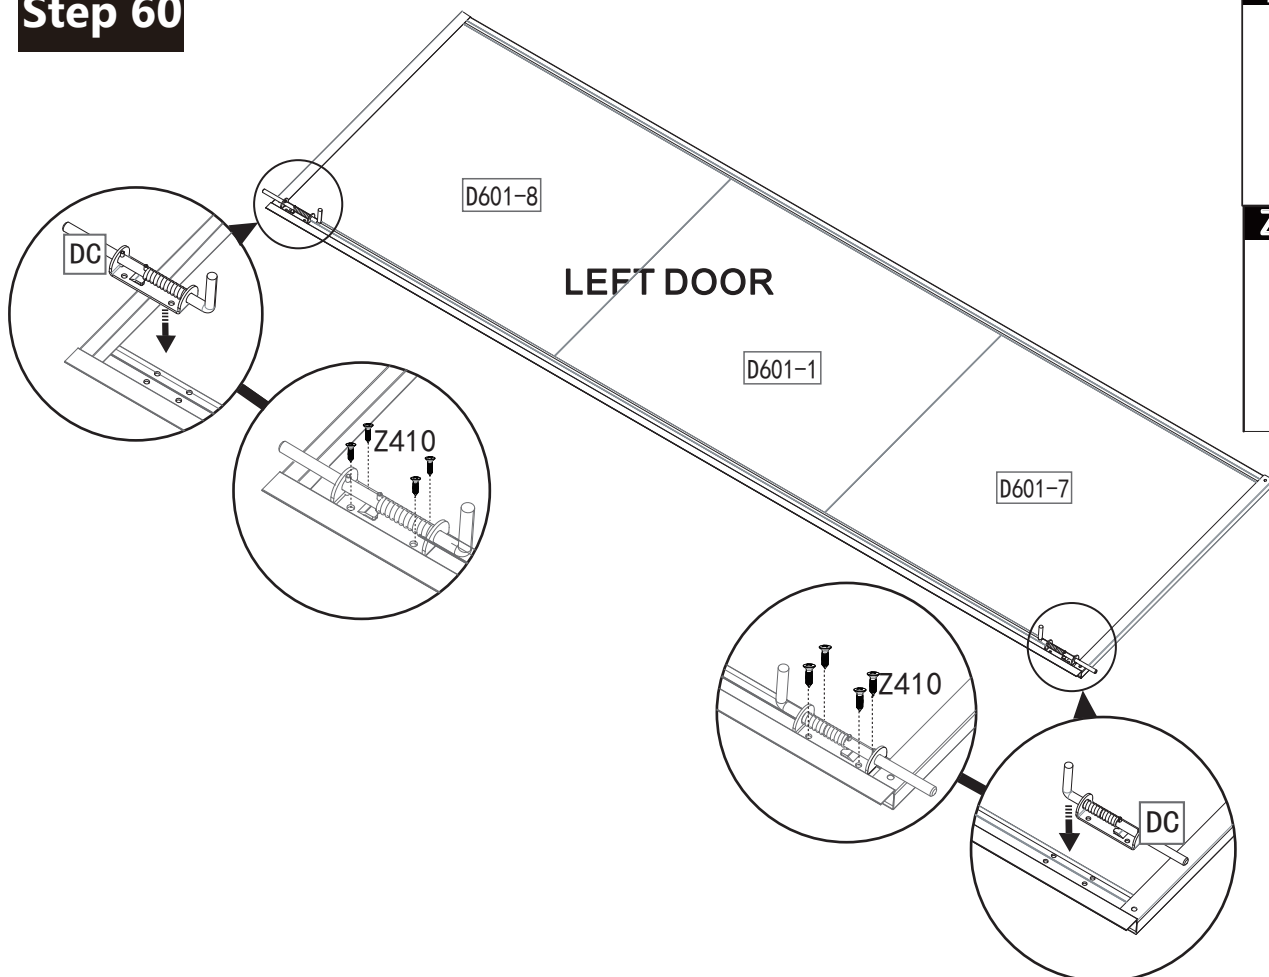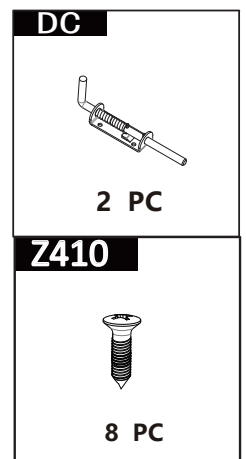

Step 61

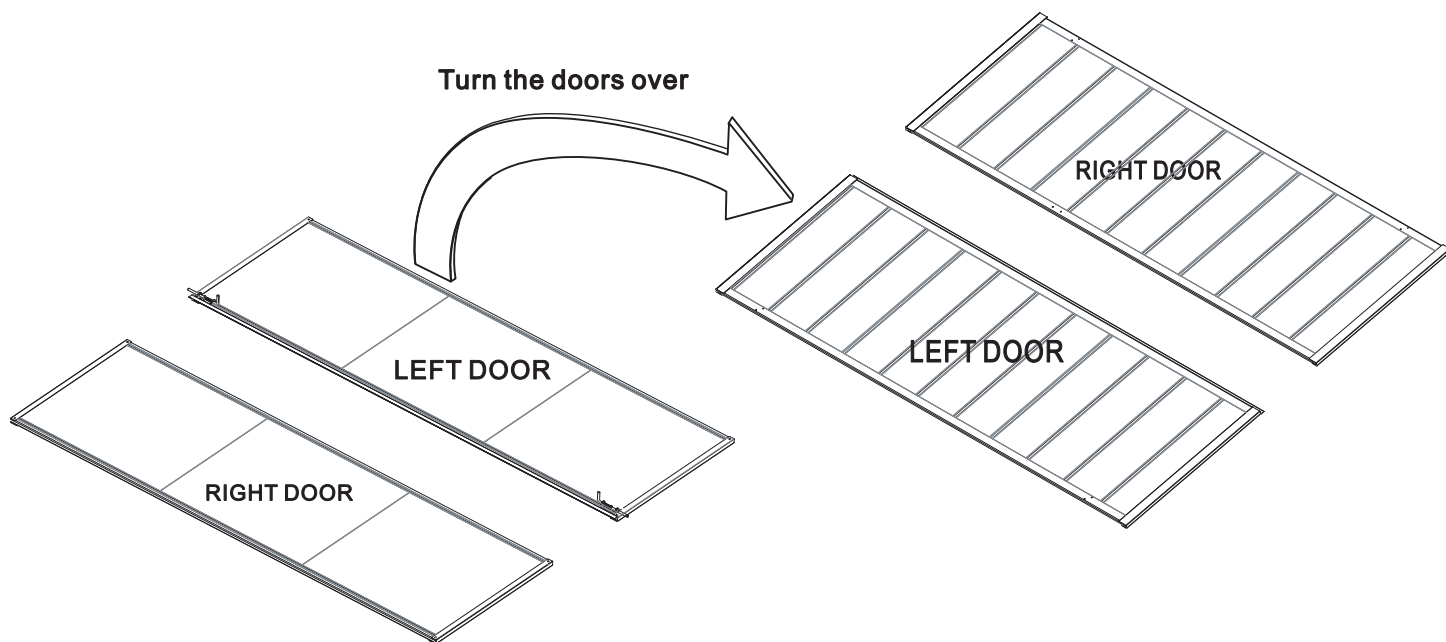


Step 62

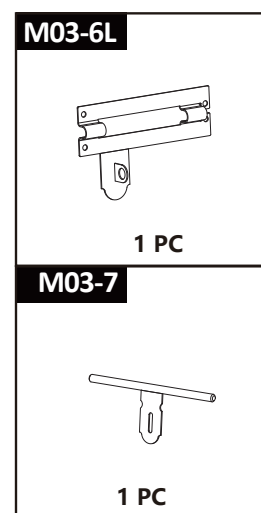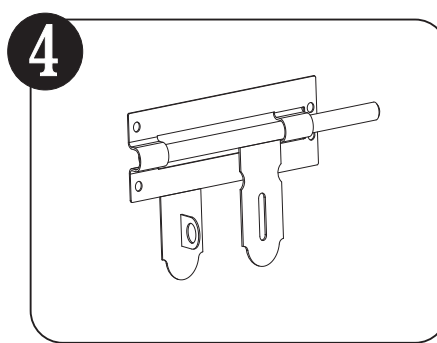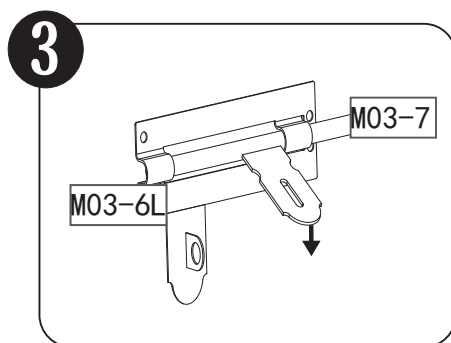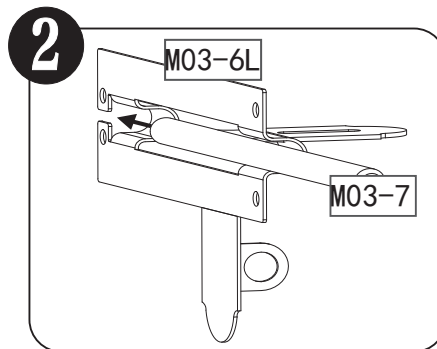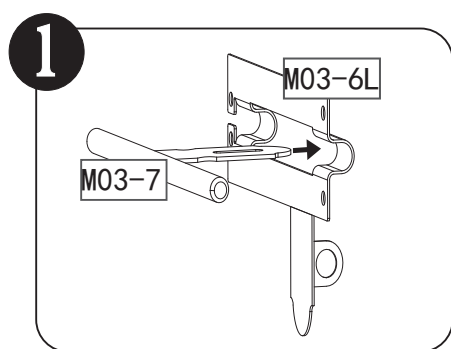

Step 63

Don't fasten the screws in this step, to adjust the positions of doors

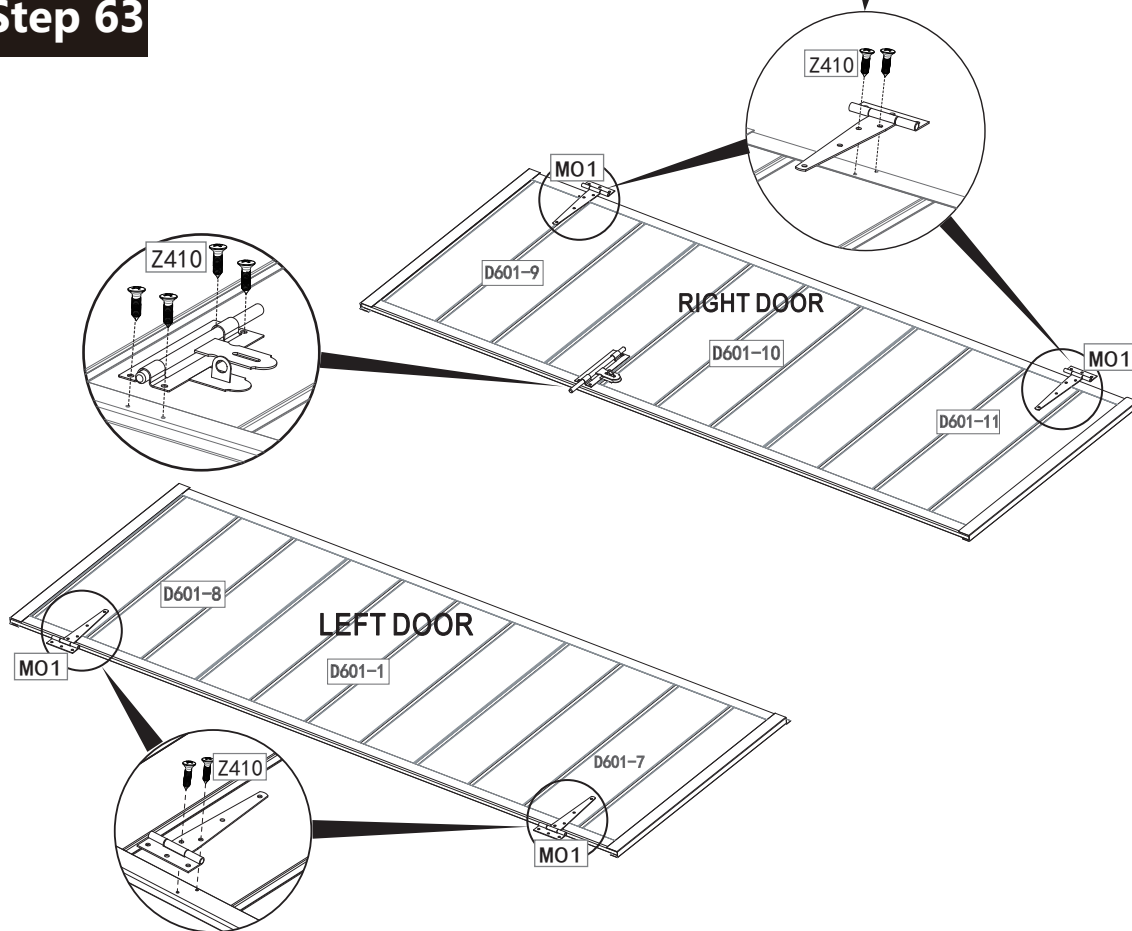


Don't fasten the screws in this step, to adjust the positions of doors

Z410




12 PC

MO1




4 PC



1 PC

Step 64

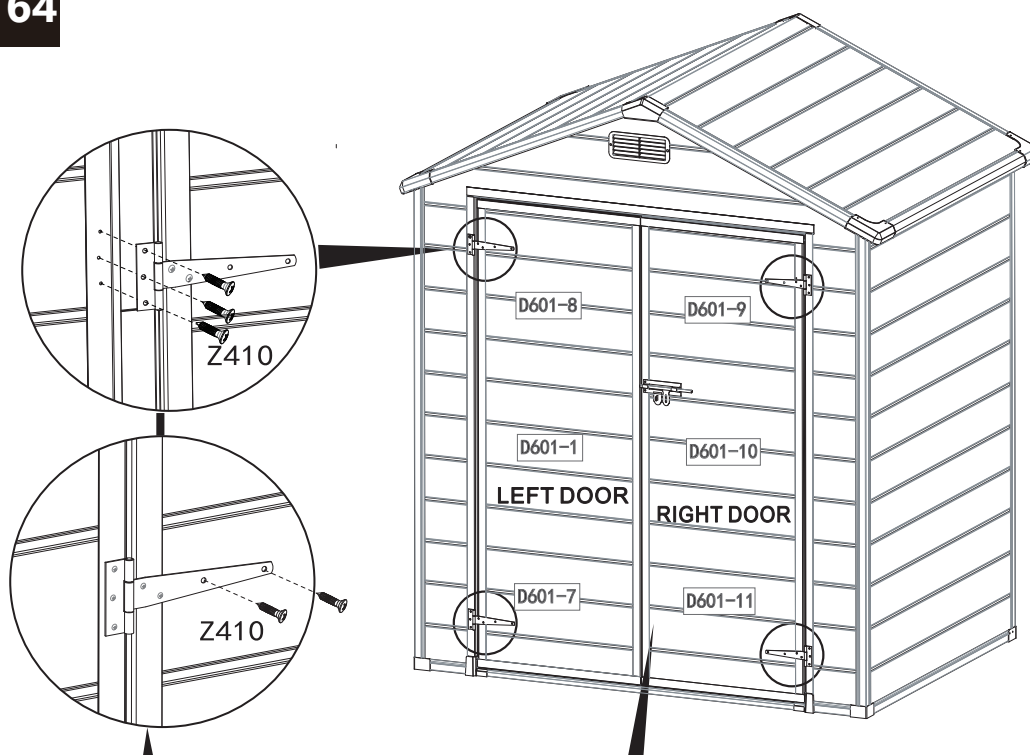

Nail the door after place adjustment and fasten all the screws.

Z410





20 PC




The joints of both left and right door should be in line

Step 65

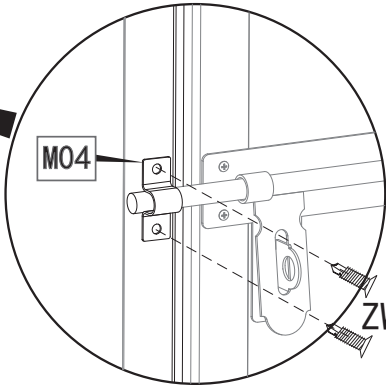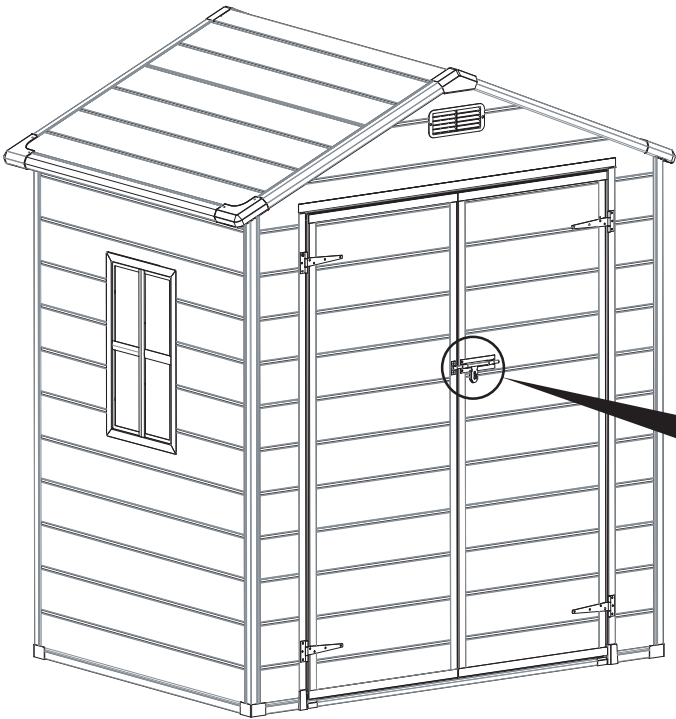


ZW413





2 PC

M04




1 PC

Step 66

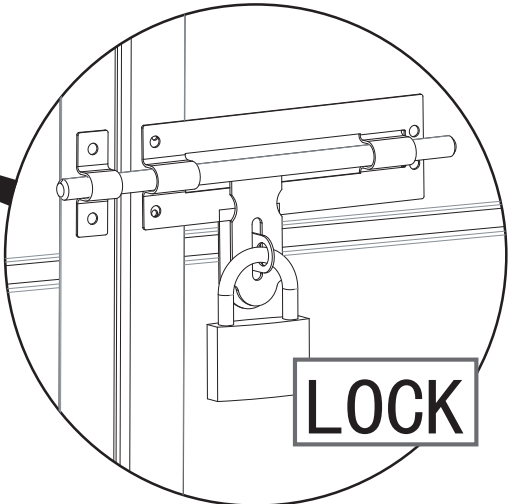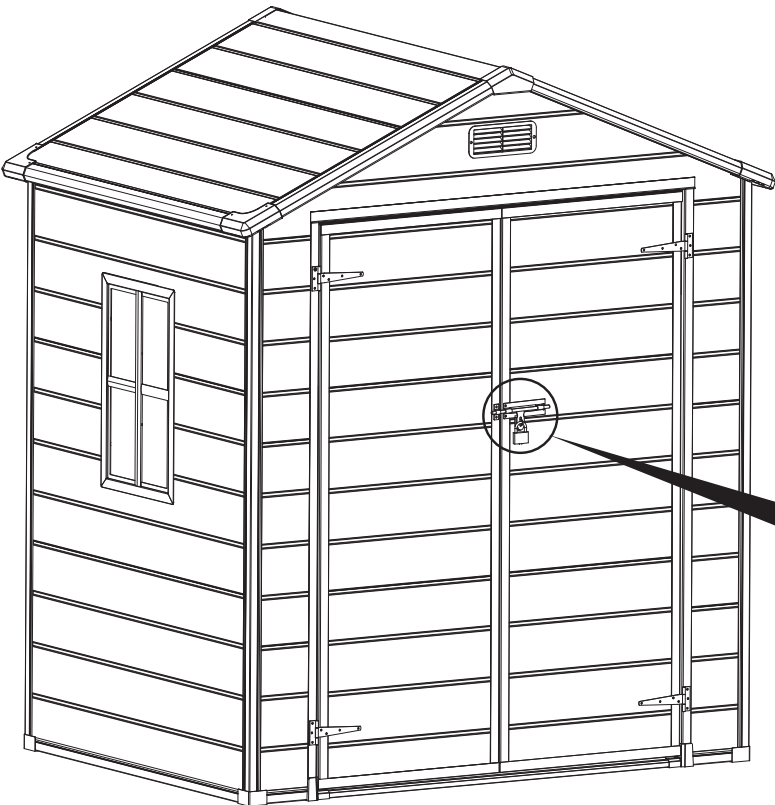

LOCK



1 PC

LOCK

