

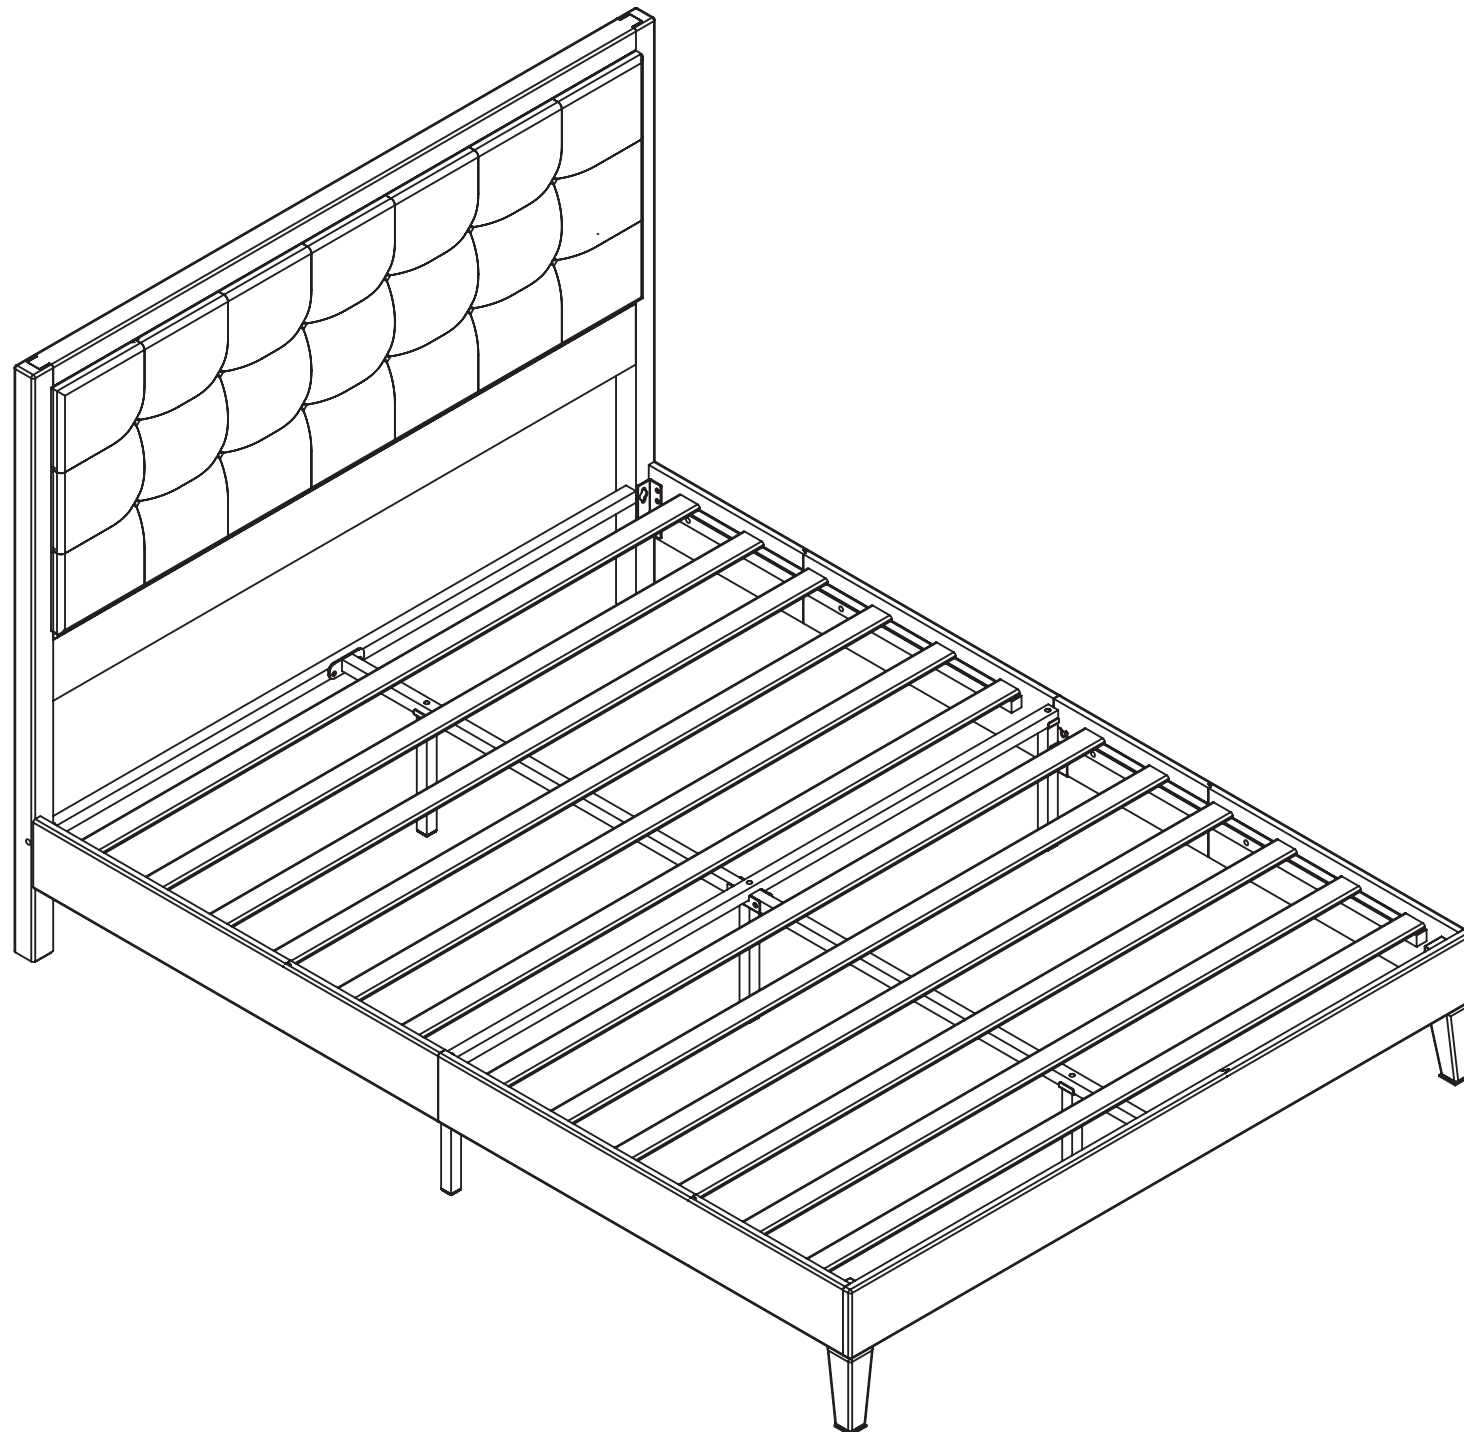


Upholstered Wood Platform Bed

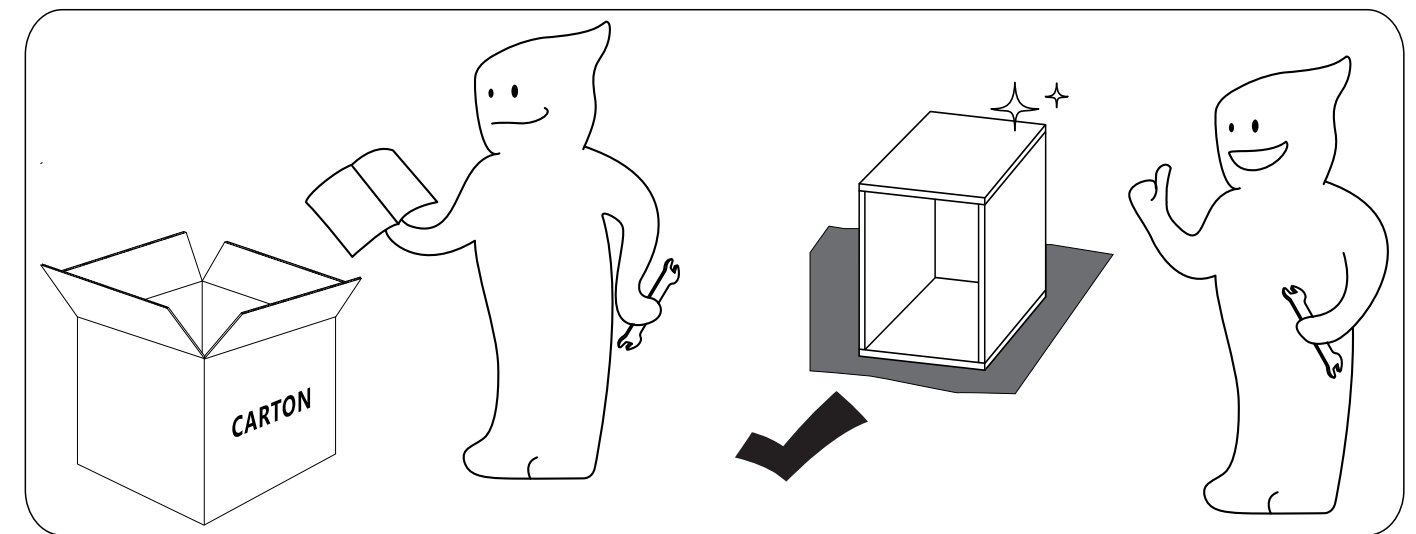

Please follow the instruction manuals and use a pad to protect the product during your assembly.

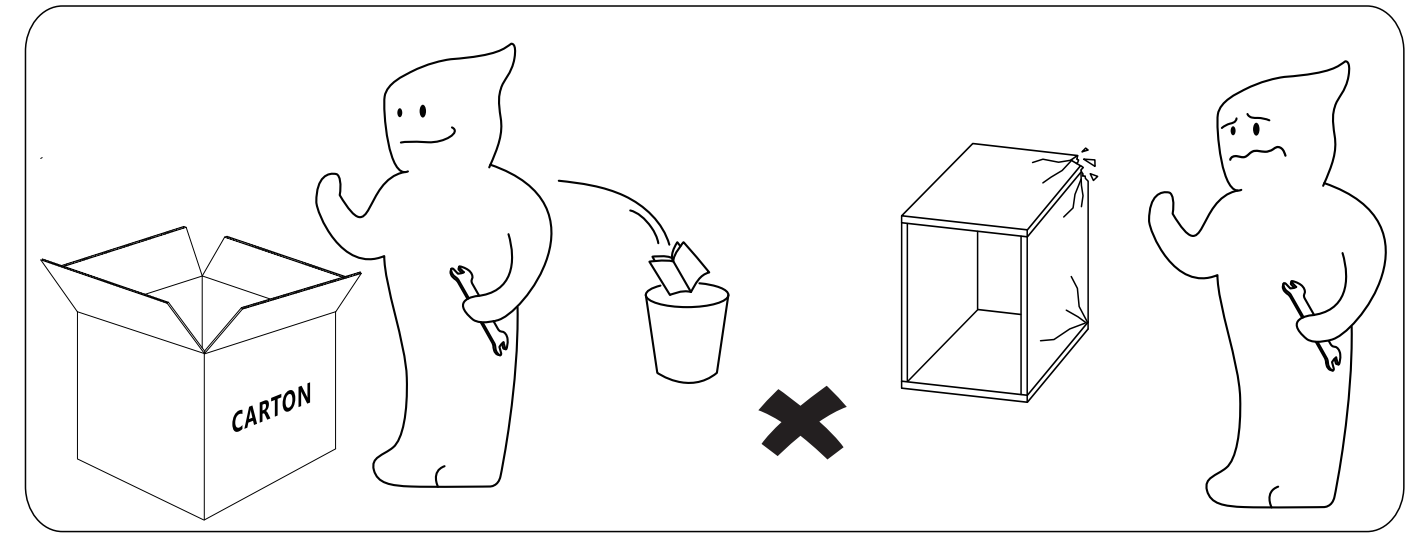


Note:

1. Should be assembled on flat ground to keep balance.
2. Before completing the installation, do not tighten the screws.



For easier and better assembly, **2** or more adults are required.

ASSEMBLY INSTRUCTIONS



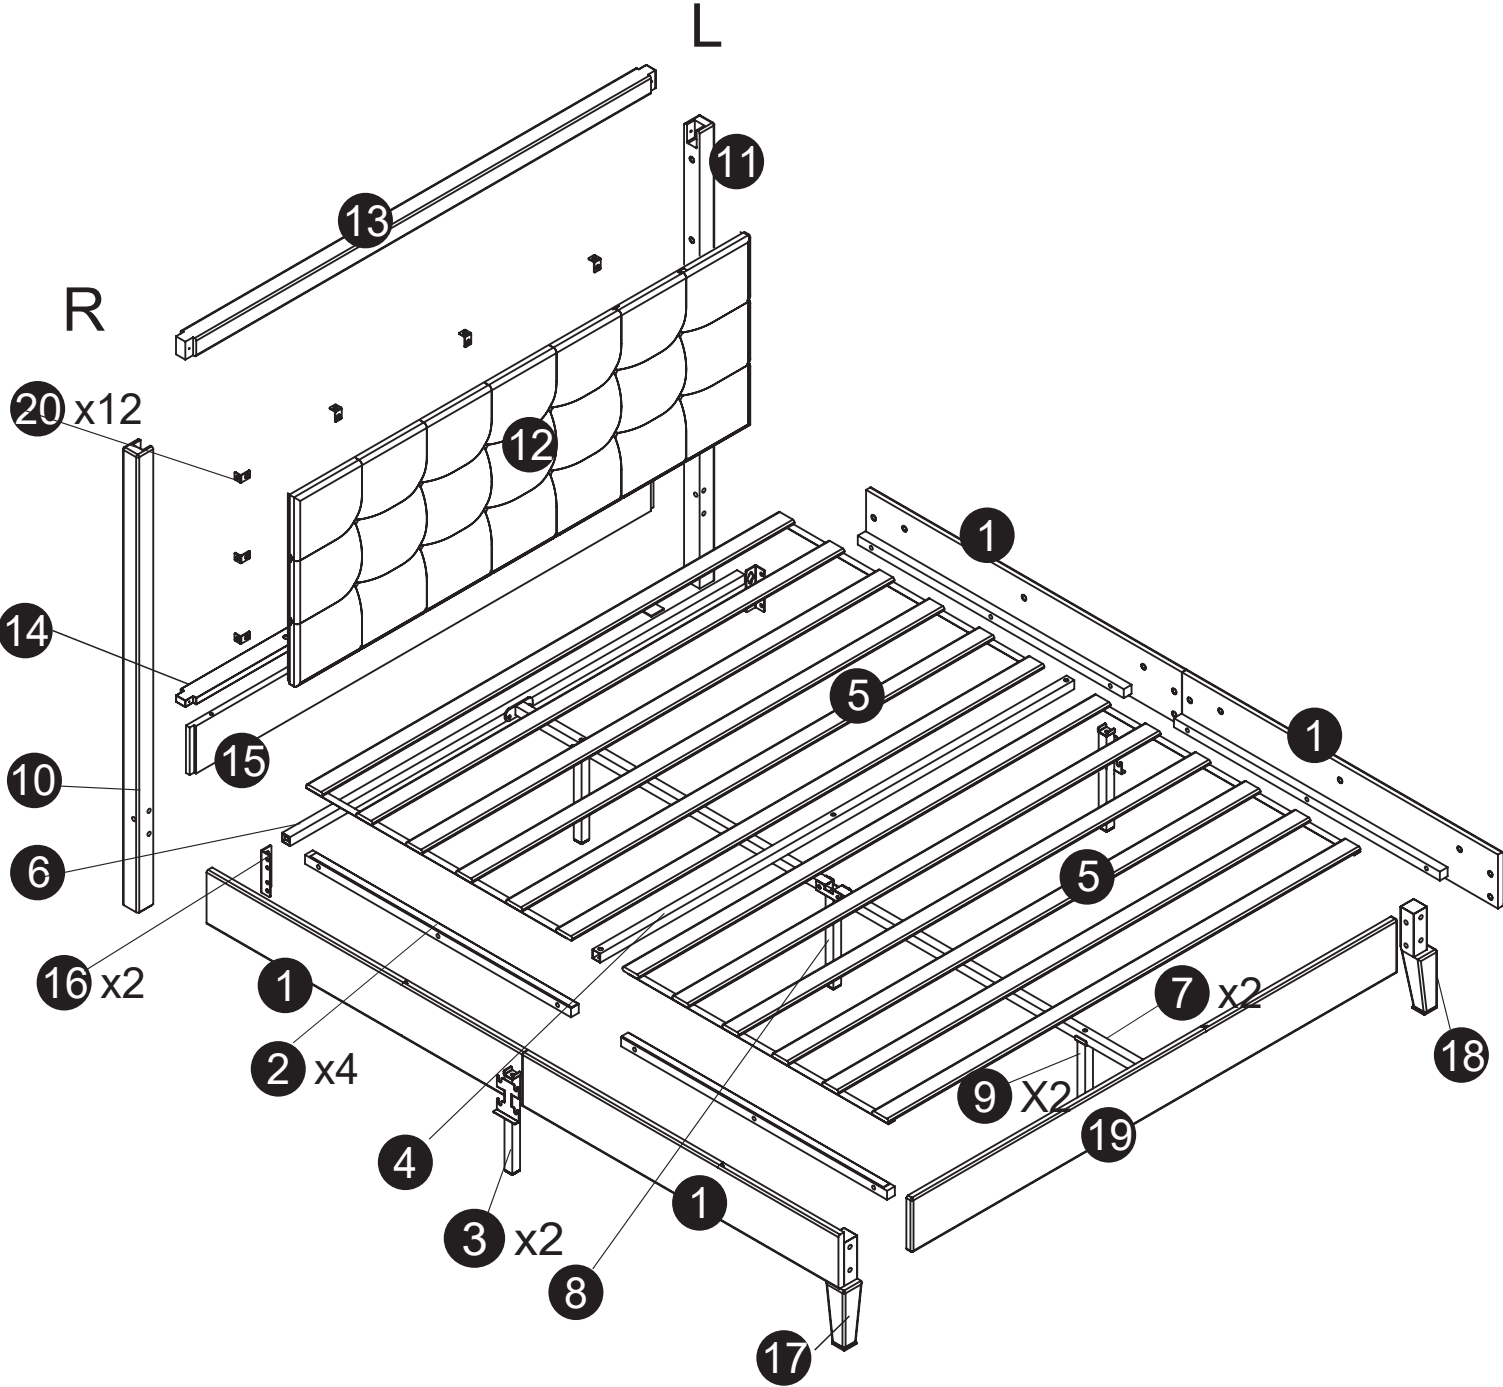


ASSEMBLY INSTRUCTIONS



PARTS LIST

 4PCS	 4PCS	 2PCS
 1PC	 2PCS	 1PC
 2PC	 1PCS	 2PCS
 1PC	 1PC	 1PC
 1PC	 1PC	 1PC
 2PCS	 1PC	 1PC
 1PC	 12PCS	 4PCS

ASSEMBLY INSTRUCTIONS

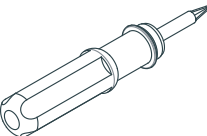A  M8*14 Colored Zinc 12PCS	B  M8*16 28PCS	C  M8*38 18PCS
D  M8*55 13PCS	E  M8*65 2PCS	F  φ8*40 4PCS
G  ST5*50 4PCS	H  M8 1PC	 1PC

ASSEMBLY INSTRUCTIONS

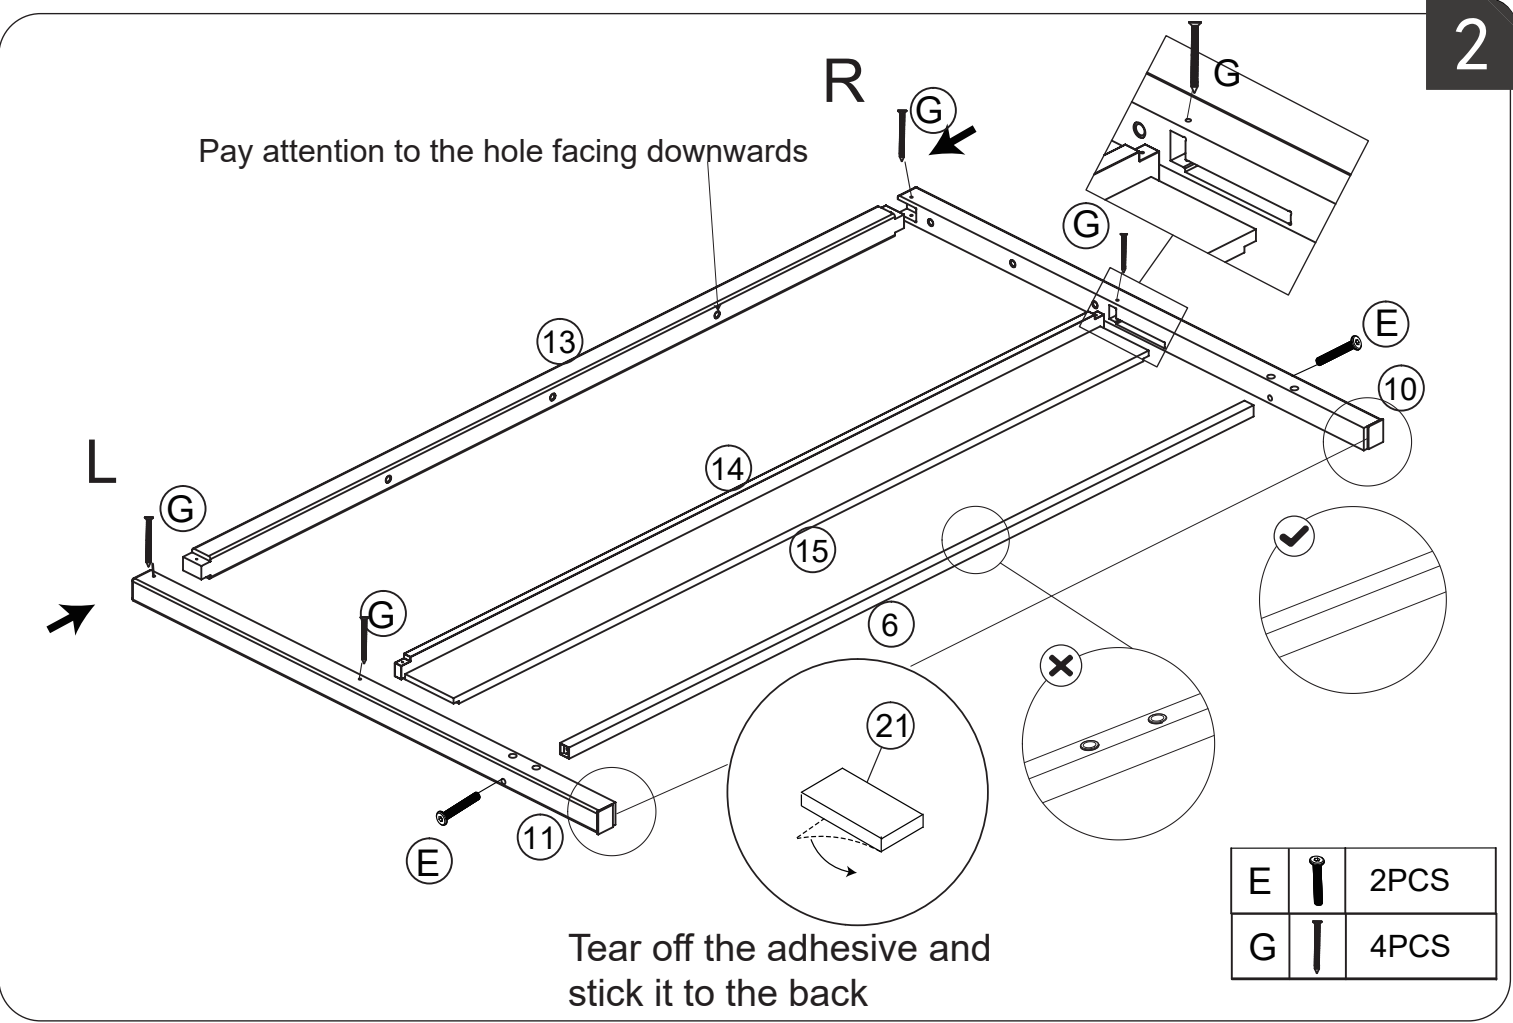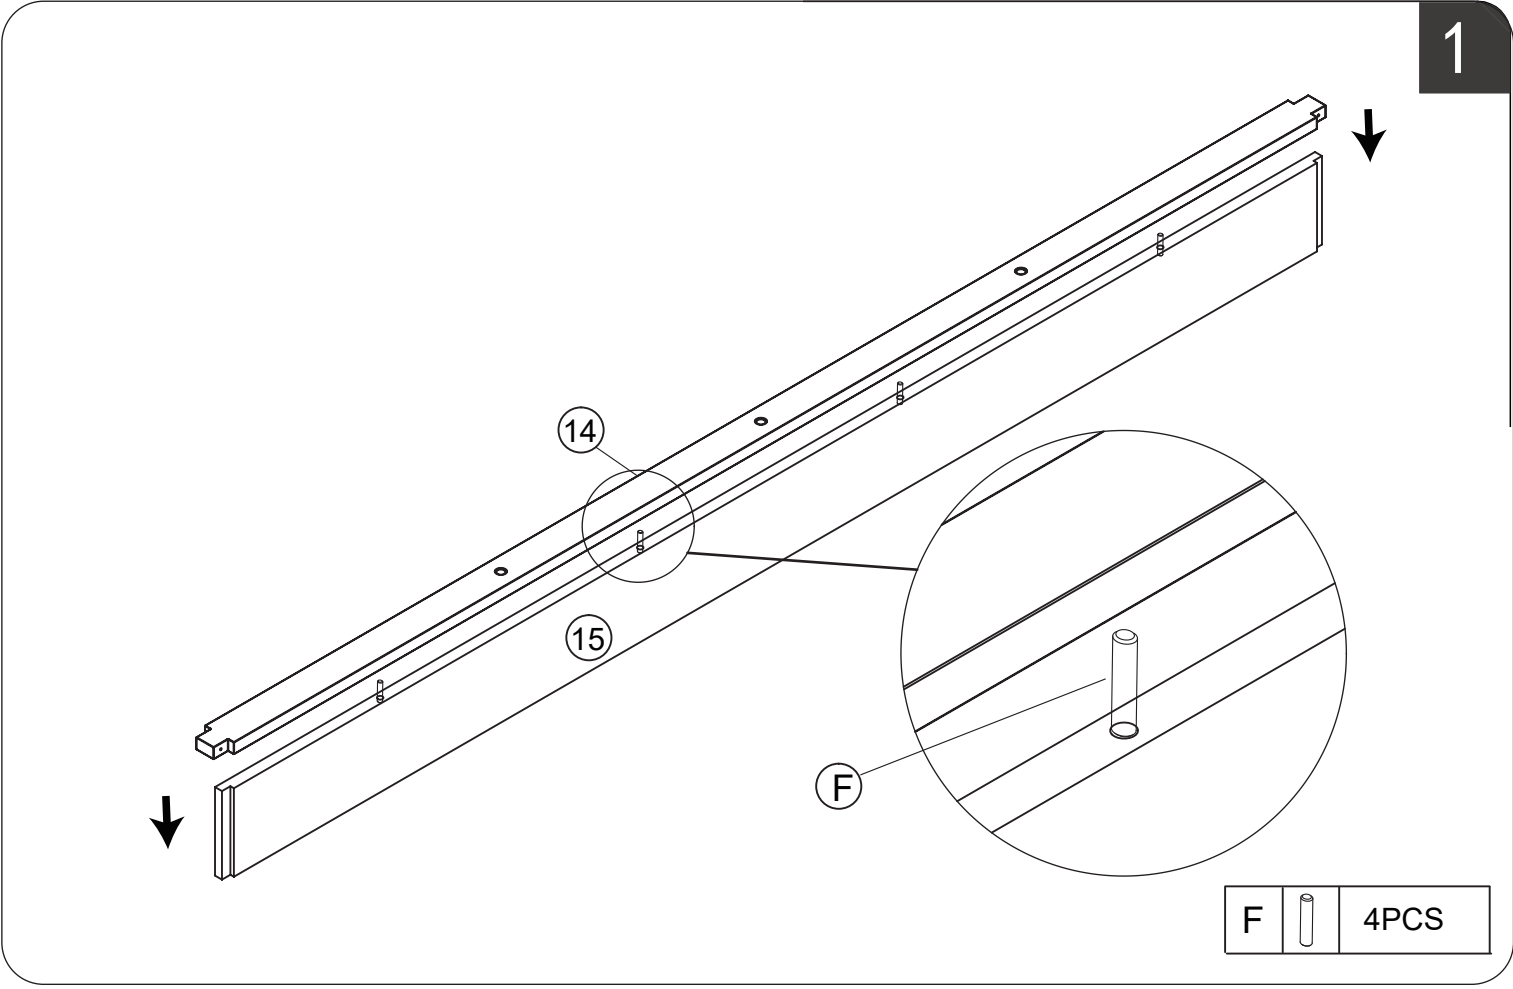

3

Please take note of the direction of the L-shape plate, the longer end should be installed on the upholstered part

Note: After assembling this part, the cushion should be protruded (compared with left and right feet).

A		12PCS
B		12PCS

Colored Zinc

5

Tear off the adhesive and stick it to the back

D		4PCS
---	--	------

4

Velcro

Black Zinc

C		12PCS
B		12PCS

6

D		4PCS
---	--	------

ASSEMBLY INSTRUCTIONS

7

Install screws and do not fully tighten them.

D

Fully tighten the screws.

D 4PCS

ASSEMBLY INSTRUCTIONS

9

step 2

B

step 1

B

B 4PCS

8

EVA facing up

EVA facing up

7

8

9

C

C 4PCS

10

C



D

C 2PCS


D 1PC

11

step 1

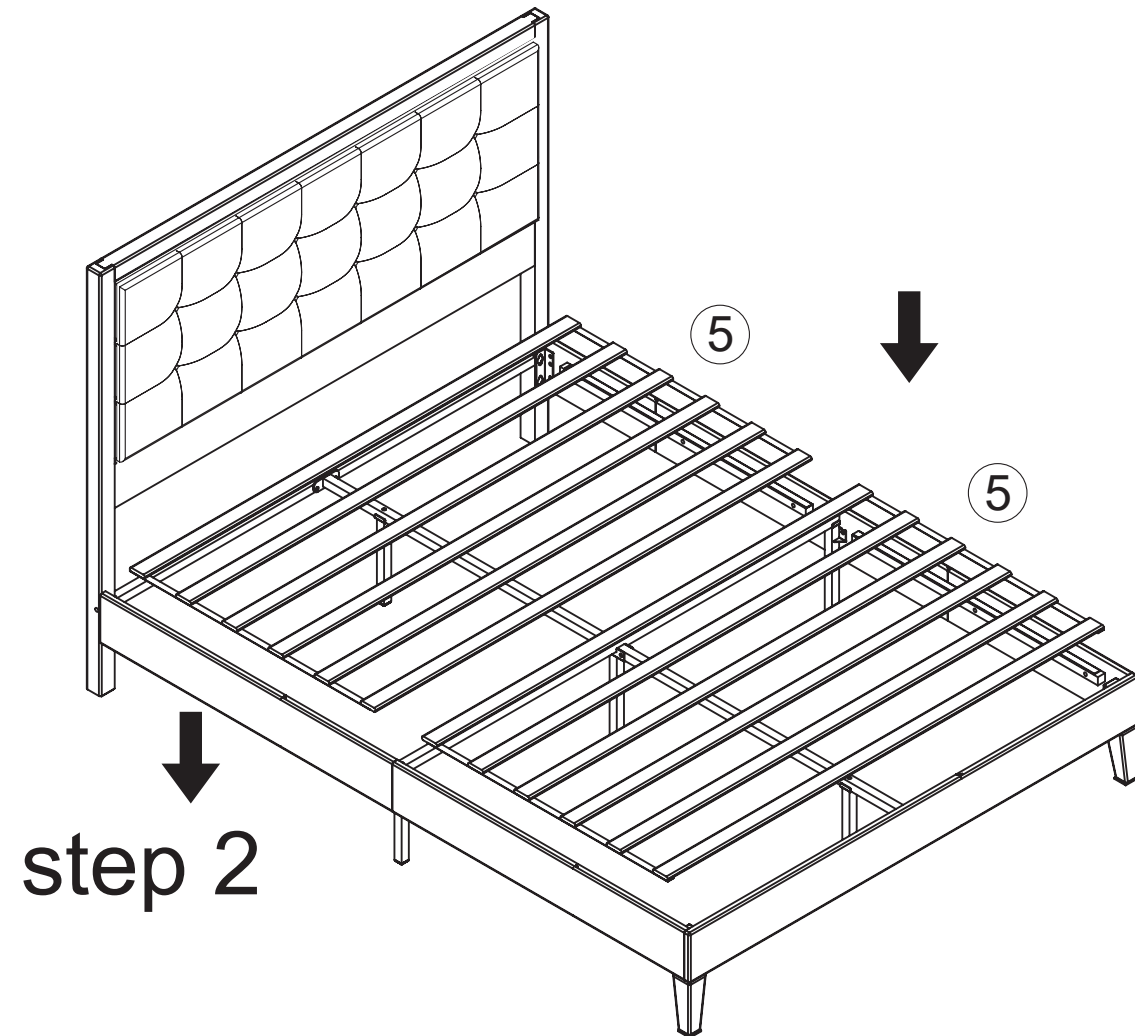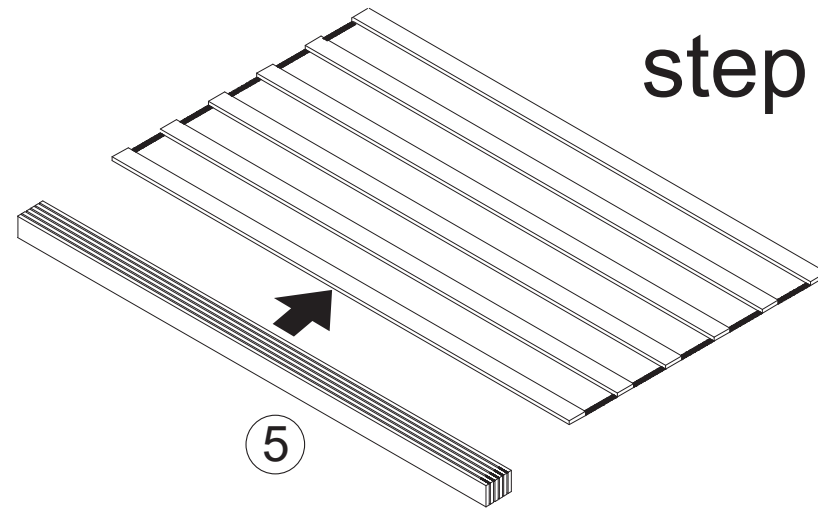

12

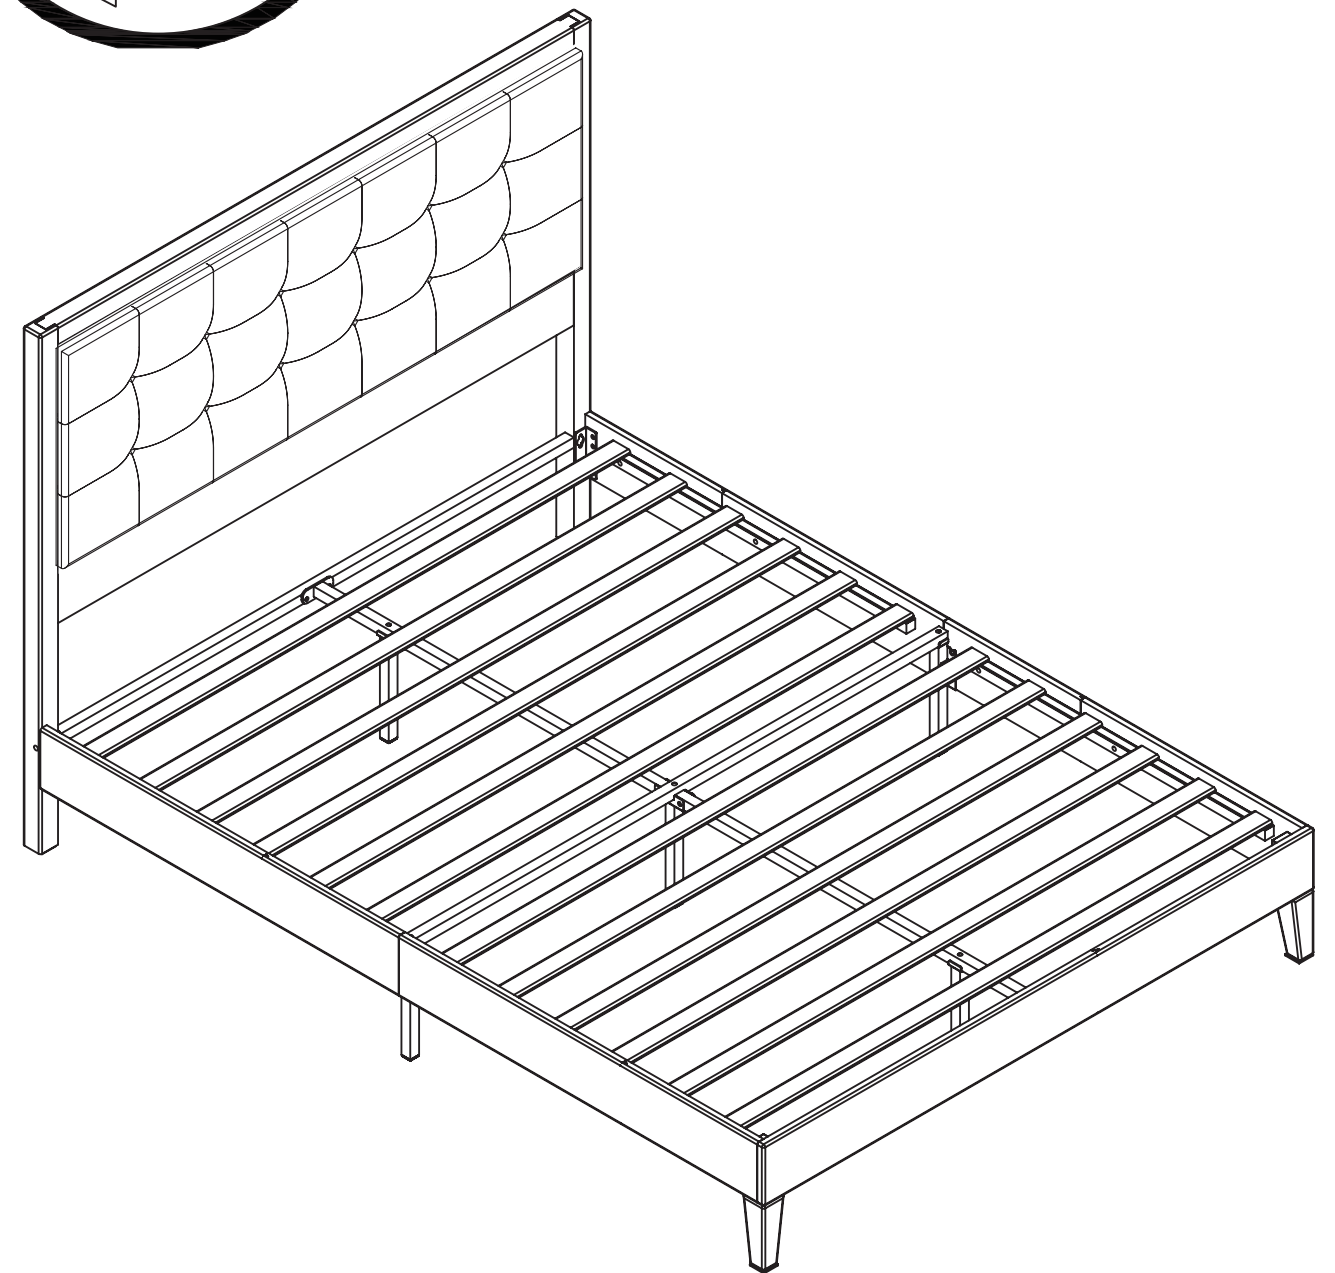

Installation Complete