



ADJUSTMENT OF HEIGHT

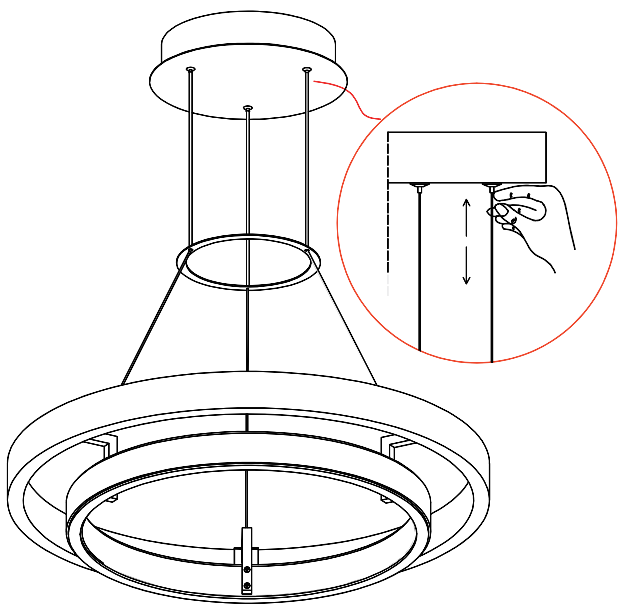


Step 1:
Adjust the height of wires and cables by pressing the wire lockers.

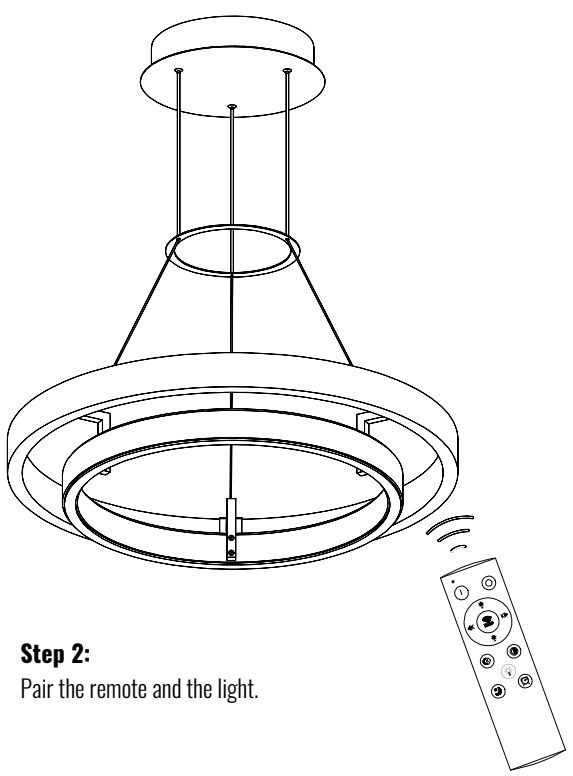

Step 2:
Pair the remote and the light.

REMOTE CONTROL INSTRUCTIONS

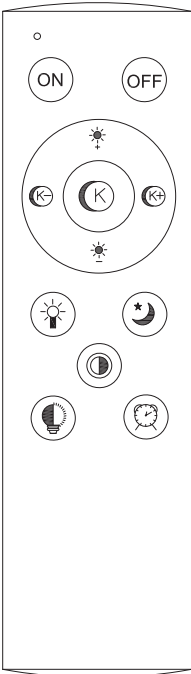


	Turn on the lights
	Turn off the lights
	Quick switch of the light color: Yellow Light → White Light → Natural Light
	Adjust the brightness of the lights.
	Adjust the light color temperature
	Night mode, lights will be dimmed when press this button
	This feature is not supported.
	Half Brightness
	Press this key to reduce the power by half.
	Press once: Sets a 30-minute timer. Press twice: Sets a 60-minute timer. Press Timer and ON buttons simultaneously: Cancels the current timer setting.

NOTE:
Please insert 2 batteries before using. AAA 1.5V battery x 2pcs (not included).

REMOTE SIGNAL PAIRING:
If the Remote Control loses signal of the light, press and hold the button within 3 seconds after turning on the light. After the light flashes three times, it's done

INSTALLATION
MANUAL


CHANDELIER
Model No.: QLP0070AK-1A

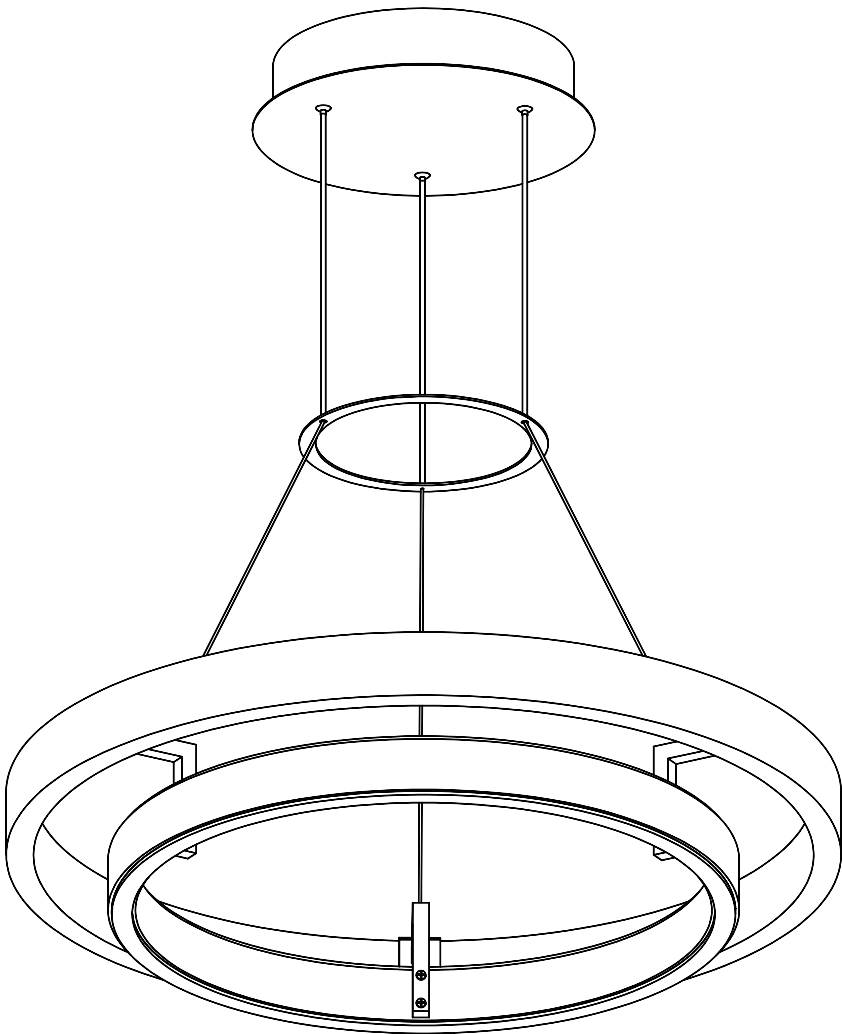


TOOLS REQUIRED




Ladder



Pliers




Wire Strippers




Screwdrivers

PACKING LIST

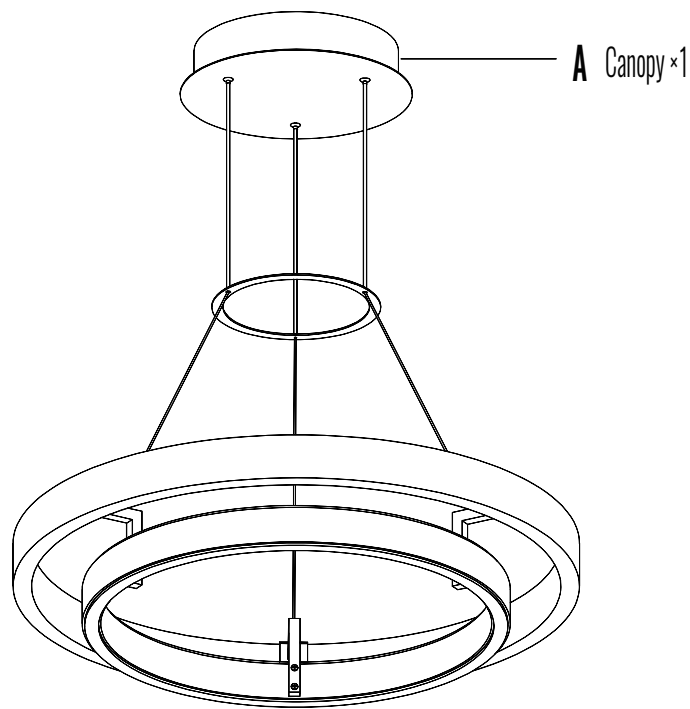


INSTALLATION KIT

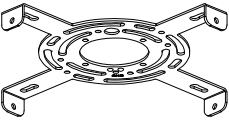AA  Mounting Bracket	1X	BB  Ground Screw	1X	CC  Outlet Box Screw	2X
DD  Canopy Screw	4X	EE  Wood Screw	4X	FF  Plastic Anchor	4X
GG  Wire Nut	3X	HH  Remote control	1X	II  Gloves	1X


NOTE:
AA/BB/DD have already been pre-installed together with Canopy (A).

MOUNTING AND WIRE

1. Install the Mounting Bracket

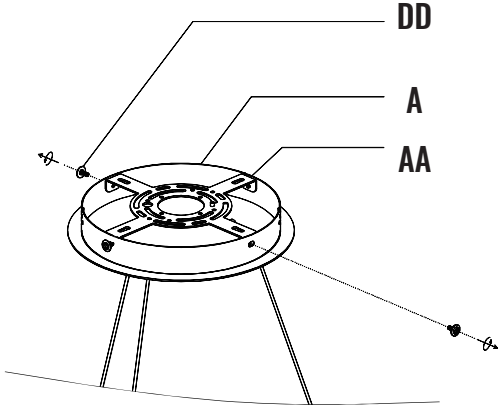


Step 1:
Loosen the Screw (DD) from the Canopy (A), take out the Mounting Bracket (AA).

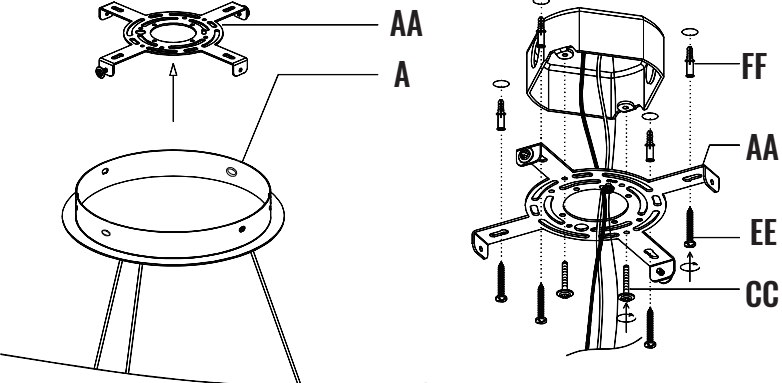

Step 2:
Take off the screws from the outlet box, secure the Mounting Bracket (AA) onto the box with screws taken off or Outlet Box Screw (CC).


2. Connect the wires

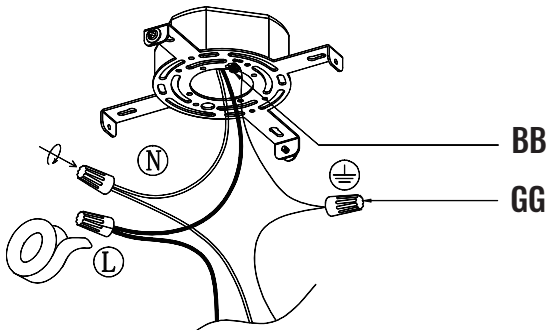

Step 1:
Connect the wires from the fixture to the house supply wires with Wire Nut (GG), ground wire (green, green/yellow, or bare) to ground wire, neutral wire (white) to neutral wire, and hot wire (black) to the hot wire. Wrap the connection with electrical tape.

Step 2:
Spread apart the wires so that the hot wires are on one side of the outlet box and the neutral wires are on the other side.

3. Fix the Canopy

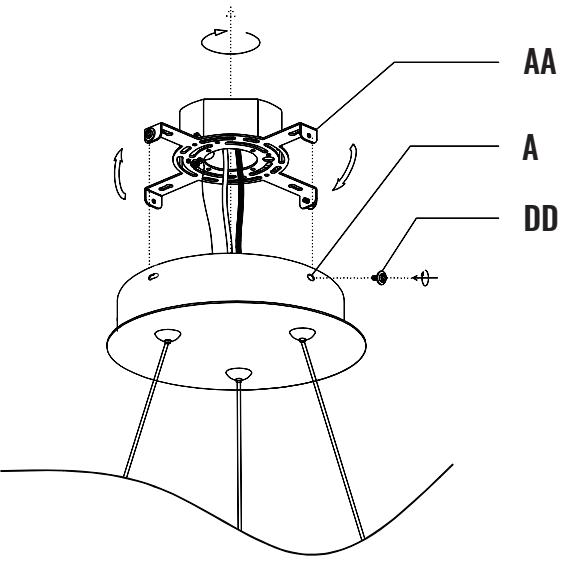

Fix the canopy onto the Mounting Bracket with the Canopy Screw (DD).