


Assembly Instruction

Contains One Headboard and Hardware

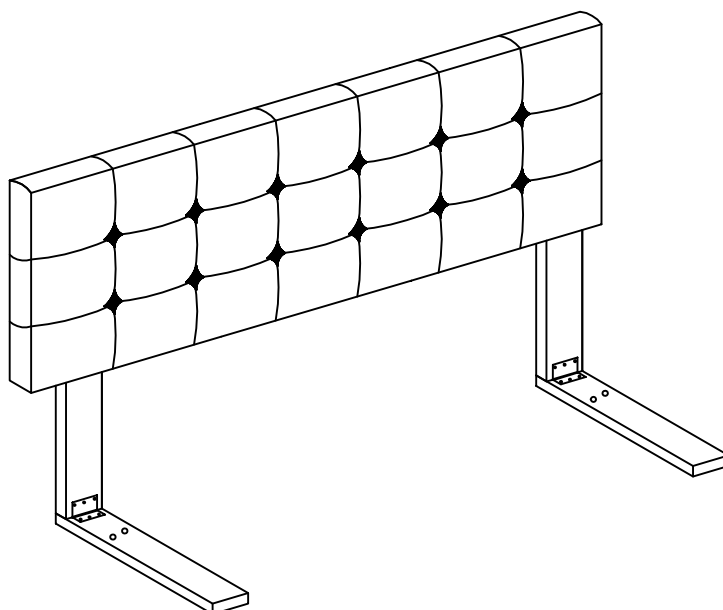


IMPORTANT NOTE:

Carefully remove all the parts from the box. Arrange on a flat surface and verify you have all of the following parts and hardware


TOOLS REQUIRED:
Phillips Screwdriver

PARTS LIST


A. Headboard (1 pc)

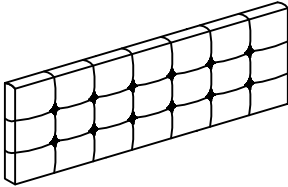

B. Headboard Legs (2 pcs)

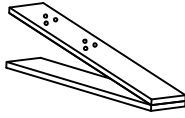


C. Metal L Bracket (2 pcs)

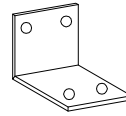


HARDWARE LIST


D. 20mm Bolt (8 pcs)

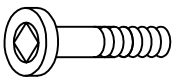


E. 40mm Bolt (6 pcs)

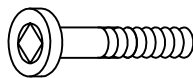

F. Small Hex Key (1 pc)

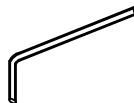

G. Flat Washer (8 pcs)

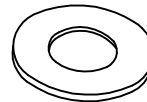


H. Spring Washer (14 pcs)




ASSEMBLY INSTRUCTIONS

STEP 1

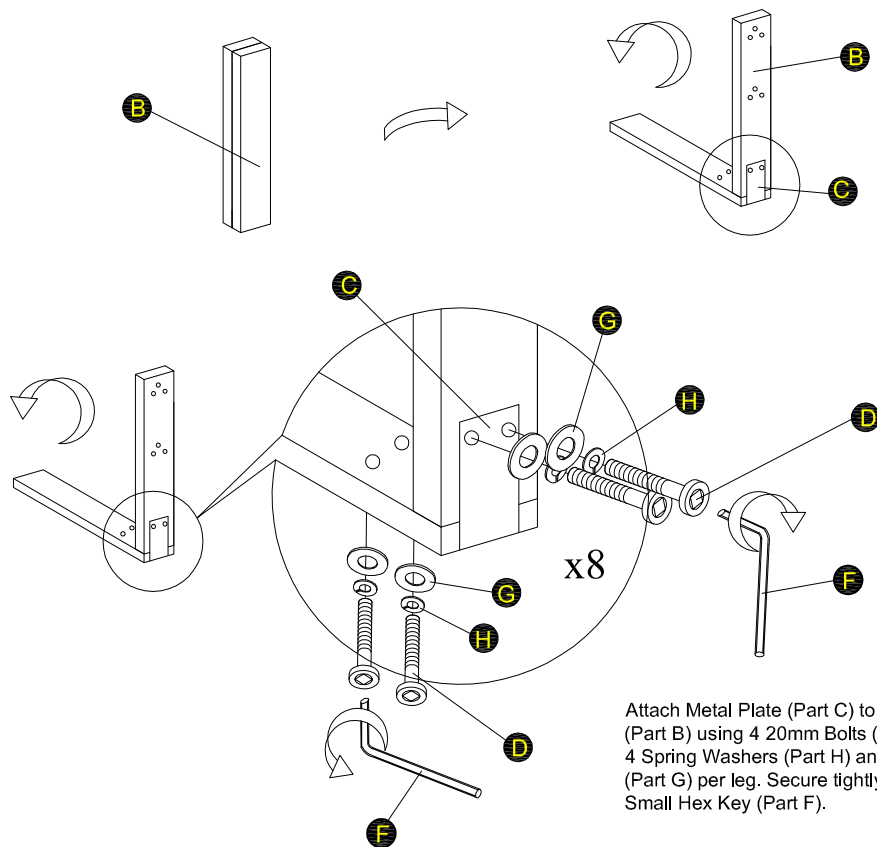

Attach Metal Plate (Part C) to the Headboard Leg (Part B) using 4 20mm Bolts (Part D), 4 Spring Washers (Part H) and 4 Flat Washers (Part G) per leg. Secure tightly using Small Hex Key (Part F).

STEP 2

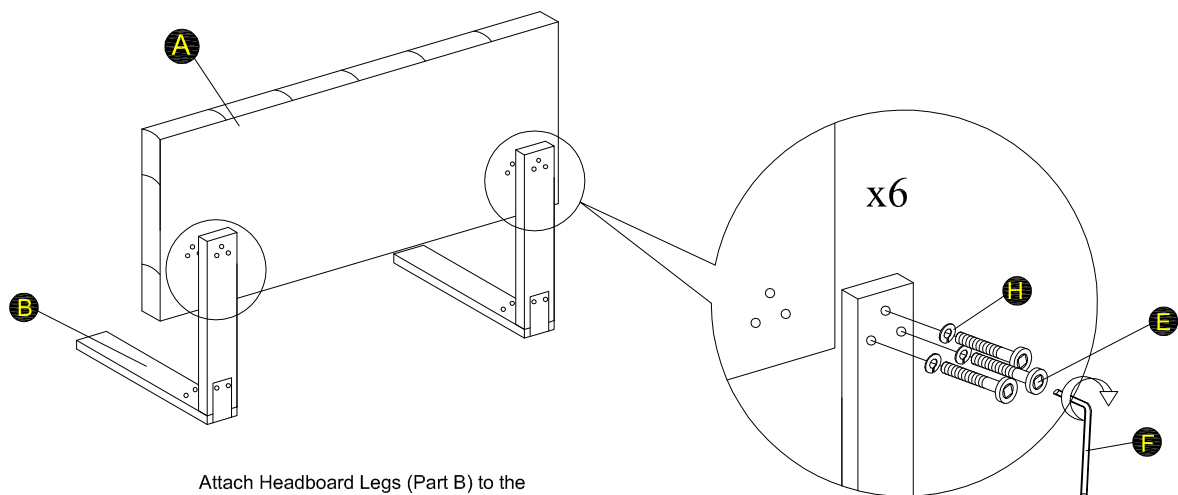

Attach Headboard Legs (Part B) to the Headboard (Part A) using 6 40mm Bolts (Part E) and 6 Spring Washers (Part H). Secure tightly using Small Hex Key (Part F).

This Universal Headboard height is adjustable from 36" to 40". Simply place the bolts in the top three holes for a 40" height or the bottom three holes for a 36" height. Your Adjustable Headboard is now set up and ready for use.