

L1B042

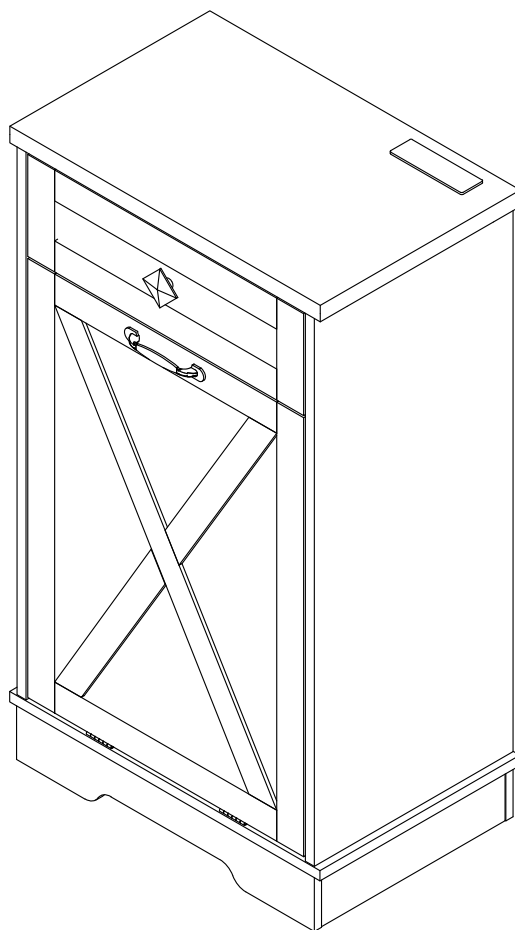


As this item contains many parts, please read the installation instruction carefully before installation . Please use tools properly and carefully.If you have any questions about the product and installation, please contact us.

hosoteservice@gmail.com

Our professional after-sales team will serve you online all day.

Before You Start

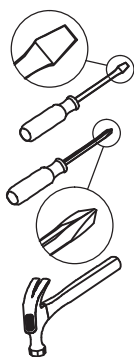

- ✓ Read through each step carefully and follow the proper order
- ✓ Separate and count all your parts and hardware
- ✓ Give yourself enough room for the assembly process
- ✓ Have the following tools: Flat Head Screwdriver, #2 Phillips Head Screwdriver and Hammer
- ✓ Caution: If using a power drill or power screwdriver for screwing, please be aware of to slow down and stop when screw is tight. Failure to do so may result in stripping the screw. (Assembly speed can be increased by using electric screwdriver)

Helpful Hints


PEOPLE NEEDED FOR ASSEMBLY: 1-2

- Open your item in the area you plan to keep it to avoid excessive heavy lifting.
- Identify, sort and count the parts before attempting assembly.
- Compression dowels are lightly tapped in with a hammer.
- Slides are labeled with an **R** (right) and **L** (left) for proper placement.
- Make sure to always face the point on the top of the Cam Lock towards the outer edge.
- If there is a back panel in the package, please install it to make sure your unit is complete and sturdy.
- Please fix all the screws provided for the back panel which can enhance product stability. If it is difficult to fix it when tightening, it can be fixed with the help of a hammer and then tightened.
- Do NOT use harsh chemicals or abrasive cleaners on this item.
- Never push, pull, or drag your furniture.




Board Identification


Not actual size

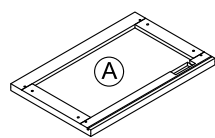


DESK TOP
Qty:1

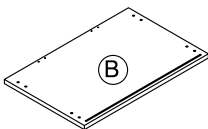


BOTTOM PANEL
Qty:1

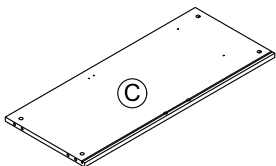


LEFT PANEL
Qty:1

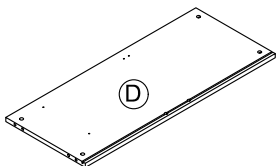


RIGHT PANEL
Qty:1




PULL BACK PANEL
Qty:1

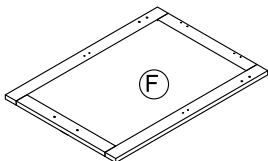


THE DOOR
Qty:1

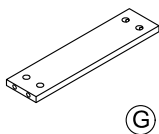


PULL PLATE
Qty:2

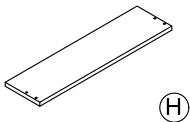


PULL BACK PANEL
Qty:1

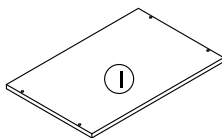


BOTTOM PANEL
Qty:1

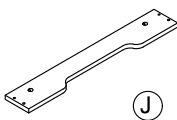

PULL PLATE
Qty:1




PULL PLATE
Qty:1




PULL PLATE
Qty:2

Board Identification


Not actual size

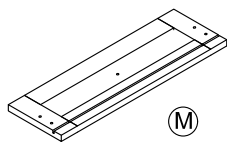


DRAWER PANEL
Qty:1




DRAWER SIDE PANEL
Qty:2




DRAWER BACK PLATE
Qty:1

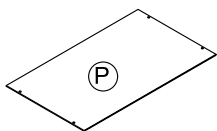

DRAWER BOTTOM PANEL
Qty:1

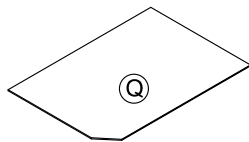

REAR PANEL
Qty:1

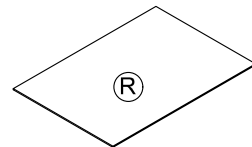

REAR PANEL
Qty:1

Part List



Ø6×35mm

①

×36

CAM BOLT
spare: 4



Ø10.5×9.5mm

②

×36

CAM LOCK
spare: 4



Ø6×30mm

③

×16

DOWEL
spare: 3



④

×16

DECORATIVE STICKER
spare: 3



Ø4×14mm

⑤

×34

SCREWS
spare: 4



⑥

×1


DOOR HANDLE



⑦

×8

BACK PLATE CLASP
spare: 2



M4×30mm

⑧

×8


SCREWS
spare: 2



⑨

×8


FOOT PAD
spare: 2



⑩

×1


DOOR HANDLE



⑪

×2

ANTI-TIPPING

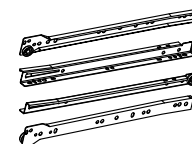

⑫

II

CL X1

+

DL X1

+

DR X1


+

CR X1

⑫

×1

SLIDE RAIL

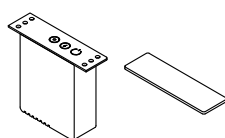

⑬

×1

DEODORIZING EQUIPMENT



⑭

×1

TWO-FOLD SUPPORT ROD



⑮

×1


TWO-FOLD SUPPORT ROD



⑯

×1

SCREWDRIVER



⑰


×2

HINGE

Part List


Cam Lock Fastening System

Insert the cam bolt into the hole first, then insert the cam lock and lock it.












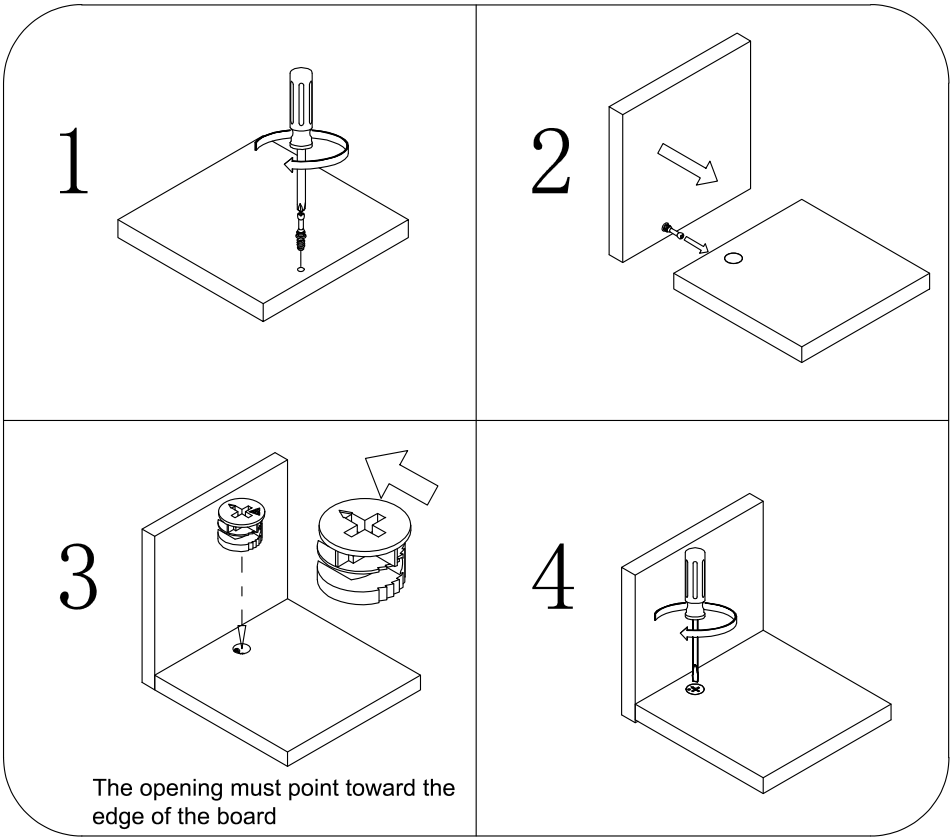


Board Identification





Not actual size

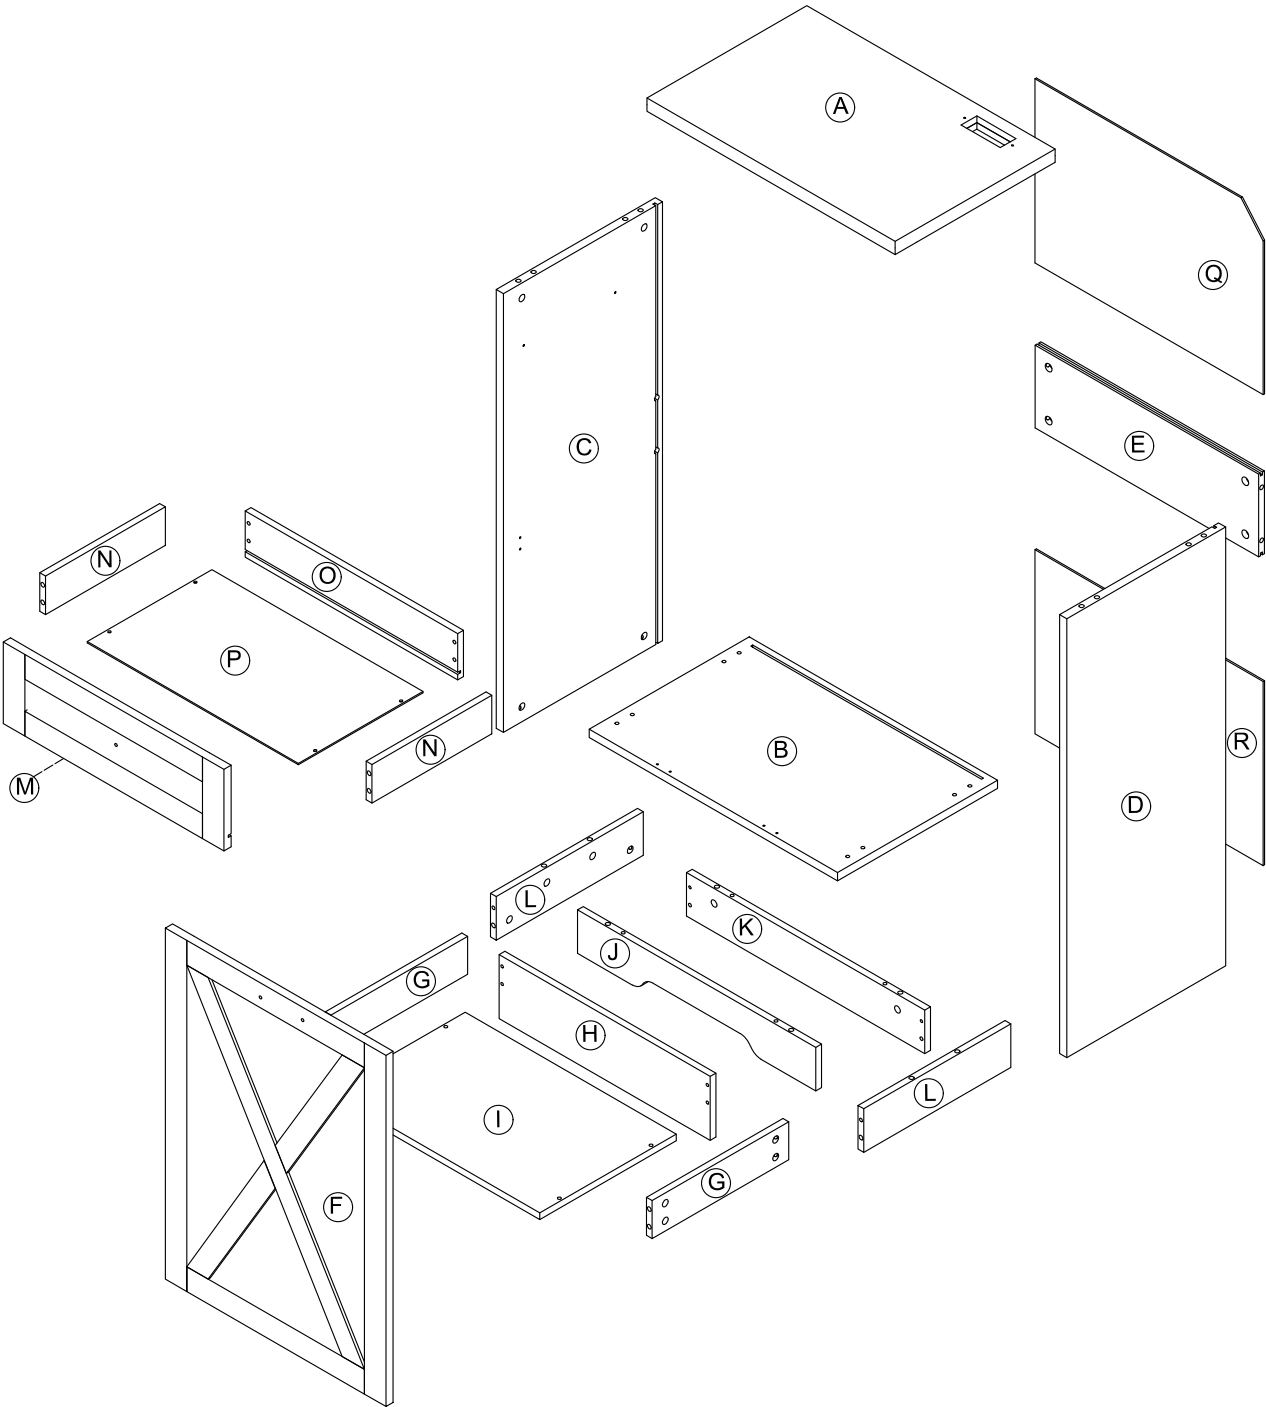







STEP1

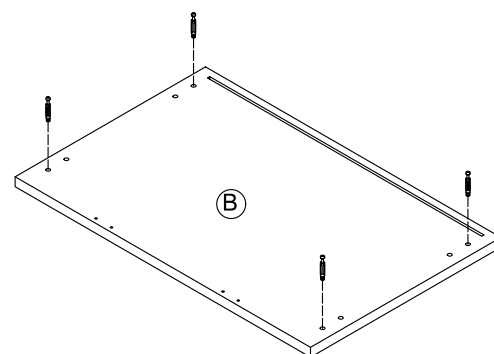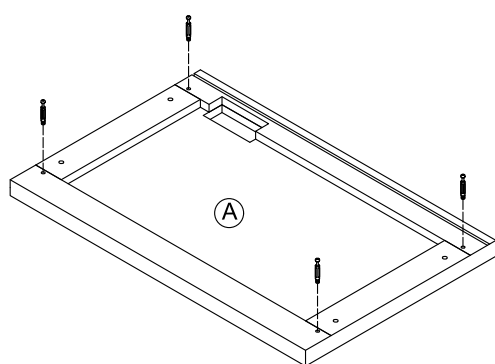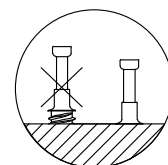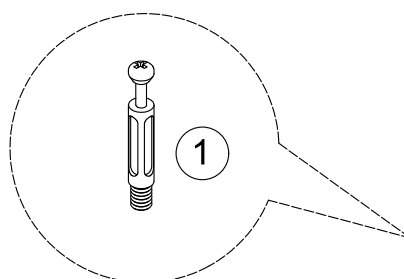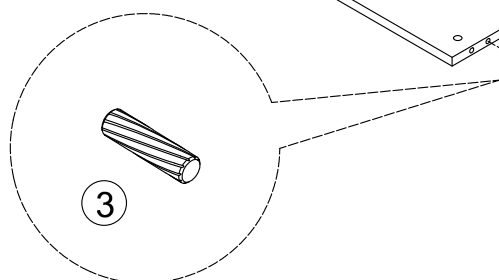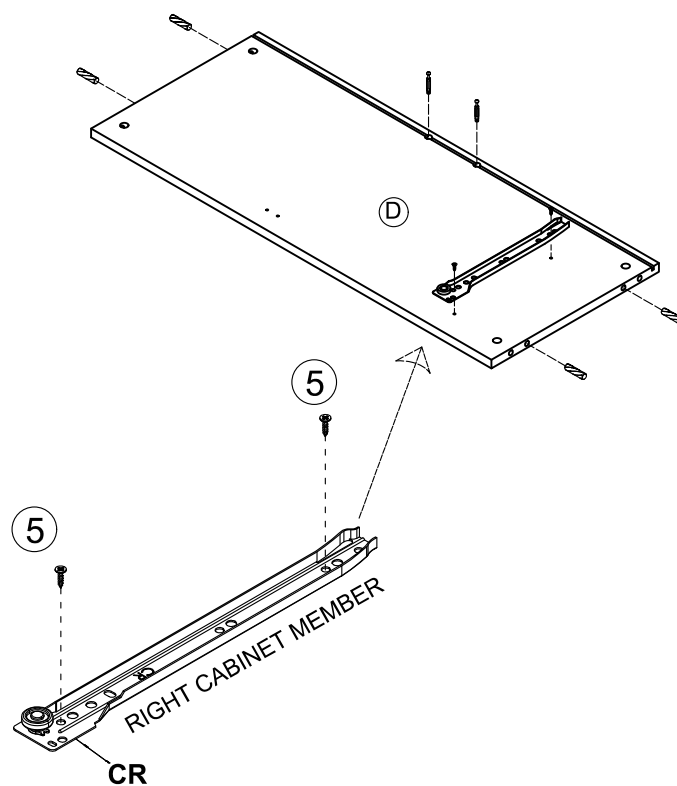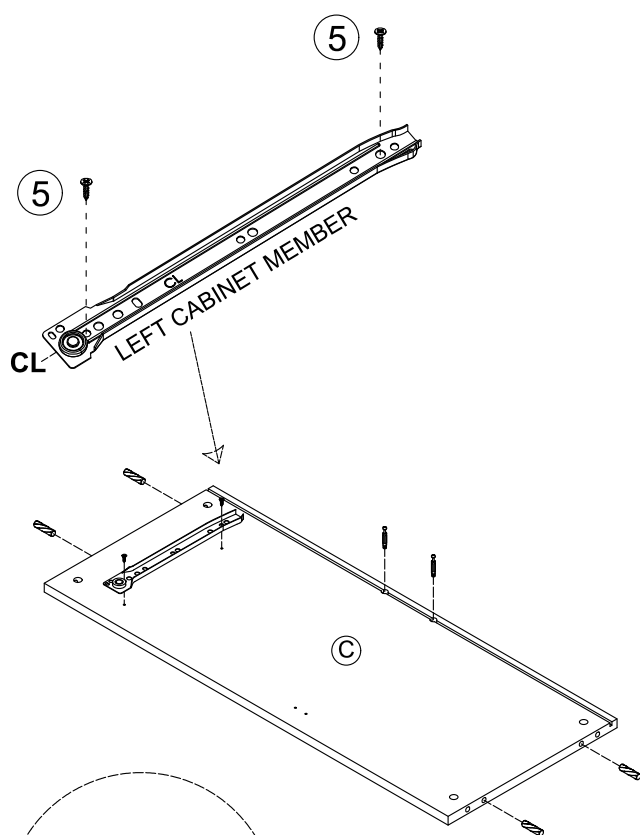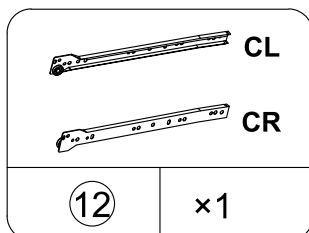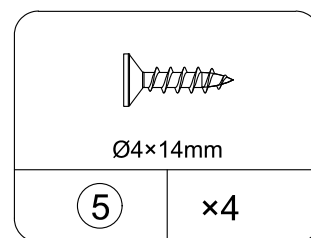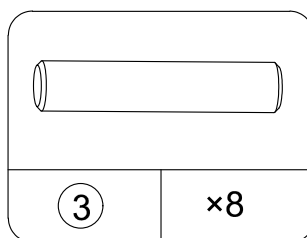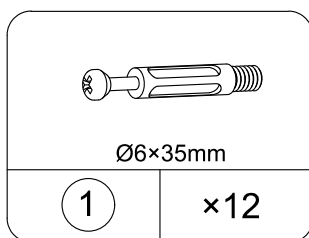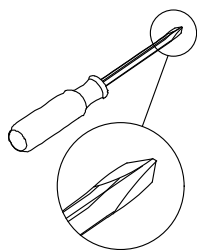



STEP2

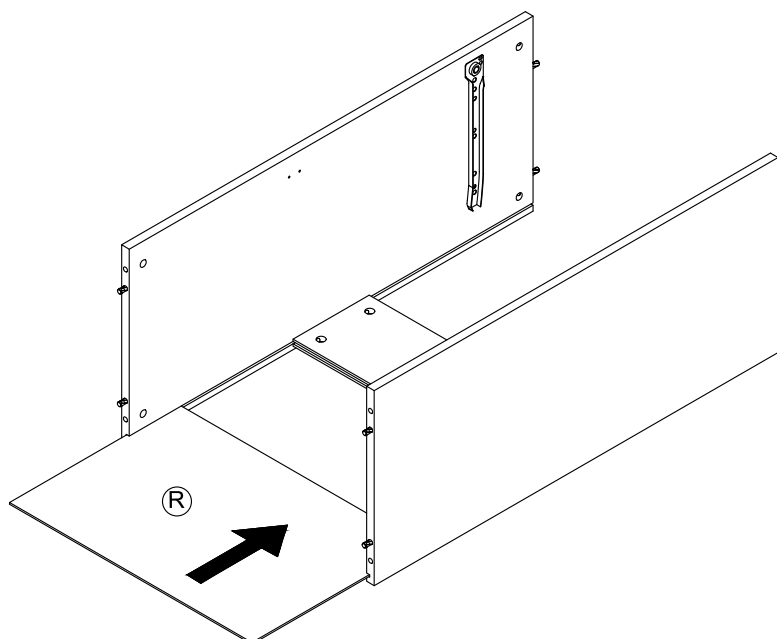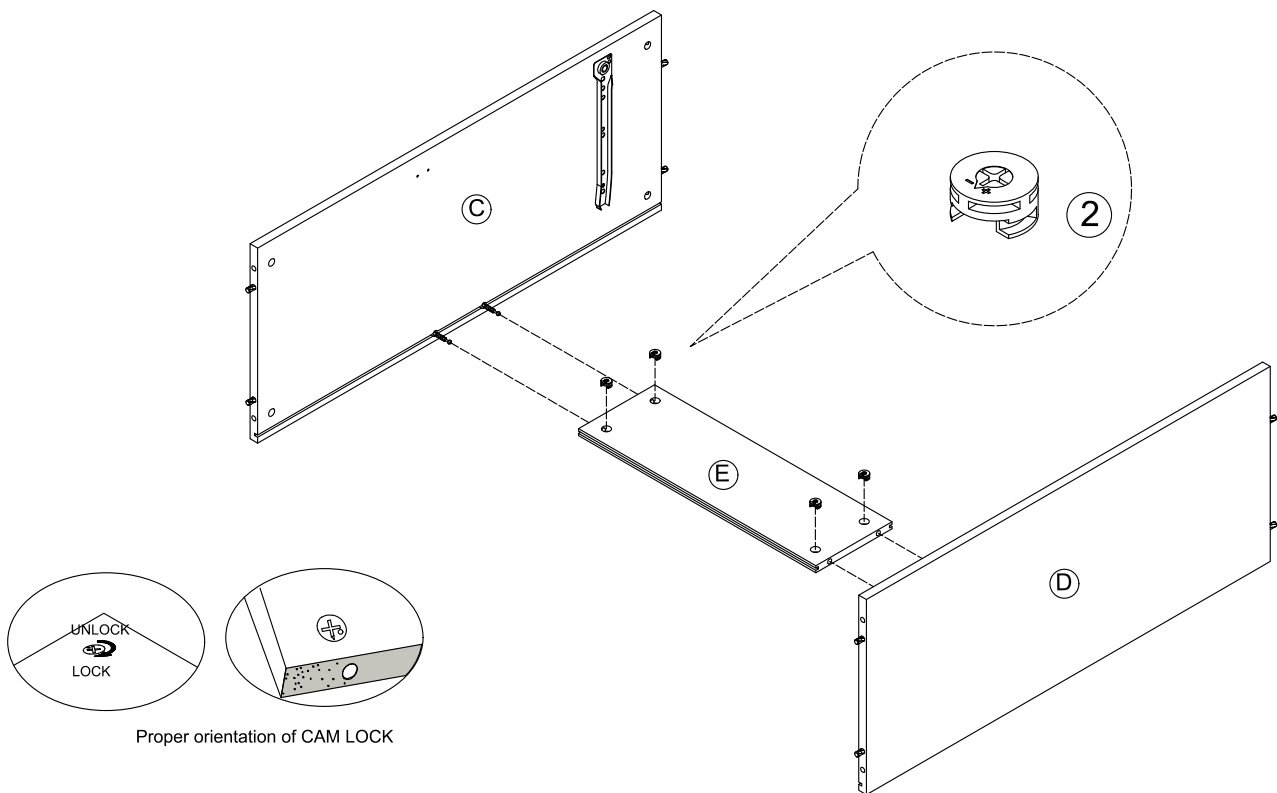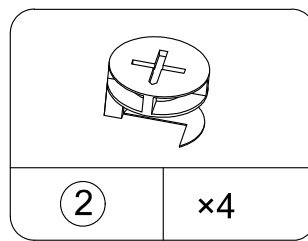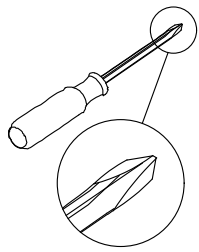






STEP3

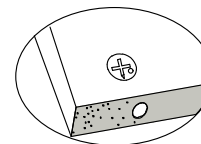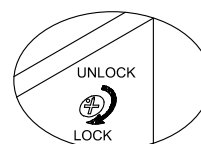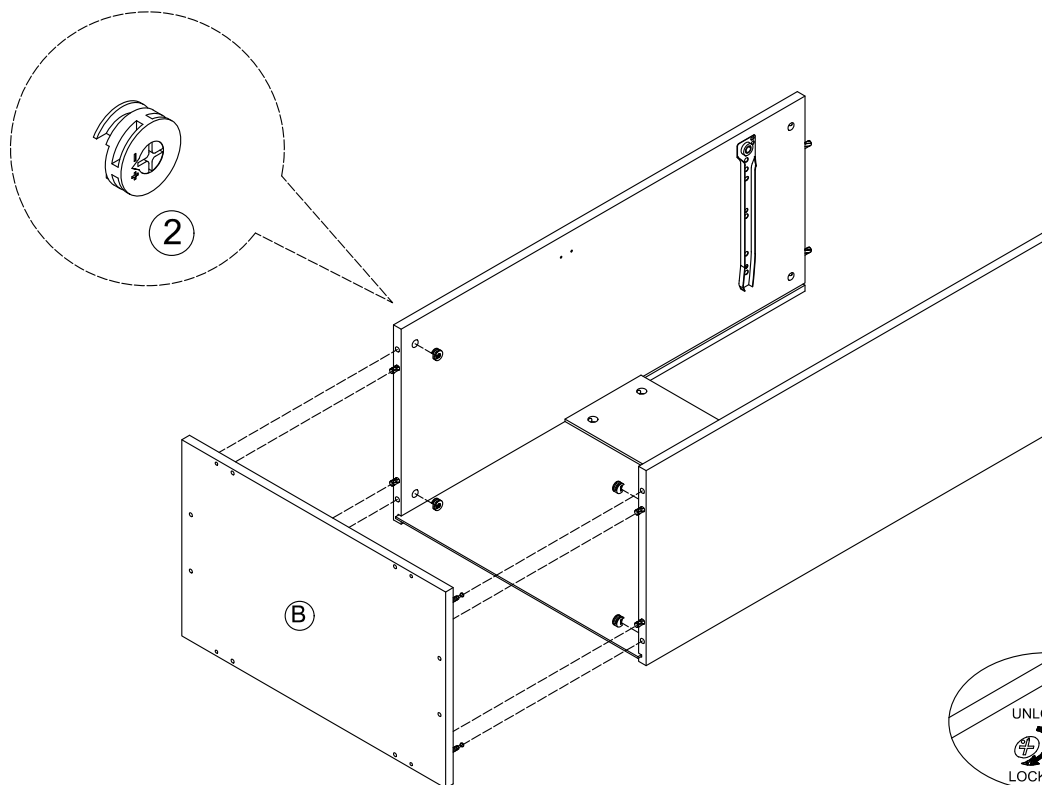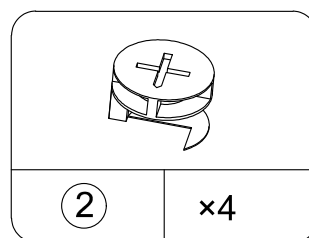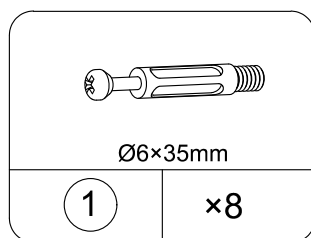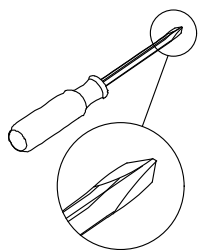

Proper orientation of CAM LOCK






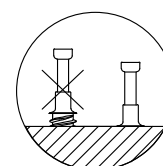
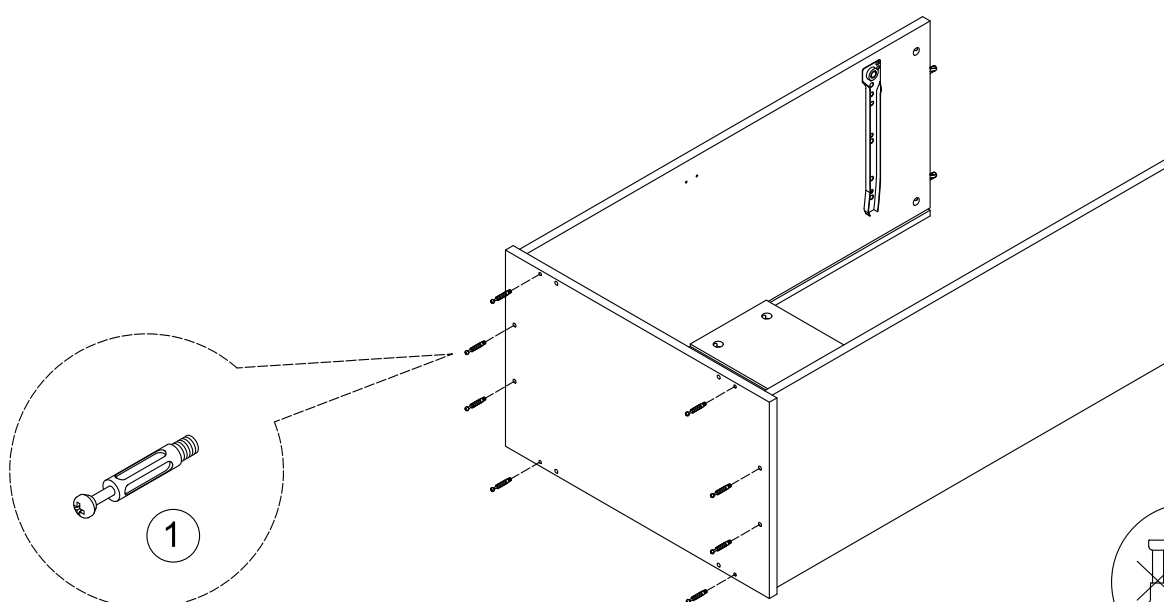


STEP4

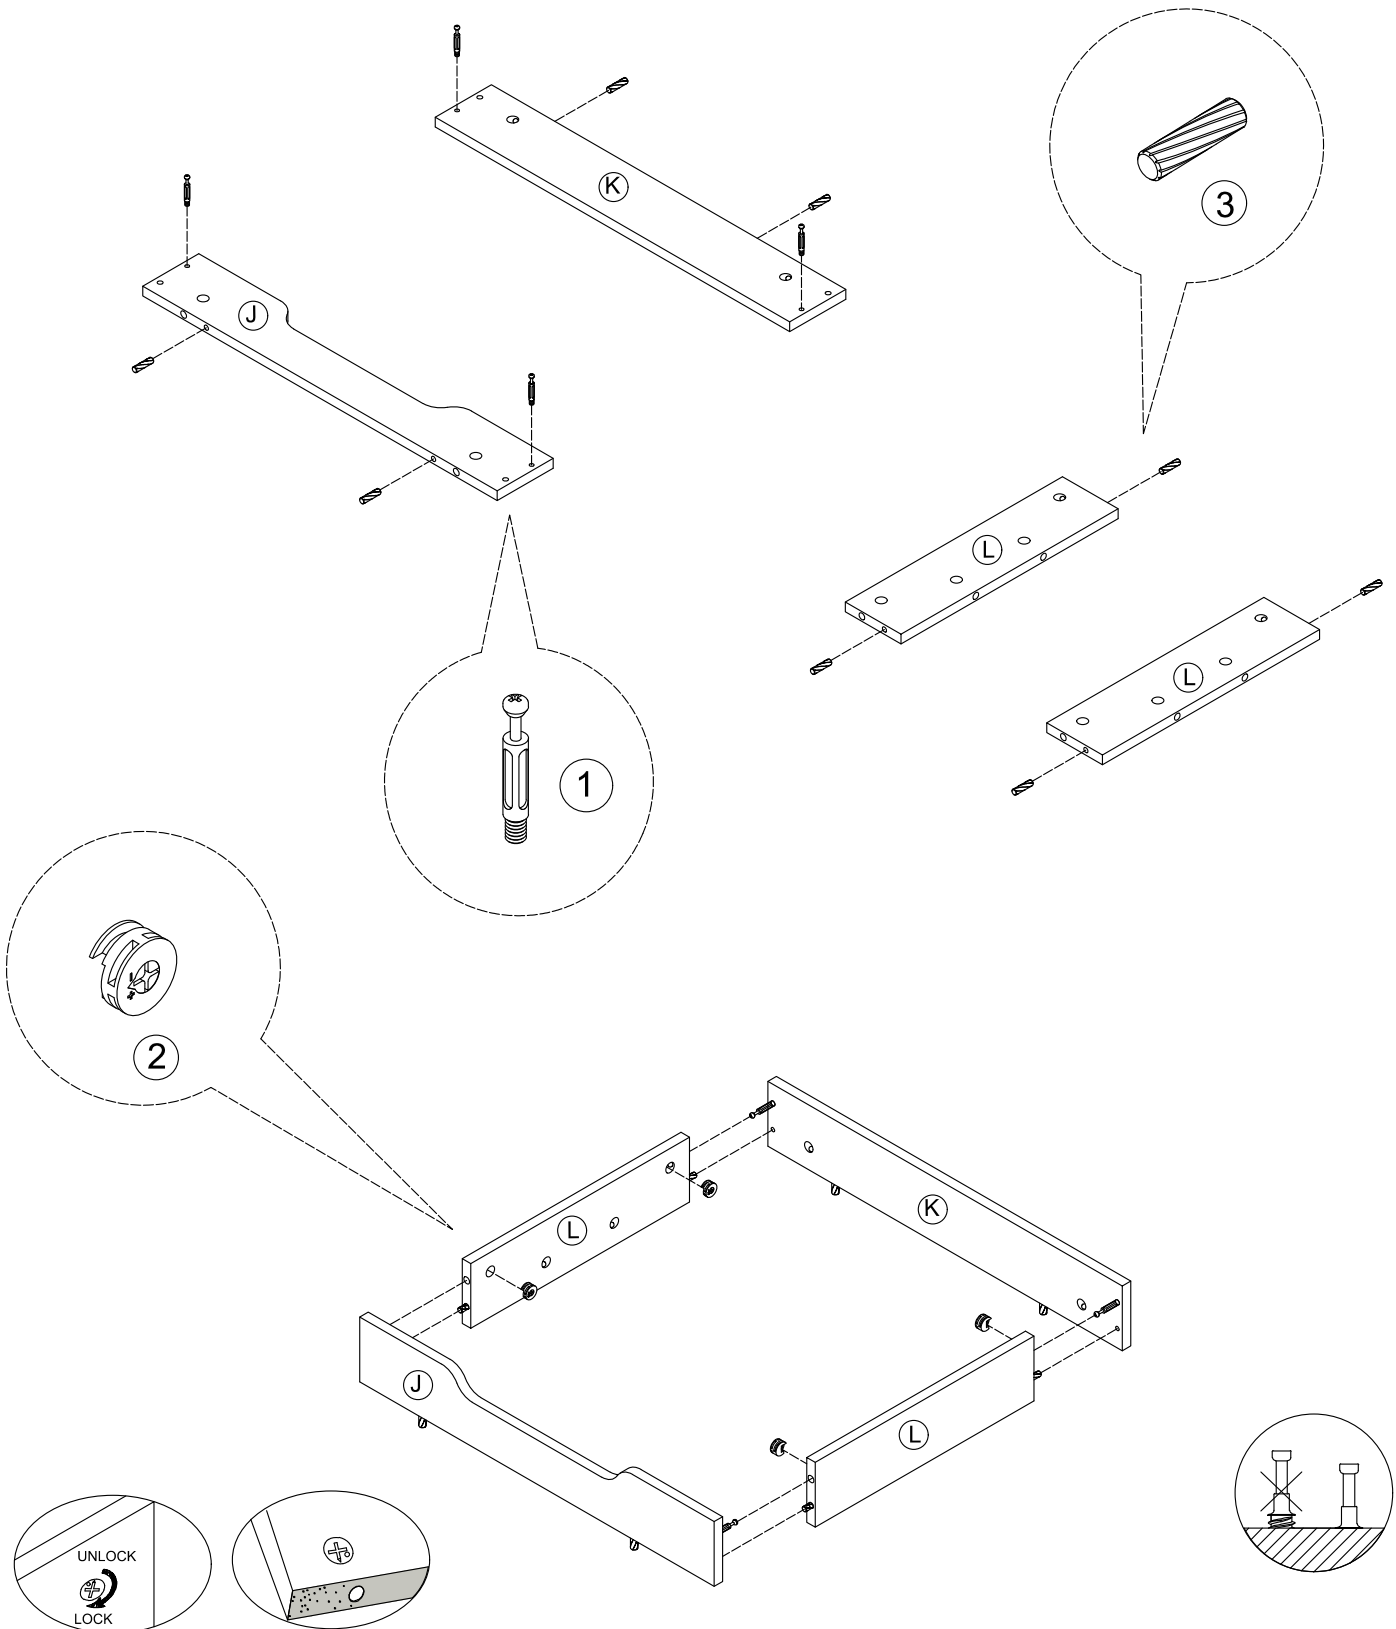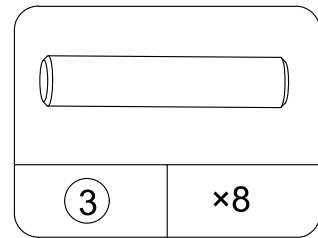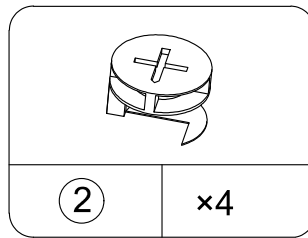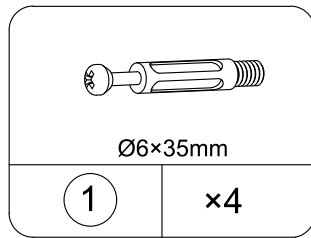
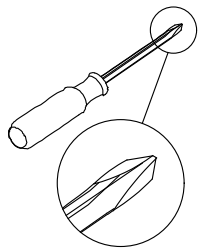


Proper orientation of CAM LOCK







STEP5

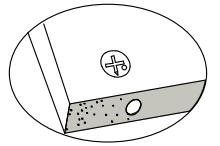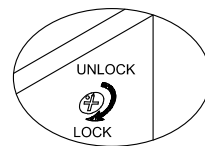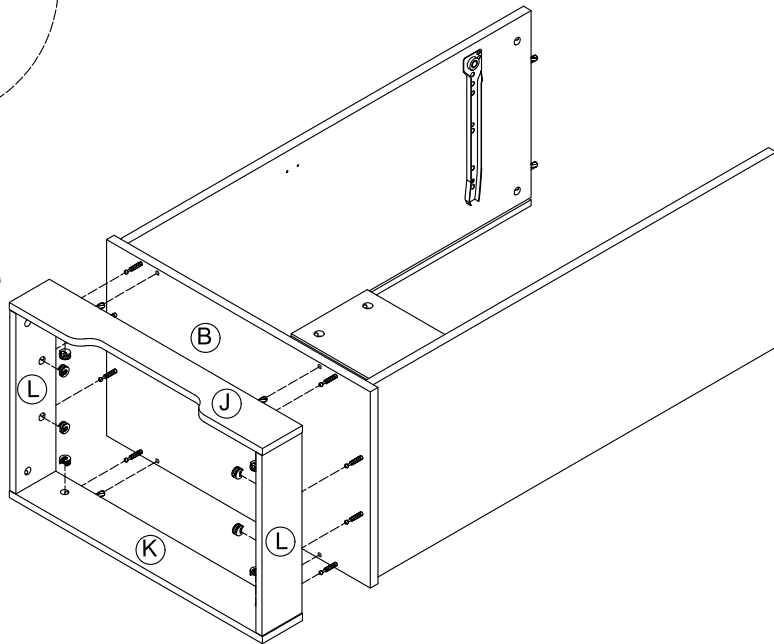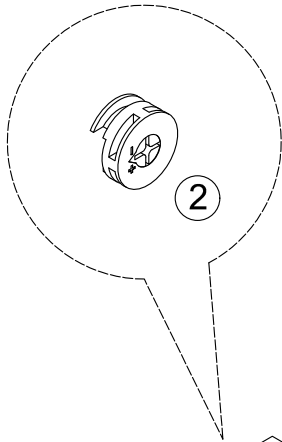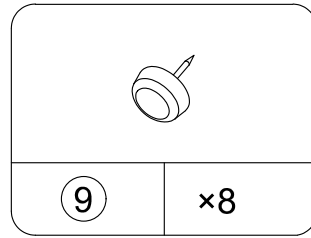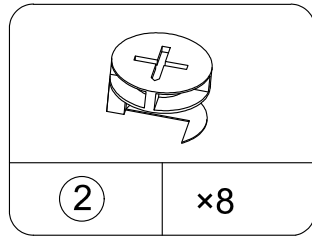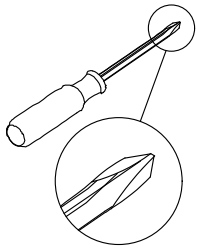

Proper orientation of CAM LOCK









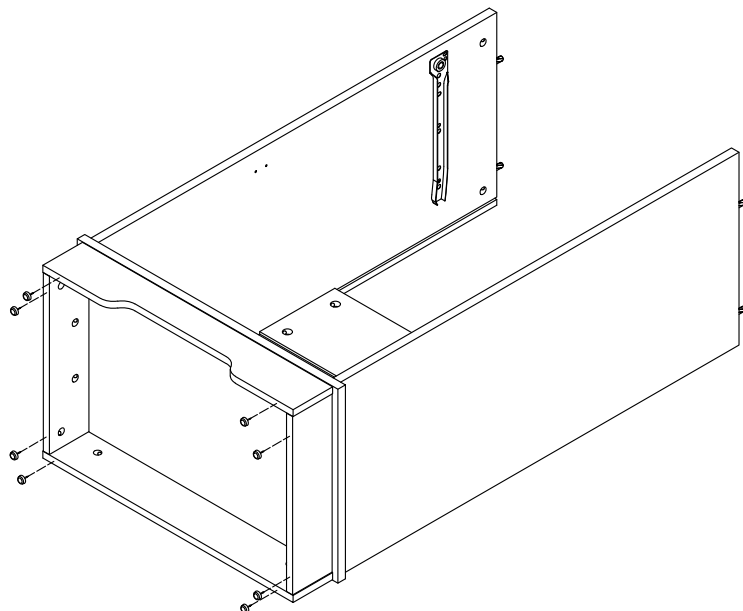
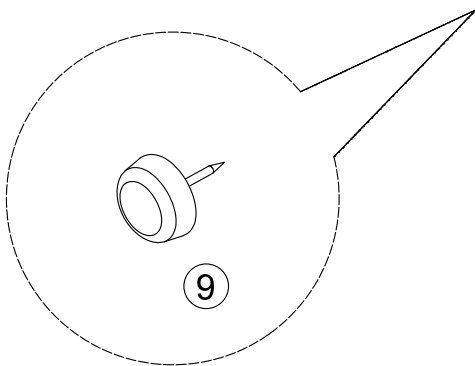


STEP6

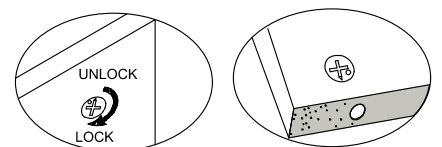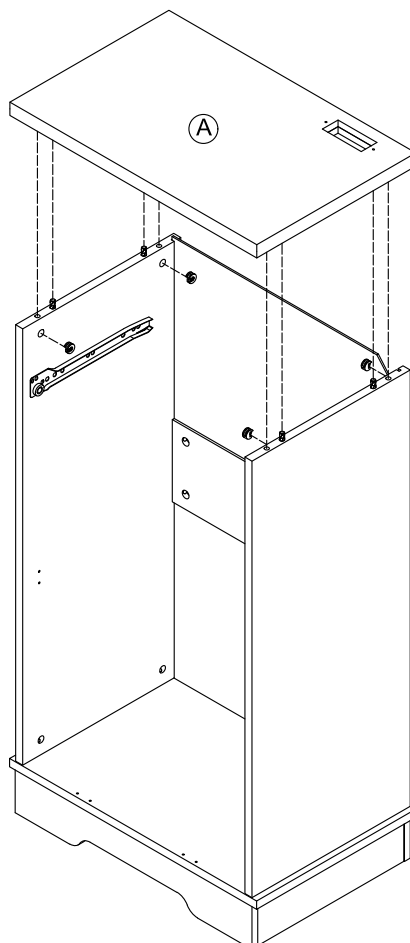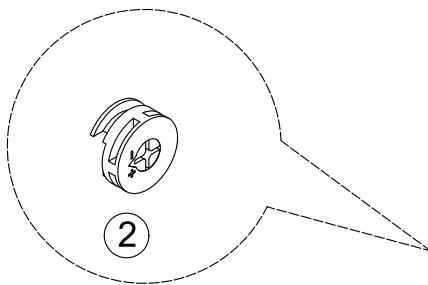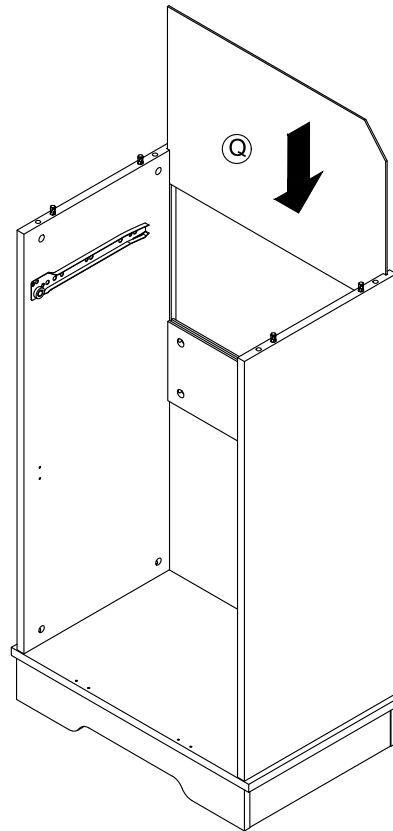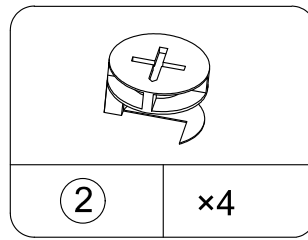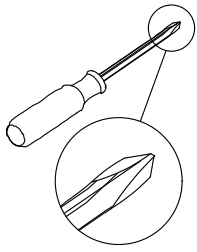















Proper orientation of CAM LOCK

STEP7

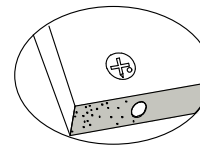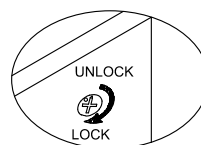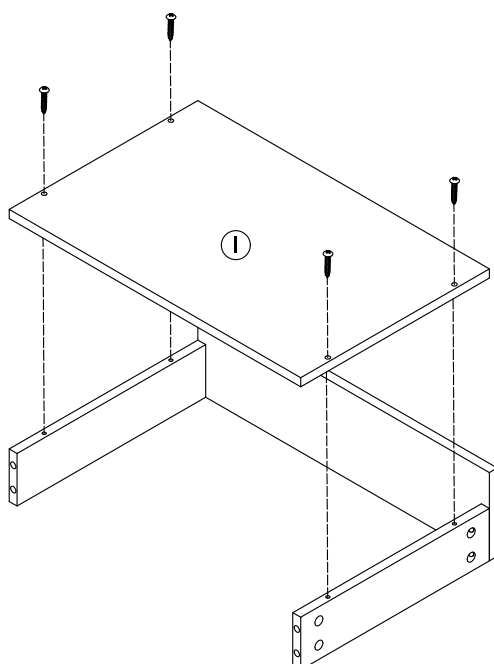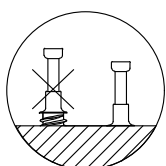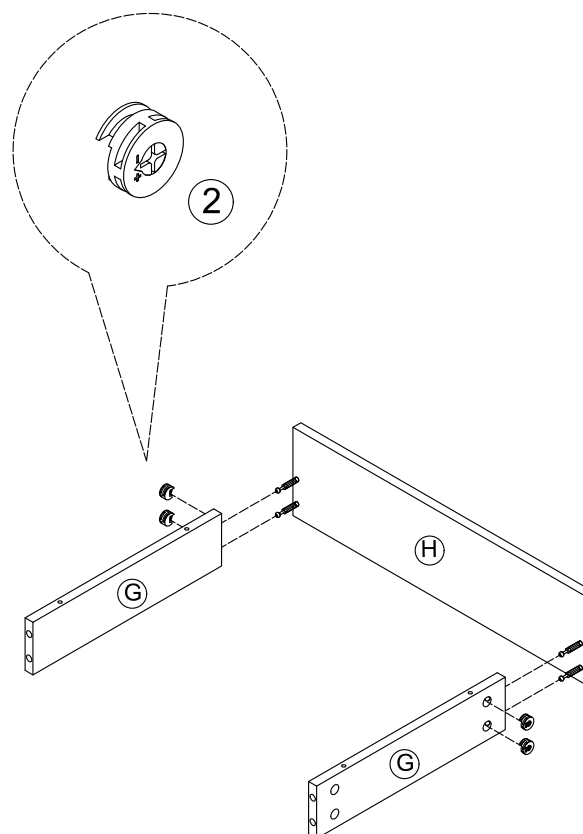
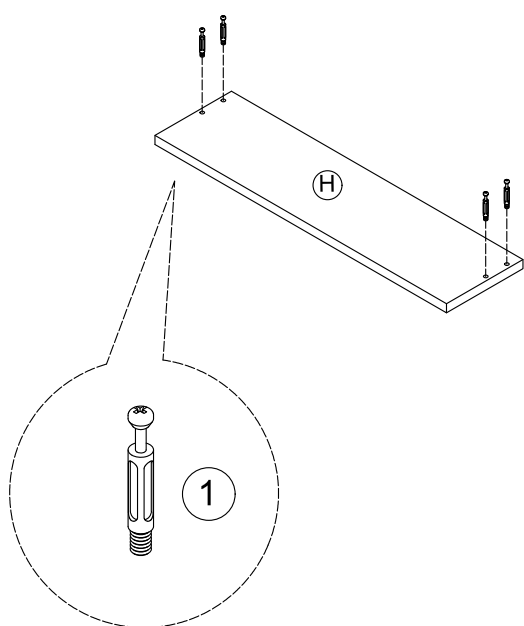
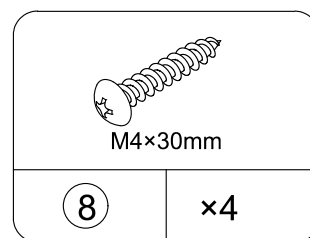
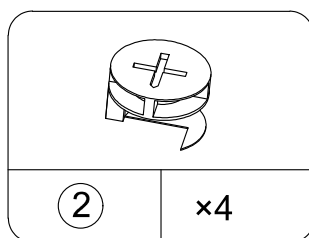
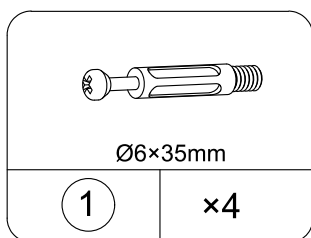
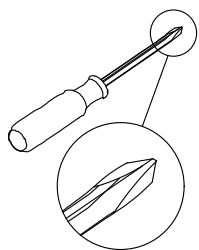


Proper orientation of CAM LOCK




STEP8

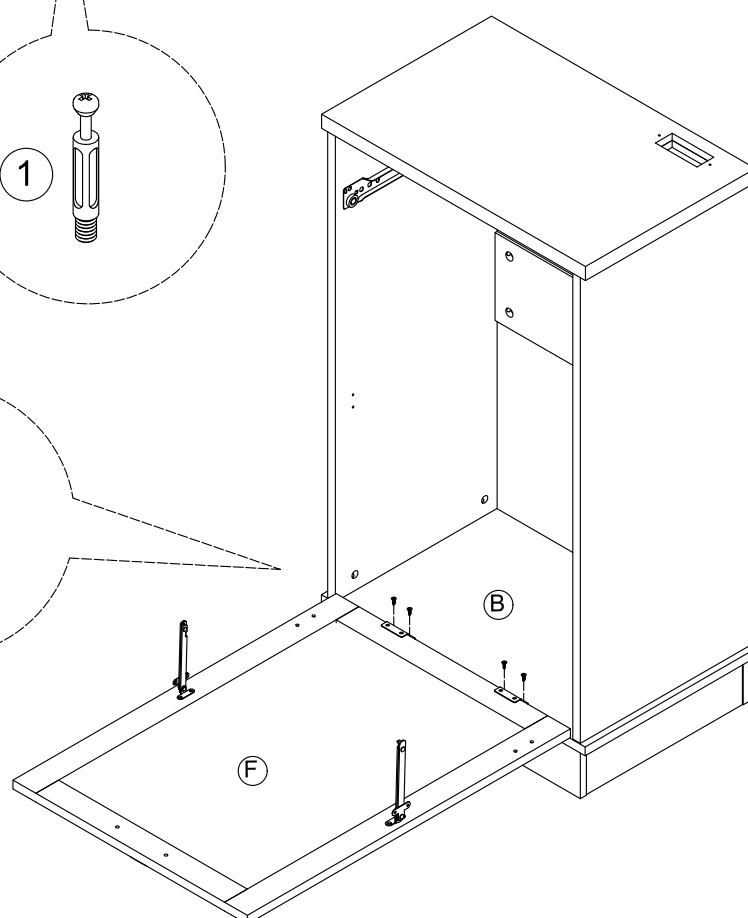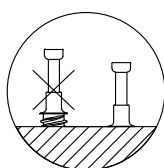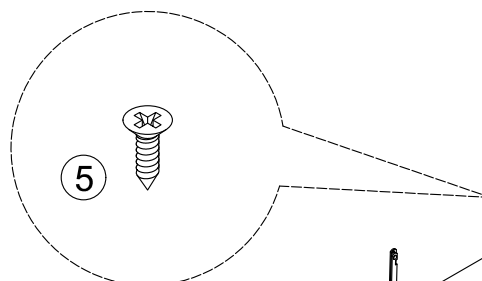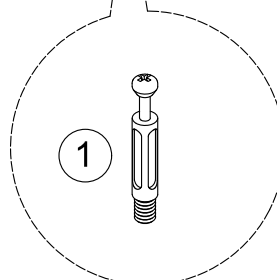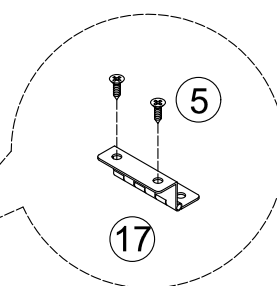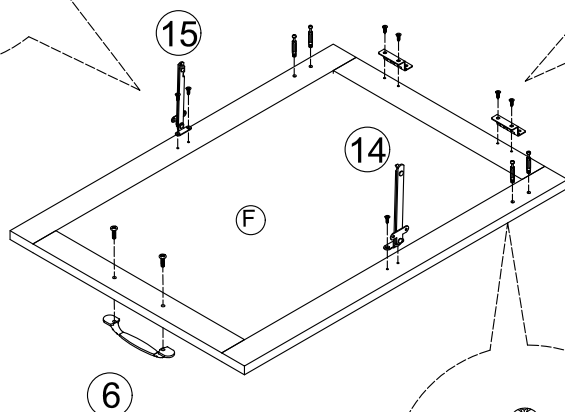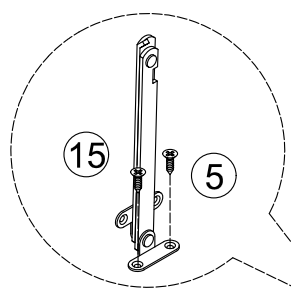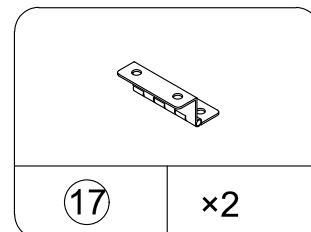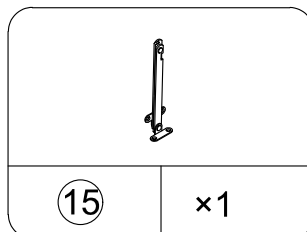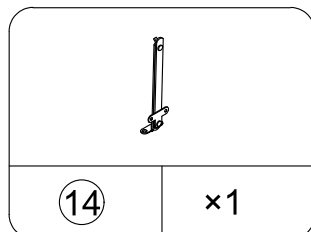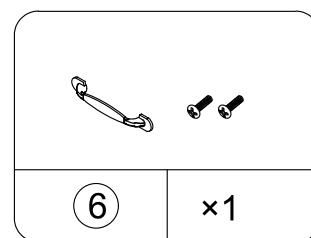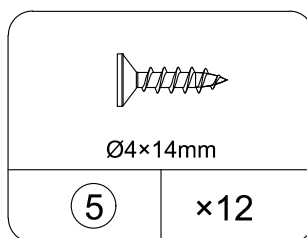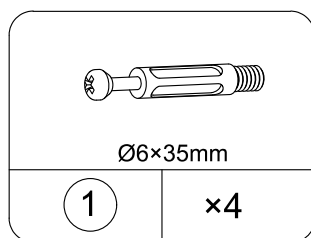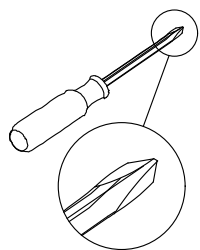











STEP9

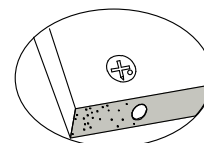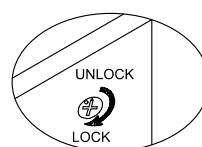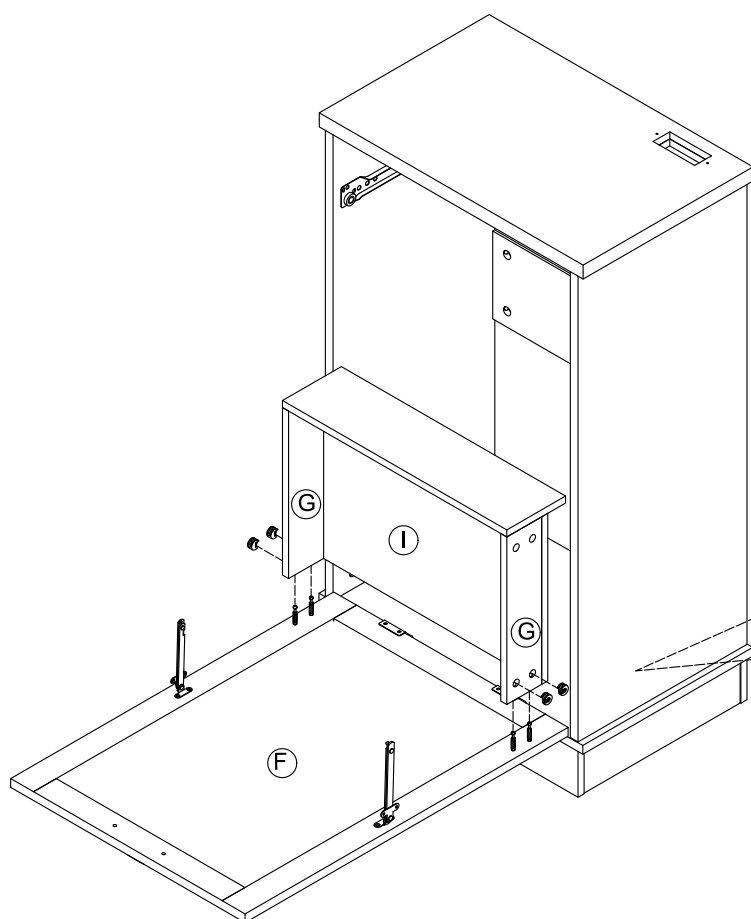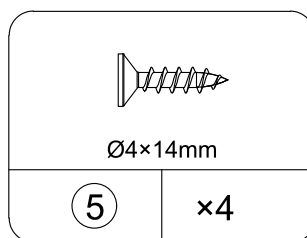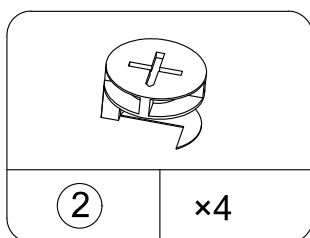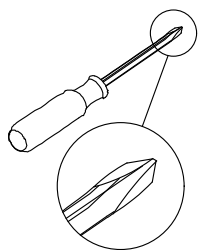





Proper orientation of CAM LOCK

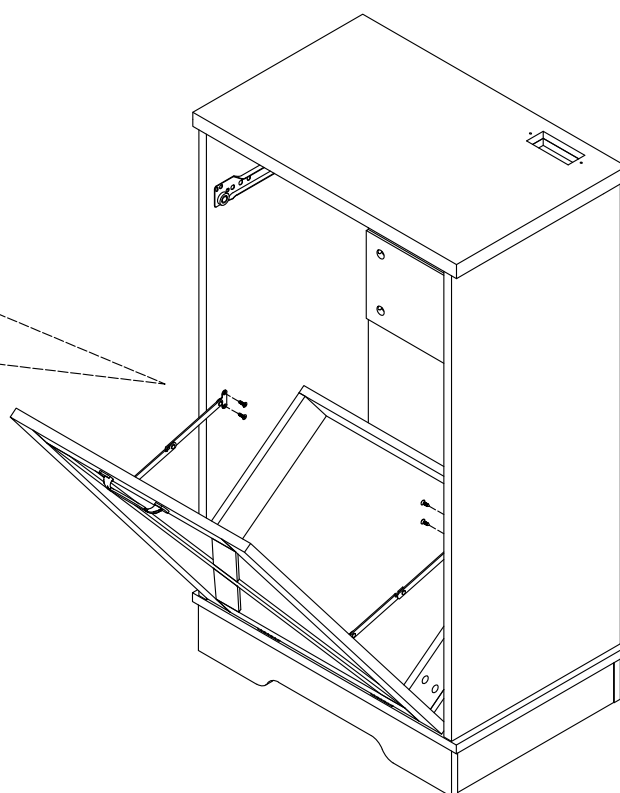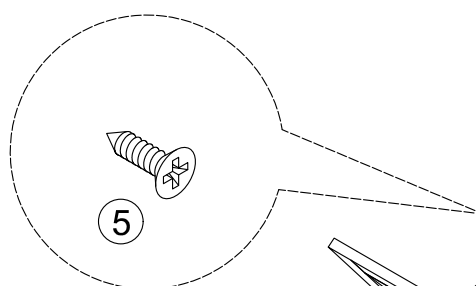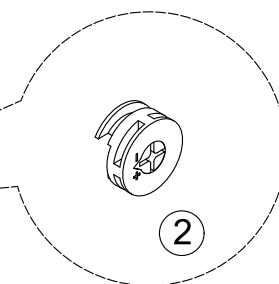







STEP10

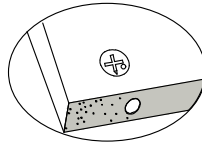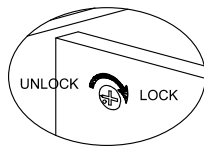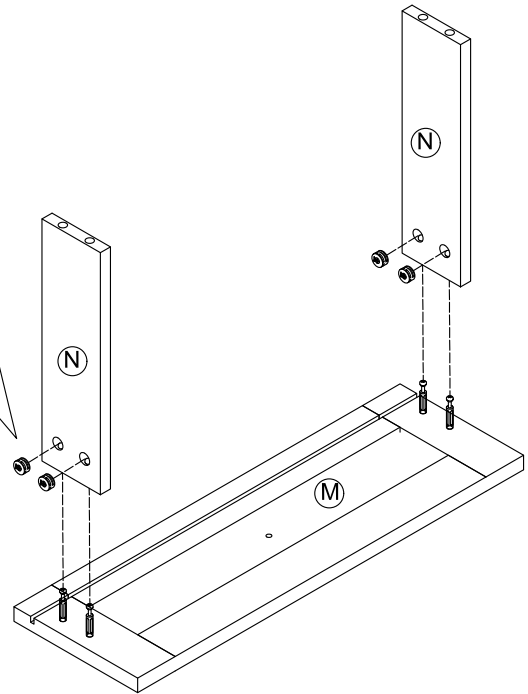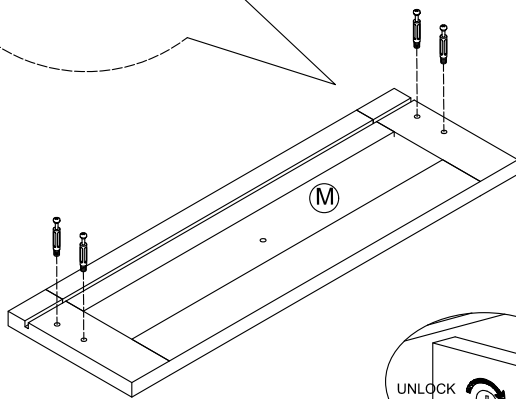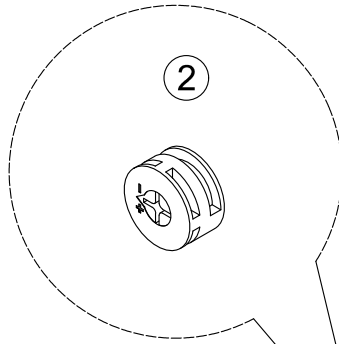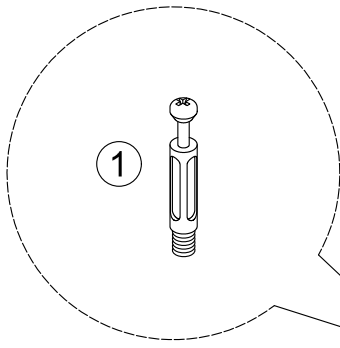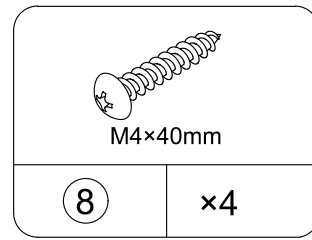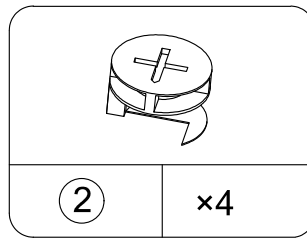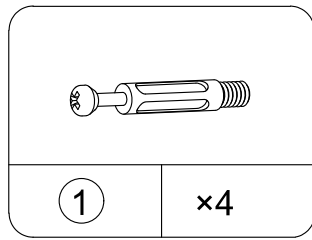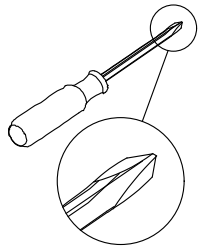





Proper orientation of CAM LOCK

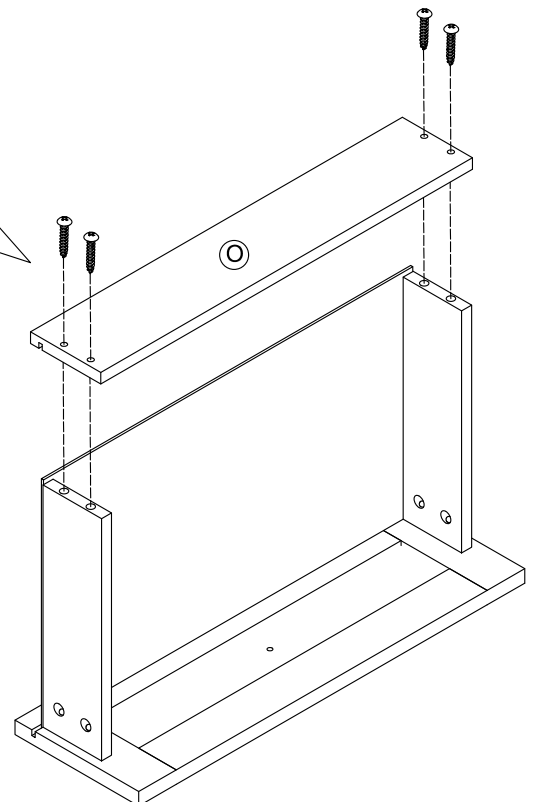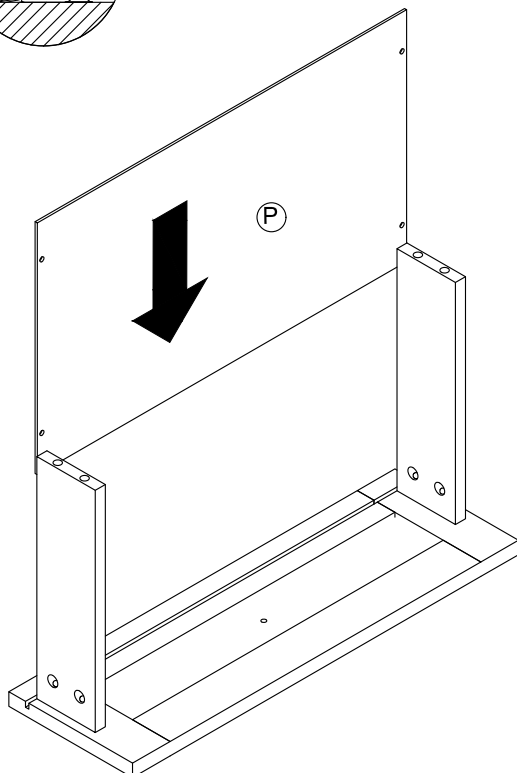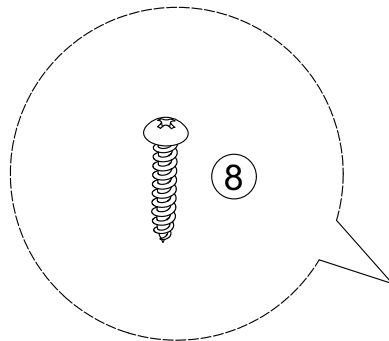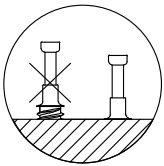

STEP11

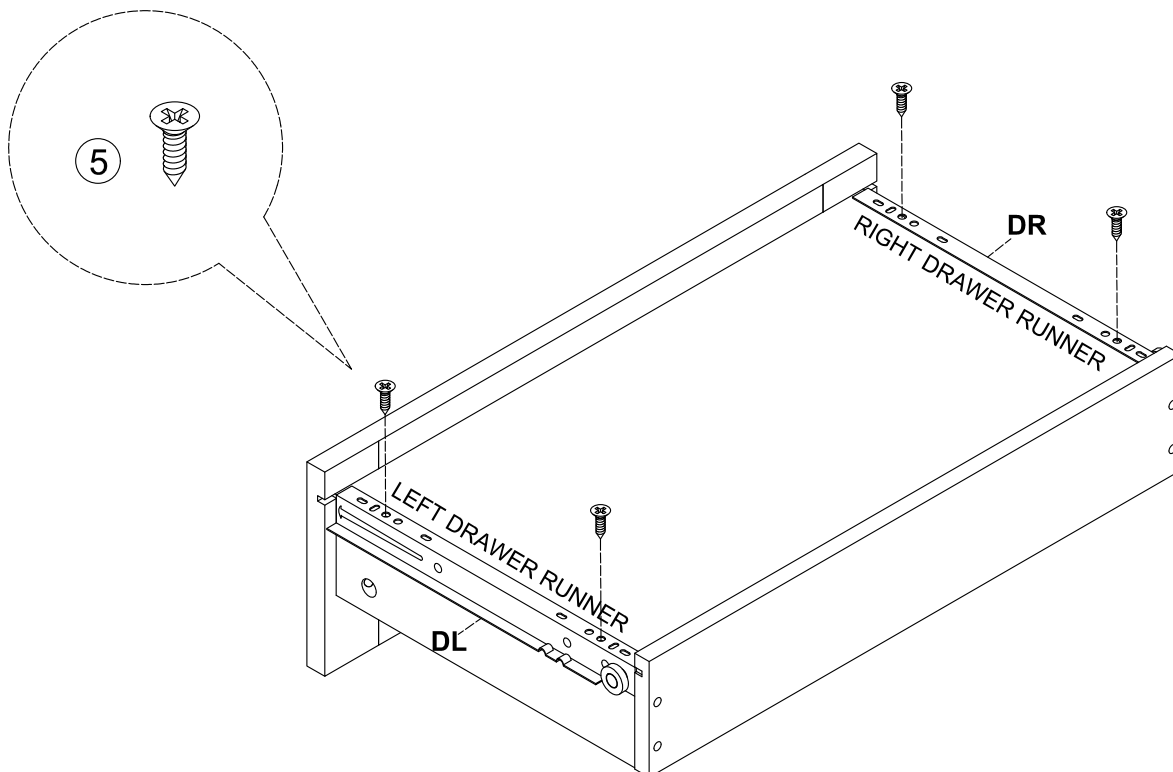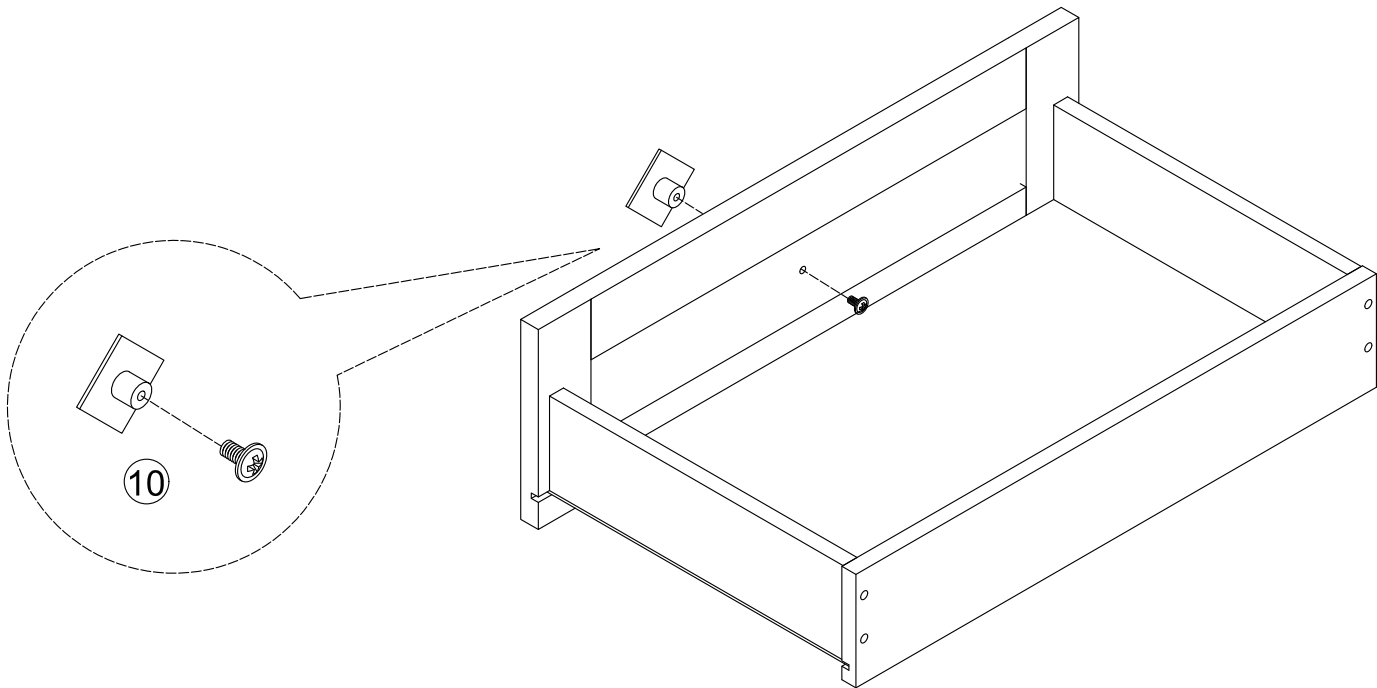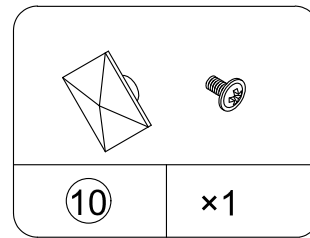
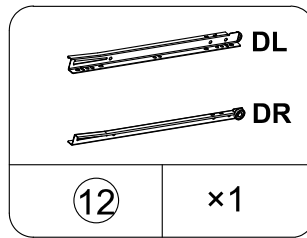
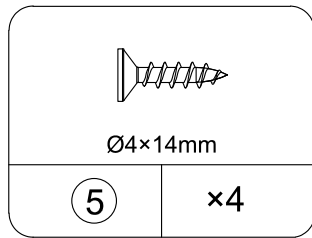
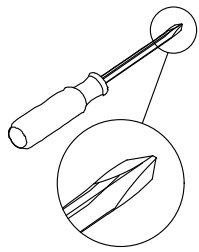


STEP12


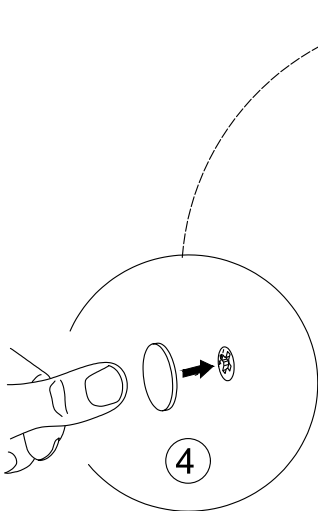
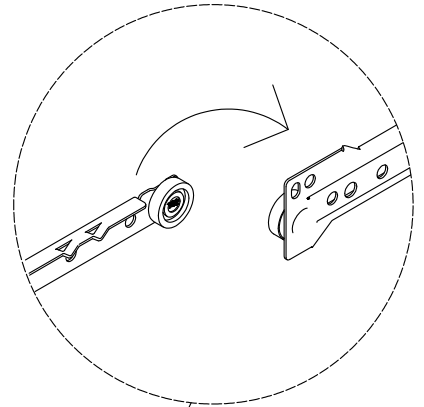
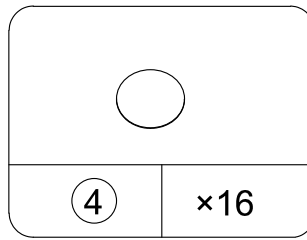
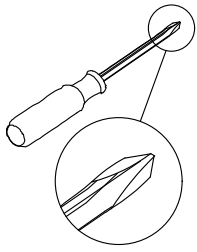


Using Cover-up Sticker ④ *16 to cover the exposed part of Screws.

STEP13

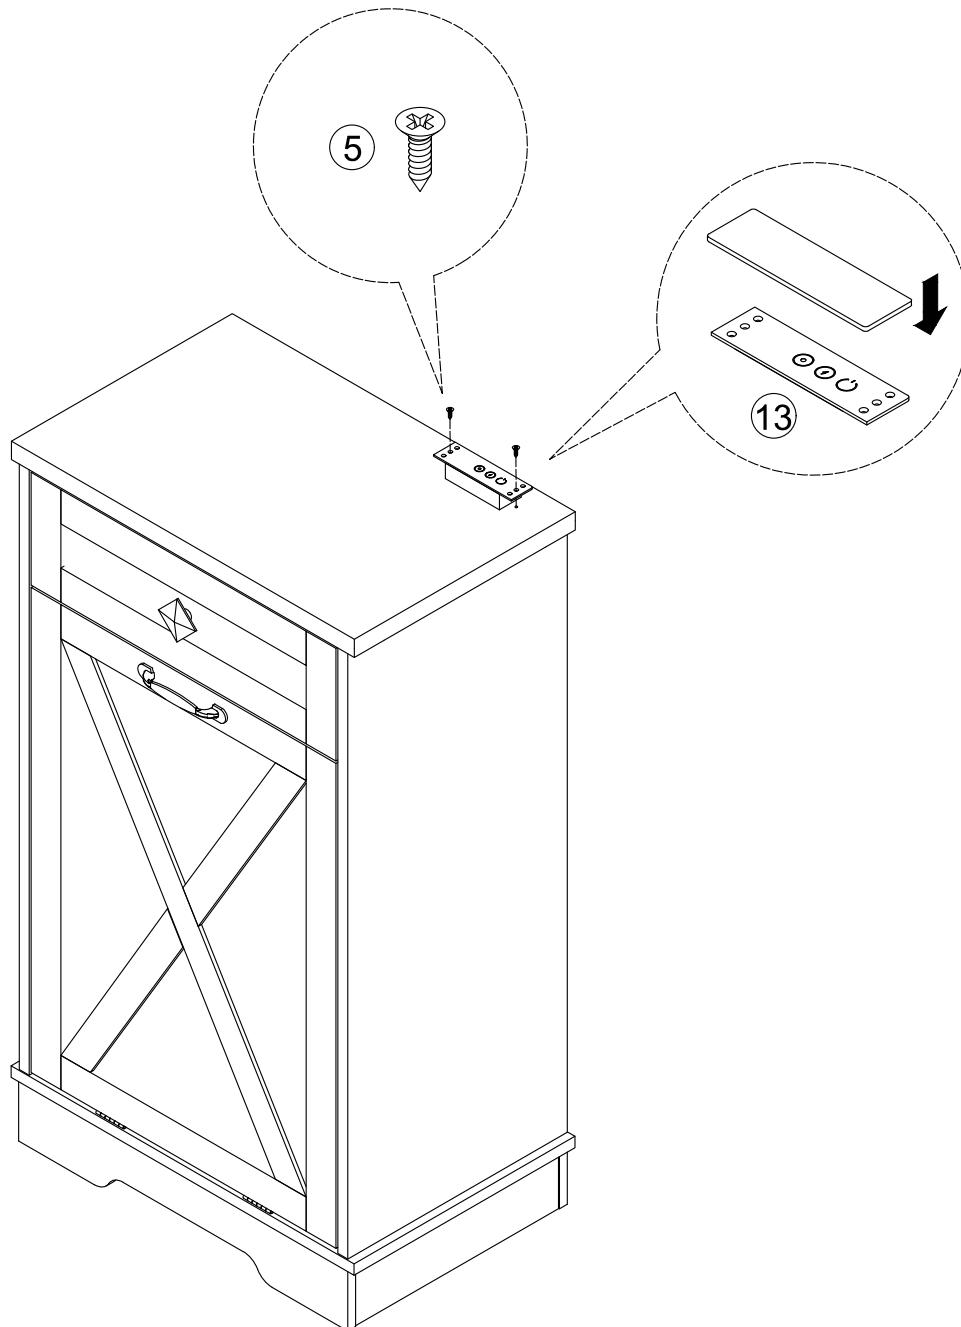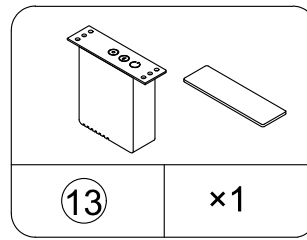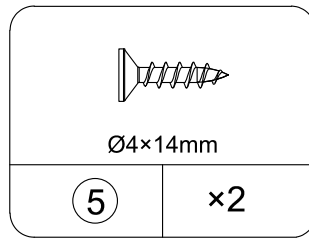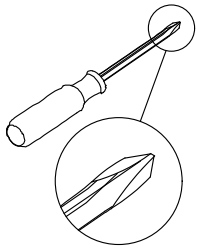

STEP14

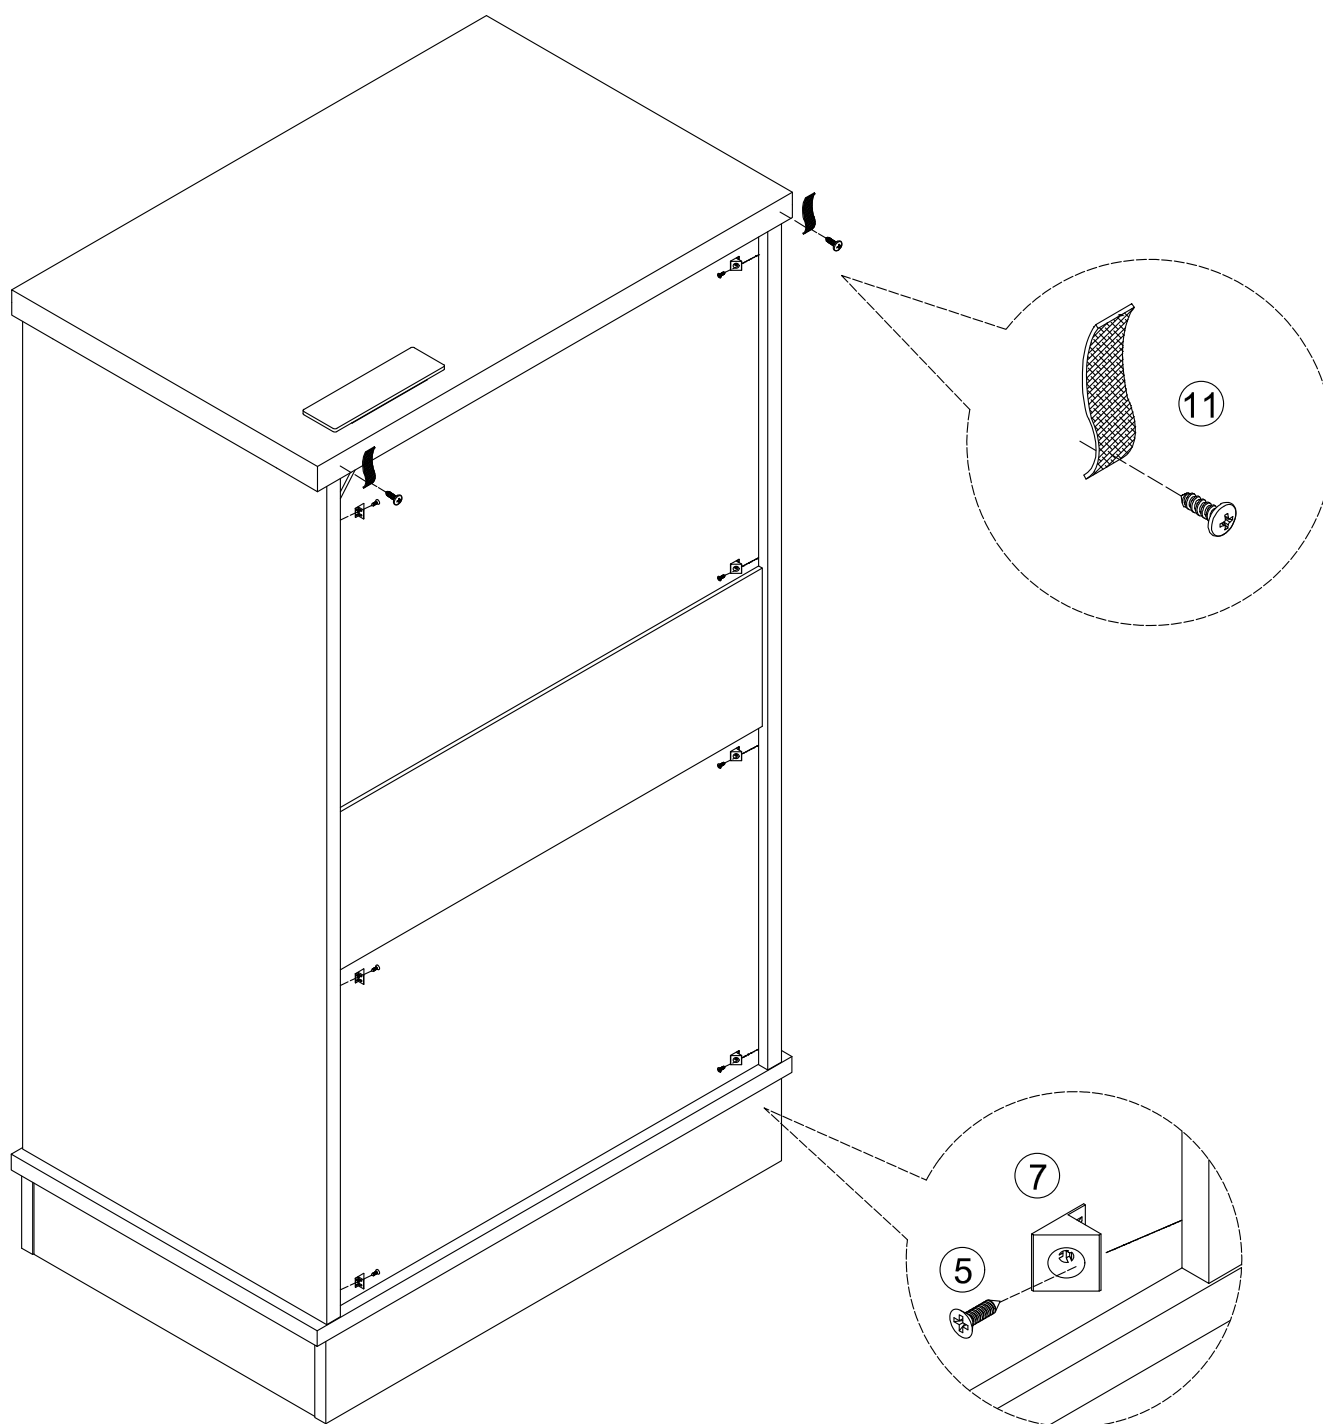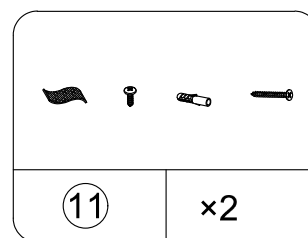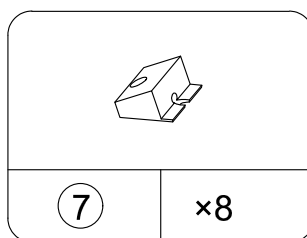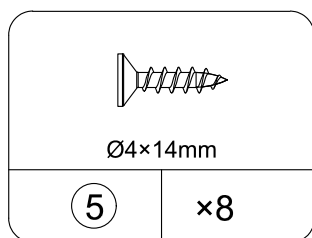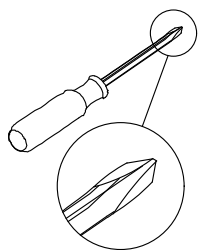

STEP15

