


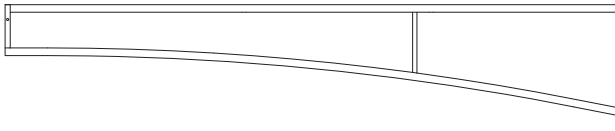

















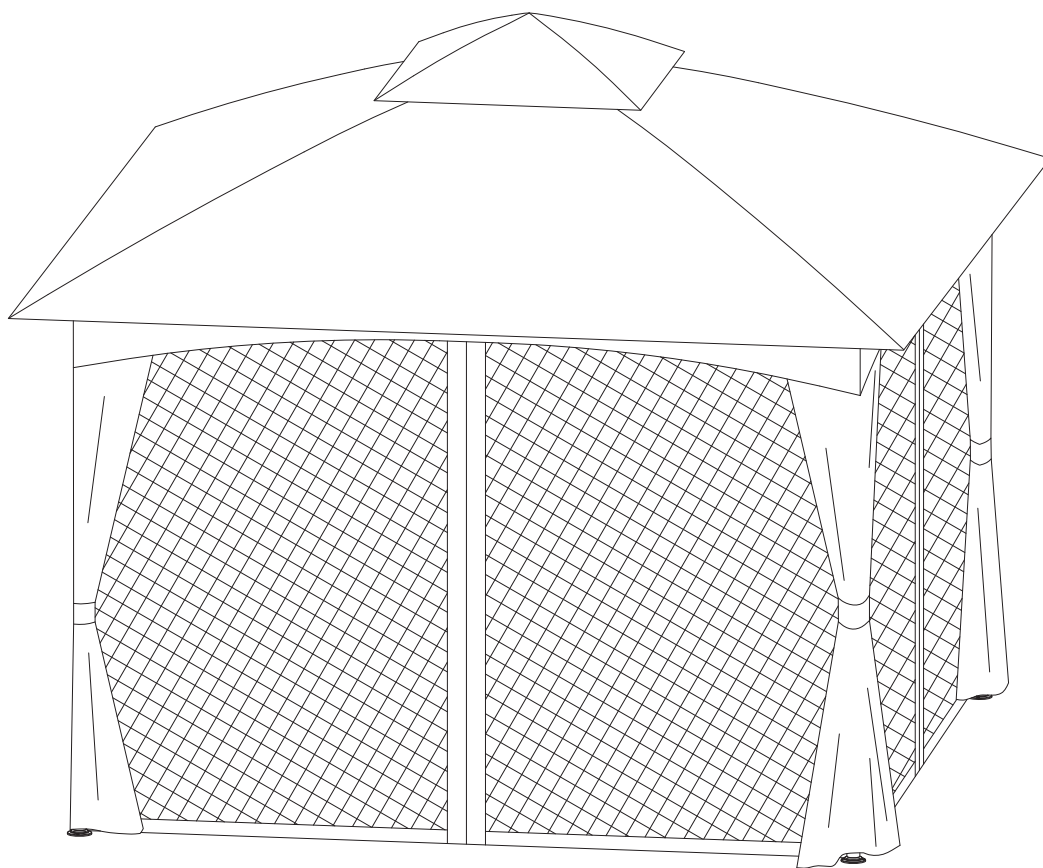


Product Instructions




PARTS					
A 4pcs					
B 4pcs					
C 8pcs					
D 4pcs					
E 4pcs					
F 4pcs					
G 4pcs					
J 4pcs		K 8pcs			
L 1pc		M 1pc			
N 8pcs		P 1pc			
Q 1pc		R 1pc			
S 4pcs					
①	 M6x15 mm	24pcs+1pc	②	 M6x30 mm	4pcs+1pc
③	 M6	4pcs+1pc	④		32pcs+1pc




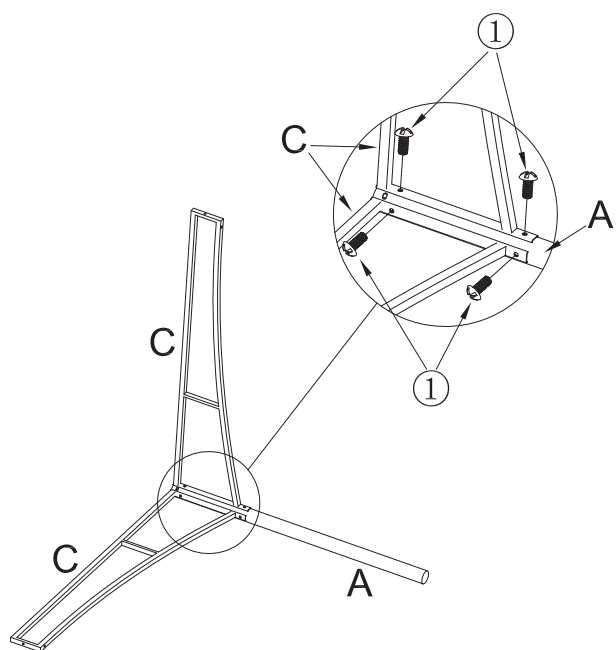Step 1: Put two Part C together and put one Part A in the middle of them, then use Screw ① to tighten Part C and Part A.


①

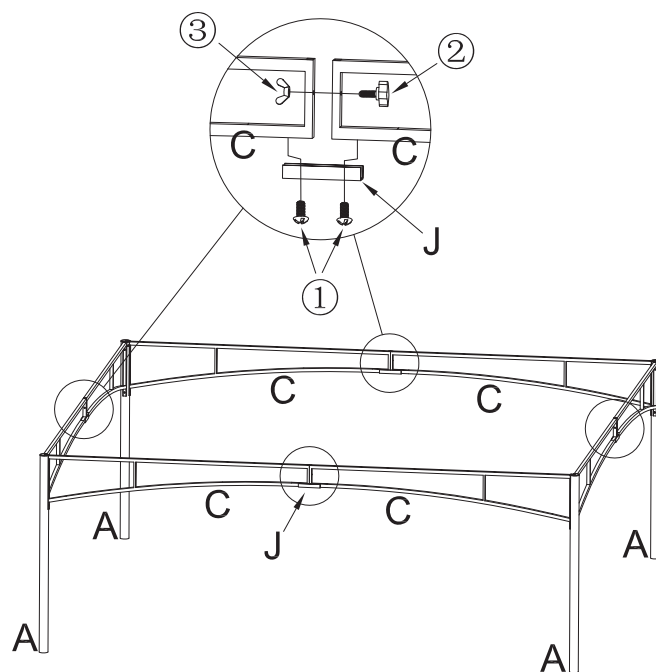

Step 2: Use Nut ③ and Screw ② to connect two Part C and tighten them. Then put one Part J on the bottom side of the two attached Part C. Use Screw ① to tighten the Part J. Repeat the steps above to assemble the other six Part C. ②

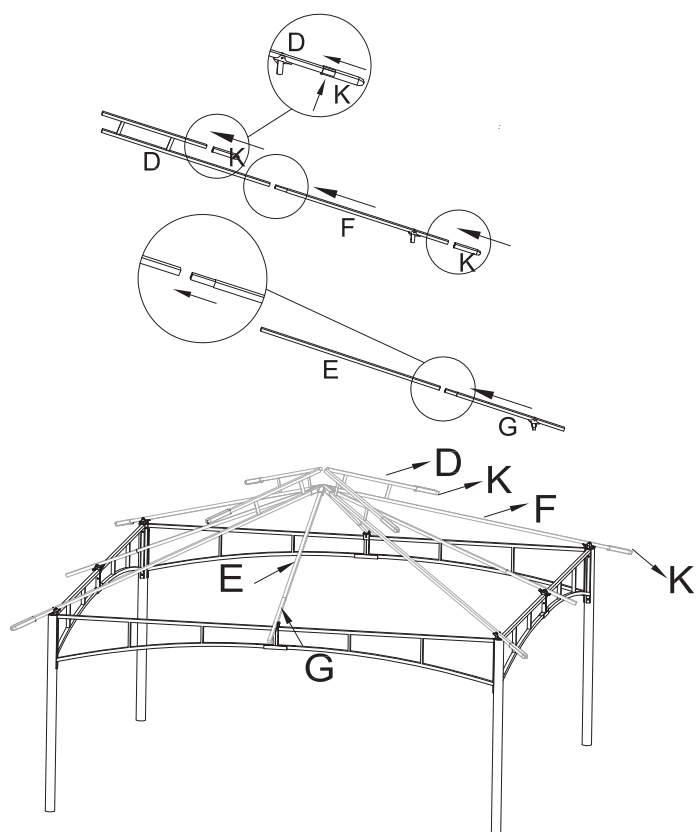


Step 3: Insert the small head of Part F to the long side of Part D directly and insert one Part K to the other head of Part F. Then insert one Part K to the short side of Part D. Insert the small head of Part G to Part E. Repeat the steps above to assemble the other Part D, F, K, E and G. ③

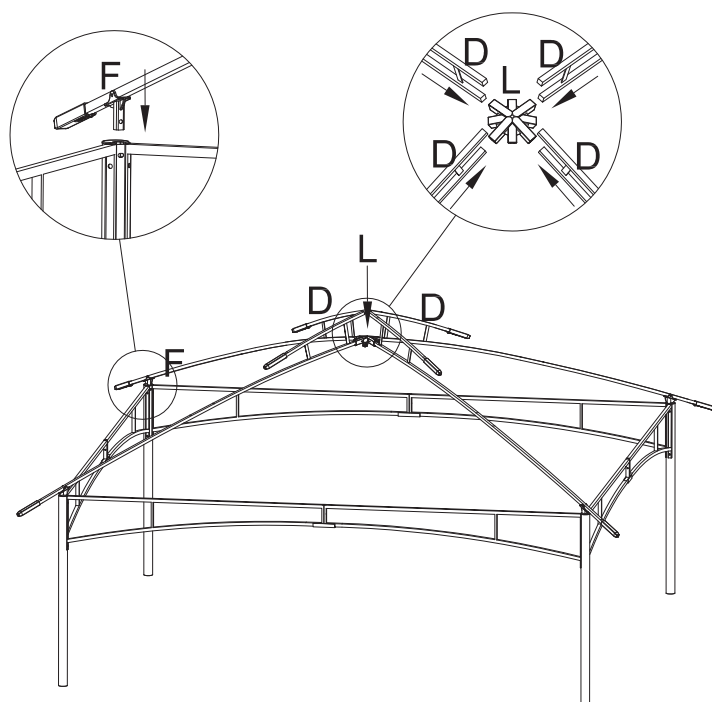


Step 4: Insert four Part F to the four corners of the frame (the top of Part A). Then insert the other side (the bottom side of Part D) to Part L. ④

④

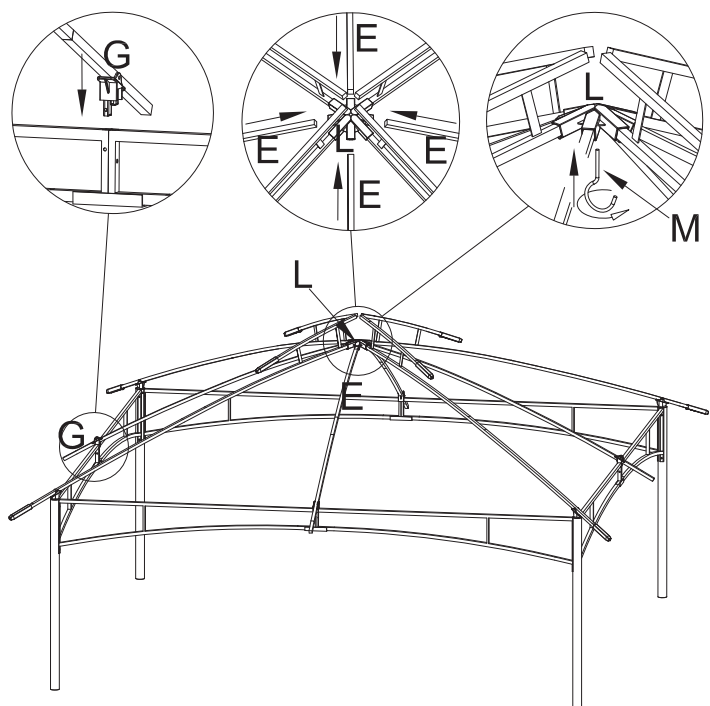


Step 5: Insert Part G to the middle part of the two attached part C. The other three Part G should be done as this. Then insert the other head of Part E to Part L. Finally, insert Part M (the steel hook) to the hole of Part L and turn it to tighten it.

⑤

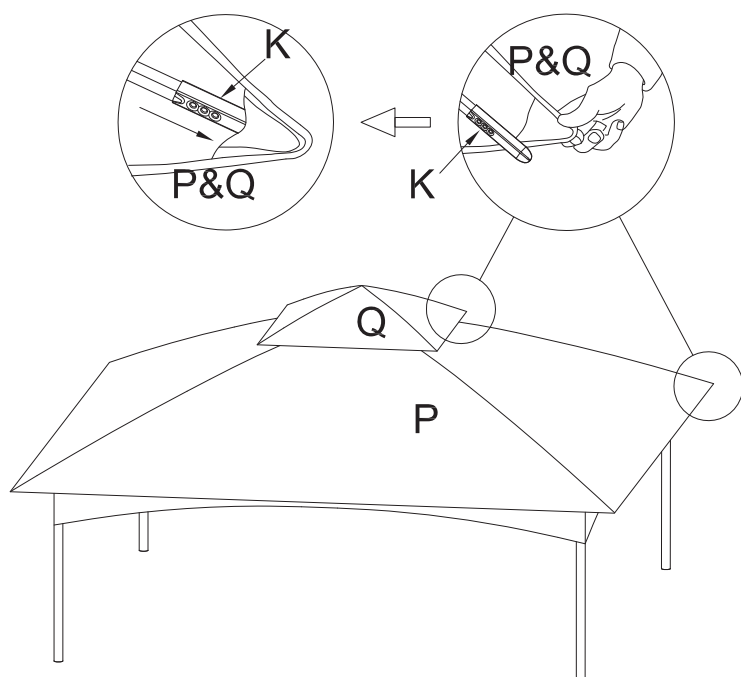


Step 6: Put the canopy fabric (Part P&Q) on the frame, extend it fully. Put the heads of tubes (Part K) into the corner pocket of canopy fabric.

⑥

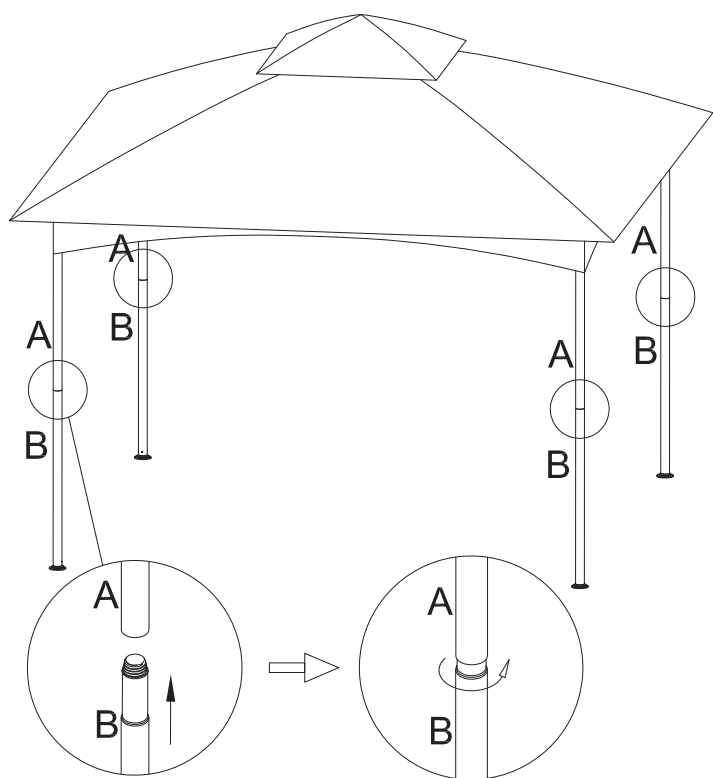


Step 7: Insert Part B to Part A, then turn it to make it tight.

⑦

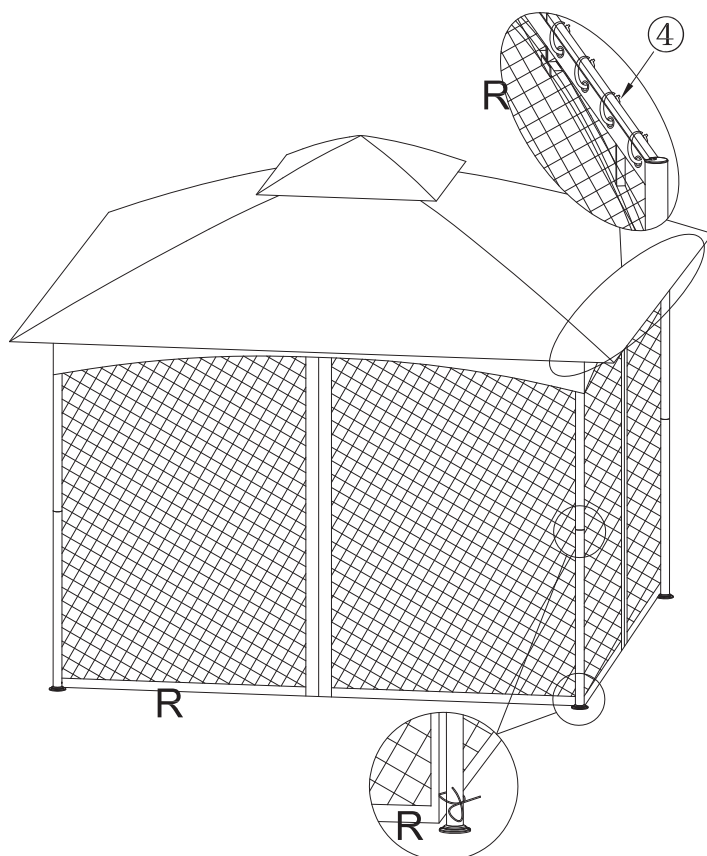


Step 8: Use Part ④ (the plastic hook) to hang Part R on the frame.

⑧

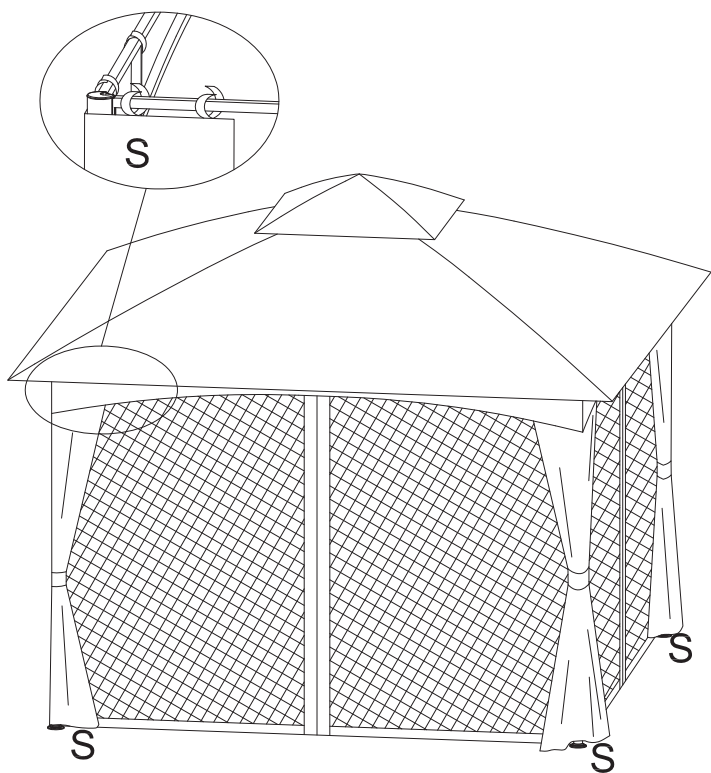

Step9: Insert the curtains (Part S) on the plastic hook.

⑨

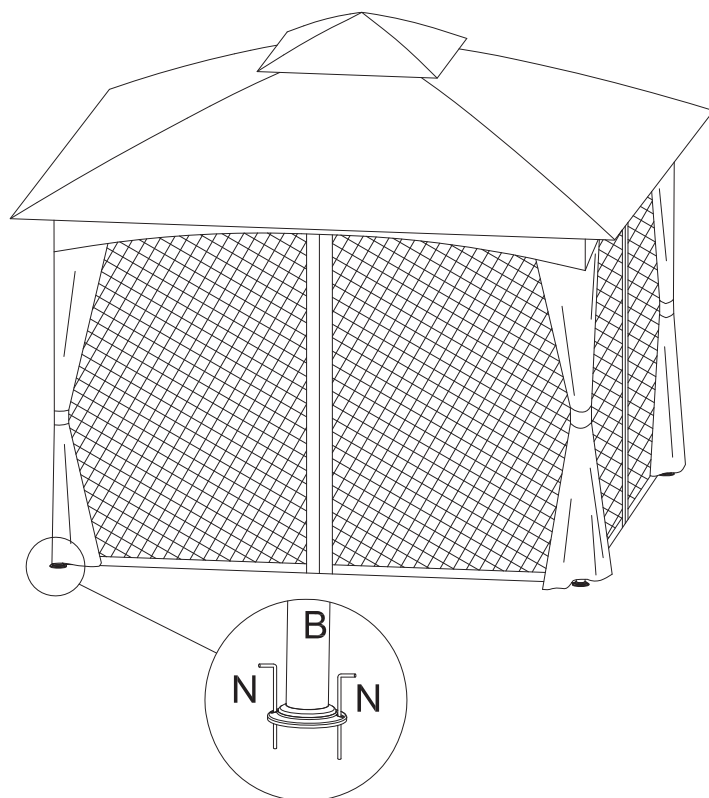

Step10: Insert the stakes (Part N) on the foot pad to the ground deeply, then you can use the gazebo.

⑩