


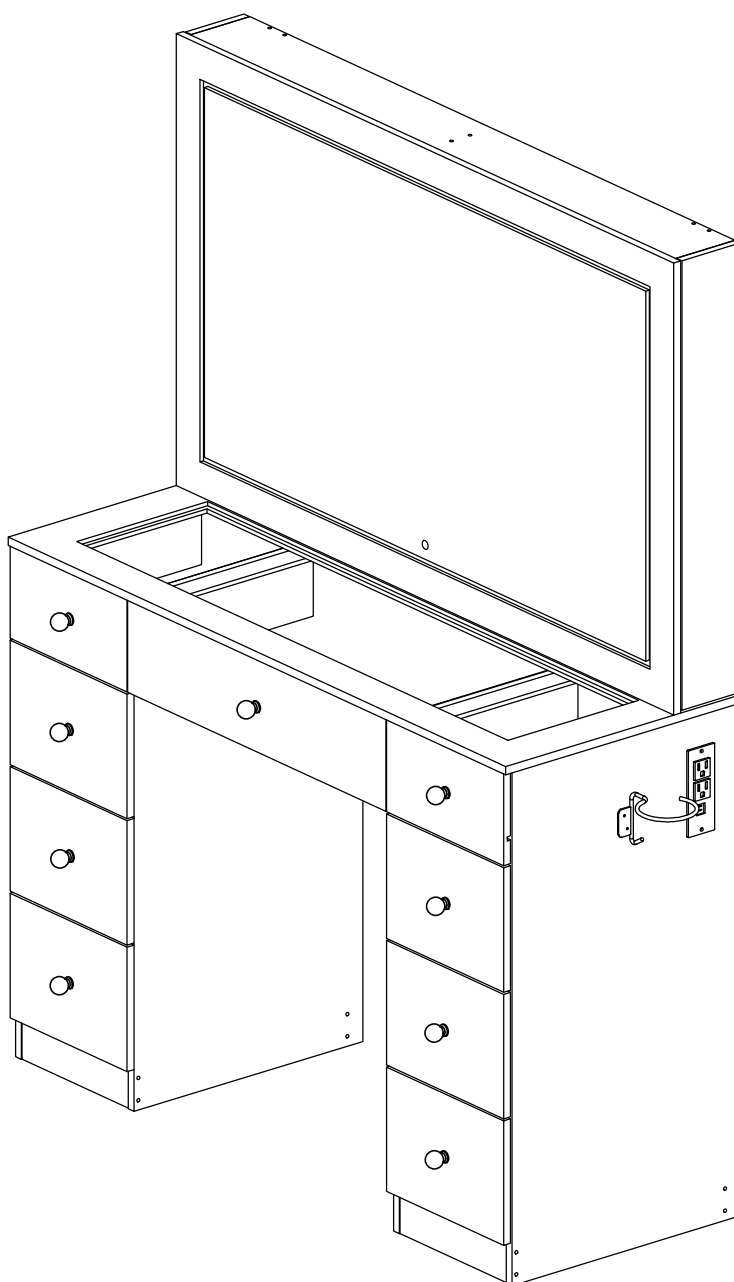
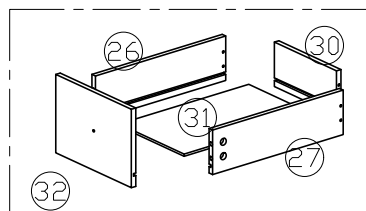


Attention: Do not tighten screws until all of them are in right positions

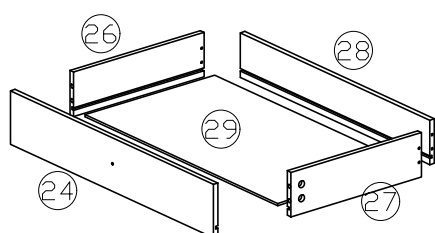

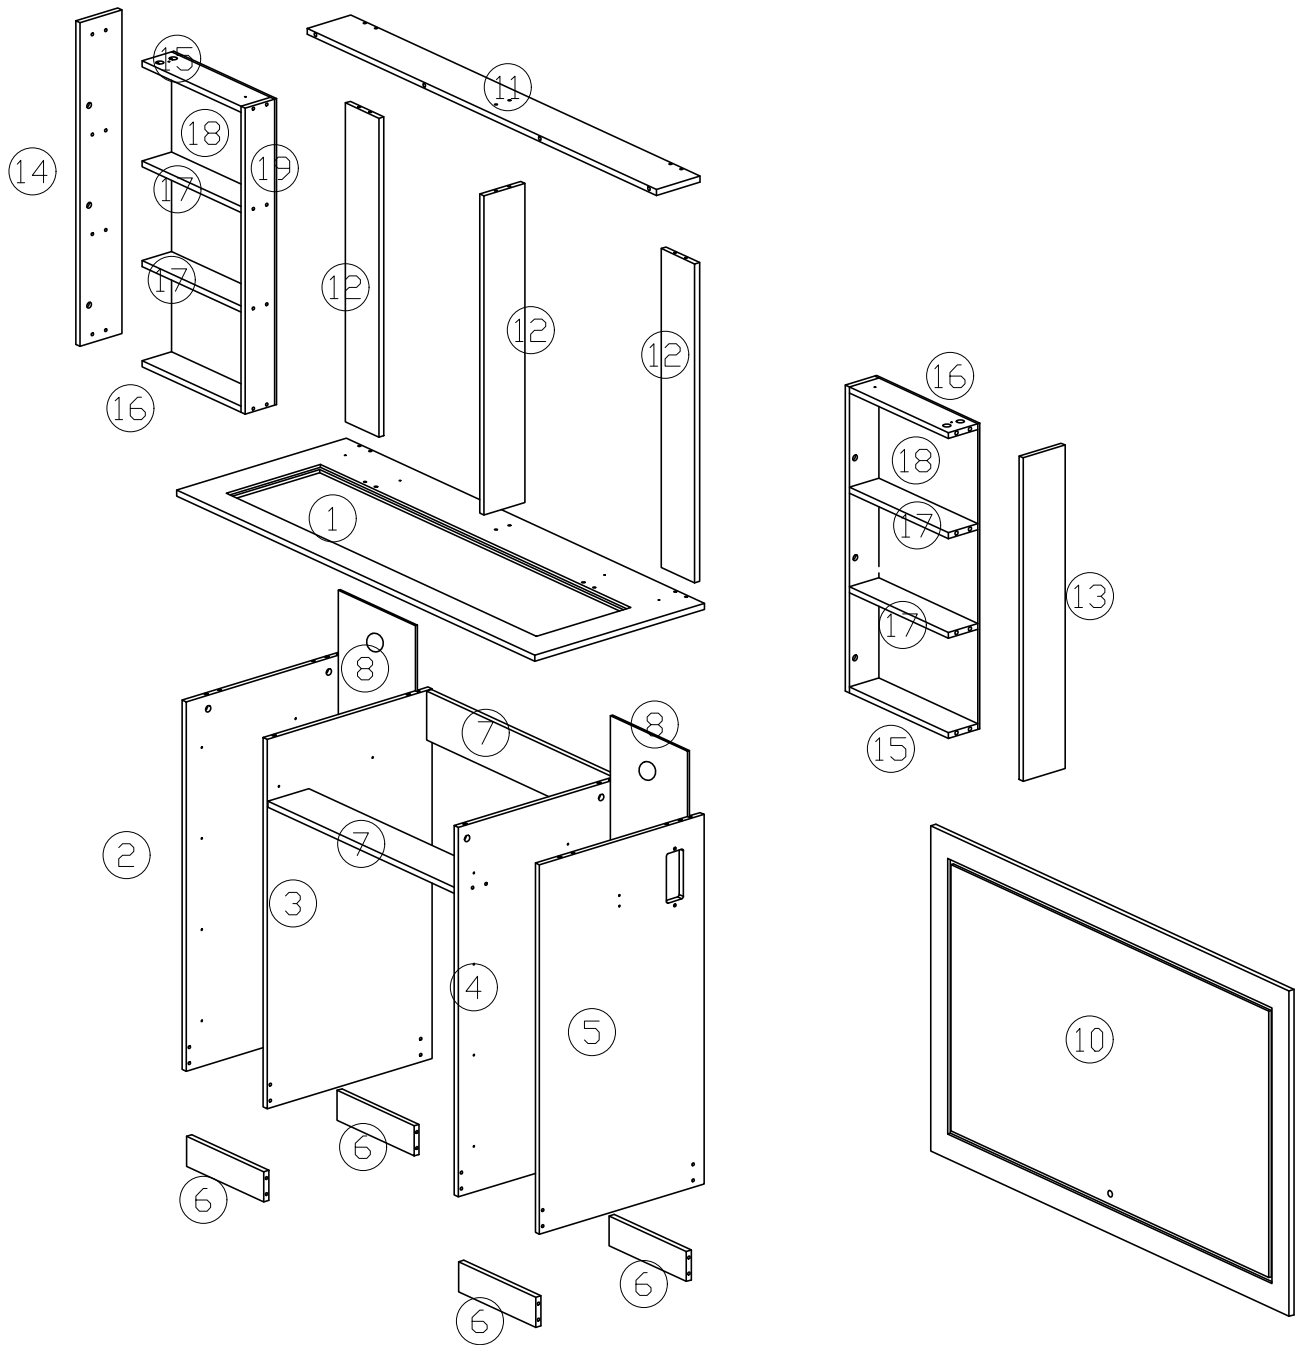









X2

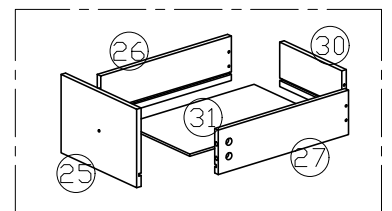


X6

Assembling Instruction


P3

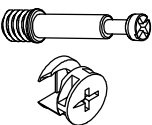A  64PCS	B  M4*30 90PCS	C  M4*12 116PCS	D  Ø6*30 6PCS
E  M4*16 9PCS	F  9PCS	G  2PCS	H  6PCS
J  1PCS	K  8PCS	L  1PCS	N  4PCS
 1PCS			
CR  9PCS	DR  9PCS	DL  9PCS	CL  9PCS


1

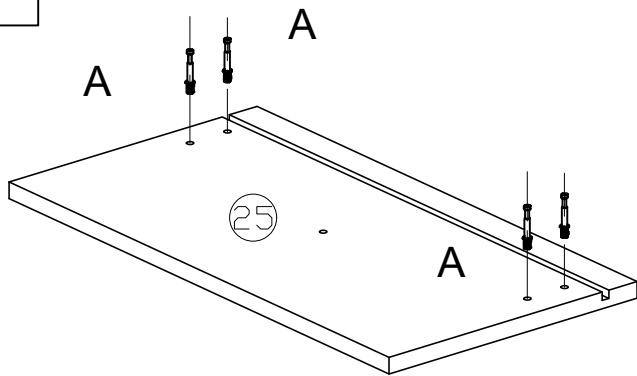

X6

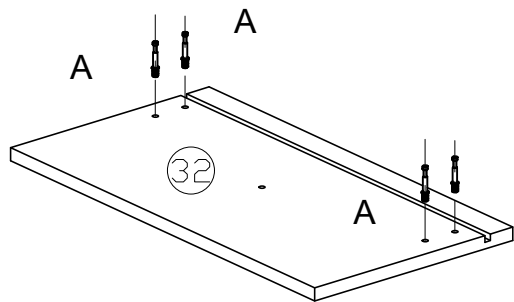

X2



 ✓	 ✗
---	--

A		32
---	---	----

Assembling Instruction

P4


2

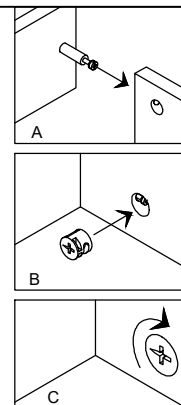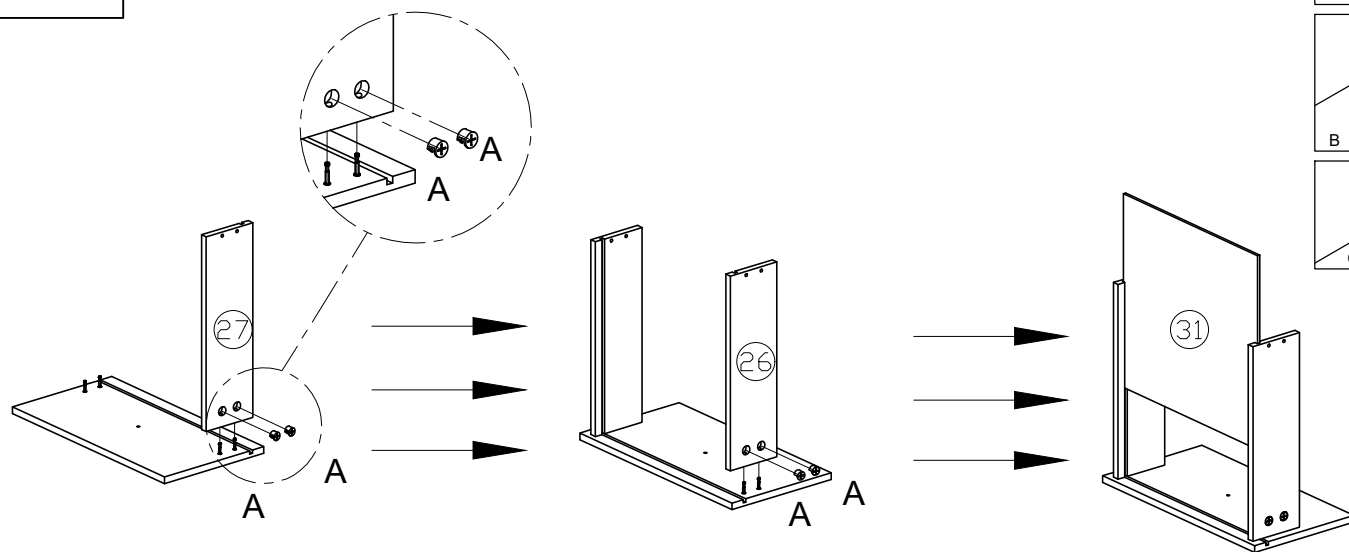

X6

A		24
---	--	----

3

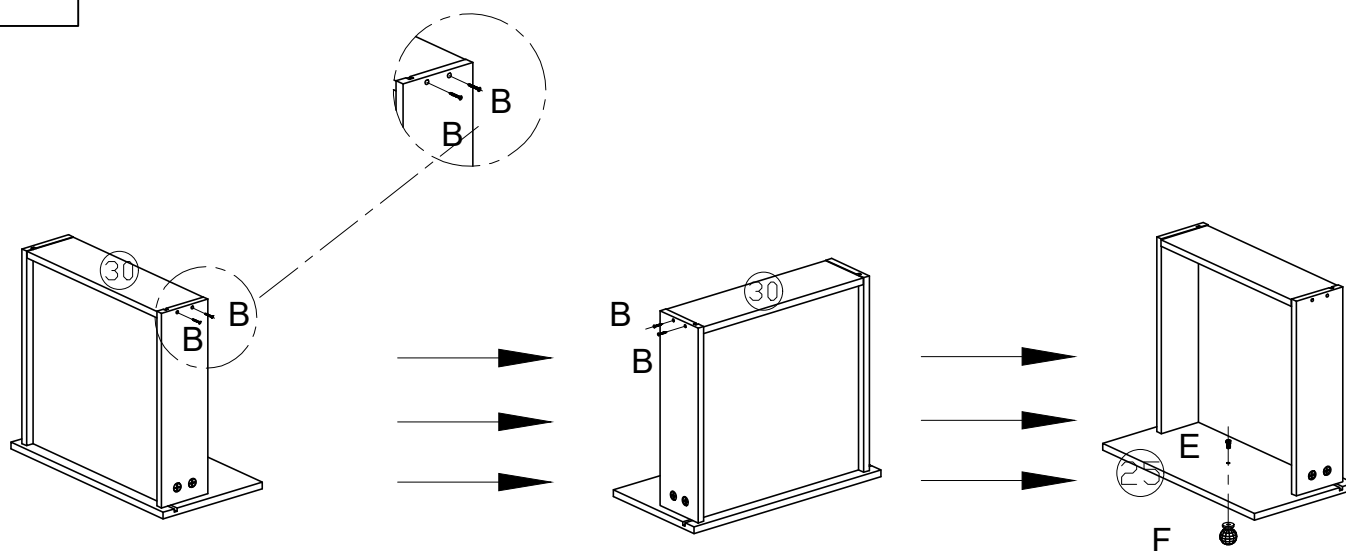

Please do not lift the handle
when installing the drawer.



X6

F		6
E		6
B		24

Assembling Instruction

P5


4

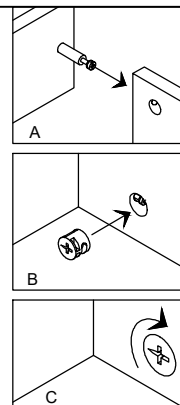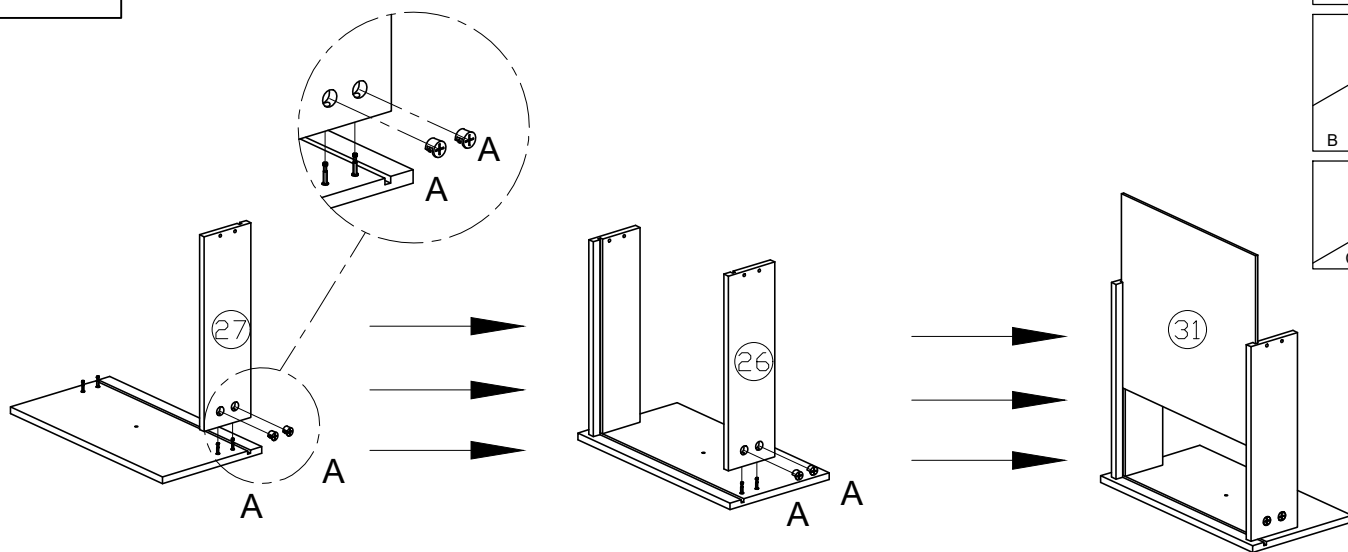

X2

A		8
---	--	---

5

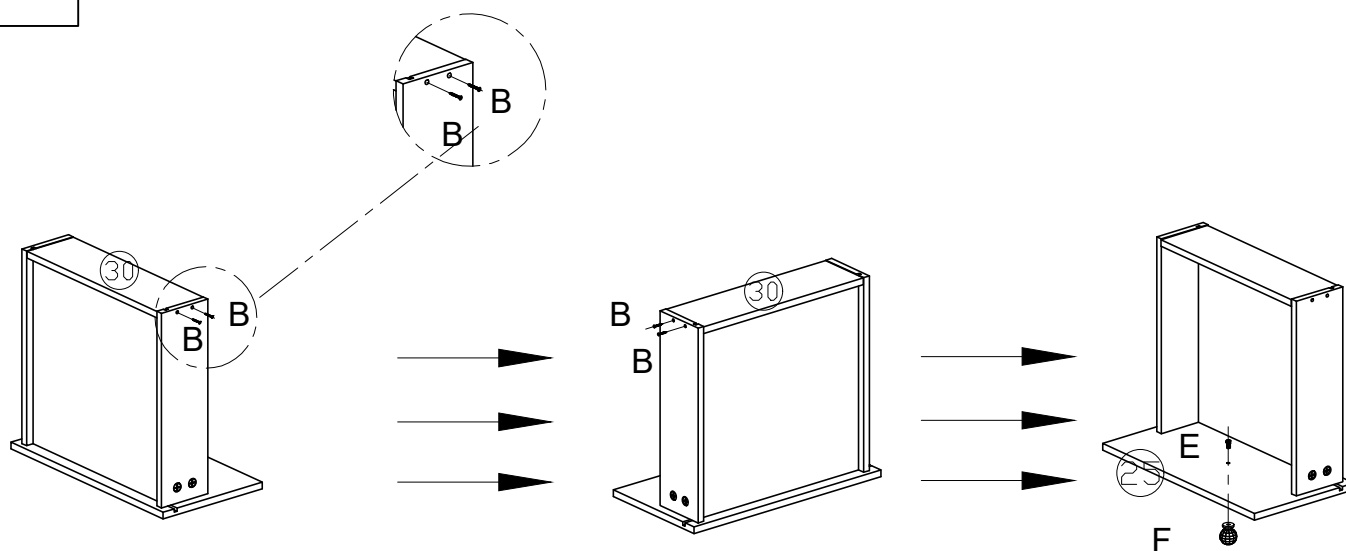



Please do not lift the handle
when installing the drawer.

X2

F		2
E		2
B		8


6

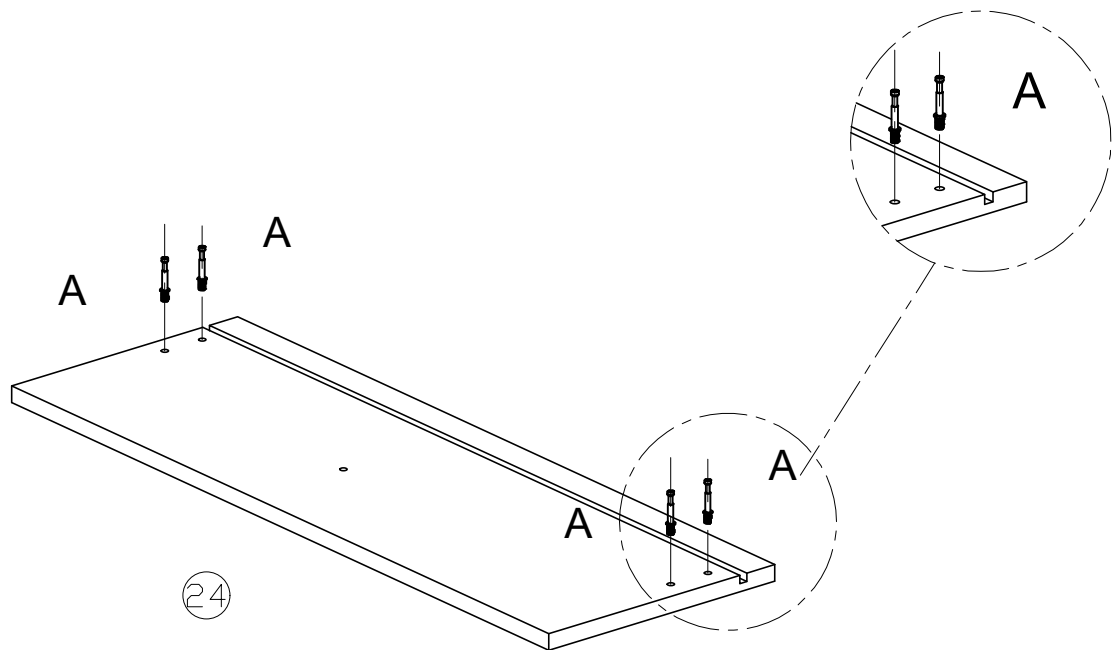

A		4
---	---	---

7

6

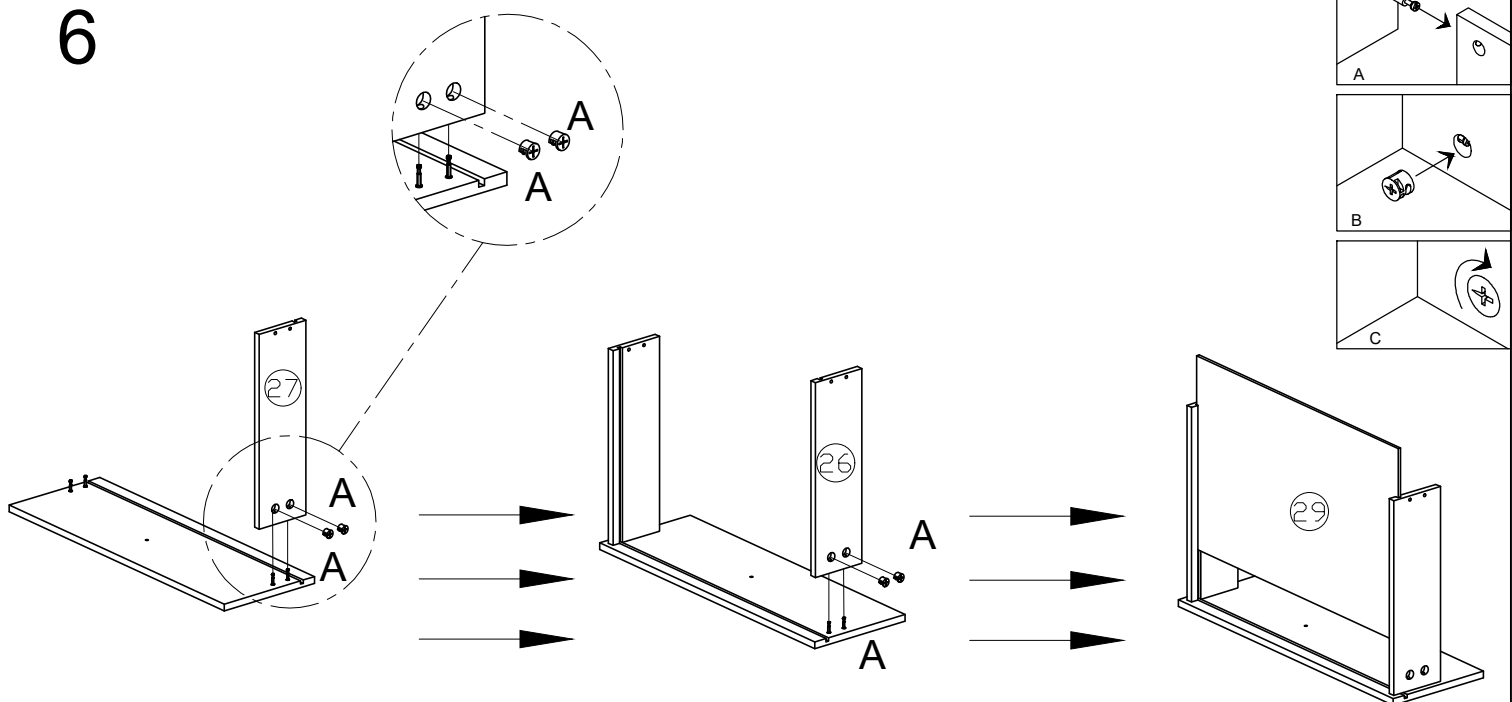


	
✓	✗

A		4
---	---	---

Assembling Instruction

P7


8

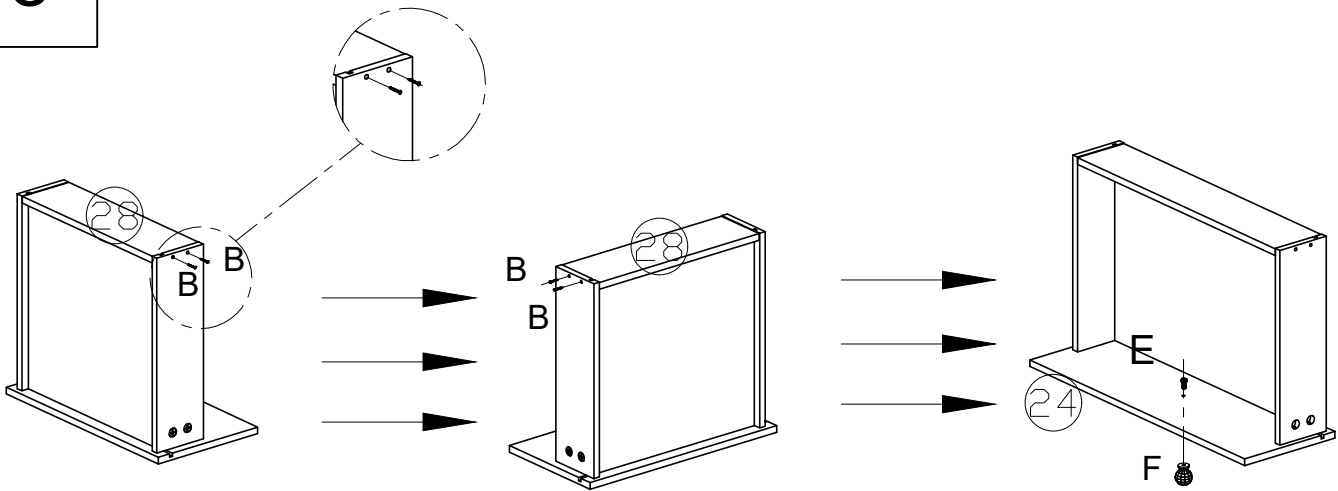

Please do not lift the handle
when installing the drawer.

F		1
E		1
B		4

9



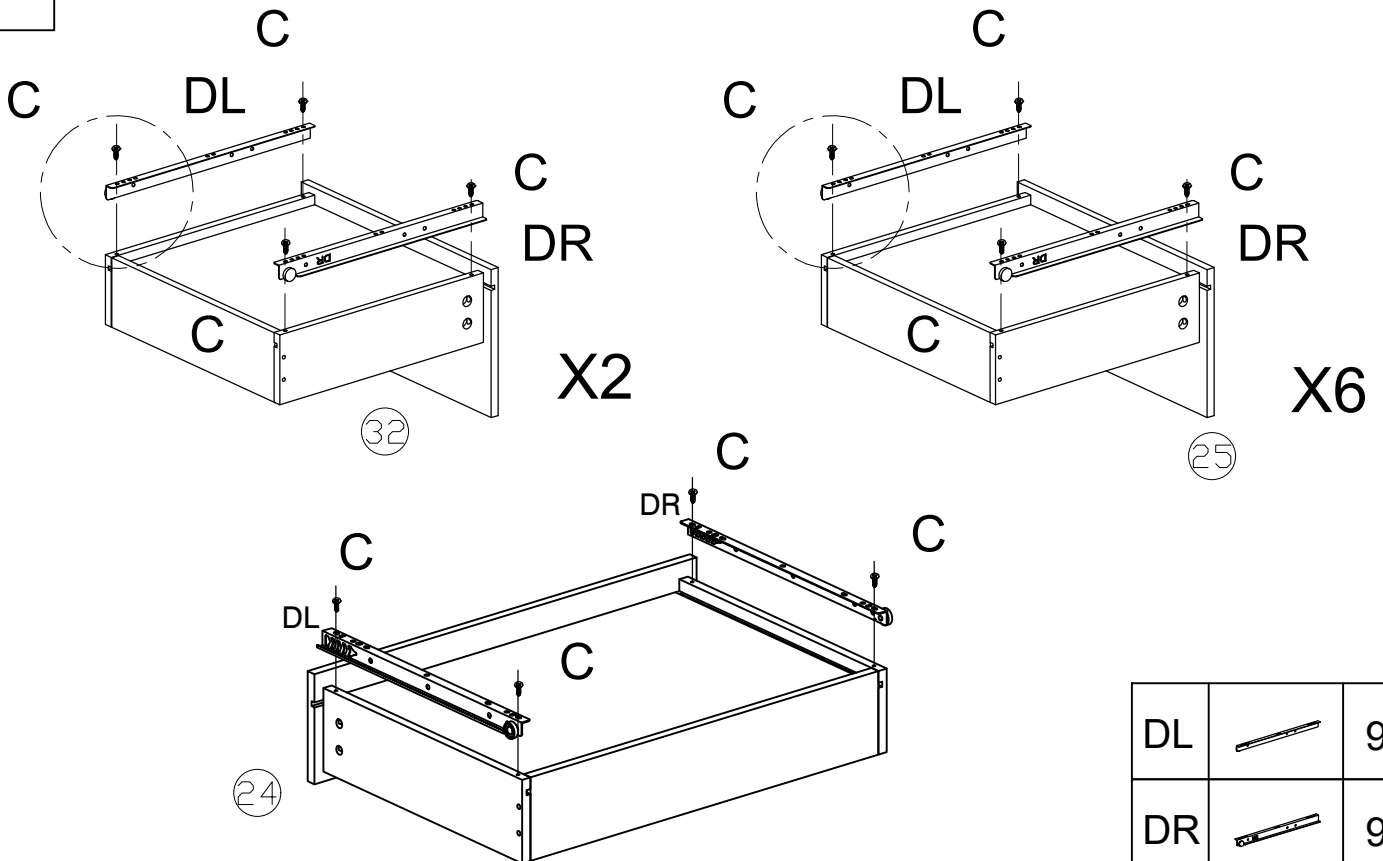


DL		9
DR		9
C		36

Assembling Instruction

P8



10

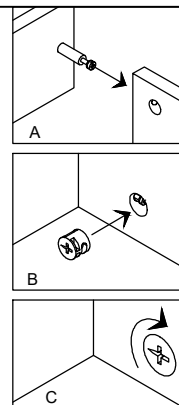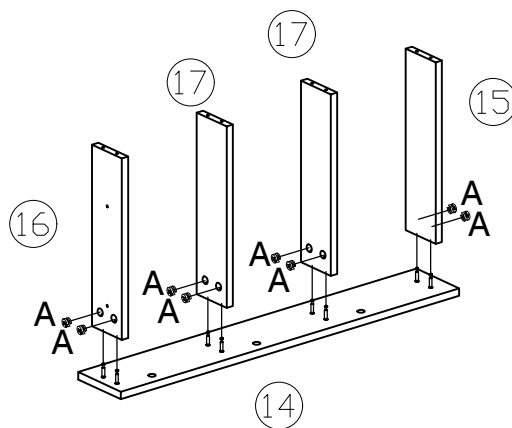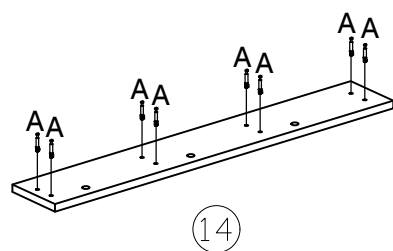

Pay attention to the direction of the three holes.




A		8
A		8

11

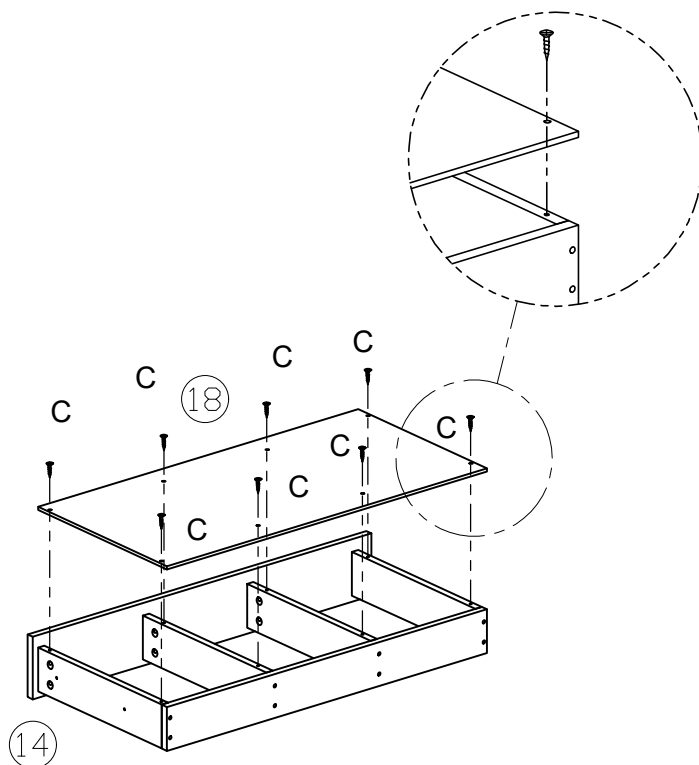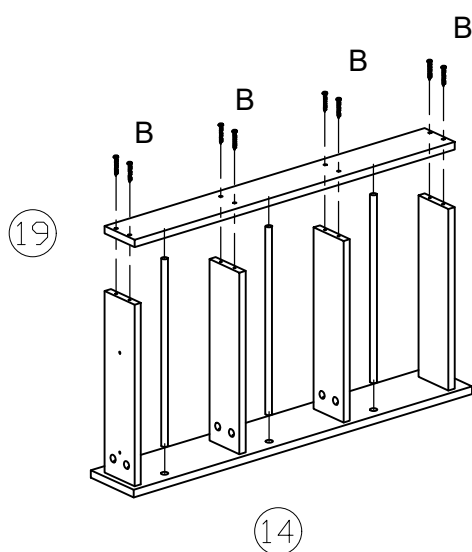

H		3
C		8
B		8



12

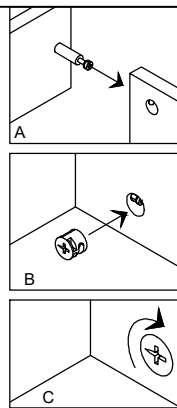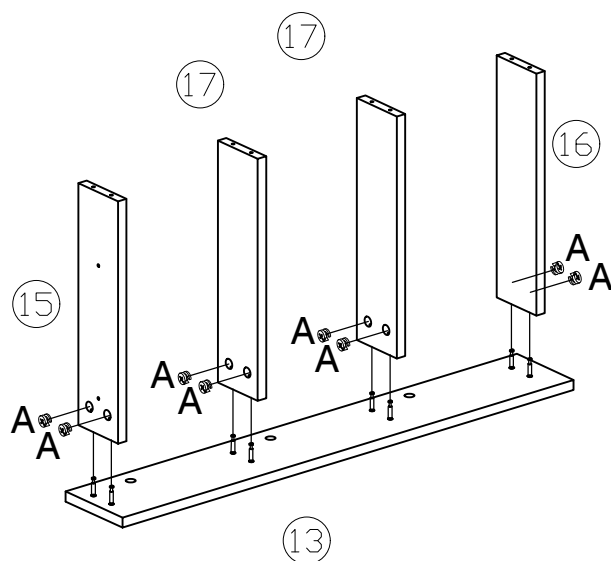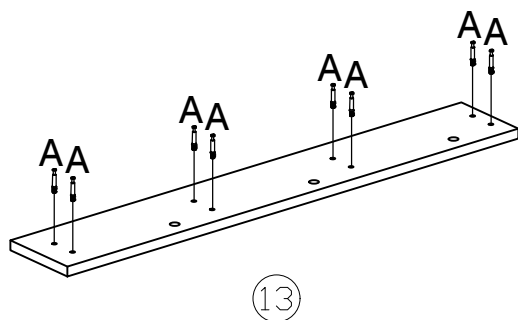

Pay attention to the direction of the three holes.



A		8
A		8

13

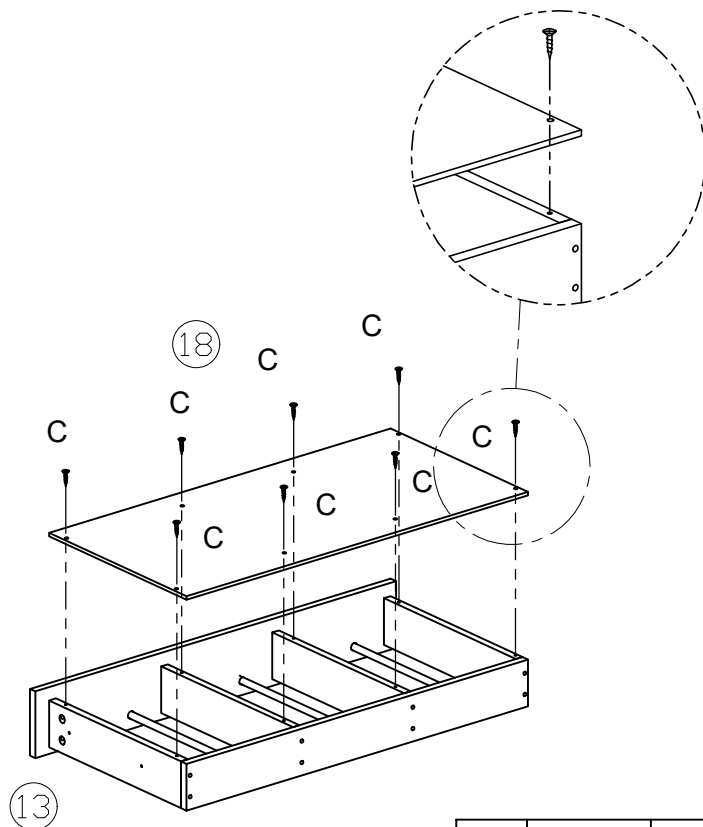
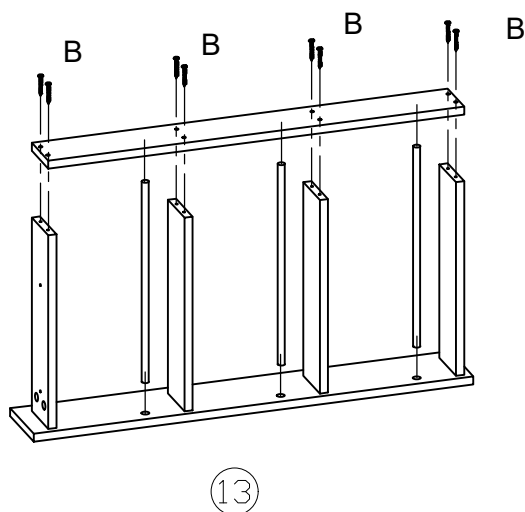


H		3
C		8
B		8

14

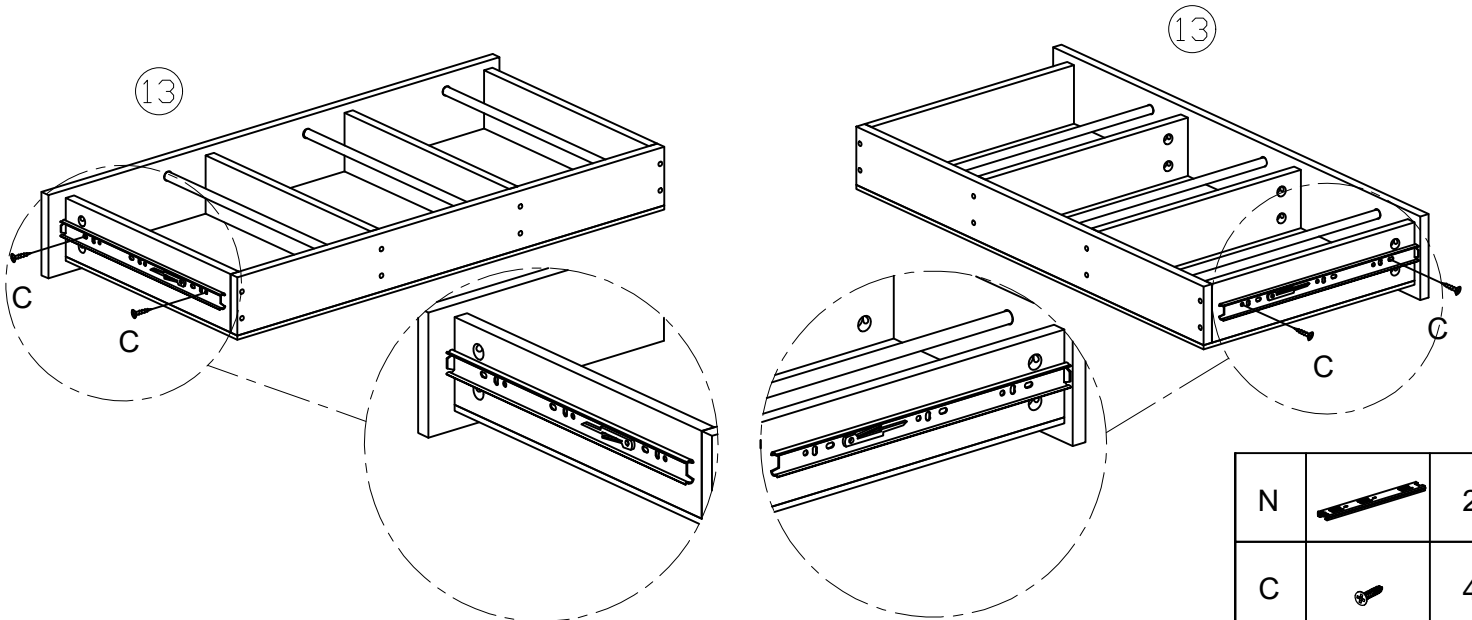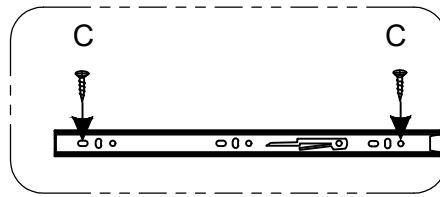


15


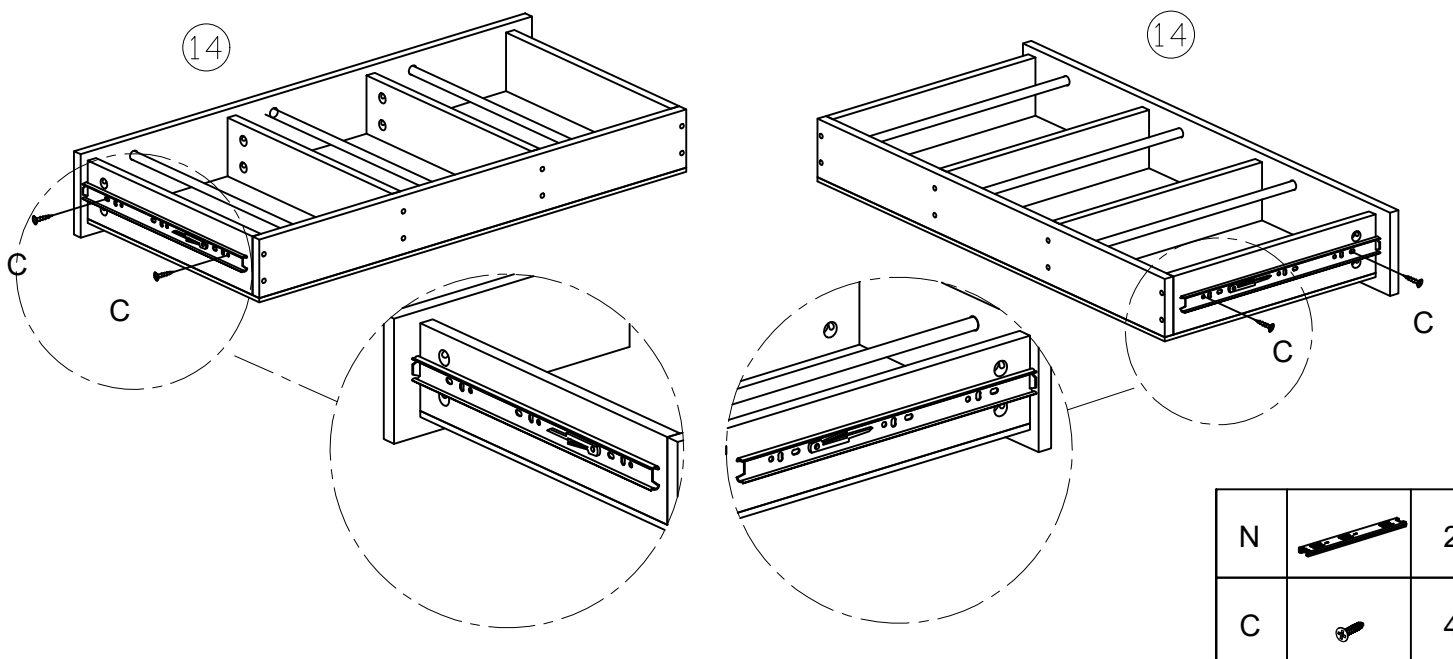
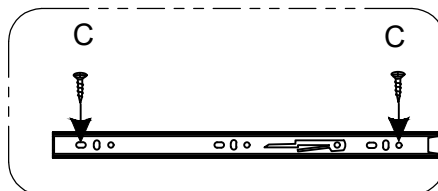


16


1.Take out the glass first.

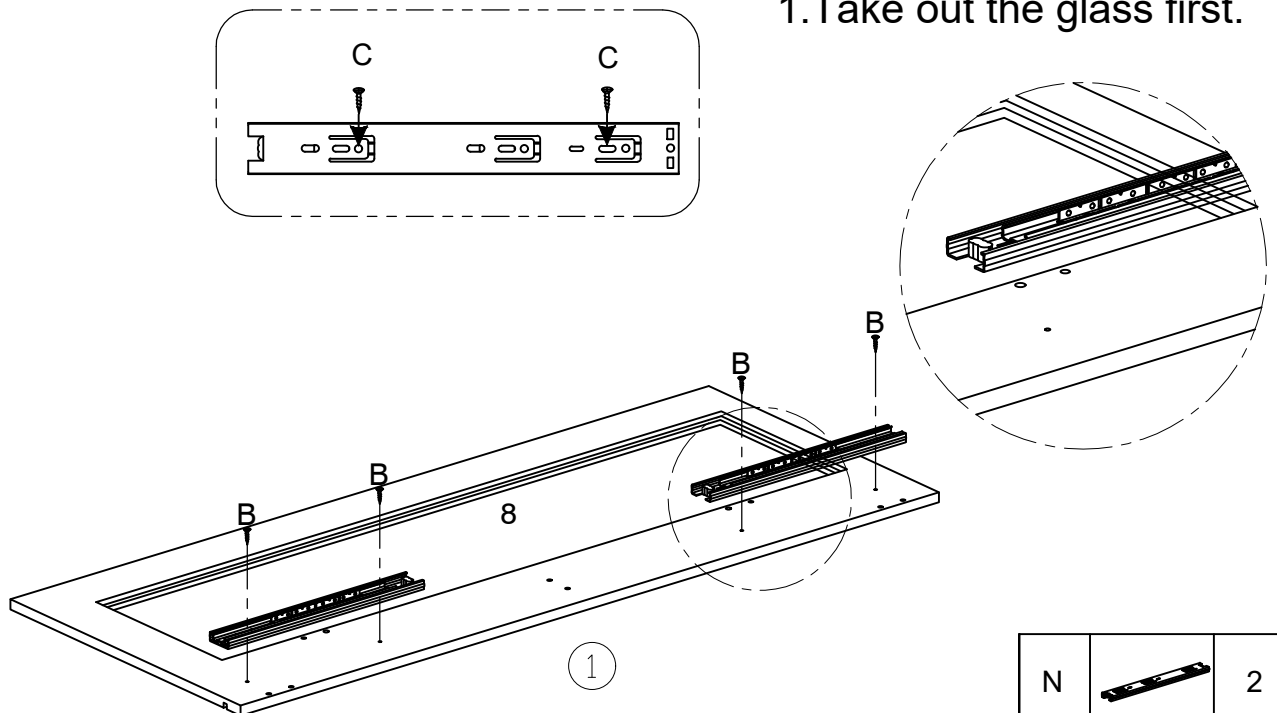

17

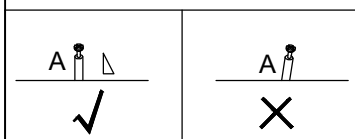
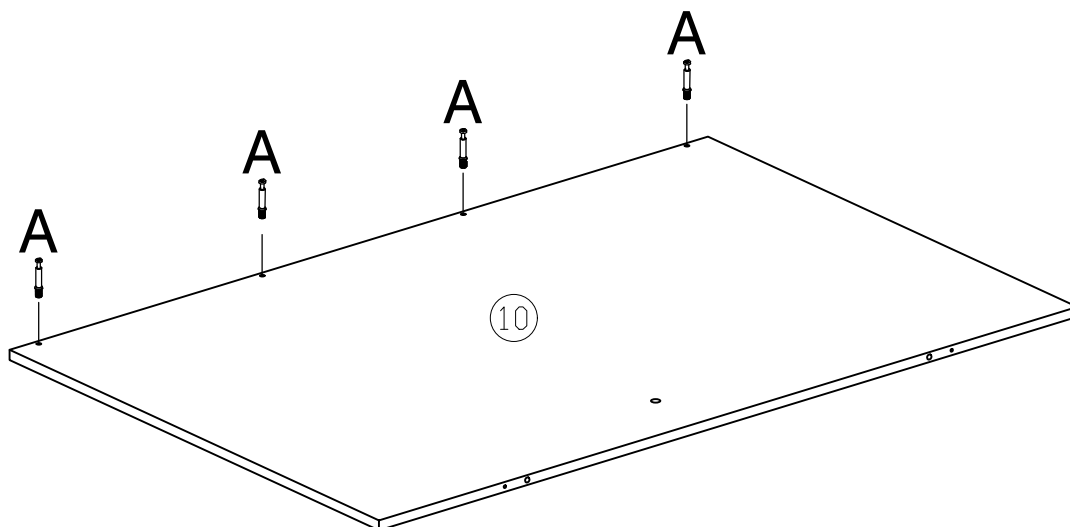


18

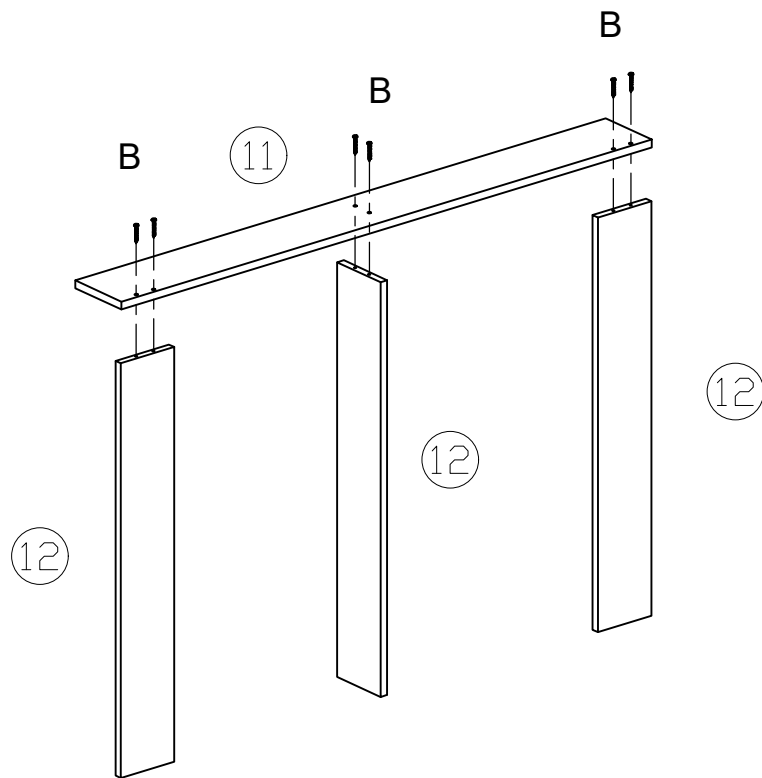



B		6
---	---	---

19

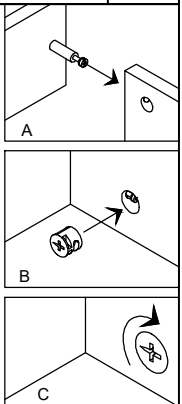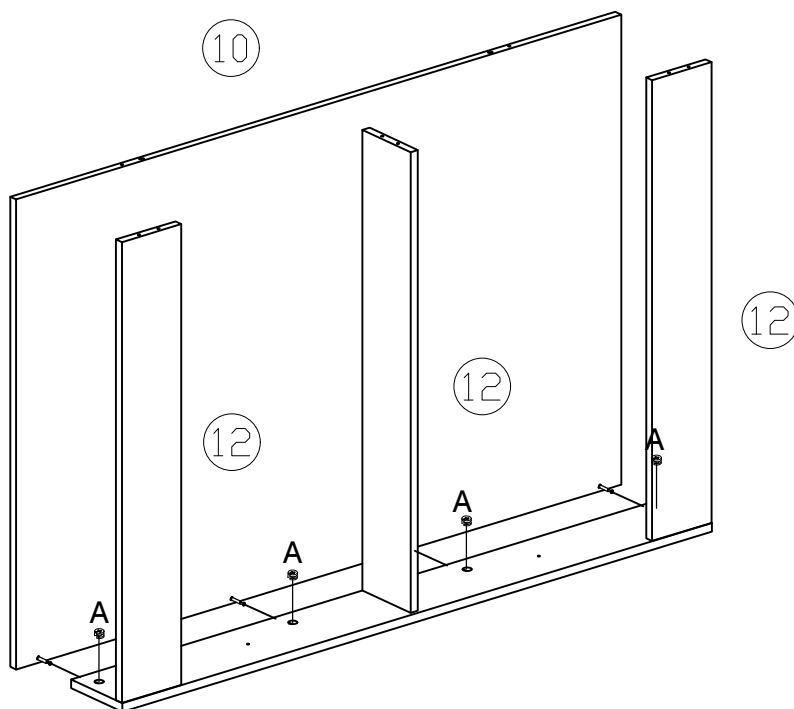



A		4
---	---	---

20

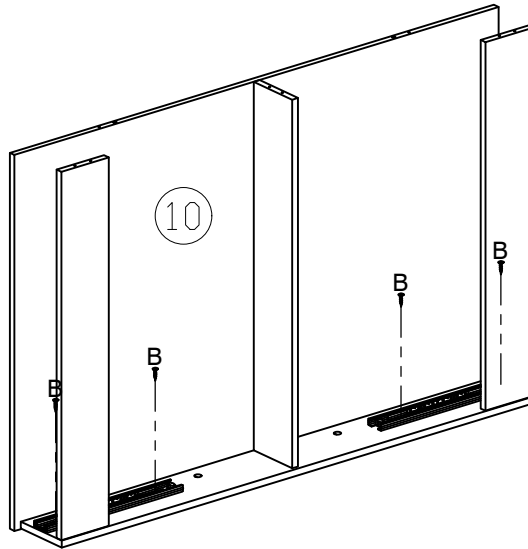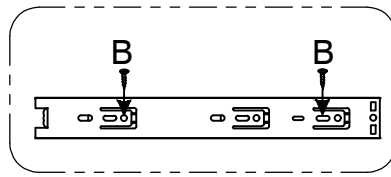


N		2
C		4

21

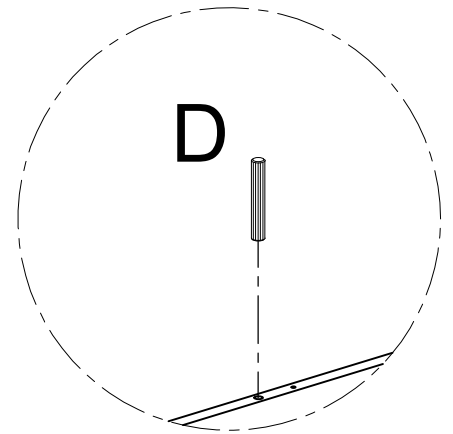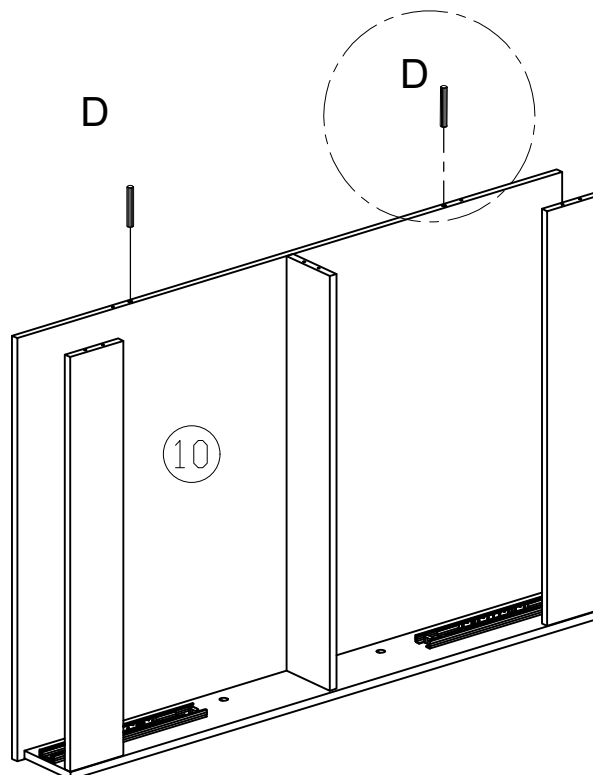


D		2
---	--	---


22

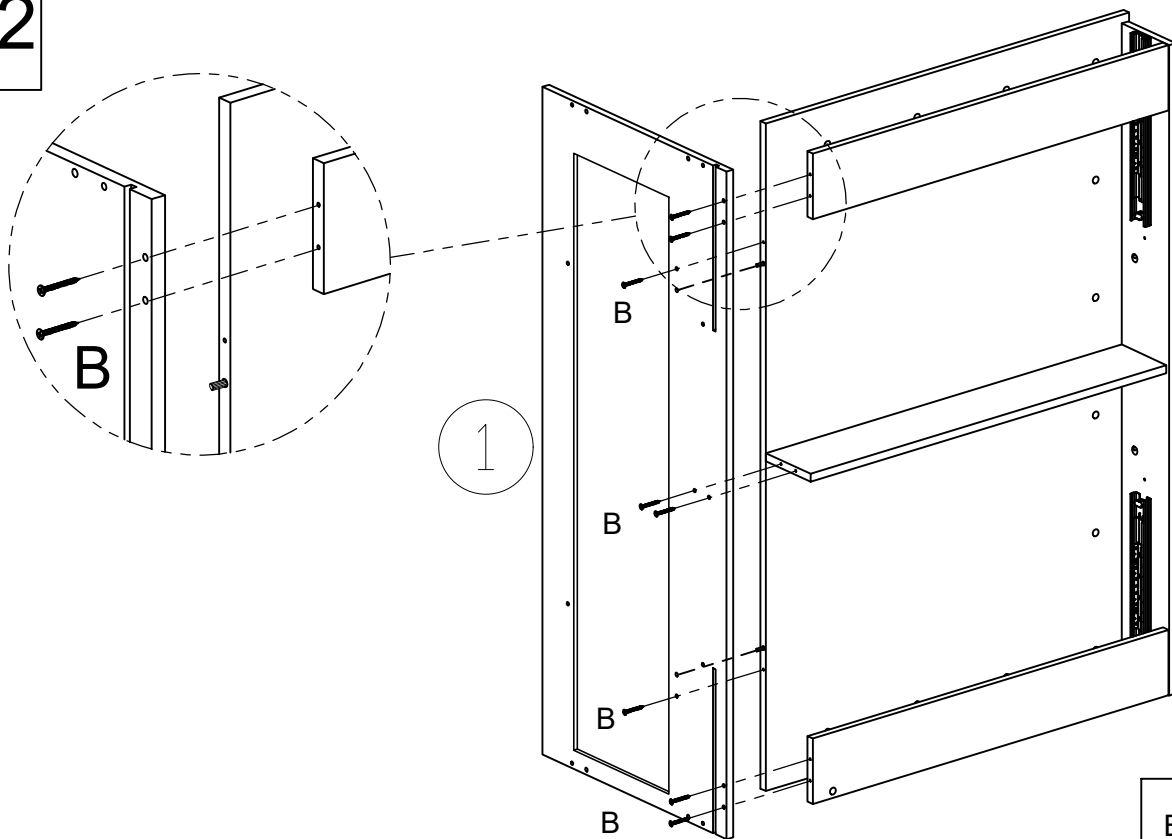

B		6
---	---	---


23

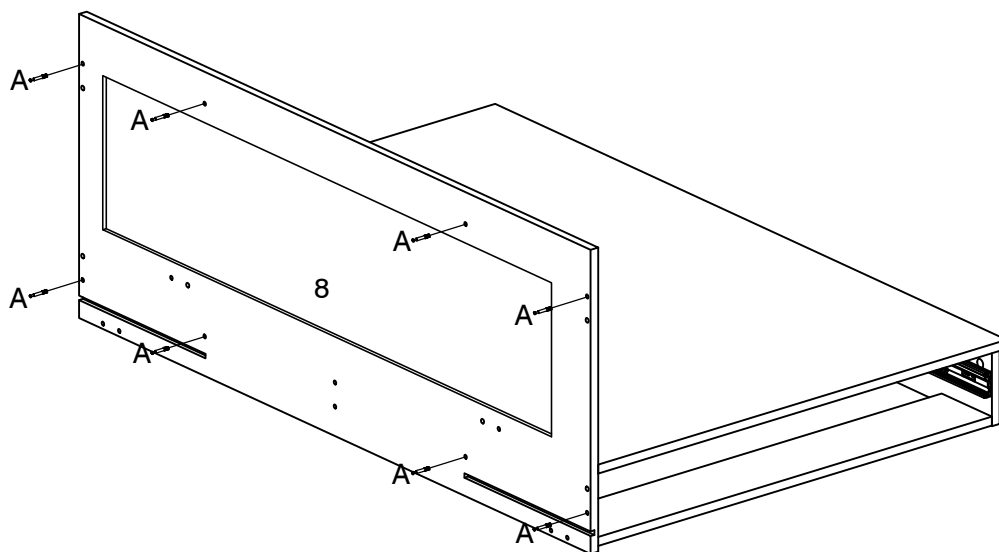

	
✓	✗


A		8
---	---	---

24

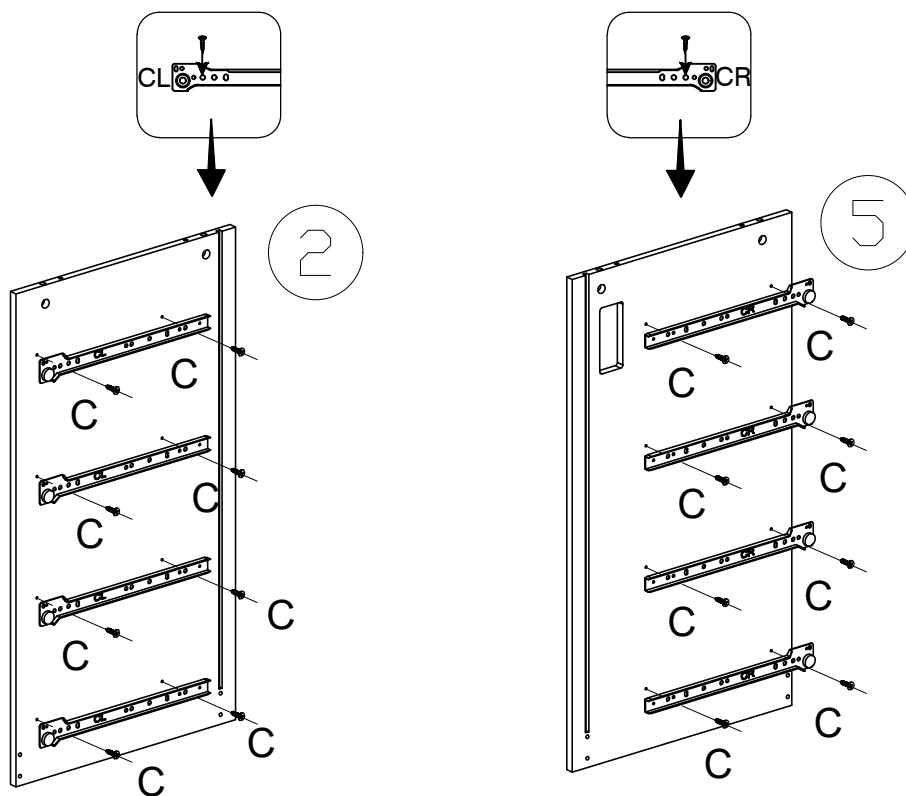



CR		4
CL		4
C		16

25

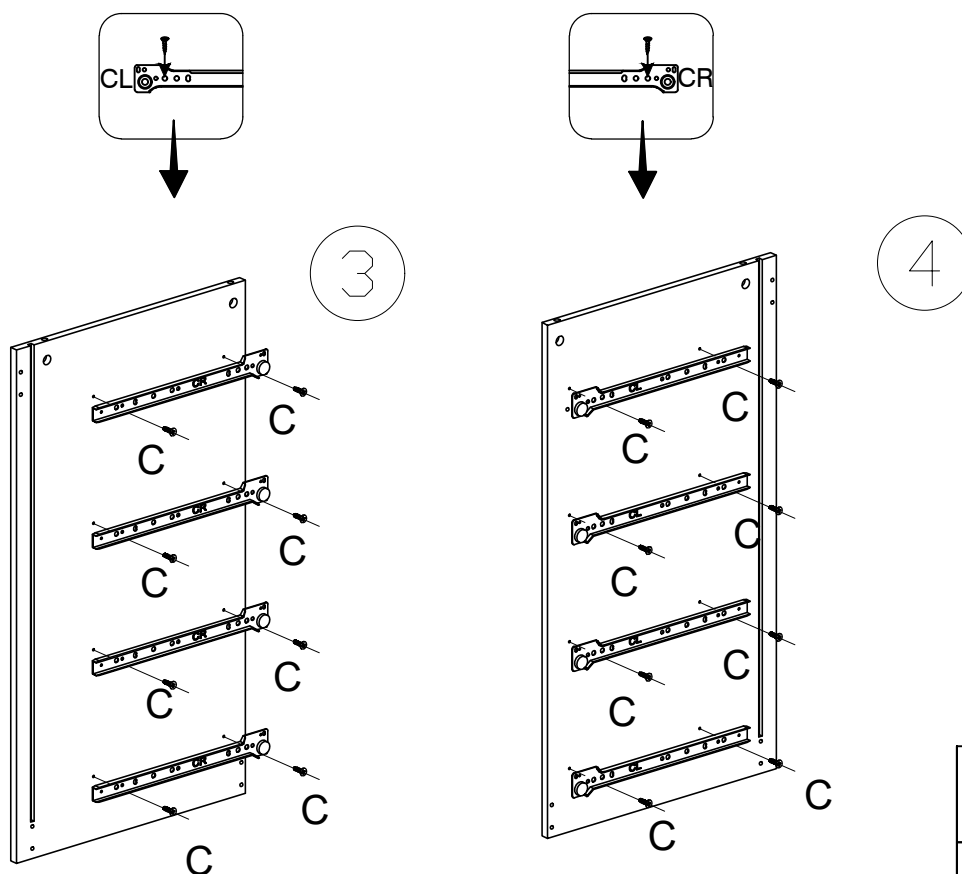


CR		4
CL		4
C		16


26

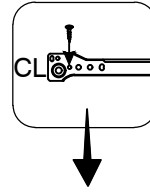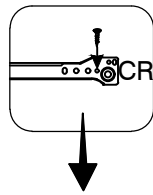

4

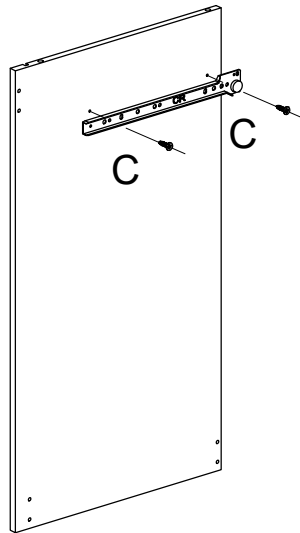


3

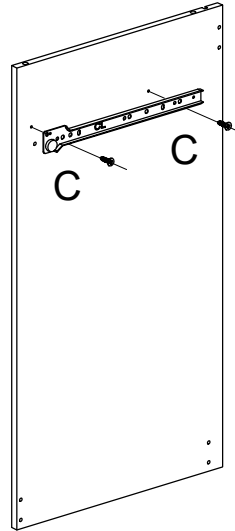

CR		1
CL		1
C		4

27

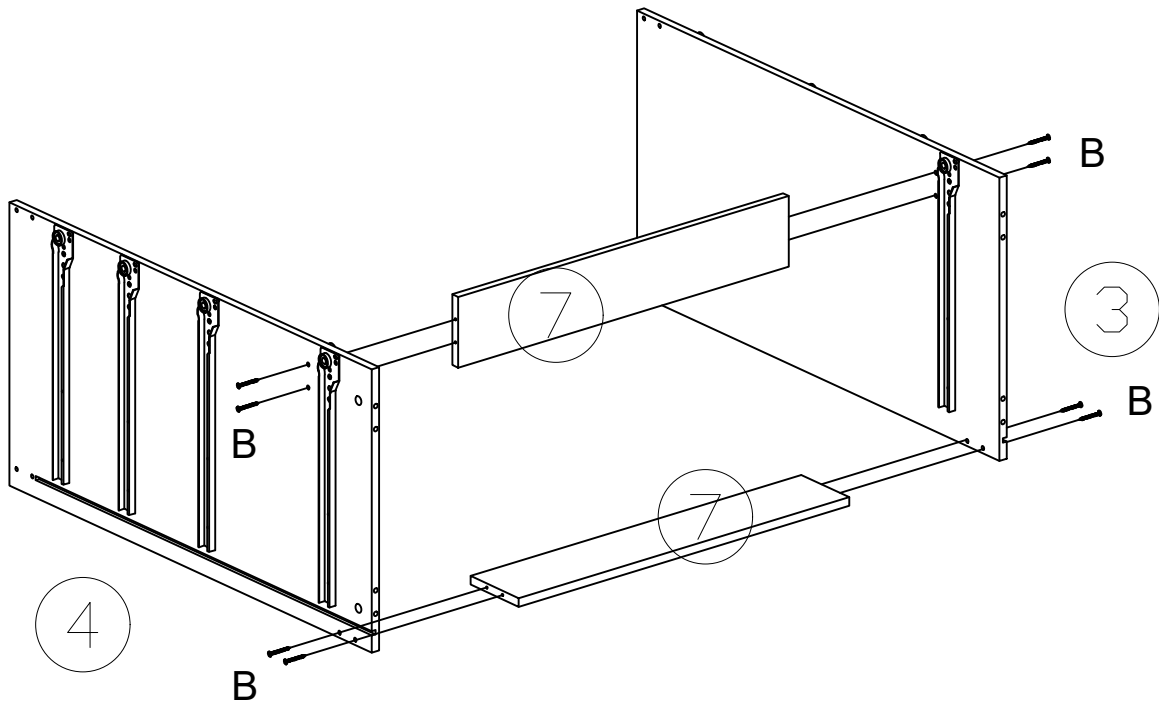


3

4

B		8
---	--	---

28

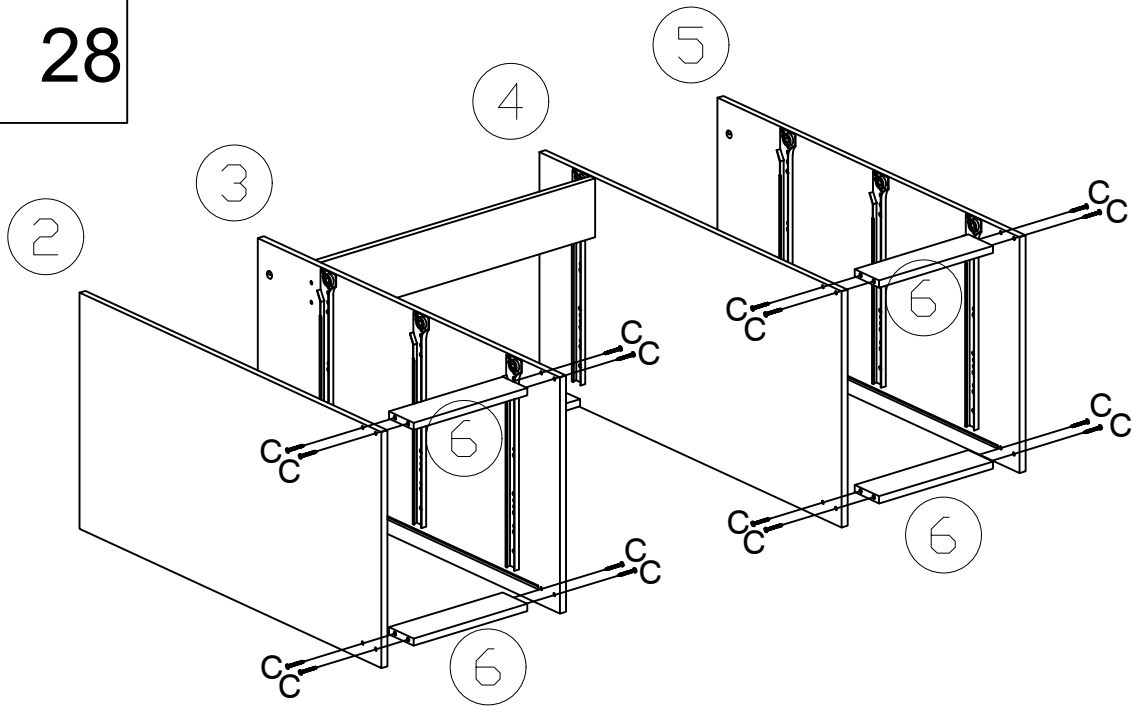


B




16

29

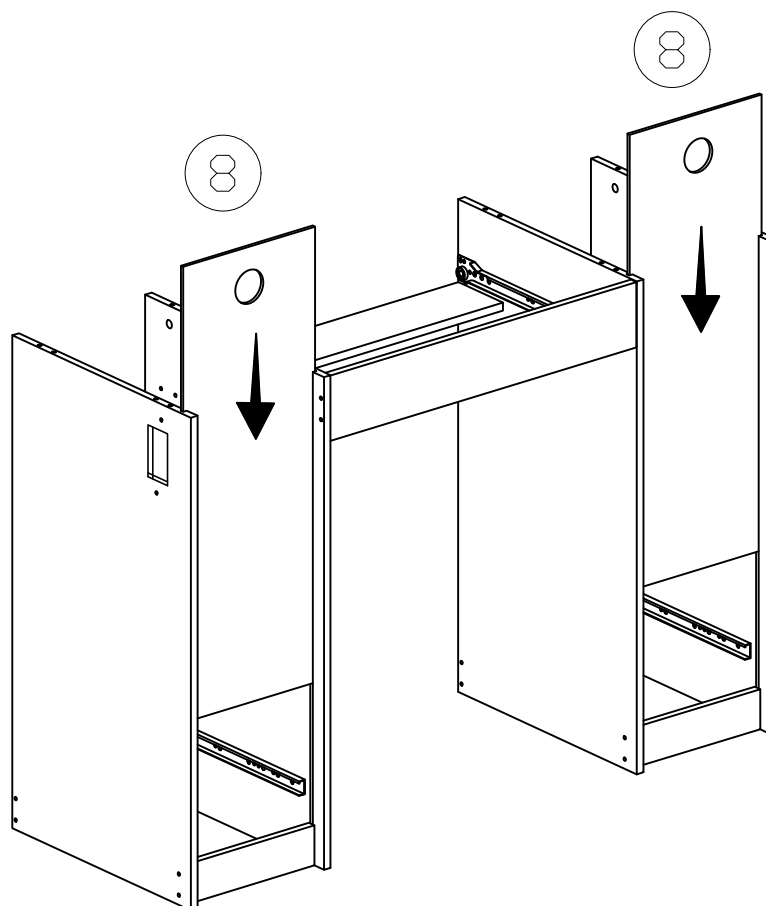

30




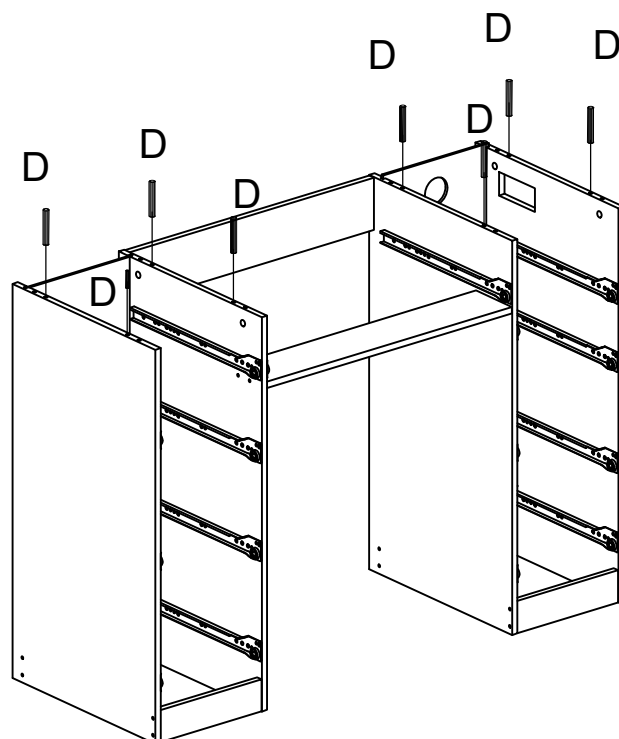


D



8

31

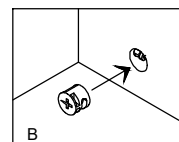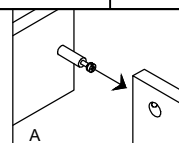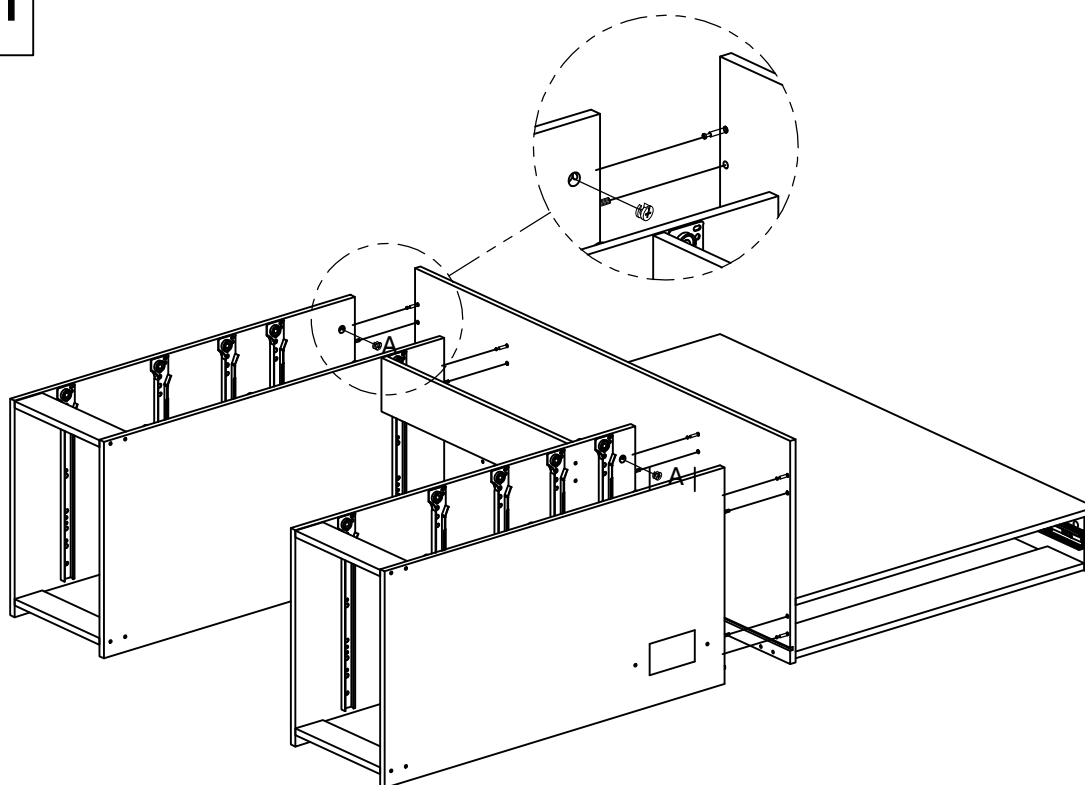


A




8

32

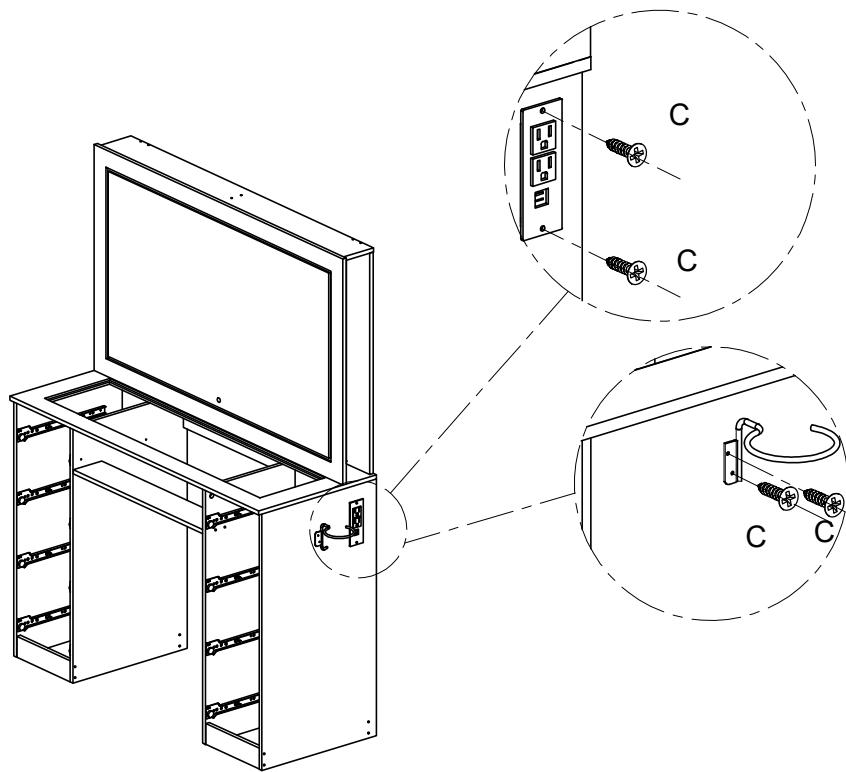


J		1
L		1
C		4

33


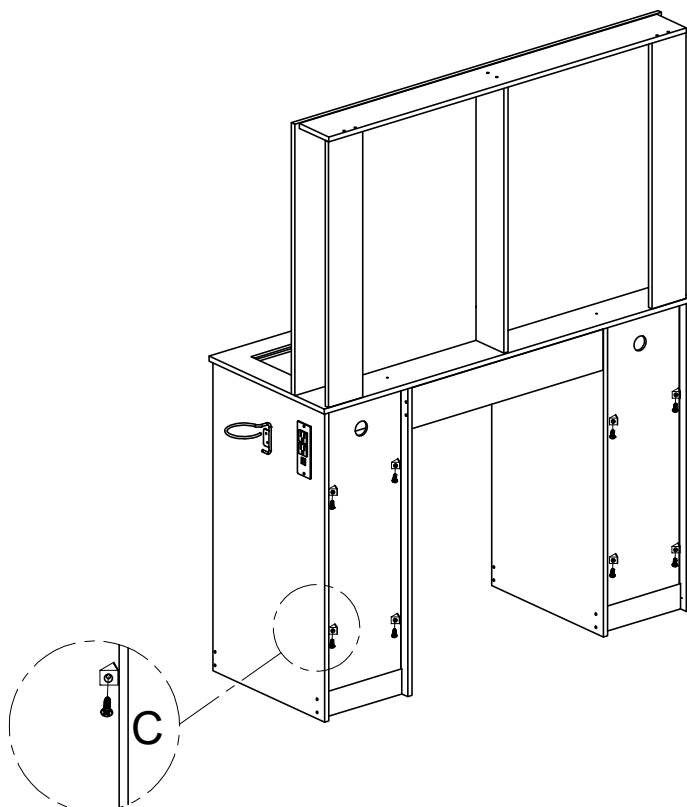


C		8
K		8

34


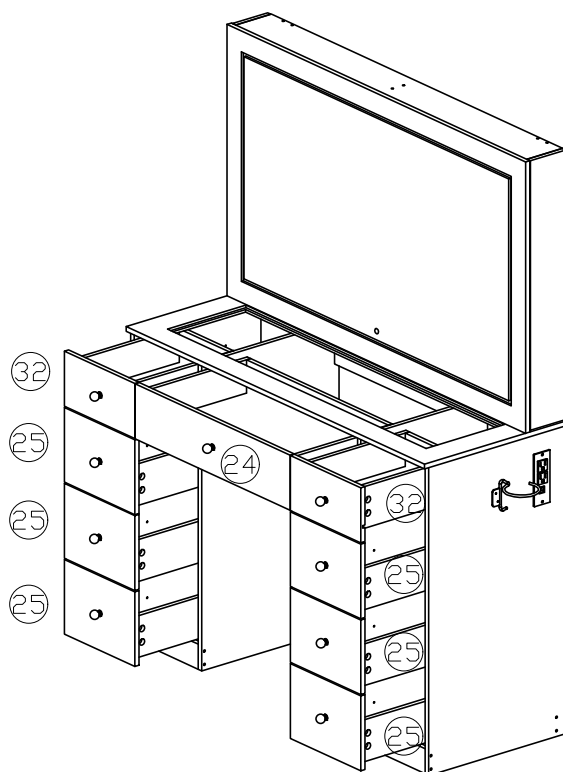


35

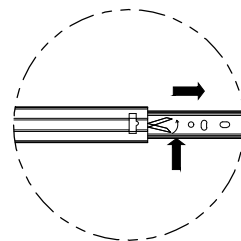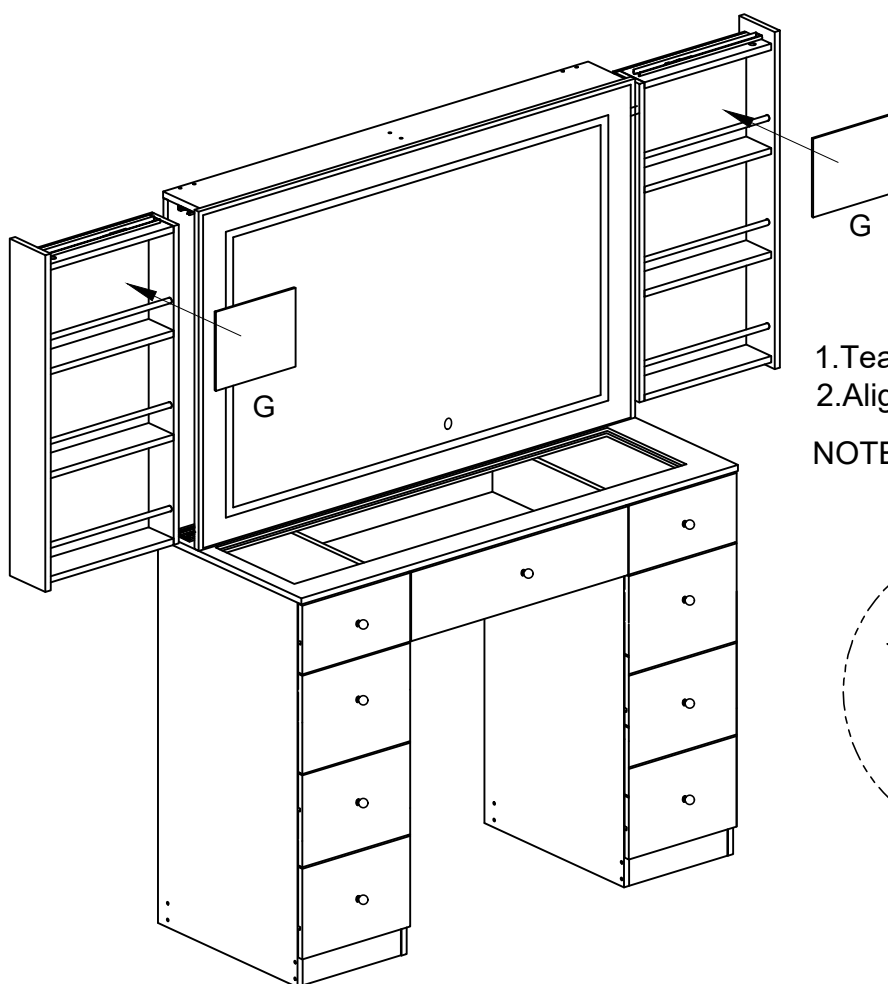

1. Tearoff the tape on the back
2. Align bottom push in.

NOTE :Needle for Jewelry

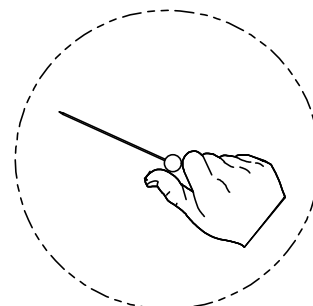

36

