


Loft Bed

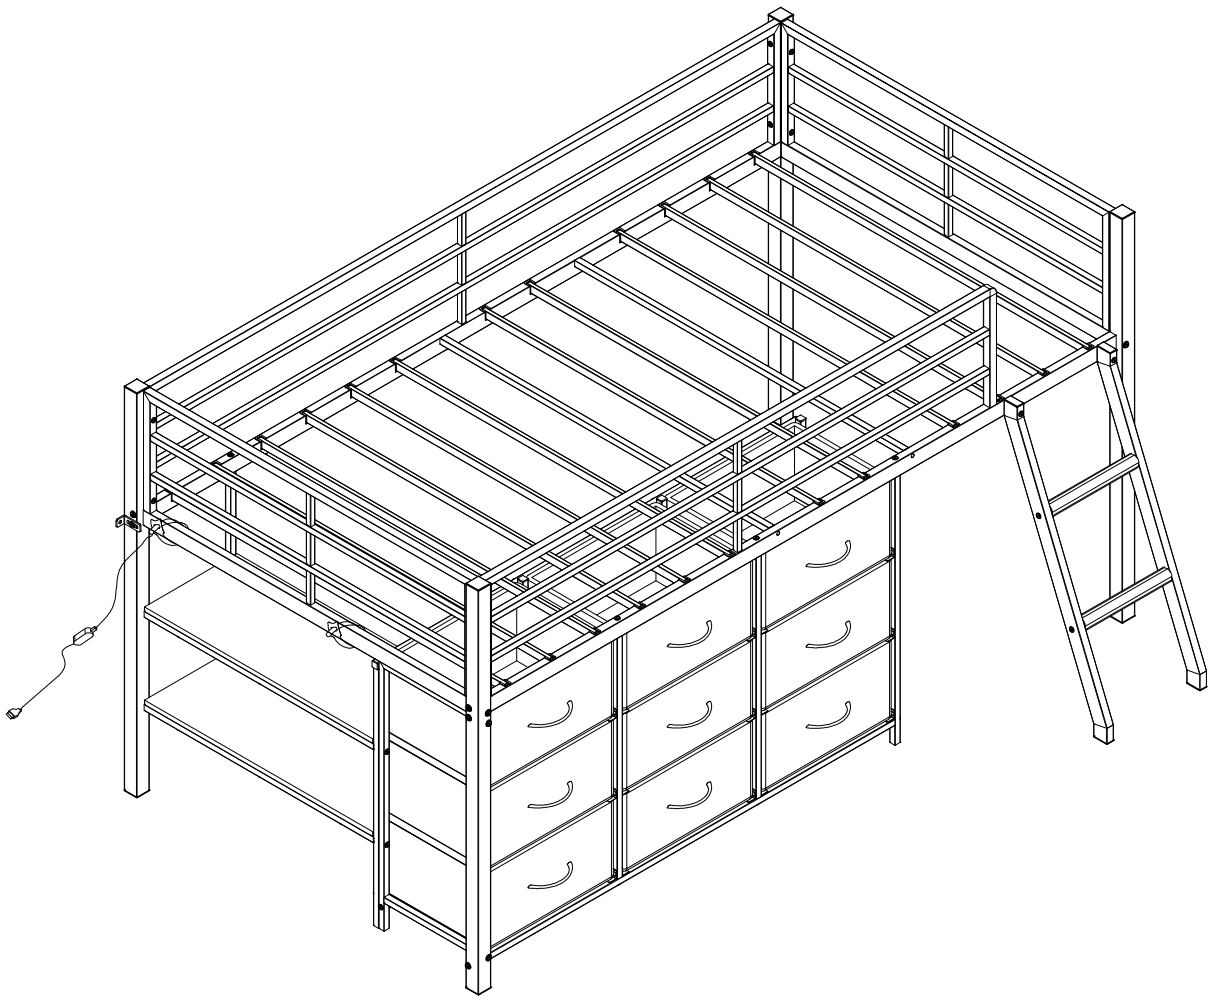


DJ504239

Version 1.0

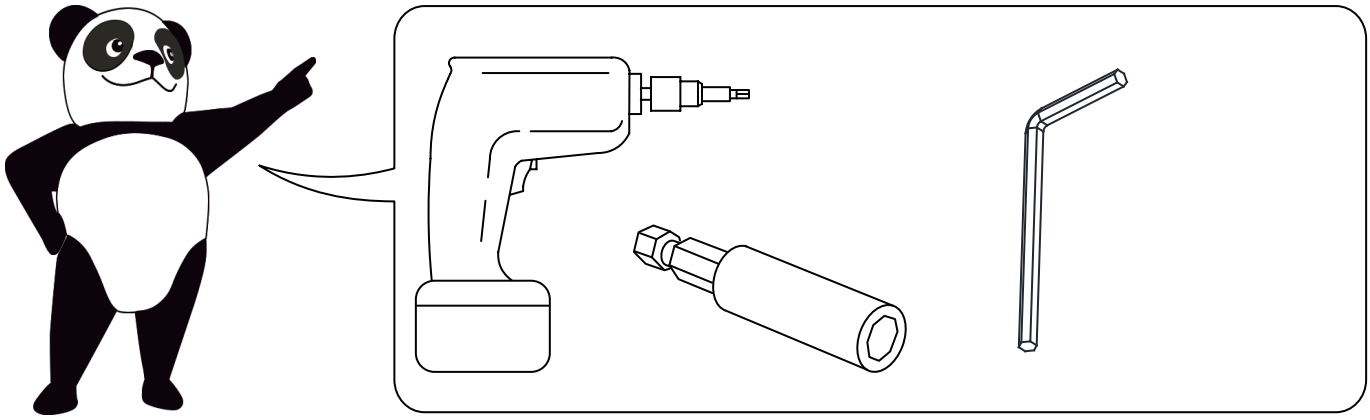


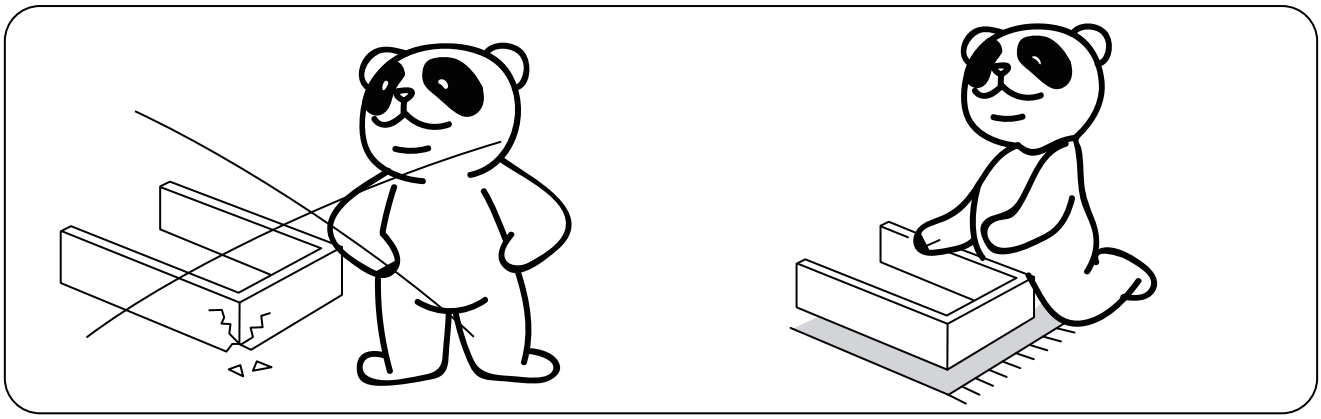

Violent installation is prohibited

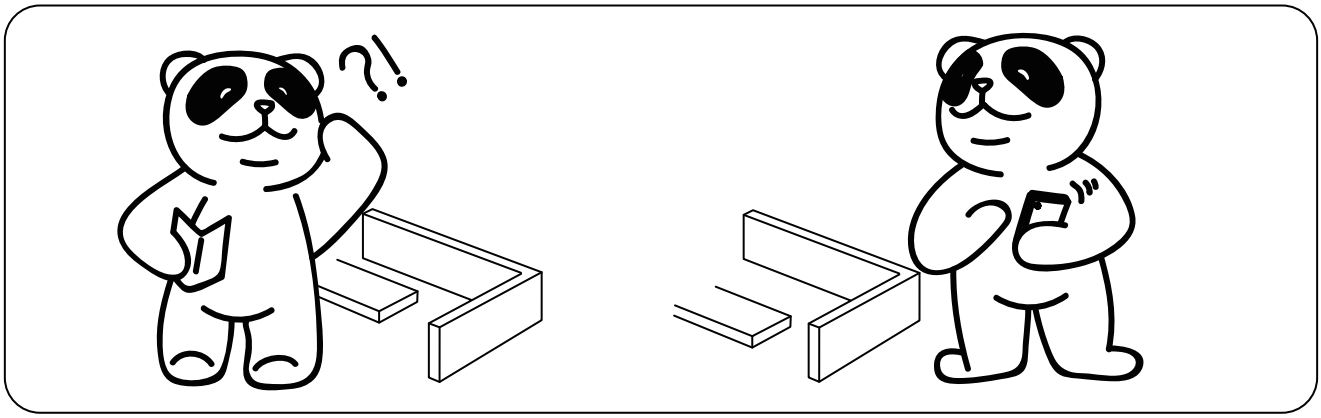


Please call if you need help

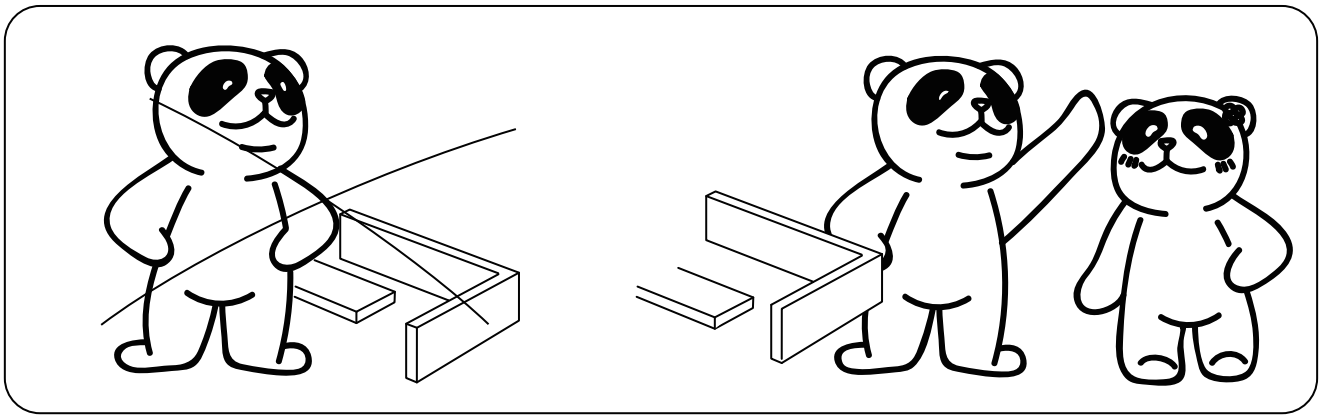


Multi-person cooperation is recommended

Install parts

PARTS LIST



1 ×1




2 ×1




3 ×1




4 ×1

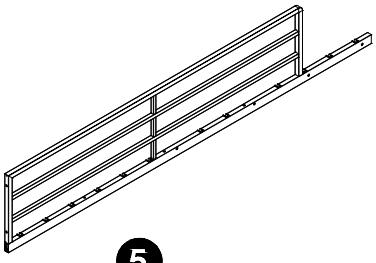


5 ×1

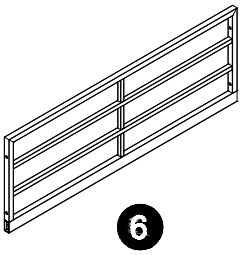


6 ×2

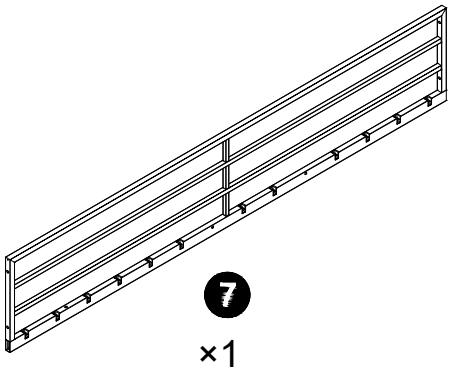


7 ×1



8 ×1

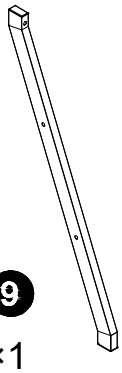


9 ×1



10 ×1




11 ×2

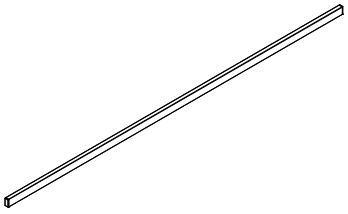


12 ×12

13 ×1

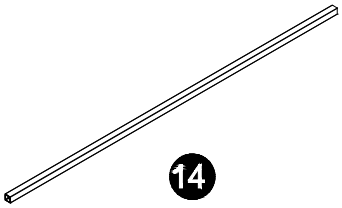


14 ×2

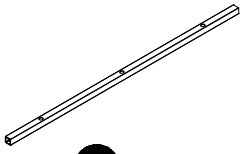

15 ×4

16 ×1




17 ×1

18 ×1


19 ×2

20 ×2

21 ×1

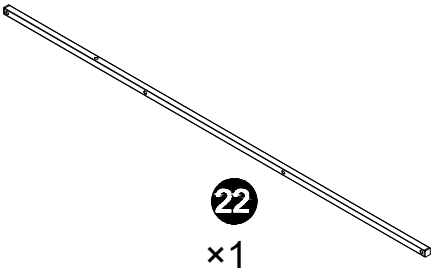

22 ×1

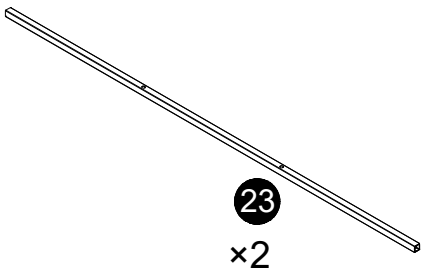


23 ×2




24 ×1


PARTS LIST




25
×9

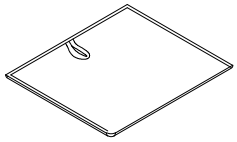


26
×9




27



28

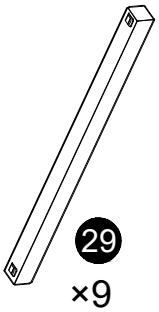


29
×9

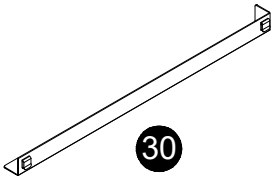


30
×9




31
×2

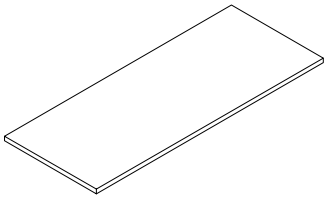

32
×2



33
×1

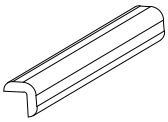

34
×2



35 ×2


HARDWARE LIST




A
M6*25
x12+1




B
M6*30
x30+3



C
M6*40
x8+1



D
M6*60
x24+2



E
M6*70
x2+1




F
M6 nut
x2+1




G
M6 washer
x15+1




H
4#
x1



I
4#
x1



J
4#
x1




K
M6*80
x2

Note:

1,Should be assembled on flat ground to keep balance.


2.Before completing the installation,do not tighten the screws.

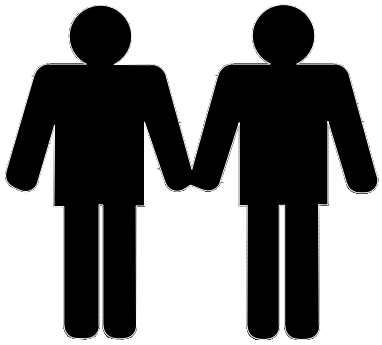




Before starting the assembly , you must read the whole manual and follow the instructions .

It needs at least two people to install

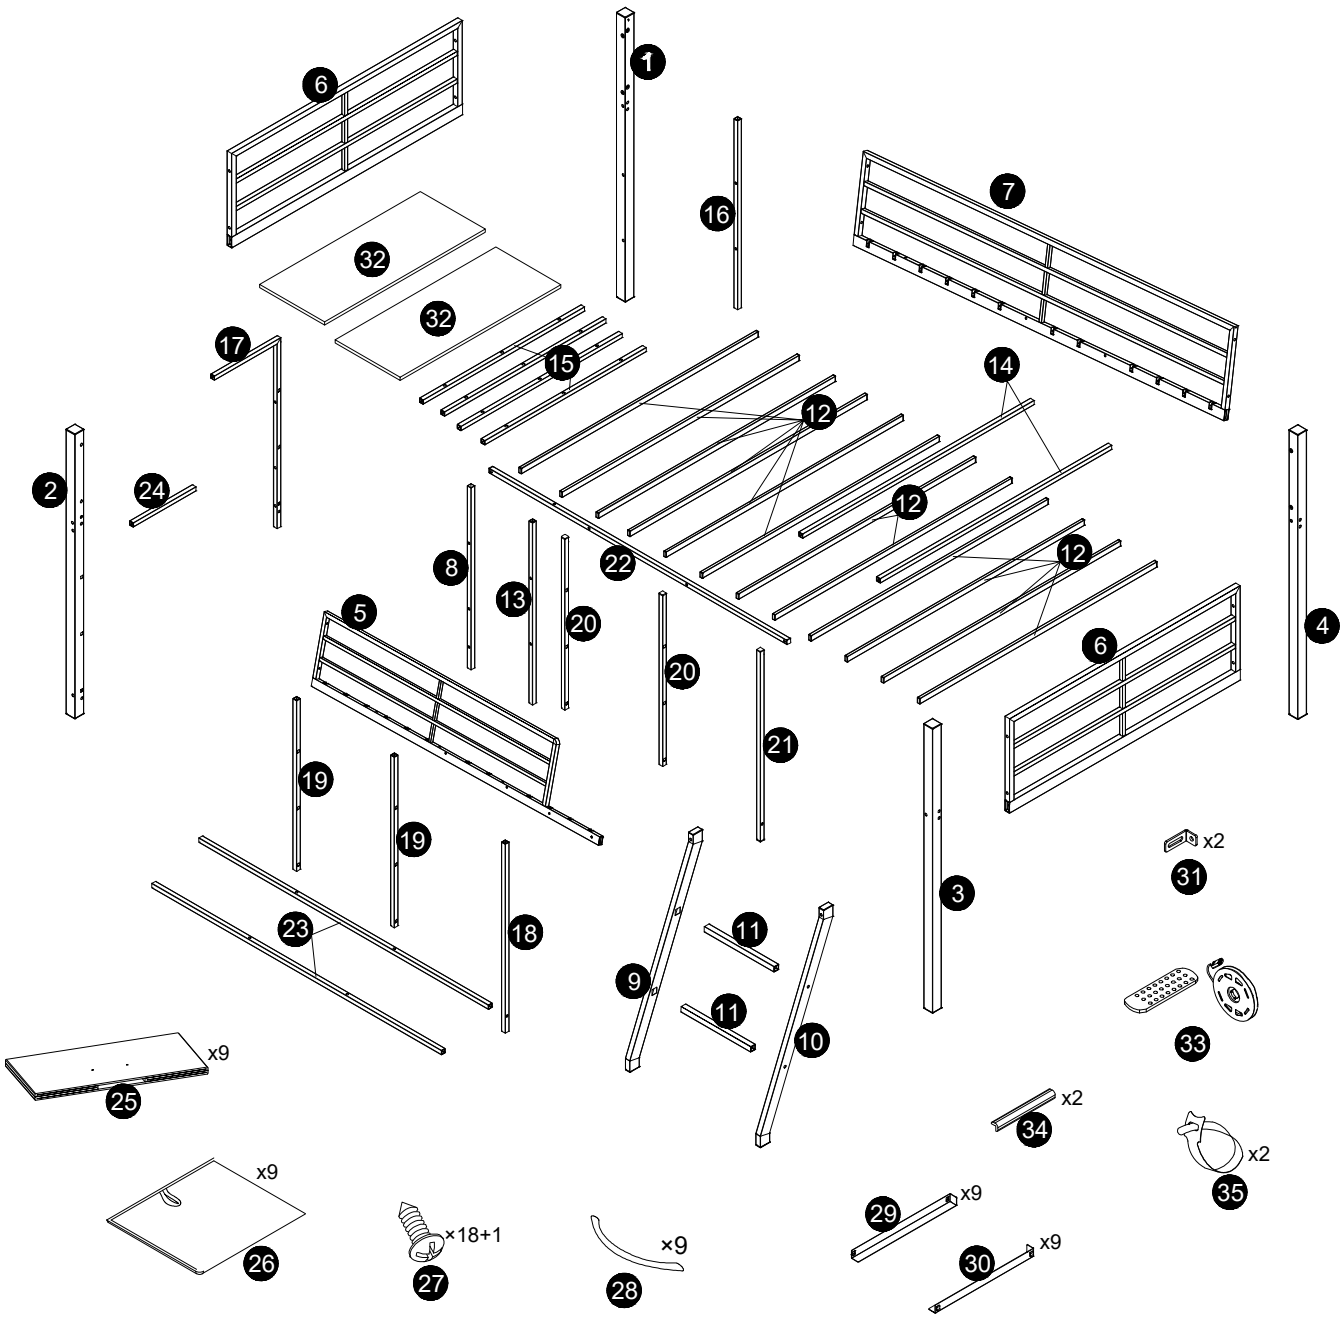

1


Please pay attention to the direction of the hole position.

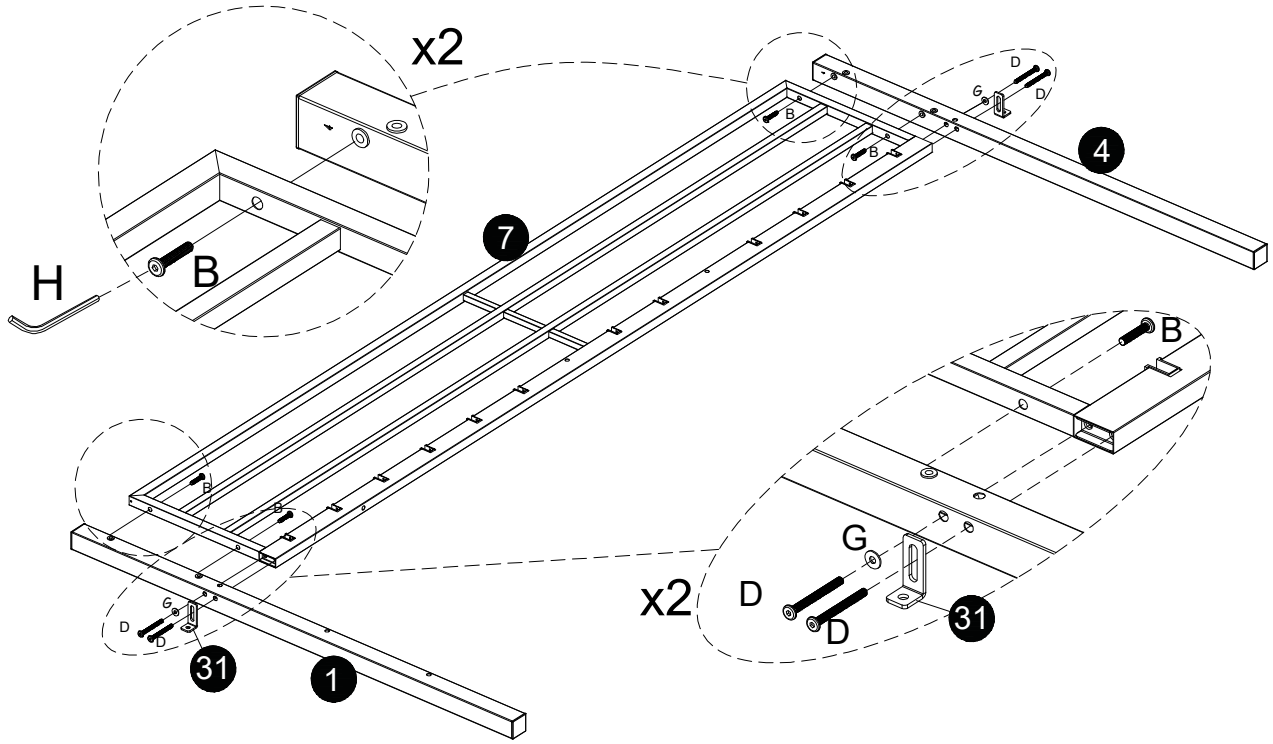

D M6*60 x4	B M6*30 x4	G M6 washer x2

Be careful not to overtighten the screws.


2

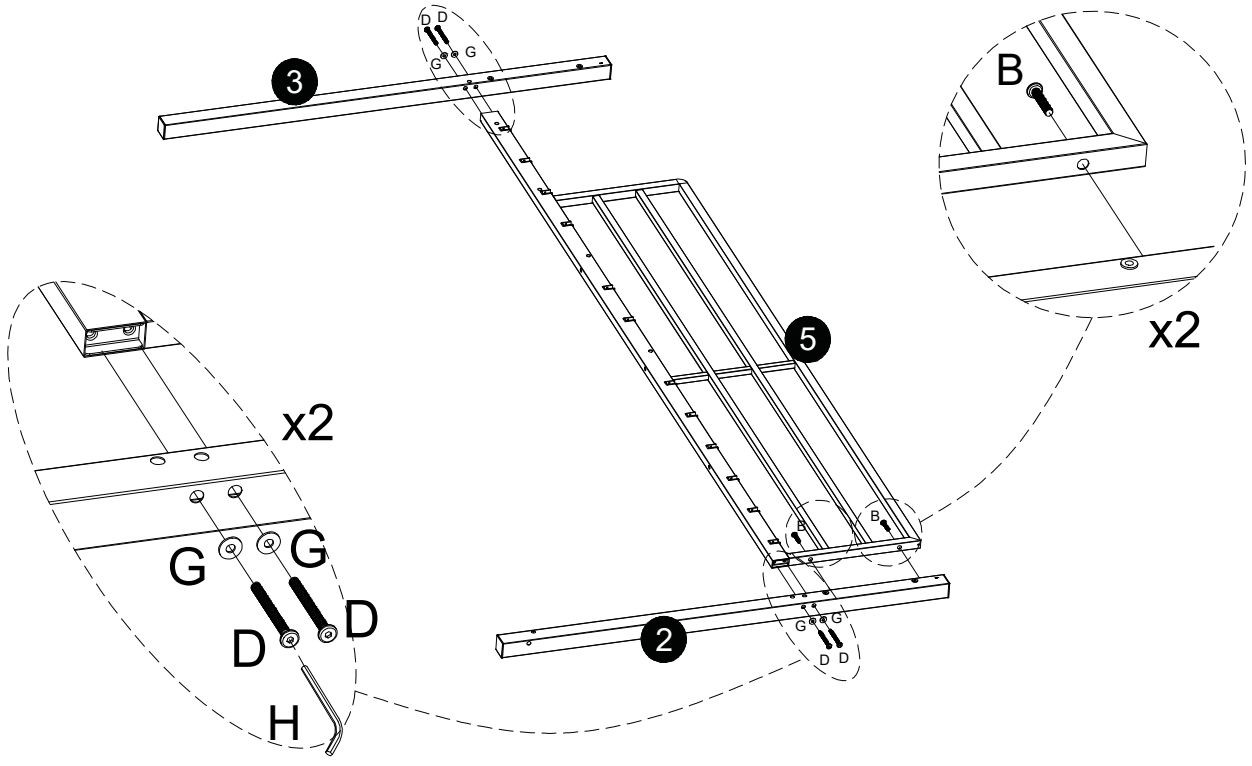

D M6*60 x4	B M6*30 x2	G M6 washer x4

Be careful not to overtighten the screws.


3

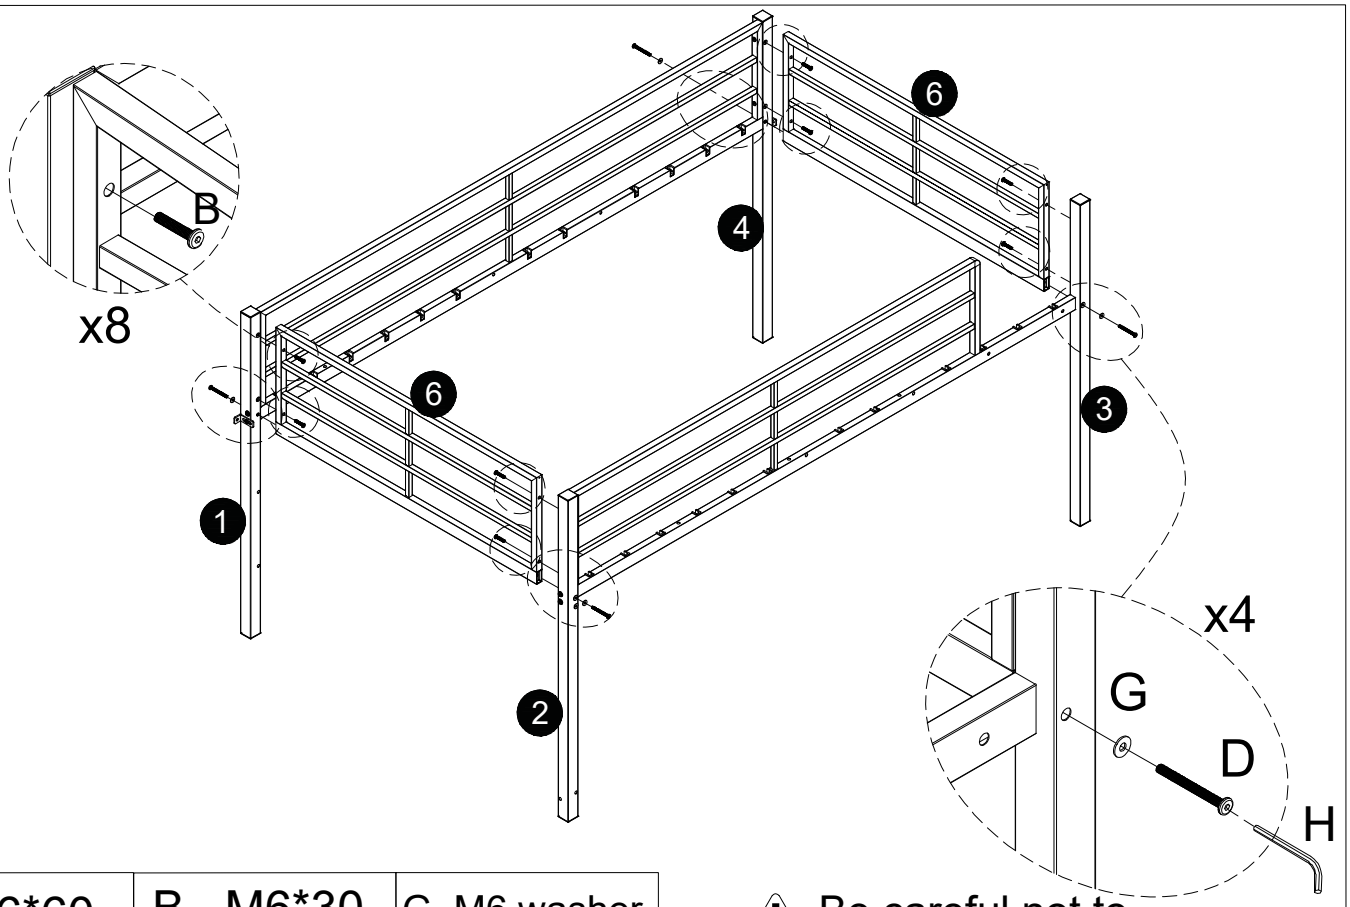

D M6*60 x4	B M6*30 x8	G M6 washer x4


Be careful not to overtighten the screws.

4

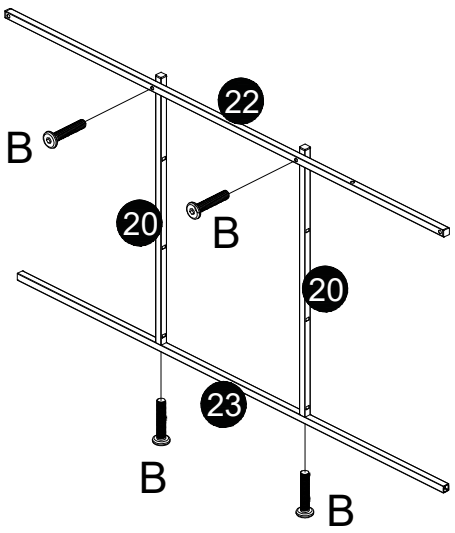


B M6*30 x4

5

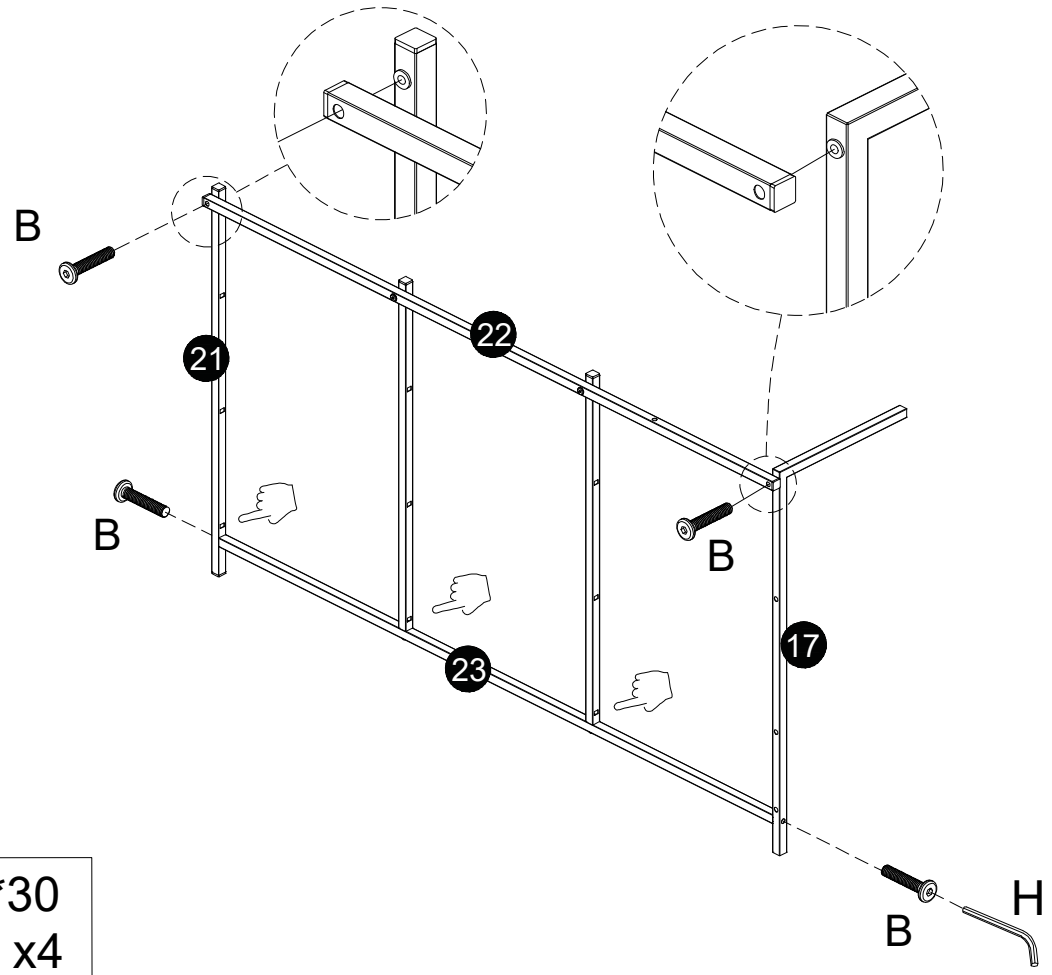

B M6*30 x4


6

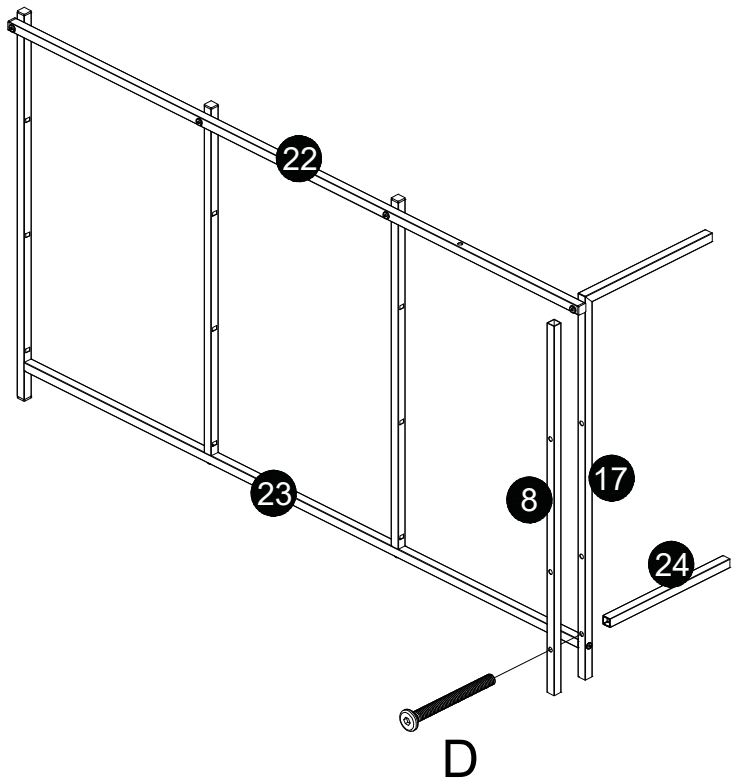

D M6*60 x1


⚠ Be careful not to overtighten the screws.

7

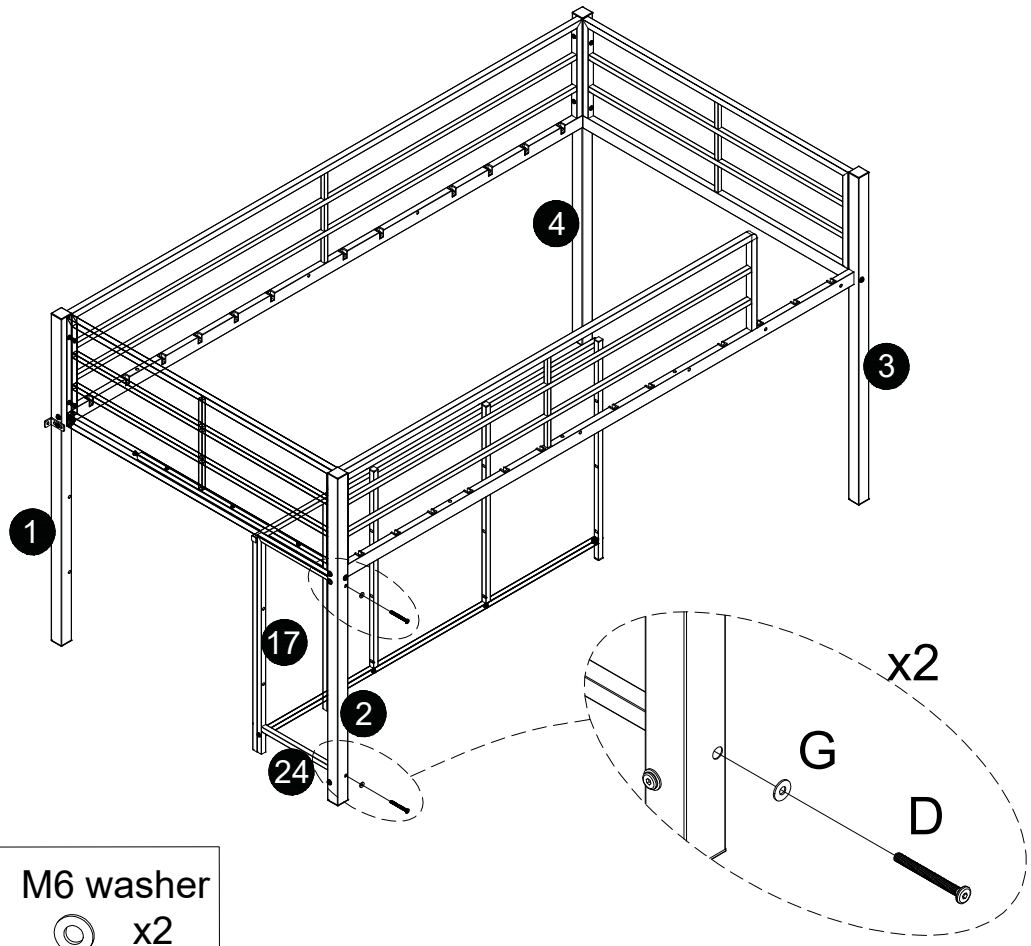


D M6*60 x2	G M6 washer x2

8

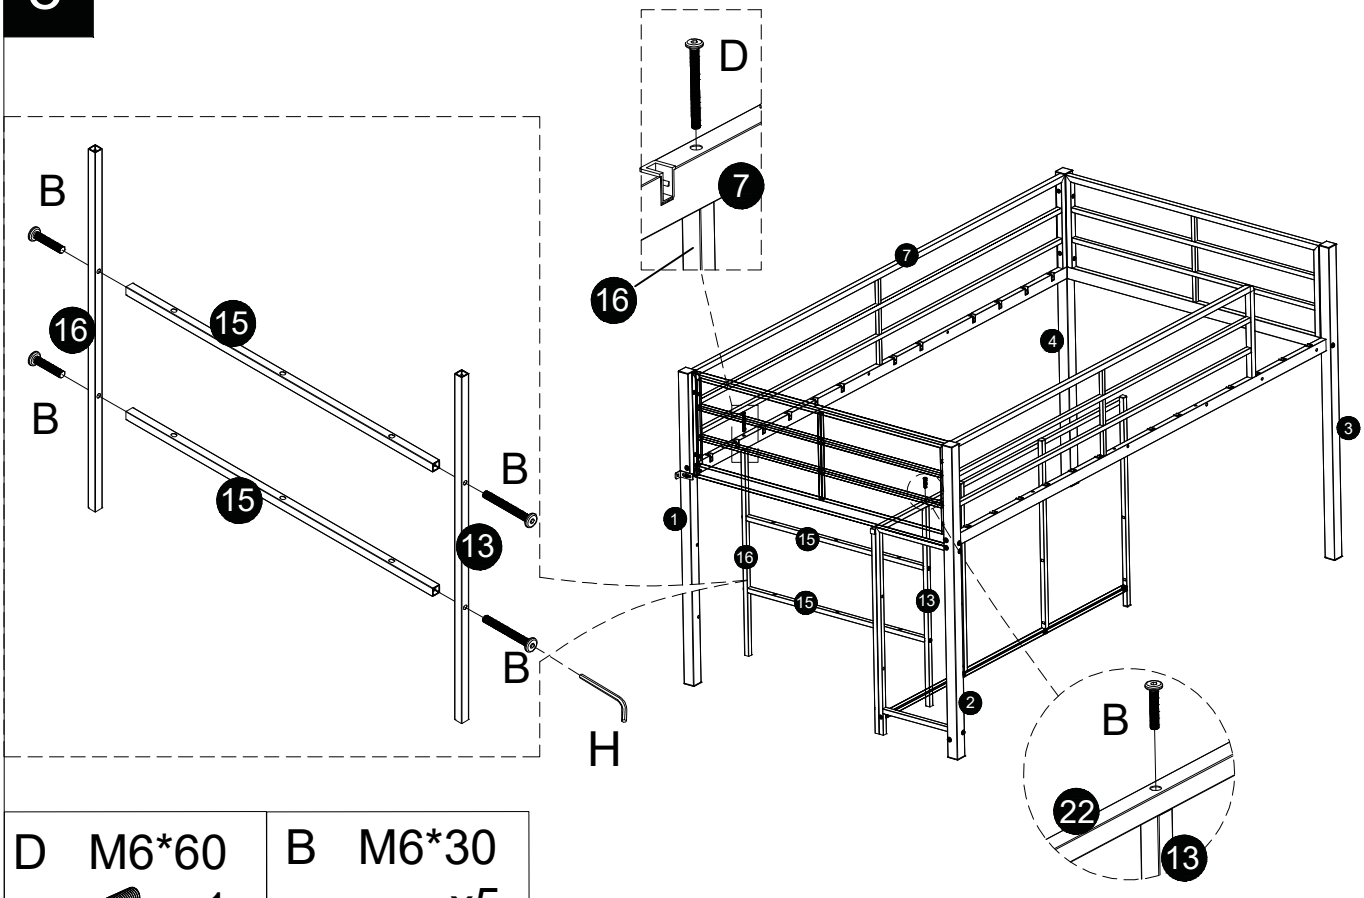


D M6*60 x1	B M6*30 x5

9

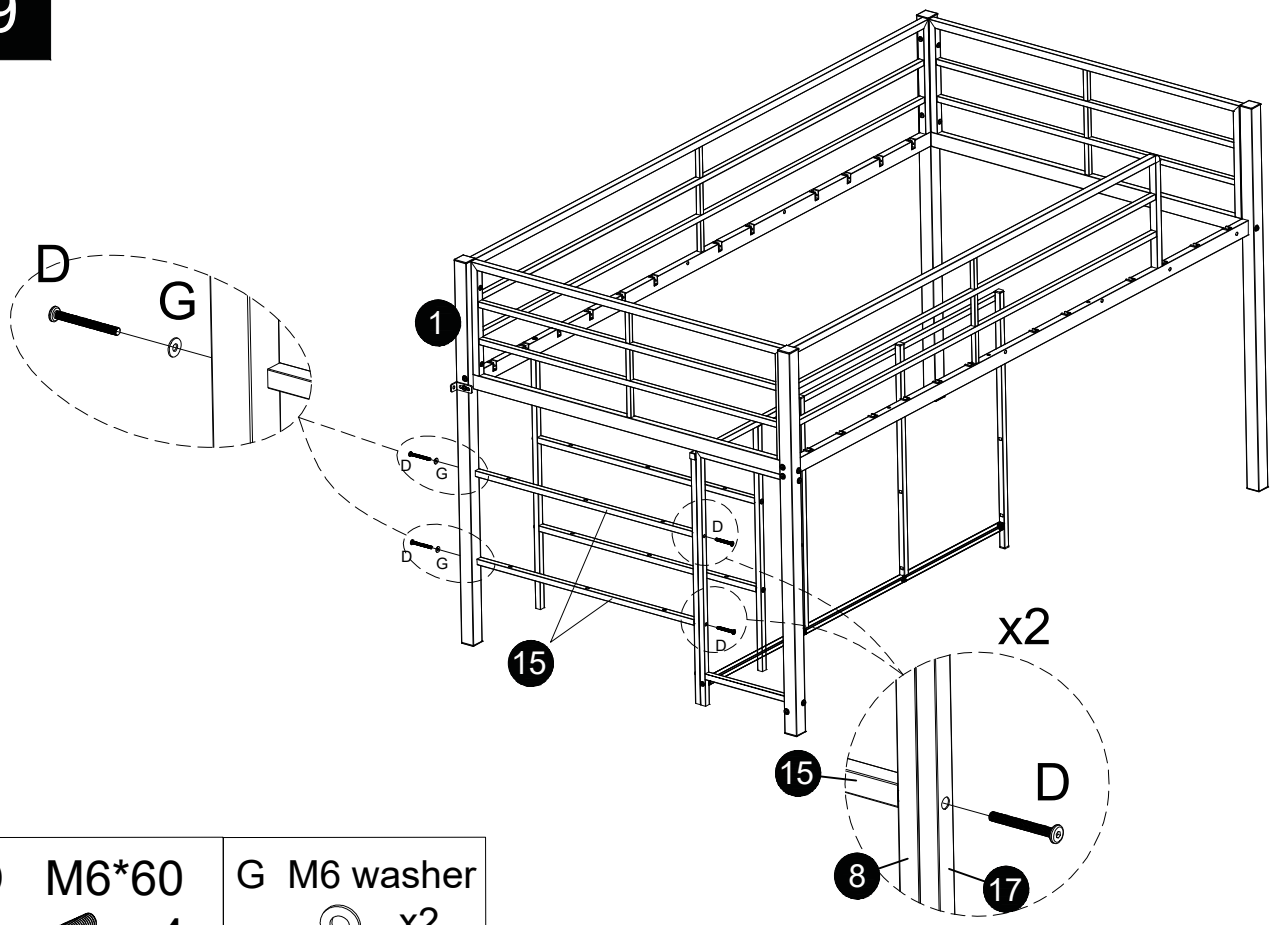


D M6*60 x4	G M6 washer x2

10

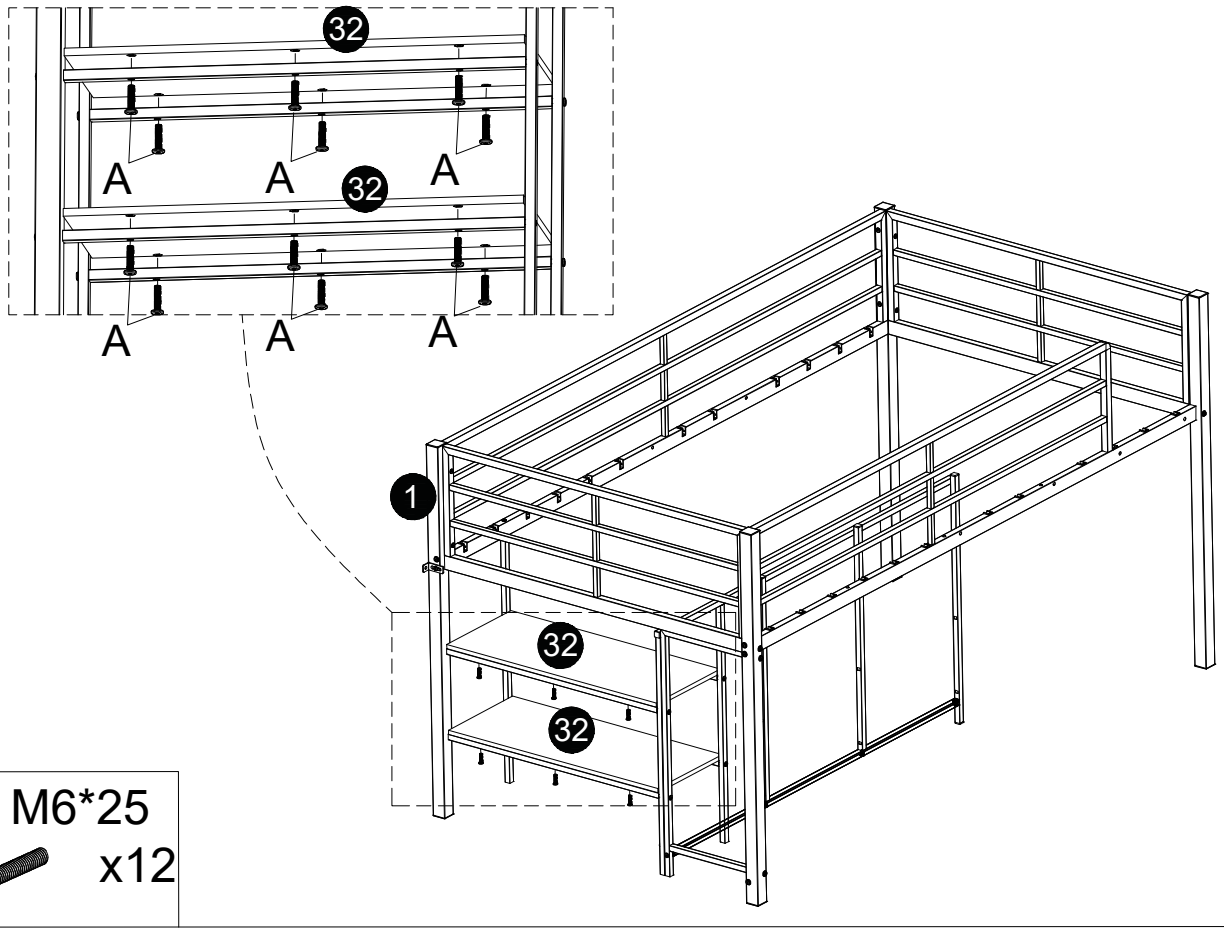


A M6*25 x12

11

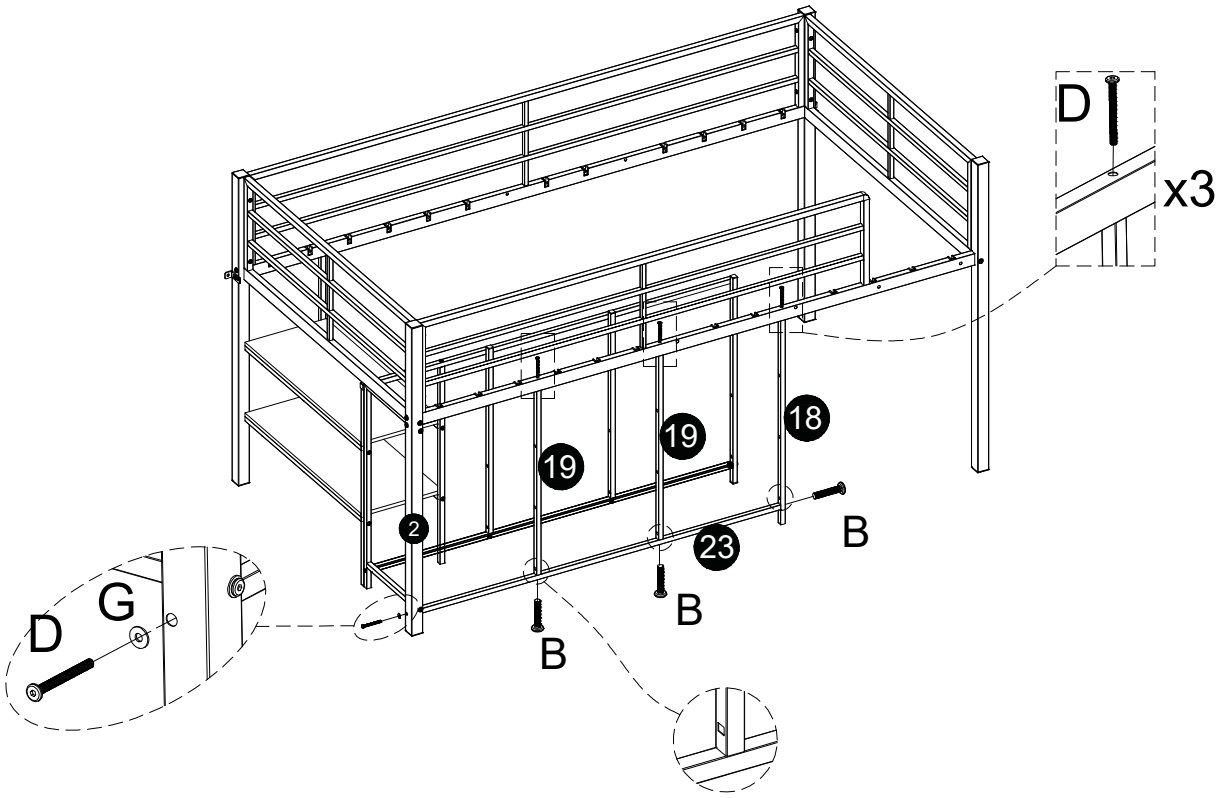


D M6*60 x4	B M6*30 x3	G M6 washer x1

12

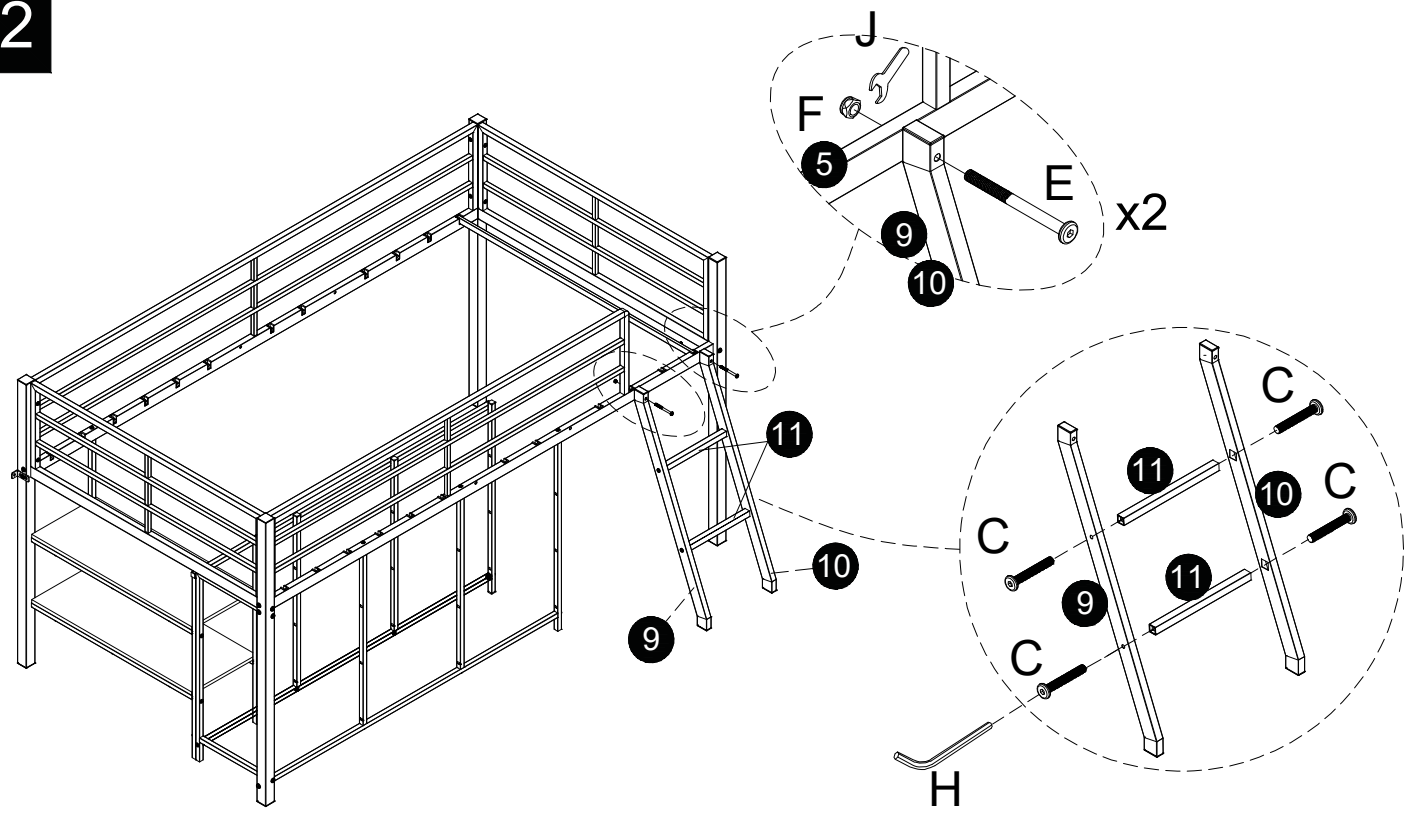


E M6*70 x2	C M6*40 x4	F M6 nut x2

13

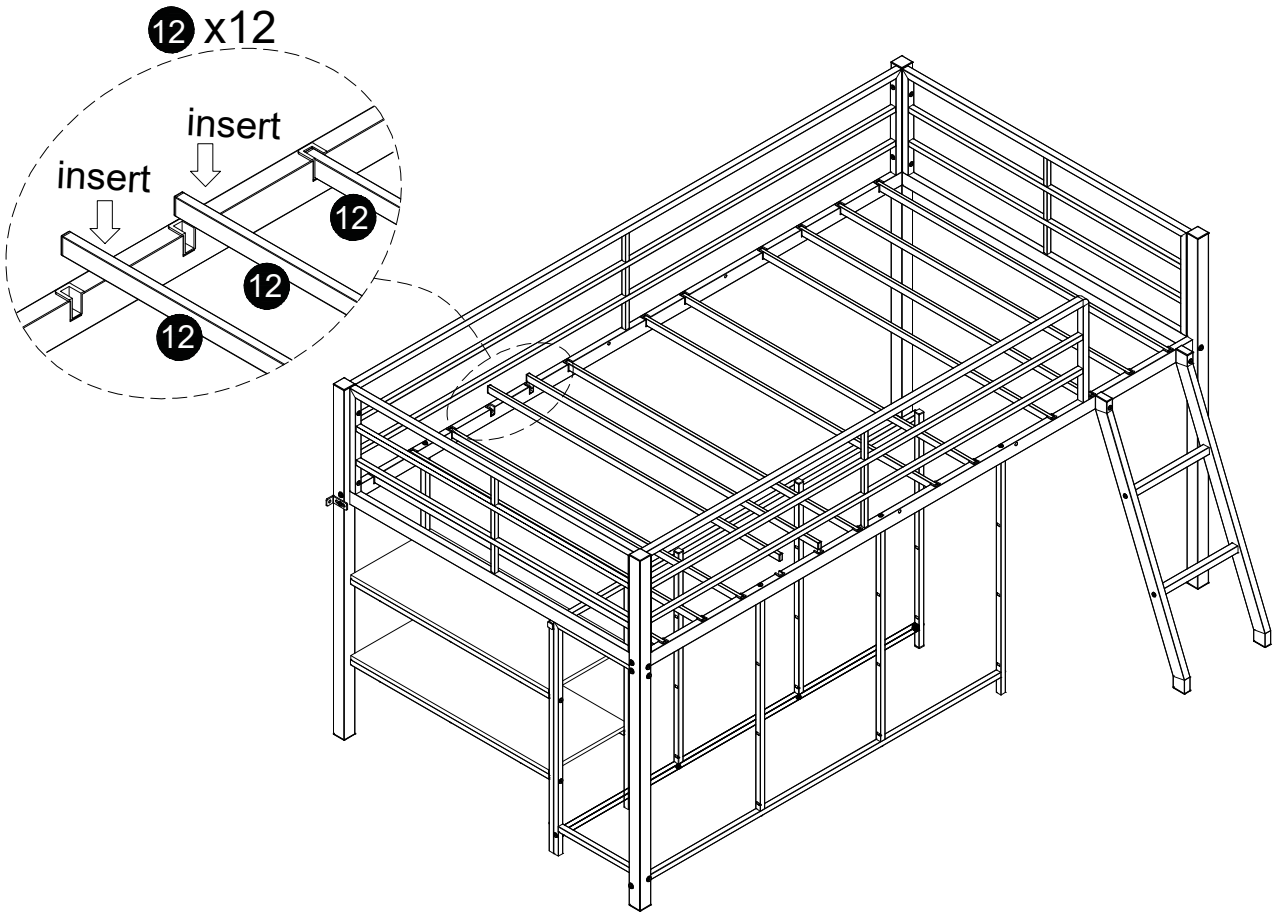


14

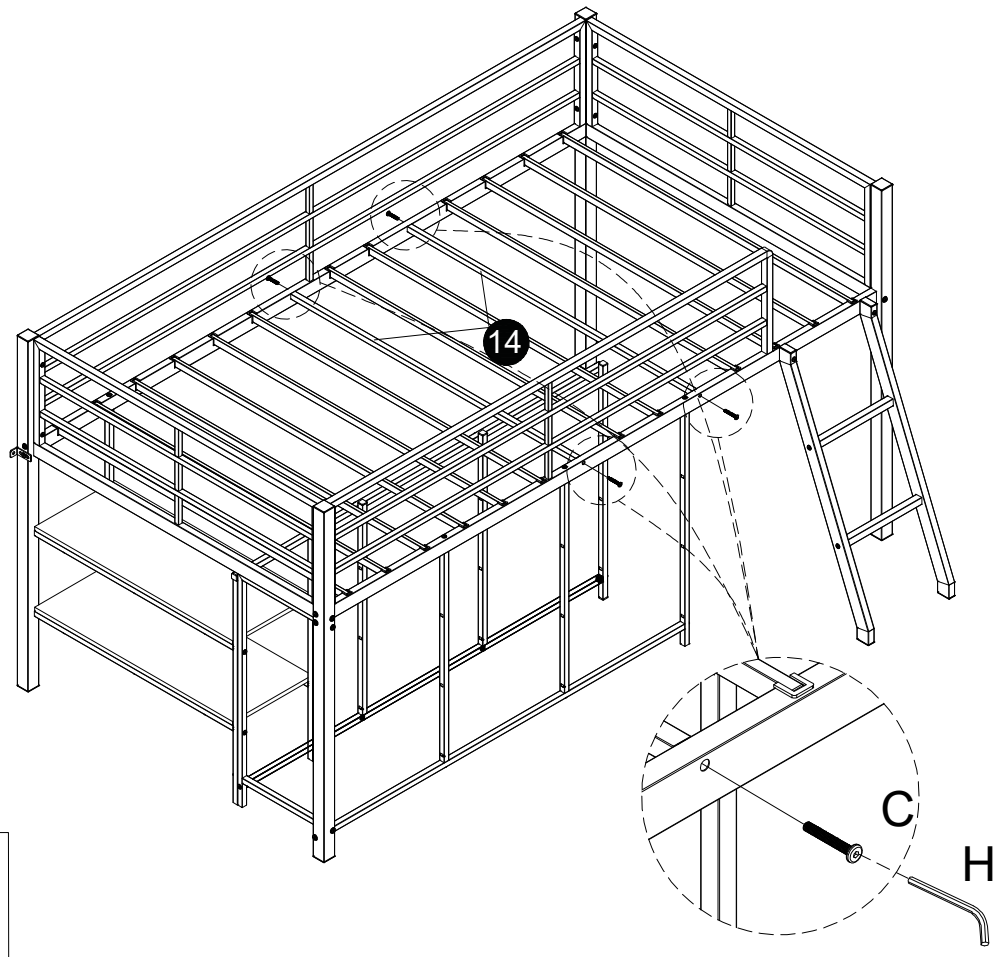


C M6*40 x4



15

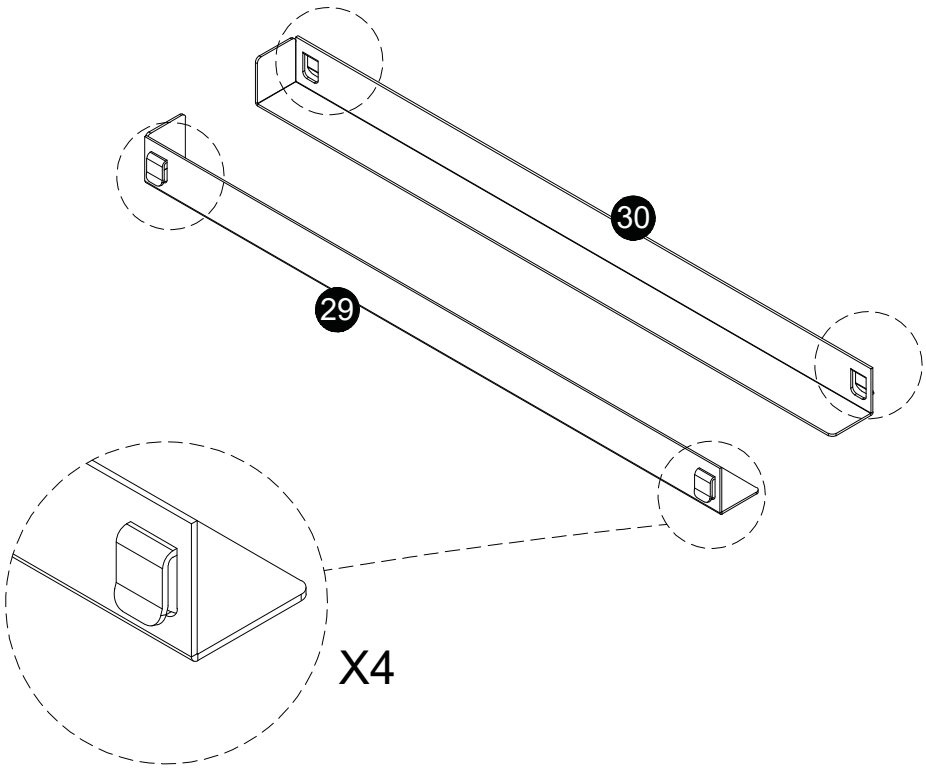



Check here before installation, if there is deformation due to squeezing, please adjust it with tools to avoid affecting normal installation.

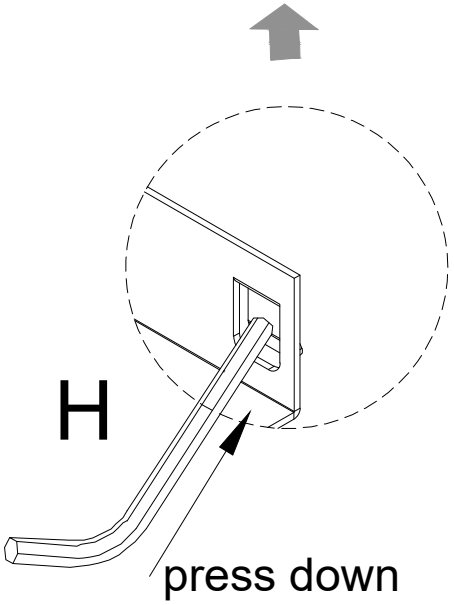


Please fine-tune in this direction to make it easier to install.

16

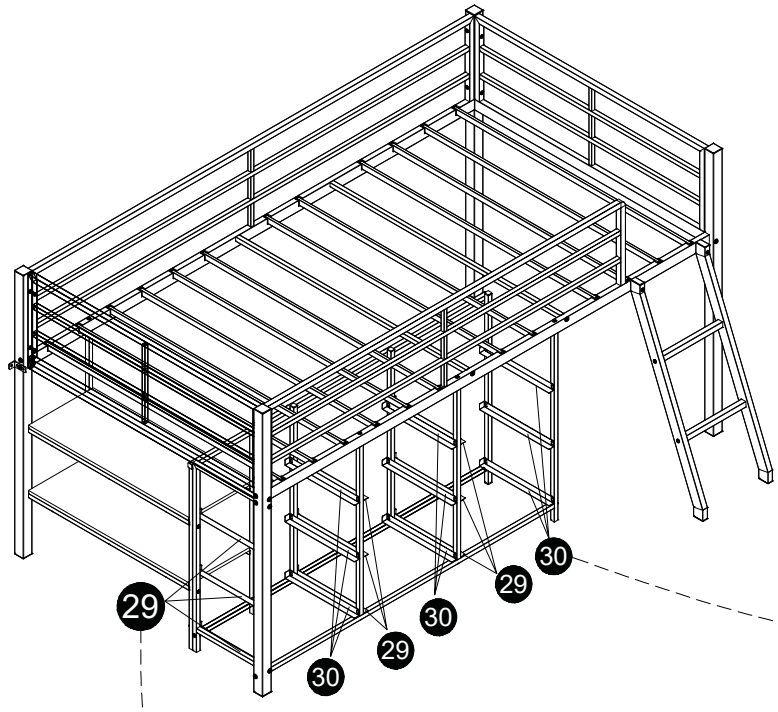

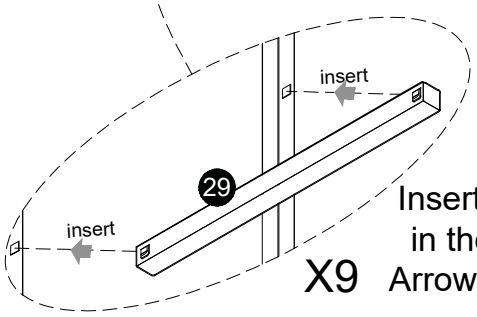


X9 Insert the square hole in the direction of the Arrow and press down

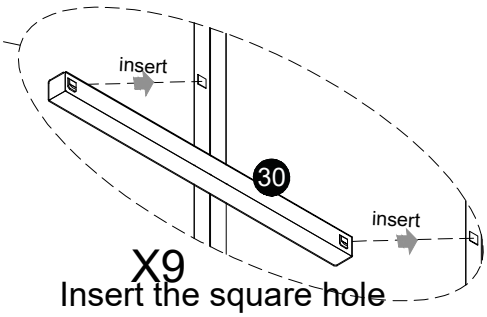


X9 Insert the square hole in the direction of the Arrow and press down




*NOTE:Tighten the screws that were not tightened before.

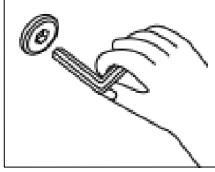


17

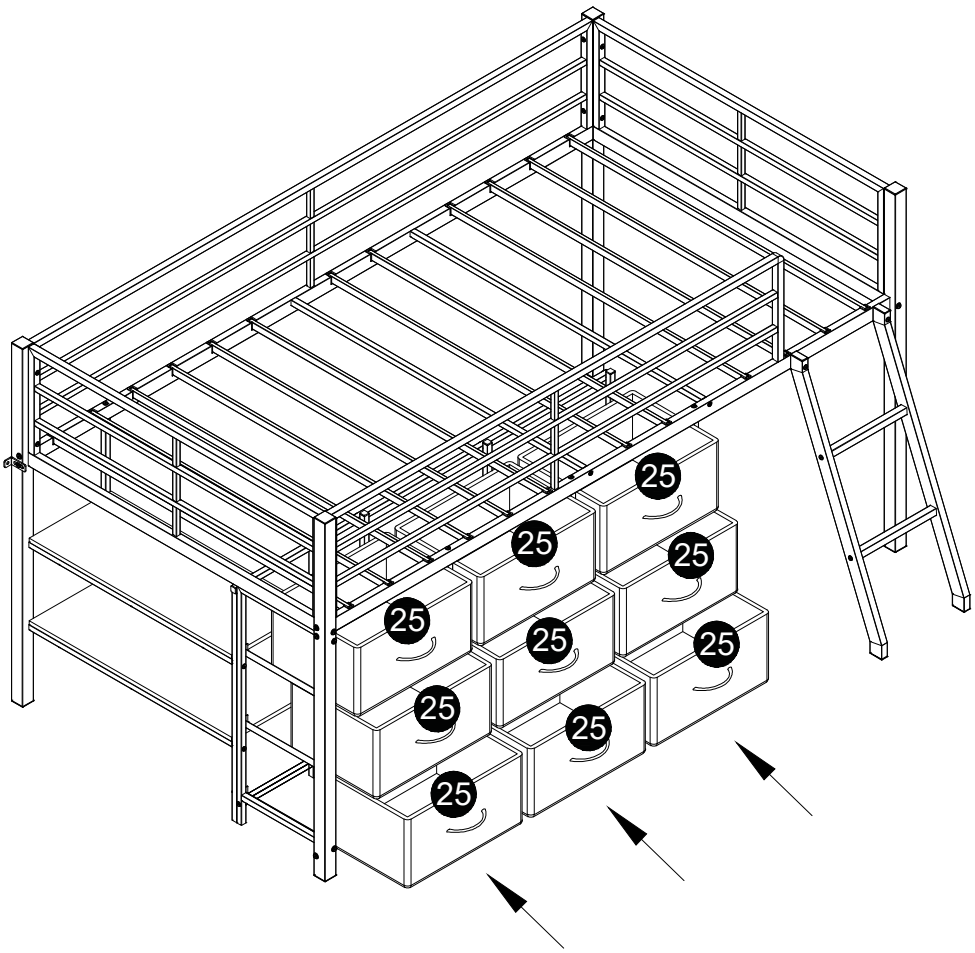


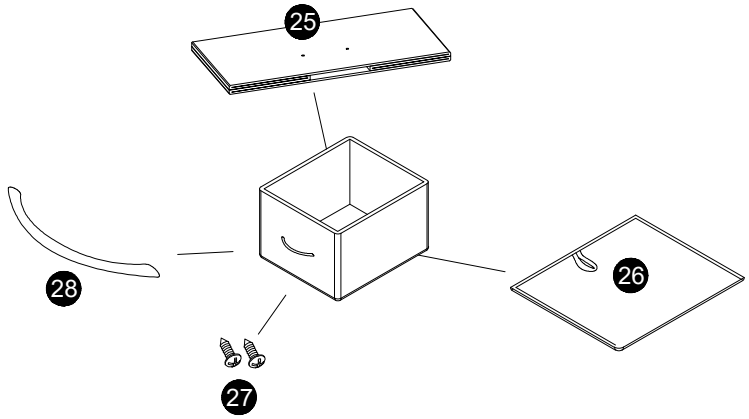


Step:a

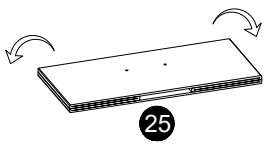

Step:b

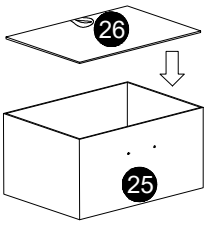


Step:c

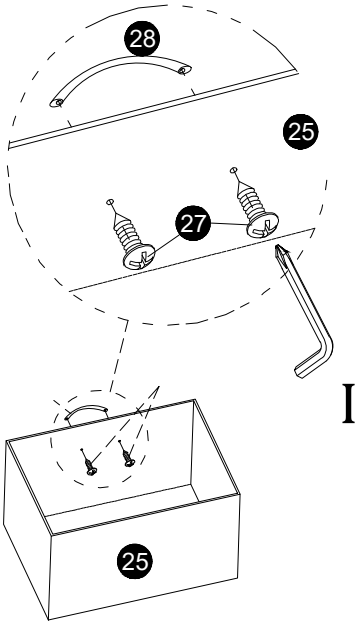


I


18

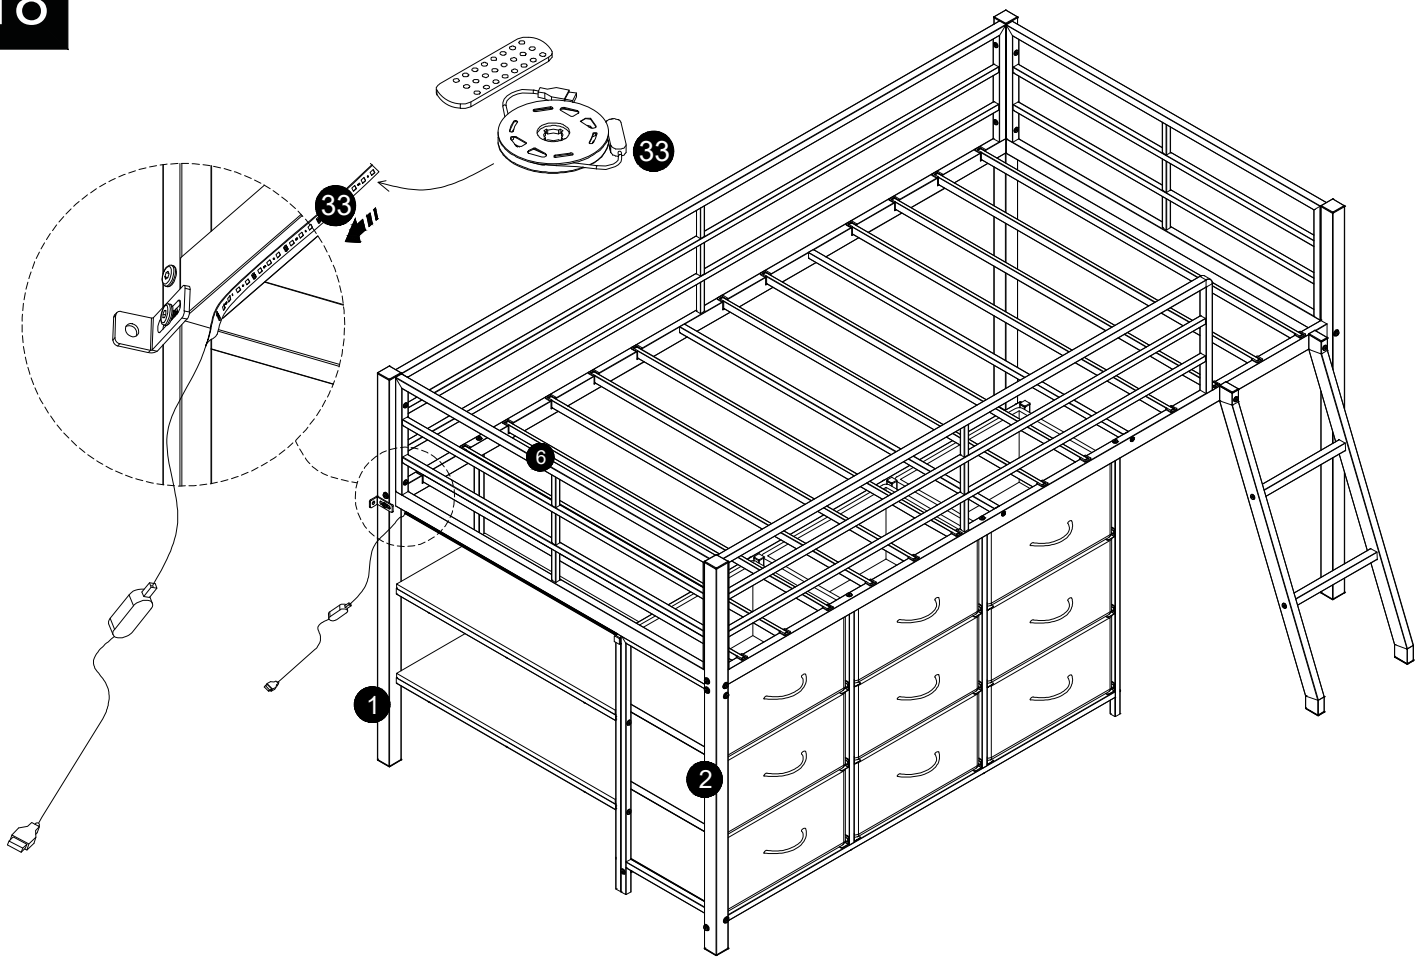


19

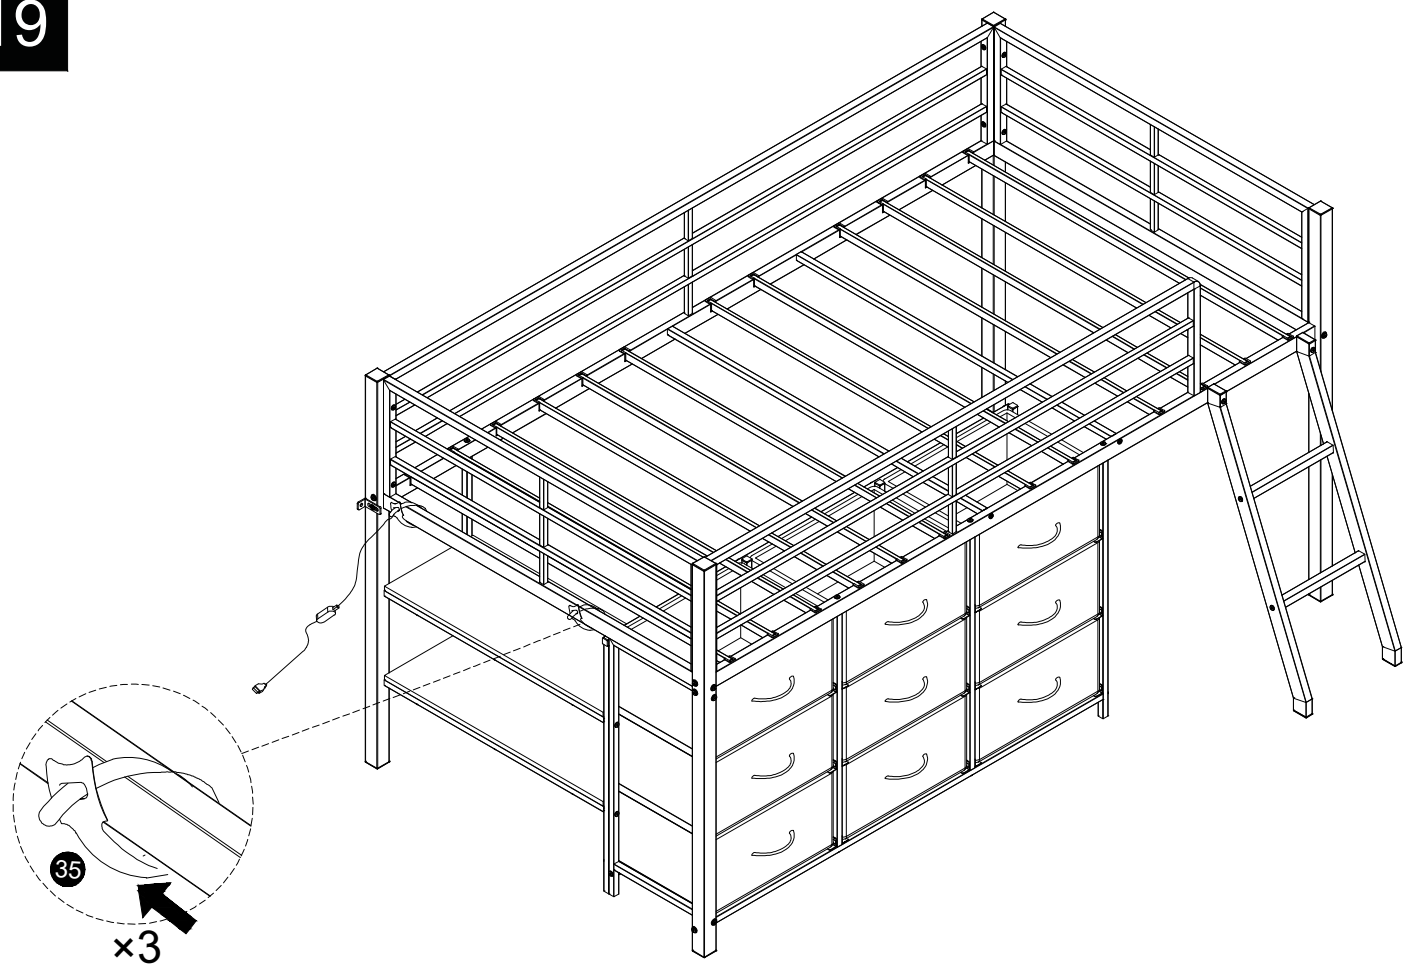


20 Positioning

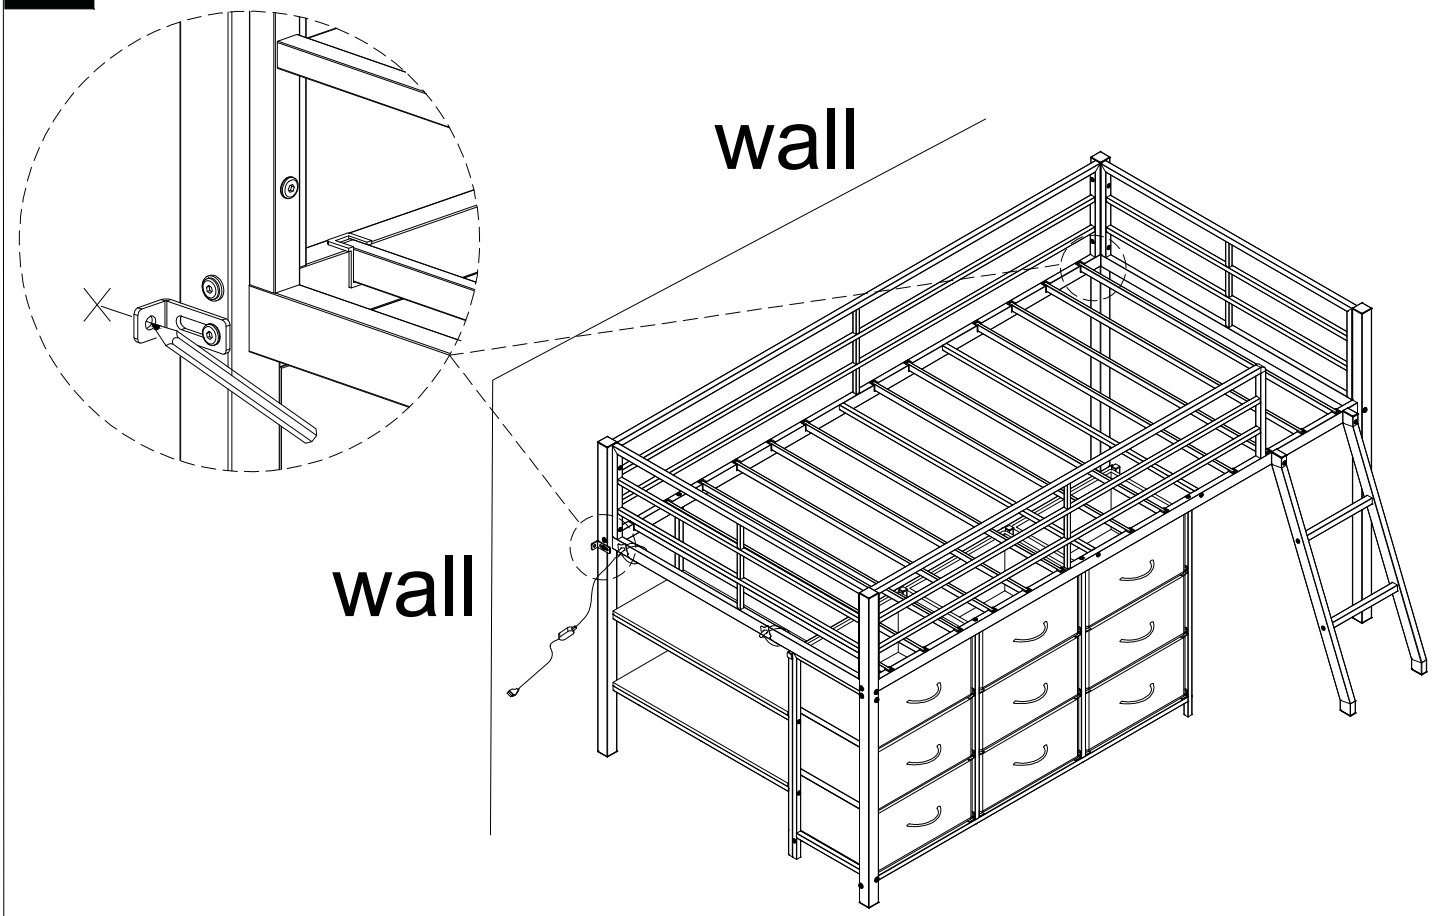


21 Drilling

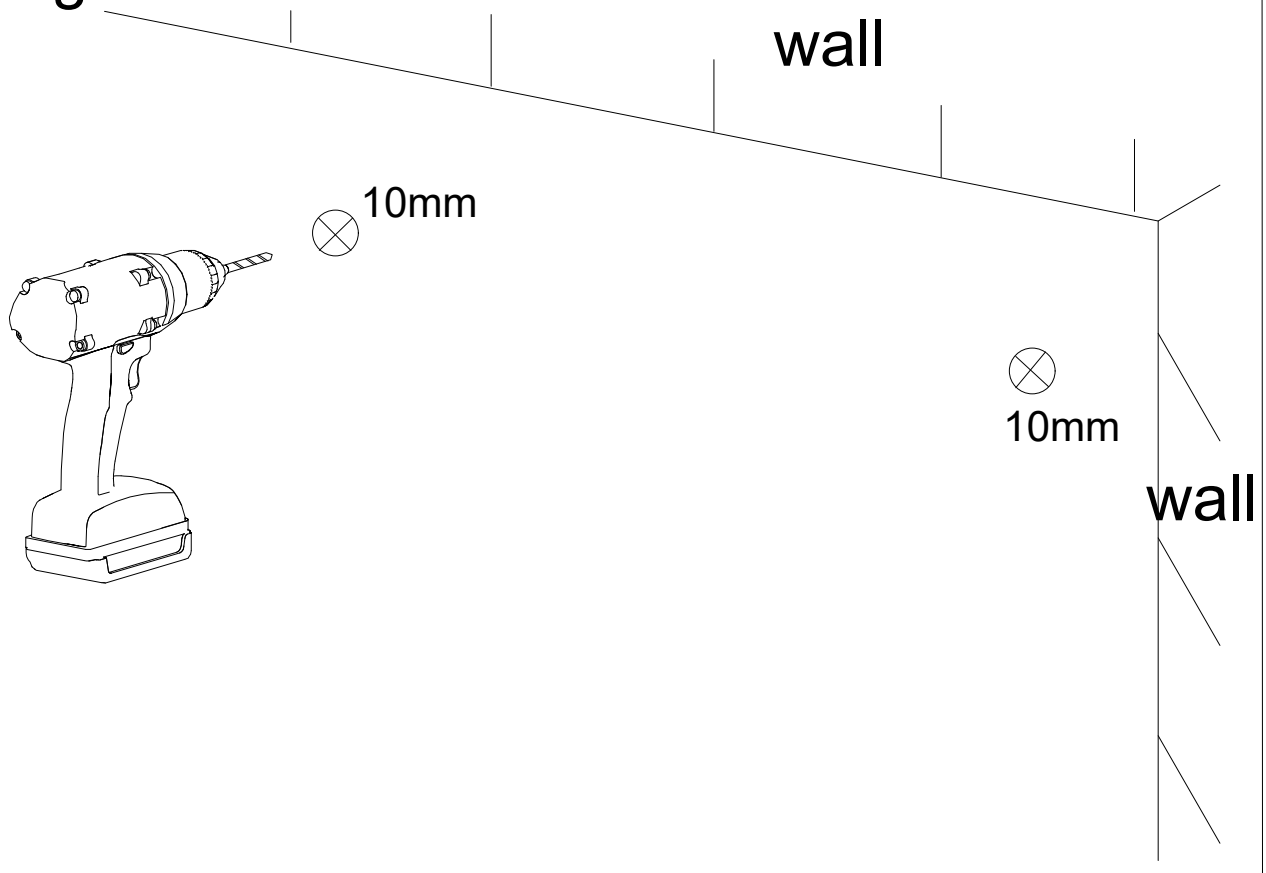


22

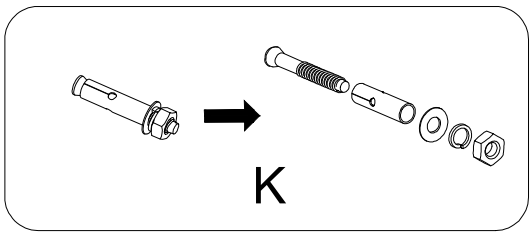

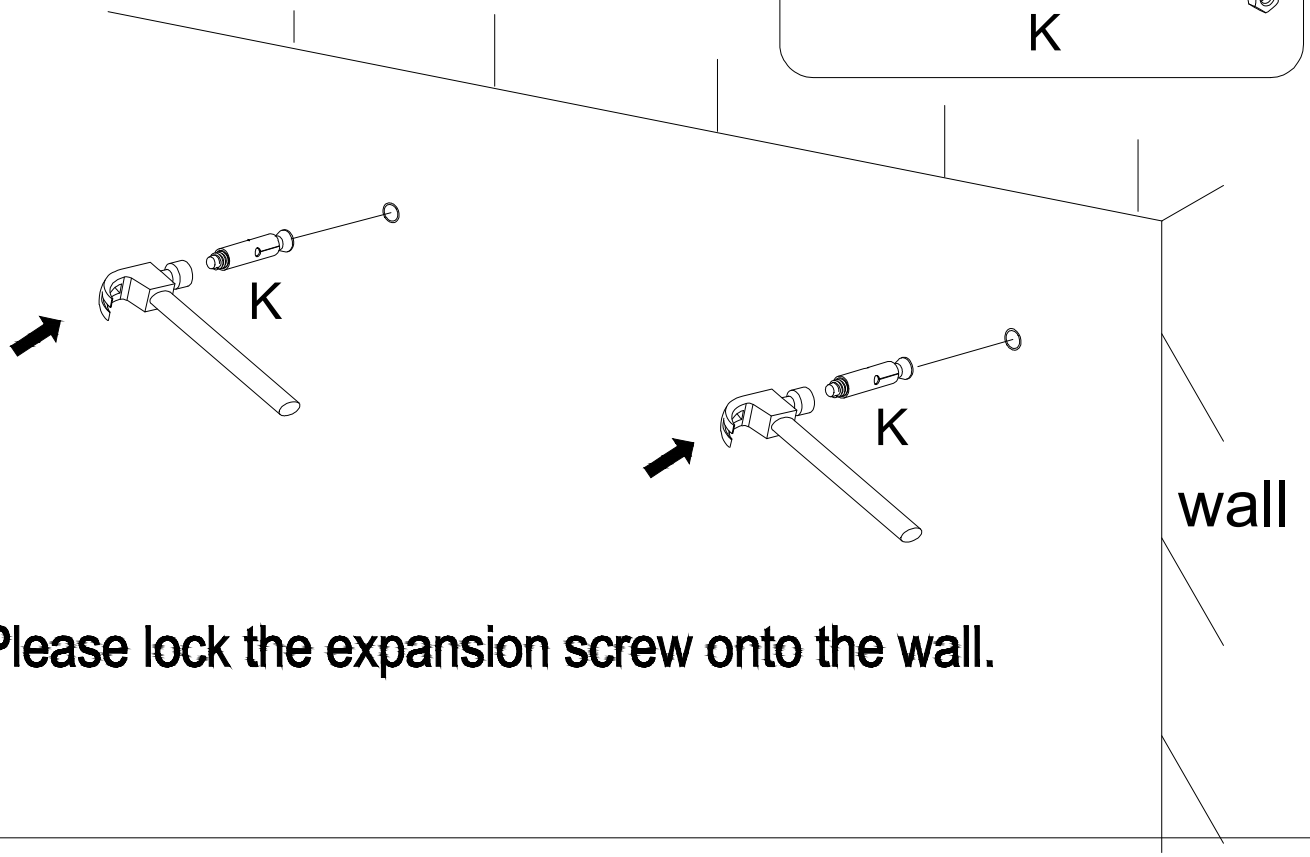


Please lock the expansion screw onto the wall.


23

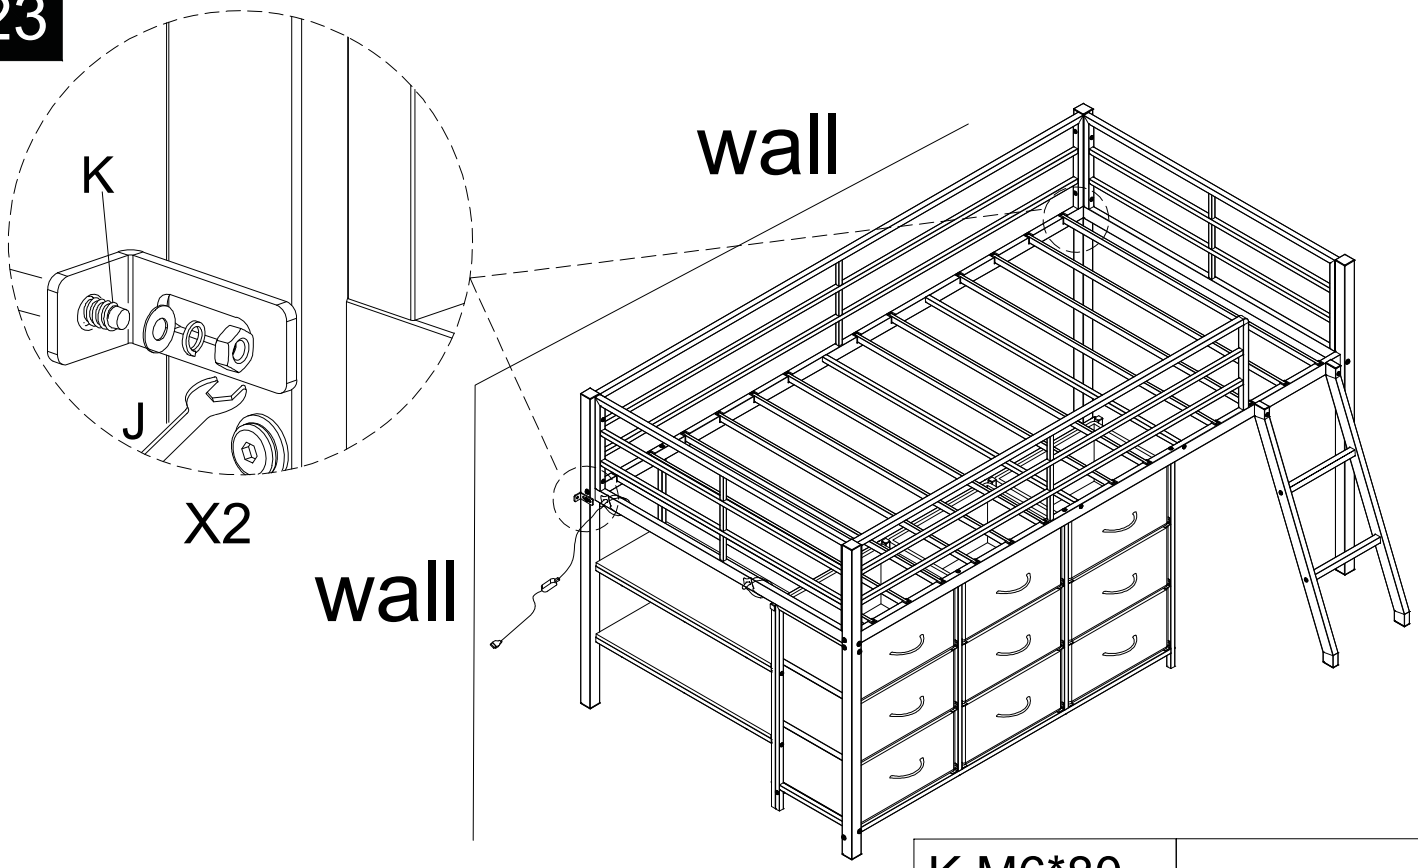

K M6*80 X2	J 4# X1


24

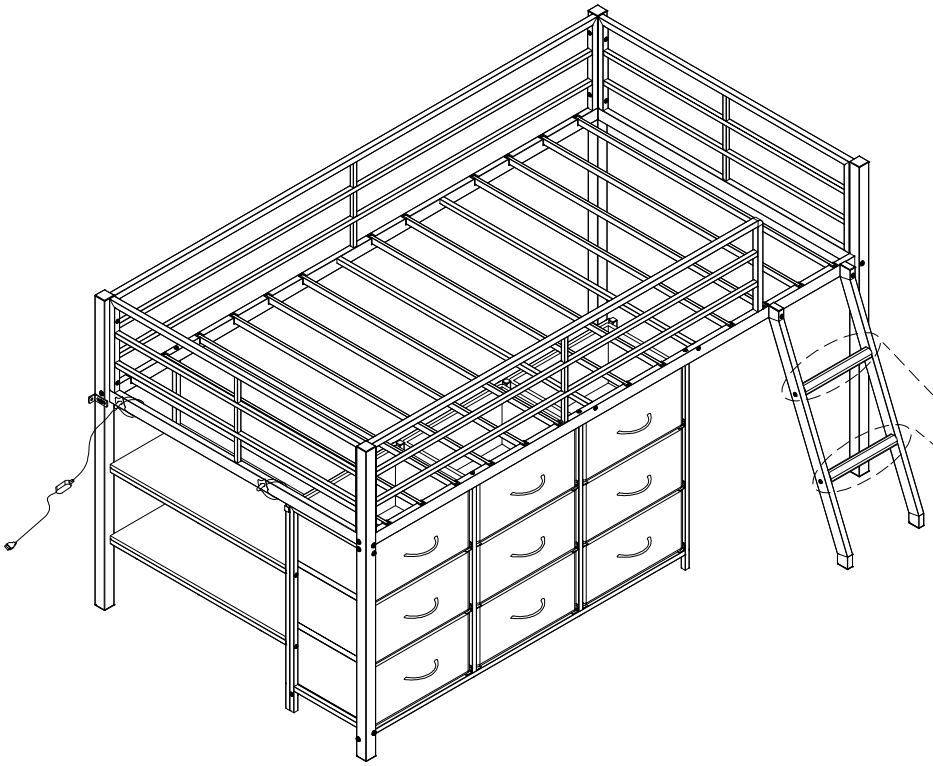

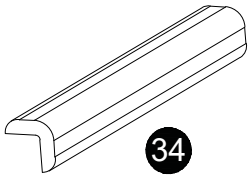

X2


34

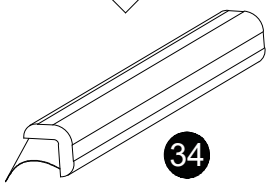

X2

34

After tearing the tape off the sponge, attach the sponge to the stair tube

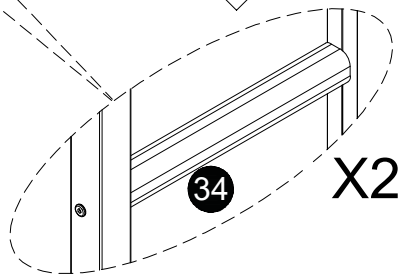

34

X2