
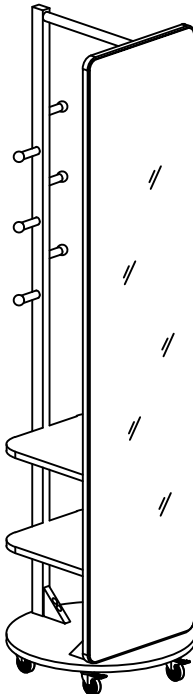


Illustration of Installation		List of Parts					List of Hardware				
Item No.	CYJ023	No.	Name	Graph	Size	Amount	No.	Name	Graph	Size	Amount
Name:	Full Length Mirror 023 Solid Wood Mobile (Large Size)	1	Mirror backplane		1706*400*23MM	1	A	Hexagonal overmoulding wire		M7*35MM	4
Caution: (Installed) in the parts table and hardware table means that it has been installed in the finished product, and is not in the hardware bag!!! 		2	Base		∅500*18MM	1	B	Hexagon socket head screw		M6*35MM	12
		3	Laminate		390*337*18MM	2	C	Hexagon socket head screw (Installed)		M6*25MM	4
		4	Back rod		1706*40*25MM	1	D	Hexagon wrench		M4*57MM	1
		5	Reinforcement strip (Installed)		370*40*18MM	2	E	Sticker		∅20*1MM	3
		6	Triangular wood		113*56.5*18MM	3	F	Casters with brake		∅25MM, Total height 43MM	2
		7	Hanging rod		337*∅25MM	1	G	Casters without brake		∅25MM, Total height 43MM	3
		8	Handle		82*∅27MM	6	H	Open end spanner		Open14MM	1
							I	Flat shims		∅16MM	5
This product has passed the wood inspection and paint inspection in full compliance with the national quality inspection standards. After passing the inspection, it will be released from the factory and sold after confirming that the packaging is intact. For better service, please feel free to give us your opinions on after-sales service.		Name:	Wood Furniture	Standard: GB/T 3324 GB/ 18584	Required Workers		Inspector			Page:1-3	
		Qualification:	Pass								
		Grade:	Class 1								


Step 1:

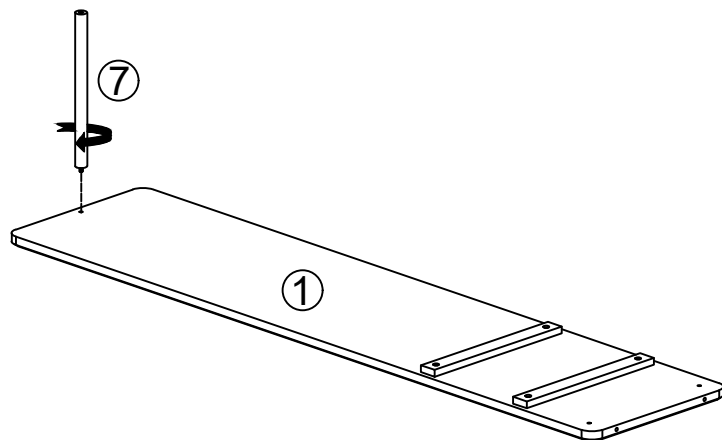

Caution: After unpacking, check the correct number of accessories against the instructions.

Assemble as shown, first twist part 7 clockwise onto part 1.


Step 2:

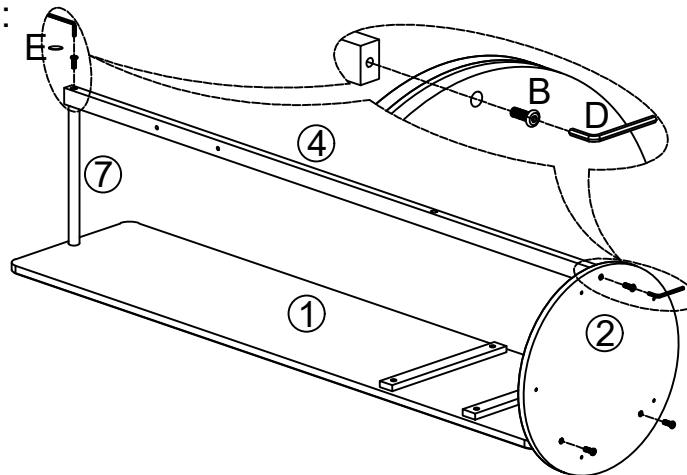

Assemble as shown, first align part 2 with the holes at the bottom of part 1 and part 4 and secure them all with hardware B/D.

Then align the slotted hole of part 4 with part 7 and fix them with hardware B/D, then cover the holes with hardware E.


Step 3:

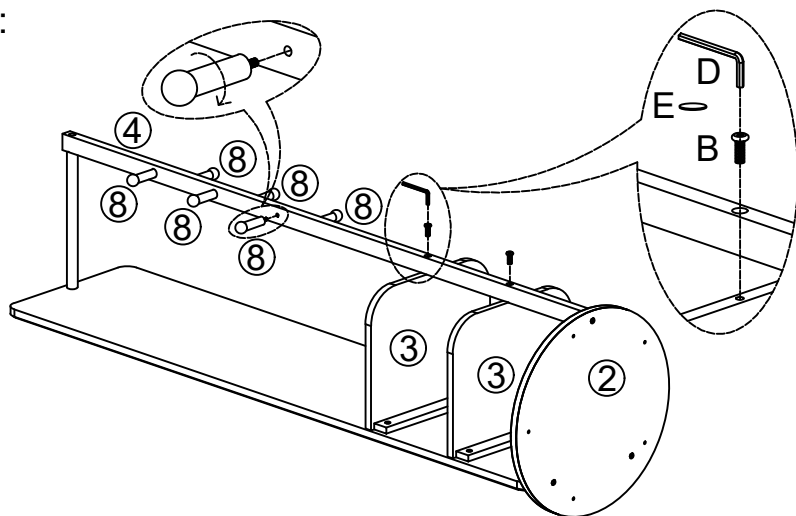

Assemble as shown, first lay part 3 flat to the designated position, align the holes on the end face of part 3 with hardware B/D, and then cover the holes with hardware E.

Then twist part 8 in clockwise direction onto part 4.

Step 4:

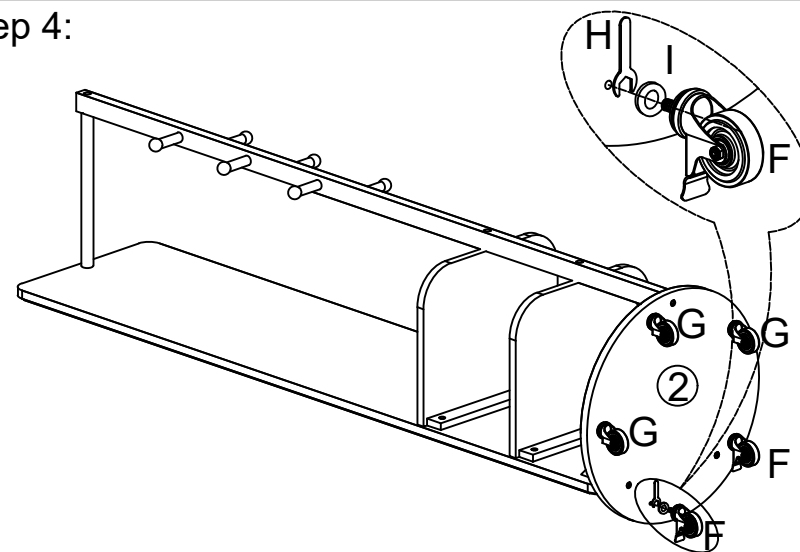

Assemble as shown, align hardware F/G/I with the holes at the bottom of part 2, then use hardware H to tighten by turning in a clockwise direction.

Counterclockwise to remove.

Step 5:

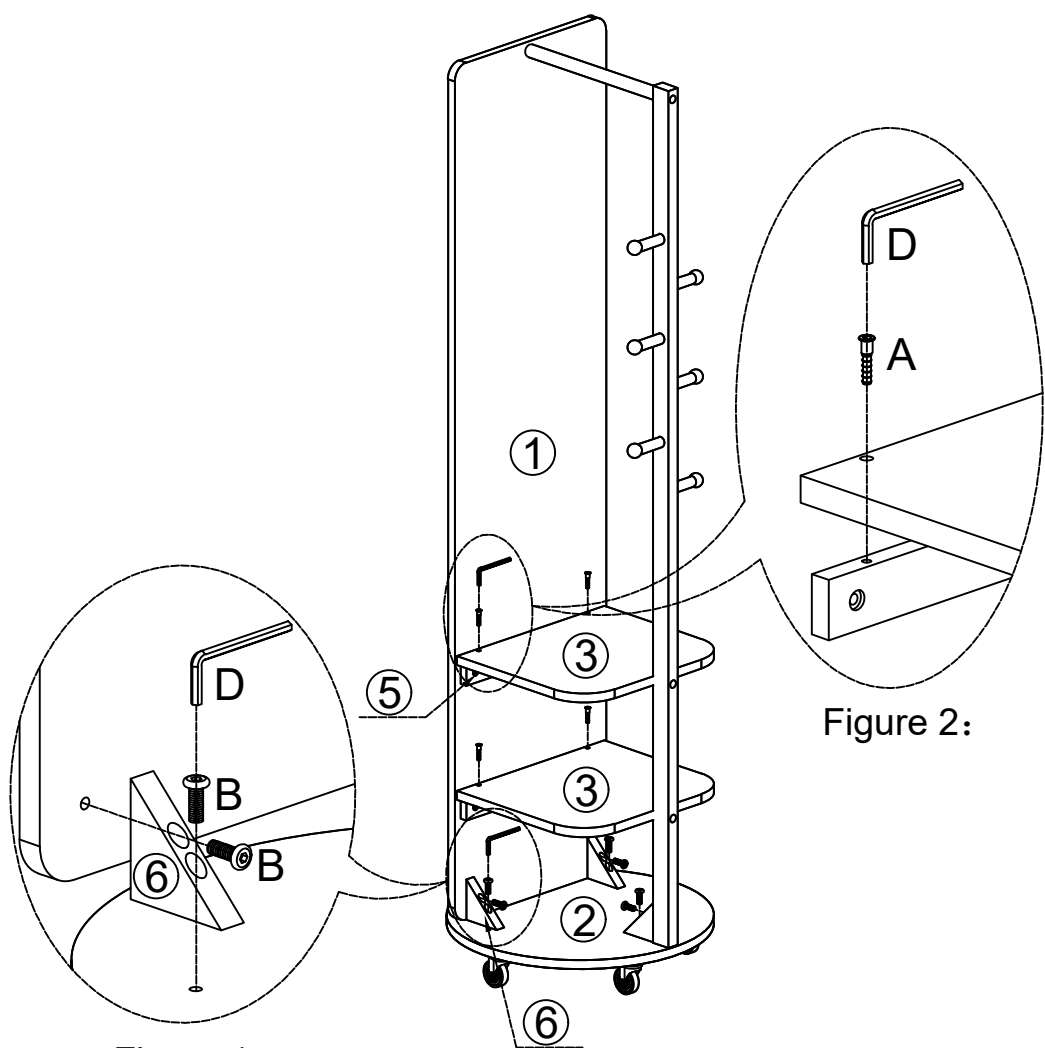



Figure 1:

Figure 2:

Assemble as shown in Figure 1, first align the holes of part 6 with the holes of part 1/part 2/part 4 and secure with hardware B/D.

Then assemble part 3 on top of part 5 with hardware A/D as in figure 2.

Step 6:

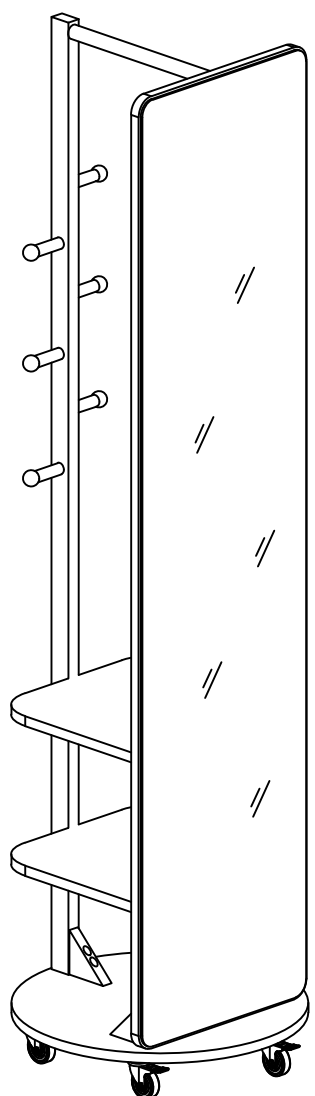

Assembly complete.