



Installation & Assembly

Notice:
1.Follow the installation instructions. Please confrm all accessories are preset before installation.
2.Do not fully tinhten the screws during initial assembly.Fully tighten screws only once all pieces which are correctly assembled.
3.If you encounter any problems during installation, please contact our customer service.
4.Please unbox the item from the side with an open-label and put a carpet on the foor to avoid seratching it.




















 Recommended installers:2	 Put a carpet on the floor before unpacking	 Estimate installation time：60 minutes

ASSEMBLY INSTRUCTION




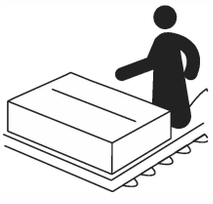
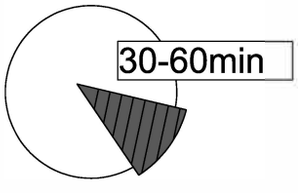
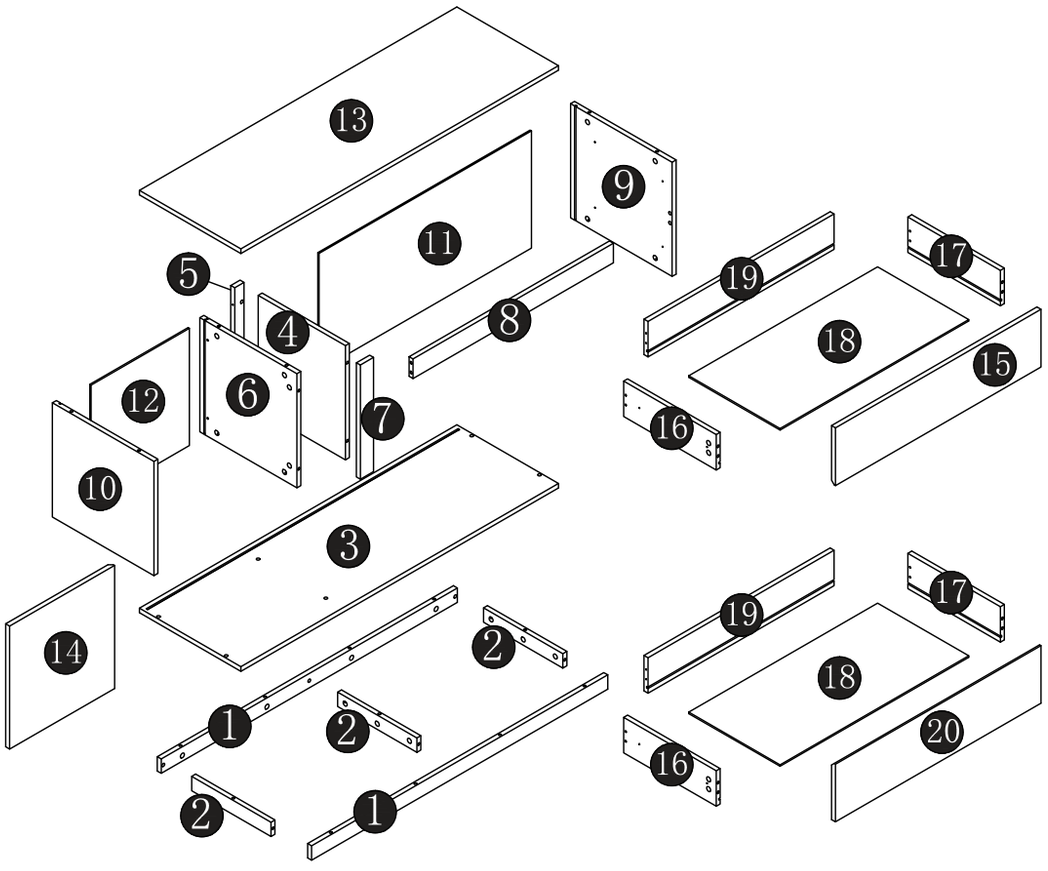








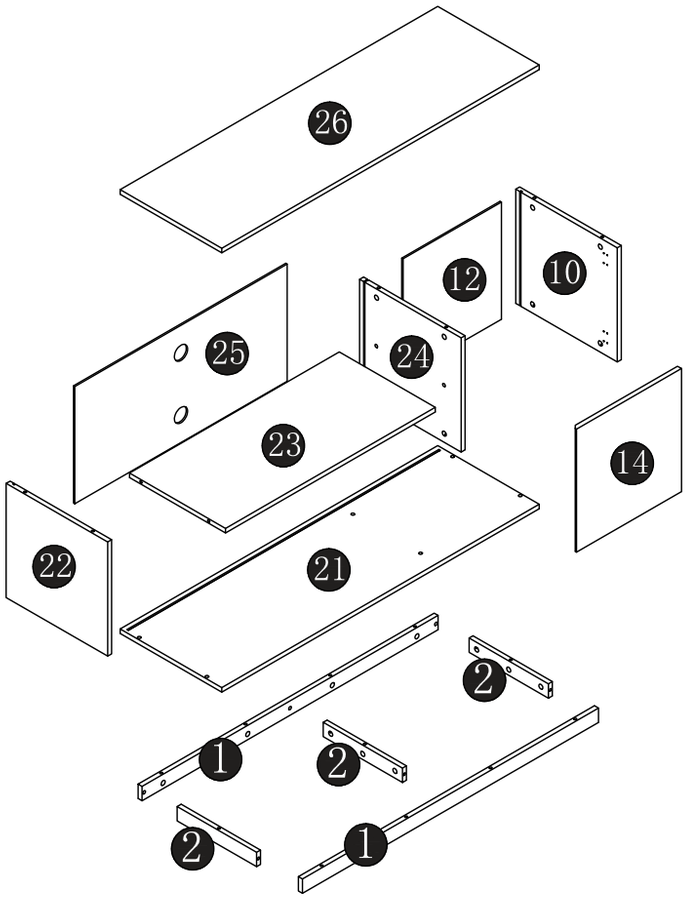


ASSEMBLY INSTRUCTION

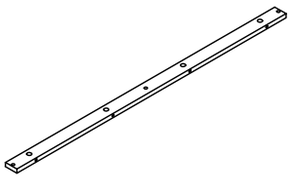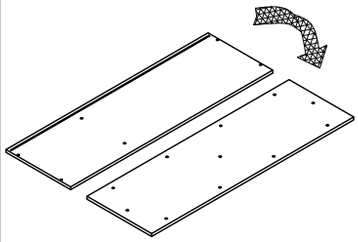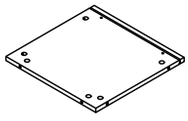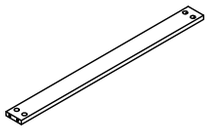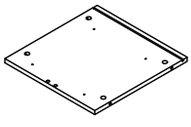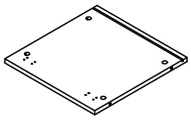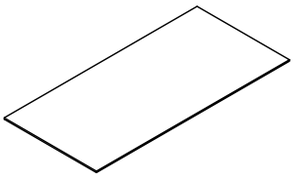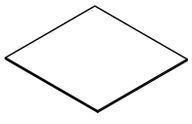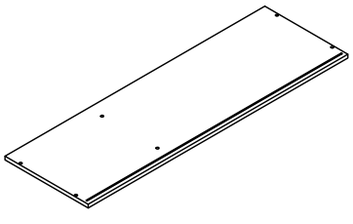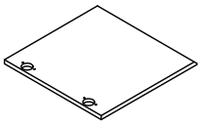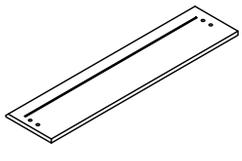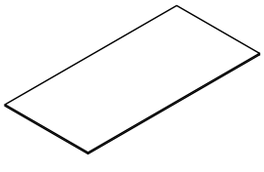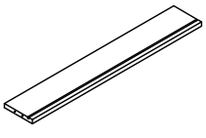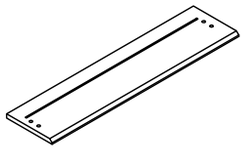❶ 4PCS 	❷ 6PCS 	❸ 1PC 	❹ 1PC 
❺ 1PC 	❻ 1PC 	❼ 1PC 	❽ 1PC 
❾ 1PC 	❿ 2PCS 	⓫ 1PC 	⓬ 2PCS 
⓭ 1PC 	⓮ 2PCS 	⓯ 1PC 	⓰ 2PCS 
⓱ 2PCS 	⓲ 2PCS 	⓳ 2PCS 	⓴ 1PC 

ASSEMBLY INSTRUCTION

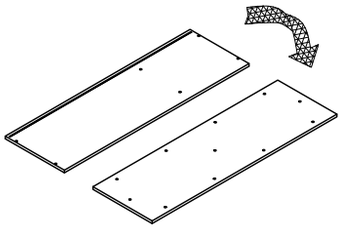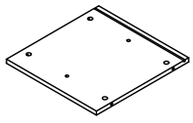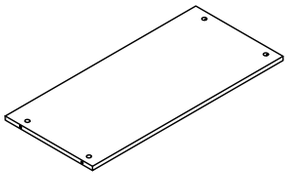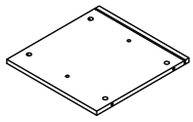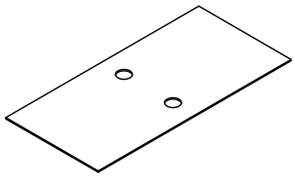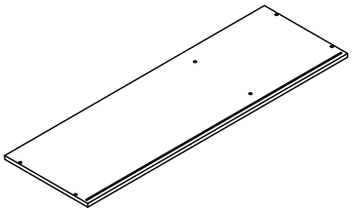
21 1PC 	22 1PC 	23 1PC 	24 1PC 
25 1PC 	26 1PC 		

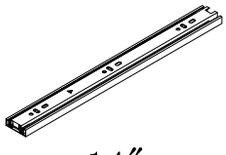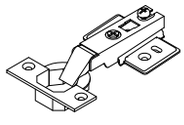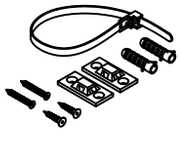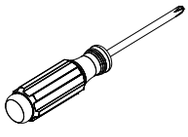A 80PCS +5PCS  M6*40	B 80PCS +5PCS  ϕ15*10	C 4PCS  14″	D 60PCS  ϕ3.5*14
E 10PCS  ϕ3.5*35	F 16PCS 	G 20PCS 	H 4PCS 
I 80PCS 	J 1set 		


ASSEMBLY INSTRUCTION

Use the Cam Lock and Eccentric Wheel
ECCENTRIC WHEEL

Tighten the bolt until the shoulder is aligned with the panel.
Be suer not to tighten too much or too little.

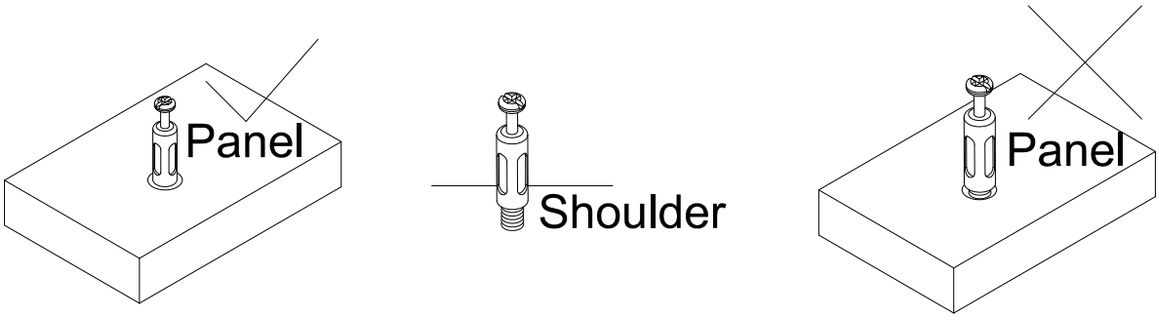

The pre-inserted nut should align with the center of the cam lock when joining two panels. The cam lock should be inserted before the eccentric wheel.

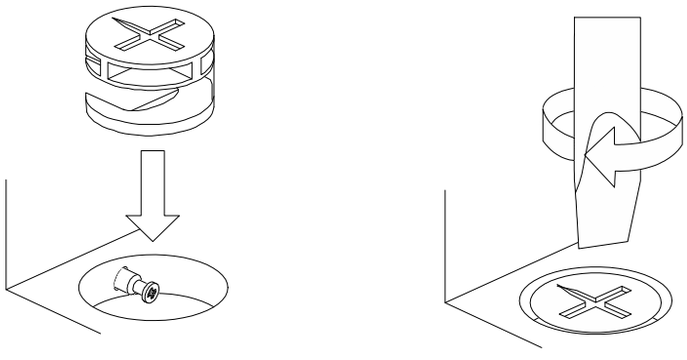

Turn the cam lock clockwise to tighten


ASSEMBLY INSTRUCTION


Step 1


A 80PCS





M6*40

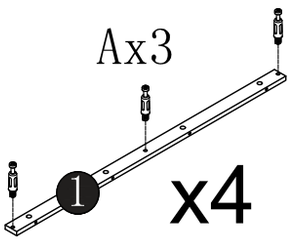


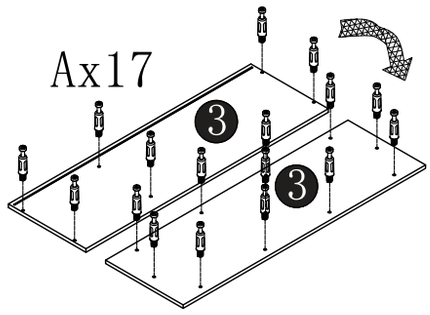


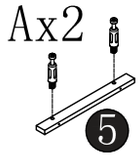


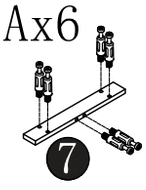


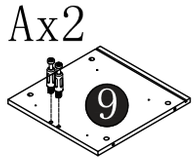


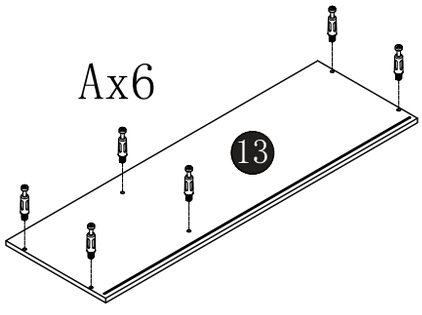


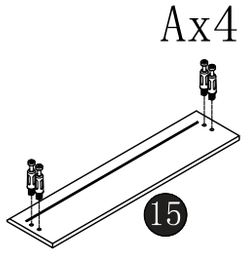


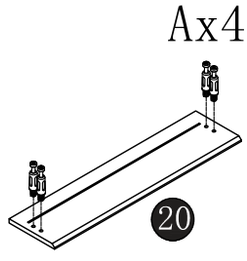

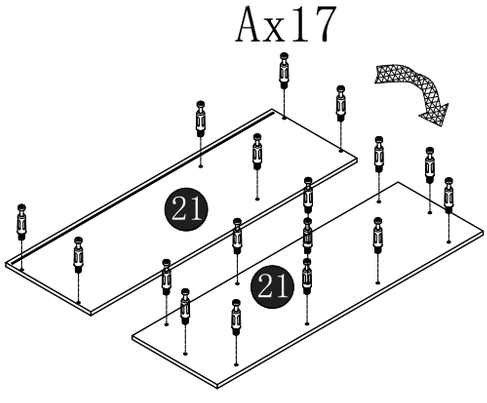

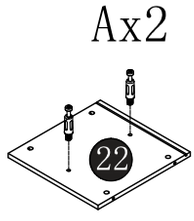

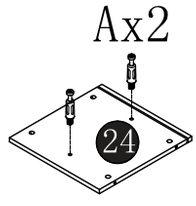

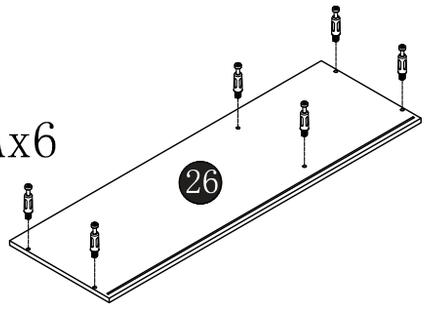

ASSEMBLY INSTRUCTION

Step 2

B 12PCS

ϕ15*10mm

x2

Step 3

B 11PCS

ϕ15*10mm

F 6PCS




ASSEMBLY INSTRUCTION

Step 4

B 4PCS




φ15*10mm

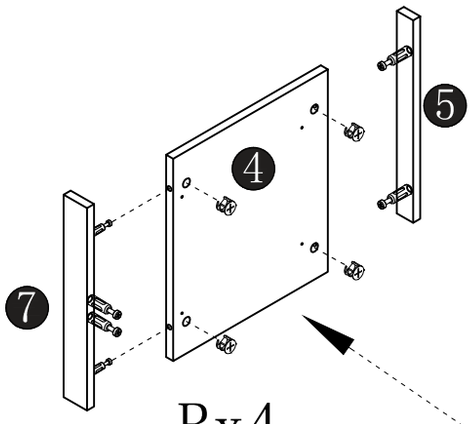

Bx4

21mm=0.82″
256mm=10.07″
53mm=2.087″

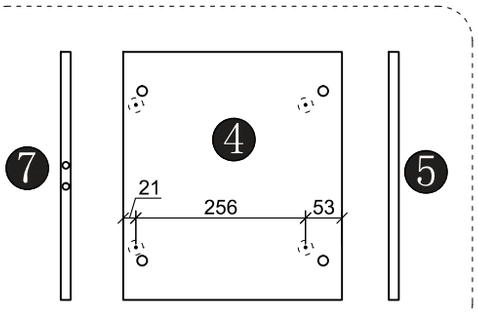

Please note the positions of these two holes. Install Plate 7 next to the hole closer to the board edge, and Plate 5 next to the one farther away. Check carefully to avoid installation errors.

Step 5

B 2PCS




φ15*10mm

E 2PCS




φ3.5*35mm

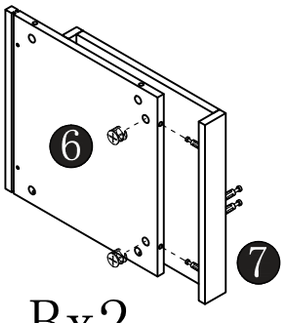

Bx2



Ex2

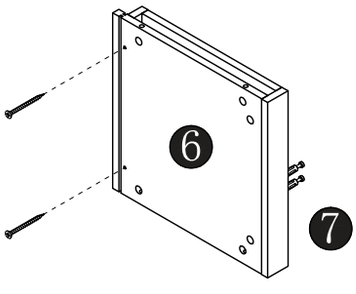


ASSEMBLY INSTRUCTION

Step 6

C 4PCS



14″

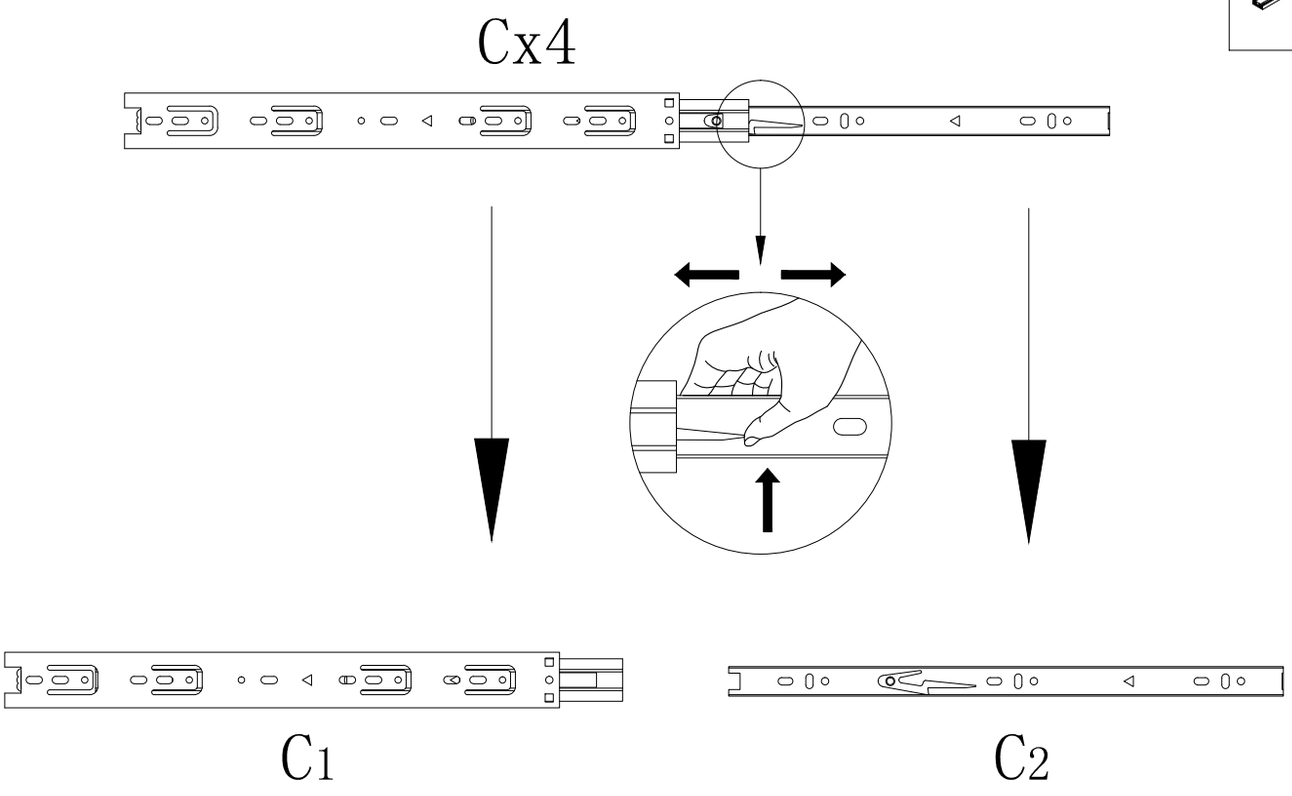

Step 7

C1 4PCS




14″

D 8PCS



φ3.5*12

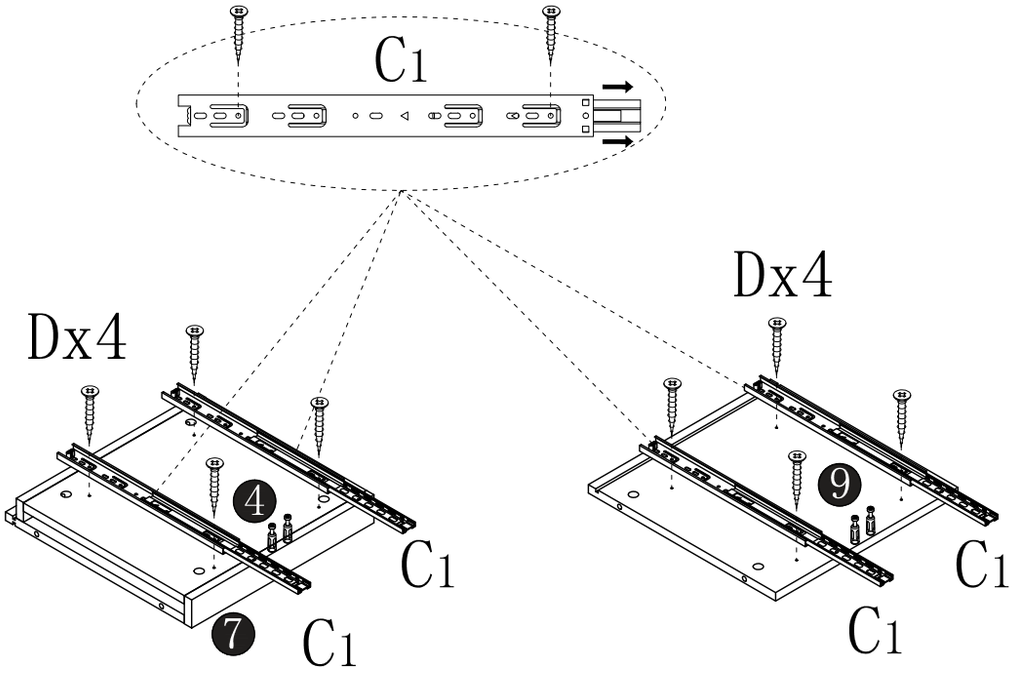


ASSEMBLY INSTRUCTION

Step 8

B 4PCS


φ15*10mm

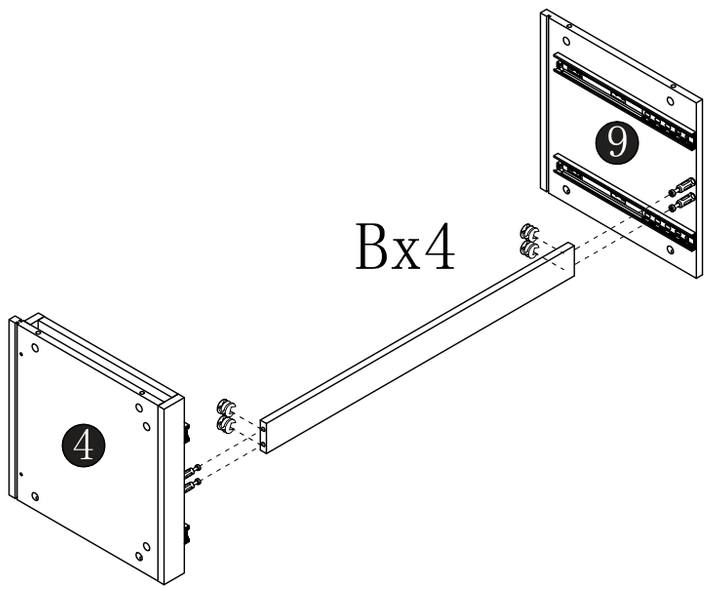

Step 9

B 4PCS

φ15*10mm

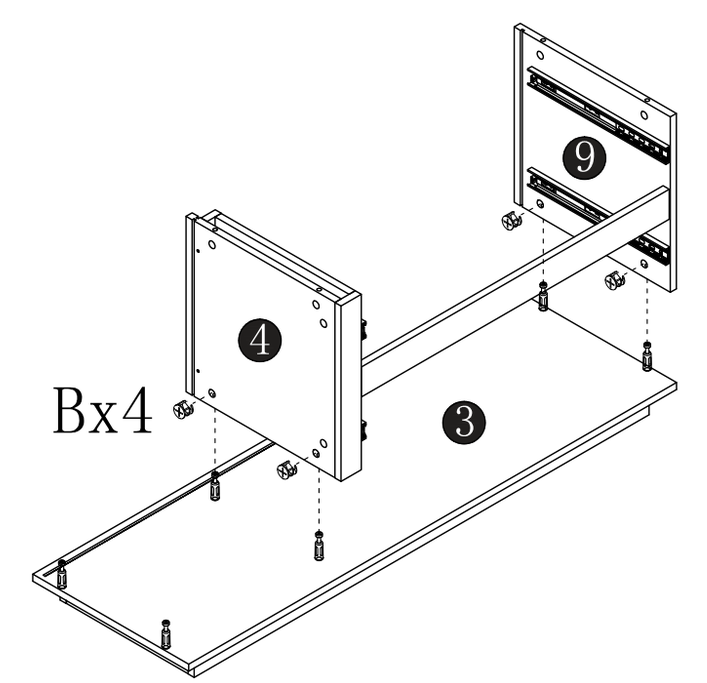


ASSEMBLY INSTRUCTION

B 2PCS




φ15*10mm

Step 10

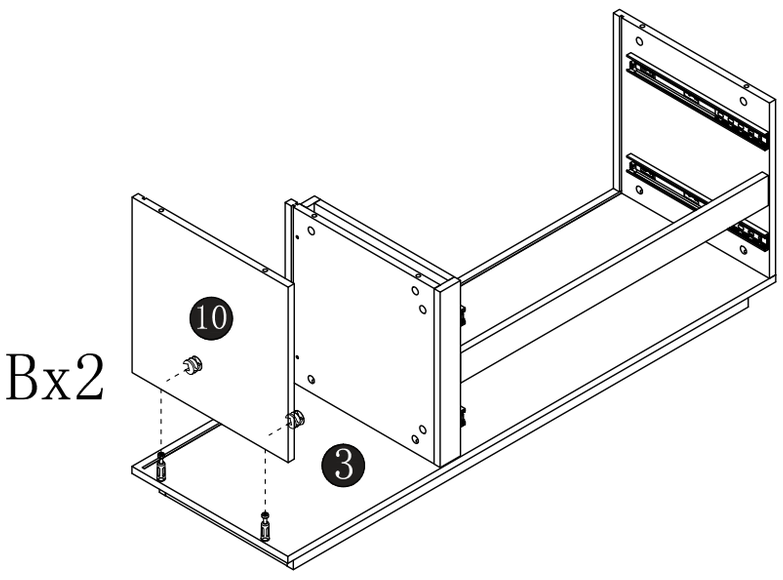

Step 11

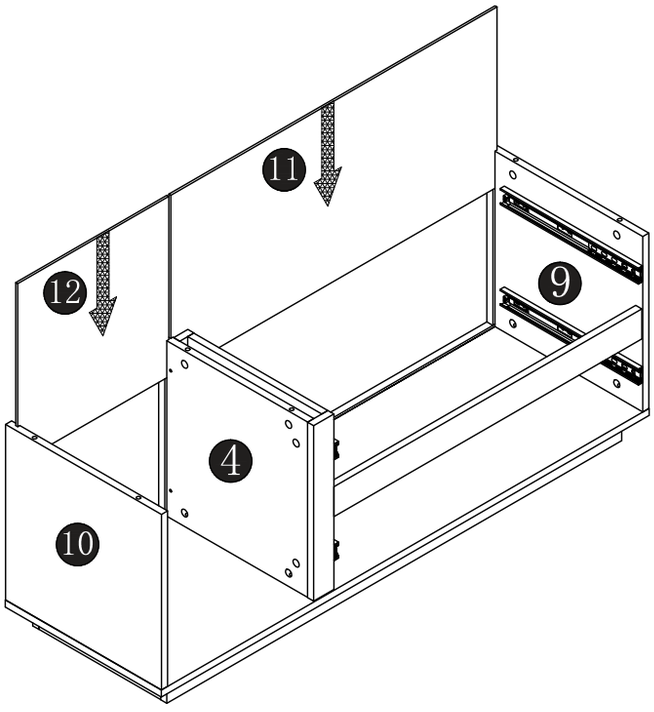


ASSEMBLY INSTRUCTION

Step 12

B 6PCS



φ15*10mm

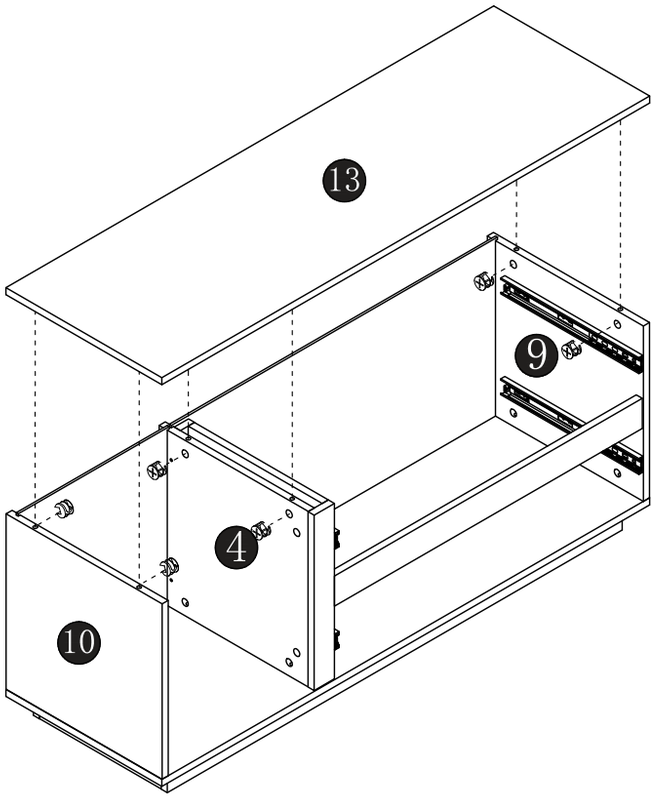

Bx6

Step 13


D 10PCS



φ3.5*14

G 10PCS



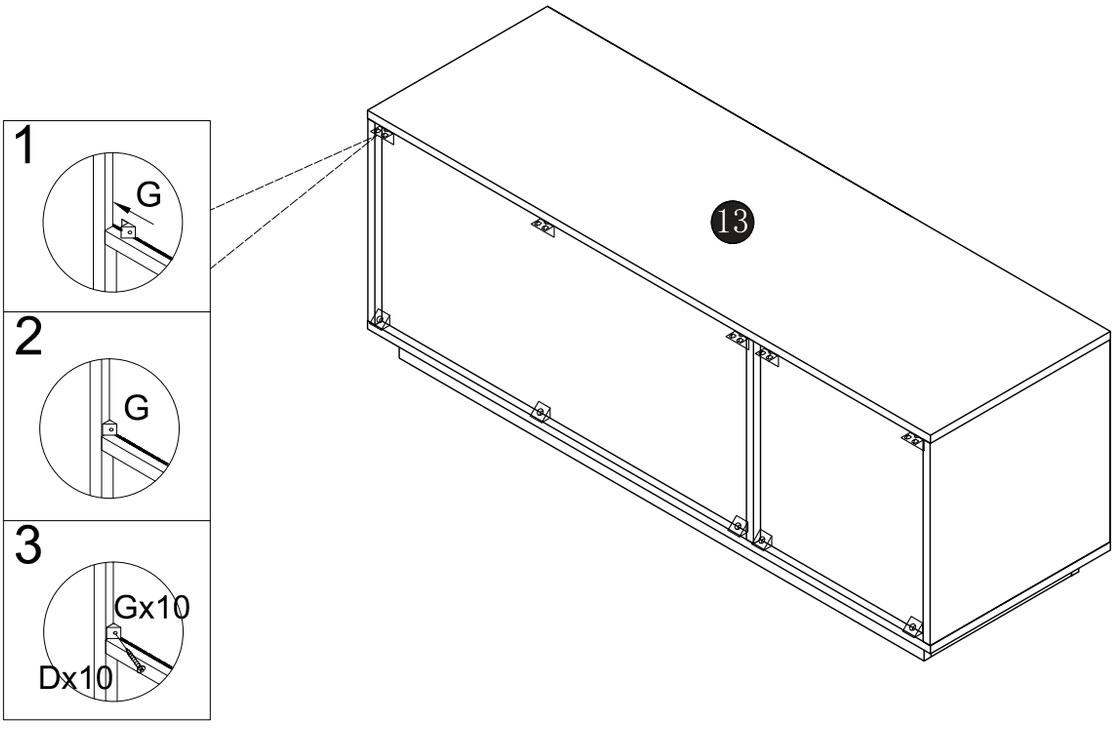


Step 14

Cabinet DoorAdjustment Instructions

Height adjustment:

a) Locate the height adjustment screws on the hinge.


b) Use the Phillips screwdriver to either tighten or loosen the screws to raise or lower the cabinet door as desired.

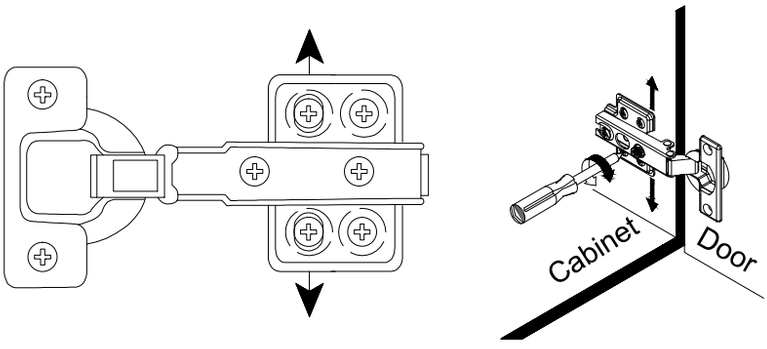

Side-to-side adjustment:

a) If the cabinet door needs to be moved closer to or away from the cabinet frame, locate the side - to-side adjustment screws on the hinge.

b) Use the Phillips screwdriver to adjust these screws and gradually move the door in the desired direction.

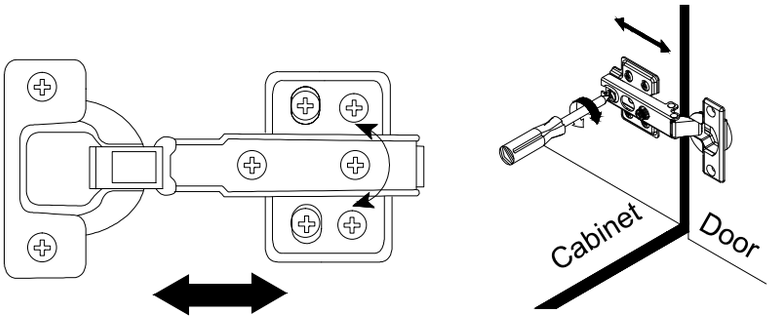


Depth adjustment (if applicable):

a) Check if the cabinet door needs to be brought closer to or further away from the cabinet frame.


b) For-depth adjustment, locate the depth adjustment screws on the hinge.

c) Use the Phillips screwdriver to turn these screws clockwise or counterclockwise accordingly.

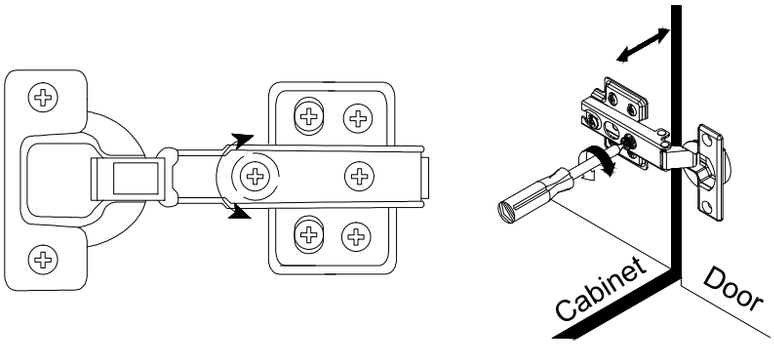


ASSEMBLY INSTRUCTION

Step 15

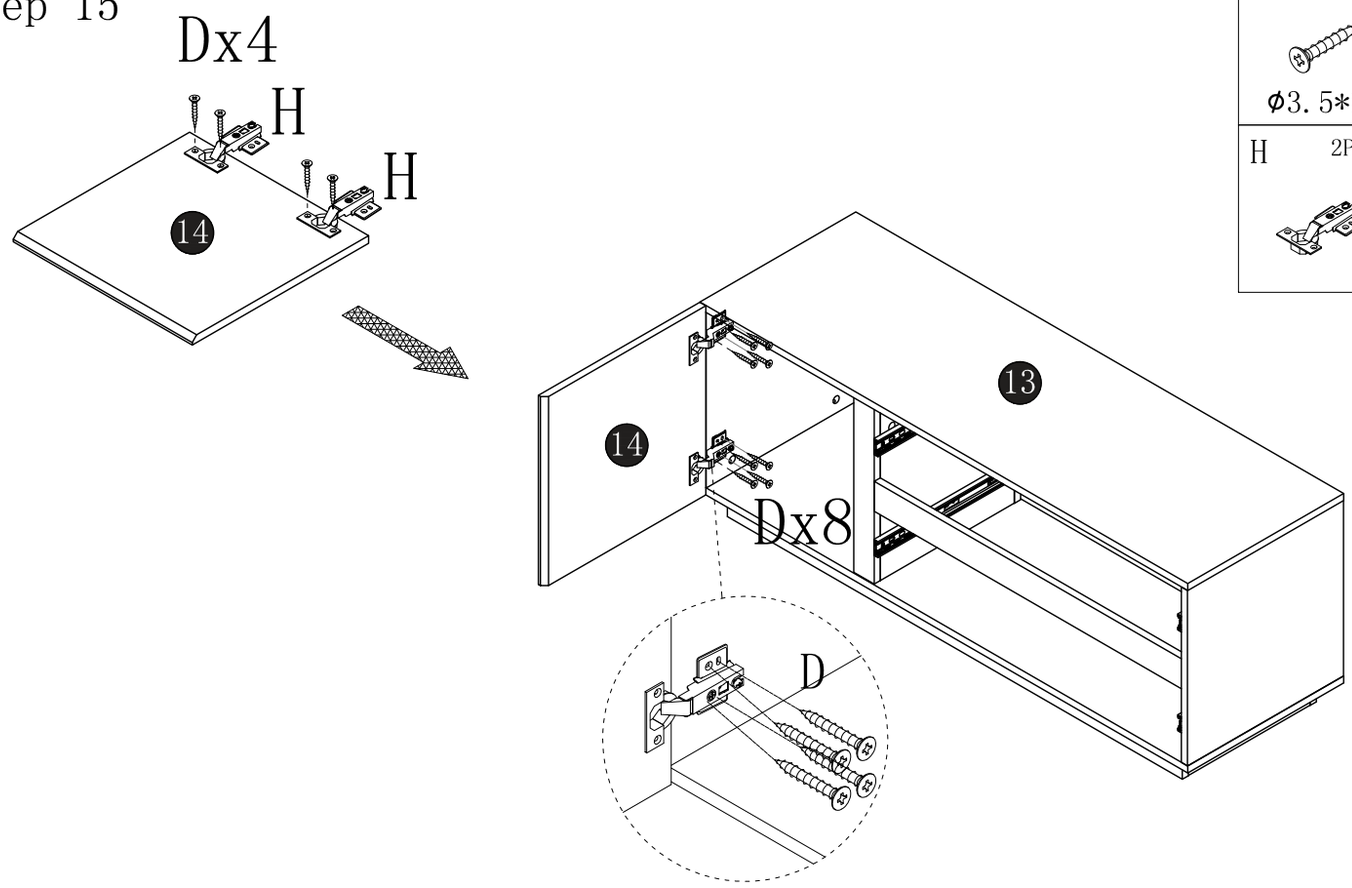

D	12PCS
	ϕ3.5*14
H	2PCS


Step 16

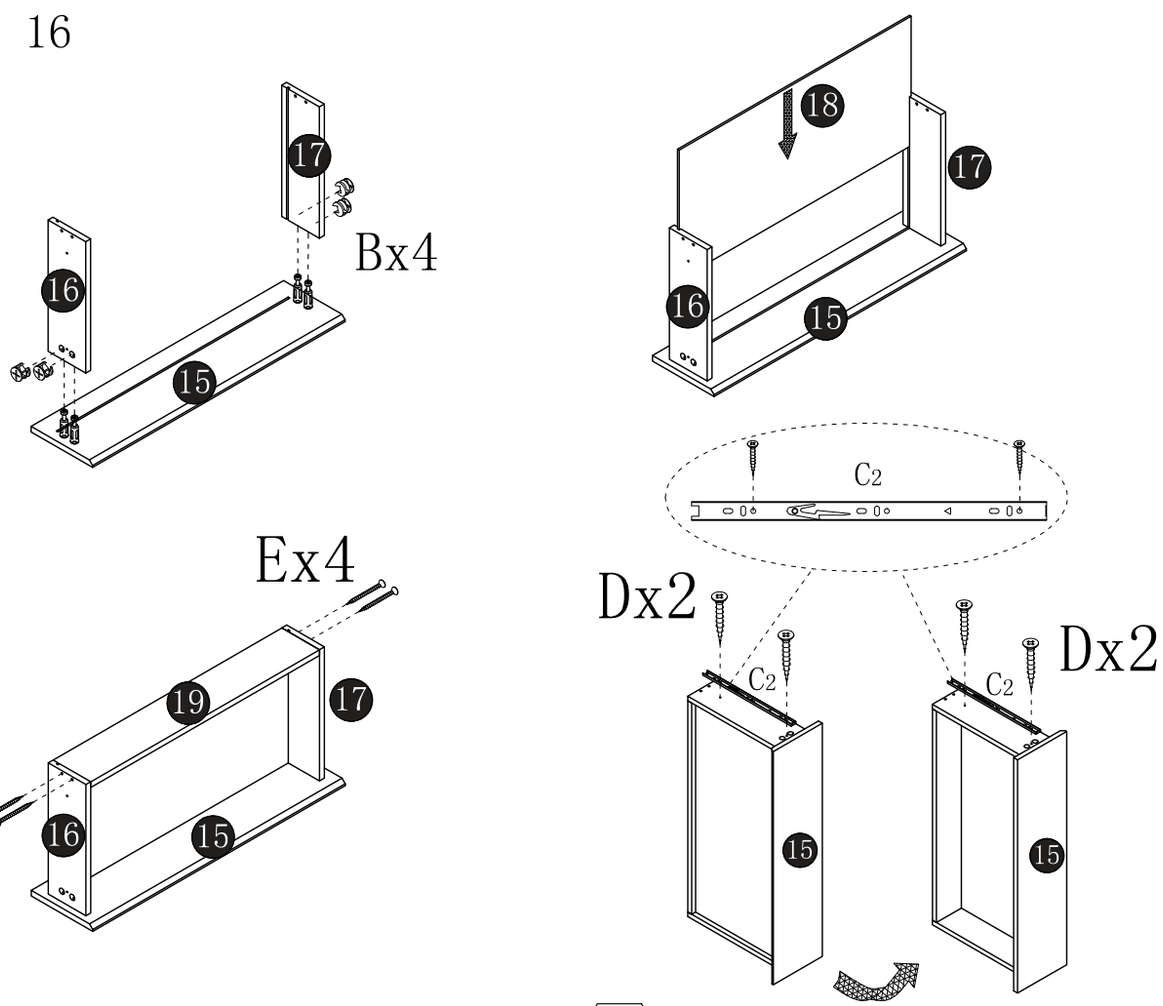



B	4PCS
	ϕ15*10mm
C2	2PCS
	14″
D	4PCS
	ϕ3.5*14
E	4PCS
	ϕ3.5*35mm


ASSEMBLY INSTRUCTION

Step 17

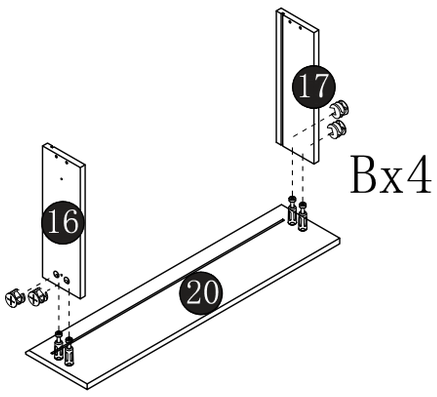

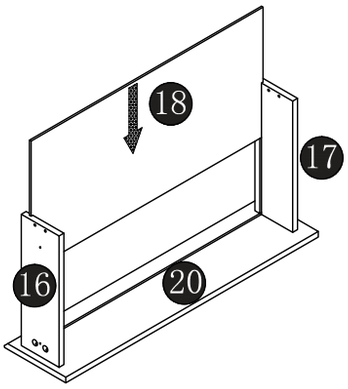


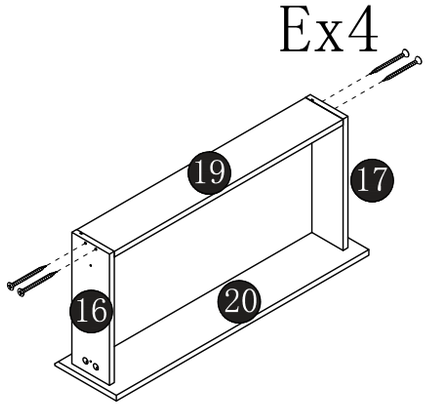

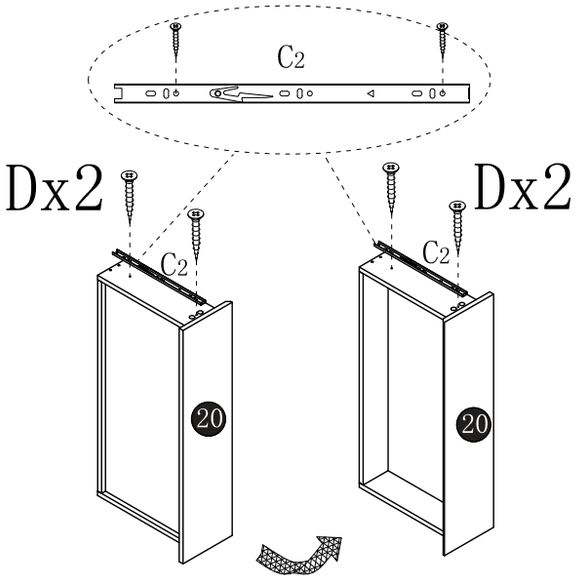

B	4PCS
	ϕ15*10mm
C2	2PCS
	14″
D	4PCS
	ϕ3.5*14
E	4PCS
	ϕ3.5*35mm

Step 18

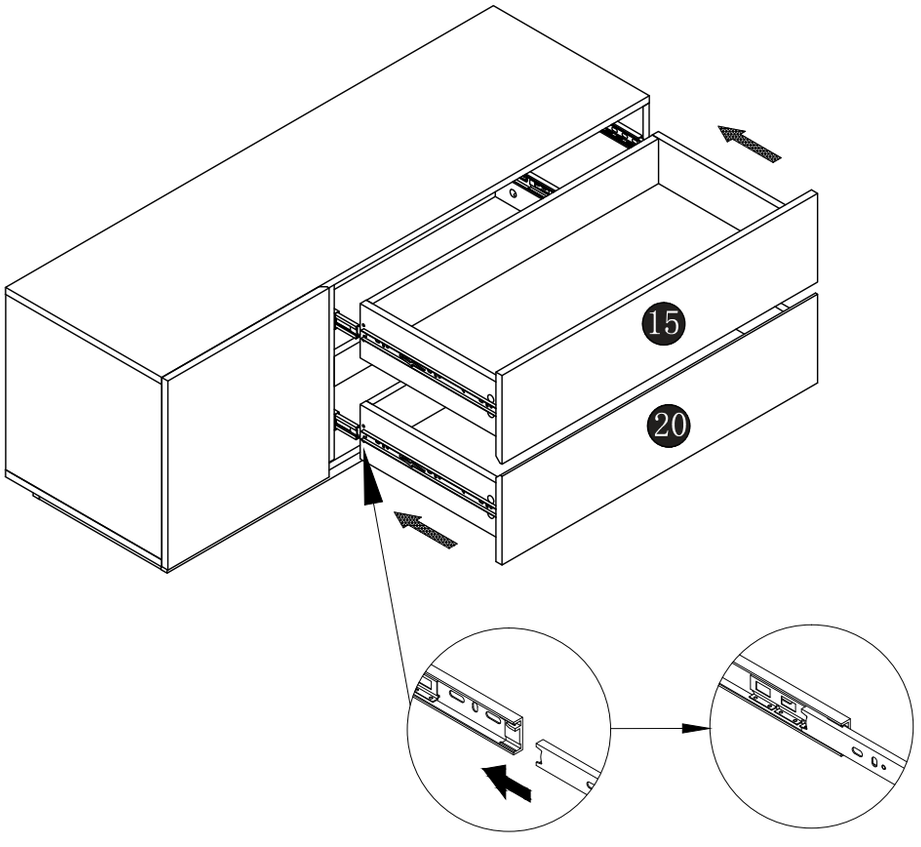

ASSEMBLY INSTRUCTION

Step 19

B 11PCS



ϕ15*10mm

F 8PCS



Step 20

B 8PCS



ϕ15*10mm


ASSEMBLY INSTRUCTION

B 2PCS




ϕ15*10mm

Step 21

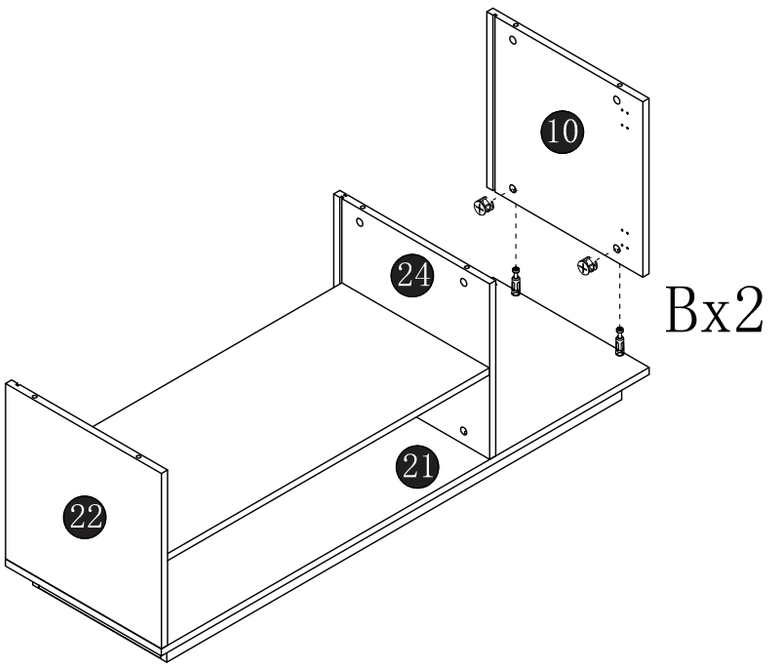

Step 22

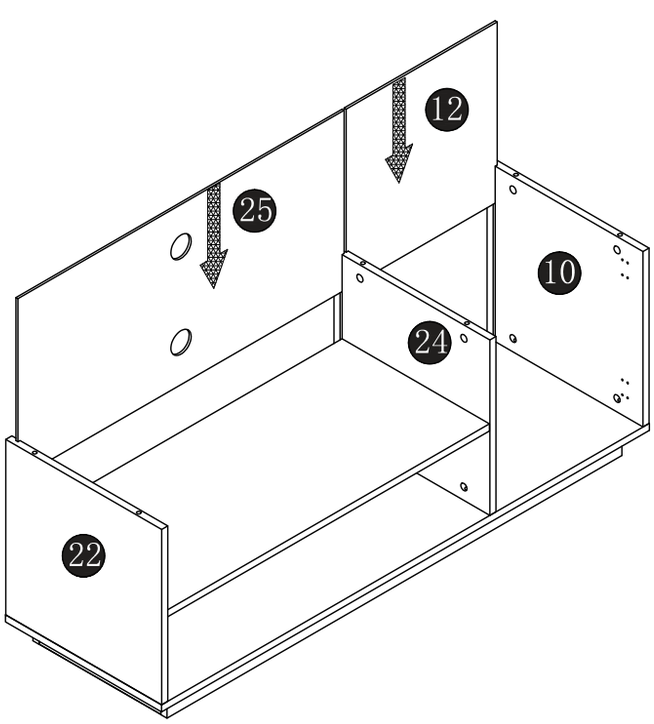


ASSEMBLY INSTRUCTION

Step 23

B 6PCS



ϕ15*10mm

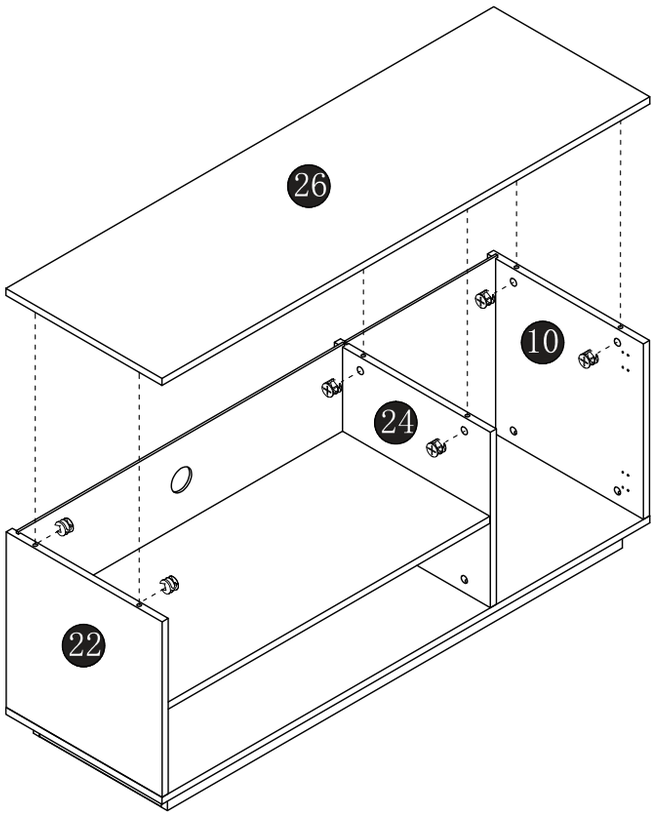

Bx6

Step 24


D 10PCS



ϕ3.5*14


G 10PCS



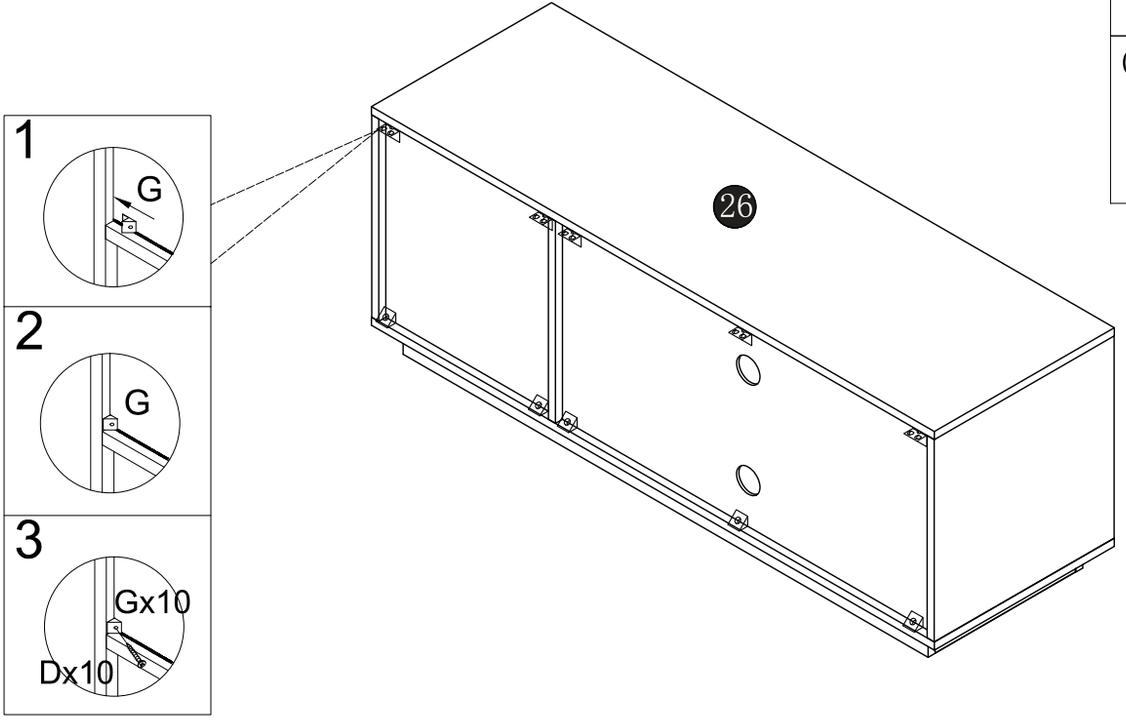

ASSEMBLY INSTRUCTION

Step 25

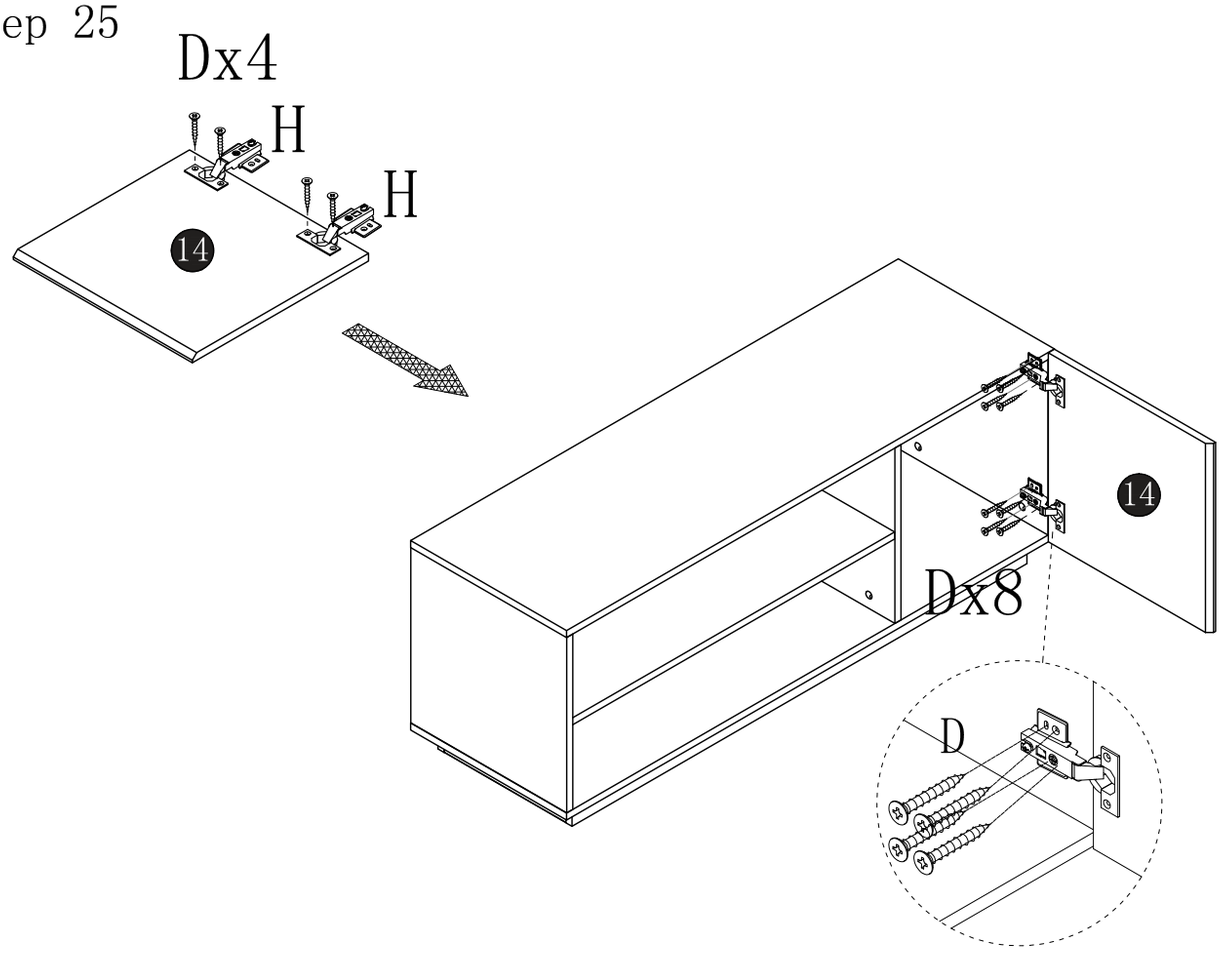

D 12PCS




ϕ3.5*14

H 2PCS




Step 26

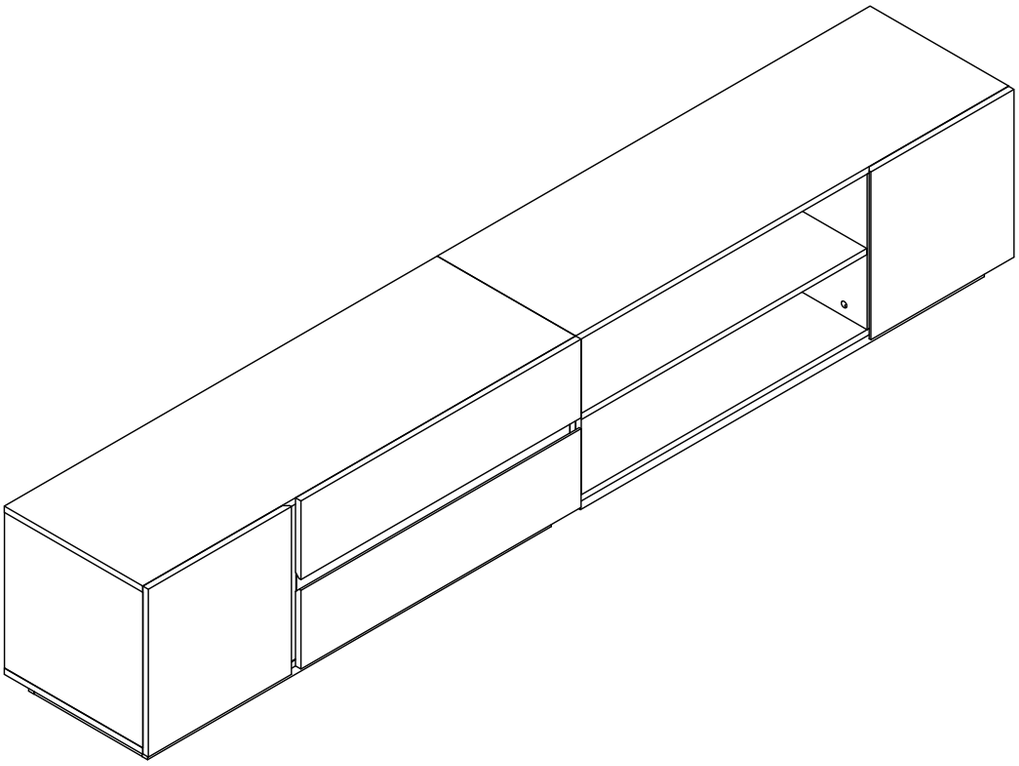

ASSEMBLY INSTRUCTION

Step 27

J 1set

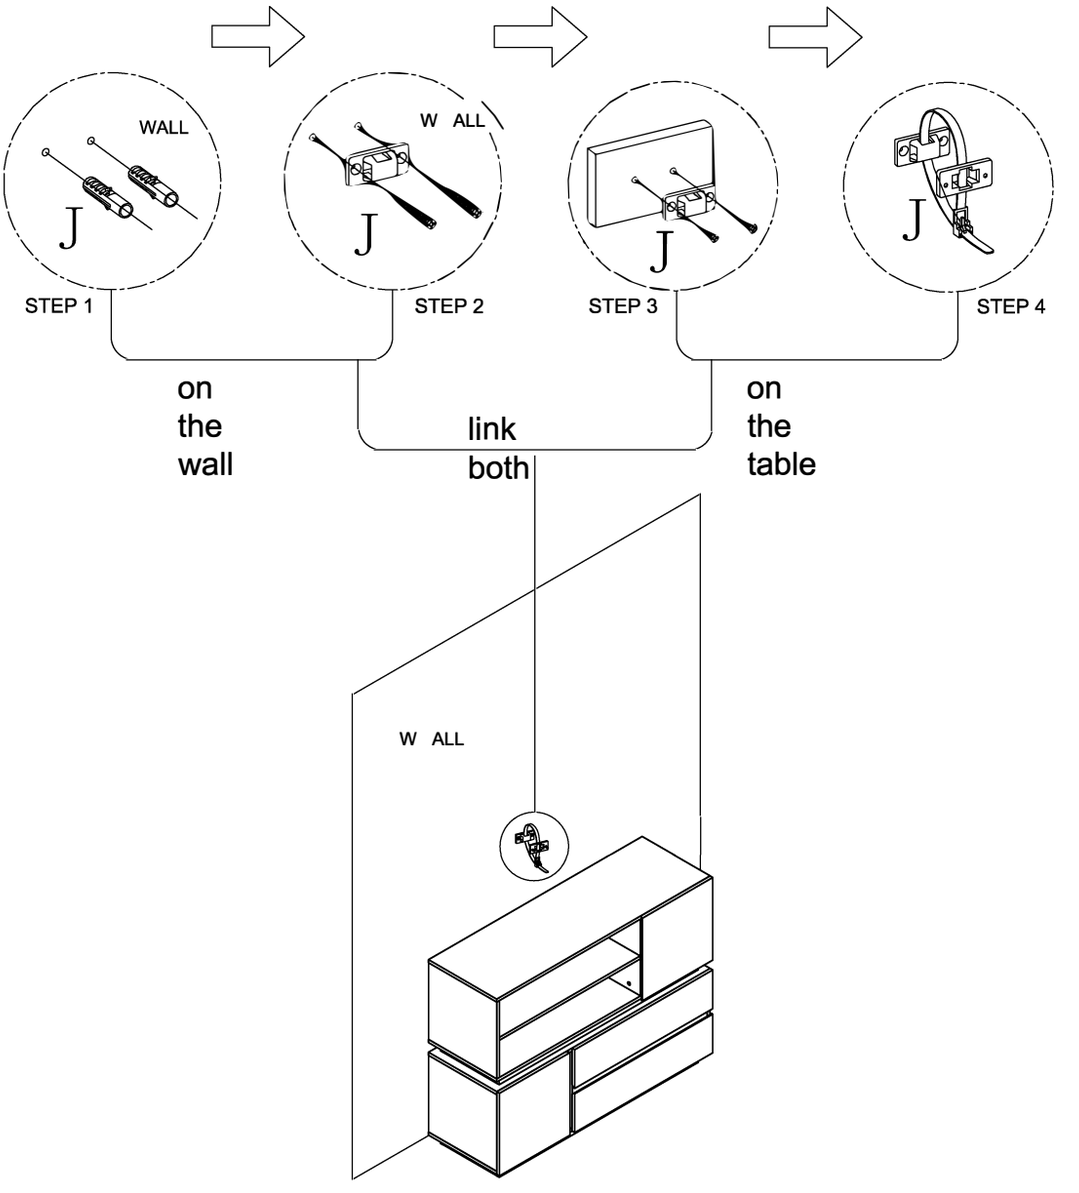

Installation Steps:

1. Drill a hole on the wall, insert the expansion bolt into the hole.
Installation Steps:
2. Secure one bracket into the expansion bolt using the screw.
3. Position the furniture in place. Attach another bracket (aligns with the bracket on the wall)to the back edge of unit top using the screw
4. Thread the male end of the steel cable through both brackets. Securely join the ends by turning the female connector clockwise.

Note:

Before installing the anti-tip kit, please determine where the furniture is to be placed and locate the center line of a wooden stud using a stud finder.
For a concrete wall, ensure there are no steel reinforcements inside the wall.
（Anti-tipping accessories are not mandatory. You can consider whether to install them according to your home decoration）

OK