




INSTRUCTION MANUAL

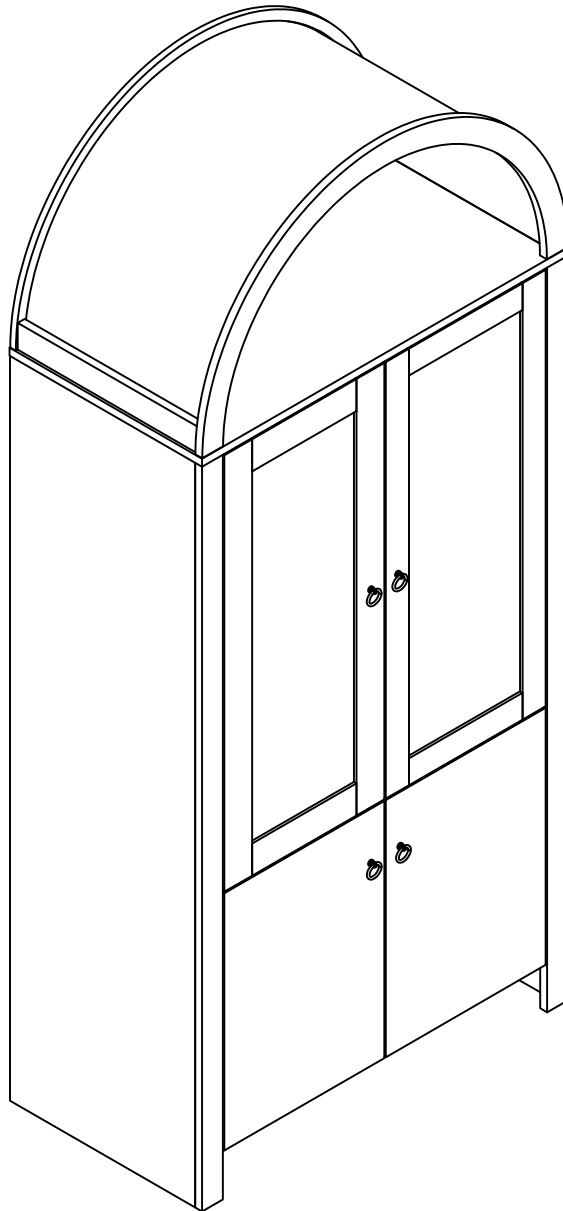


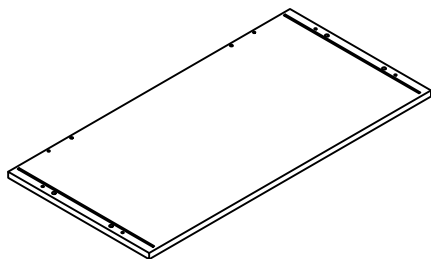


① × 1

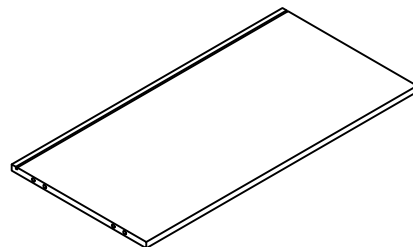


② × 1

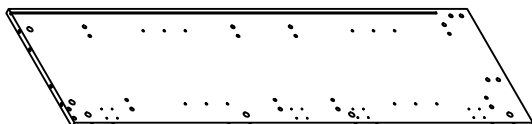


③ × 1

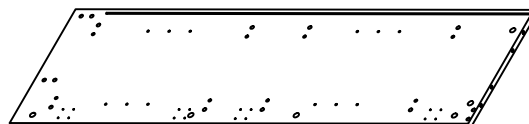


④ × 1

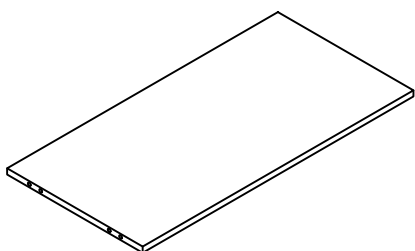


⑤ × 1

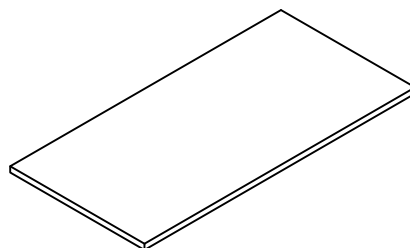


⑥ × 2

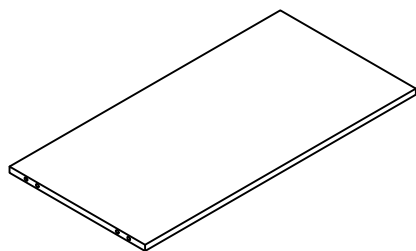


⑦ × 1

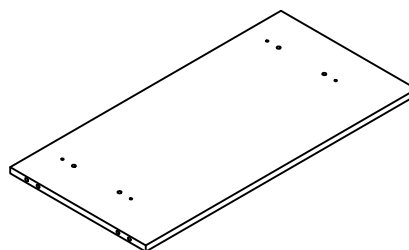











⑧ × 1










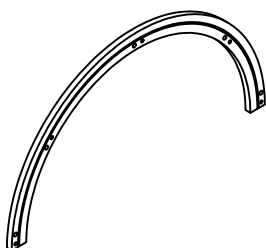



⑨ × 1

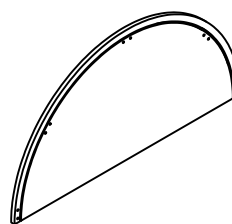















⑩ × 1

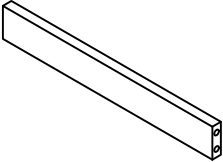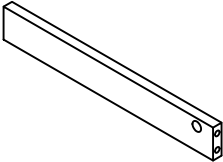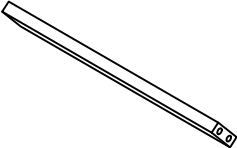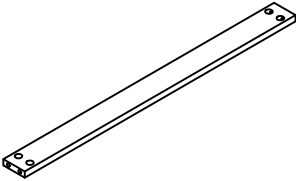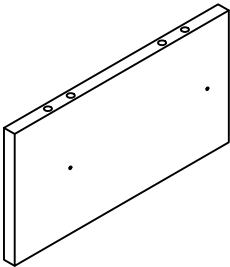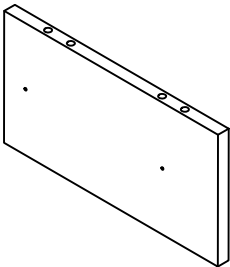	
⑪ × 1	⑫ × 1
	
⑬ × 1	⑭ × 3
	
⑮ × 1	⑯ × 2
	
⑰ × 1	⑱ × 1
	
⑲ × 8	⑳ × 2

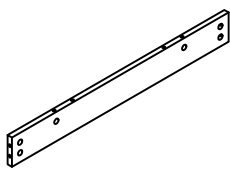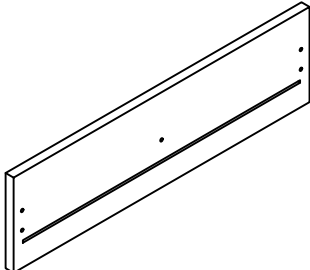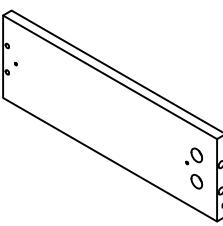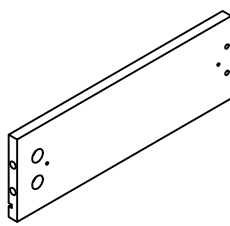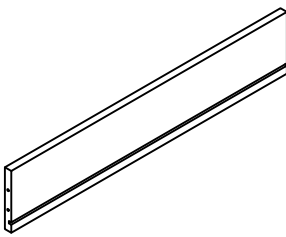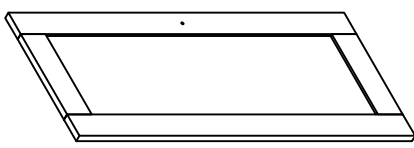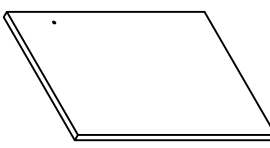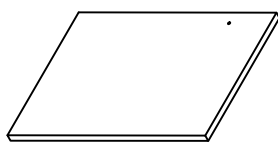	
②① × 2	②② × 2
	
②③ × 1	②④ × 1
	
②⑤ × 1	②⑥ × 1
	
②⑦ × 1	②⑧ × 2
	
②⑨ × 1	③⑩ × 1

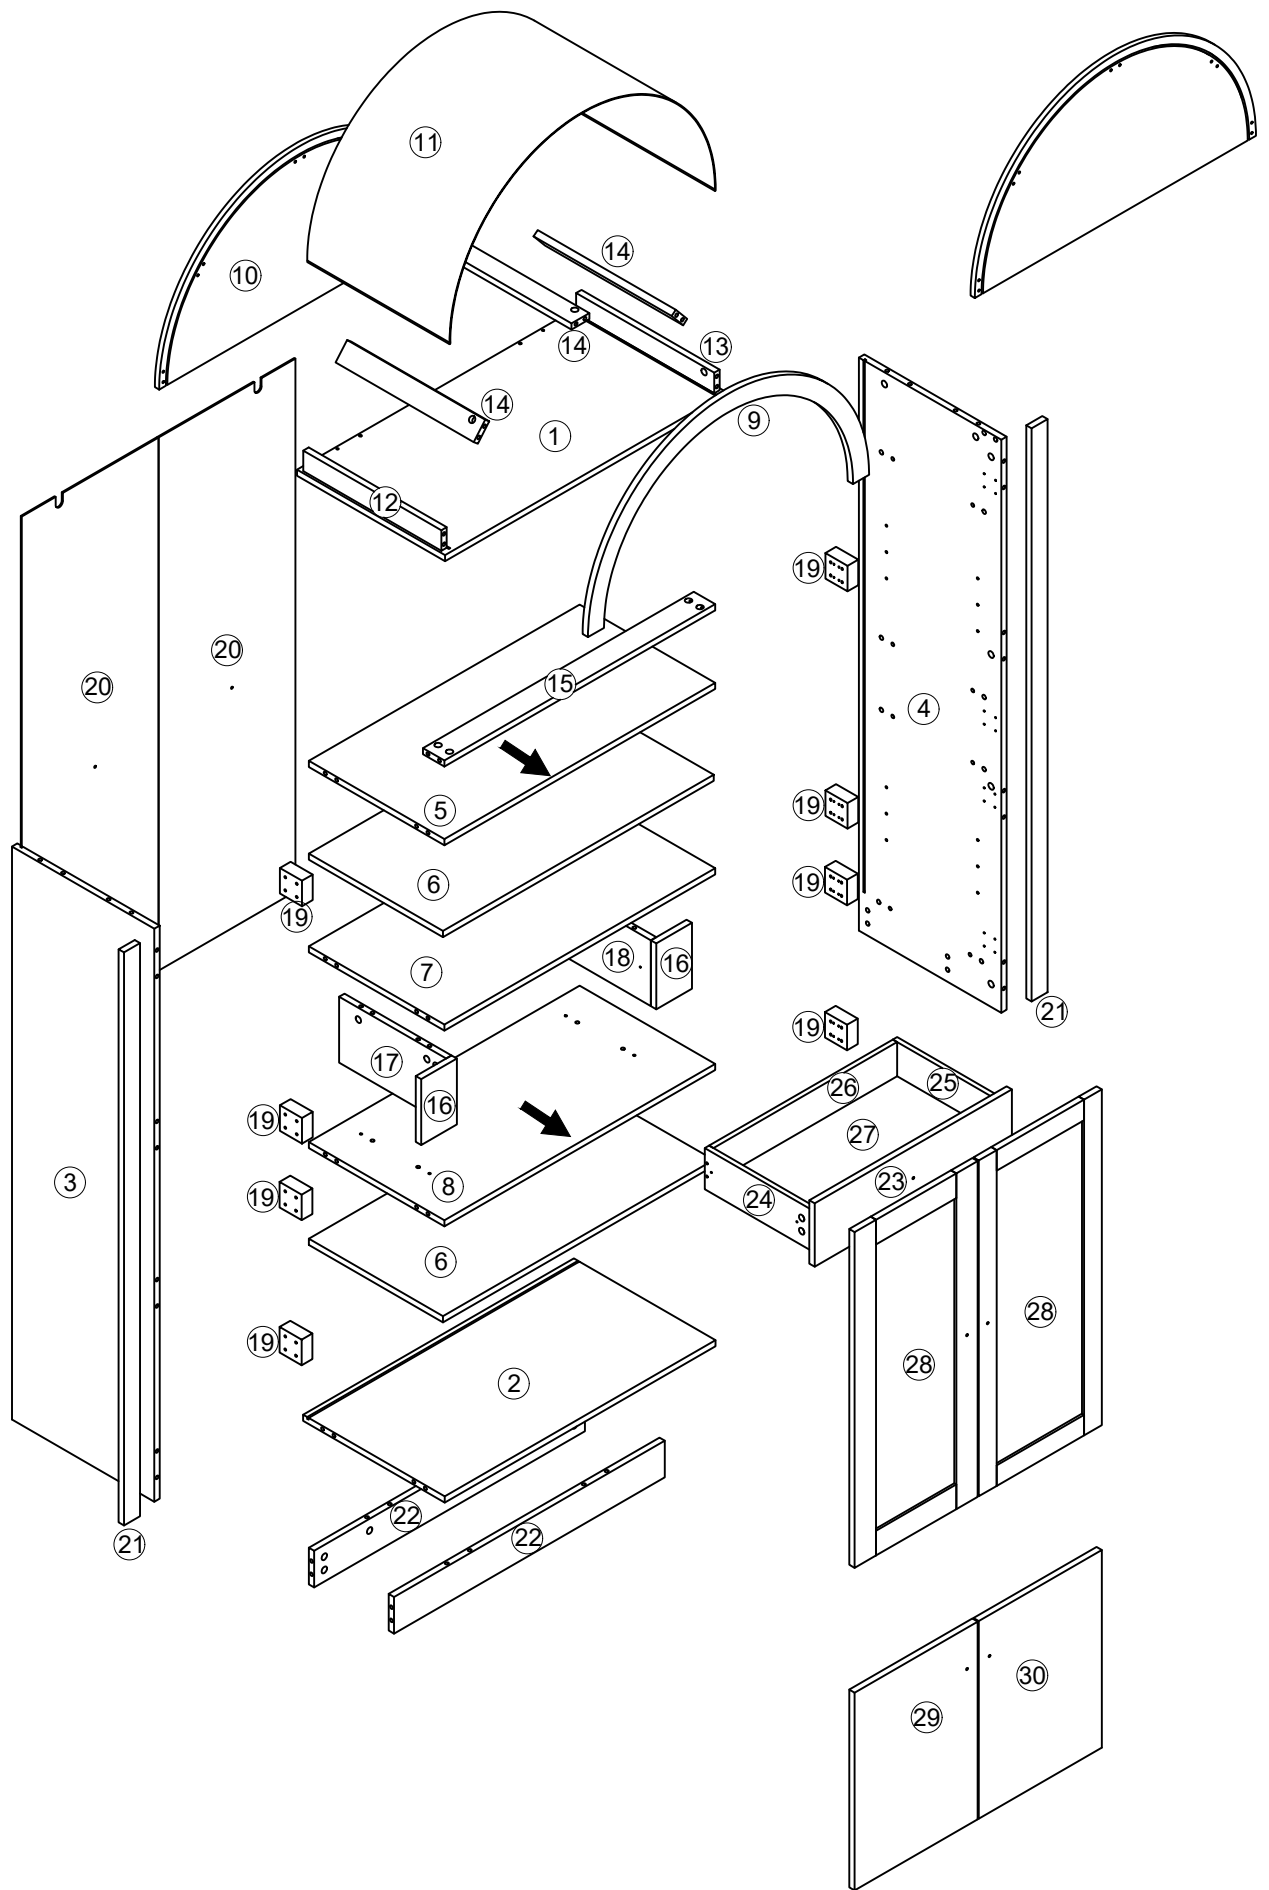


Hardware List

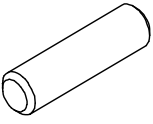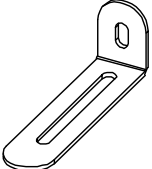			
Ø6×35 mm	Ø15×9 mm	Ø8×30 mm	Ø3.5×14 mm
A x 61	B x 61	C x 51	D x 64
			
Ø4×40 mm	Ø3×12 mm	M4×18 mm	Ø4×14mm
E x 48	F x 4	G x 5	Hx 2
			
I x 1	J x 4	K x 2	L x 2
			
M x 10	N x 8	Ø4×35 mm	
			
Q x 8	300 mm R x 2		

Step 1

R	x 2
	
300 mm	





R




R1

R2

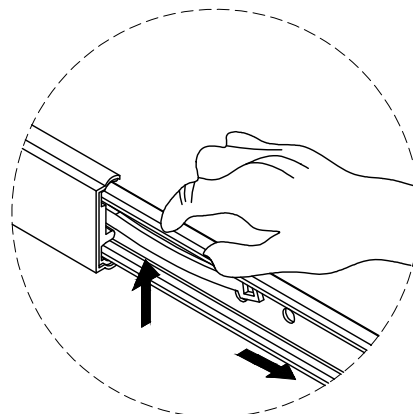


R1




R2

Step 2

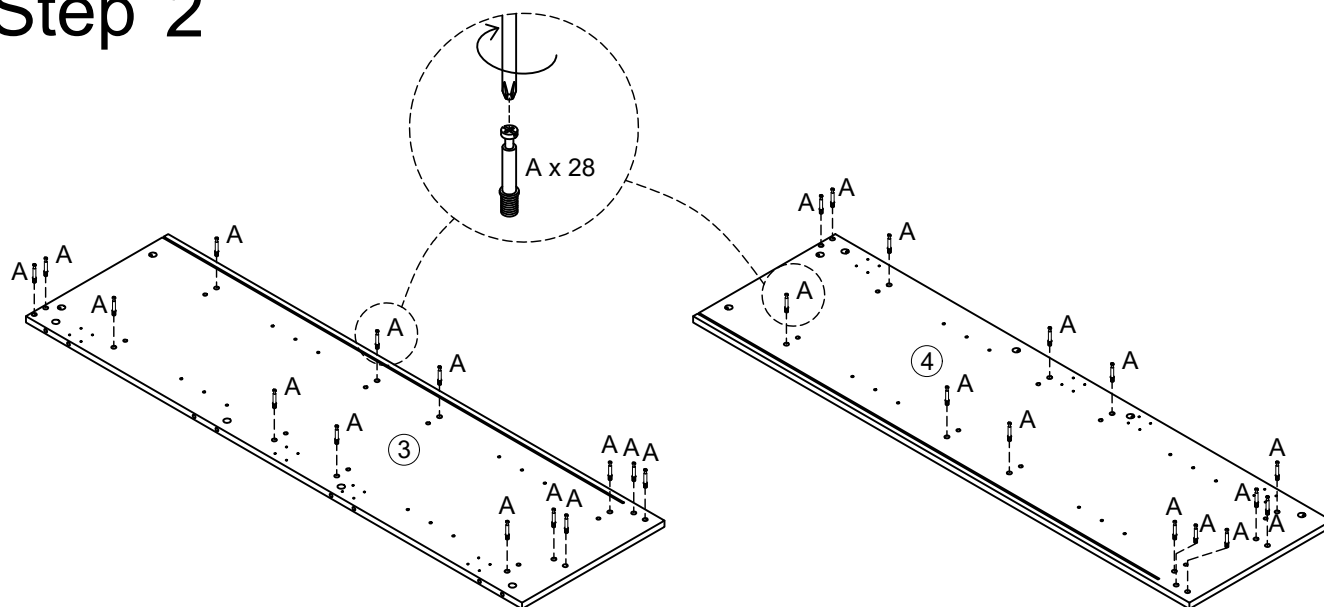


A	x 28
	

Step 3

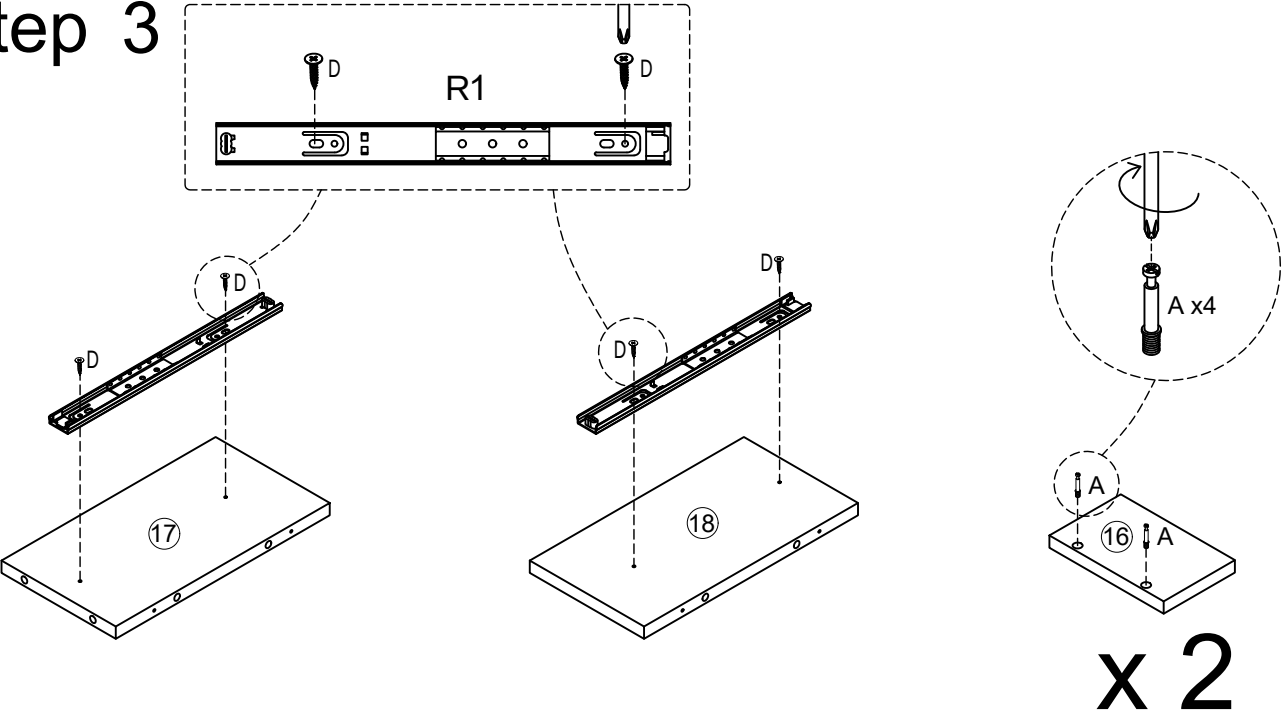


A	x 4	R1	x 2	D	x 4
		 300 mm			
Ø3.5×14 mm					

Step 4

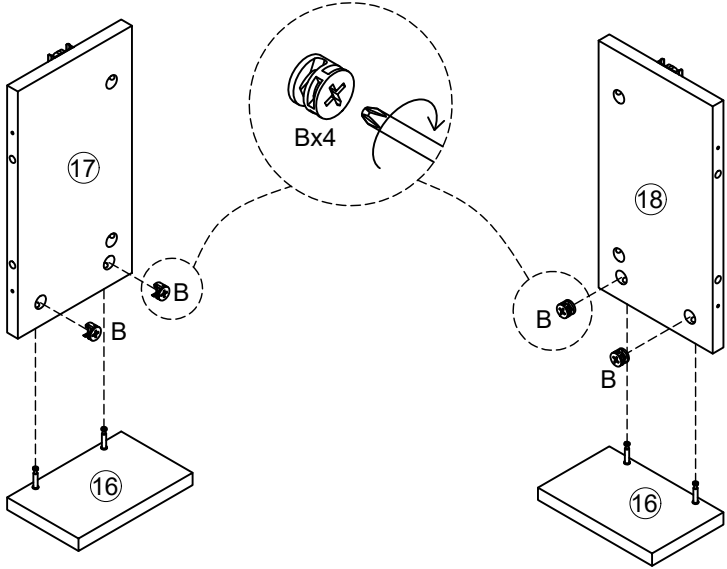


B	x 4
 Ø15× 9 mm	

Step 5

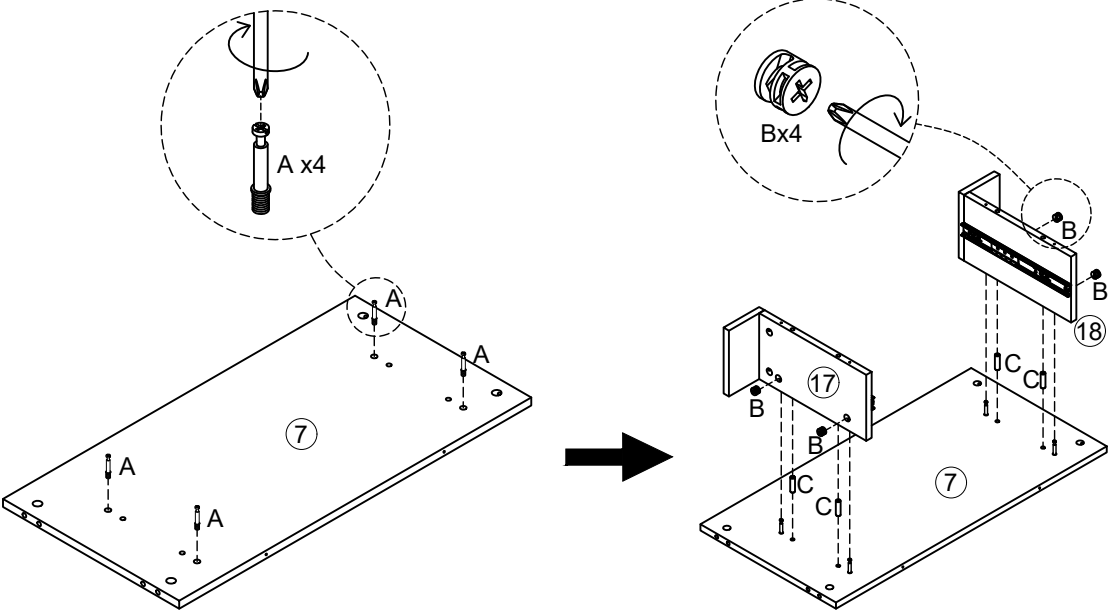


B	x 4	A	x 4	C	x 4
					
Ø15× 9 mm					

Step 6

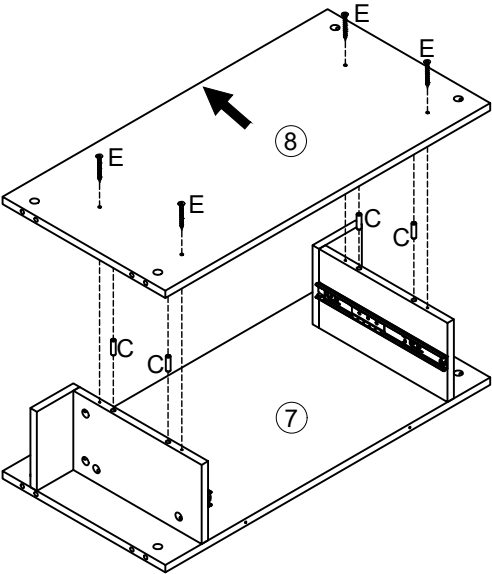


C	x 4	E	x 4
			
		Ø4× 40 mm	


Step 7

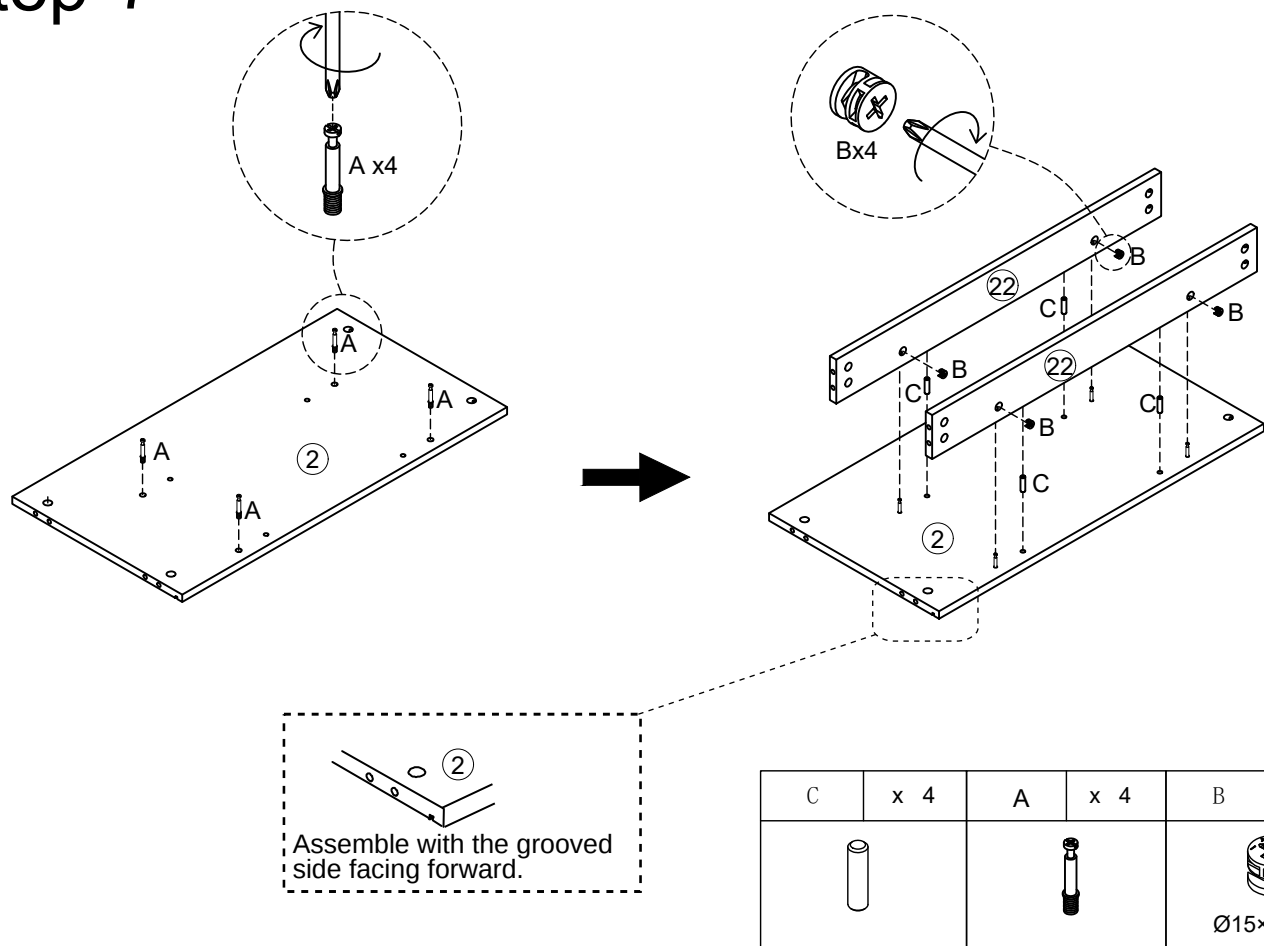

Step 8

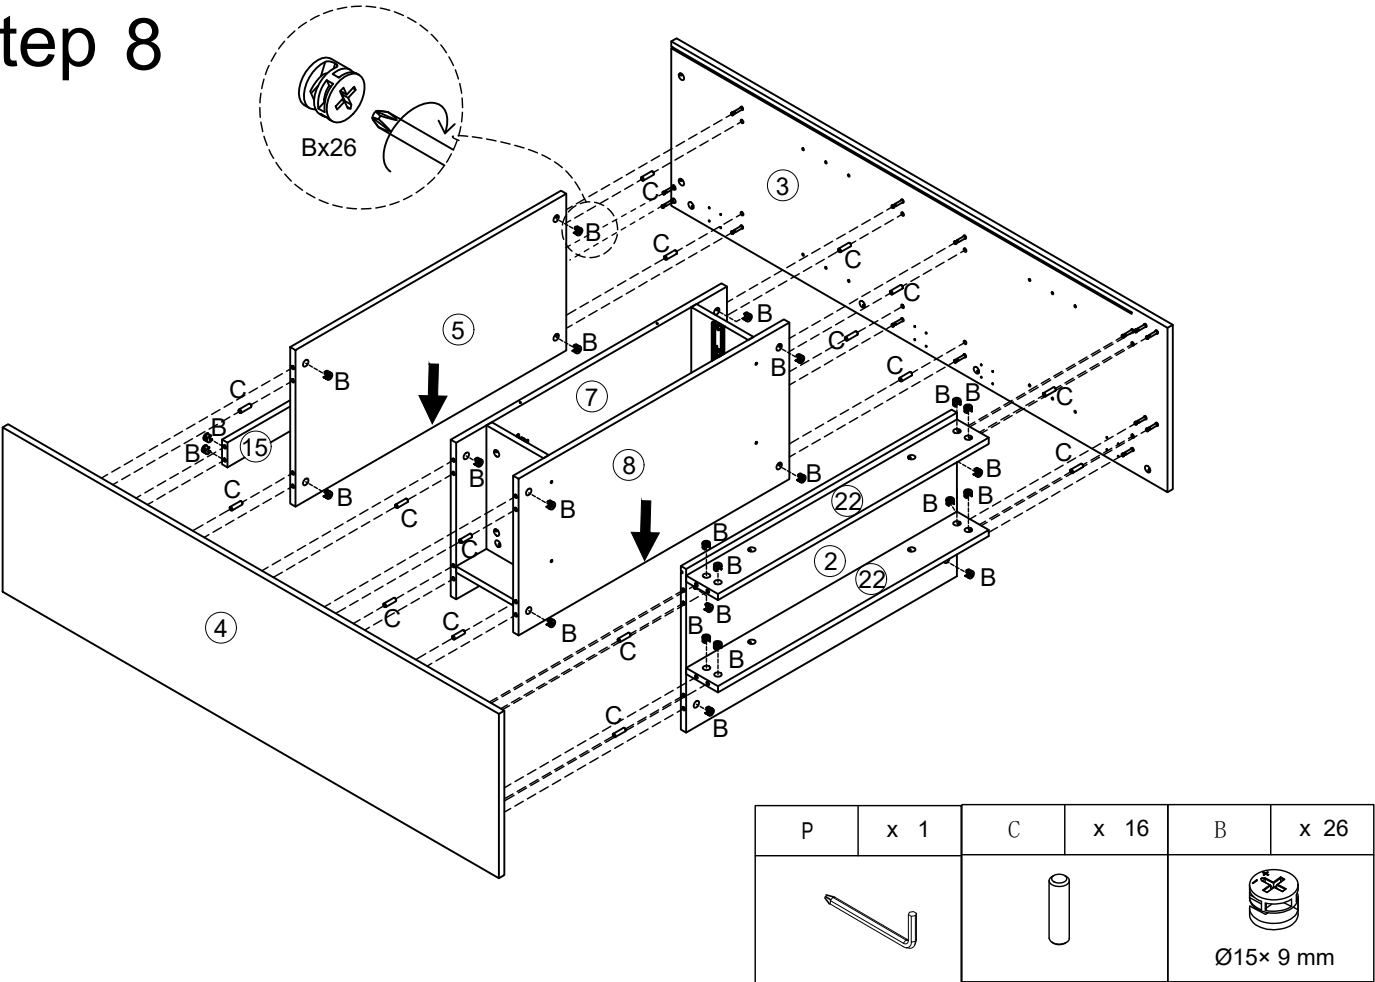


Step 9

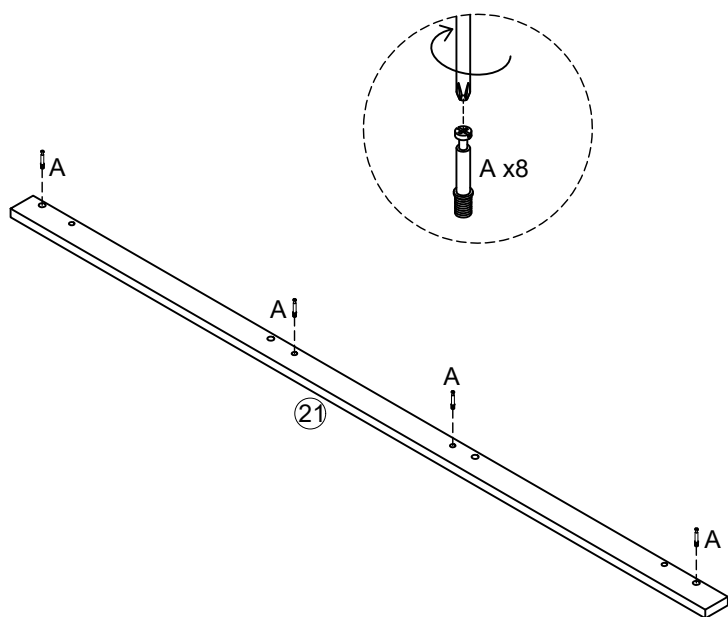

x 2


A	x 8
	

Step 10

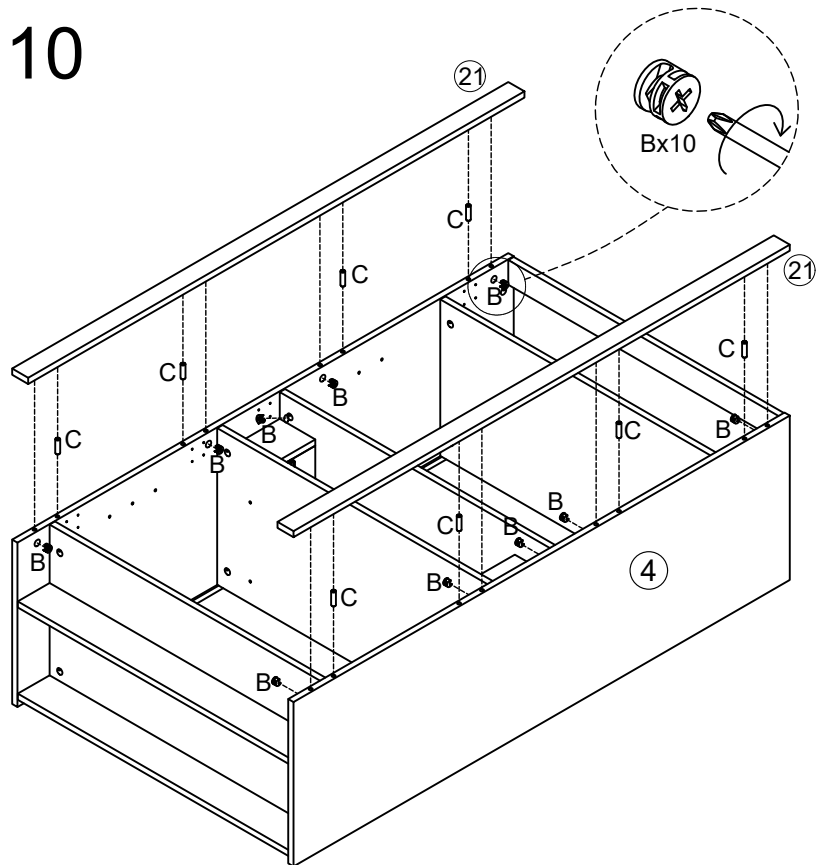


C	x 8	B	x 10
		 Ø15× 9 mm	

Step 11

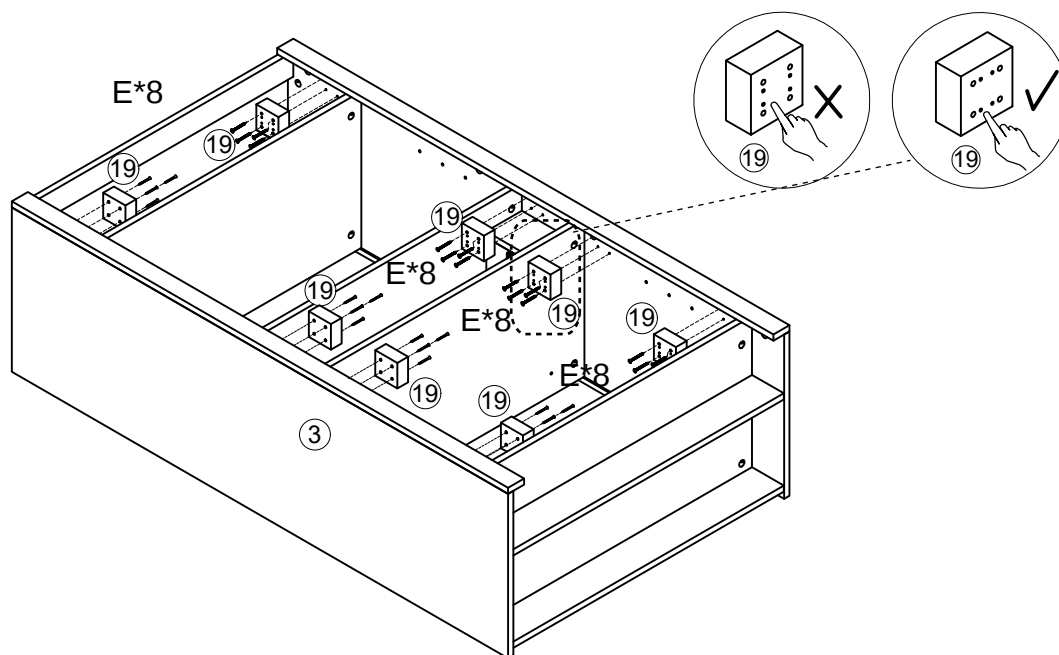


E	x 32
 Ø4× 40 mm	

Step 12

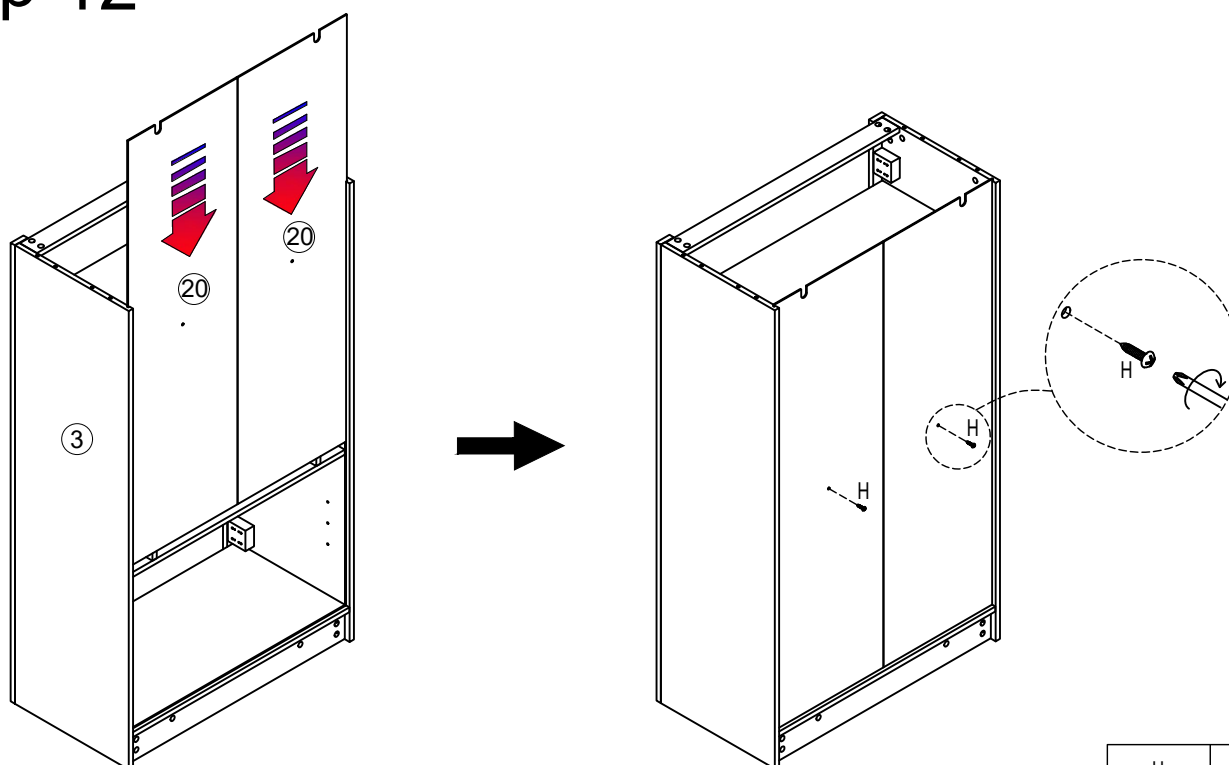


H	x 2
 Ø4× 14 mm	

Step 13

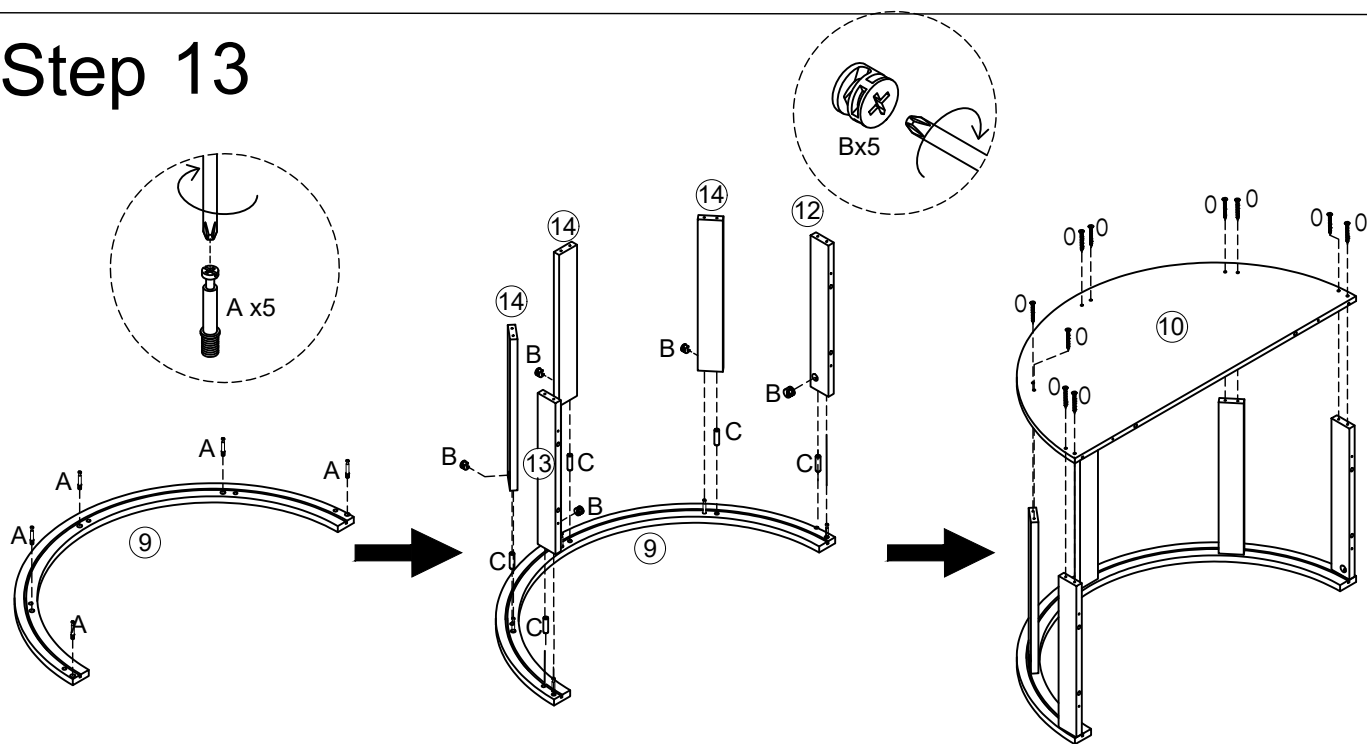

C	x 5	A	x 5	B	x 5	0	x 10
					Ø15× 9 mm		Ø4× 35 mm

Step 14

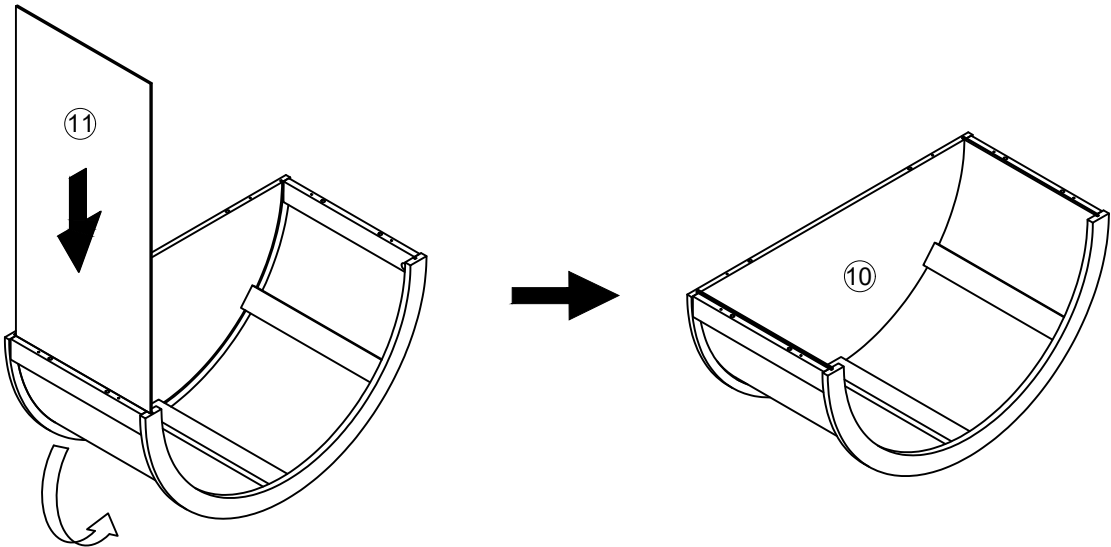

Step 15

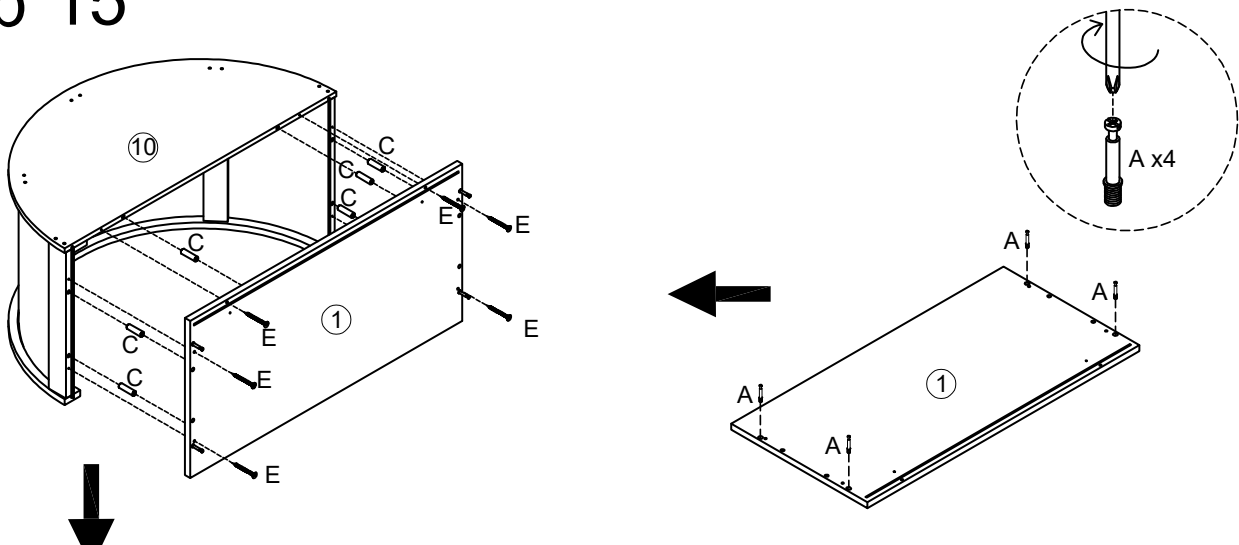


Diagram illustrating the assembly of a curved cabinet unit. Part 10 is being attached to part 1. Screws E are used to secure the side panels. A detail shows a screw A being inserted into a pre-drilled hole.

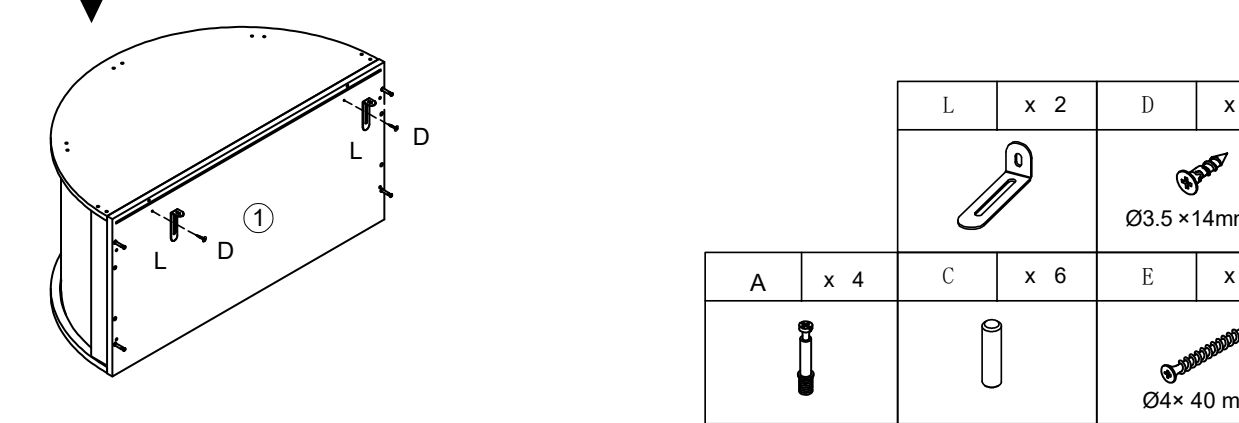


Diagram illustrating the assembly of a curved cabinet unit. Part 1 is being attached to part 10. Screws D are used to secure the side panels. A detail shows a screw L being inserted into a pre-drilled hole.

L	x 2	D	x 2
		 Ø3.5 × 14mm	
A	x 4	C	x 6
		 Ø4 × 40 mm	

Step 16



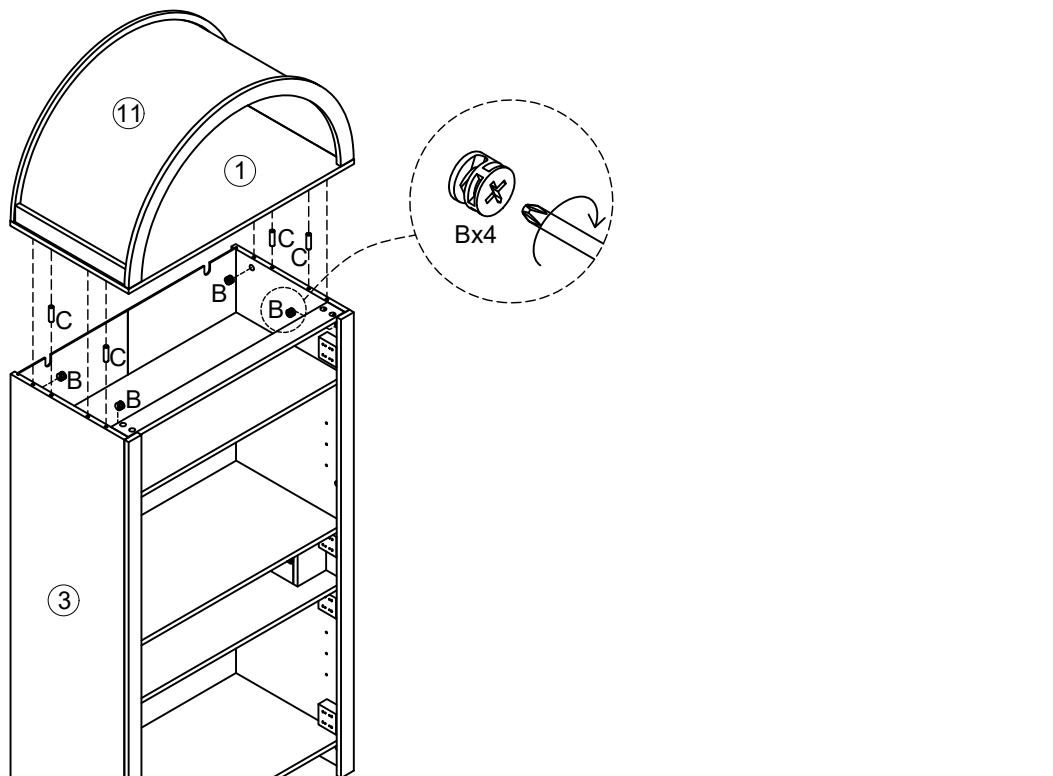


Diagram illustrating the assembly of a curved cabinet unit. Part 11 is being attached to part 1. Screws B and C are used to secure the side panels. A detail shows a screw B being inserted into a pre-drilled hole.



C	x 4	B	x 4
		 Ø15 × 9 mm	

Step 17

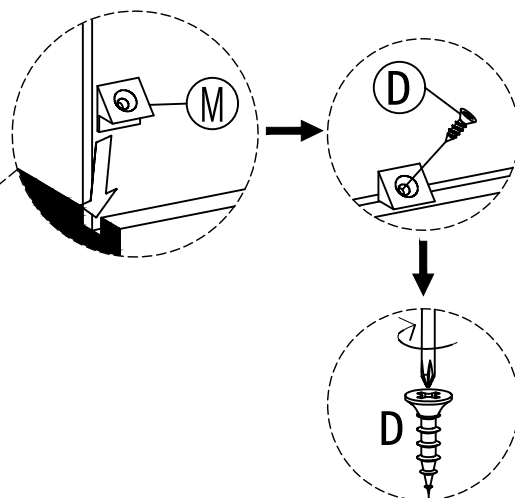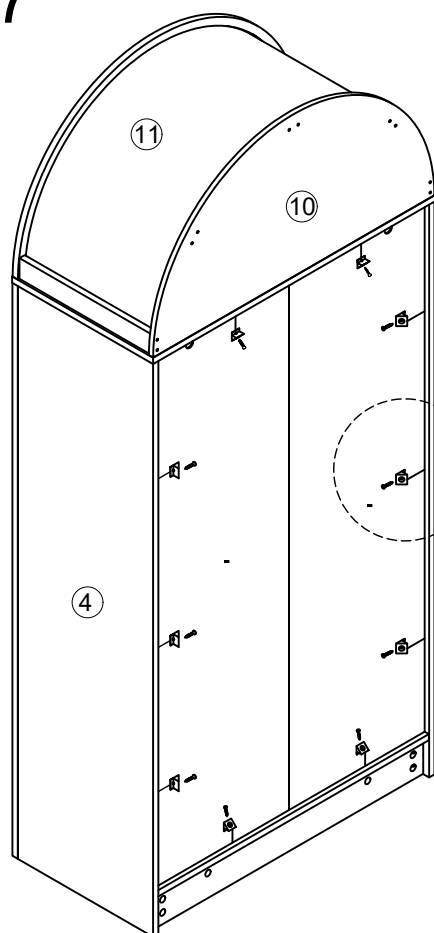


M	x 10	D	x 10
		Ø3.5x14mm	

Step 18

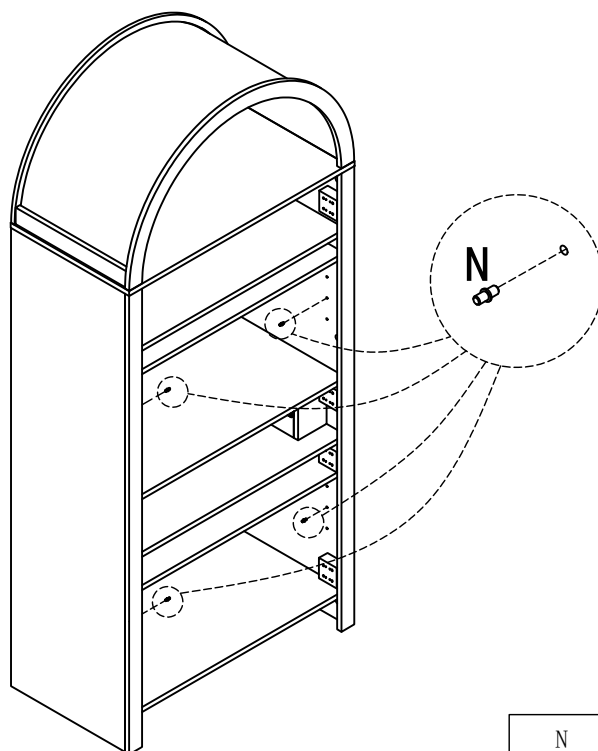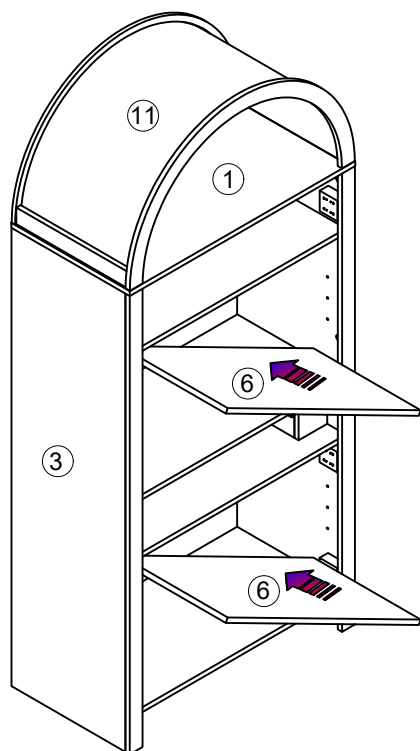


N	x 8

Step 19

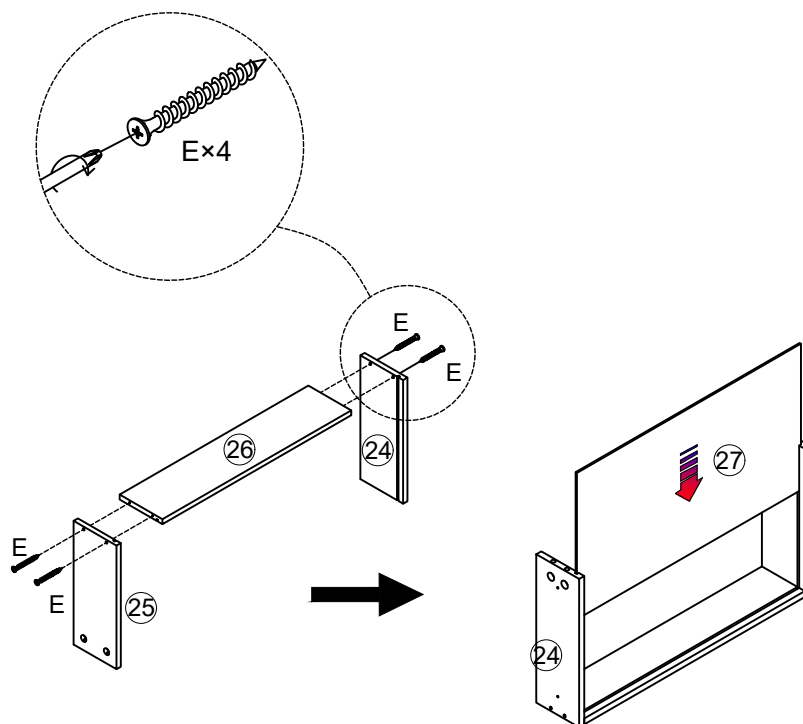


E	x 4
 Ø4×40 mm	

Step 20

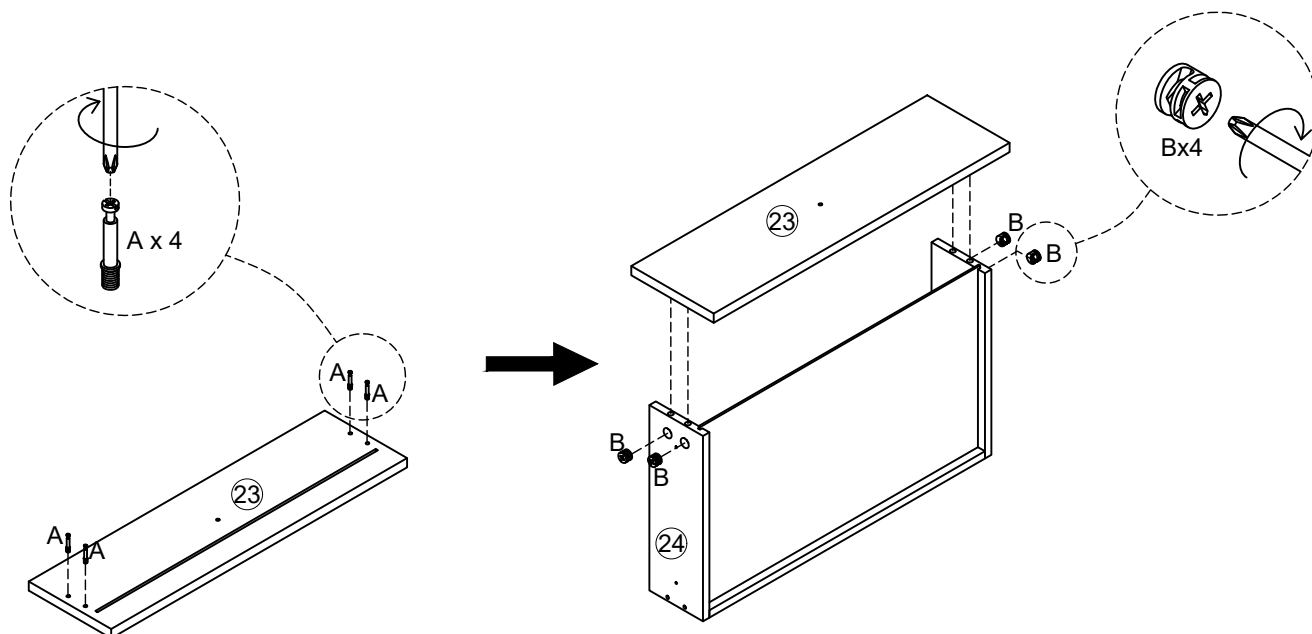


A	x 4	B	x 4
		 Ø15× 9 mm	

Step 21

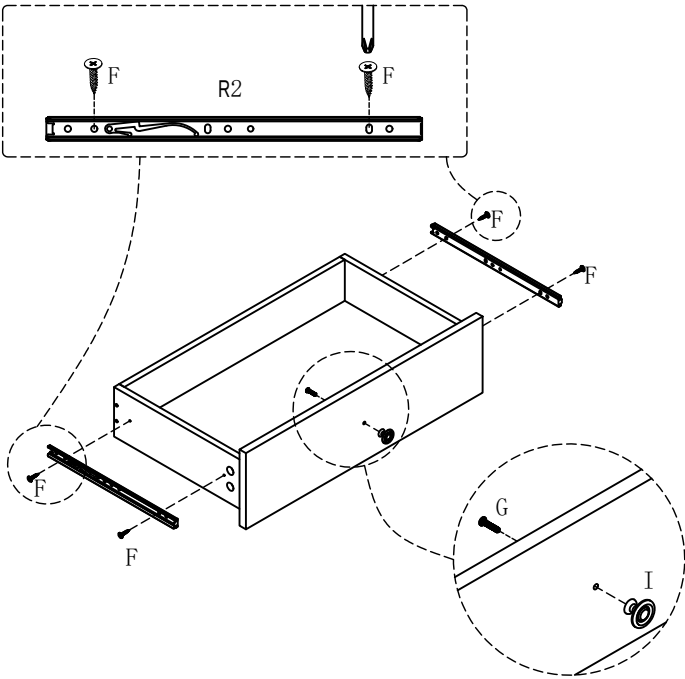


F	x 4	R2	x 2	G	x 1	I	x 1
							
Ø3×12 mm		300 mm		M4×18mm			

Step 22

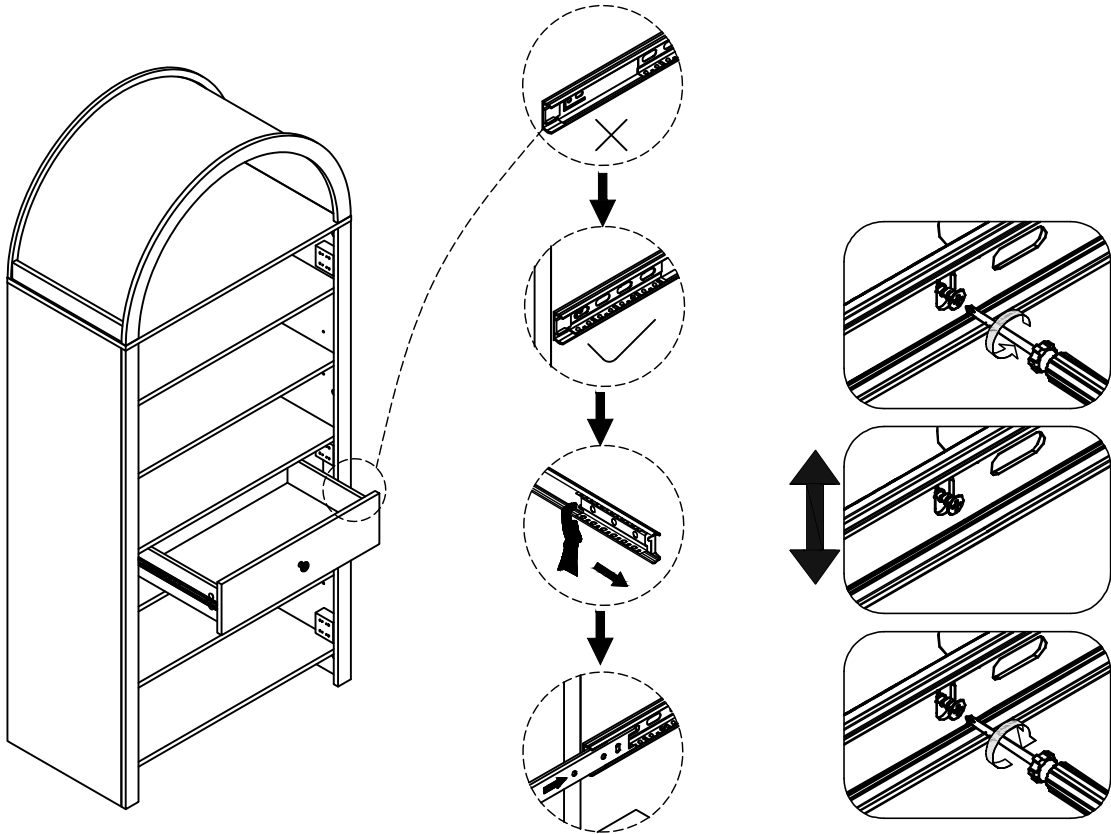



Step 23

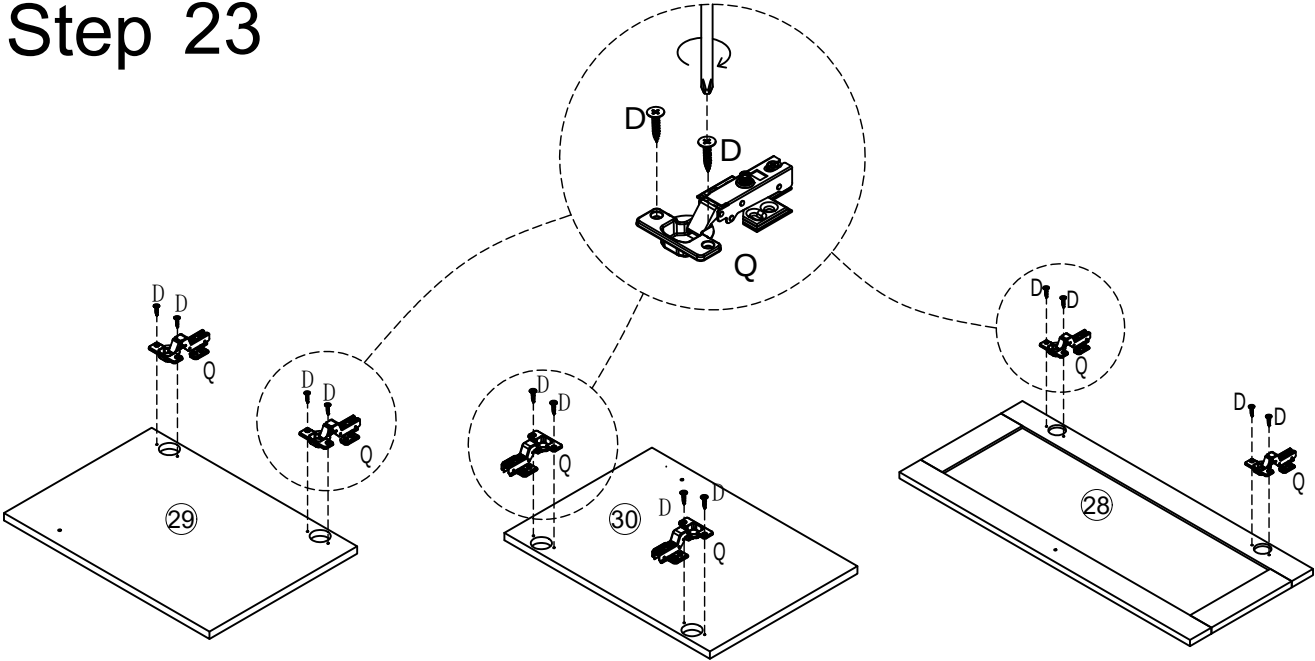

x 2


D	x 16	Q	x 8
 Ø3.5×14 mm			

Step 24




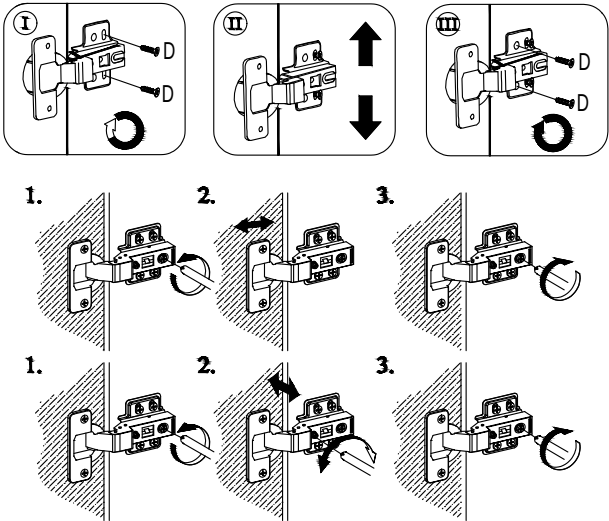
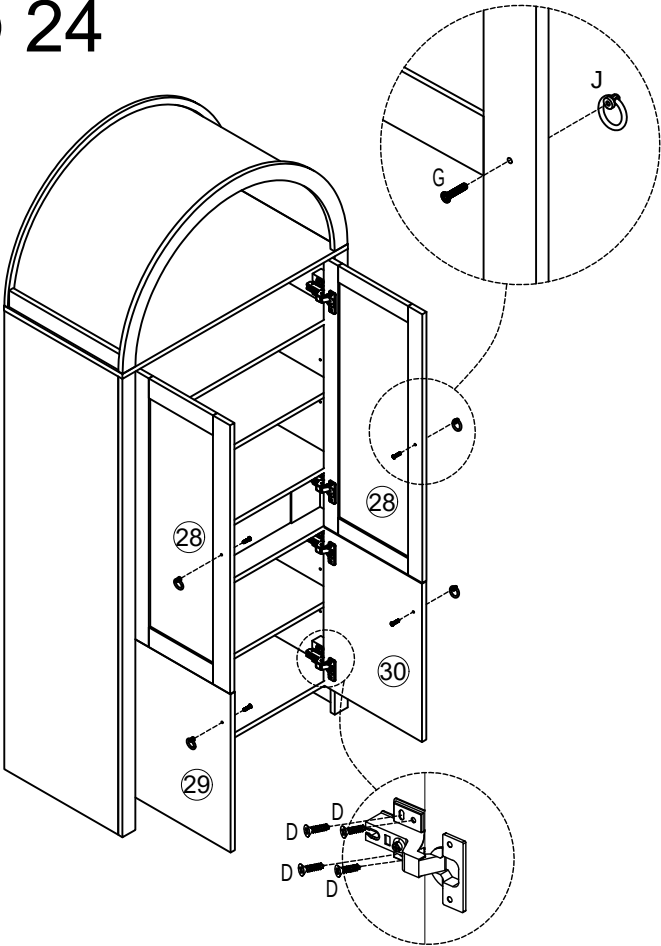


G	x 4	J	x 4	D	x 32
 M4×18mm				 Ø3.5×14 mm	

Step 25

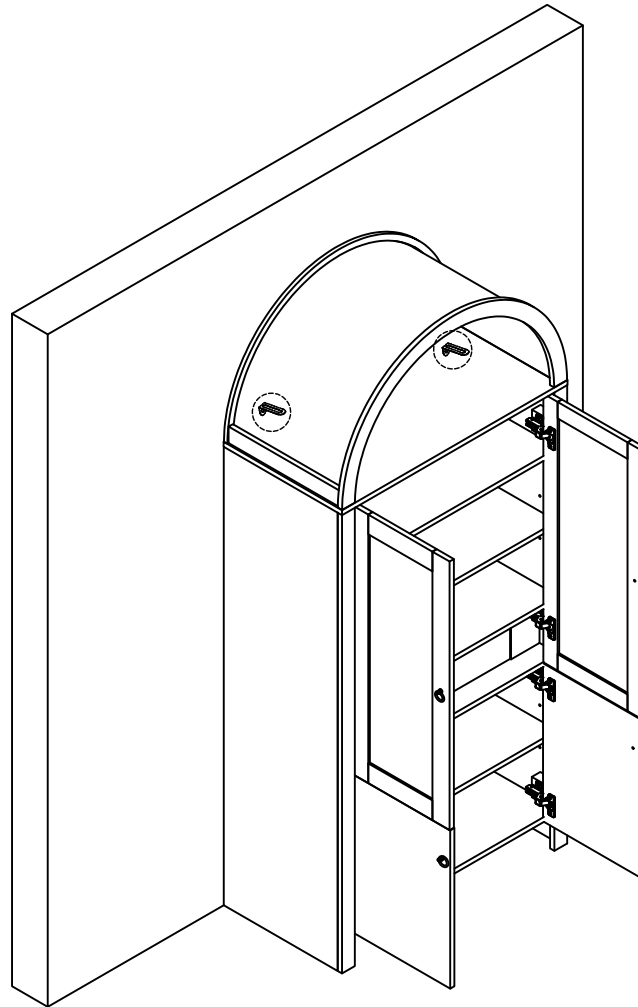

K	x 2	E	x 2
 Ø6×30 mm		 Ø4×40 mm	

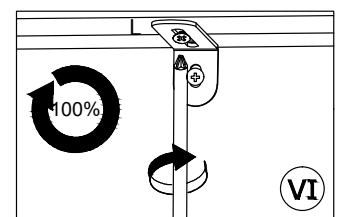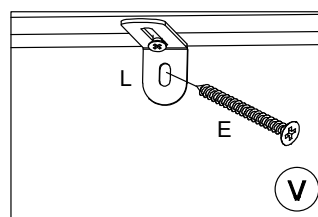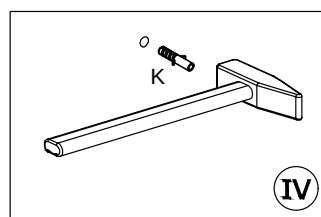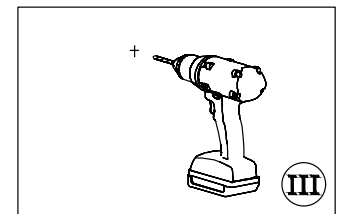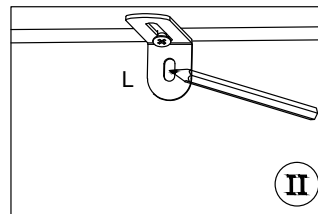

Trouble shooting:

Missing /Wrong / Broken parts and installation issues



Send email with your question, pic and order NO.to **support@garvee.com**



Respond within 24 hours



Issue resolved