



ASSEMBLY INSTRUCTION

ITEM NO. ARMCHAIR WF301654

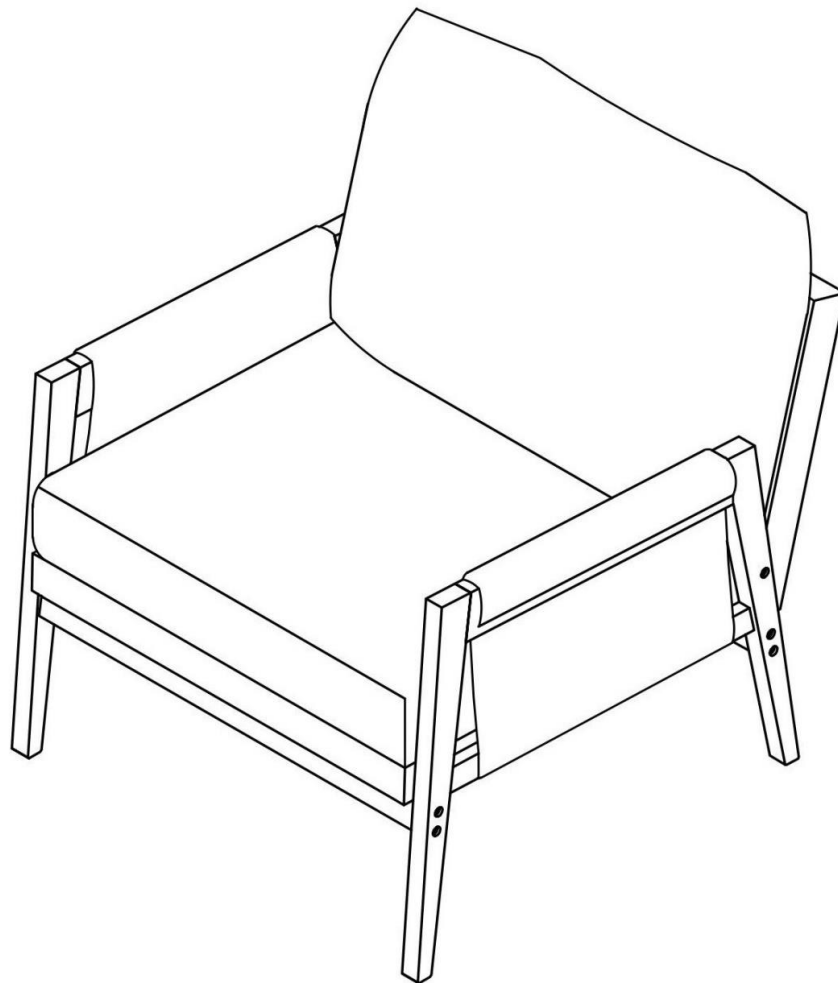





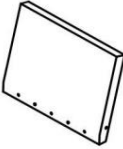

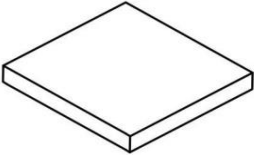





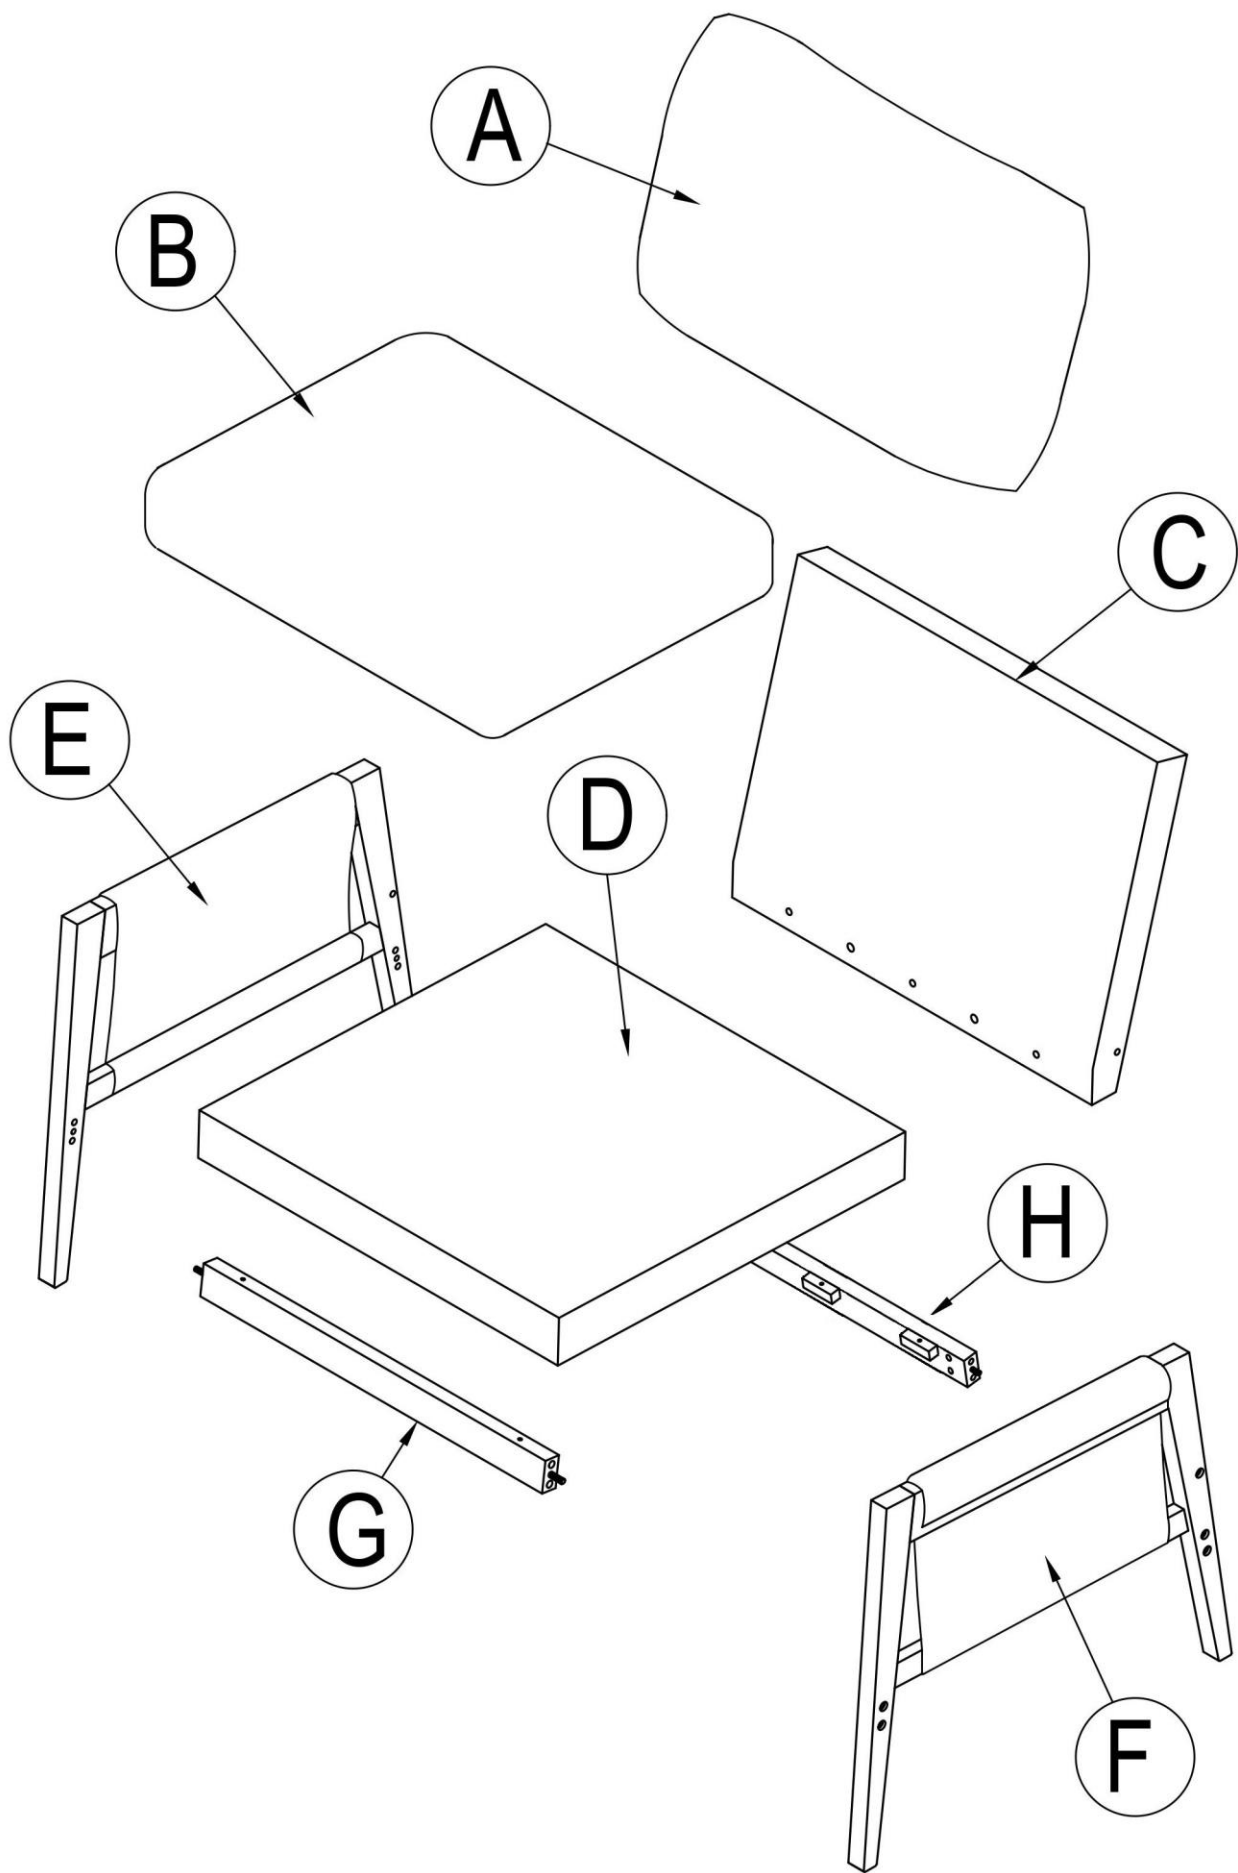

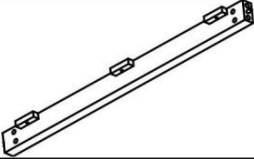

IMPORTANT NOTE:

- ① PLACE ALL PARTS ON A CLEAN AND SMOOTH SURF ACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.
- ② BEFORE TOU BEGIN, KINDLKY FOLLOW THE ASSEBLY INSTRUCTIONS STEP BY.
- ③ DO NOT TIGHTEN ALL SCREWS AND BOLTS UNTIL THE CHAIR IS FULLY SET-UP.




Part List

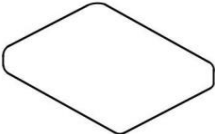
Hardware List
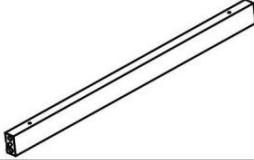
<p>Ⓐ</p>  <p>BACK CUSHION (1 PC)</p>	<p>①</p>  <p>Ø 5/16" x 60mm</p> <p>BOLT (3 pcs)</p>
<p>Ⓑ</p>  <p>SEAT CUSHION (1 PC)</p>	<p>②</p>  <p>Ø 1/4" x 60mm</p> <p>BOLT (10 pcs)</p>
<p>Ⓒ</p>  <p>BACK FRAME (1 PC)</p>	<p>③</p>  <p>Ø 5/16" x 13mm</p> <p>FLAT WASHER (3 pcs)</p>
<p>Ⓓ</p>  <p>SEAT FRAME (1 PC)</p>	<p>④</p>  <p>Ø 5/16" x 19mm</p> <p>LOCK WASHER (3 pcs)</p>
<p>Ⓔ</p>  <p>ARM CHAIR-LEFT (1 PC)</p>	<p>⑤</p>  <p>Ø 1/4" x 12 * 10mm</p> <p>NUT (8 pcs)</p>
<p>Ⓕ</p>  <p>ARM CHAIR-RIGHT (1 PC)</p>	<p>⑥</p>  <p>Ø 10 x 30mm</p> <p>WOOD DOWEL (6 pcs)</p>
<p>Ⓖ</p>  <p>FRONT STRETCHER (1 PC)</p>	<p>⑦</p>  <p>M4 x 45mm</p> <p>SCREW (4 pcs)</p>
<p>Ⓗ</p>  <p>BACK STRETCHER (1 PC)</p>	<p>⑧</p>  <p>4mm</p> <p>ALLEN KEY (1 pc)</p>


Note:

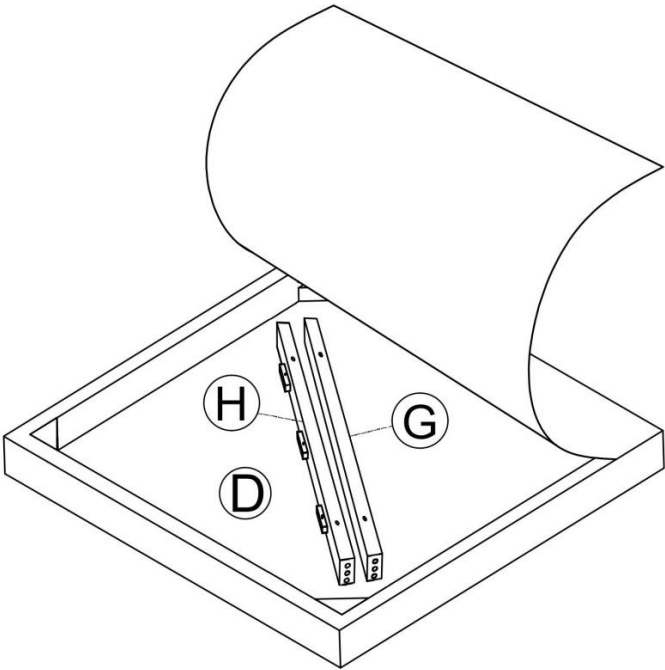


STEP 1:

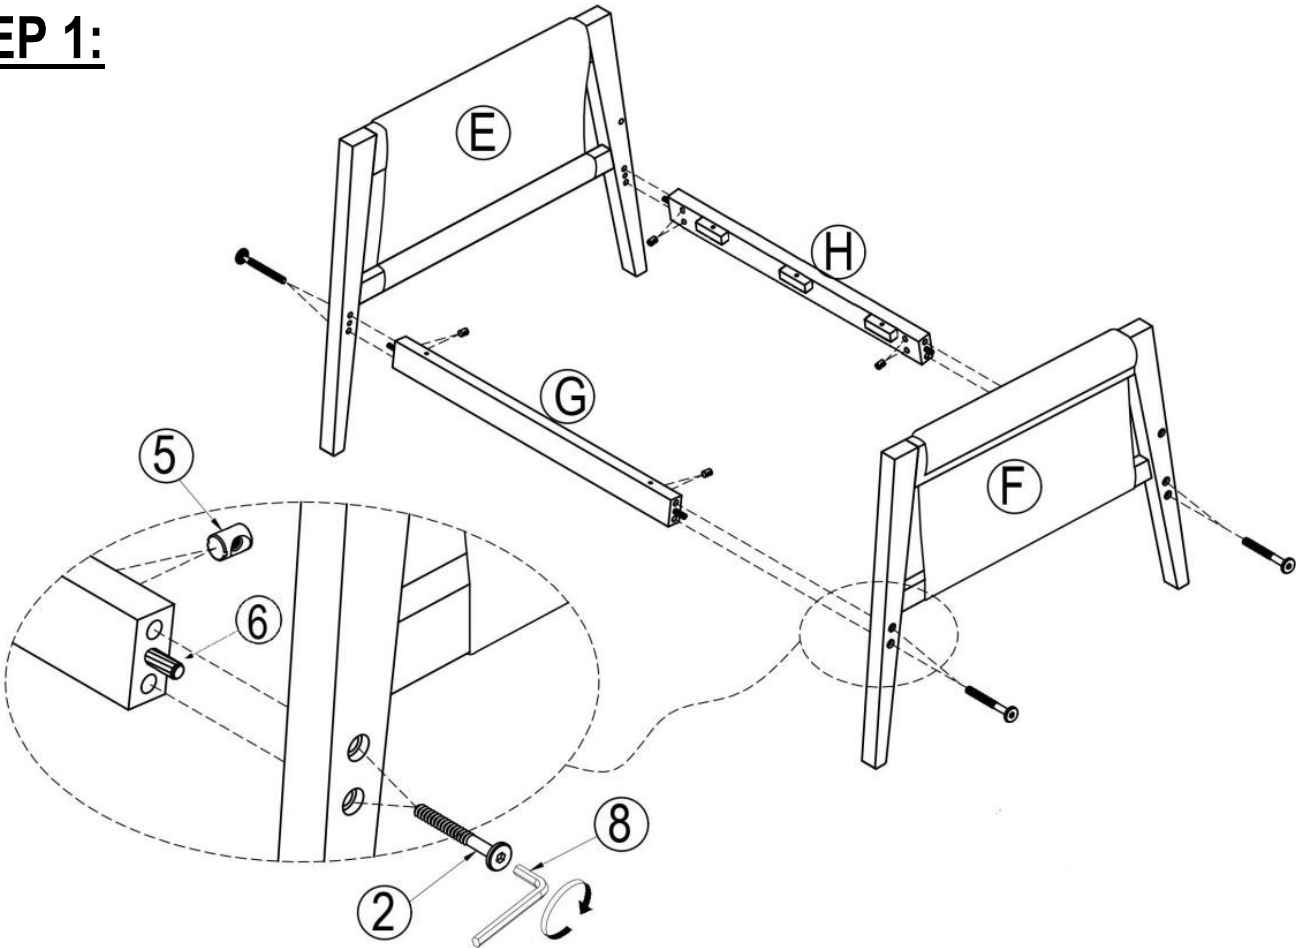


STEP 2:

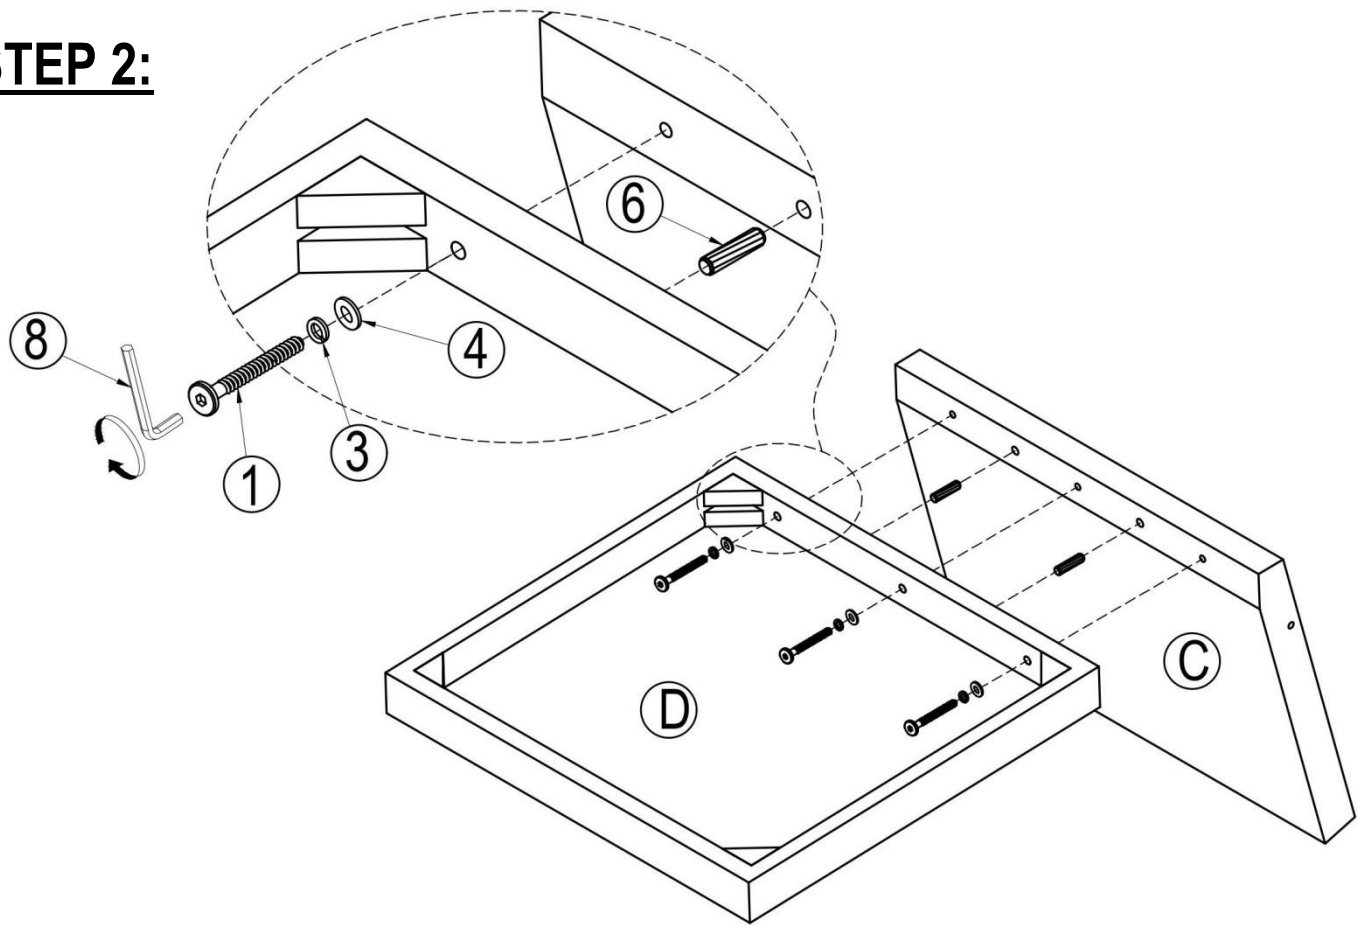

STEP 3:

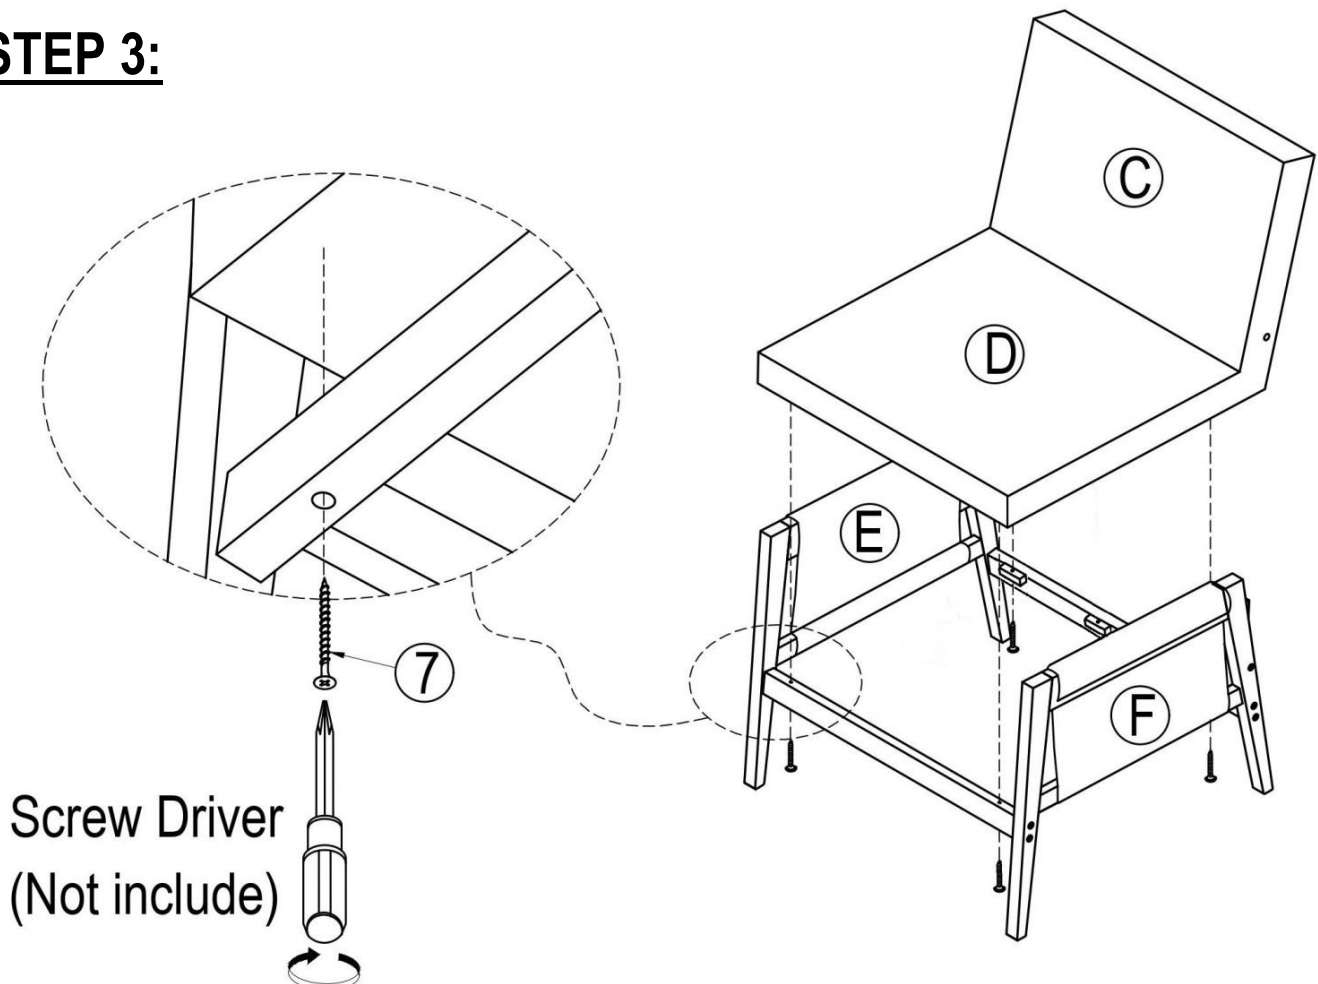

STEP 4:

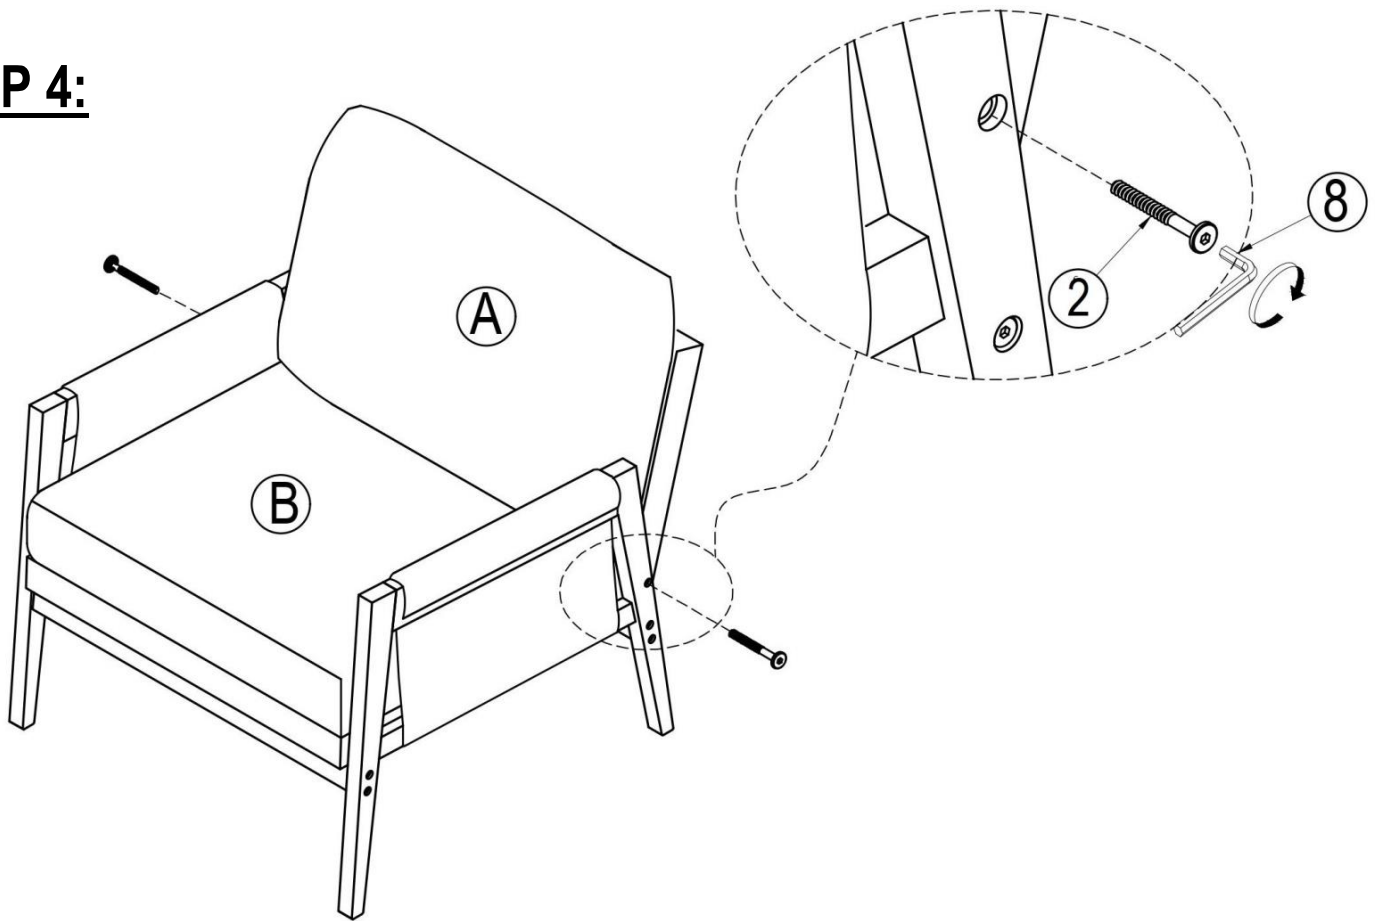

COMPLETED

