
Kitchen Island Cart

Assembly Instructions - Please keep for future reference

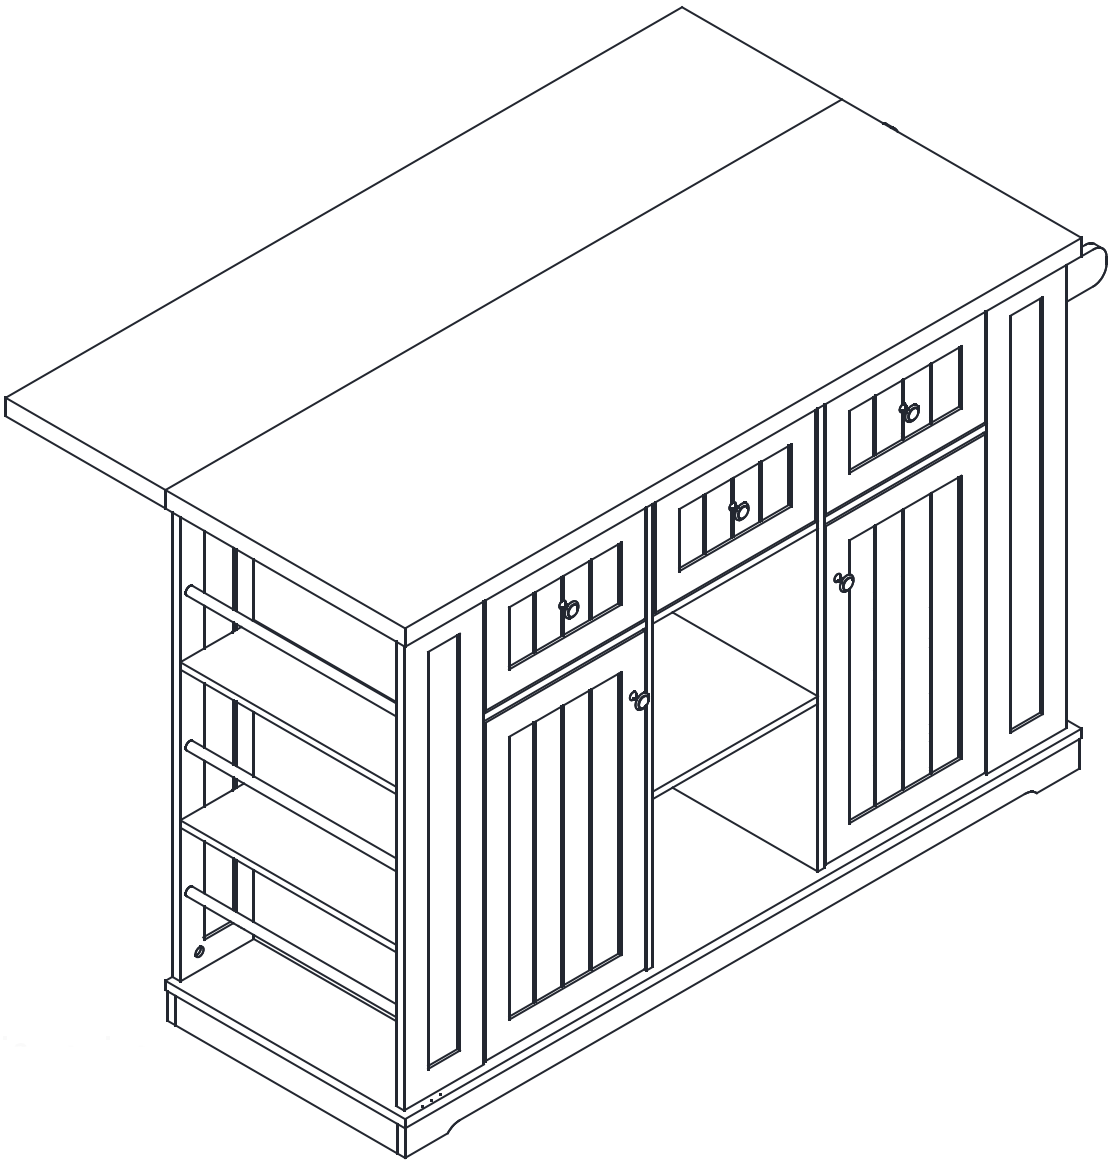

Important – Please read these instructions fully before starting assembly

Safety and Care Advice

Important – Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on the following pages.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• During assembly do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor.

• Parts of the assembly will be easier with 2 people.



• To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

• Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts

• Regularly check and ensure That all bolts and fittings are tightened properly.

WARNING
In order to help prevent overturning – please follow these instructions
























To help prevent product toppling over please follow the below steps:-

Use the anti tip stap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose


Components - Fittings

Please check you have all the panels listed below

Note:The quantities below are the correct amount to complete the assembly. In some cases, more fittings may be supplied than required.

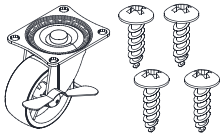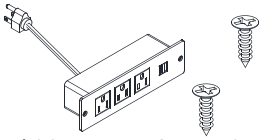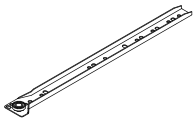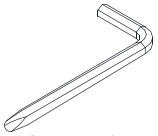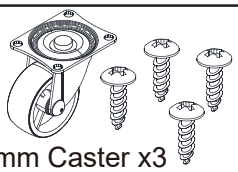A  Cam Bolt x 98	B  6*30mm Dowel x 72	C  Cam lock x 98	D  4*25mm Screw x 32
E  nut x 2	F  4*12mm Locking caster x2	G  6*30mm Screw x 2	H  3.5*12mm Screw x 26
I  Connecting rods x2	J  Shelf support pin x 13	K  3.5*14mm Straight bend hinge x 4set	L  4*20mm Handle x 2SET
M  3*16mm Door stopper x 2SET	N  4*12mm Handle x 3SET	O  3.5*12mm socket x 1	CL  300mm runner x 3
CR  300mm runner x 3	DR  300mm runner x 3	DL  300mm runner x 3	P  Allen key x 1
Q  3*12mm Magnetic sheet x 2SET	R  4*12mm Caster x3	S  6*25mm Screw x4	T  m6 nut x 4
U  6mm gasket x8	V  3.5*14mm Screw x4	W  Iron pipe spring x 4	

Tools required

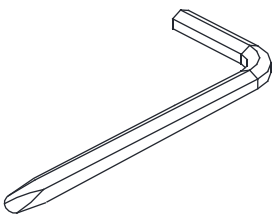


Phillips screwdriver
(medium & large)

Using Camlocks


Step 1

Connect the male camlock as diected in the assembly instructions using a scewdriver.

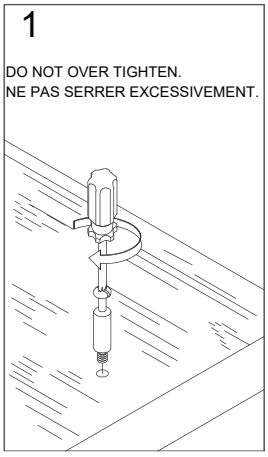

Step 2


Push the male camlock into the entry hole.

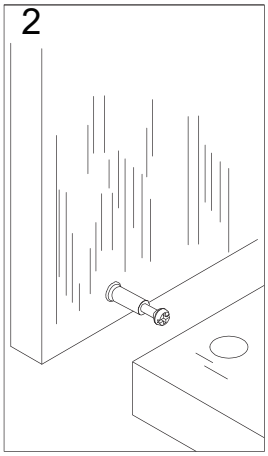

Step 3

Insert the female camlock as shown in the instruction.

Note：ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

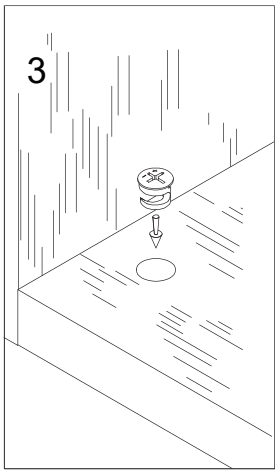


Step 4


Turn the female camlock clockwise with a screwdriver.

You should feel a click when the camlock is locked in place.















The joint is now secure.

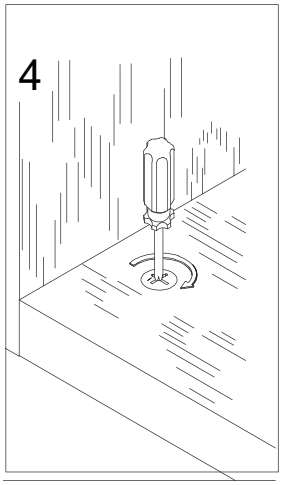


















Assembly Instructions

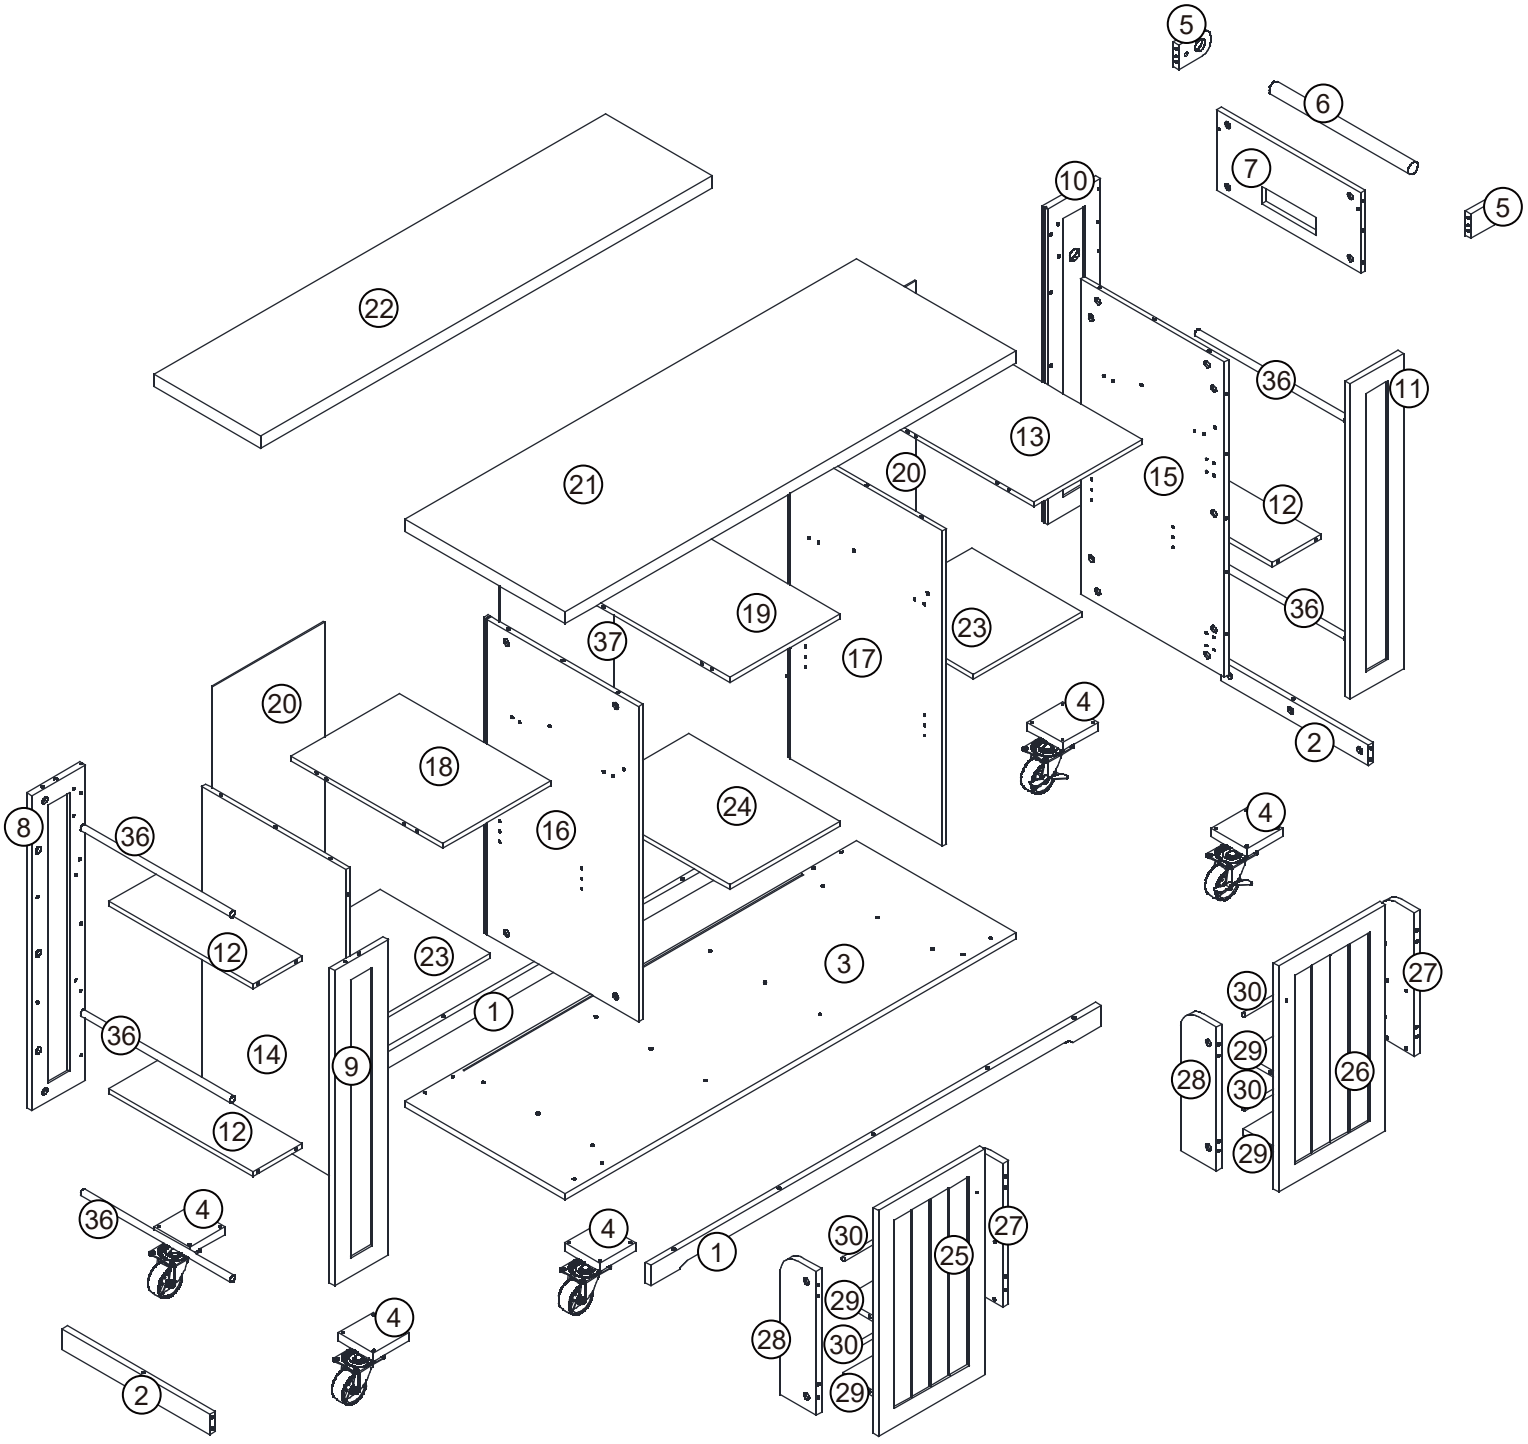

Assembly Instructions

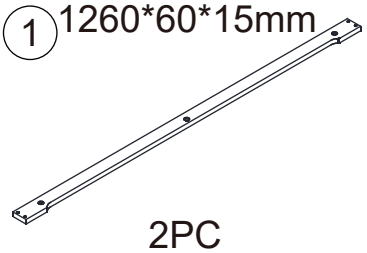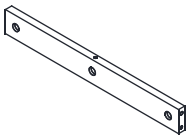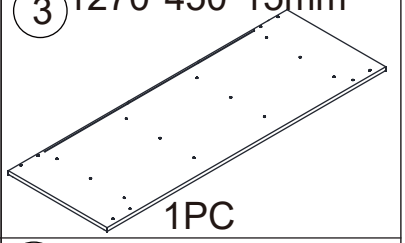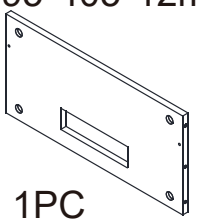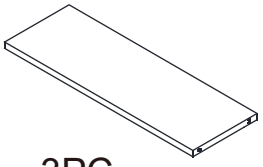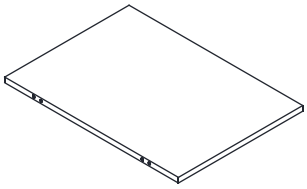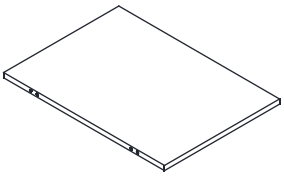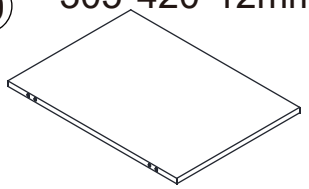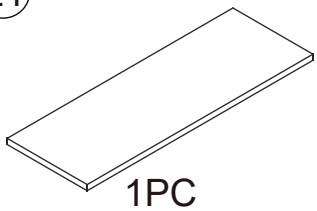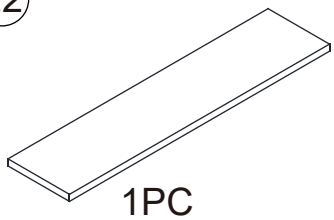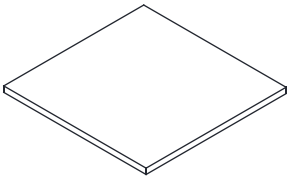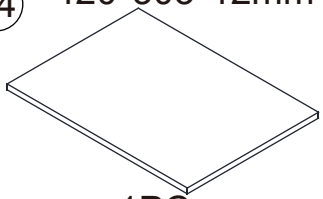
1 1260*60*15mm  2PC	2 410*60*15mm  2PC	3 1270*450*15mm  1PC
34 298*265*3mm  3PC	7 195*405*12mm  1PC	12 405*135*12mm  3PC
13 305*420*12mm  1PC	14 767*405*12mm  1PC	15 767*405*12mm  1PC
16 767*442*12mm  1PC	17 767*442 *12mm  1PC	18 305*420*12mm  1PC
19 305*420*12mm  1PC	20 780*303*3mm  2PC	21 1270*450*25mm  1PC
22 1270*300*25mm  1PC	23 299*303*12mm  2PC	24 420*303*12mm  1PC
37 780*313*3mm  1PC		

Assembly Instructions

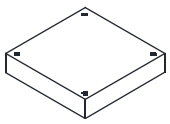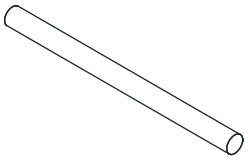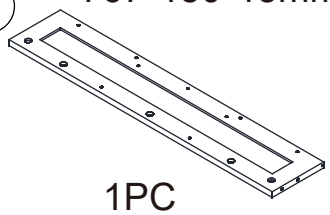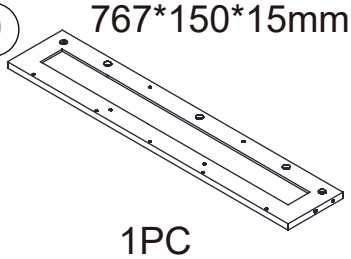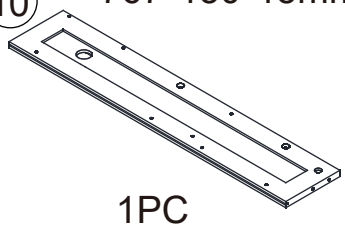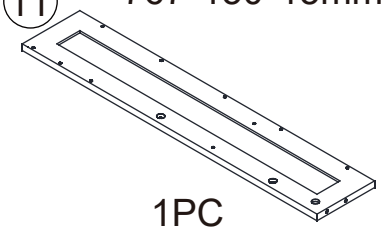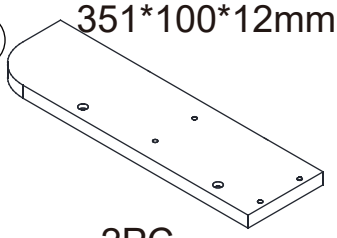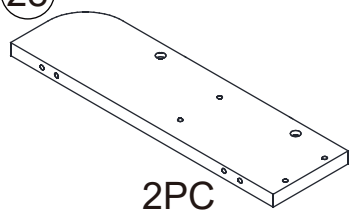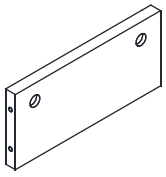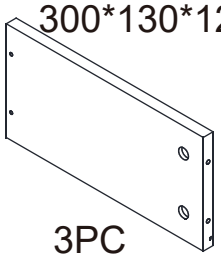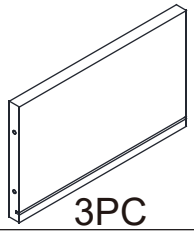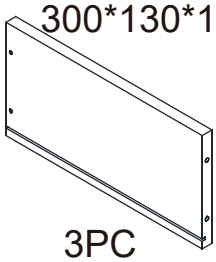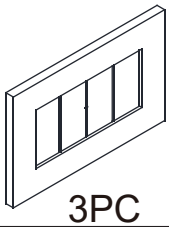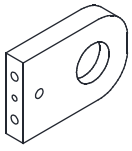
4 100*100*20mm  5PC	6 24*372mm  1PC	8 767*150*15mm  1PC
9 767*150*15mm  1PC	10 767*150*15mm  1PC	11 767*150*15mm  1PC
25 553*299*15mm  1PC	26 553*299*15mm  1PC	27 351*100*12mm  2PC
28 351*100*12mm  2PC	29 220*100*12mm  4PC	30 10*232mm  4PC
31 300*130*12mm  3PC	32 255*130*12mm  3PC	33 300*130*12mm  3PC
35 300*195*15mm  3PC	36 15*413mm  5PC	5 90*60*15mm  2PC

Assembly Instructions

Step 1

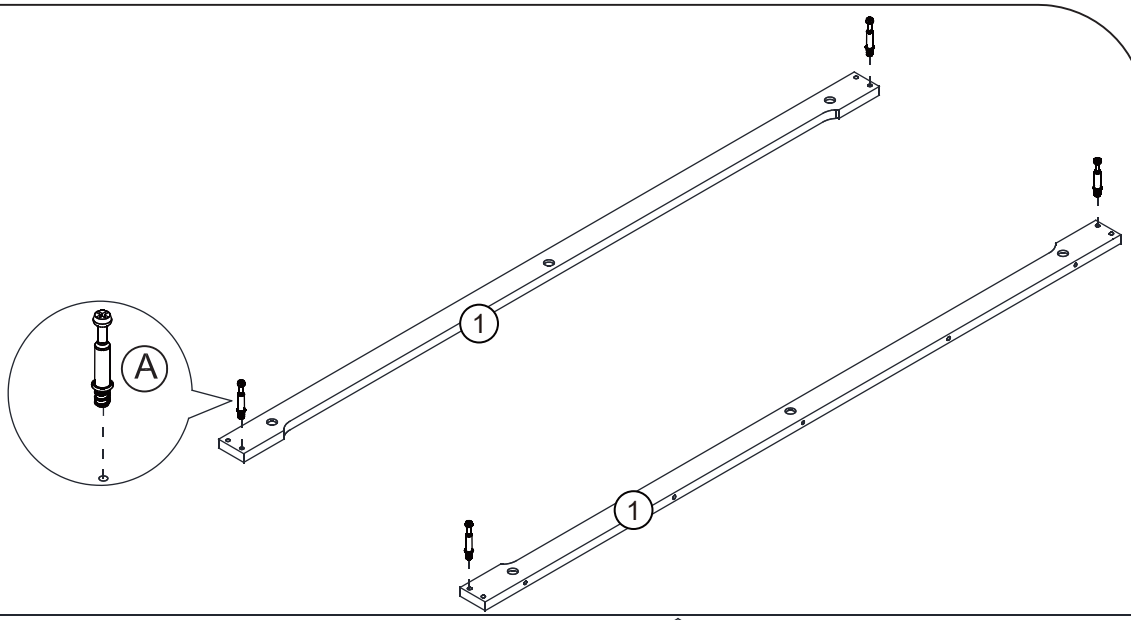


A



Cam Bolt x4

Step 2

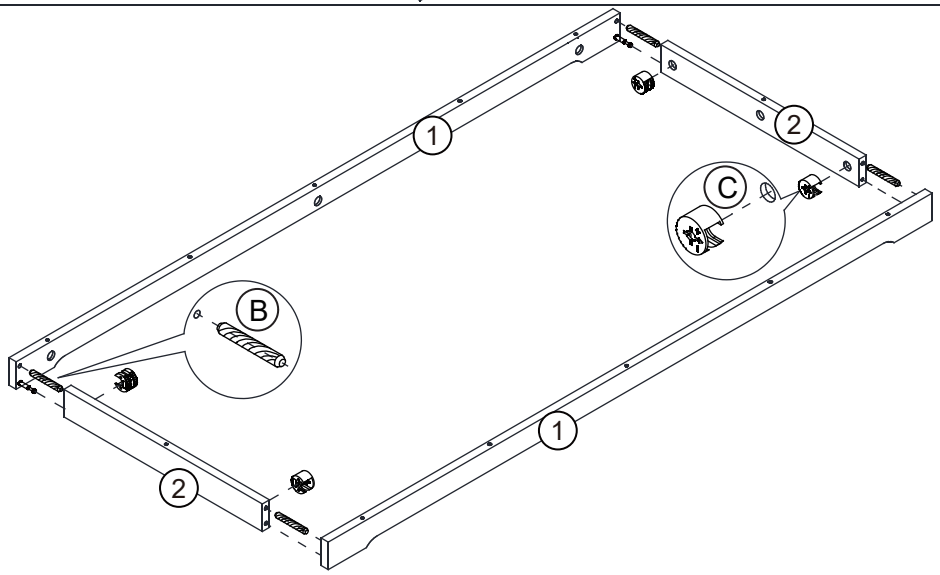


C




Cam lock x 4

B




6*30mm Dowel x 4

Step 3

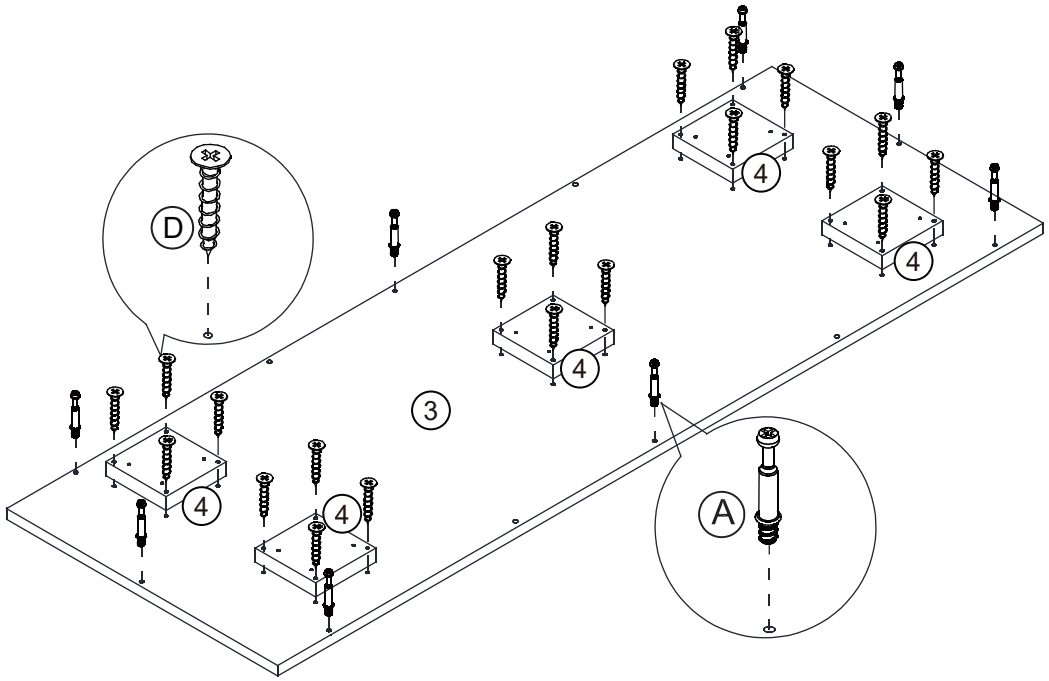


D



4*25mm Screw x 20


A



Cam Bolt x8

Assembly Instructions


Step 4

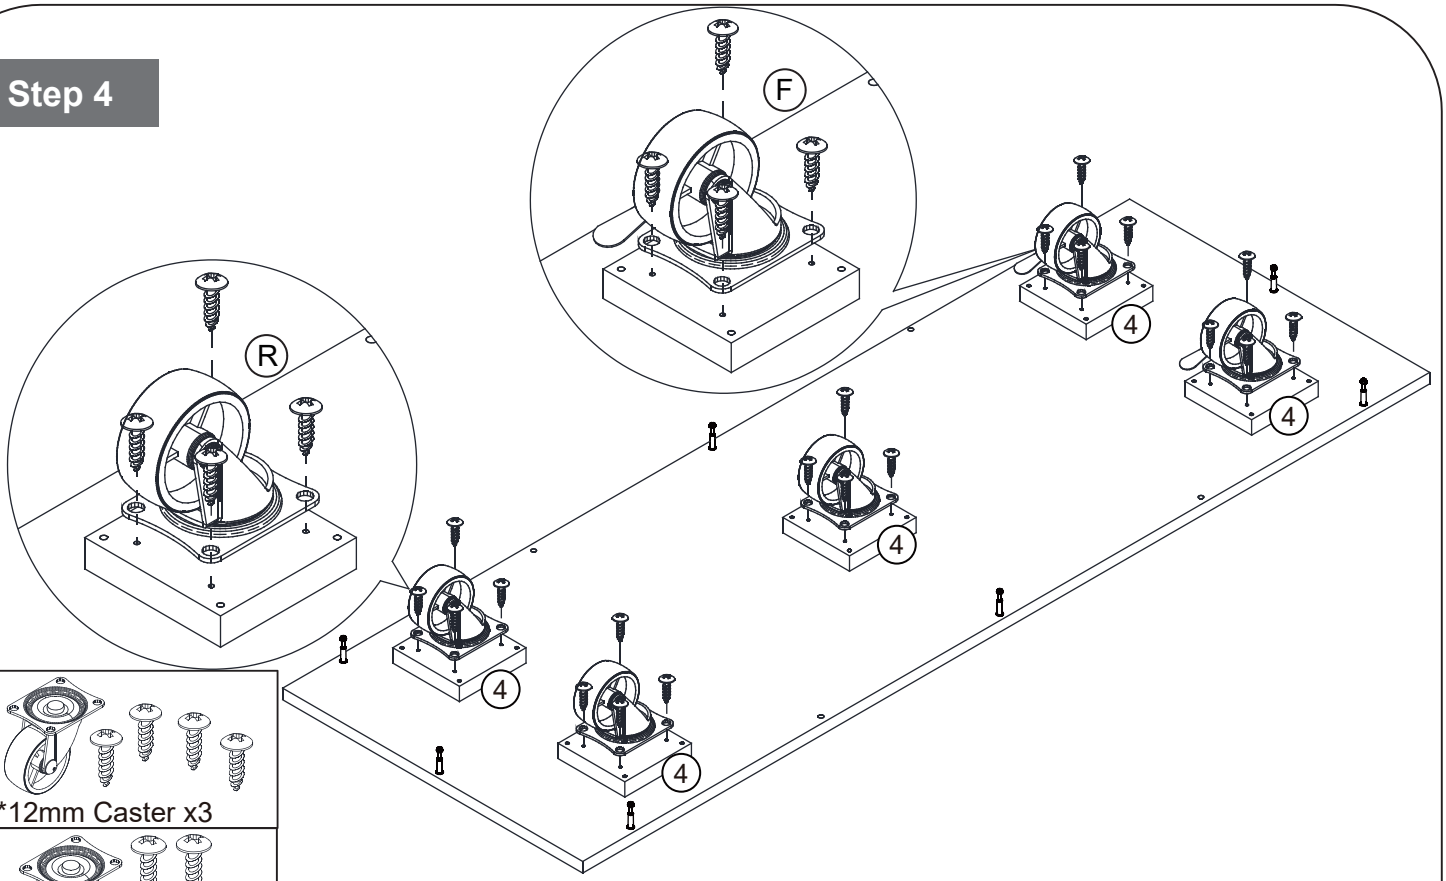

R


4*12mm Caster x3

F

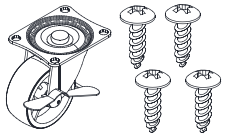


4*12mm Locking caster x2

Step 5

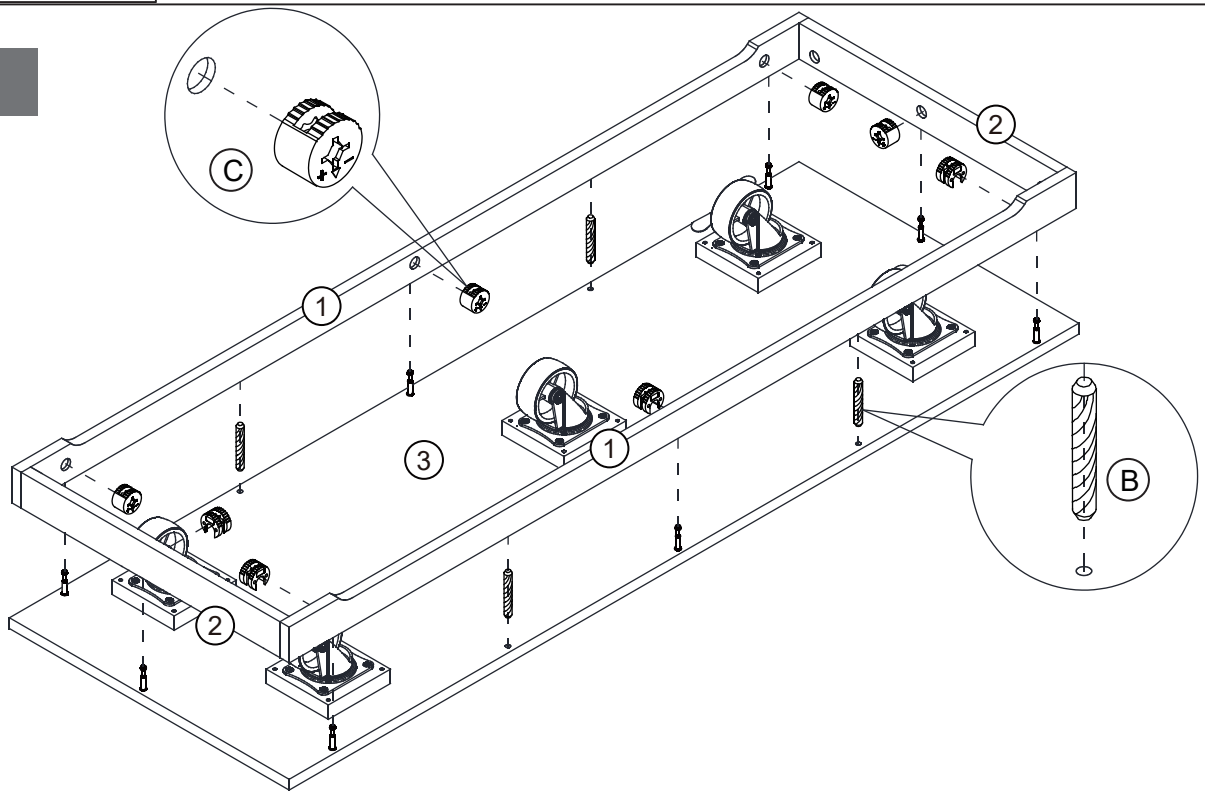

B



6*30mm Dowel x 4


C




Cam lock x 8


Assembly Instructions

Step 6

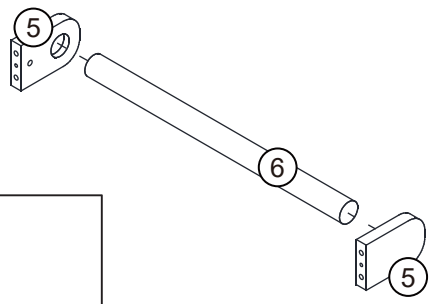

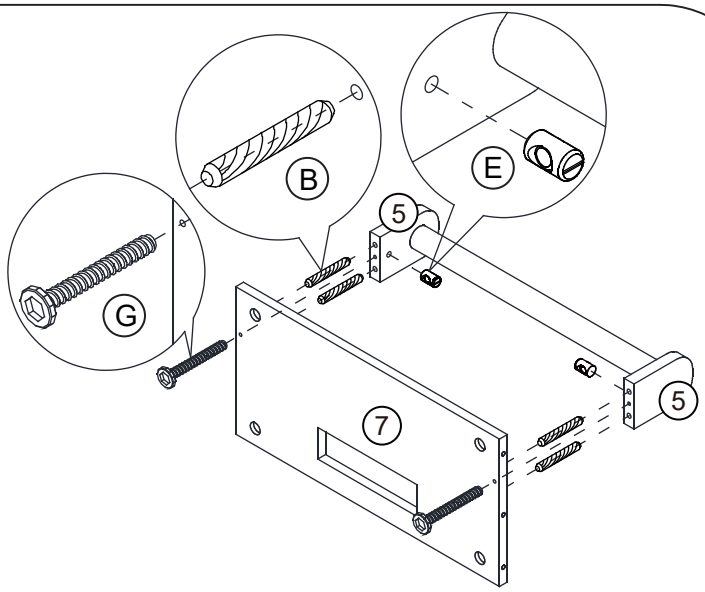


G




6*30mm Screw x 2

B




6*30mm Dowel x 4


E




nut x 2

Step 7

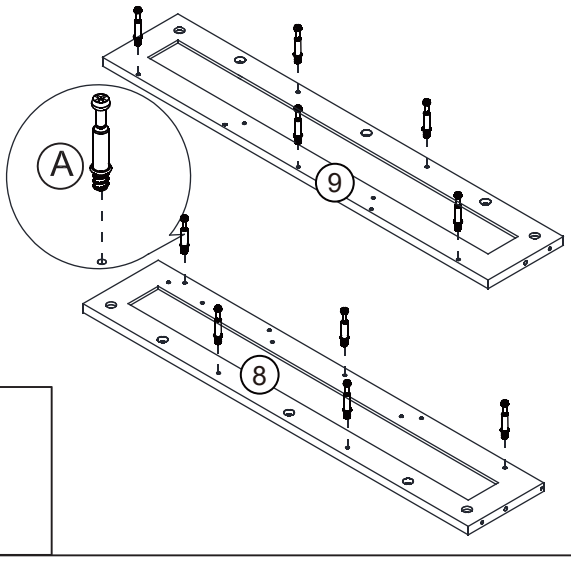

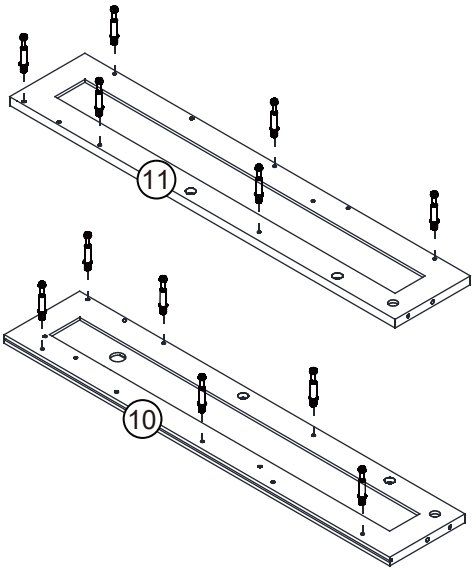



A




Cam Bolt x22

Step 8

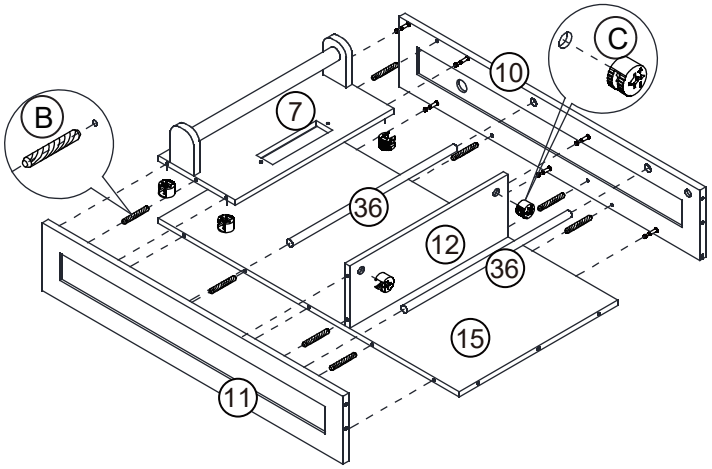

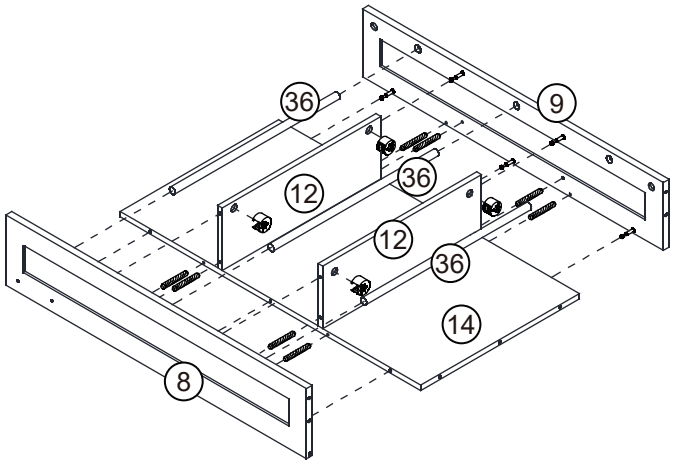

B



6*30mm Dowel x 16


C



Cam lock x 10


Assembly Instructions

Step 9

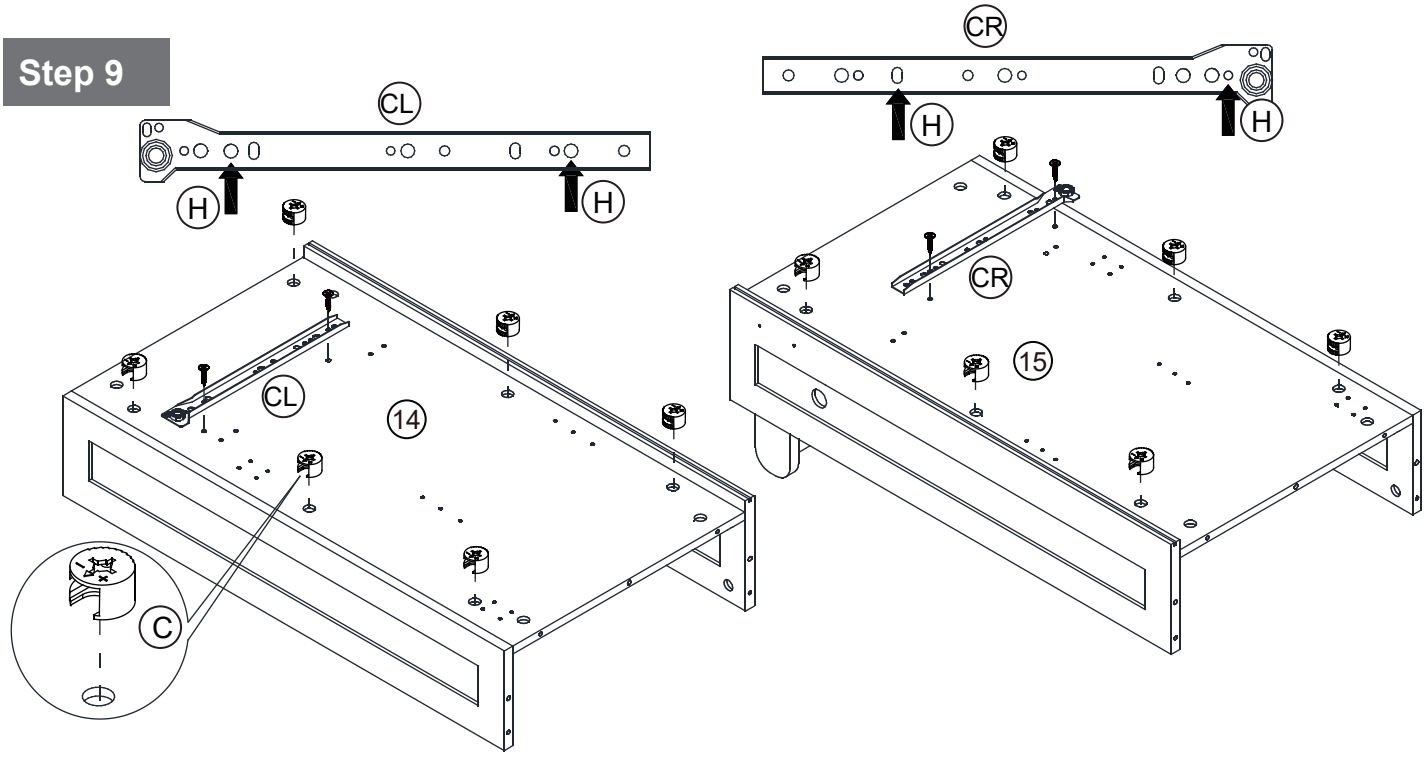

CL	CR	C	H
300mm runner x 1	300mm runner x 1	Cam lock x 12	3.5*12mm Screw x 4


Step 10


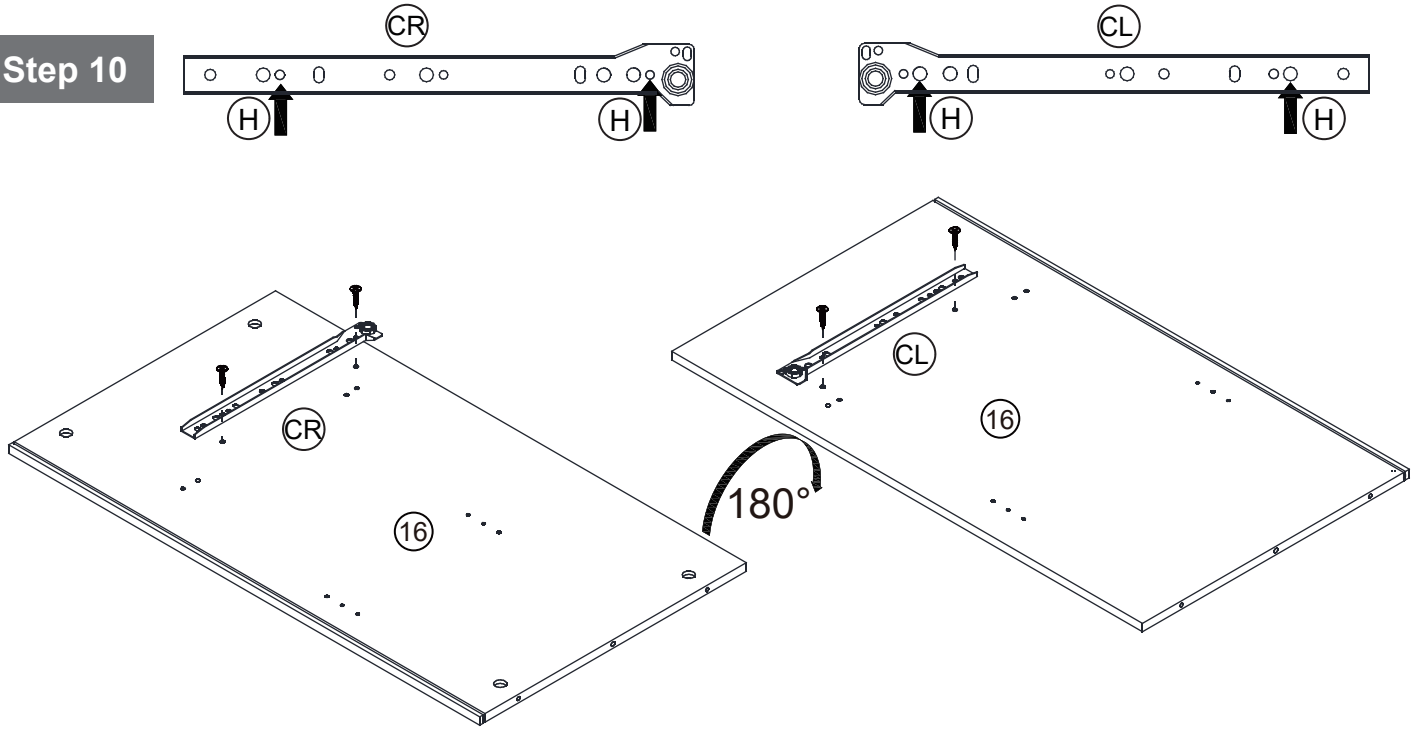


CL	CR	H
300mm runner x 1	300mm runner x 1	3.5*12mm Screw x 4


Assembly Instructions

Step 11

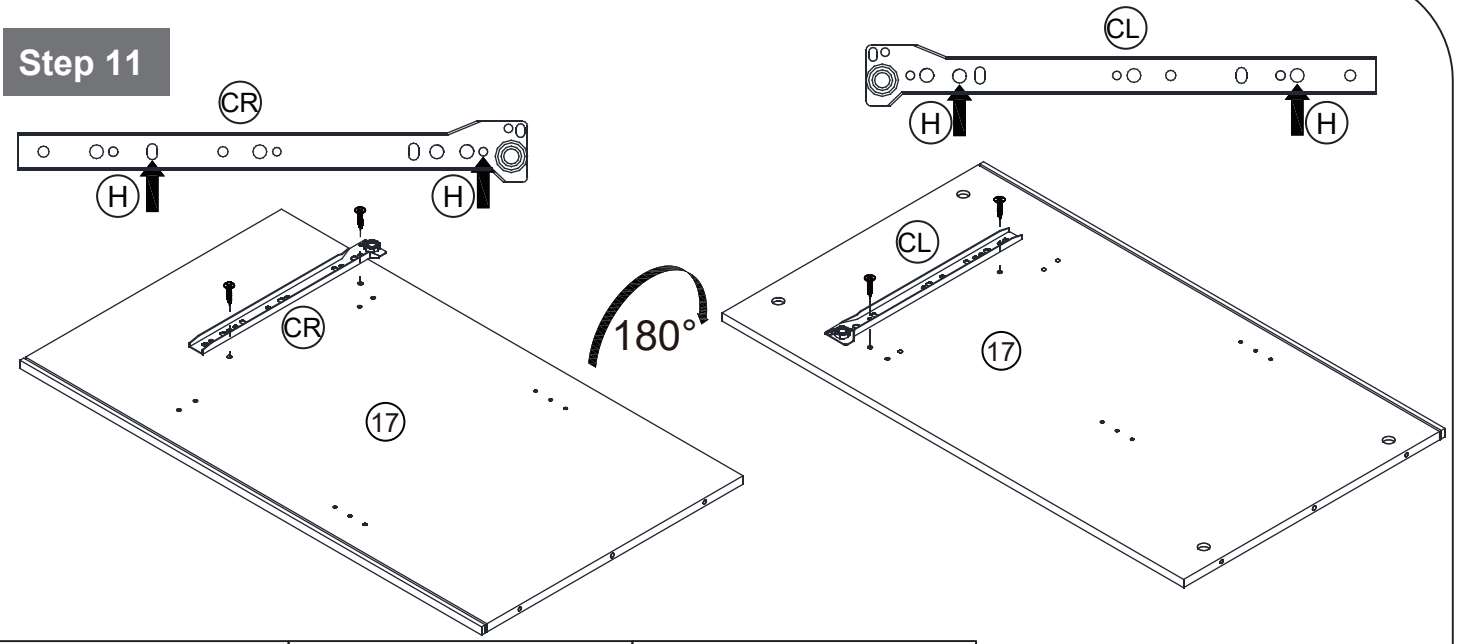

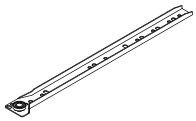CL	CR	H
		
300mm runner x 1	300mm runner x 1	3.5*12mm Screw x 4


Step 12

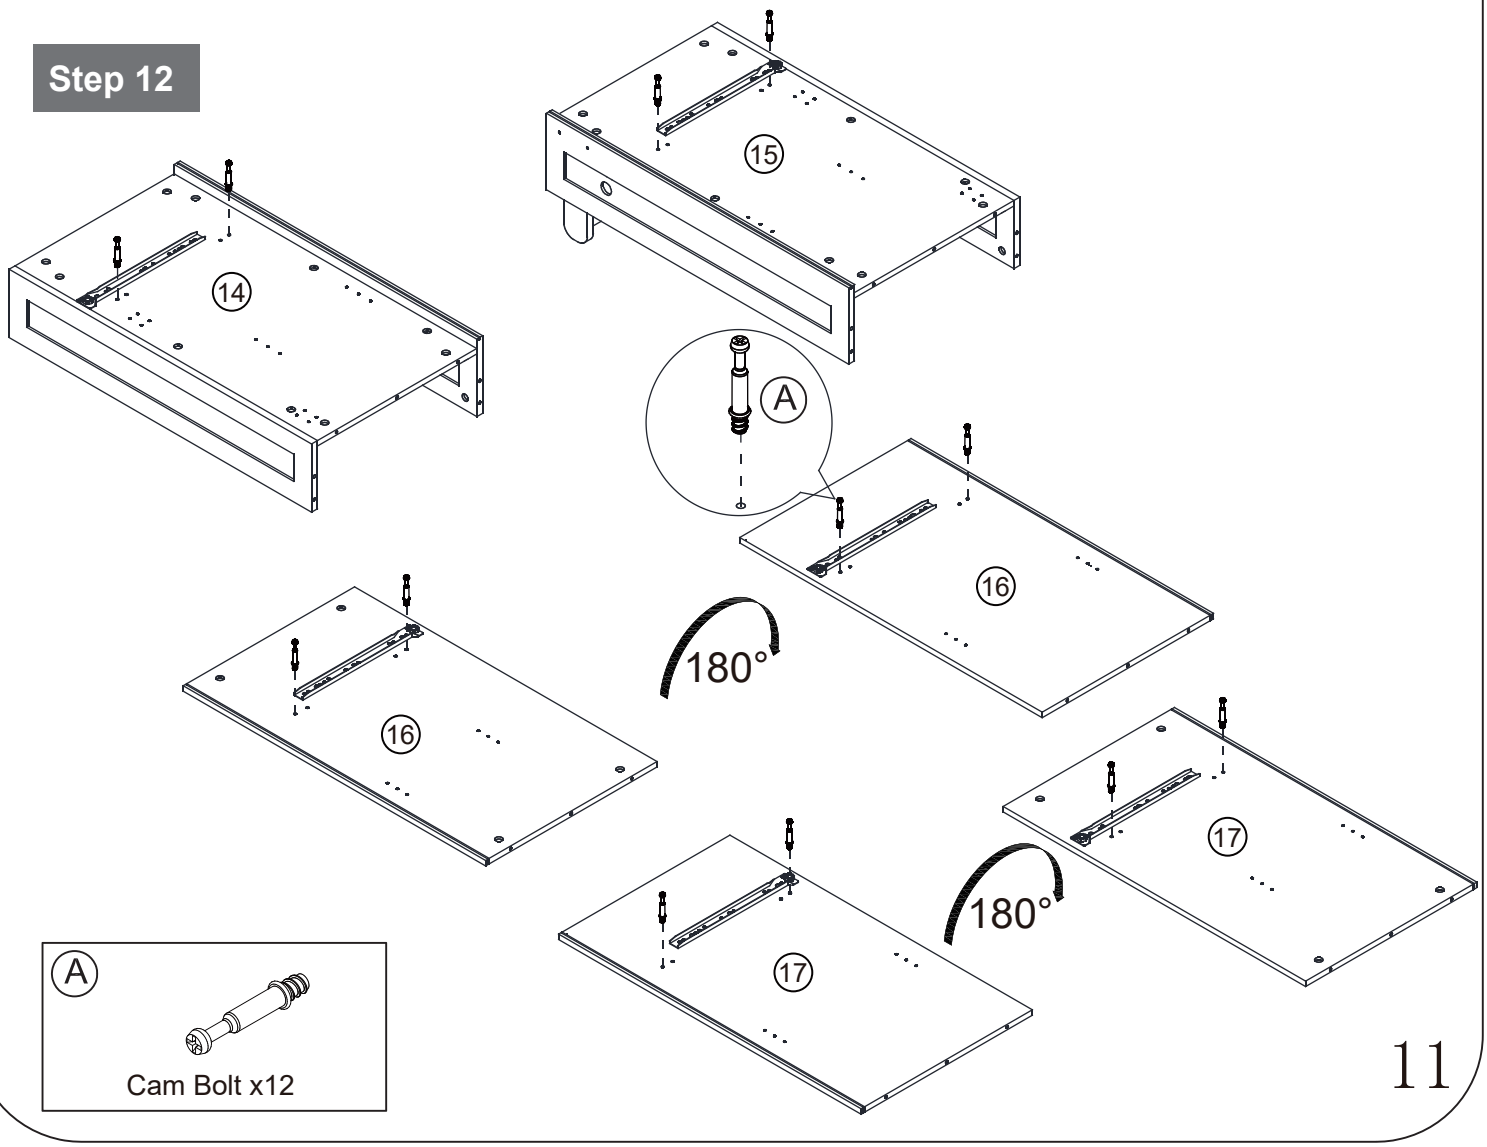


A
Cam Bolt x12

Assembly Instructions

Step 13

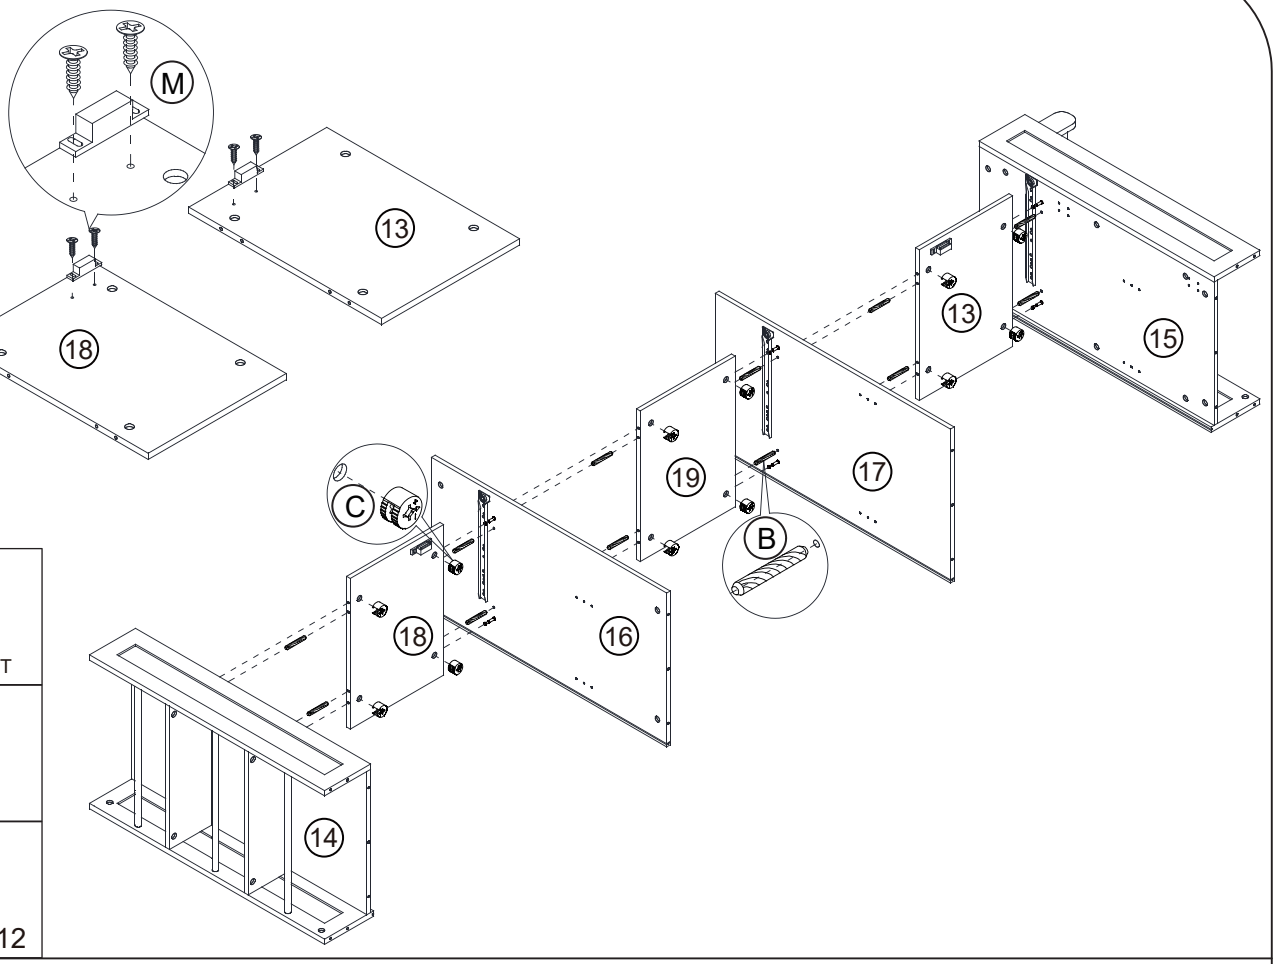

M




3*16mm Base knobx 2SET

C




Cam lock x 12

B




6*30mm Dowel x 12

Step 14

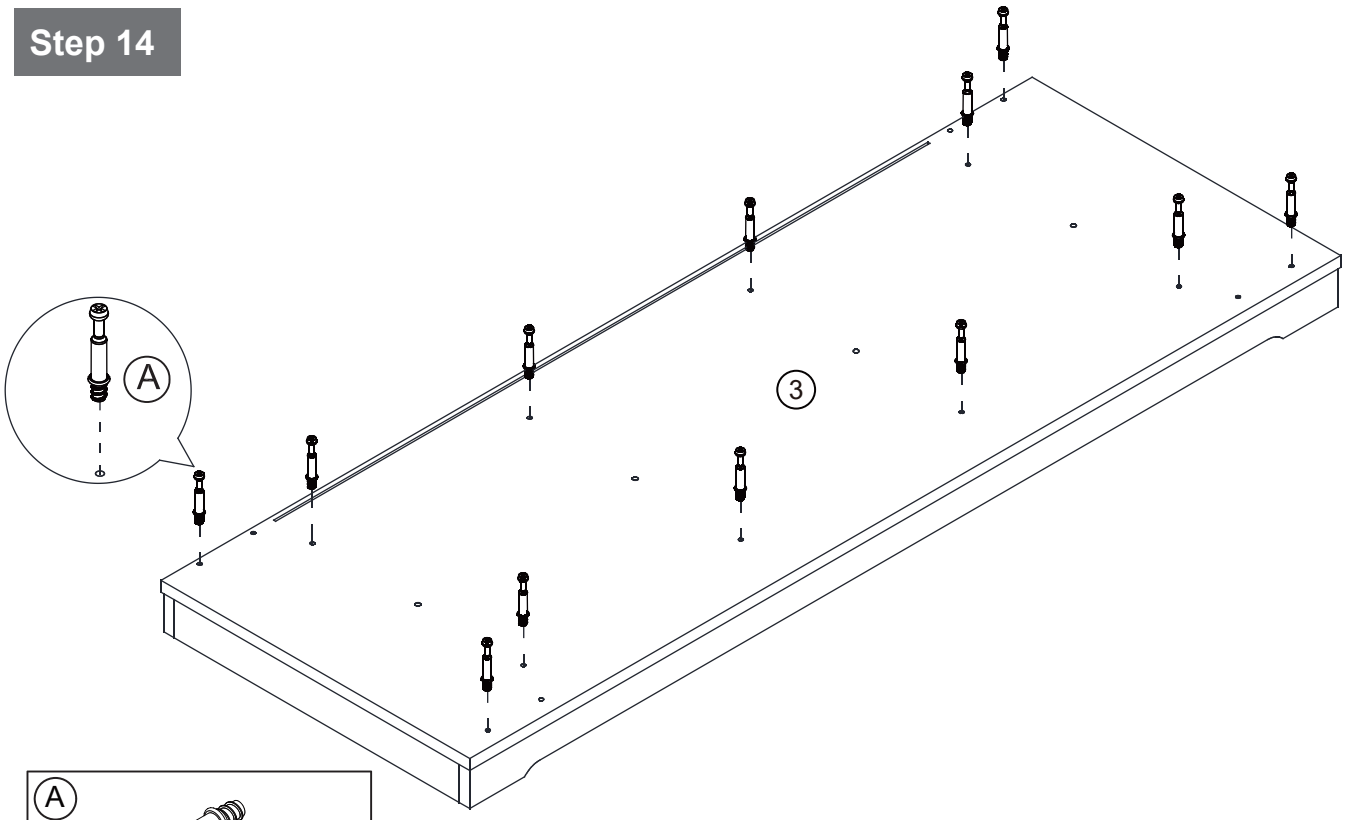


A




Cam Bolt x 12


Assembly Instructions

Step 15

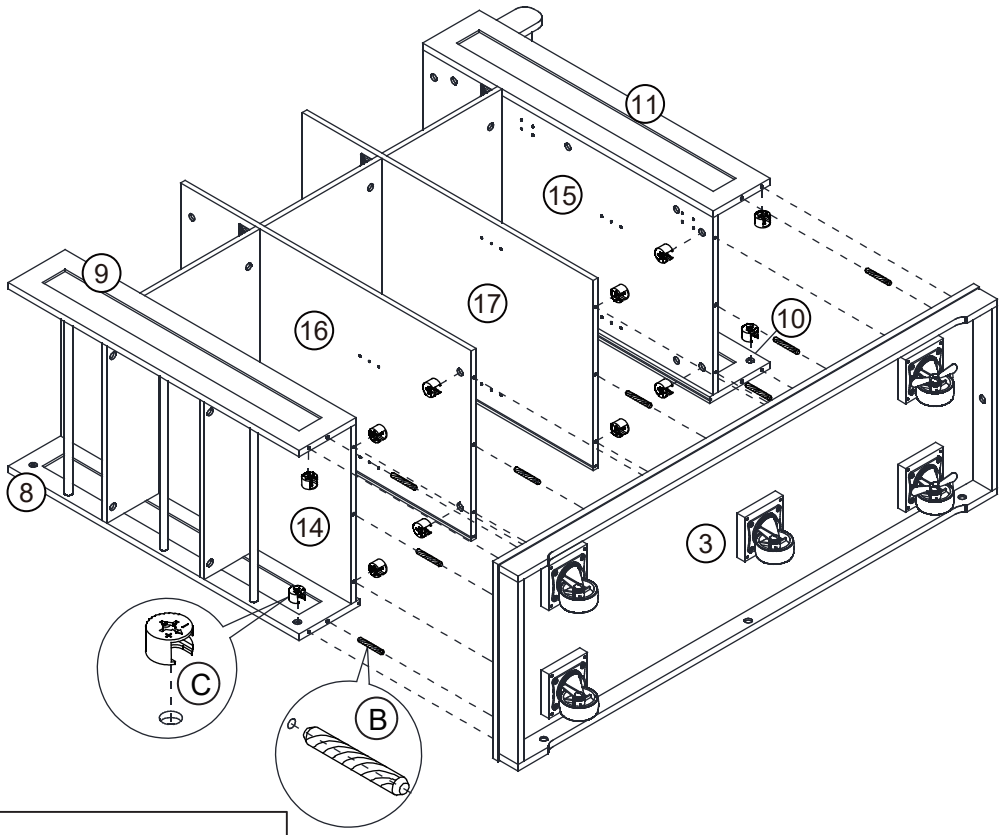


B	C
	
6*30mm Dowel x 8	Cam lock x 12

Step 16

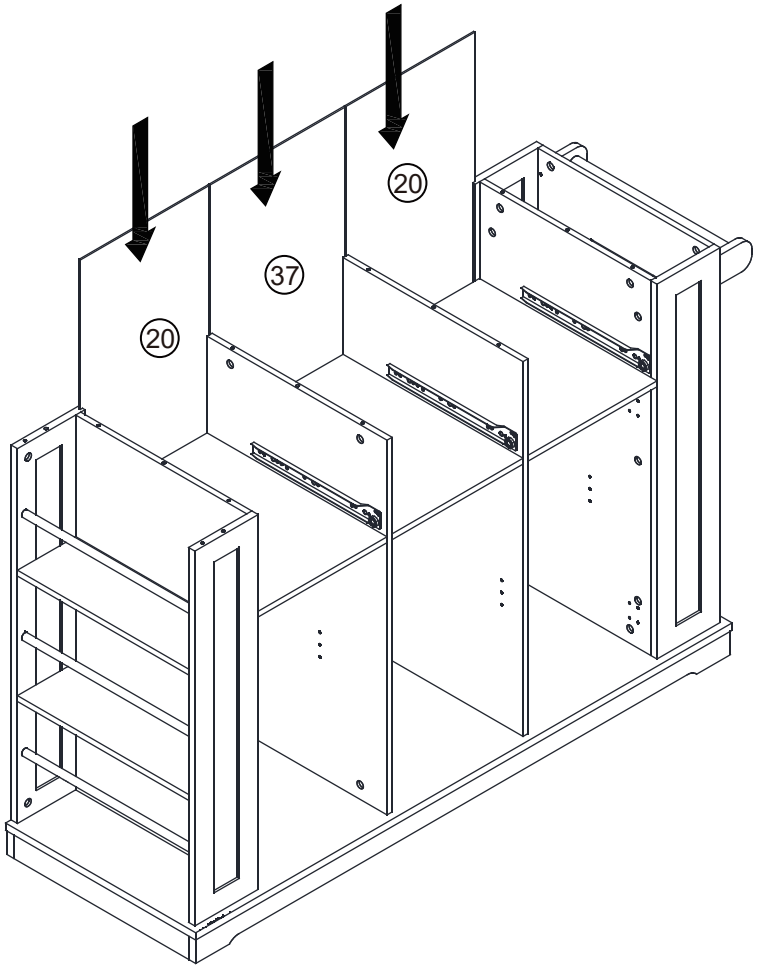


Assembly Instructions

Step 17

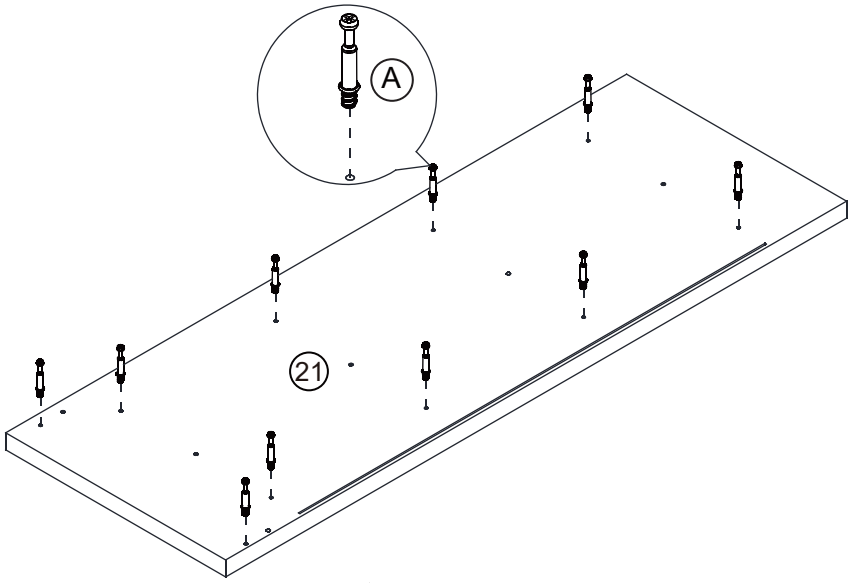

A



Cam Bolt x 10

Step 18

T





m6 nut x 4

U




6mm gasket x8

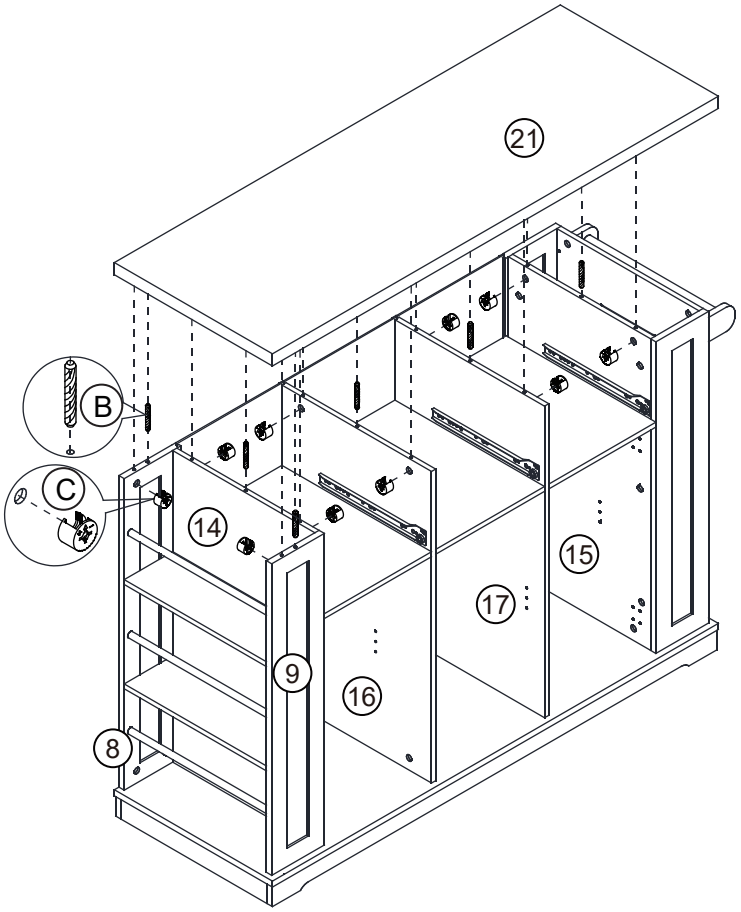

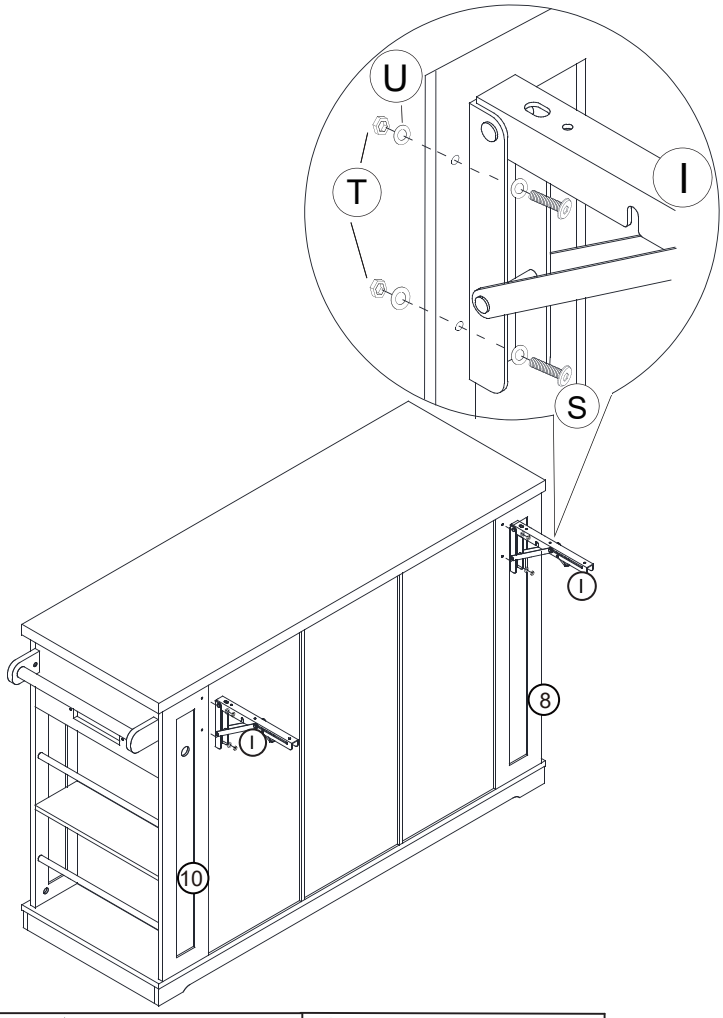

B




6*30mm Dowel x 6

C




Cam lock x 10

I



Connecting rods x2


S



6*25mm Screw x4

Assembly Instructions

Step 19

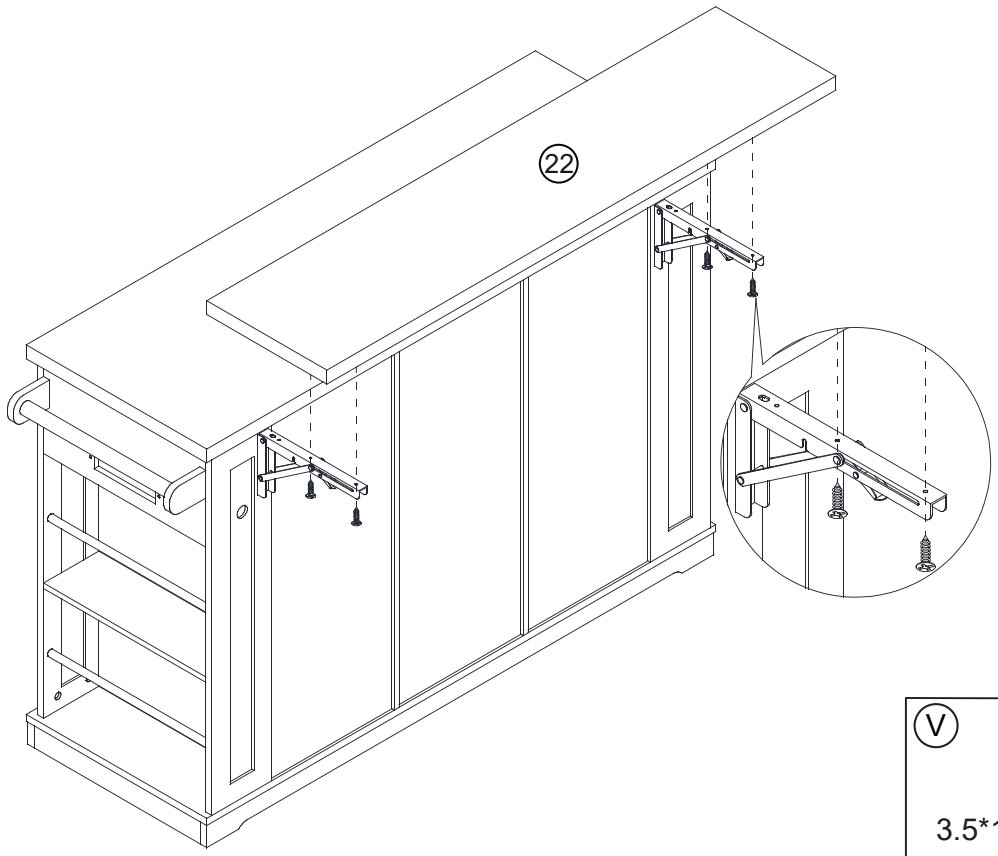



Ⓥ




3.5*14mm Screw x4

Step 20

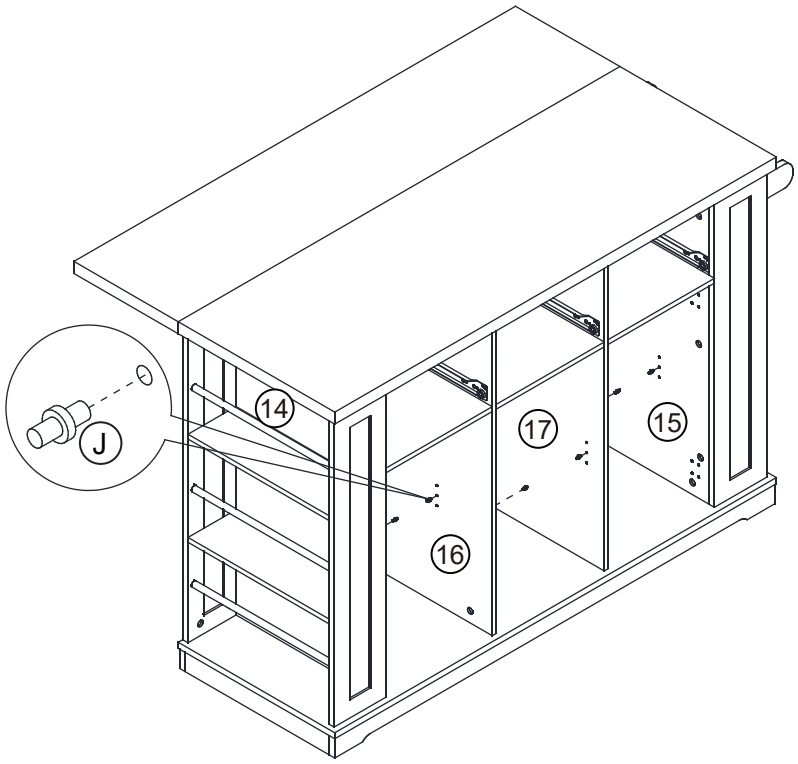

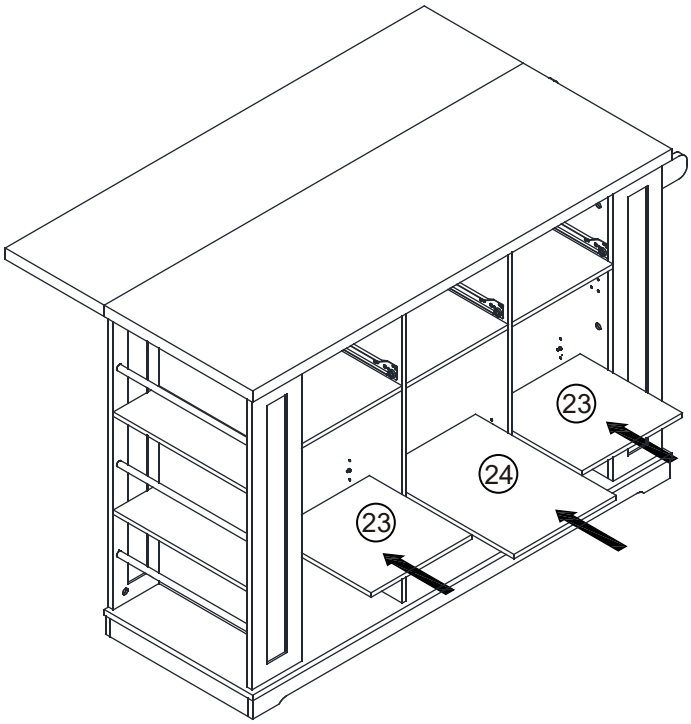


Ⓙ







Shelf support pin x 12

Assembly Instructions

Step 21

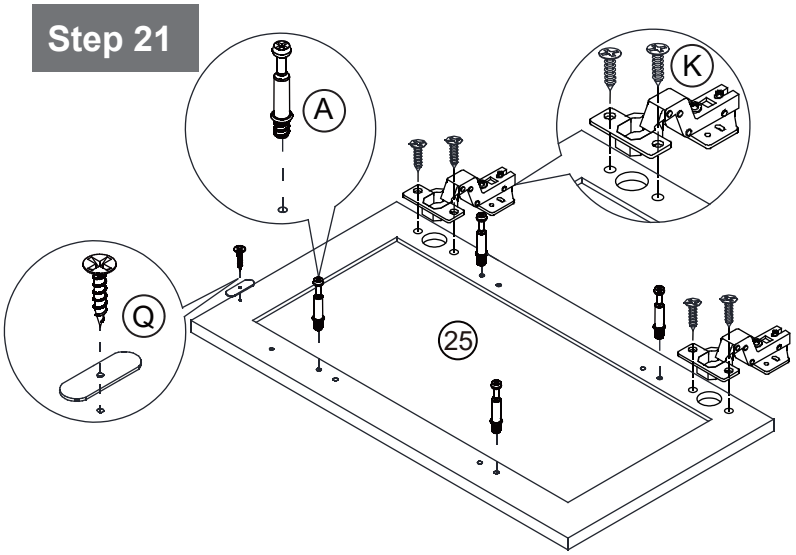


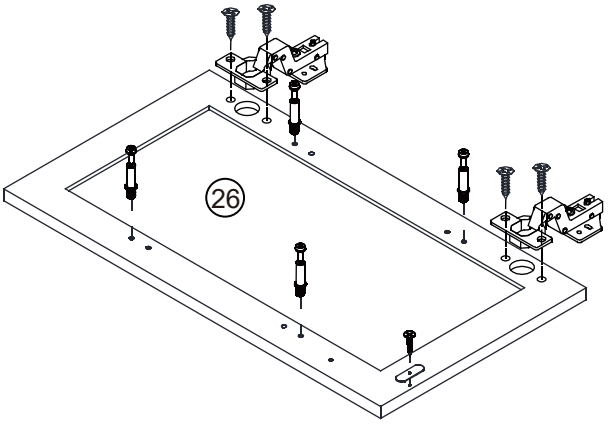


A	K	Q
 Cam Bolt x 8	 3.5*14mm Straight bend hinge x 4set	 3*12mm Magnetic sheet x 2SET



Step 22


x2

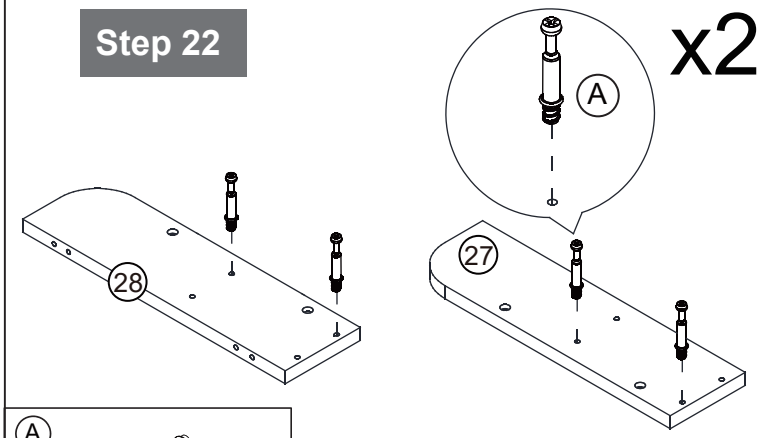



x2

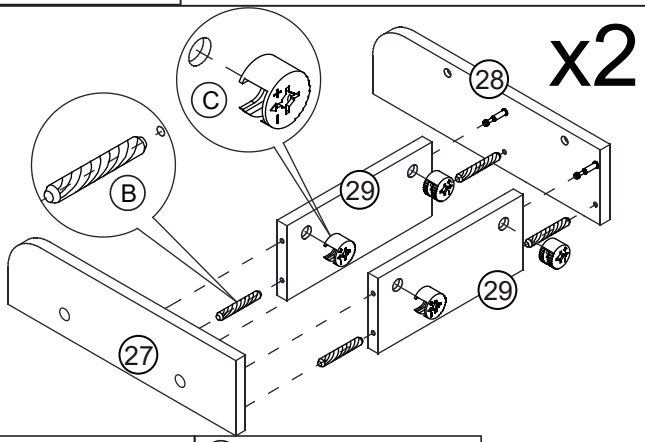

A	B	C
 Cam Bolt x 8	 6*30mm Dowel x 8	 Cam lock x 8

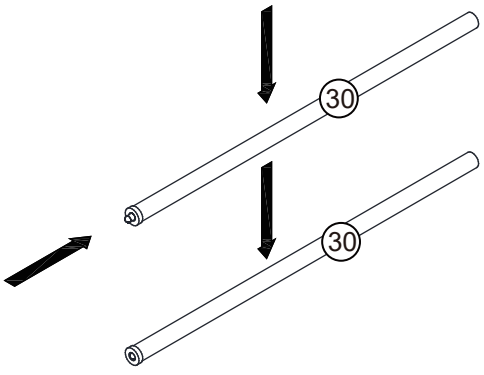


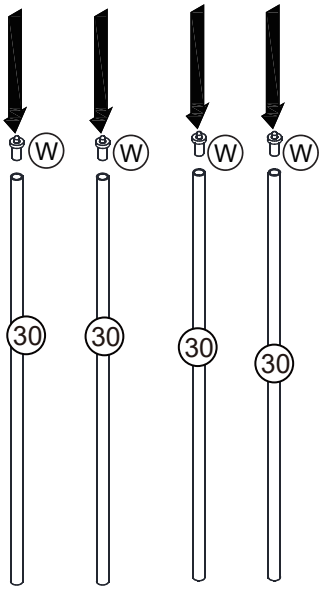


W
 Iron pipe spring x 4


Assembly Instructions

Step 23

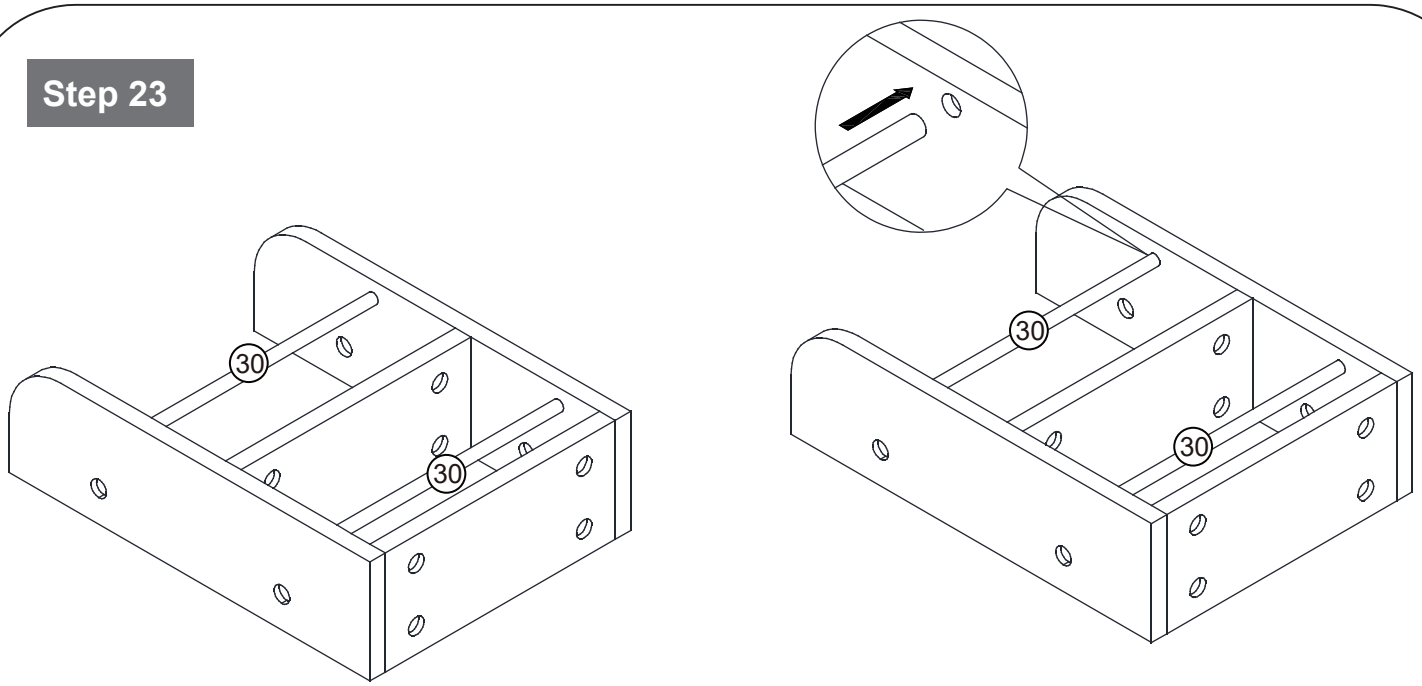


Step 24

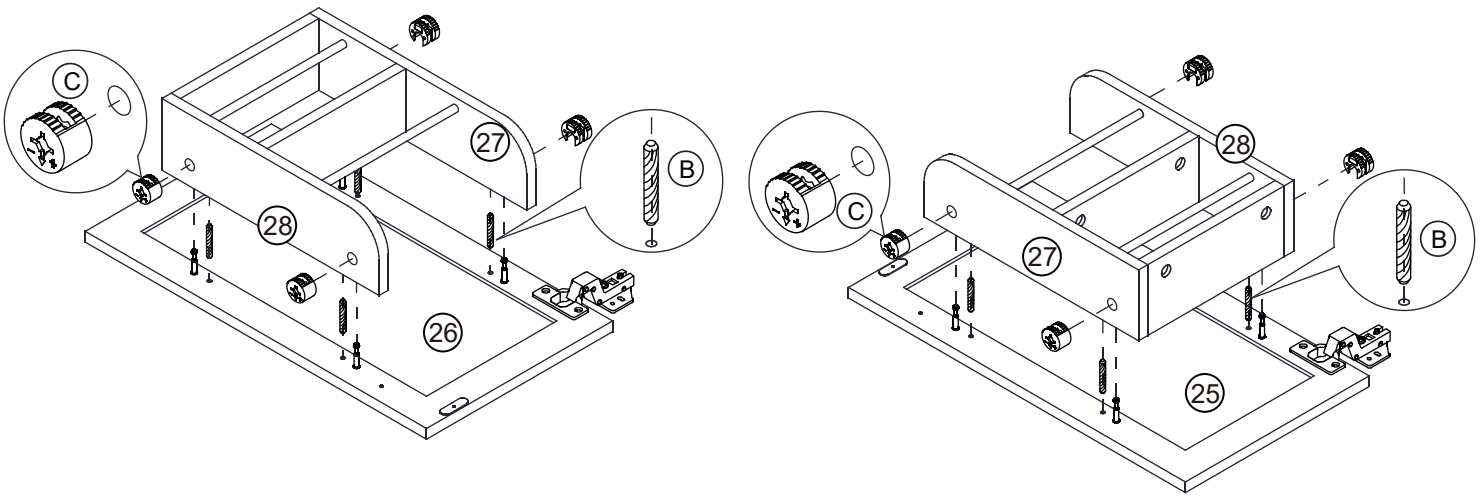


B	C
 6*30mm Dowel x 8	 Cam lock x 8

Assembly Instructions


Step 25

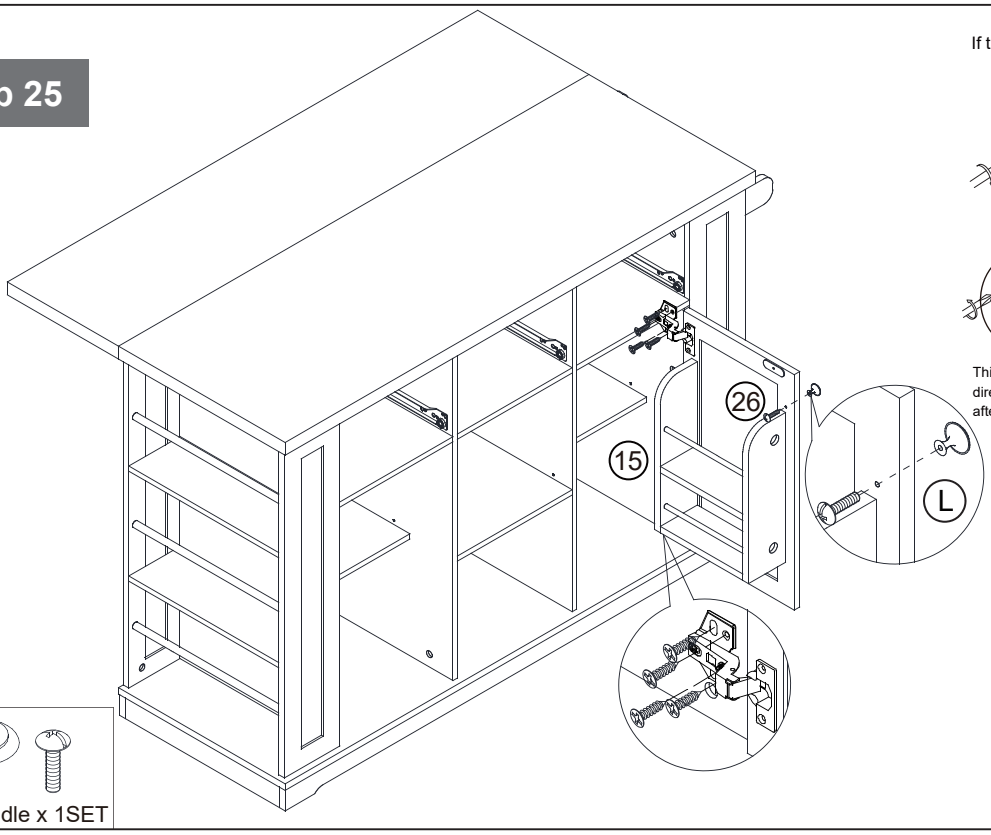


If the door can't close,please adjust the hinges.

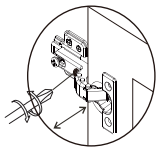

This is used to adjust the door panel in the up and down direction.




This is used to adjust the door panel in the front and back direction:Loosen the screw first, and then tighten screw after adjusting the door panel to the proper position.



4*20mm Handle x 1SET

Step 26

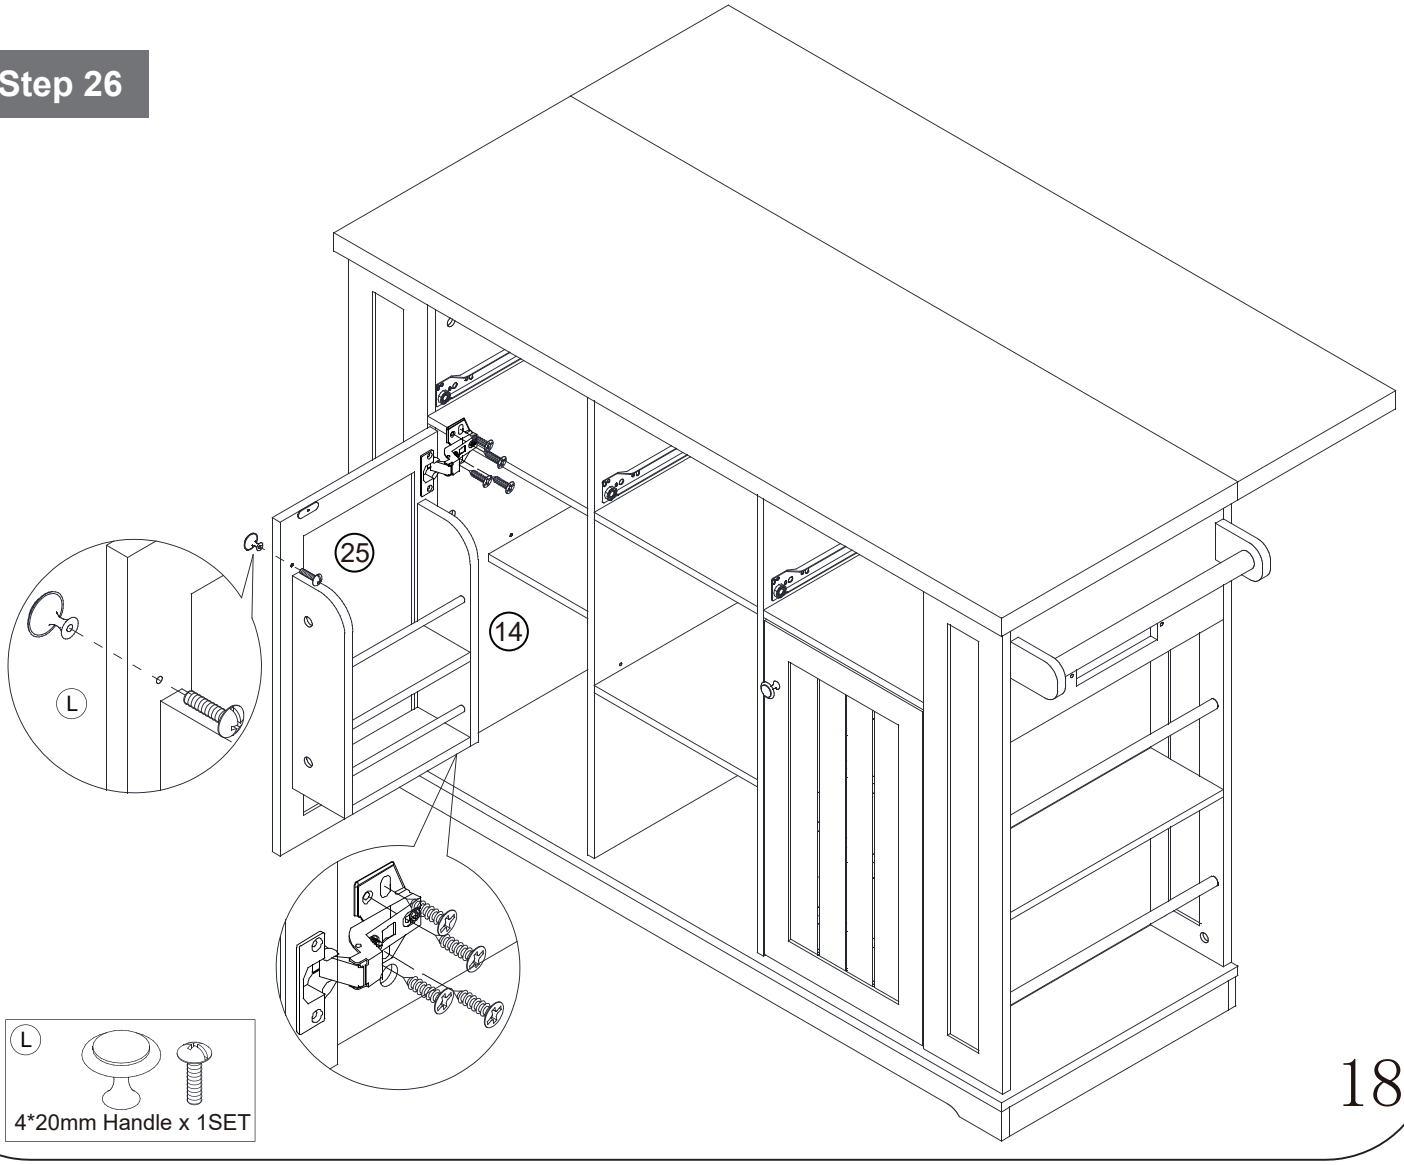


4*20mm Handle x 1SET

Assembly Instructions

Step 27


x3

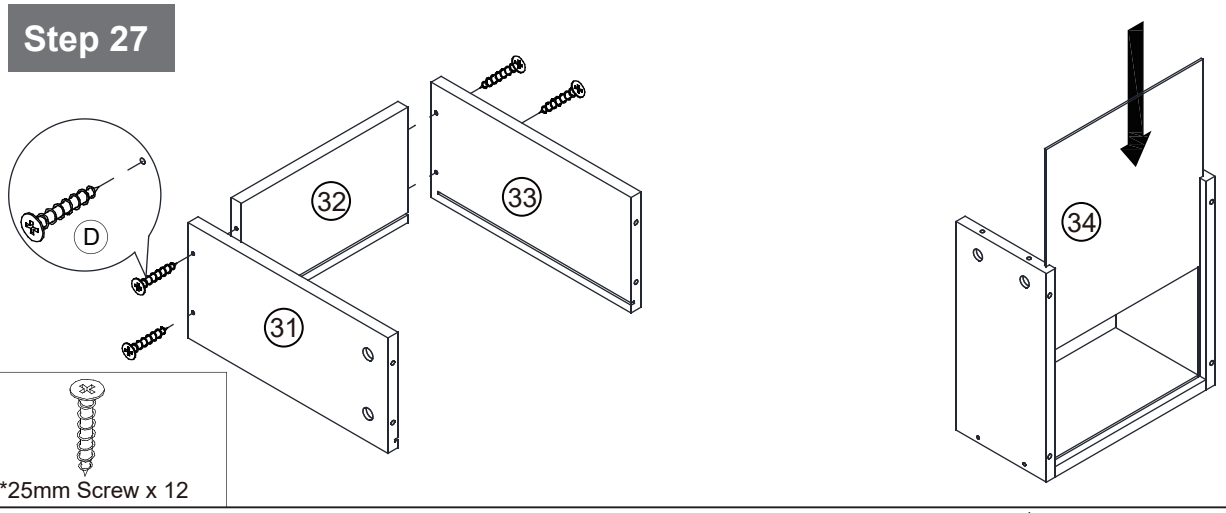


D

4*25mm Screw x 12

x3

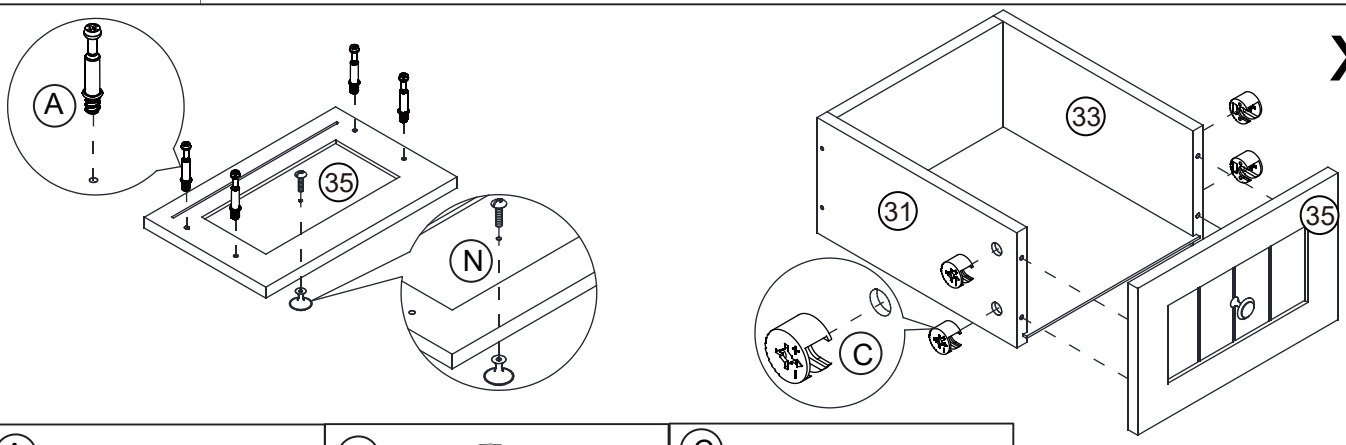


A



Cam Bolt x 12

N

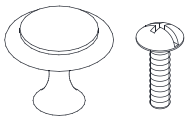

4*12mm Handle x 3SET


C



Cam lock x 12

Step 28

x3

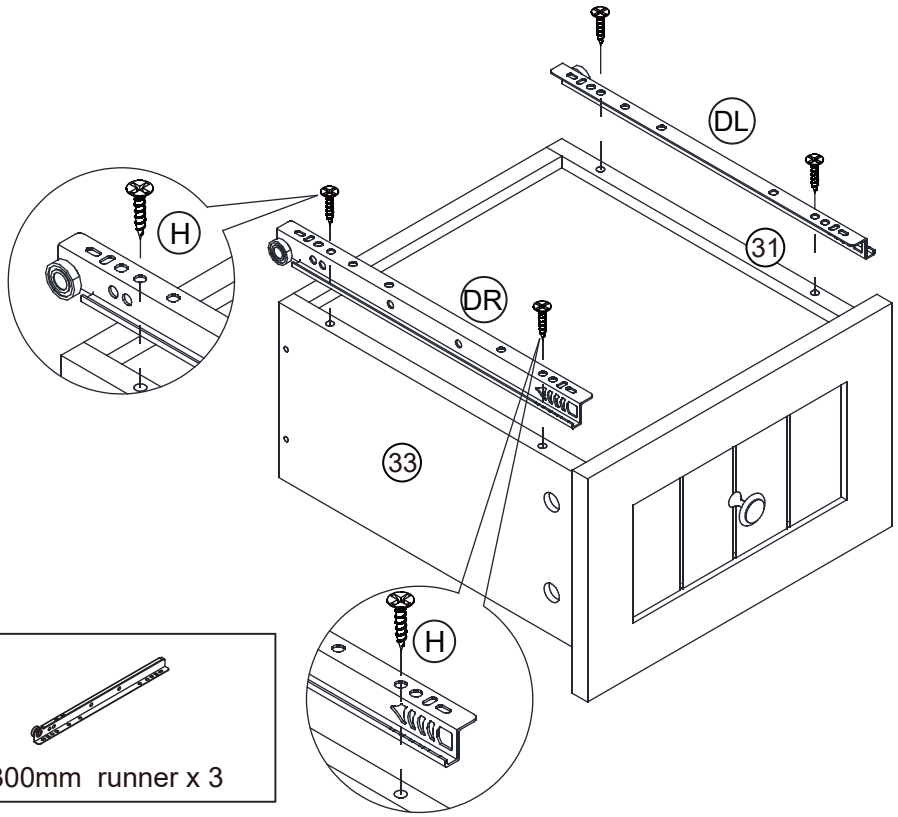


H



3.5*12mm Screw x 12

DL




300mm runner x 3

DR

300mm runner x 3


Assembly Instructions

Step 29

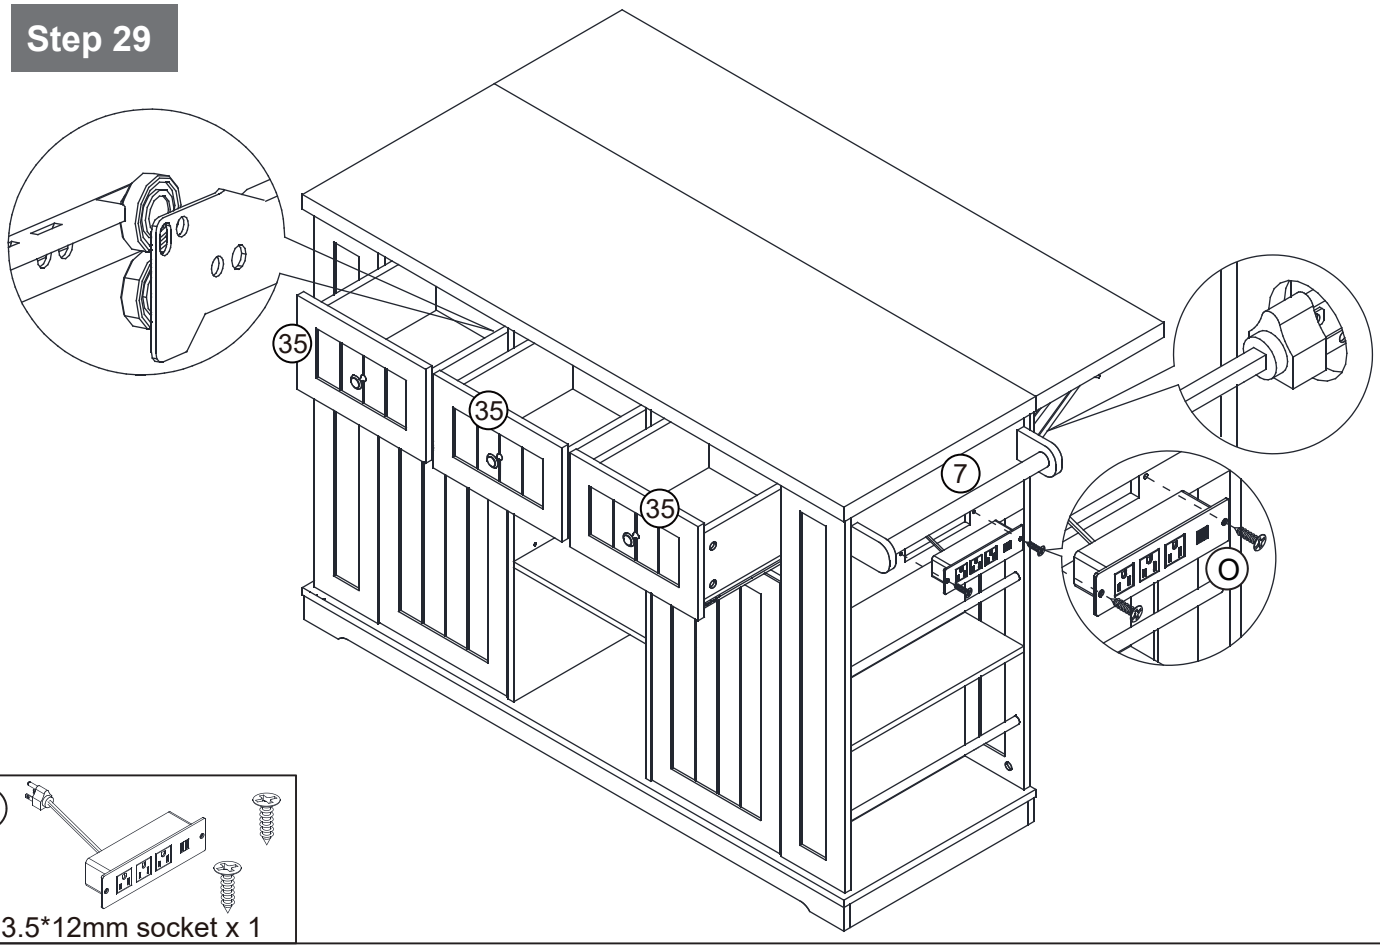


3.5*12mm socket x 1

Step 30

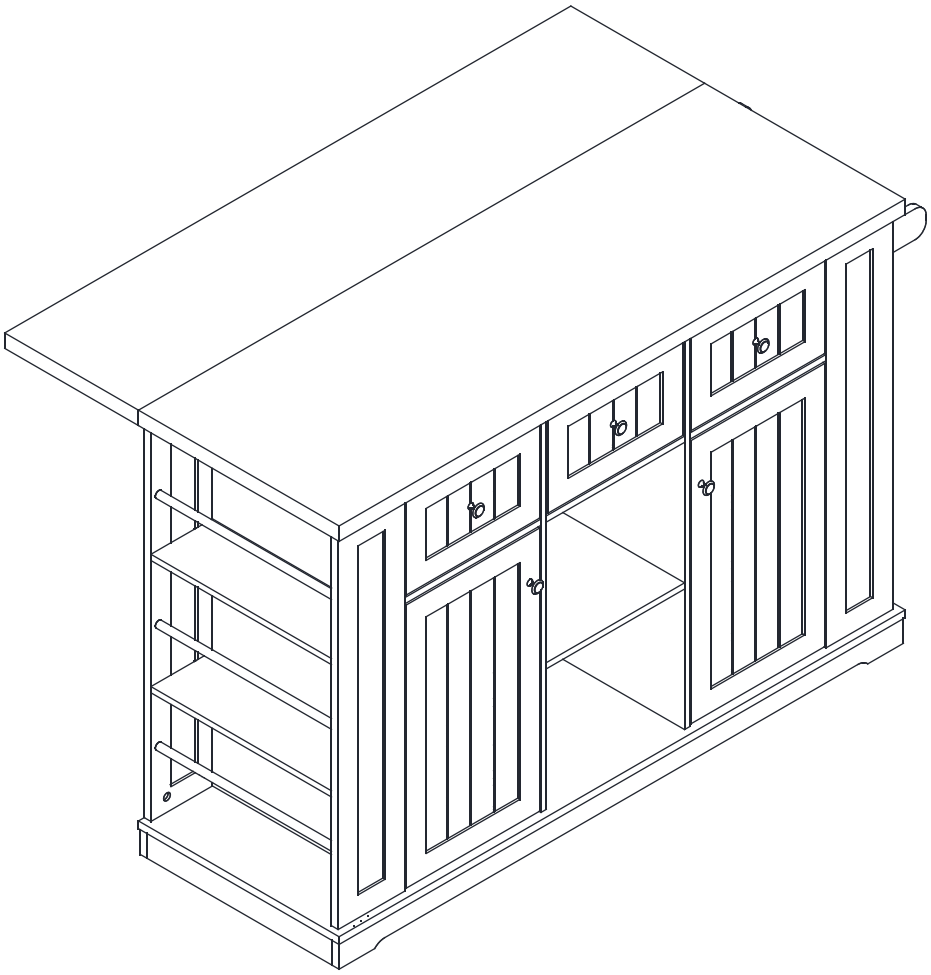

Assembly Instructions

Step 31

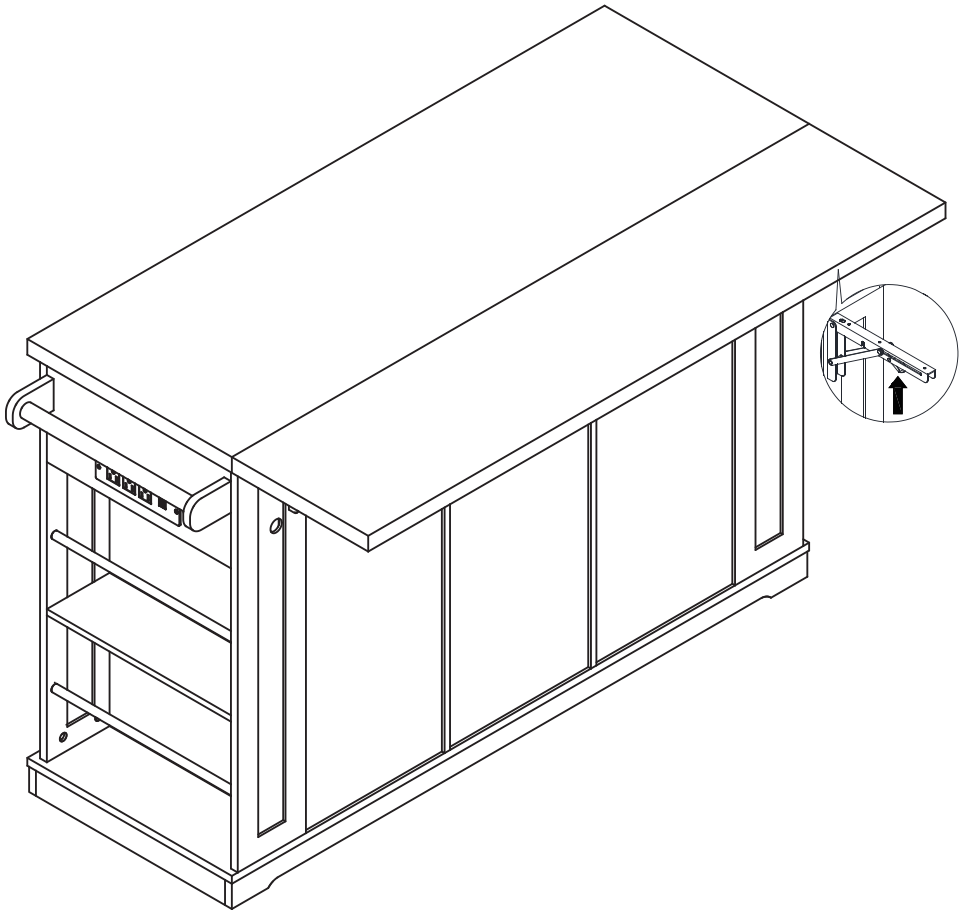

Step 32

