


HZJL-V1


FTHKCT-2008

FTHKCT-2009













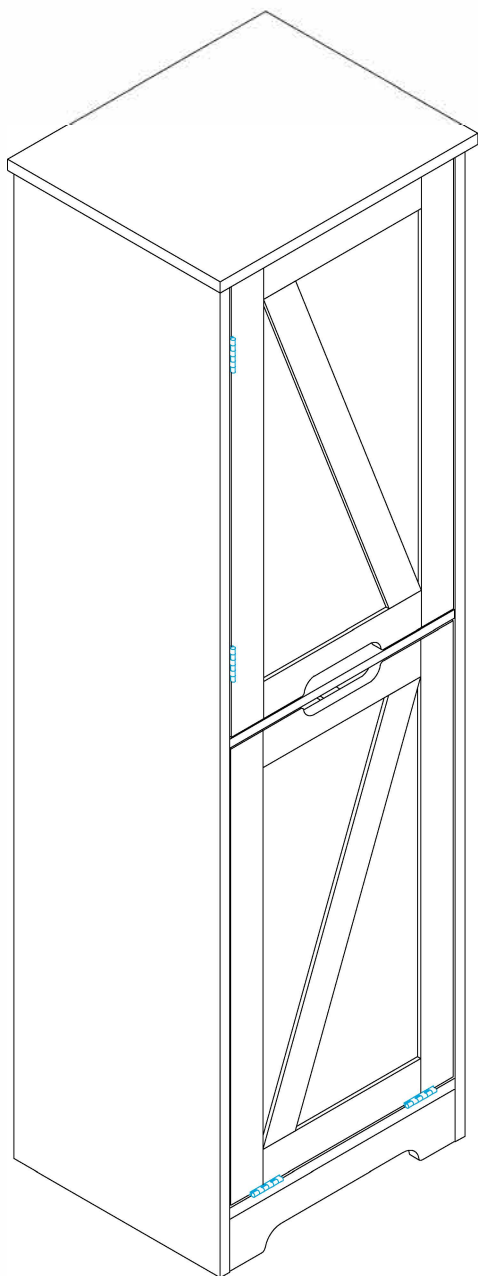


Parts List





"IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY"

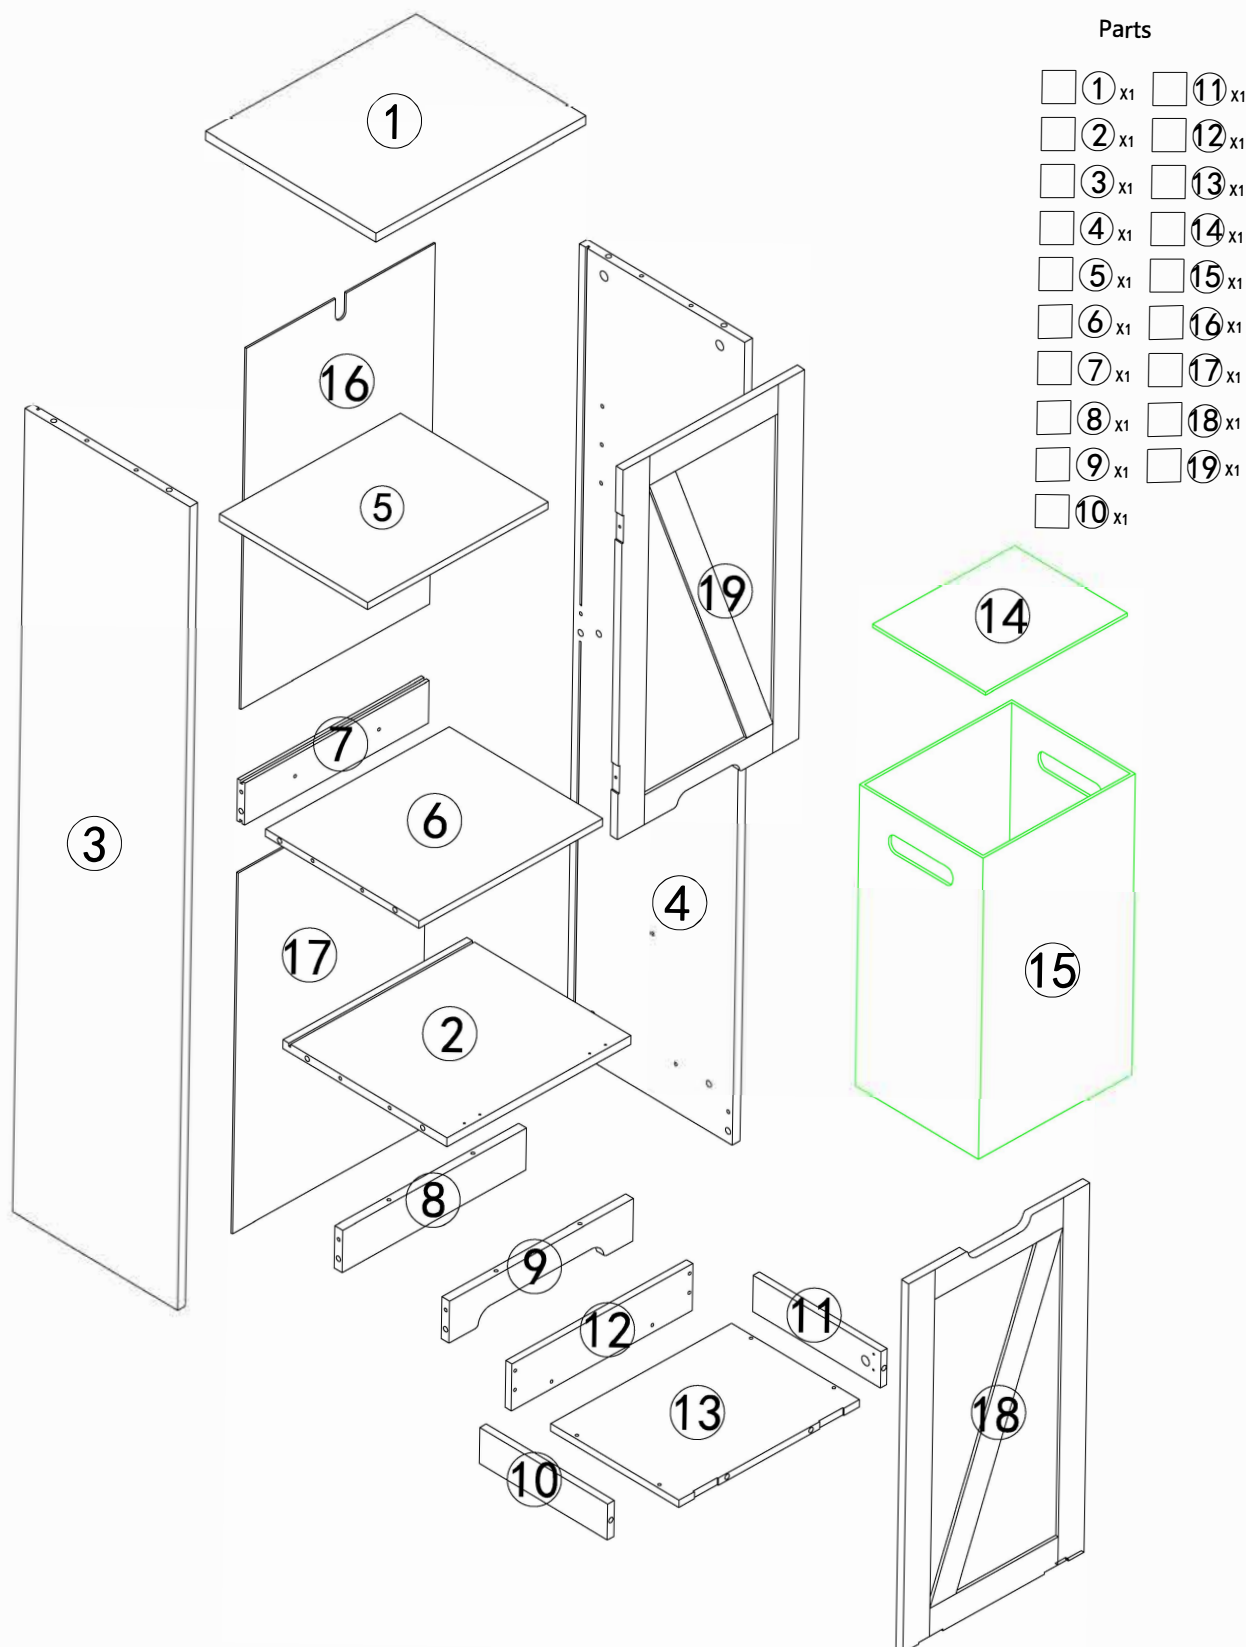





Parts List

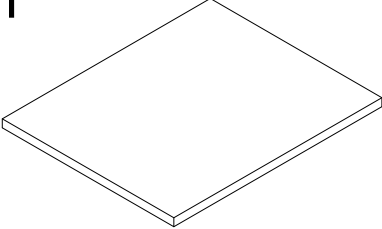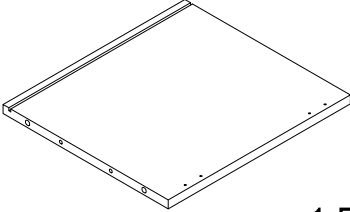
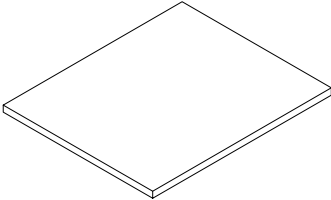
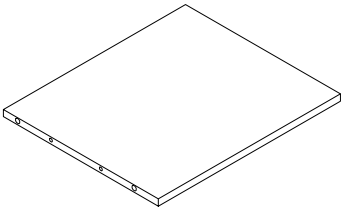
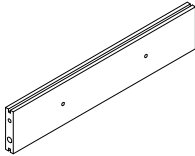
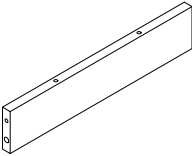
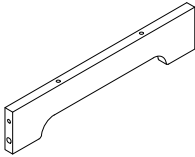


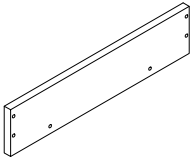
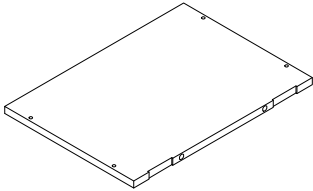
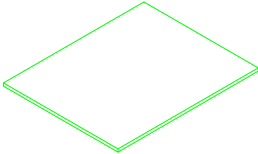
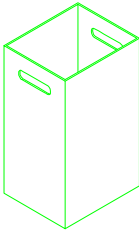
1  1 PC	2  1 PC	3  1 PC
4  1 PC	5  1 PC	6  1 PC
7  1 PC	8  1 PC	9  1 PC
10  1PC	11  1 PC	12  1 PC
13  1 PC	14  1 PC	15  1 PC

Parts List

16  1 PC	17  1 PC	18  1 PC
19  1 PC		

Hardware List

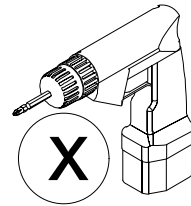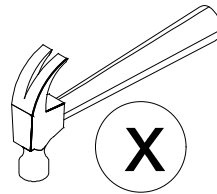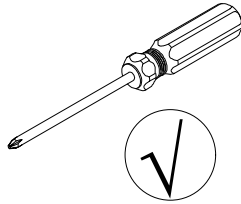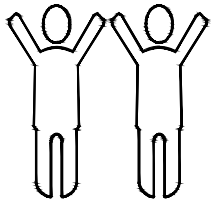

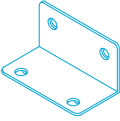A  $\varnothing 6 \times 30 \text{MM}$ 22PCS	B  $\varnothing 6 \times 36 \text{MM}$ 22PCS	C  $\varnothing 15 \times 9 \text{MM}$ 22PCS
D  $44 \times 16 \times 12 \text{MM}$  D2 *3  D3 1Set	E  $60 \times 32 \times 15 \text{MM}$ 1PCS	F  $\varnothing 3.5 \times 14 \text{MM}$ 21PCS
G  $44 \times 16 \times 1 \text{MM}$ 4PCS	H  $\varnothing 3.5 \times 30 \text{MM}$ 12PCS	I  $\varnothing 3 \times 12 \text{MM}$ 2PCS
J  $\varnothing 3 \times 12 \text{MM}$ 8PCS	K  $\varnothing 6 \times 19 \text{MM}$ 2PCS	L  $\varnothing 6 \times 16 \text{MM}$ 4PCS
M  $\varnothing 3 \times 16 \text{MM}$ 12PCS	N  $15 \times 17 \times 10$ 12PCS	O  $\varnothing 8 \times 35 \text{MM}$ 1PCS
P  $\varnothing 4 \times 37 \text{MM}$ 1PCS		

Assembly Steps


CAM BOLT INSTALLATION AS BELOW:



Cam bolt




Connecting piece

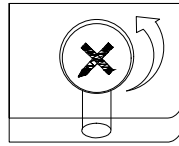


X

Rotate connecting piece if found in the position illustrated above.

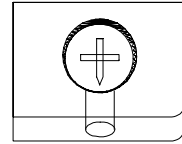


✓

Correct orientation to receive bolts.

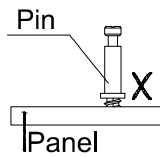

Pin

Panel

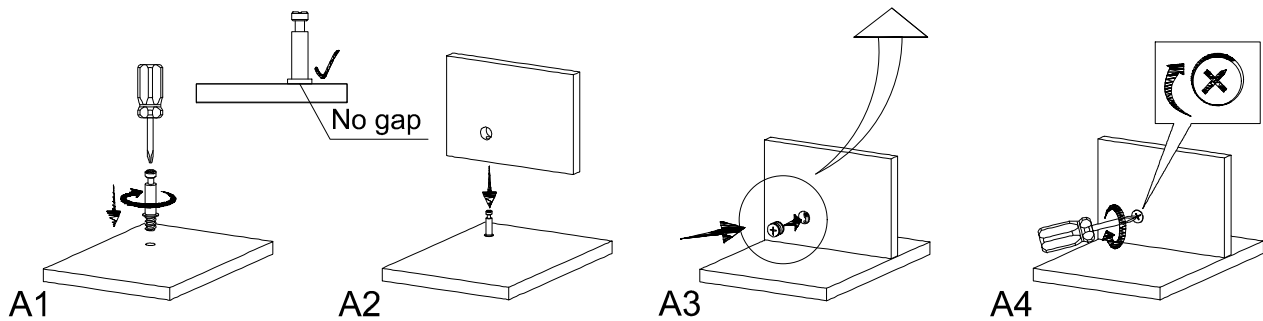


A1

A2

A3

A4




STEP 1

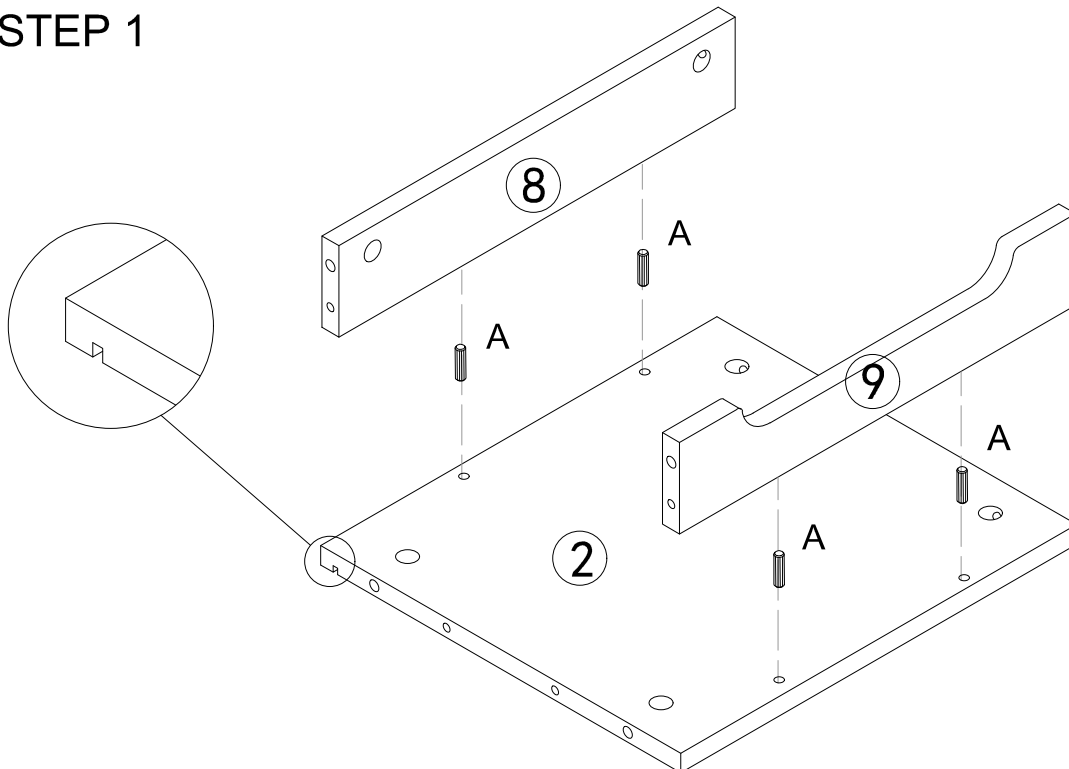

A*4PCS



Assembly Steps

STEP 2

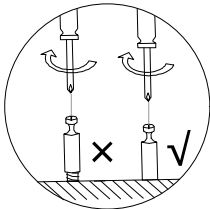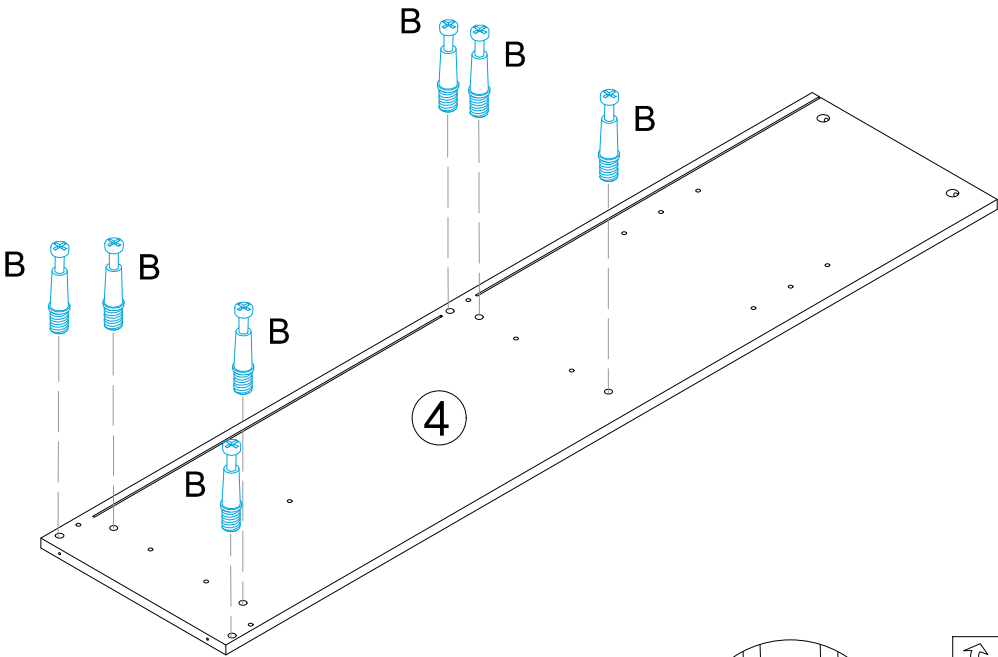

B*7PCS

STEP 3

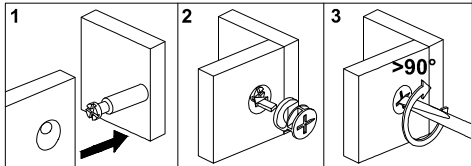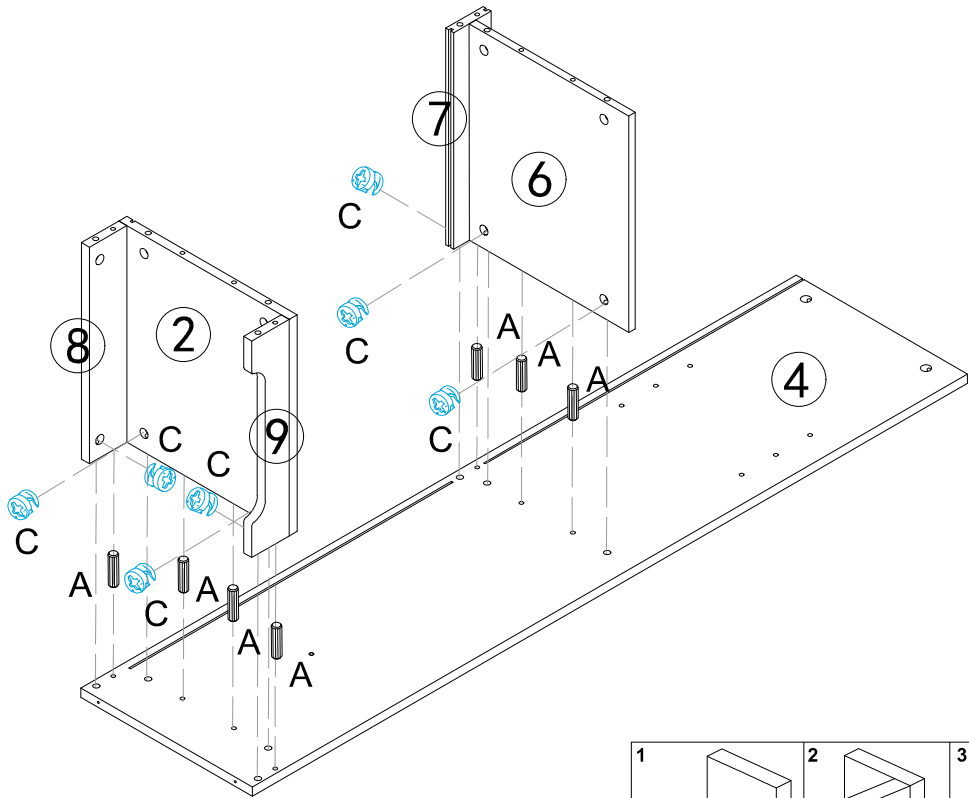


A*7PCS




C*7PCS

Assembly Steps

STEP 4

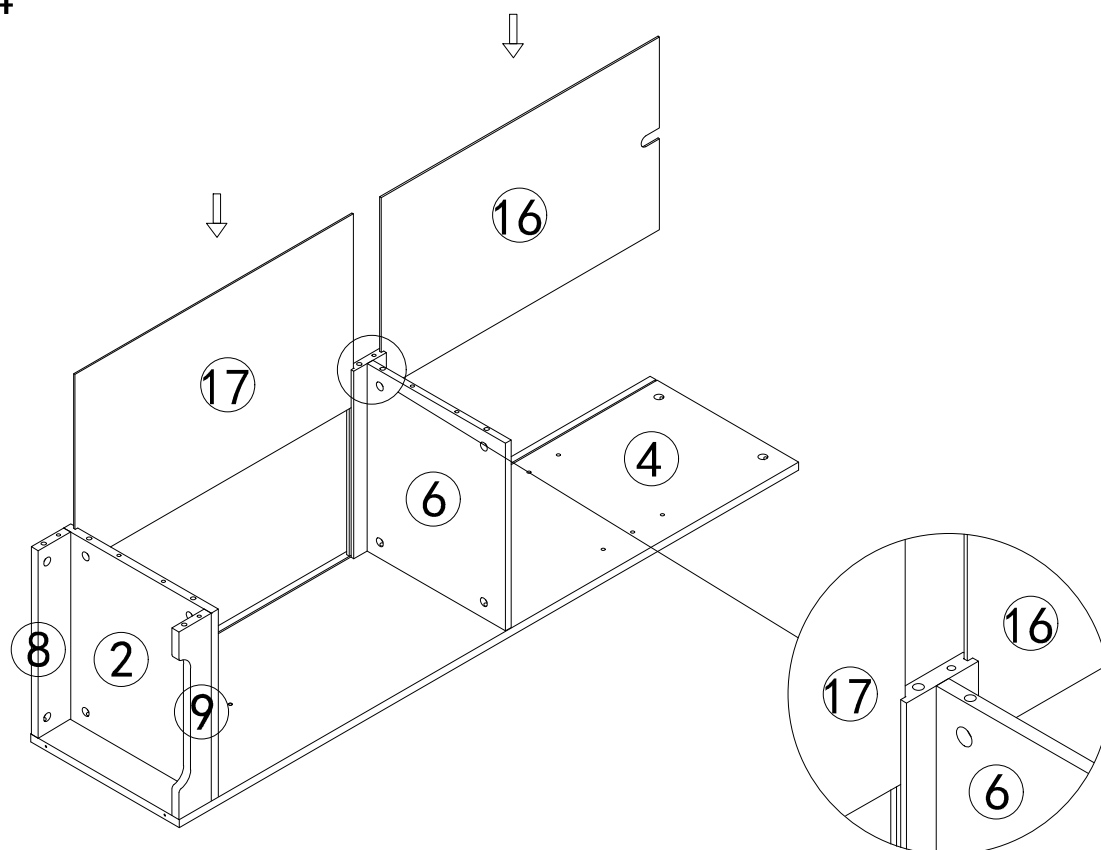


STEP 5

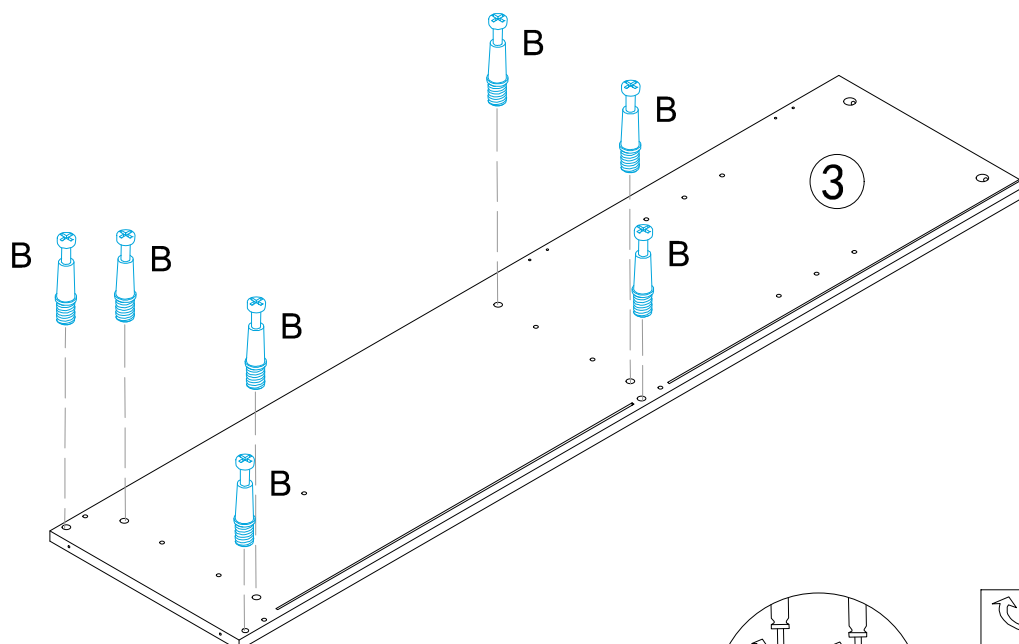


B*7PCS

Assembly Steps


STEP 6

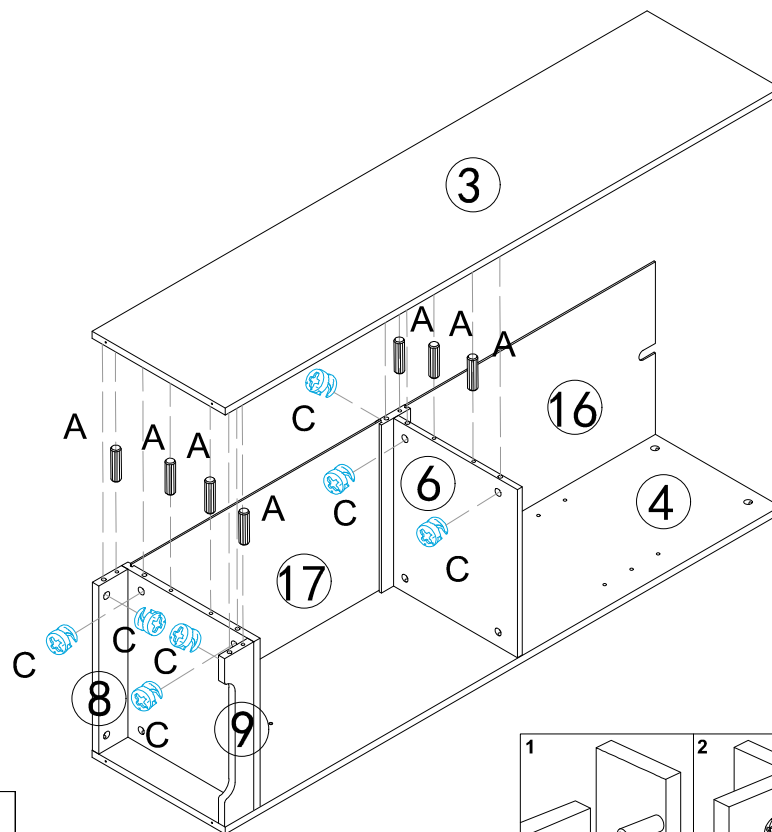

	A*7PCS
	C*7PCS

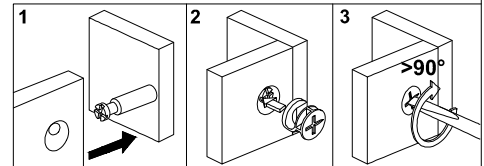


STEP 7

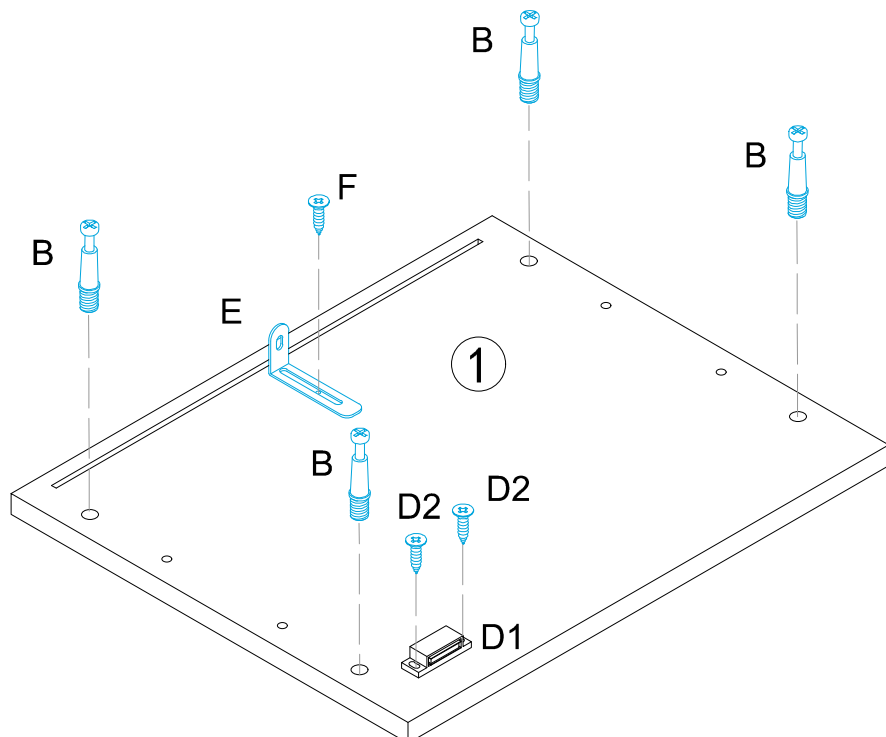

	B*4PCS
	D1*1PCS
	D2*2PCS
	E*1PCS
	F*1PCS

Assembly Steps


STEP 8

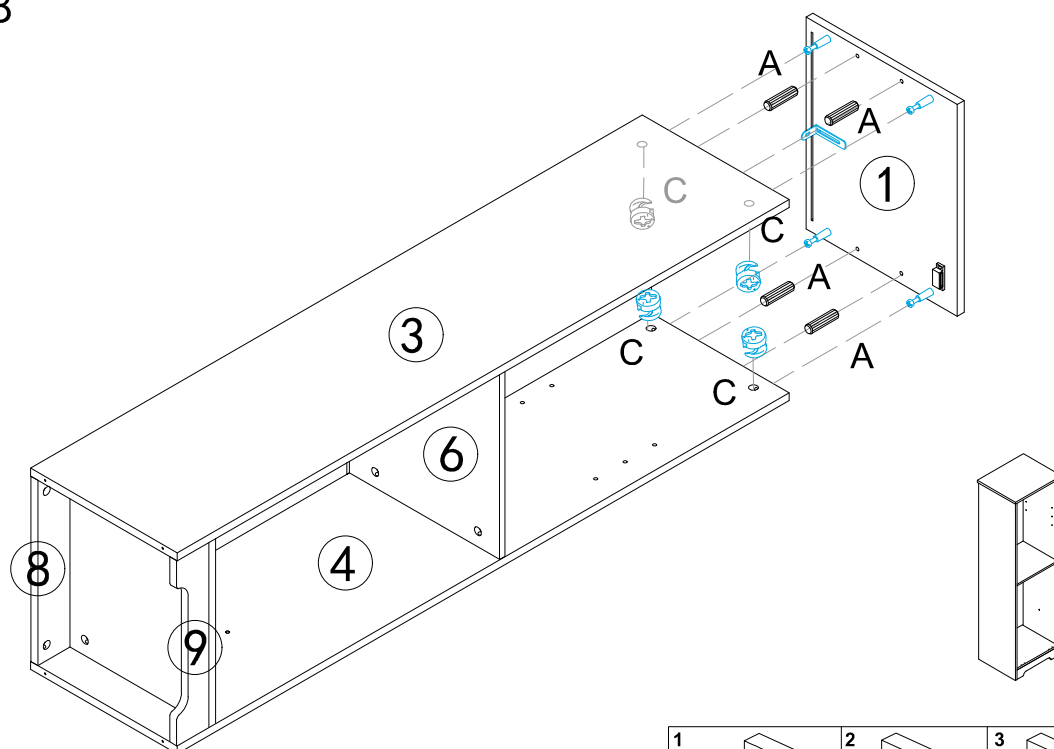


A*4PCS



C*4PCS

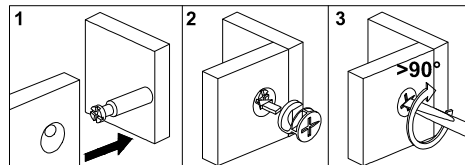

STEP 9

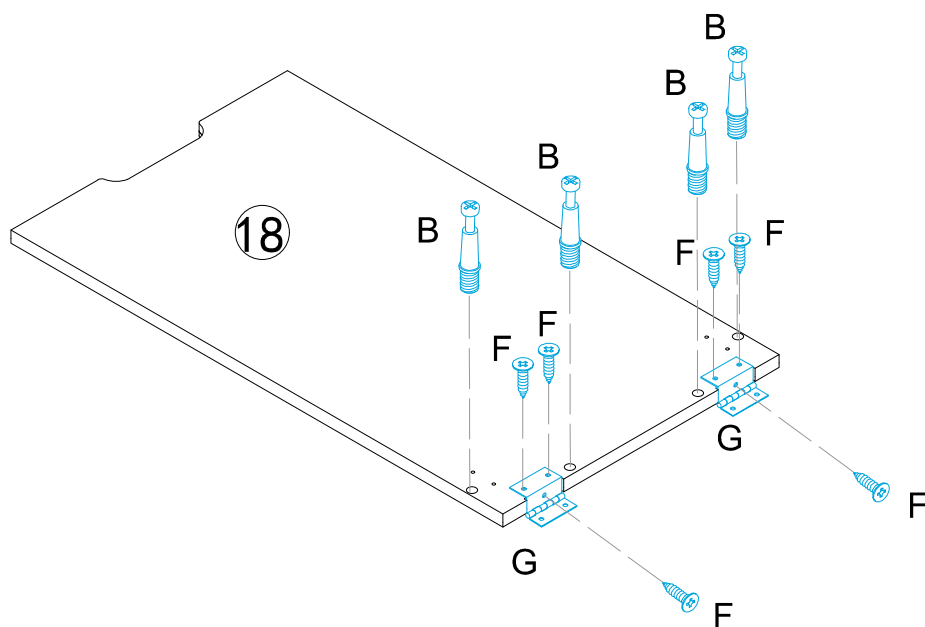

B*4PCS




F*6PCS



G*2PCS


Assembly Steps

STEP 10

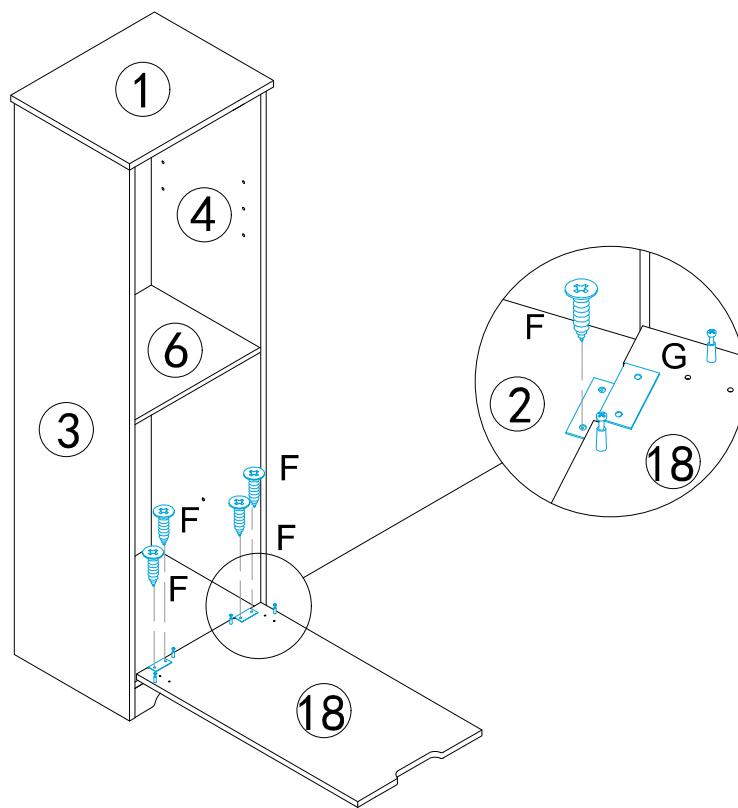

F*4PCS


STEP 11

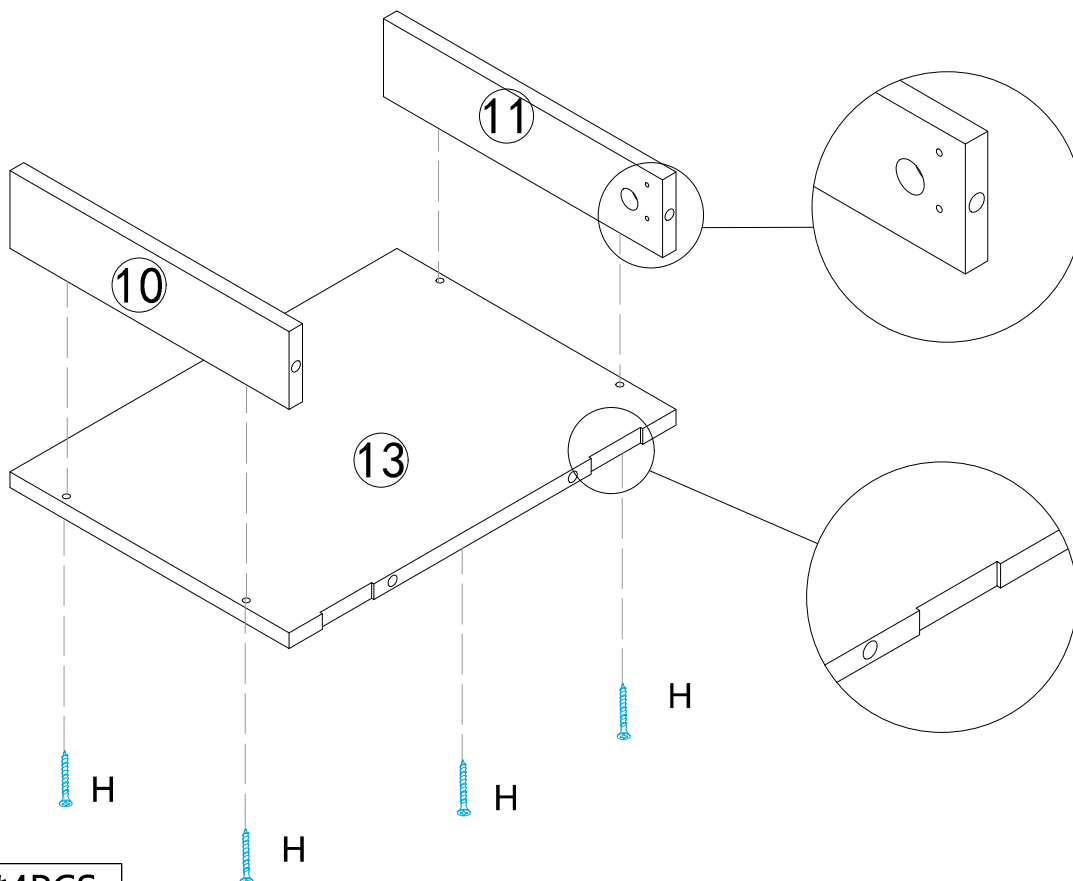

H*4PCS


Assembly Steps

STEP 12

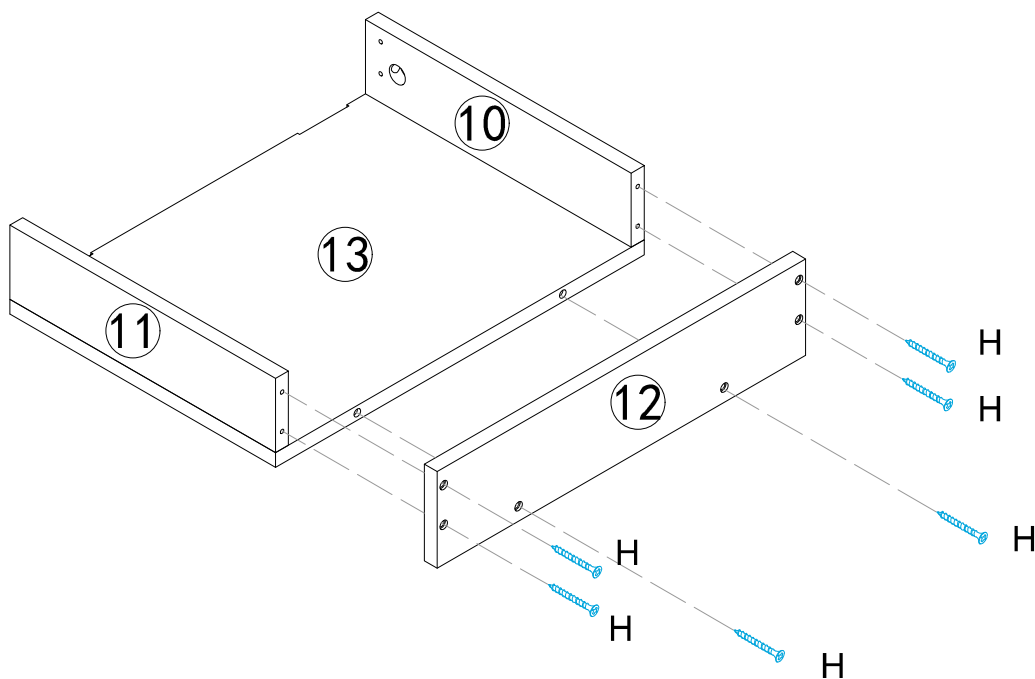

H*6PCS


STEP 13

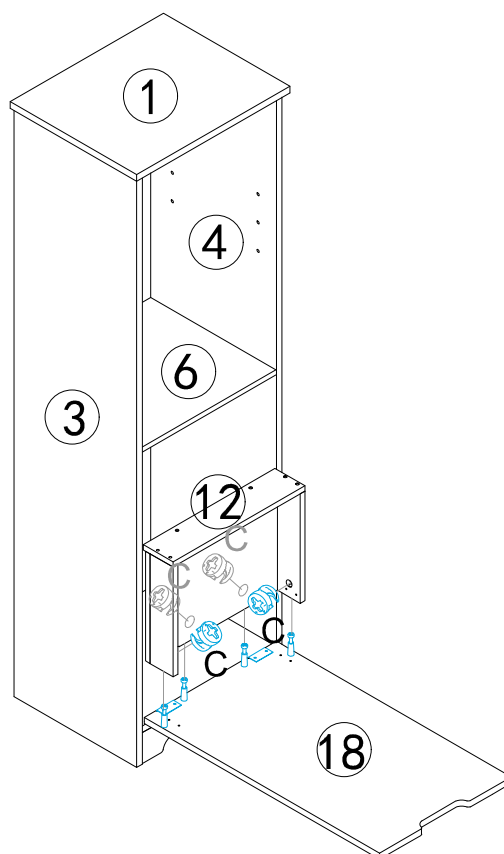

C*4PCS

Assembly Steps

STEP 14

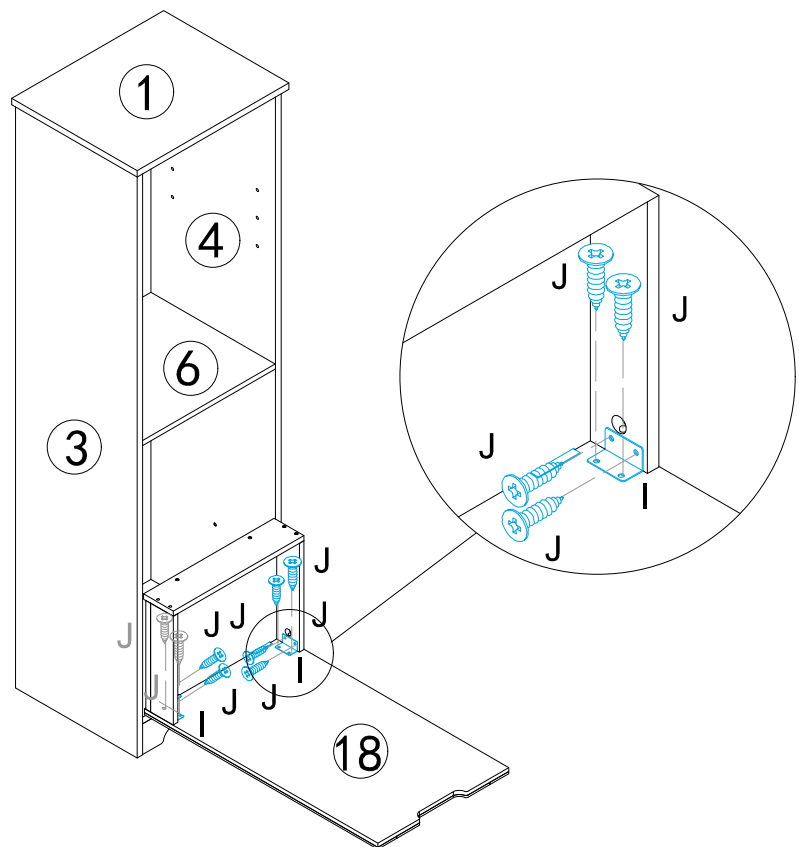


I*2PCS



J*8PCS


STEP 15

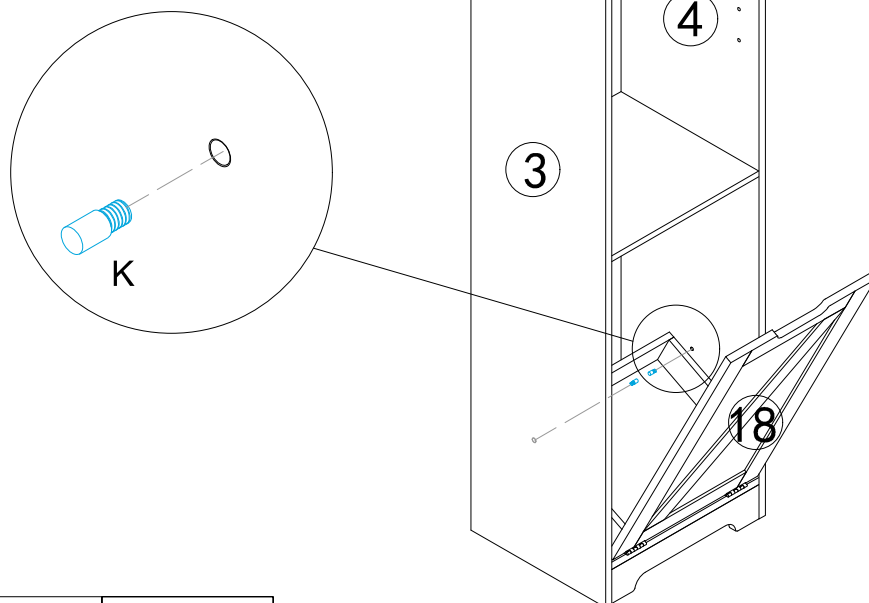


K*2PCS

Assembly Steps

STEP 16

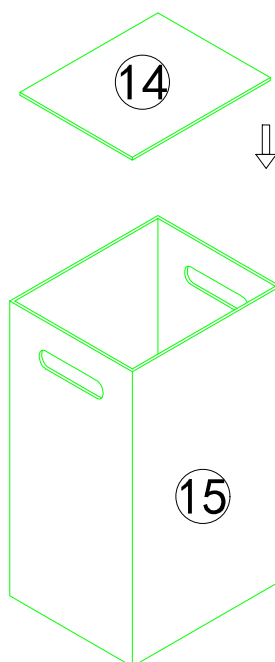


STEP 17

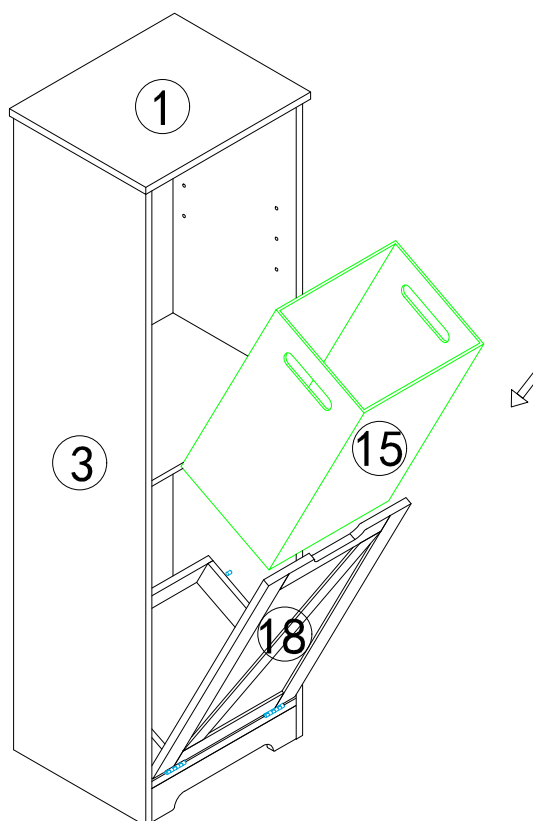


Assembly Steps

STEP 18

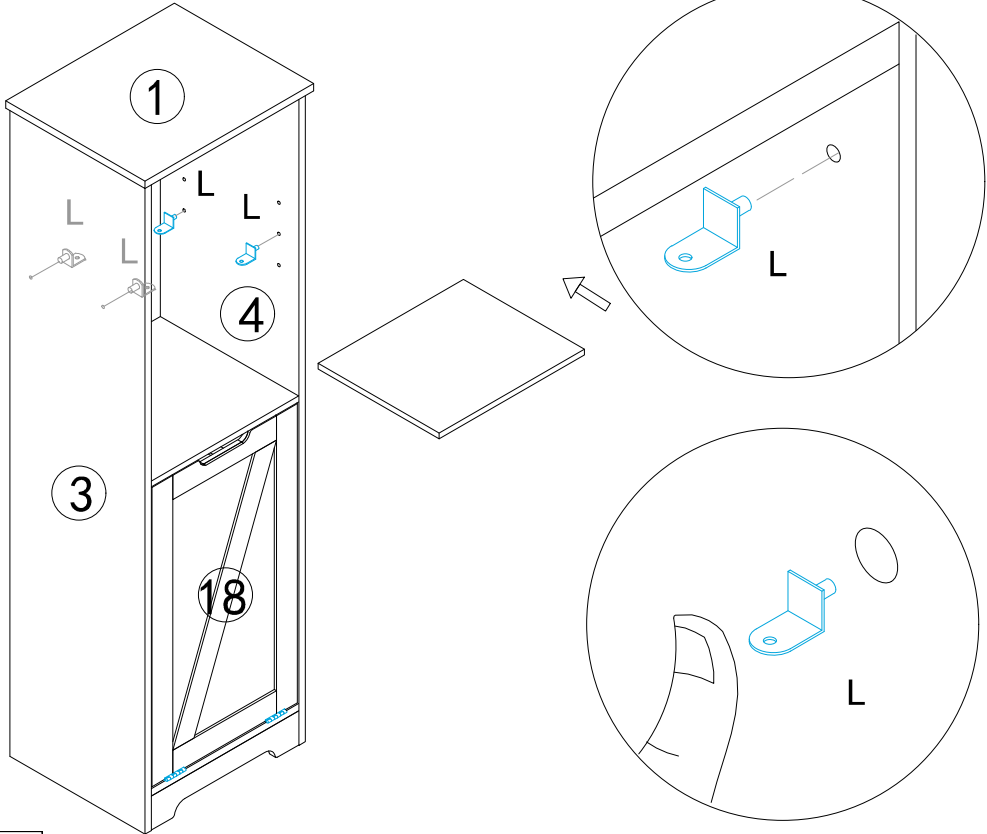

L*4PCS

STEP 19

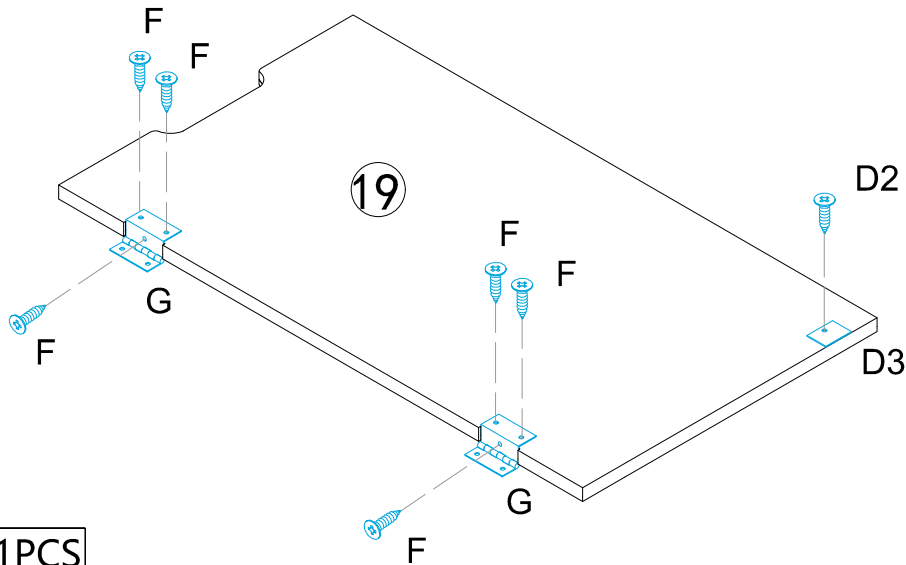

D2*1PCS



D3*1PCS




F*6PCS



G*2PCS


Assembly Steps

STEP 20

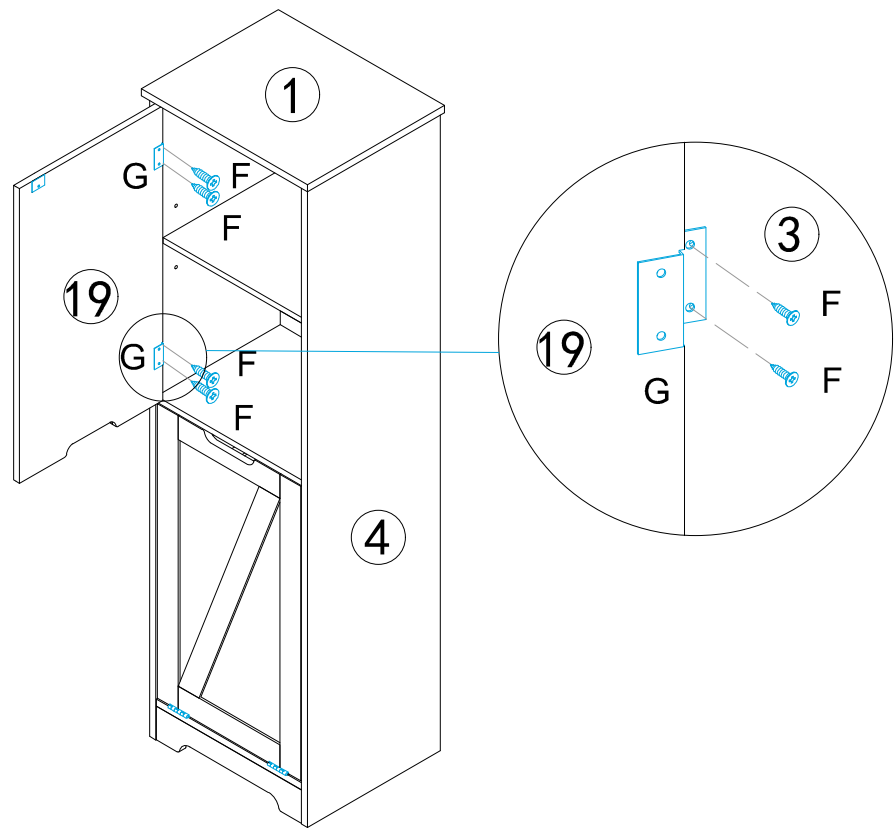

F*4PCS

STEP 21

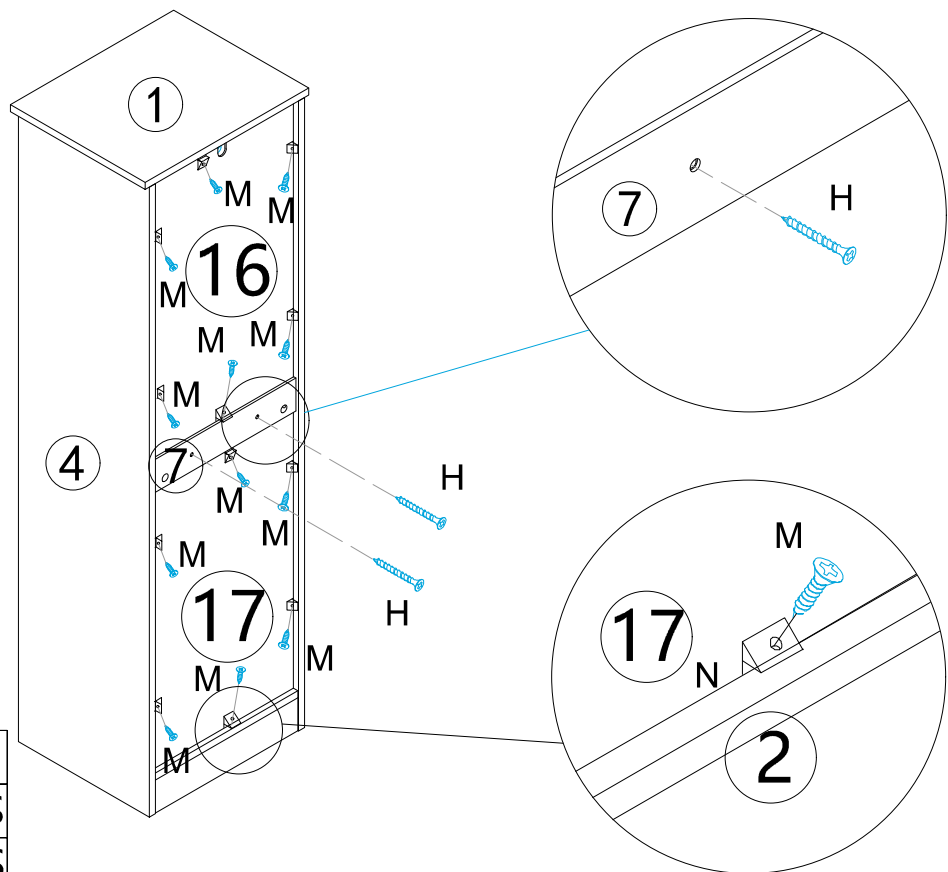

H*2PCS




M*12PCS




N*12PCS

Assembly Steps


STEP 22

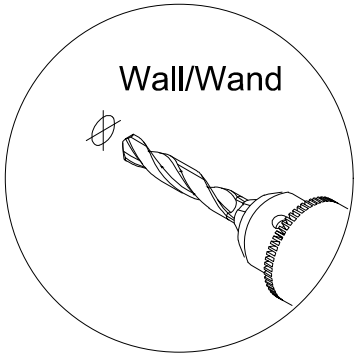


Wall/Wand

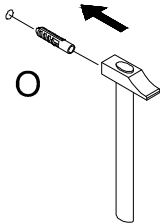

O

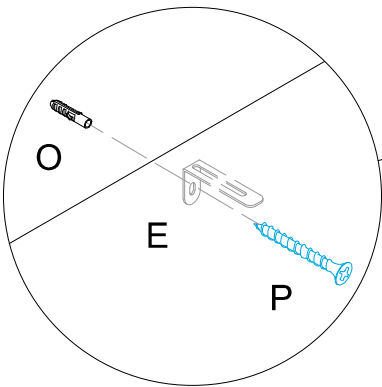

Wall/Wand

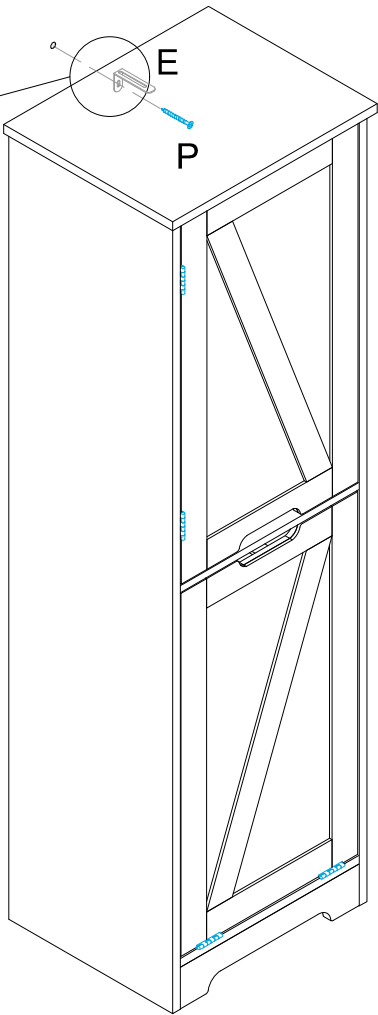

O

E

P

	O*1PCS
	P*1PCS

Installation Completed