

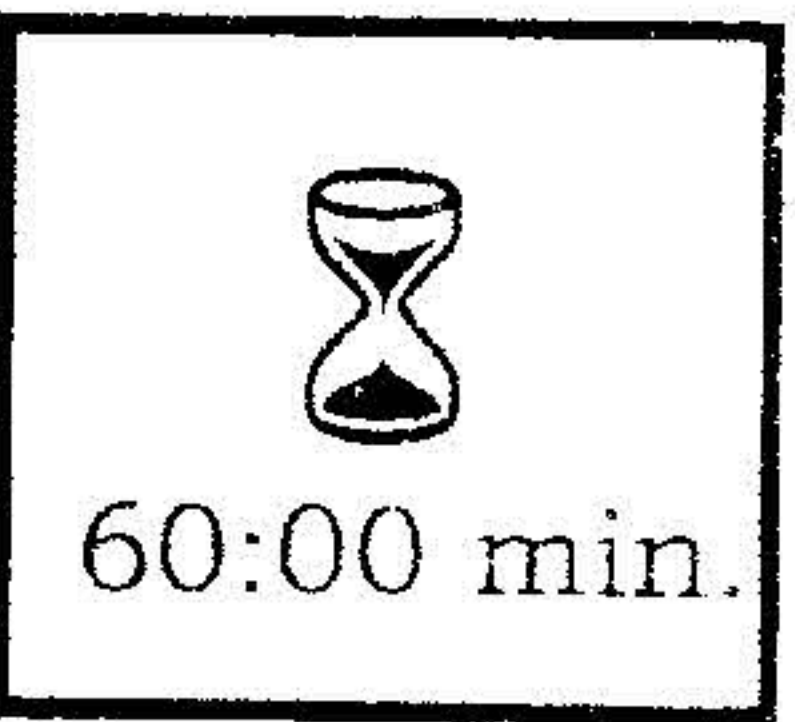
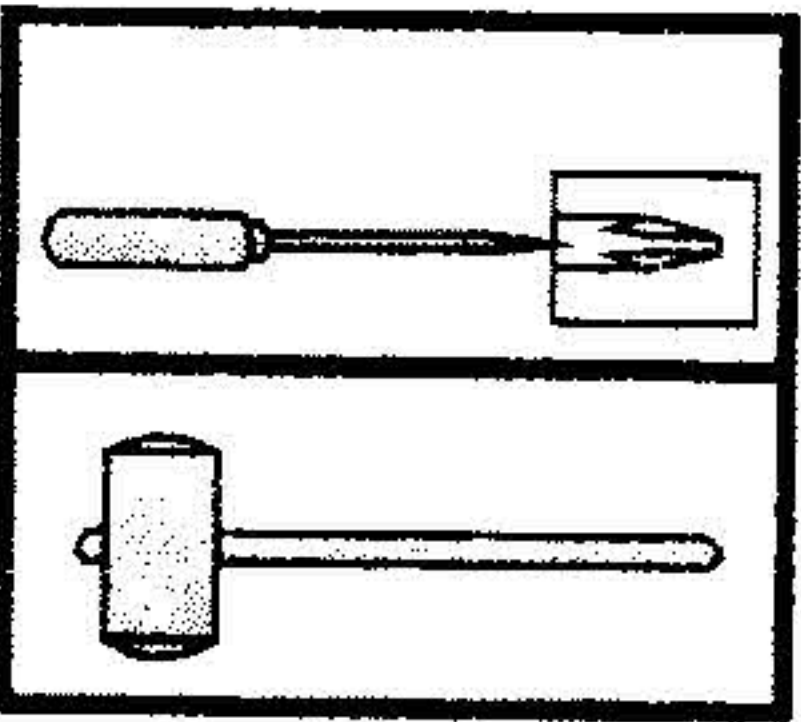
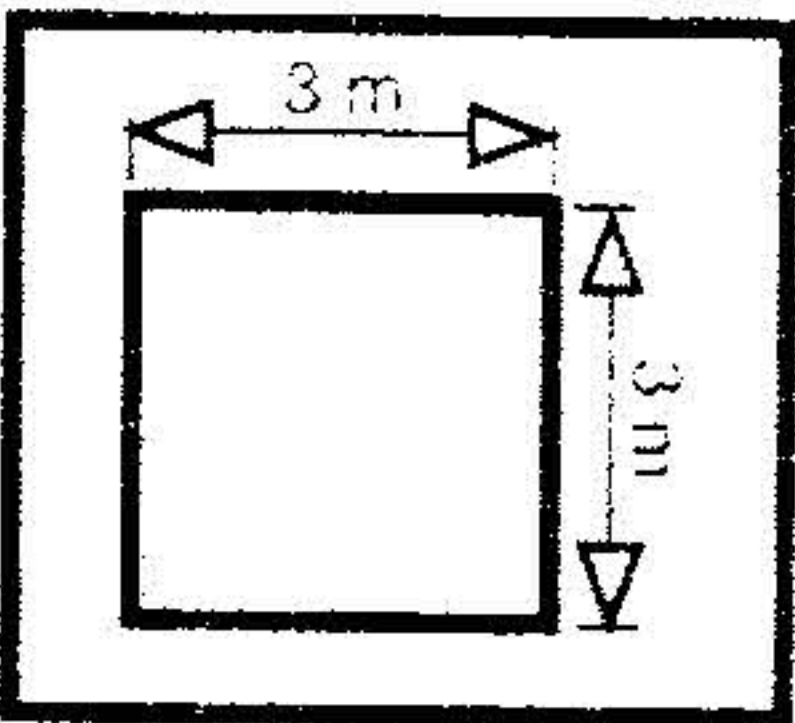
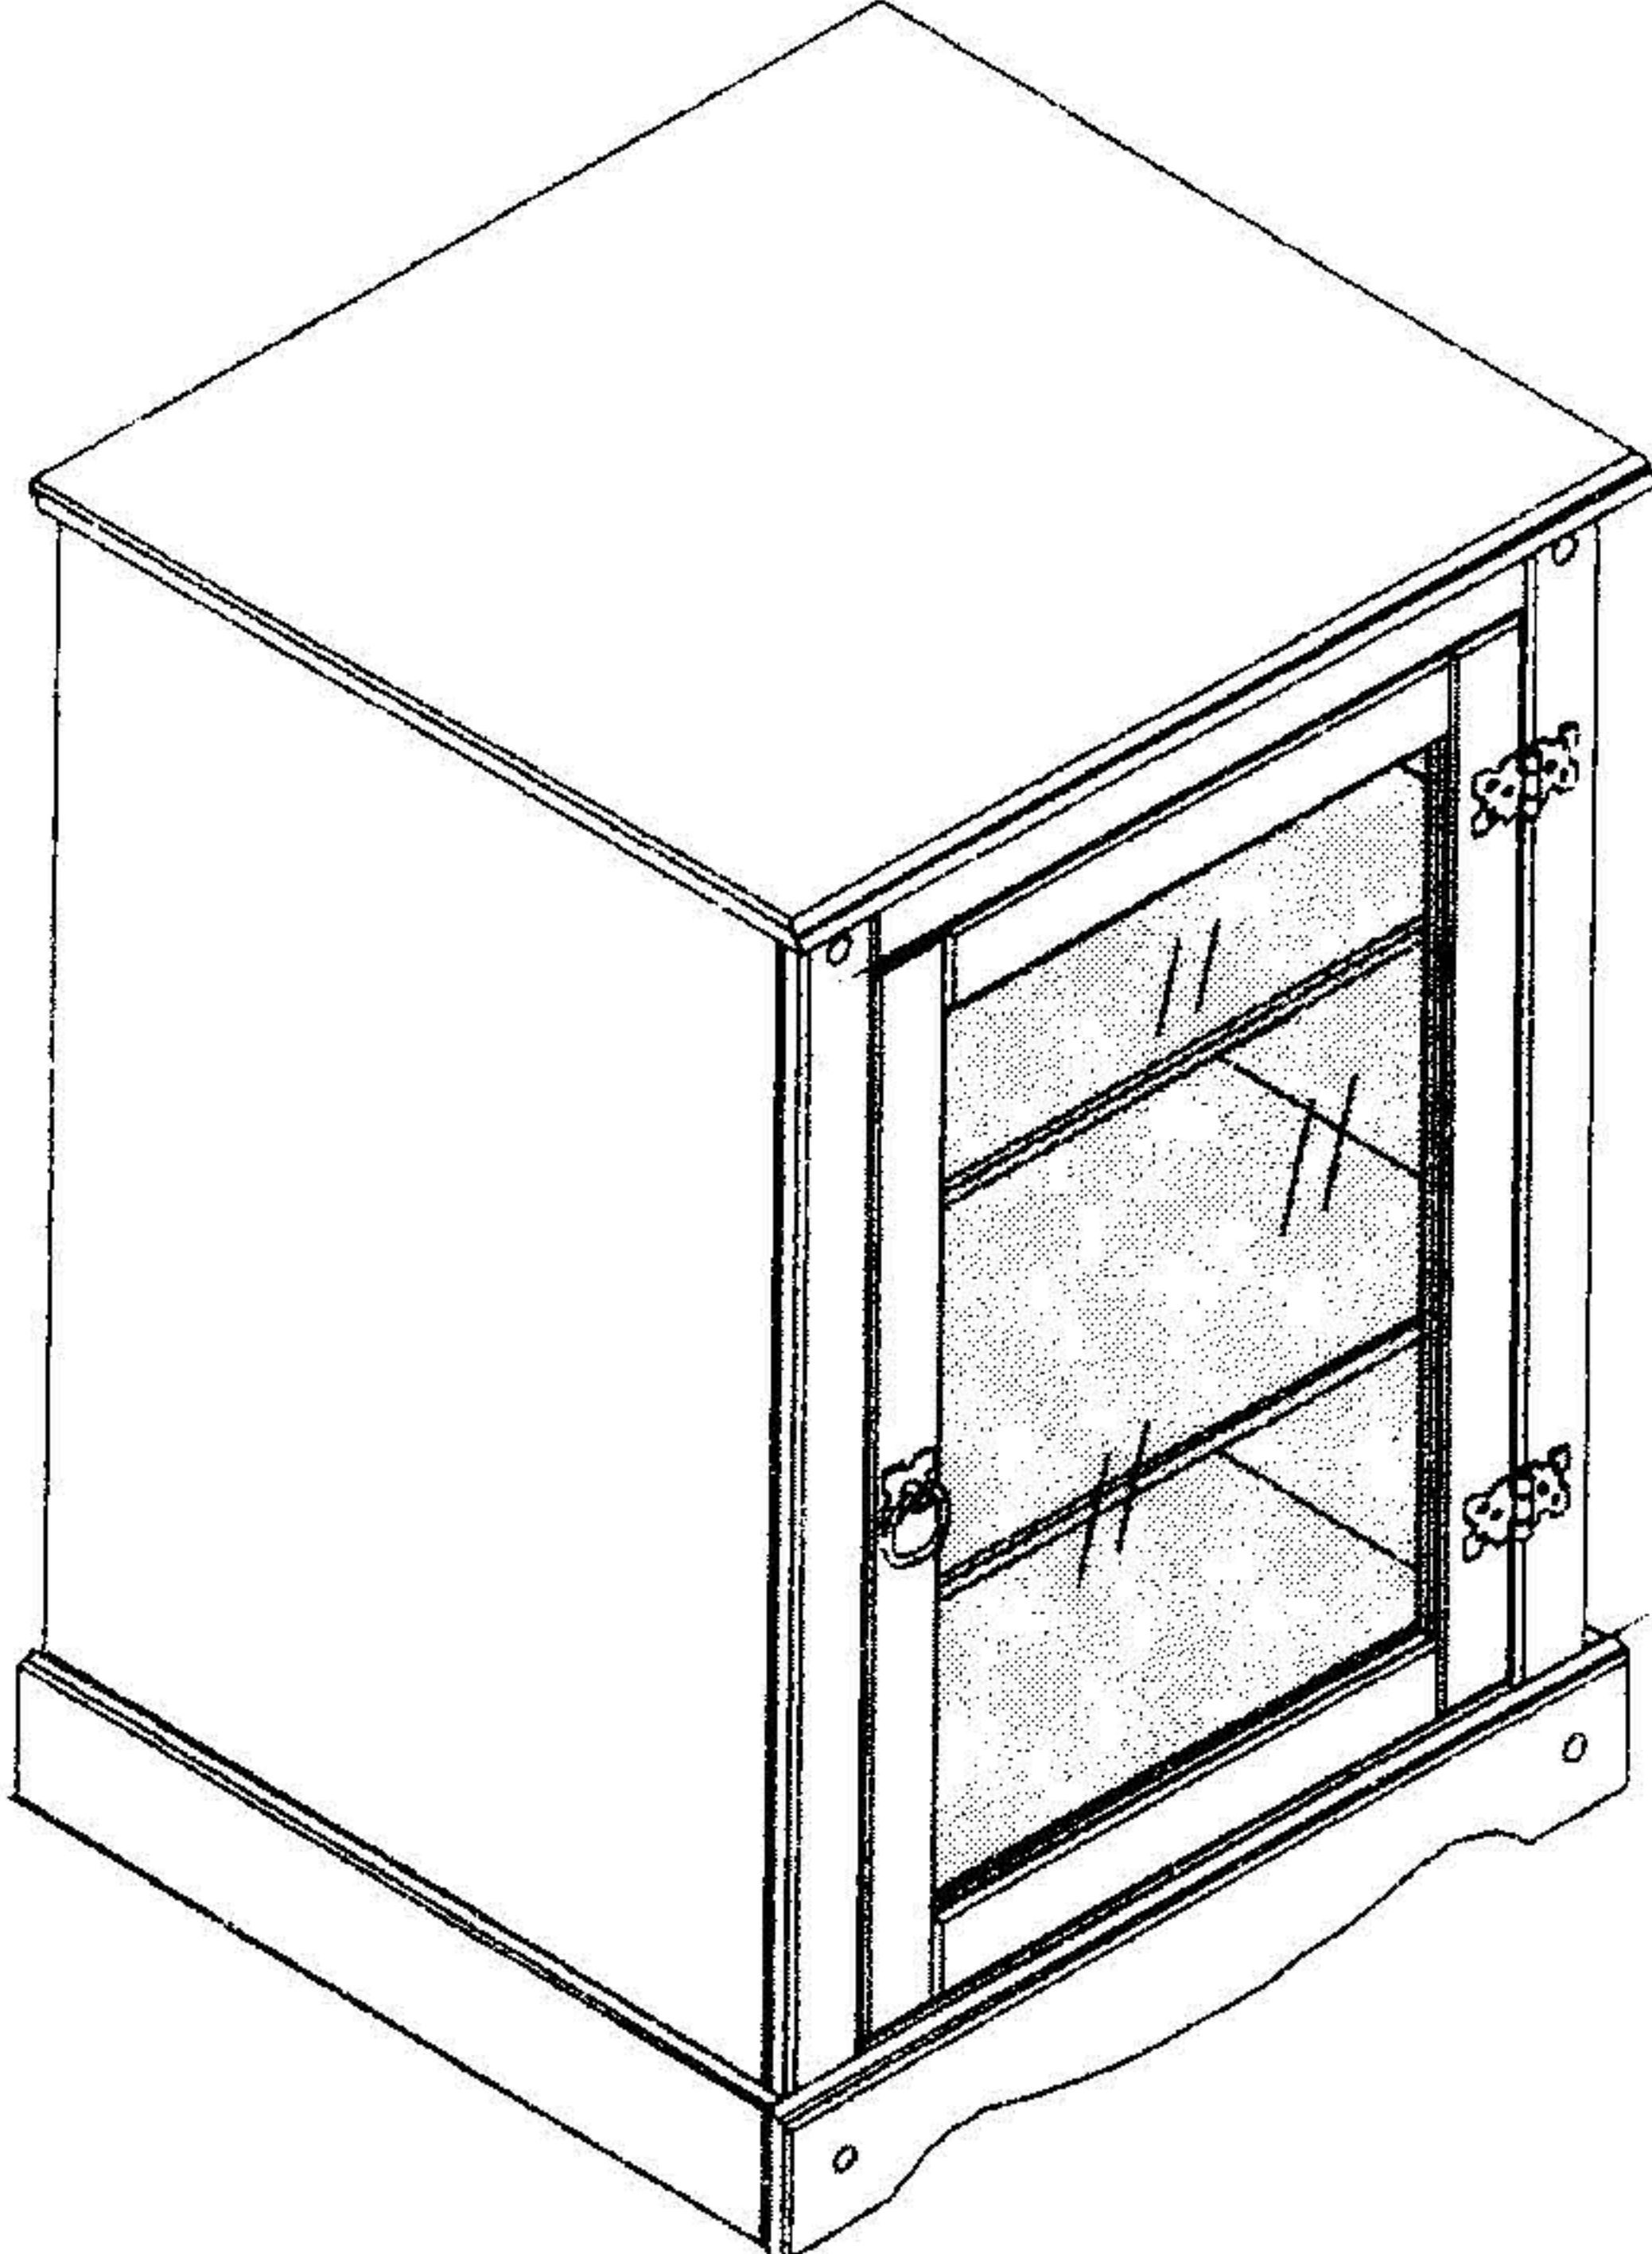




# CORONA HI-FI UNIT #COR95


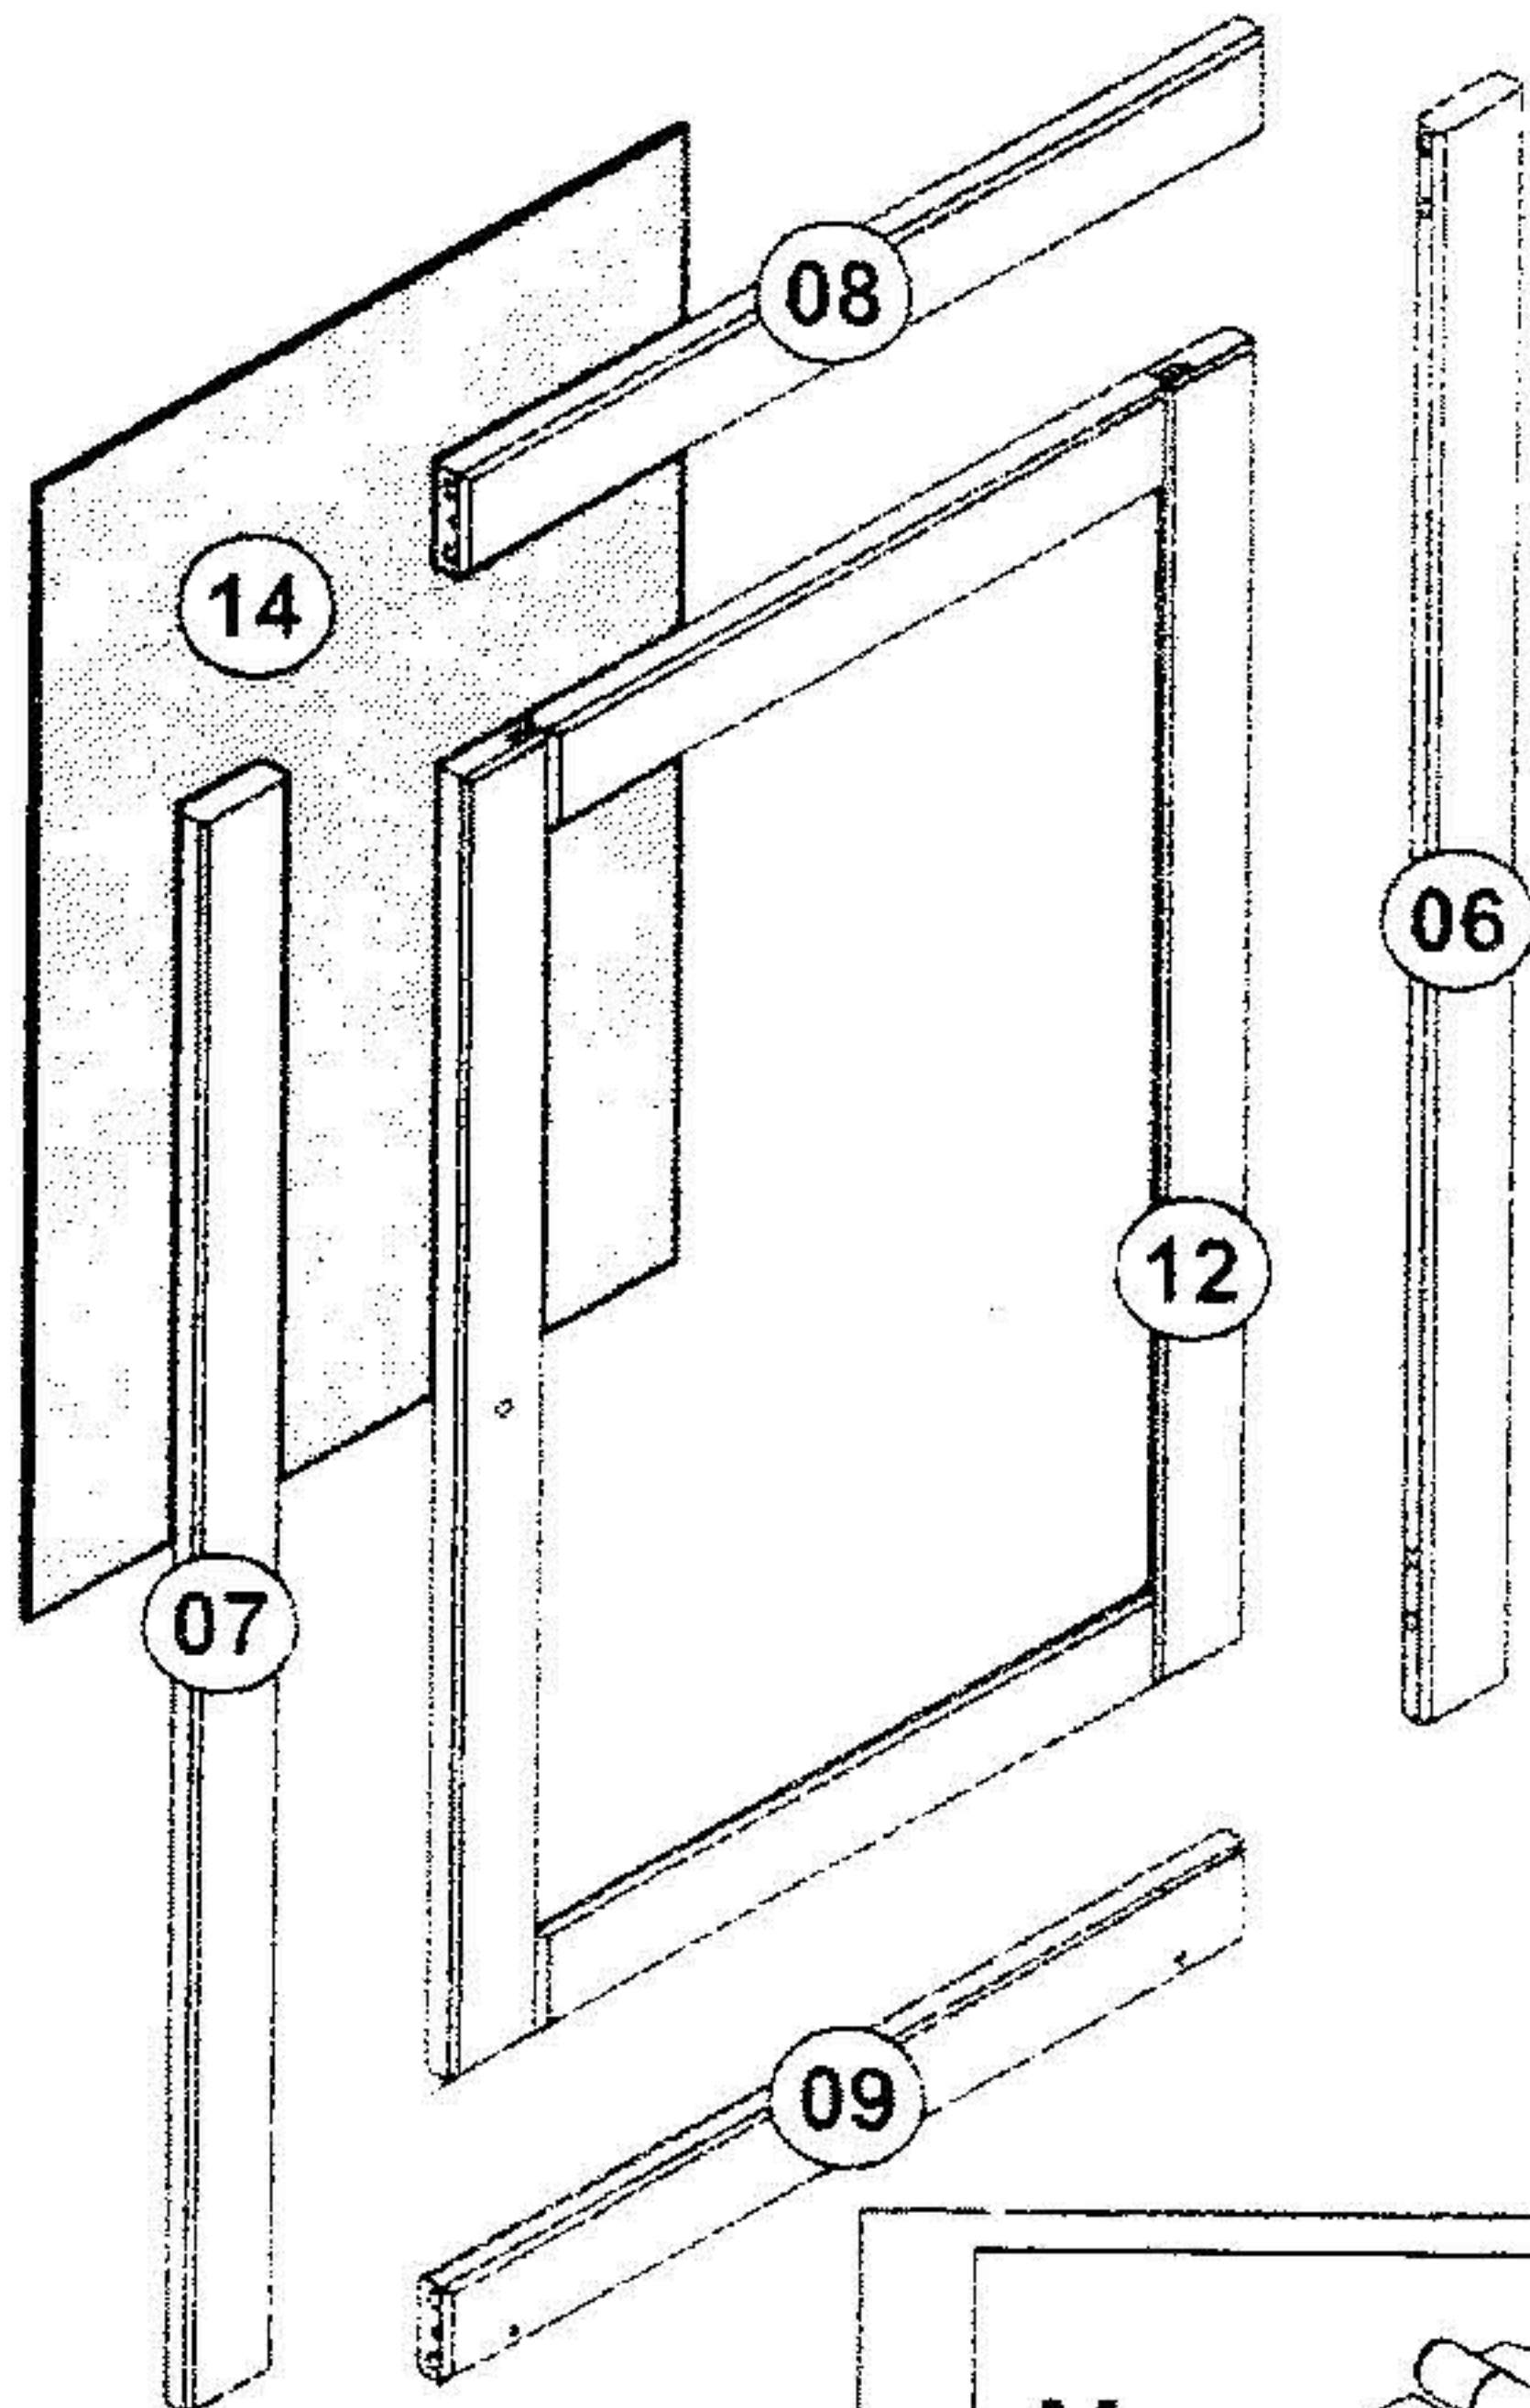






Width = 60cm  
Depth = 51cm  
Height = 82cm





- Please check that all fittings are correct before assembling the item.
- Replacement parts can be supplied for any damages to the item.
- Please keep all packaging until the item is assembled as we will require information from this if replacement parts are required.
- If you have any questions regarding the assembly of your item please call 01709 836856 or email [admin@mercercsfurniture.co.uk](mailto:admin@mercercsfurniture.co.uk)

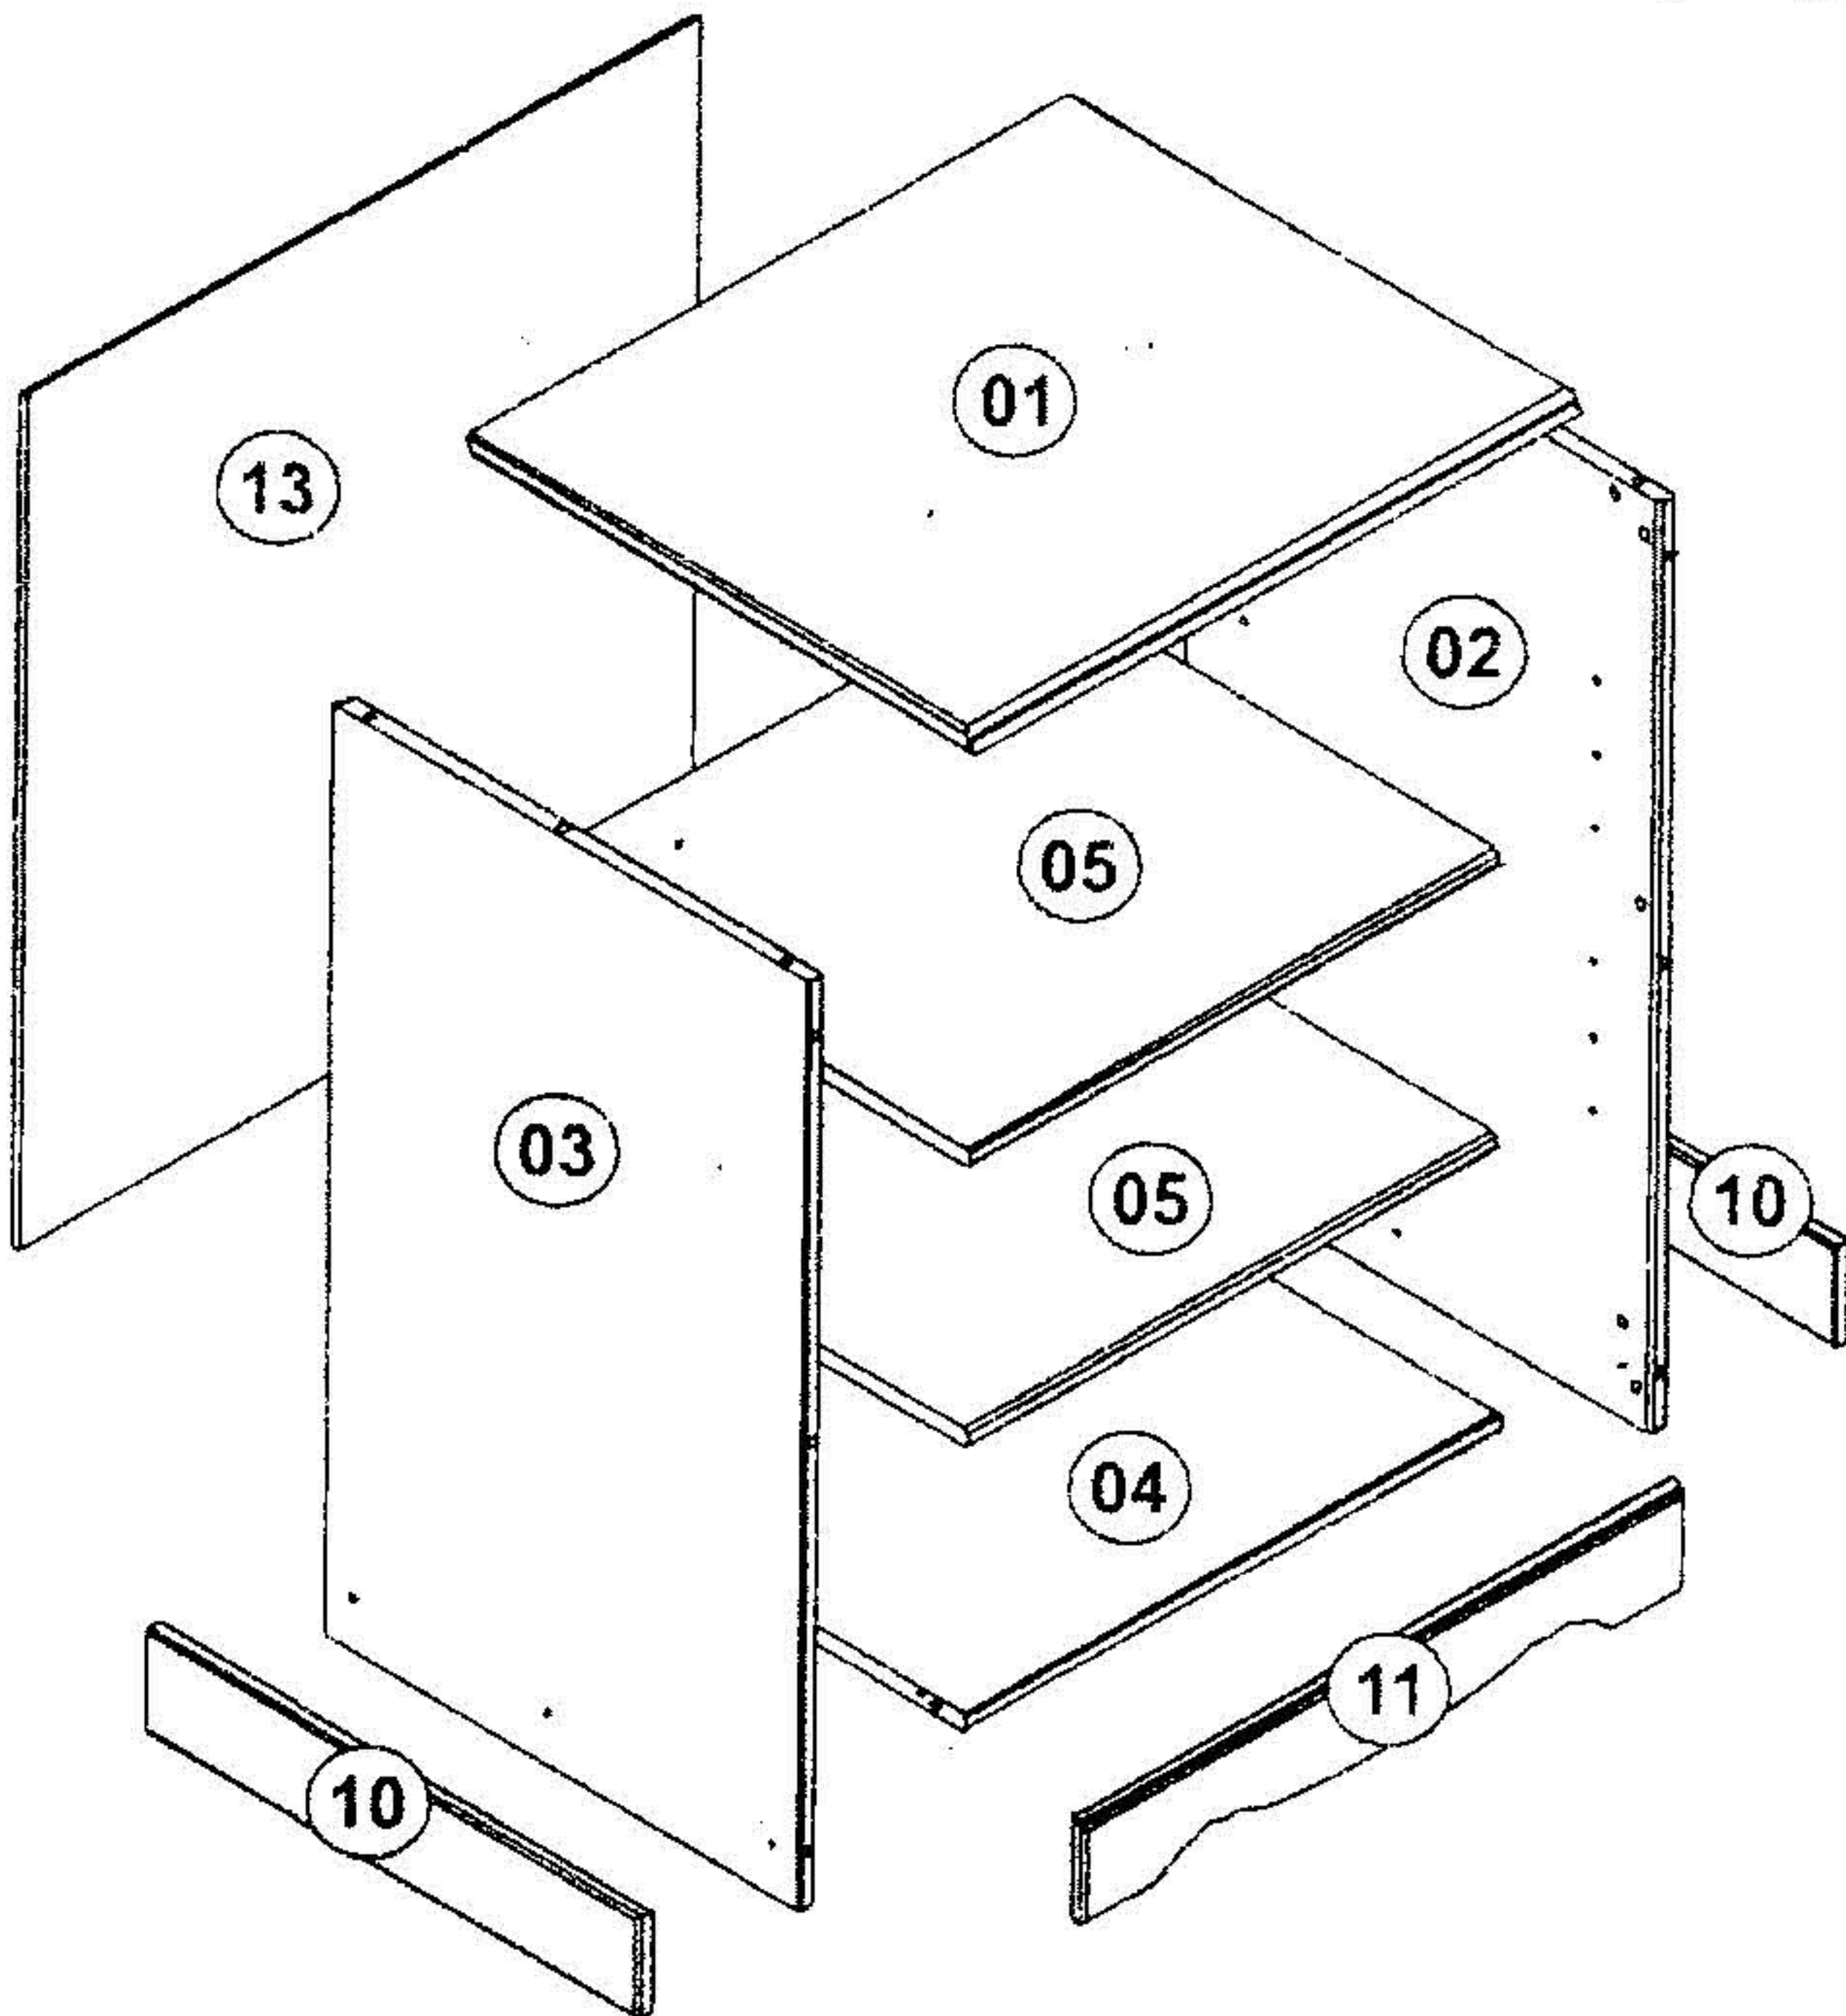
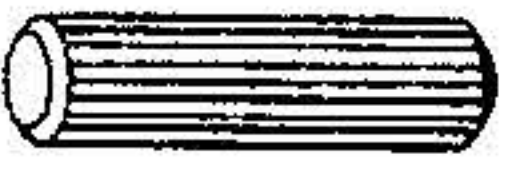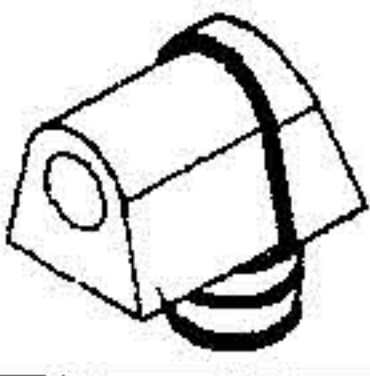
|   |                                                                                     |             |      |
|---|-------------------------------------------------------------------------------------|-------------|------|
| A |  | 8,0 x 25 mm | 26 x |
| B |  | 3,5 x 30 mm | 10 x |
| C |  |             | 12 x |
| D |  |             | 08 x |
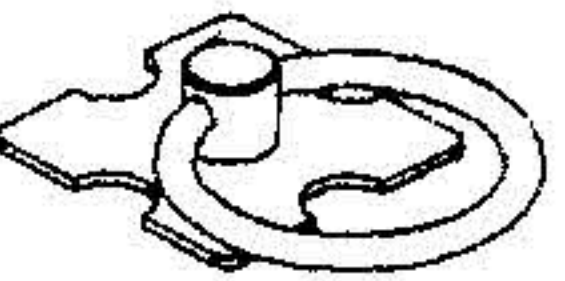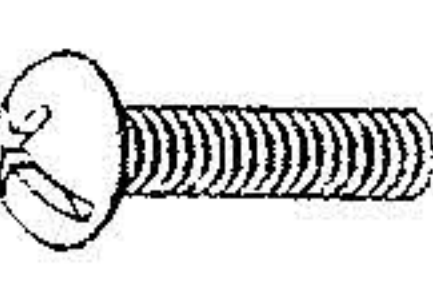
|   |                                                                                     |             |      |
|---|-------------------------------------------------------------------------------------|-------------|------|
| E |  | 4,0 x 25 mm | 12 x |
| F |  |             | 01 x |
| G |  | 3,5 x 14 mm | 20 x |
| H |  |             | 01 x |
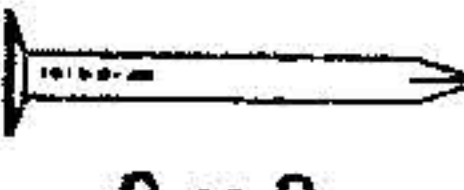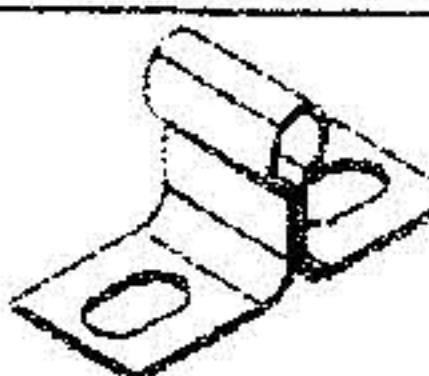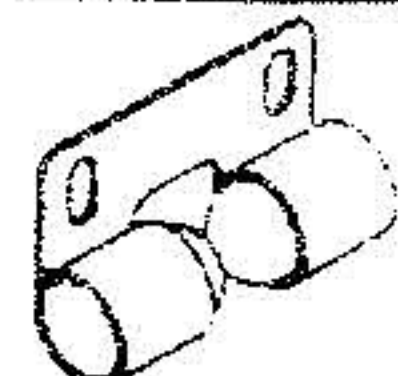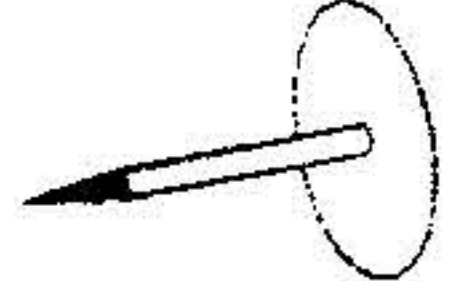
|   |                                                                                       |       |      |
|---|---------------------------------------------------------------------------------------|-------|------|
| I |  | 8 x 8 | 20 x |
| J |  |       | 01 x |
| K |  |       | 01 x |
| L |  |       | 04 x |






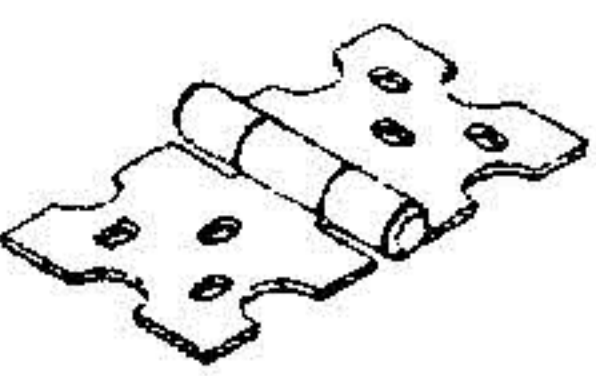
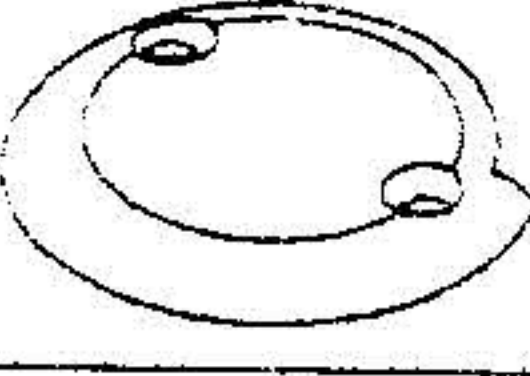
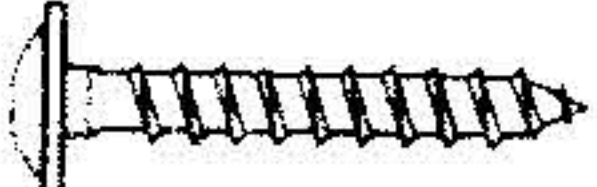
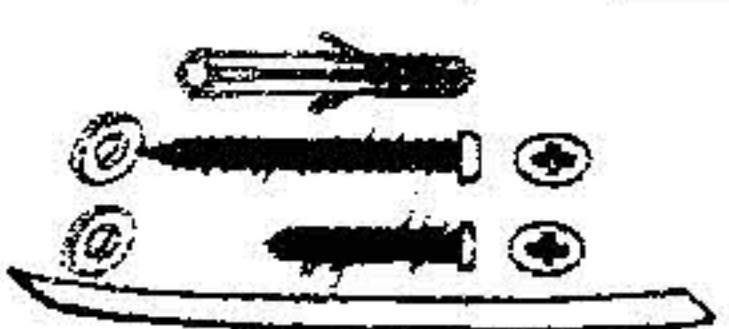
|   |                                                                                       |             |      |
|---|---------------------------------------------------------------------------------------|-------------|------|
| M |  |             | 02 x |
| N |  | 3,0 x 14 mm | 04 x |
| O |  |             | 04 x |
| P |  | 4,0 x 30 mm | 08 x |
| Y |  |             | 01 x |

ORDER: 2024-03-01



PROFORMA: 29/2024

BATCH NUMBER: 002/05







# 01

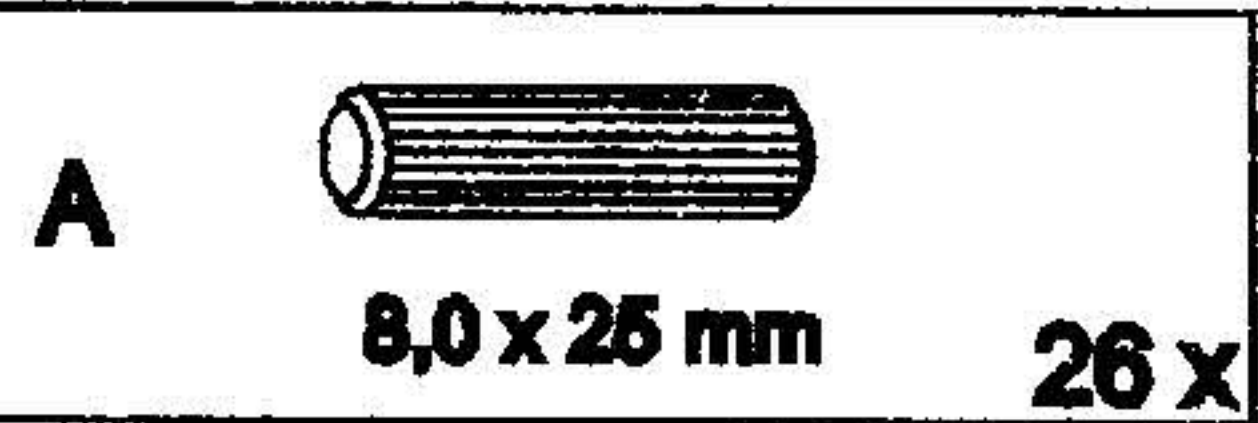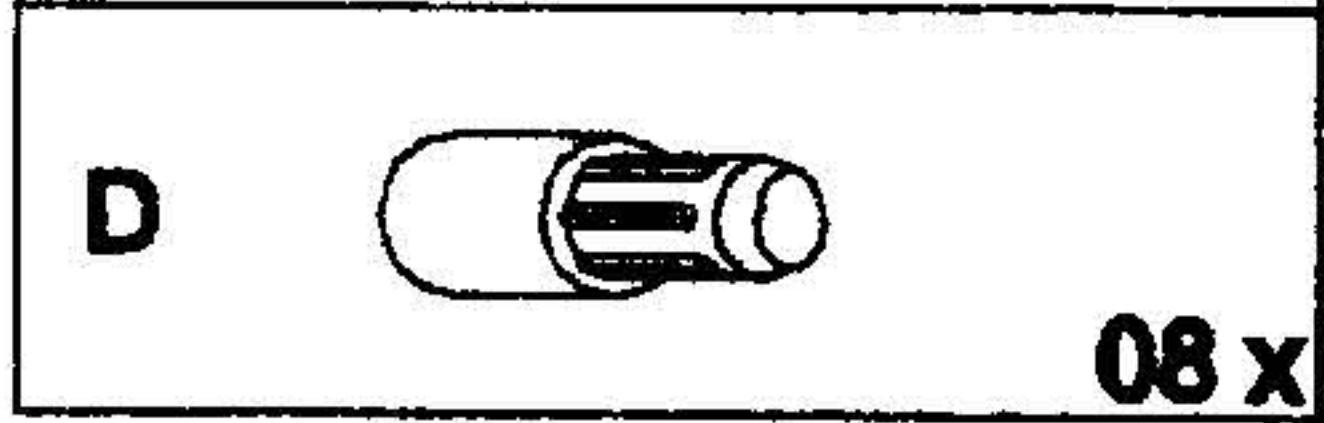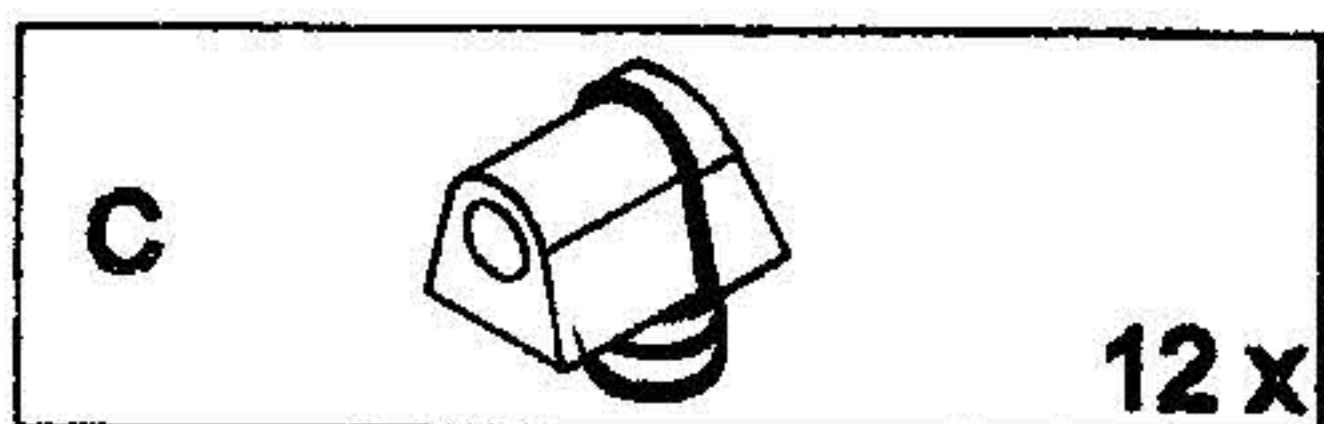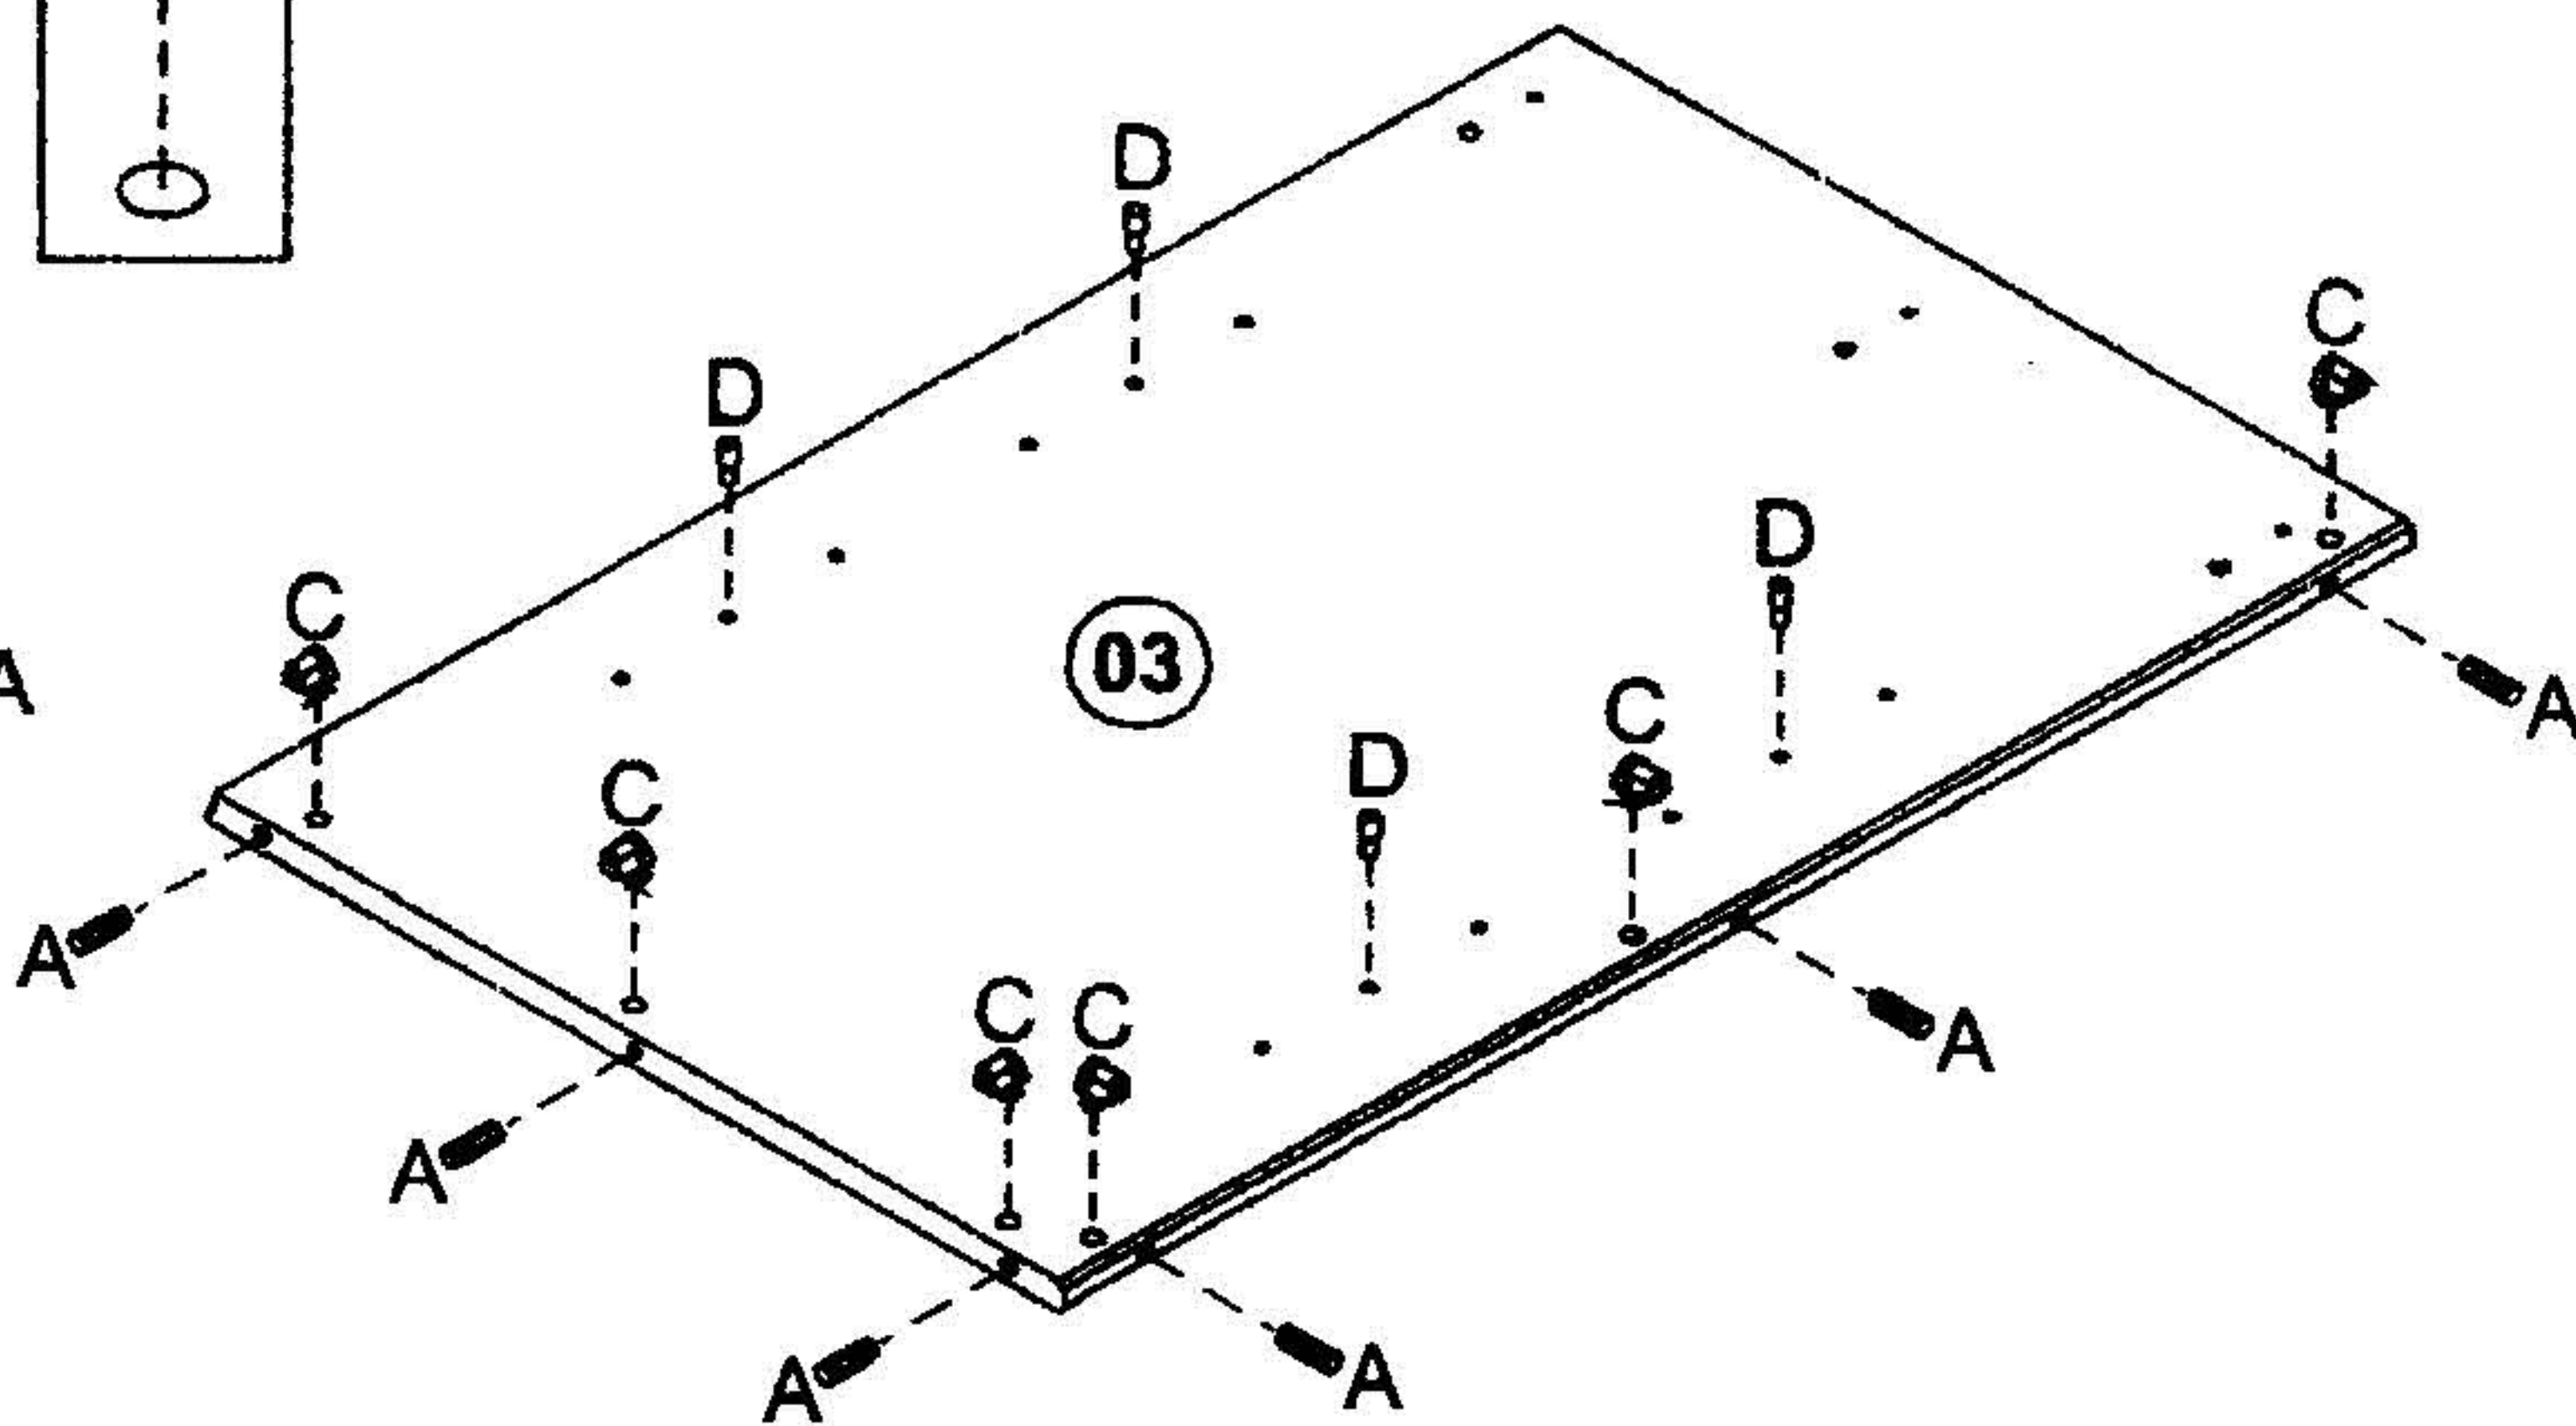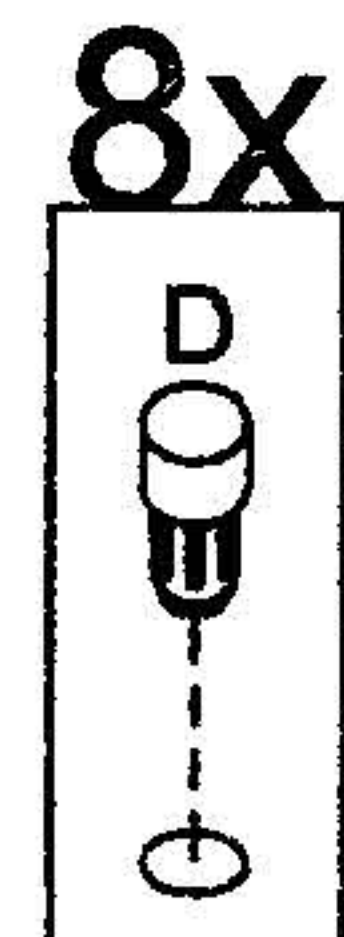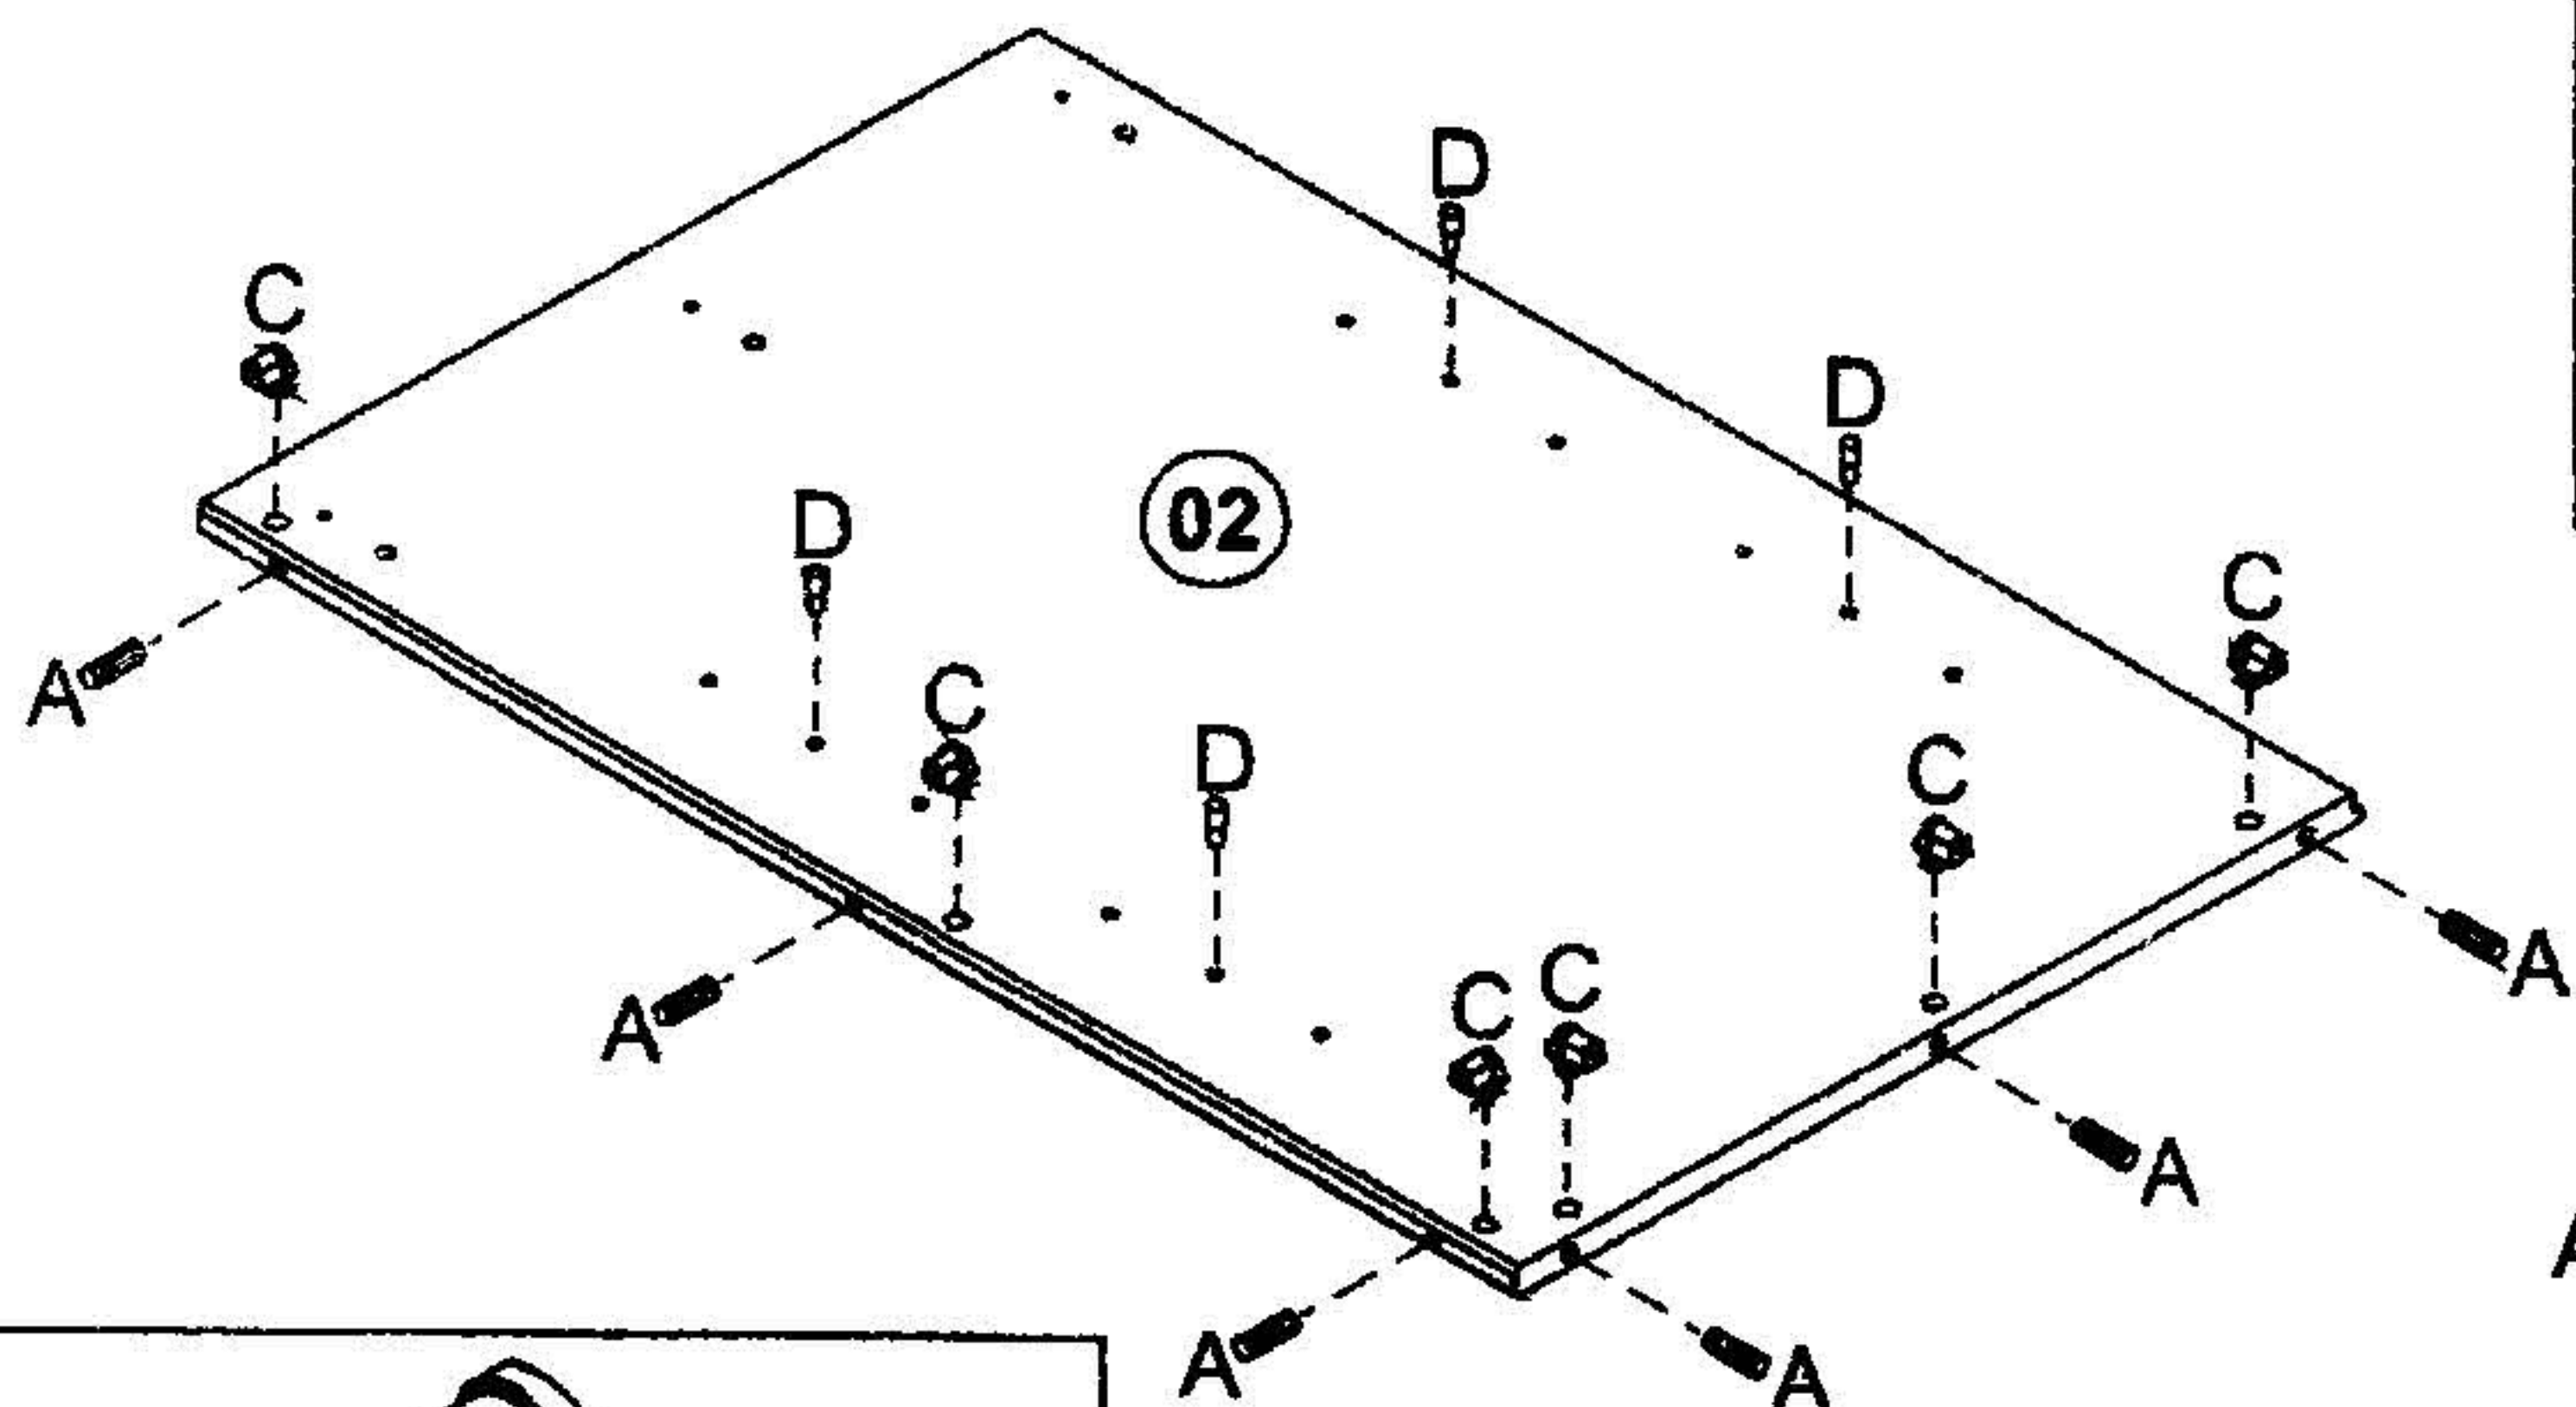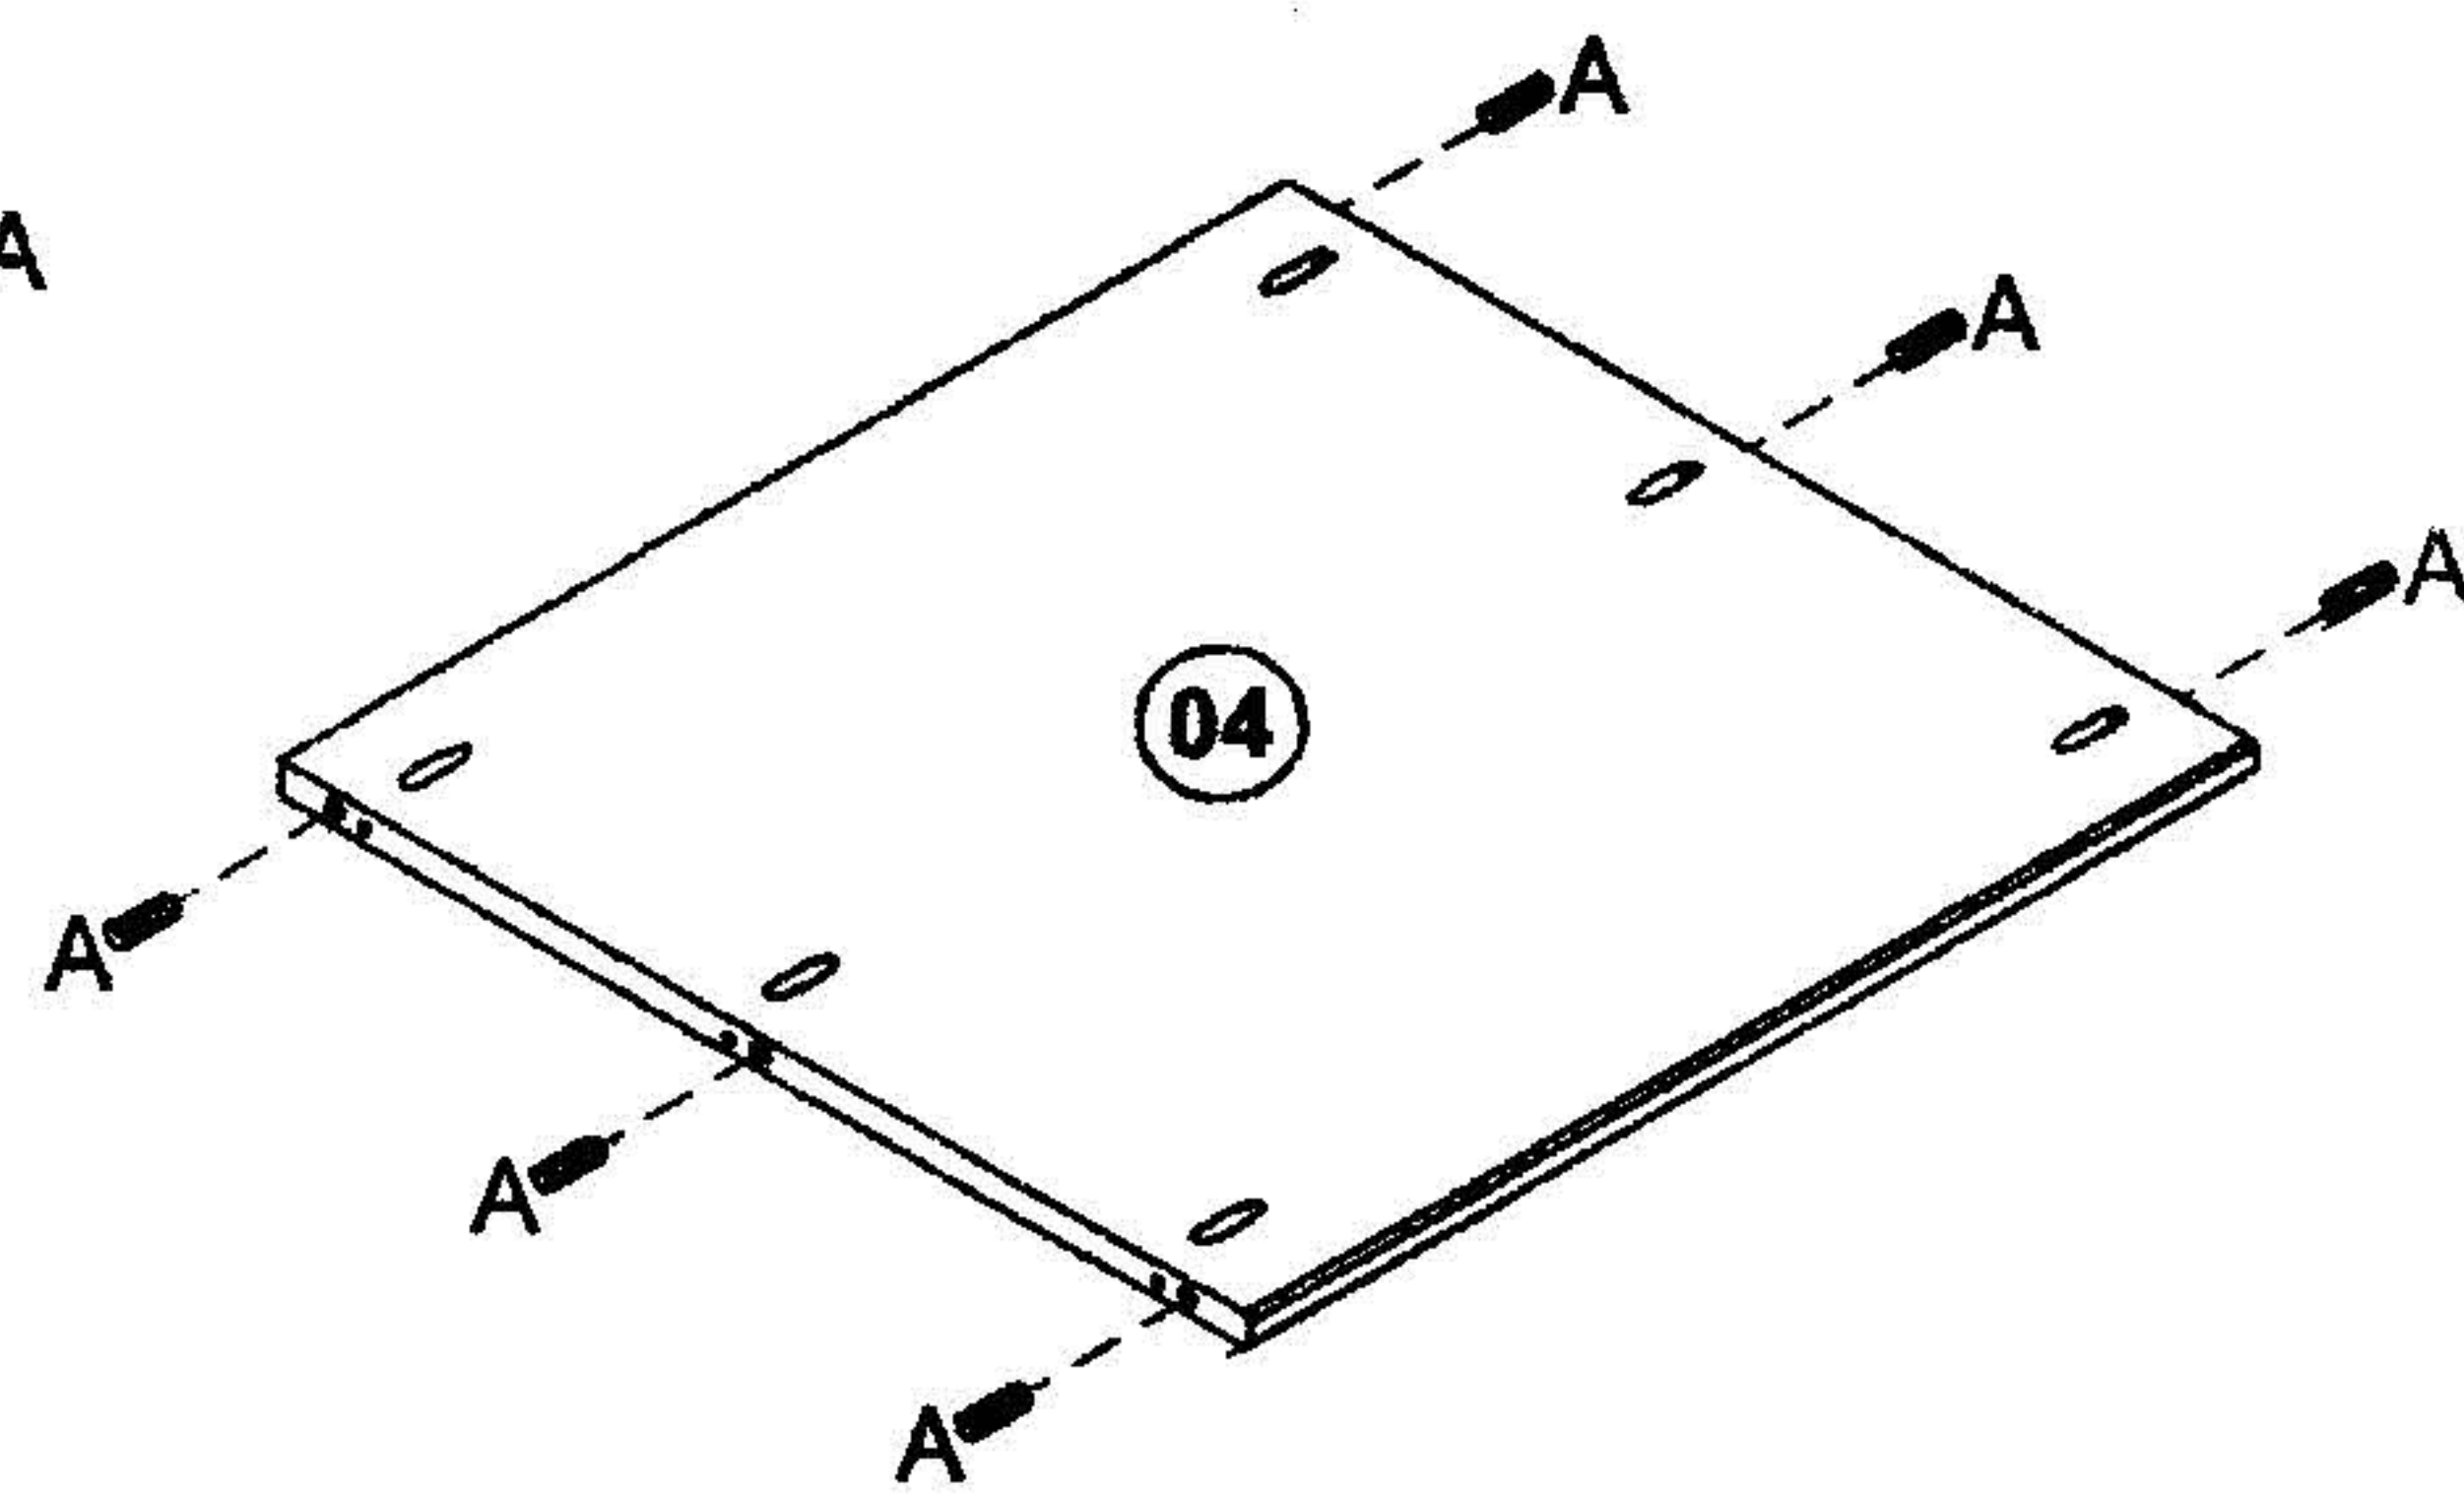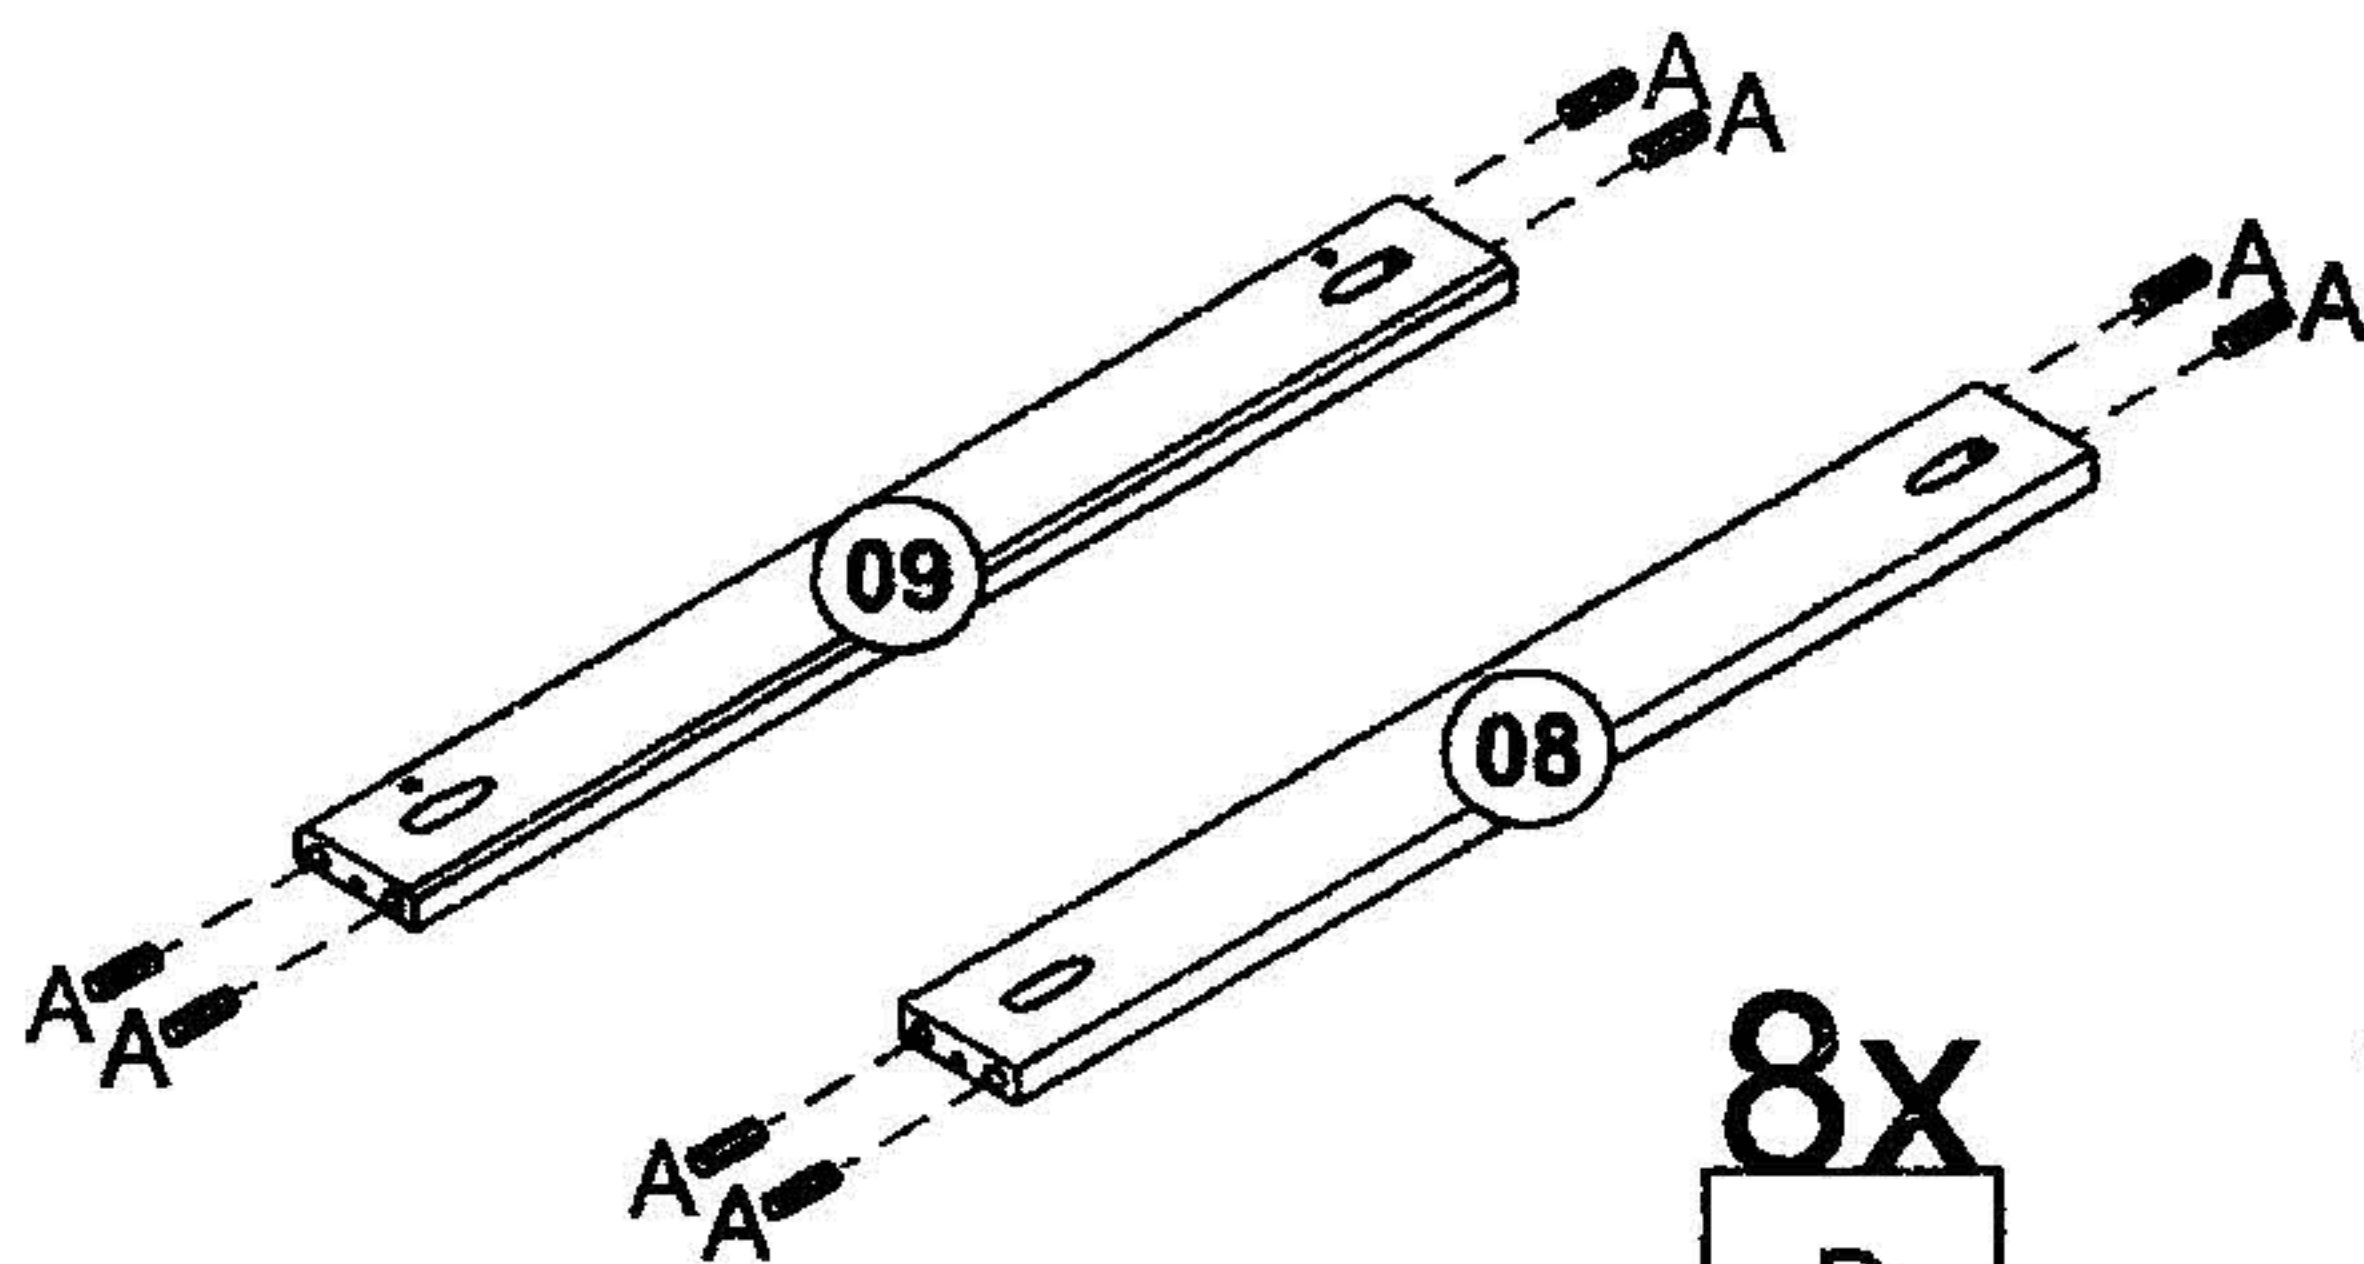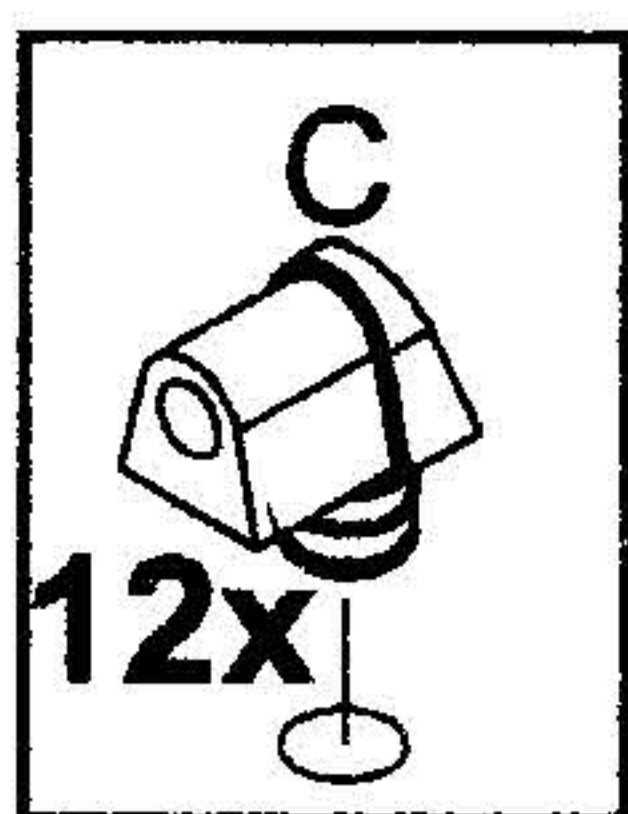




# 02

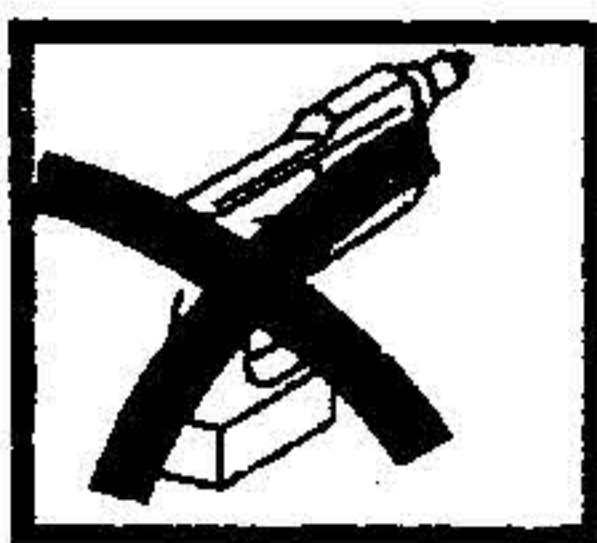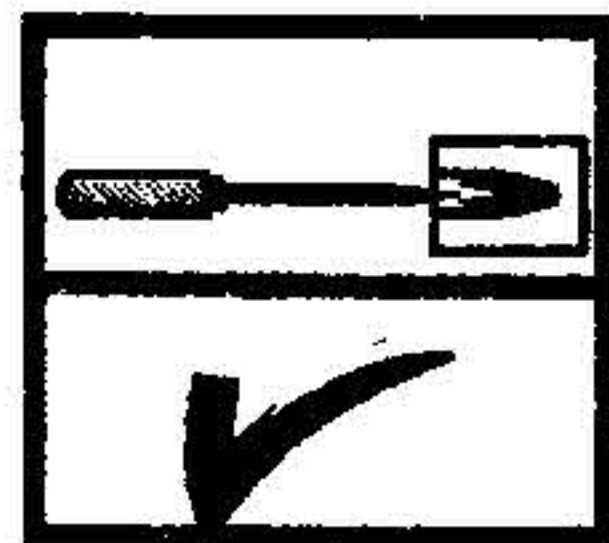


ASSEMBLE ON A  
PLAIN SURFACE

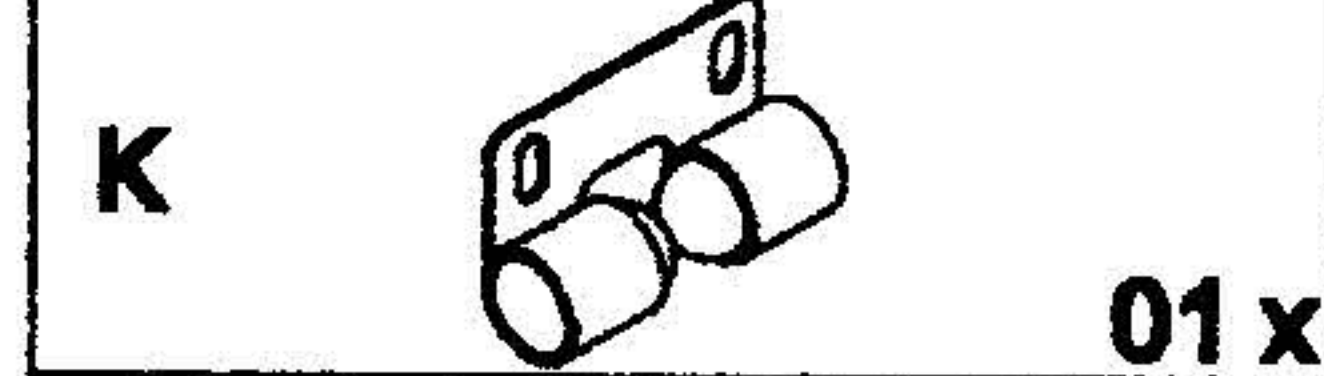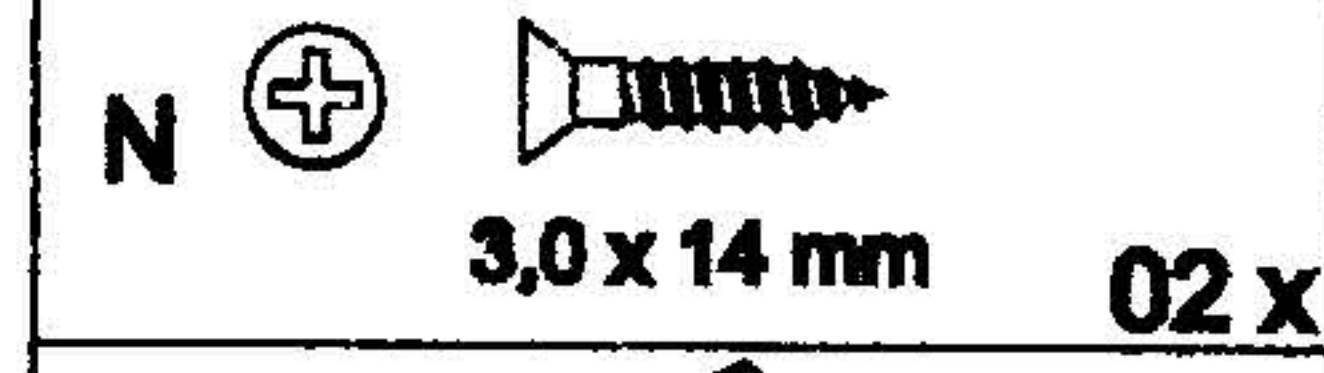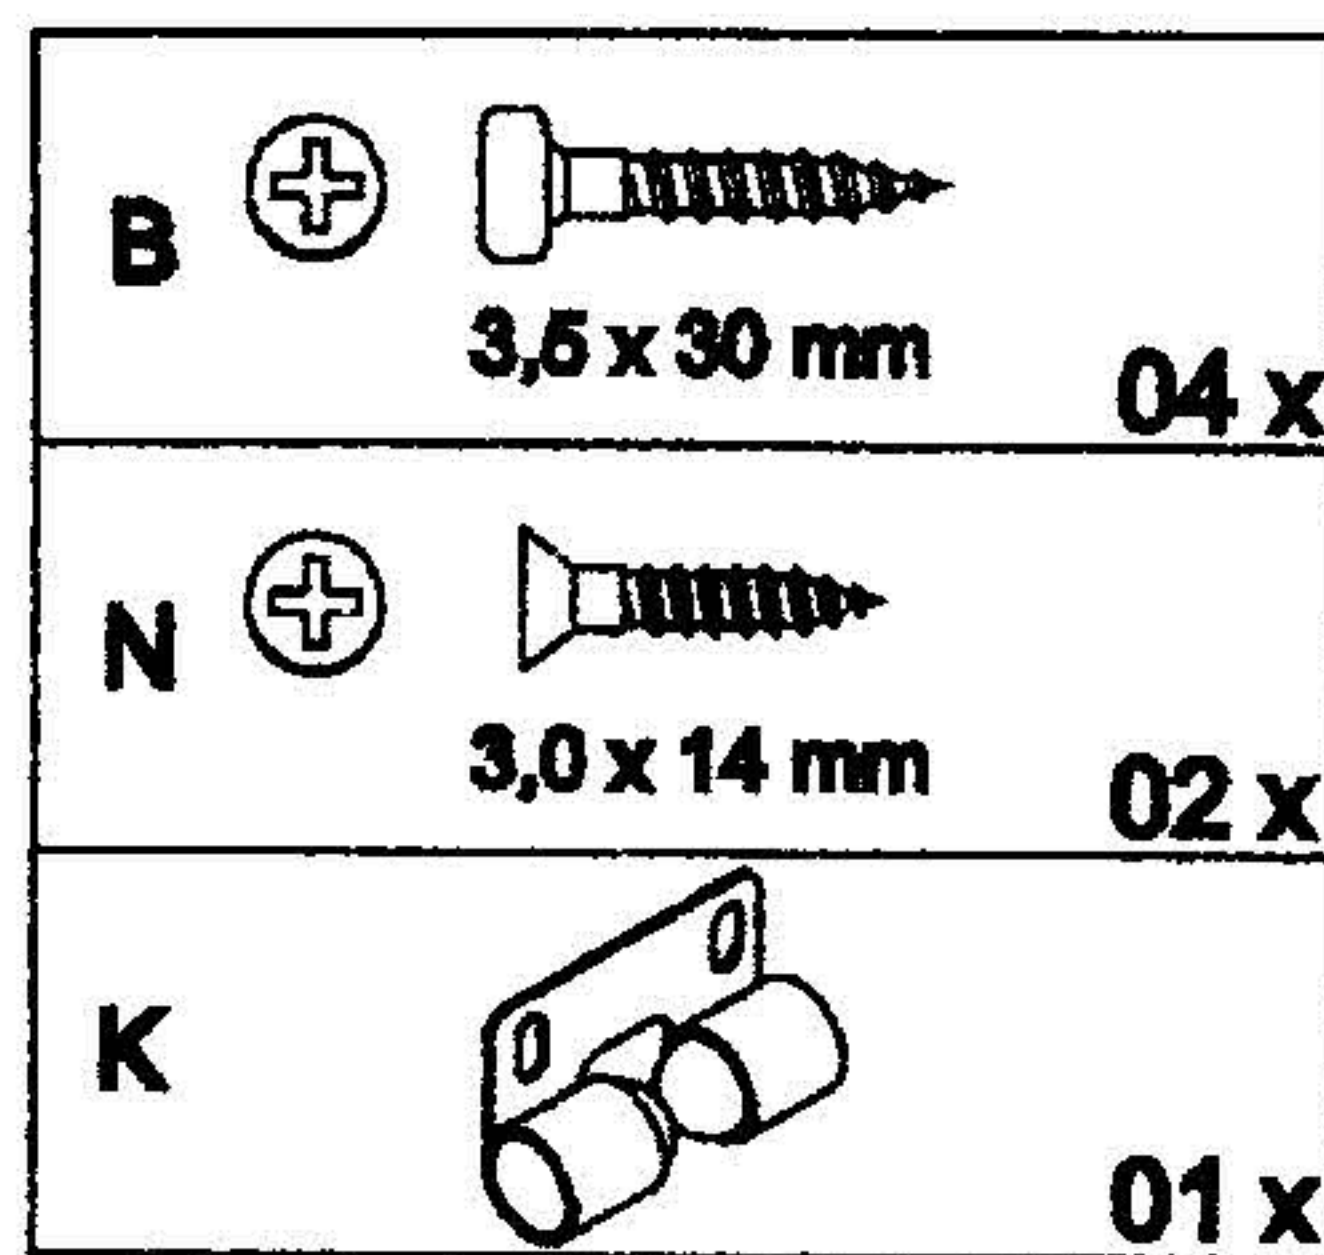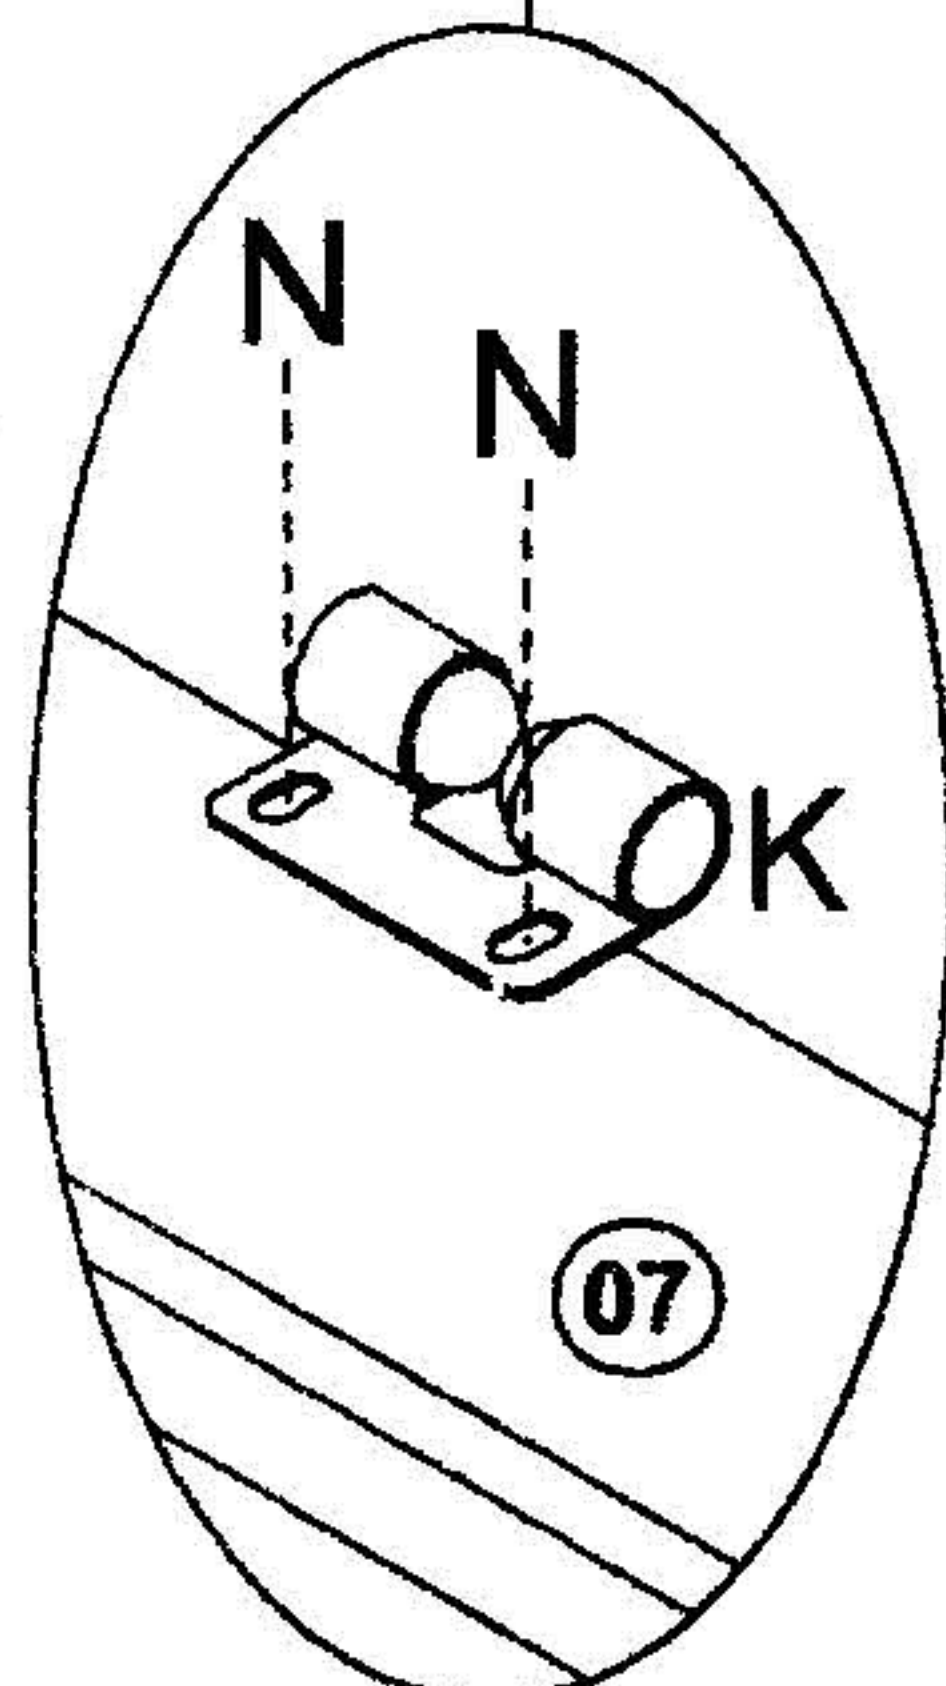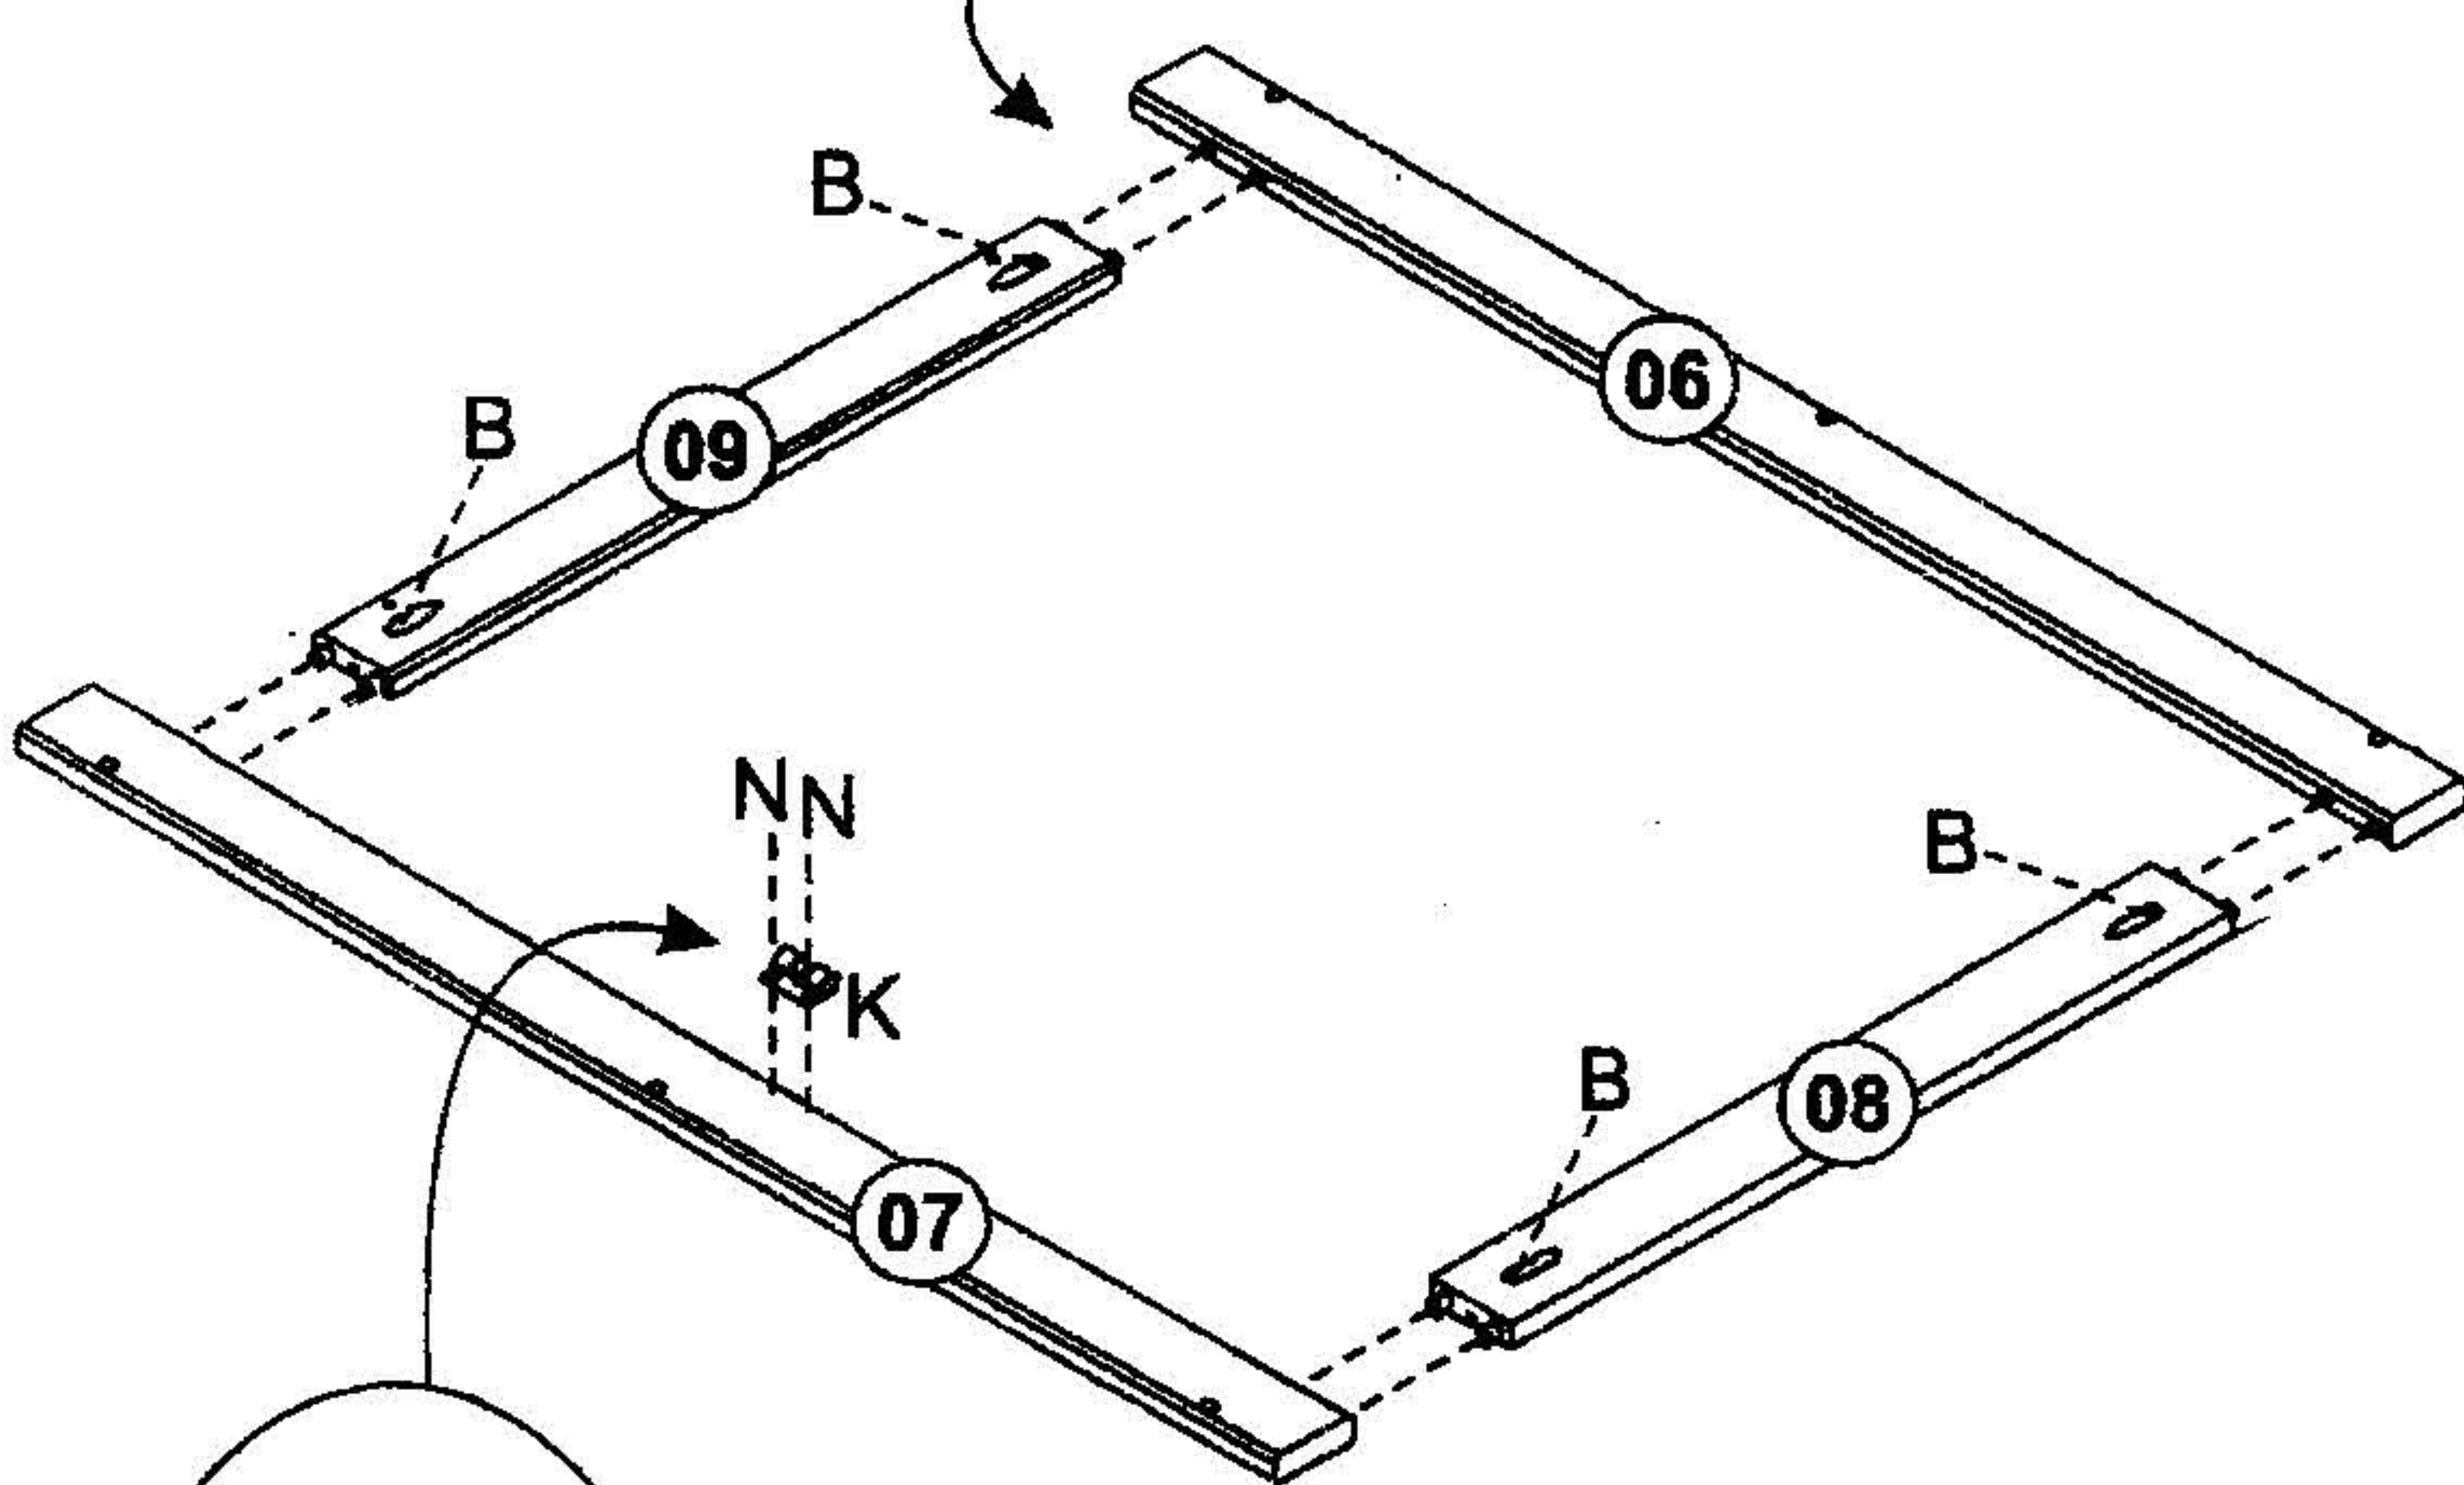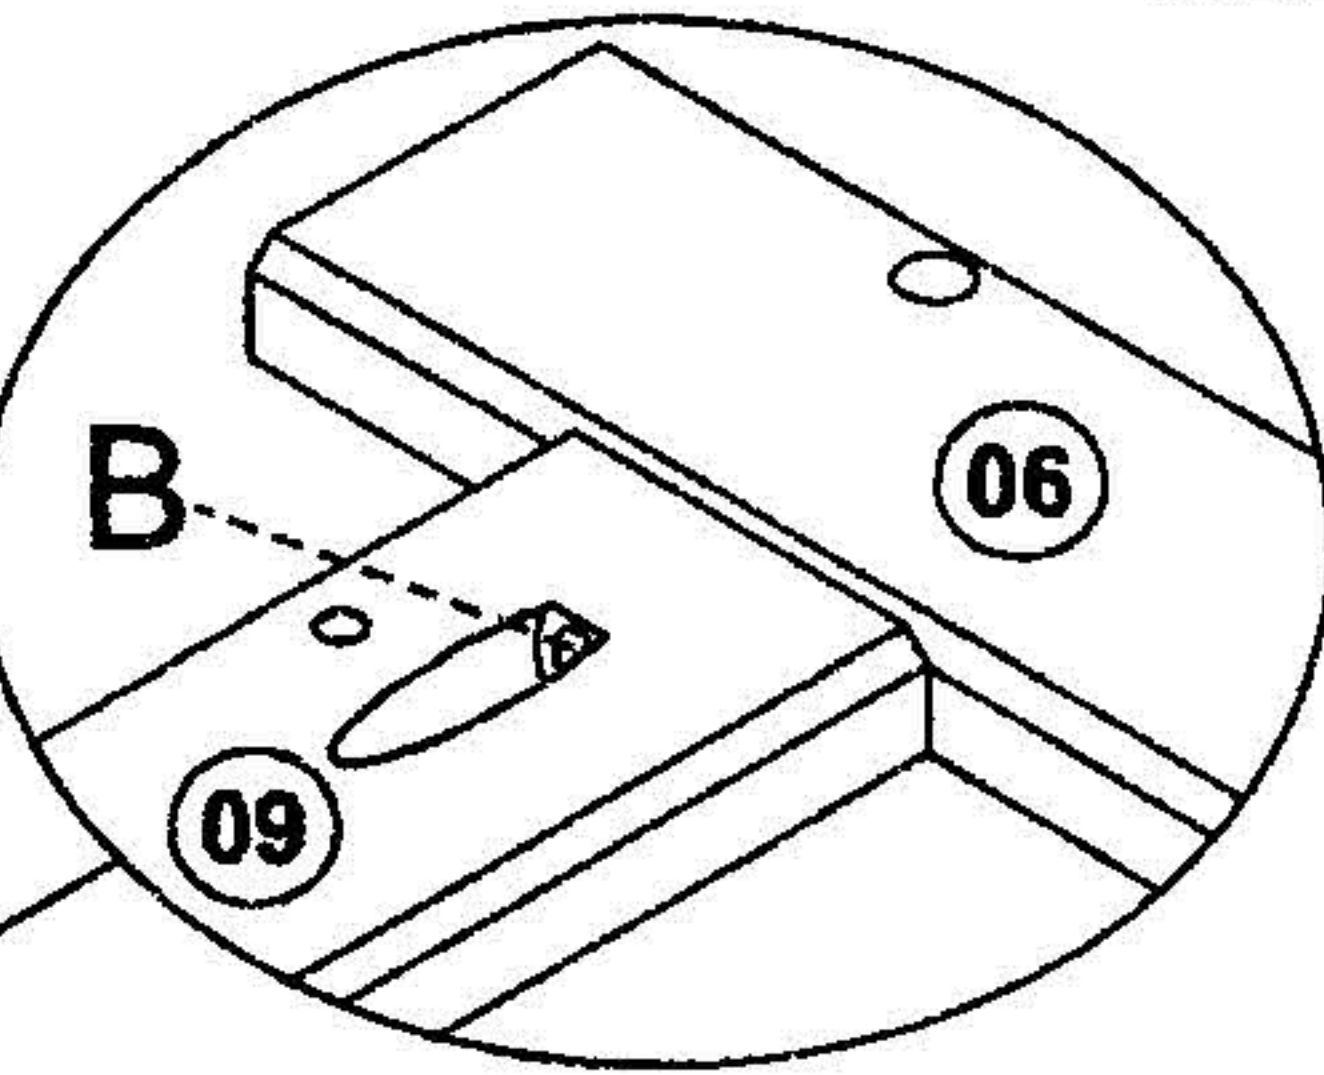

# 03

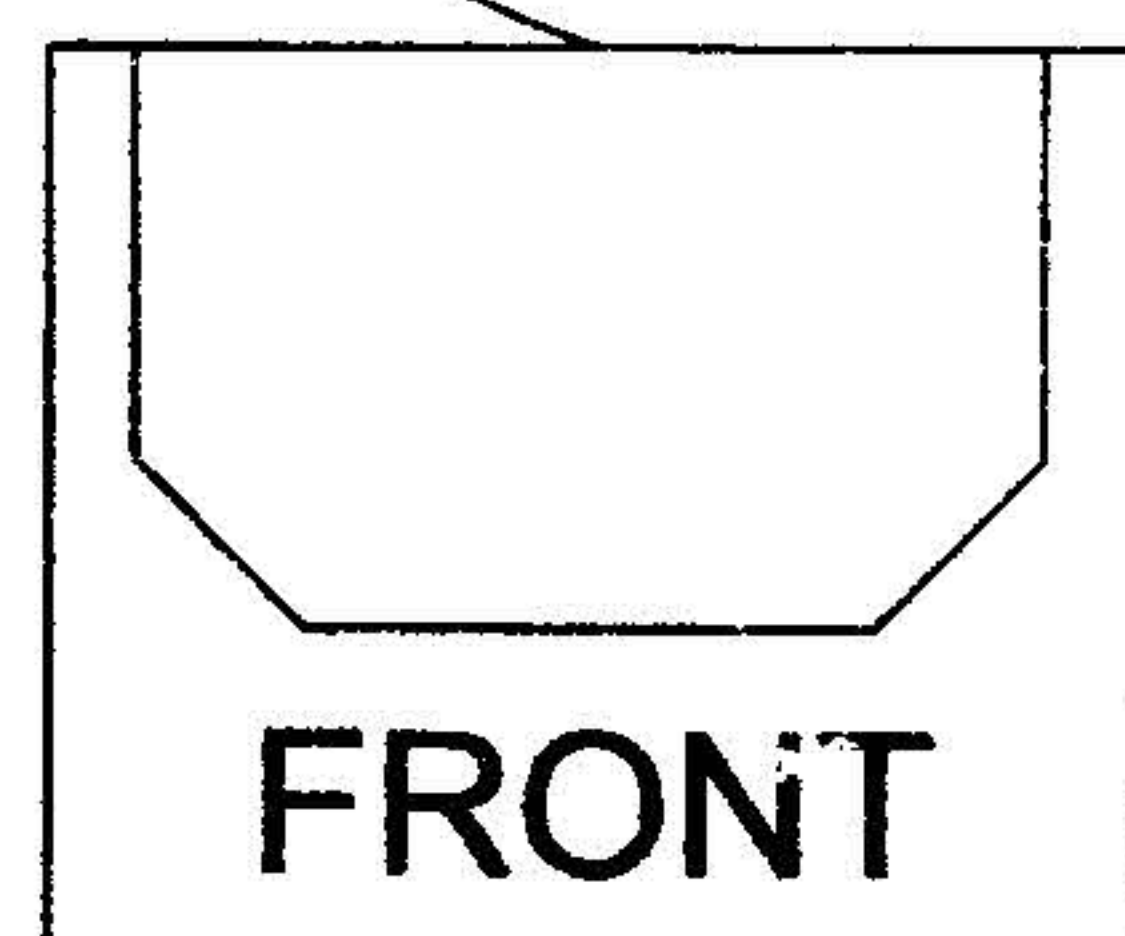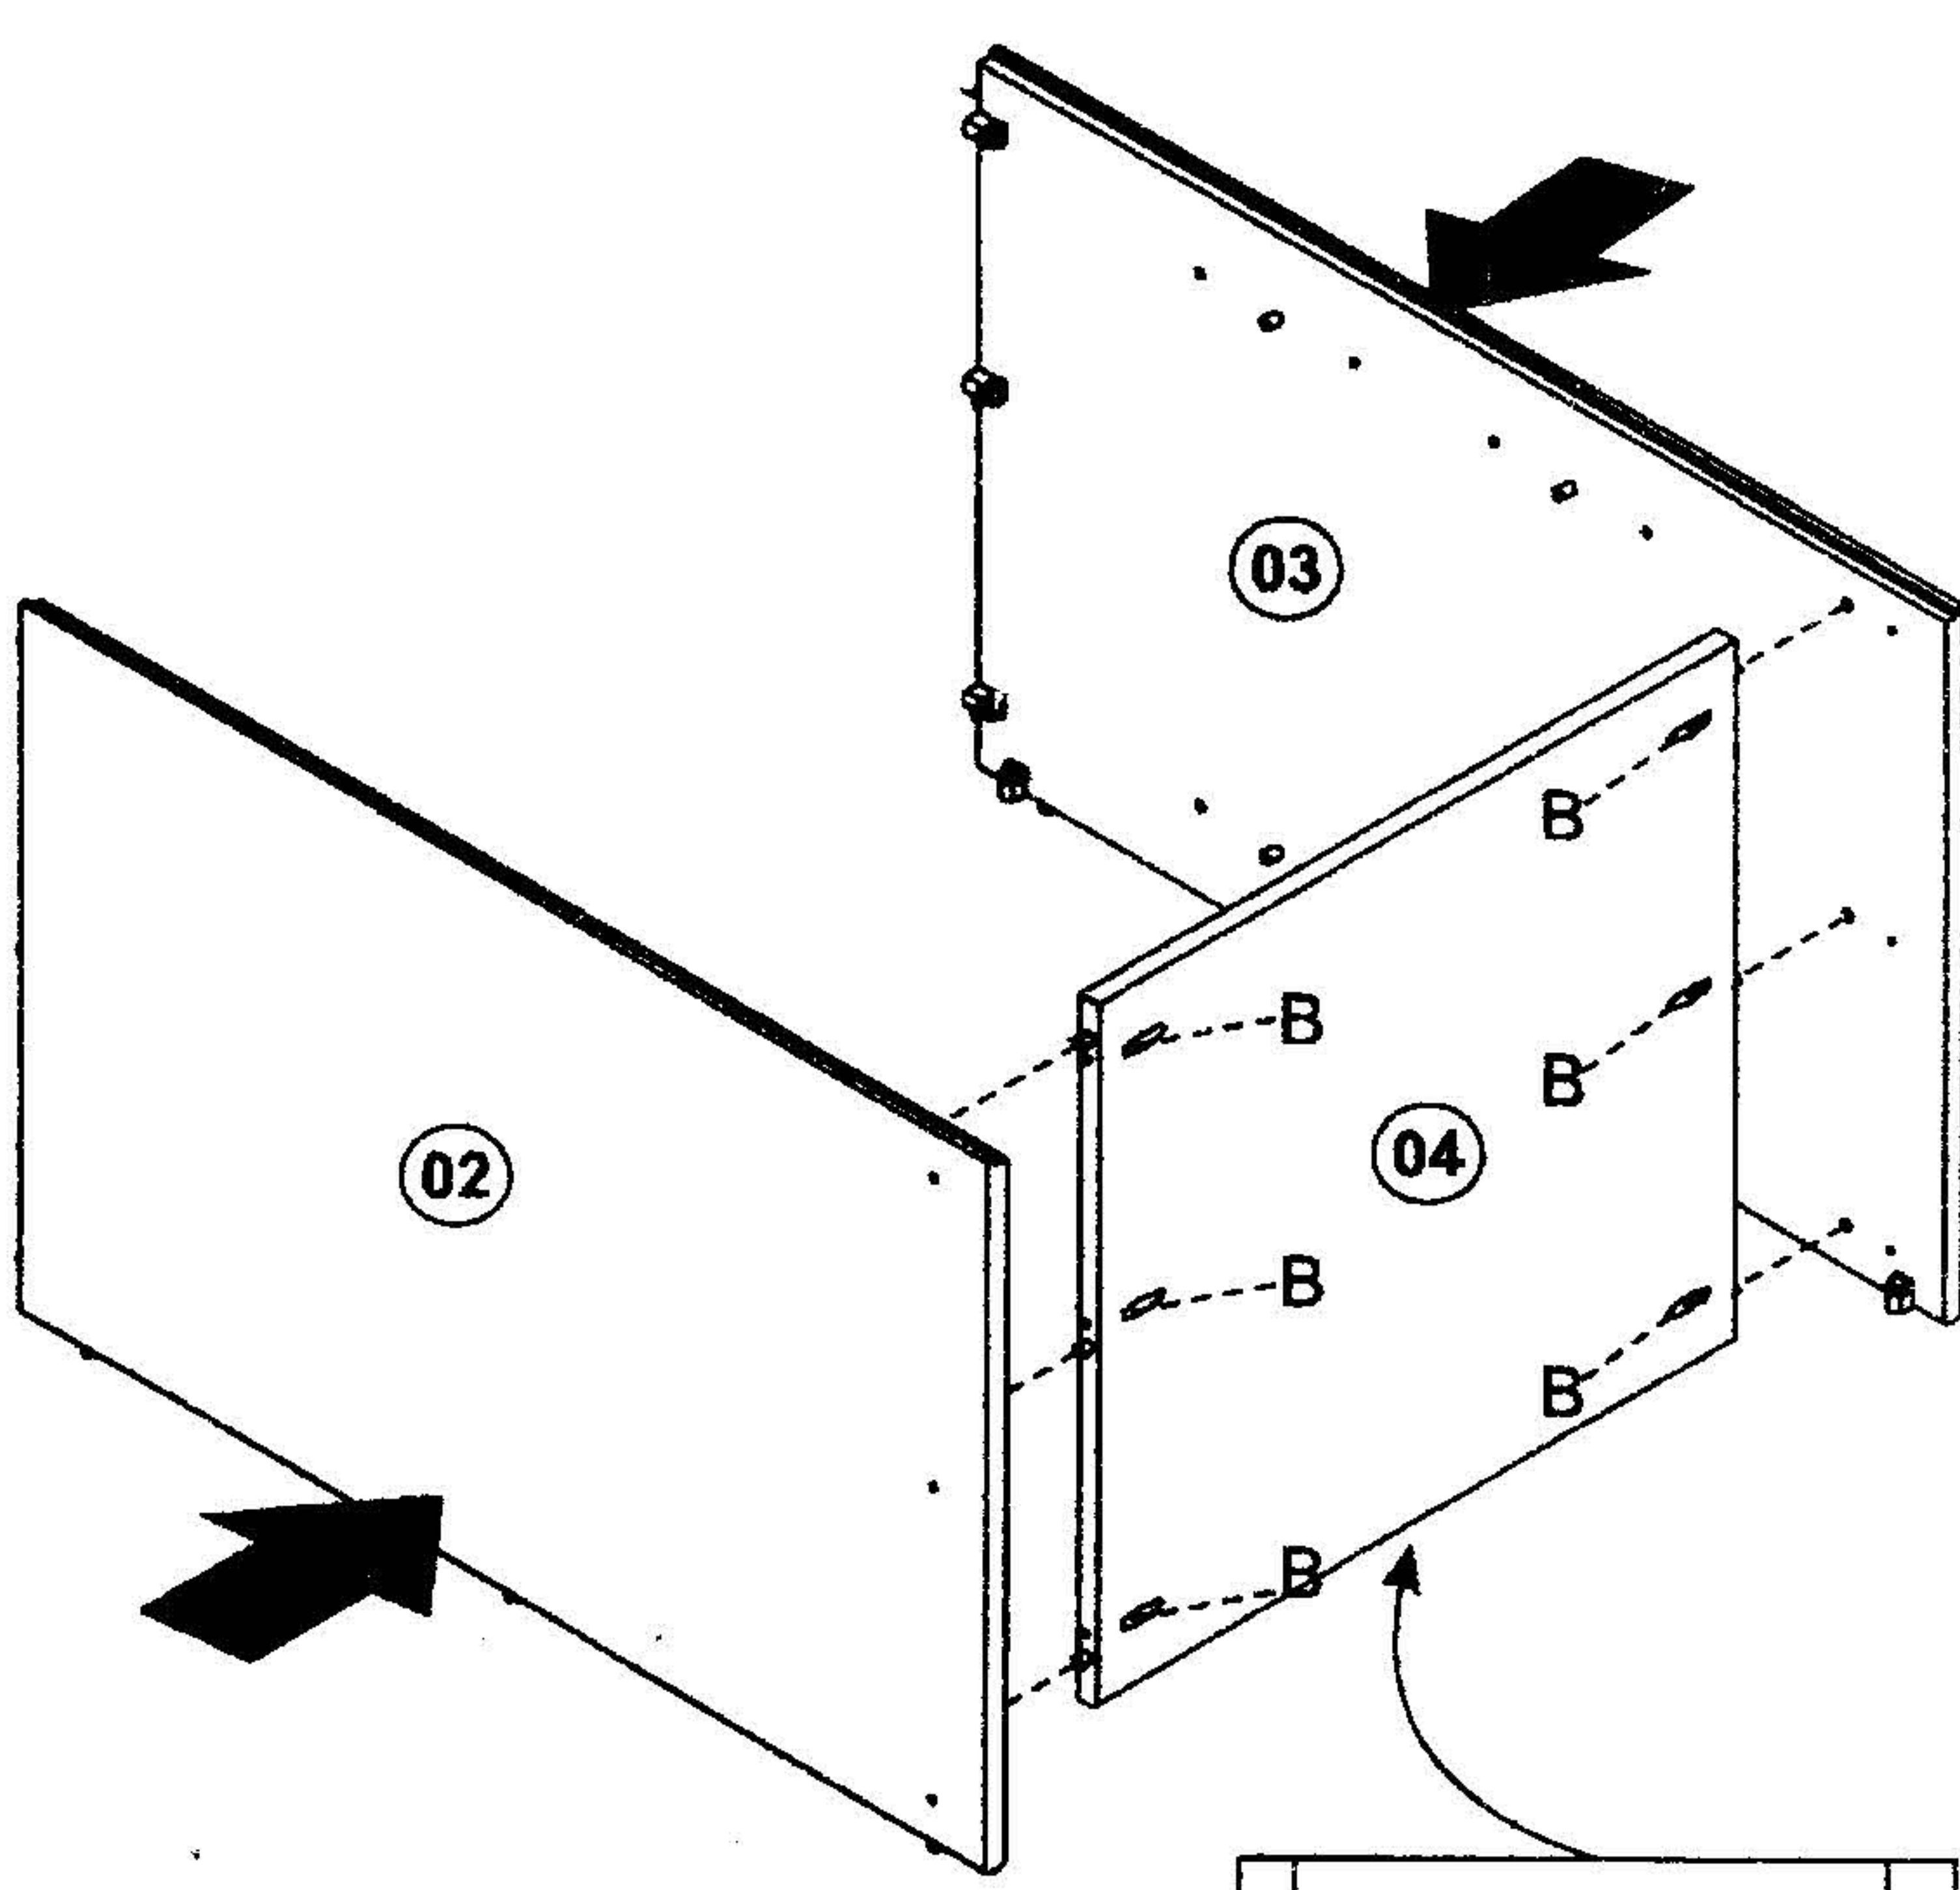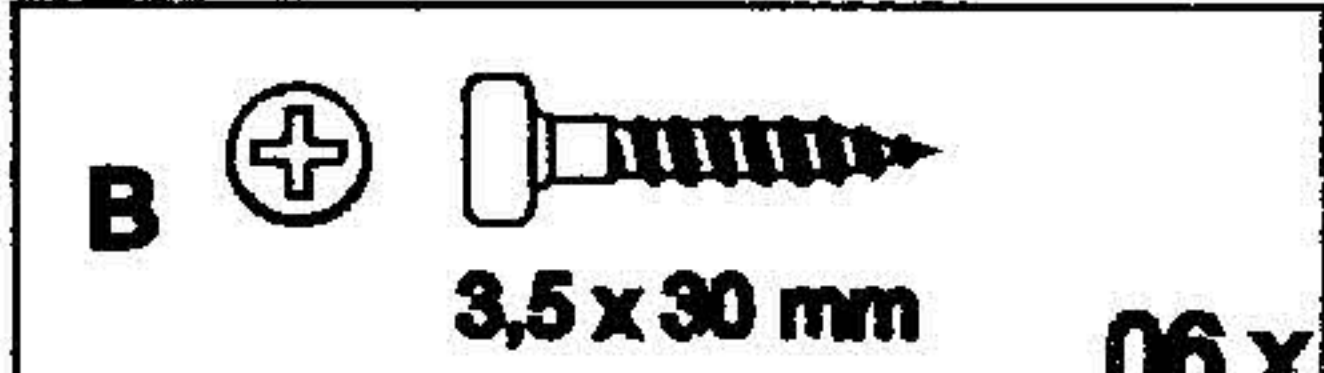


# 04

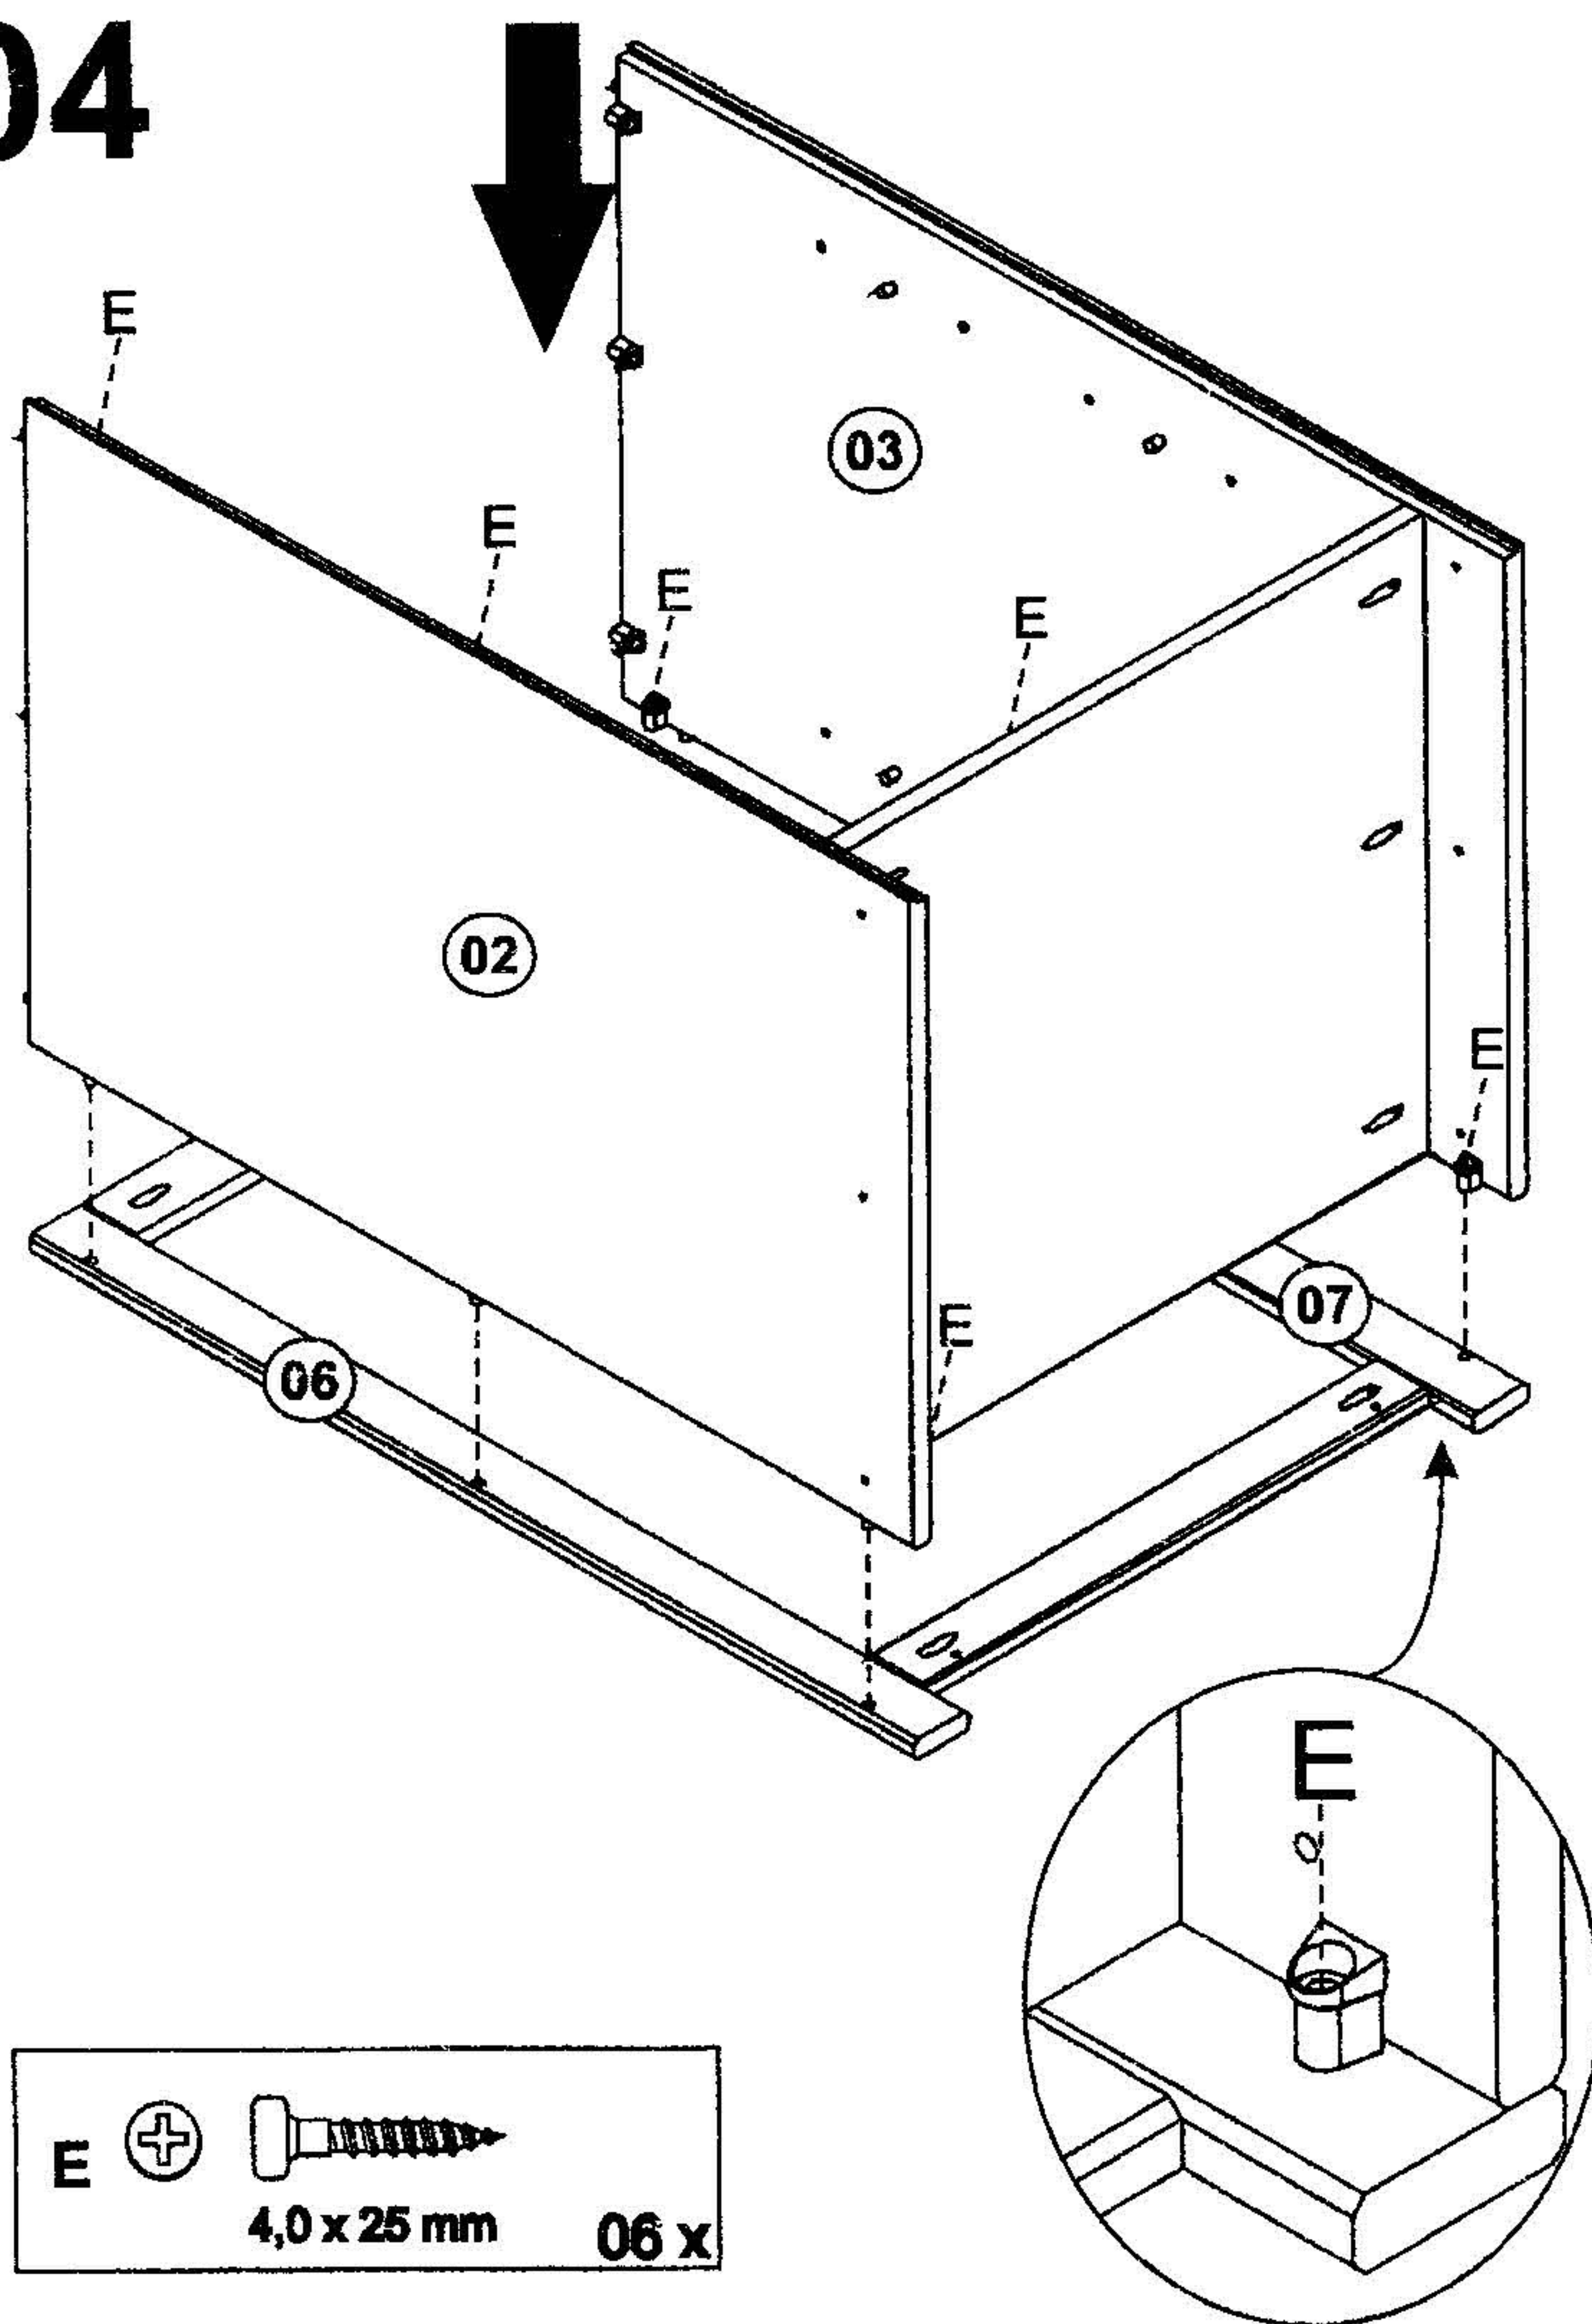


E  4,0 x 25 mm 06 x

# 05

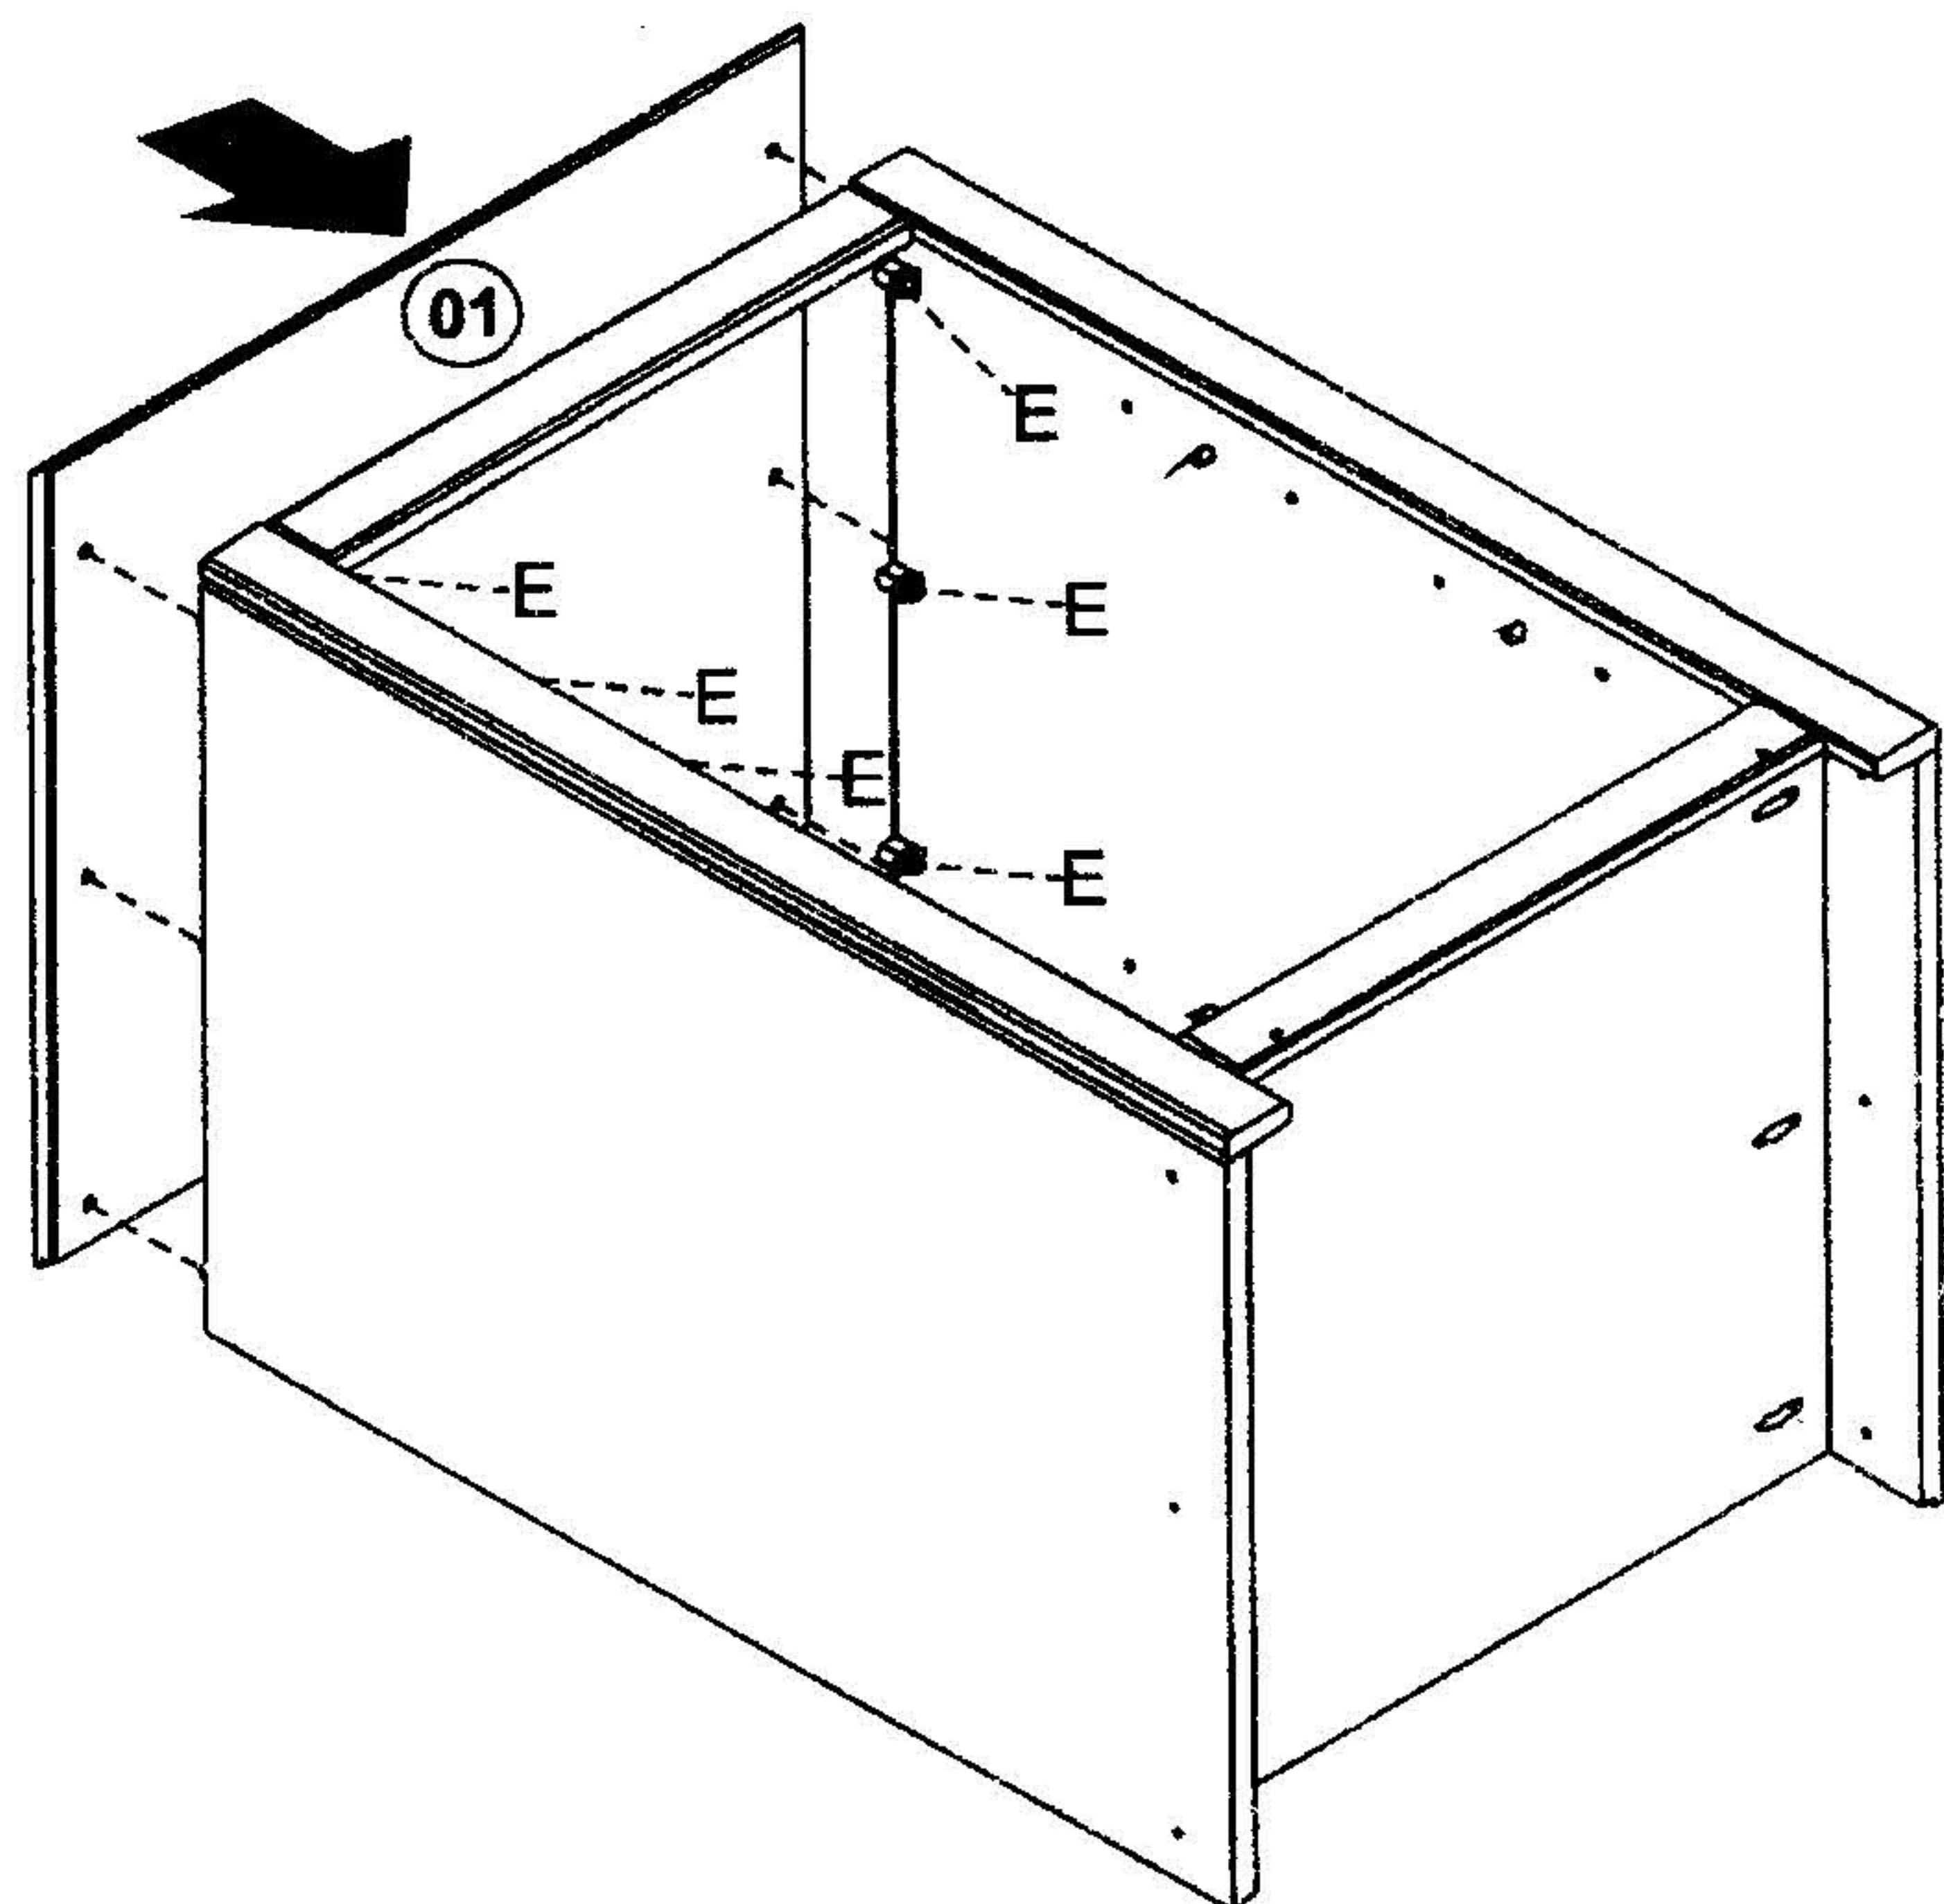


E  4,0 x 25 mm 06 x


# 06

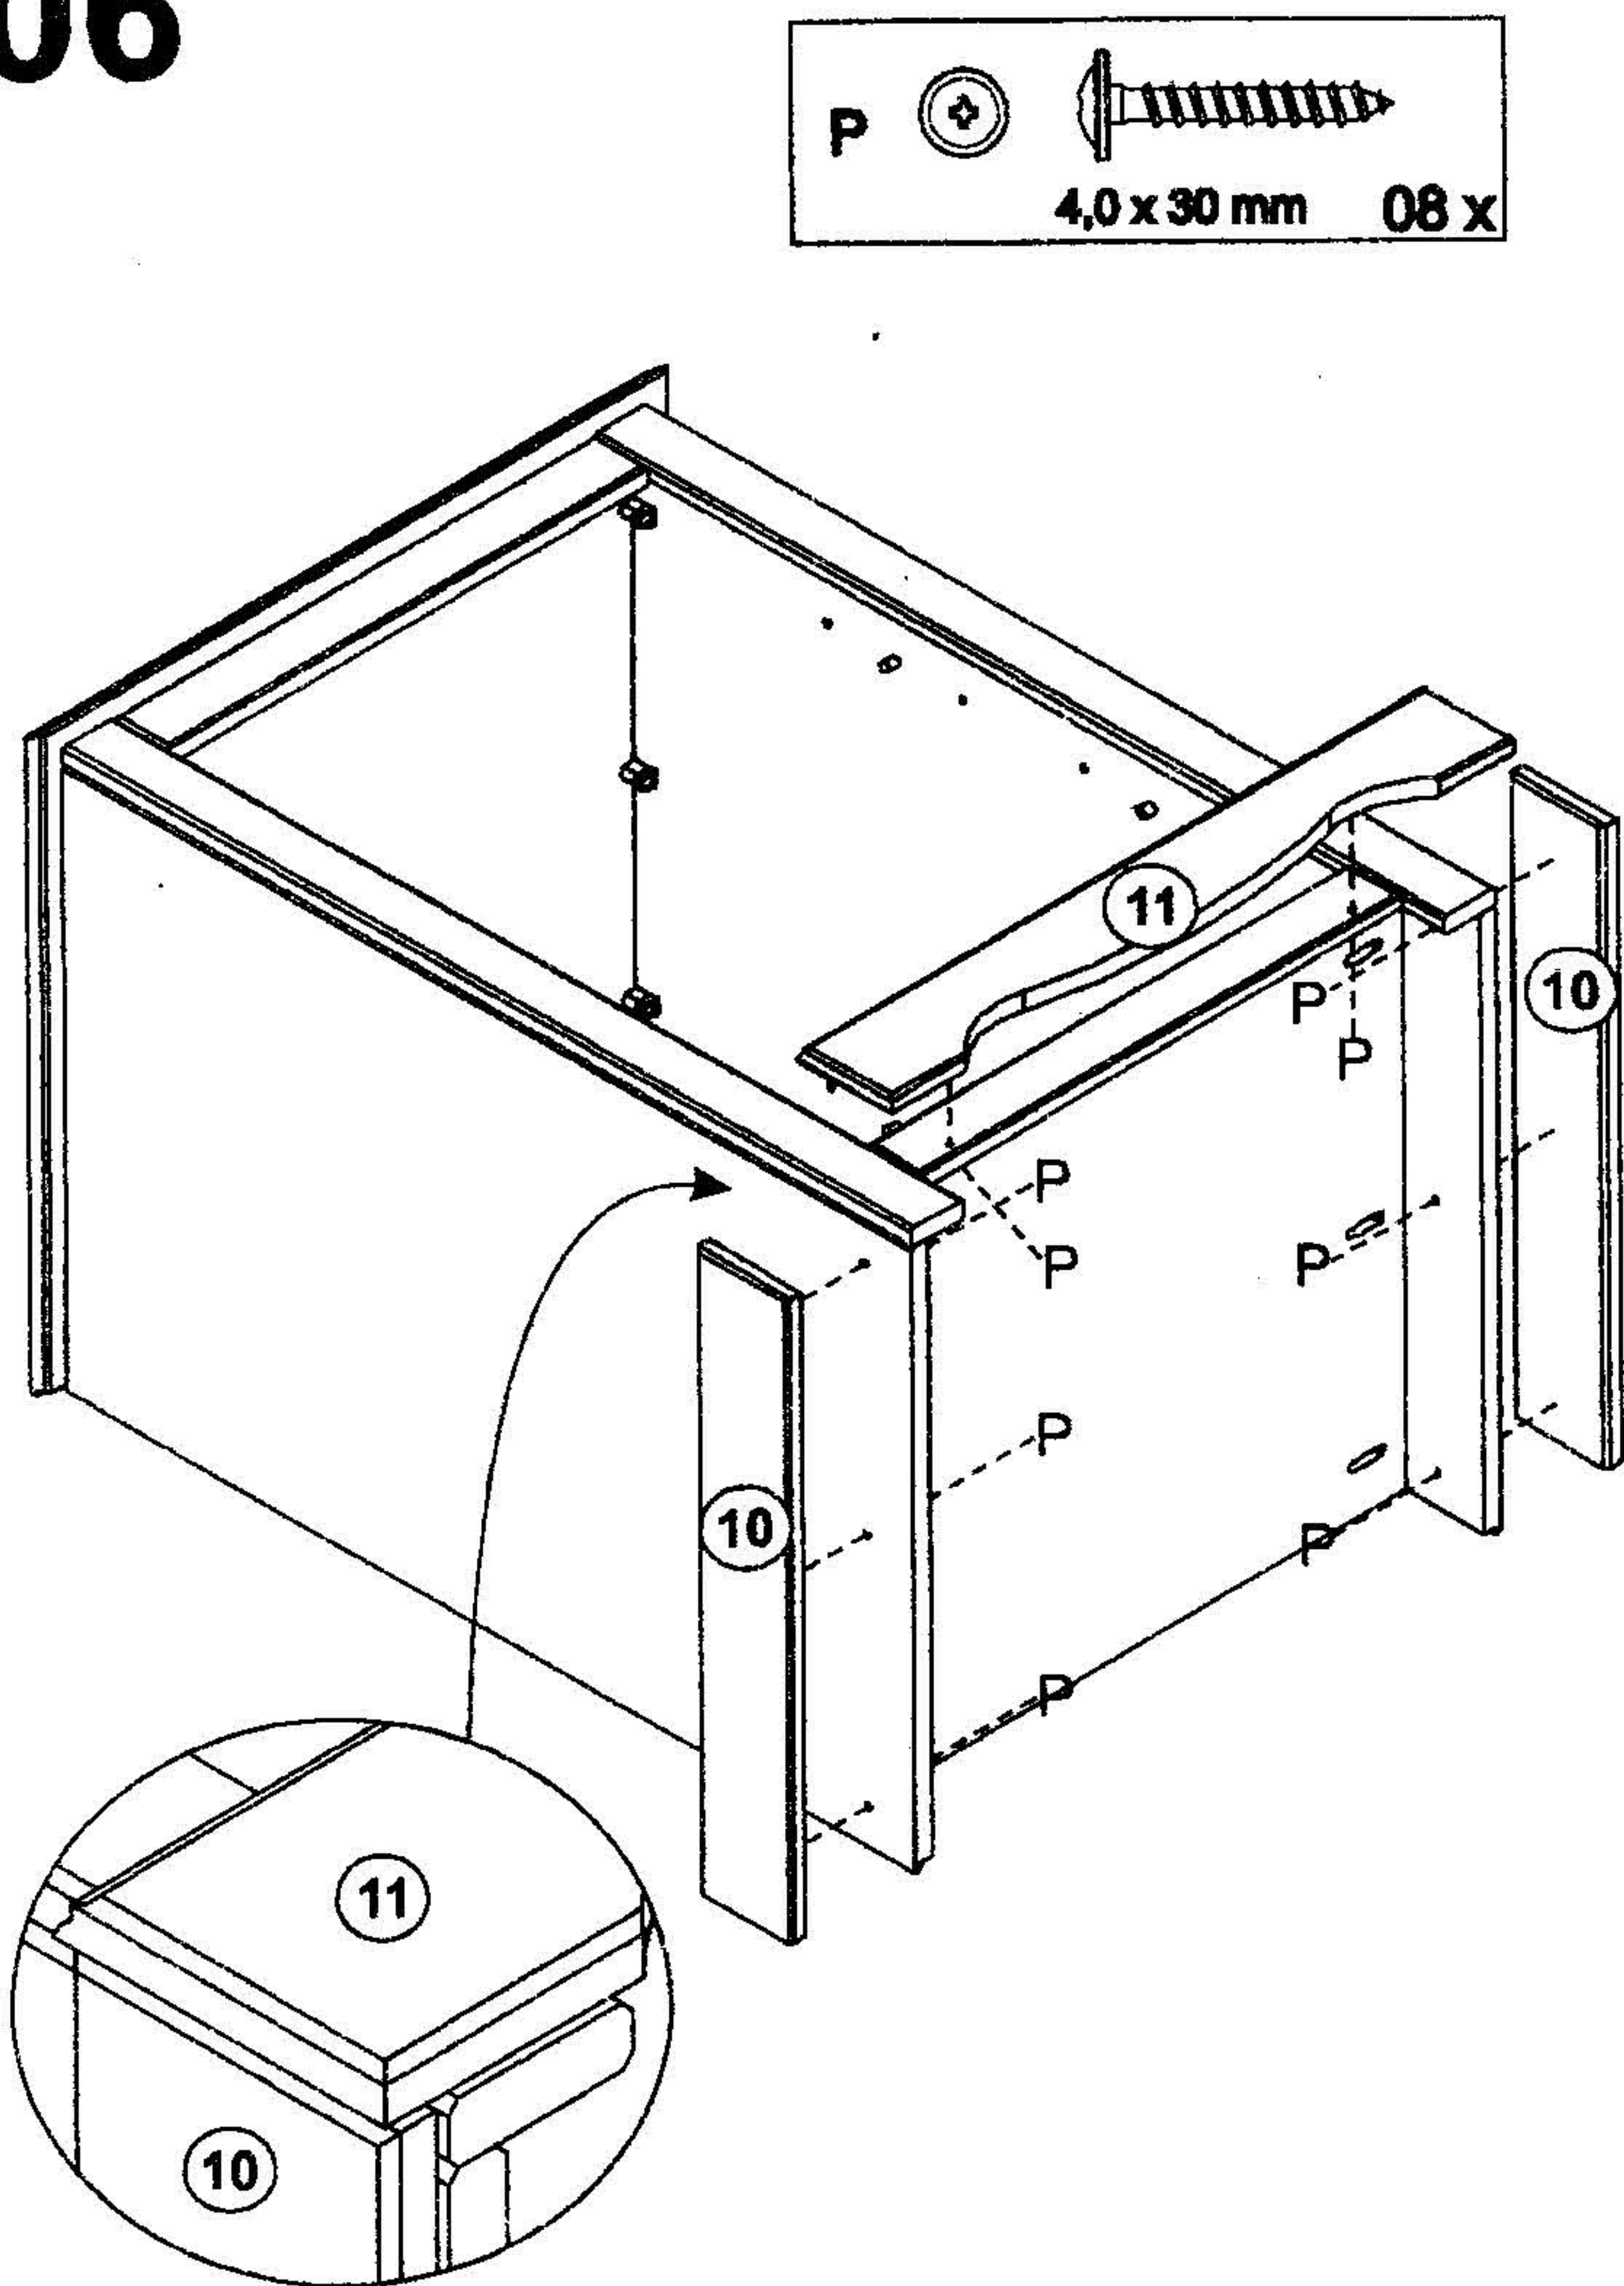


P  4,0 x 30 mm 08 x

# 07

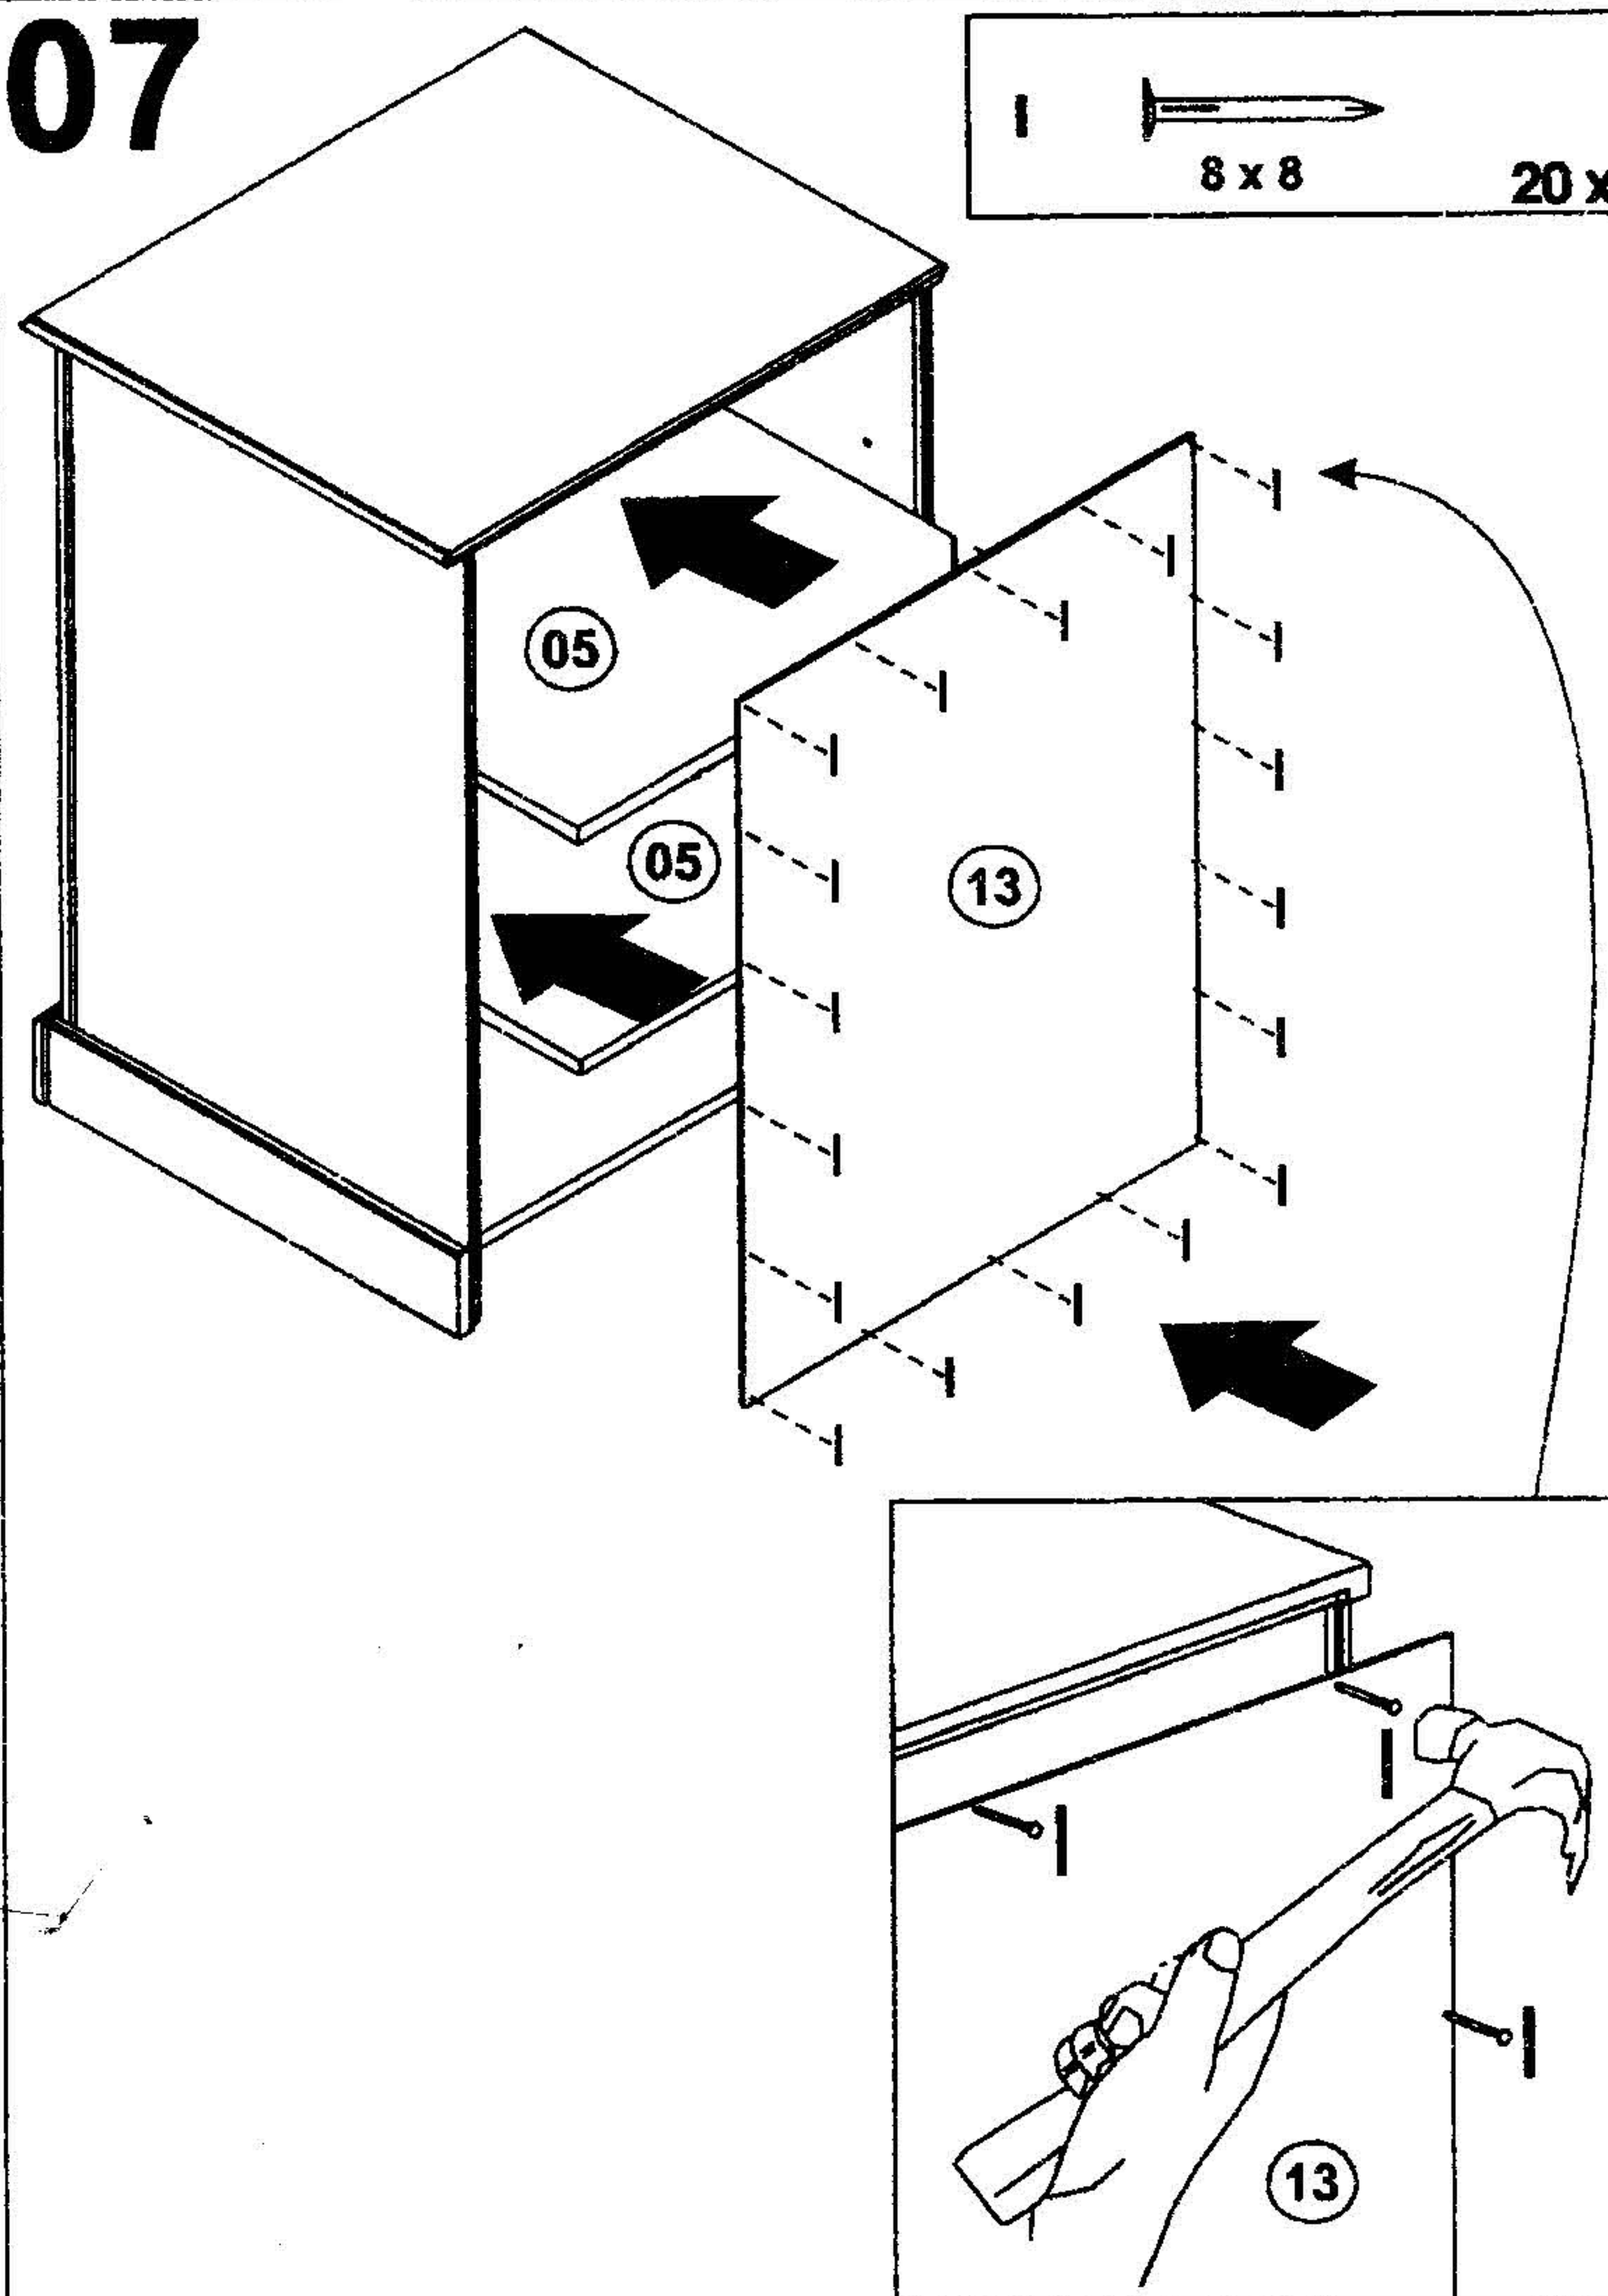


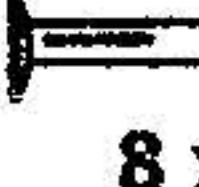I  8 x 8 20 x


# 08



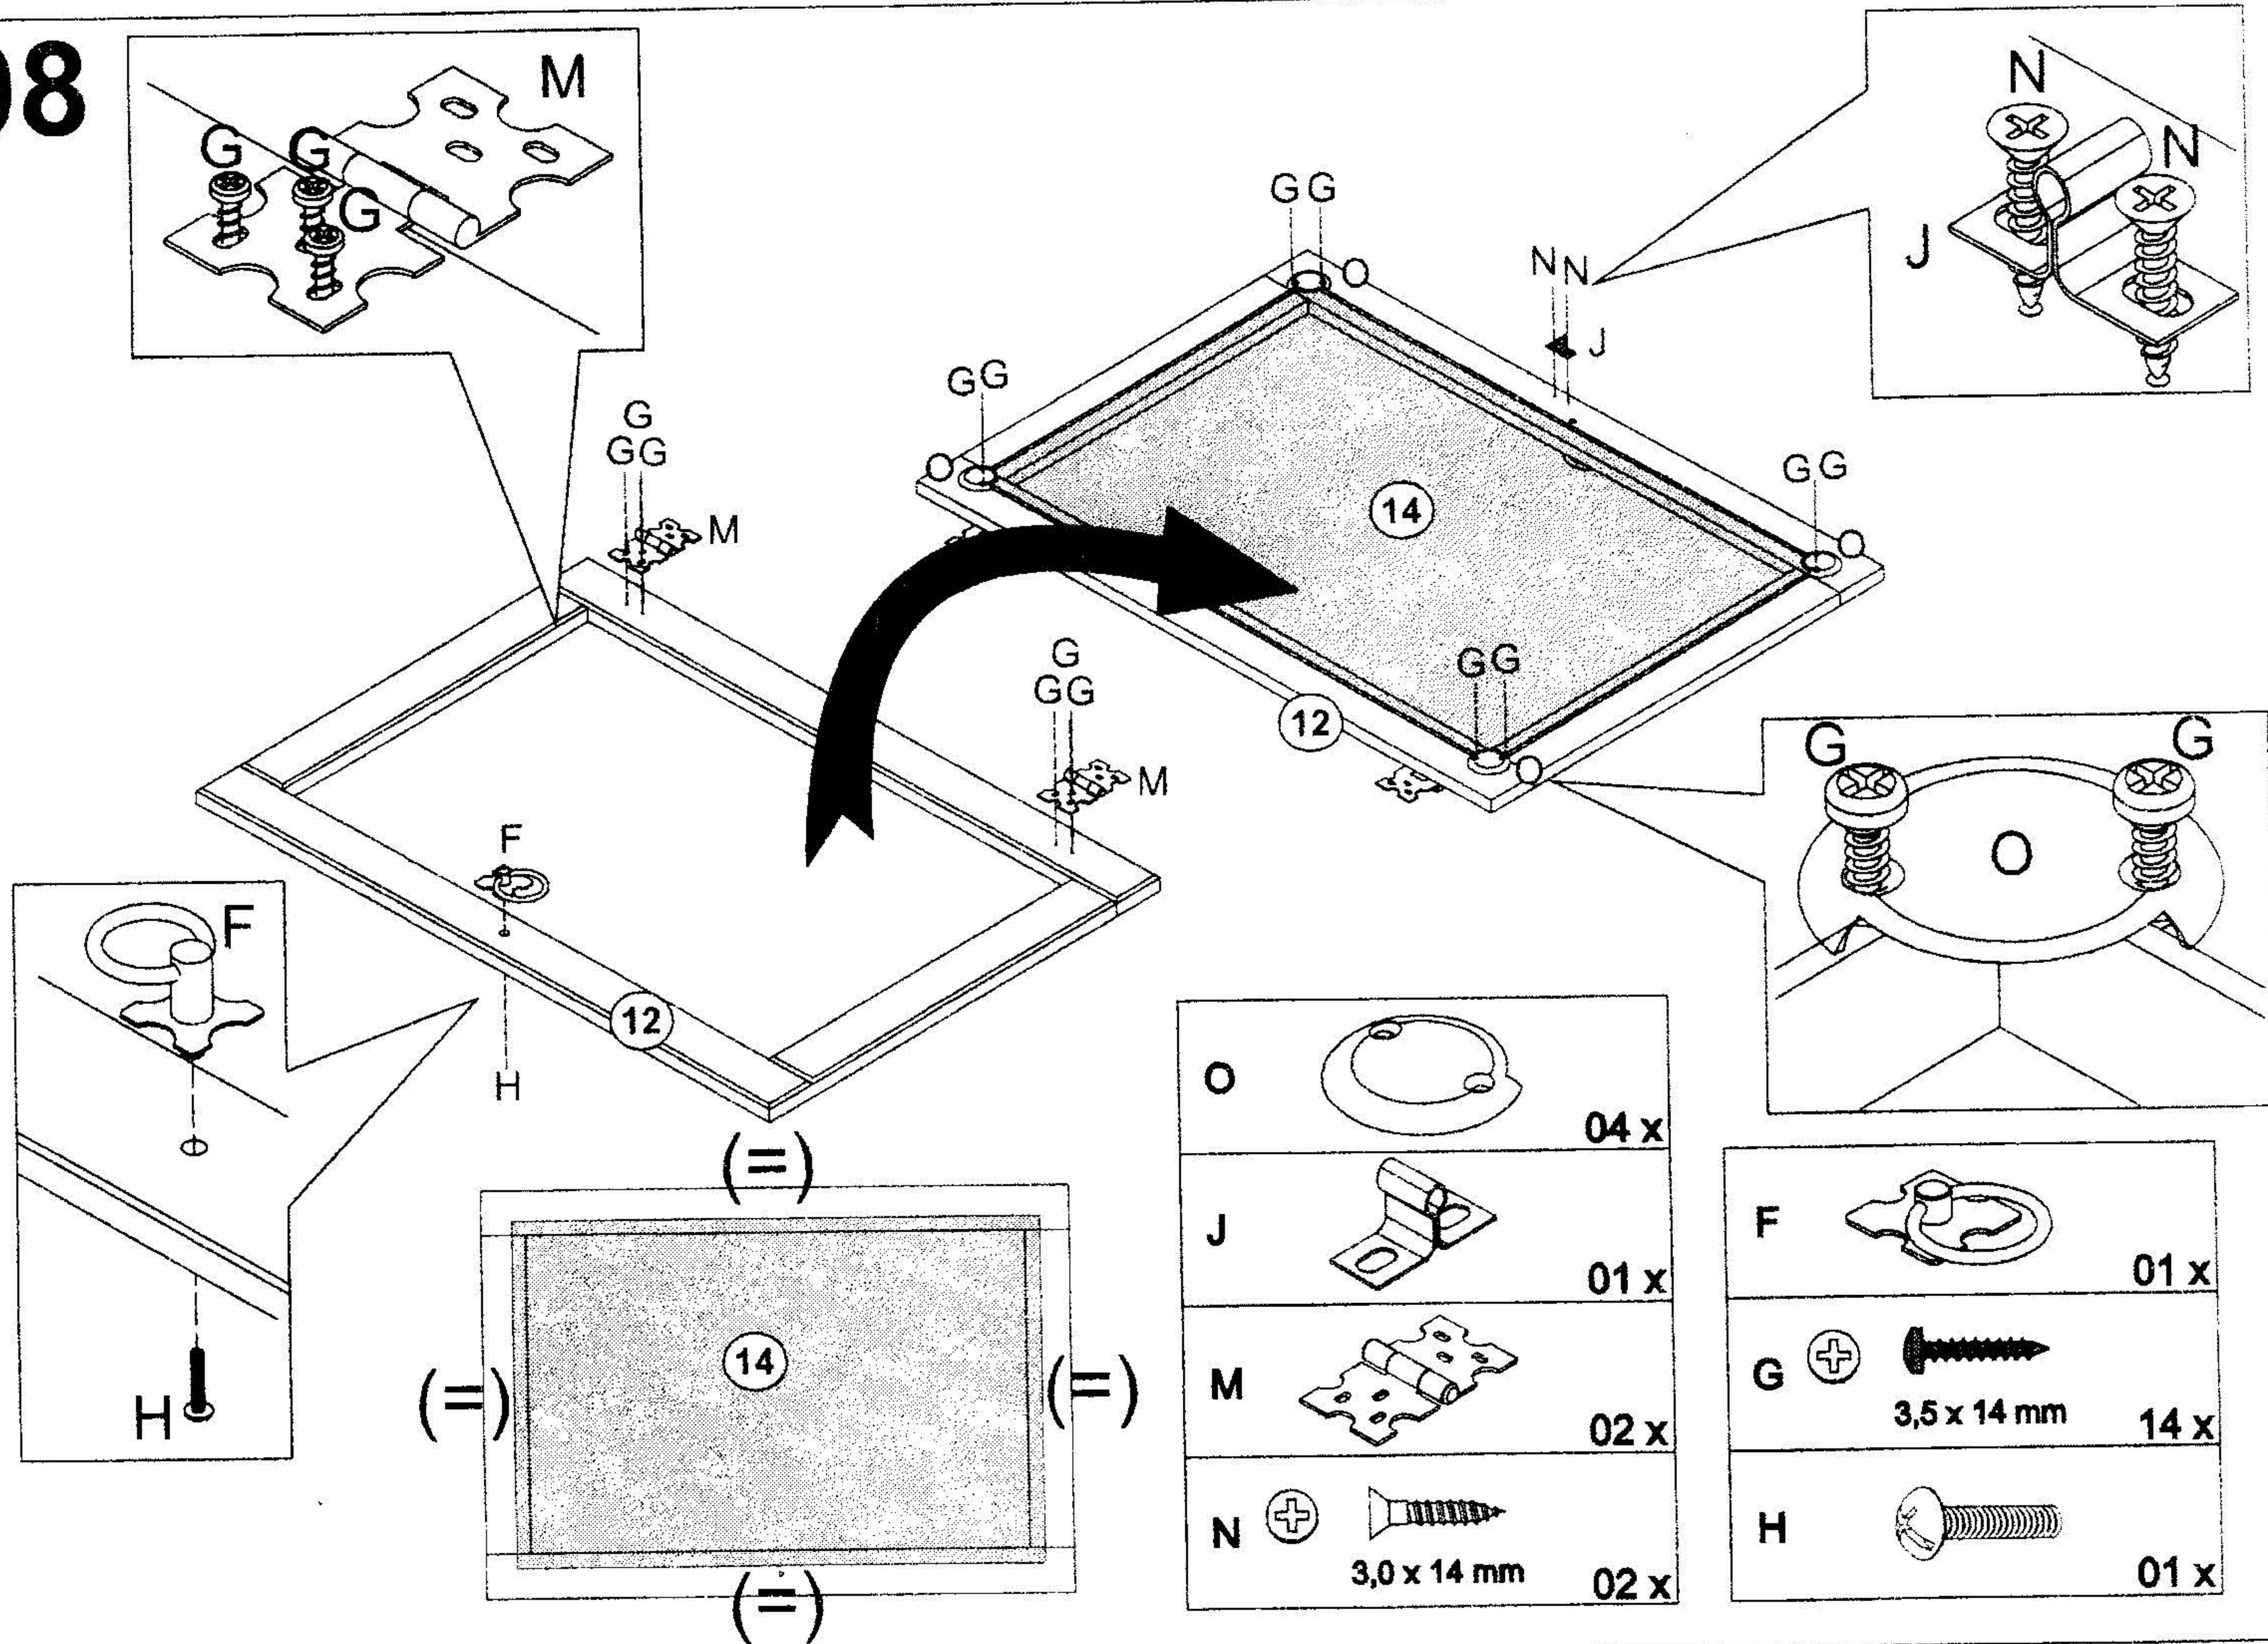


# 09

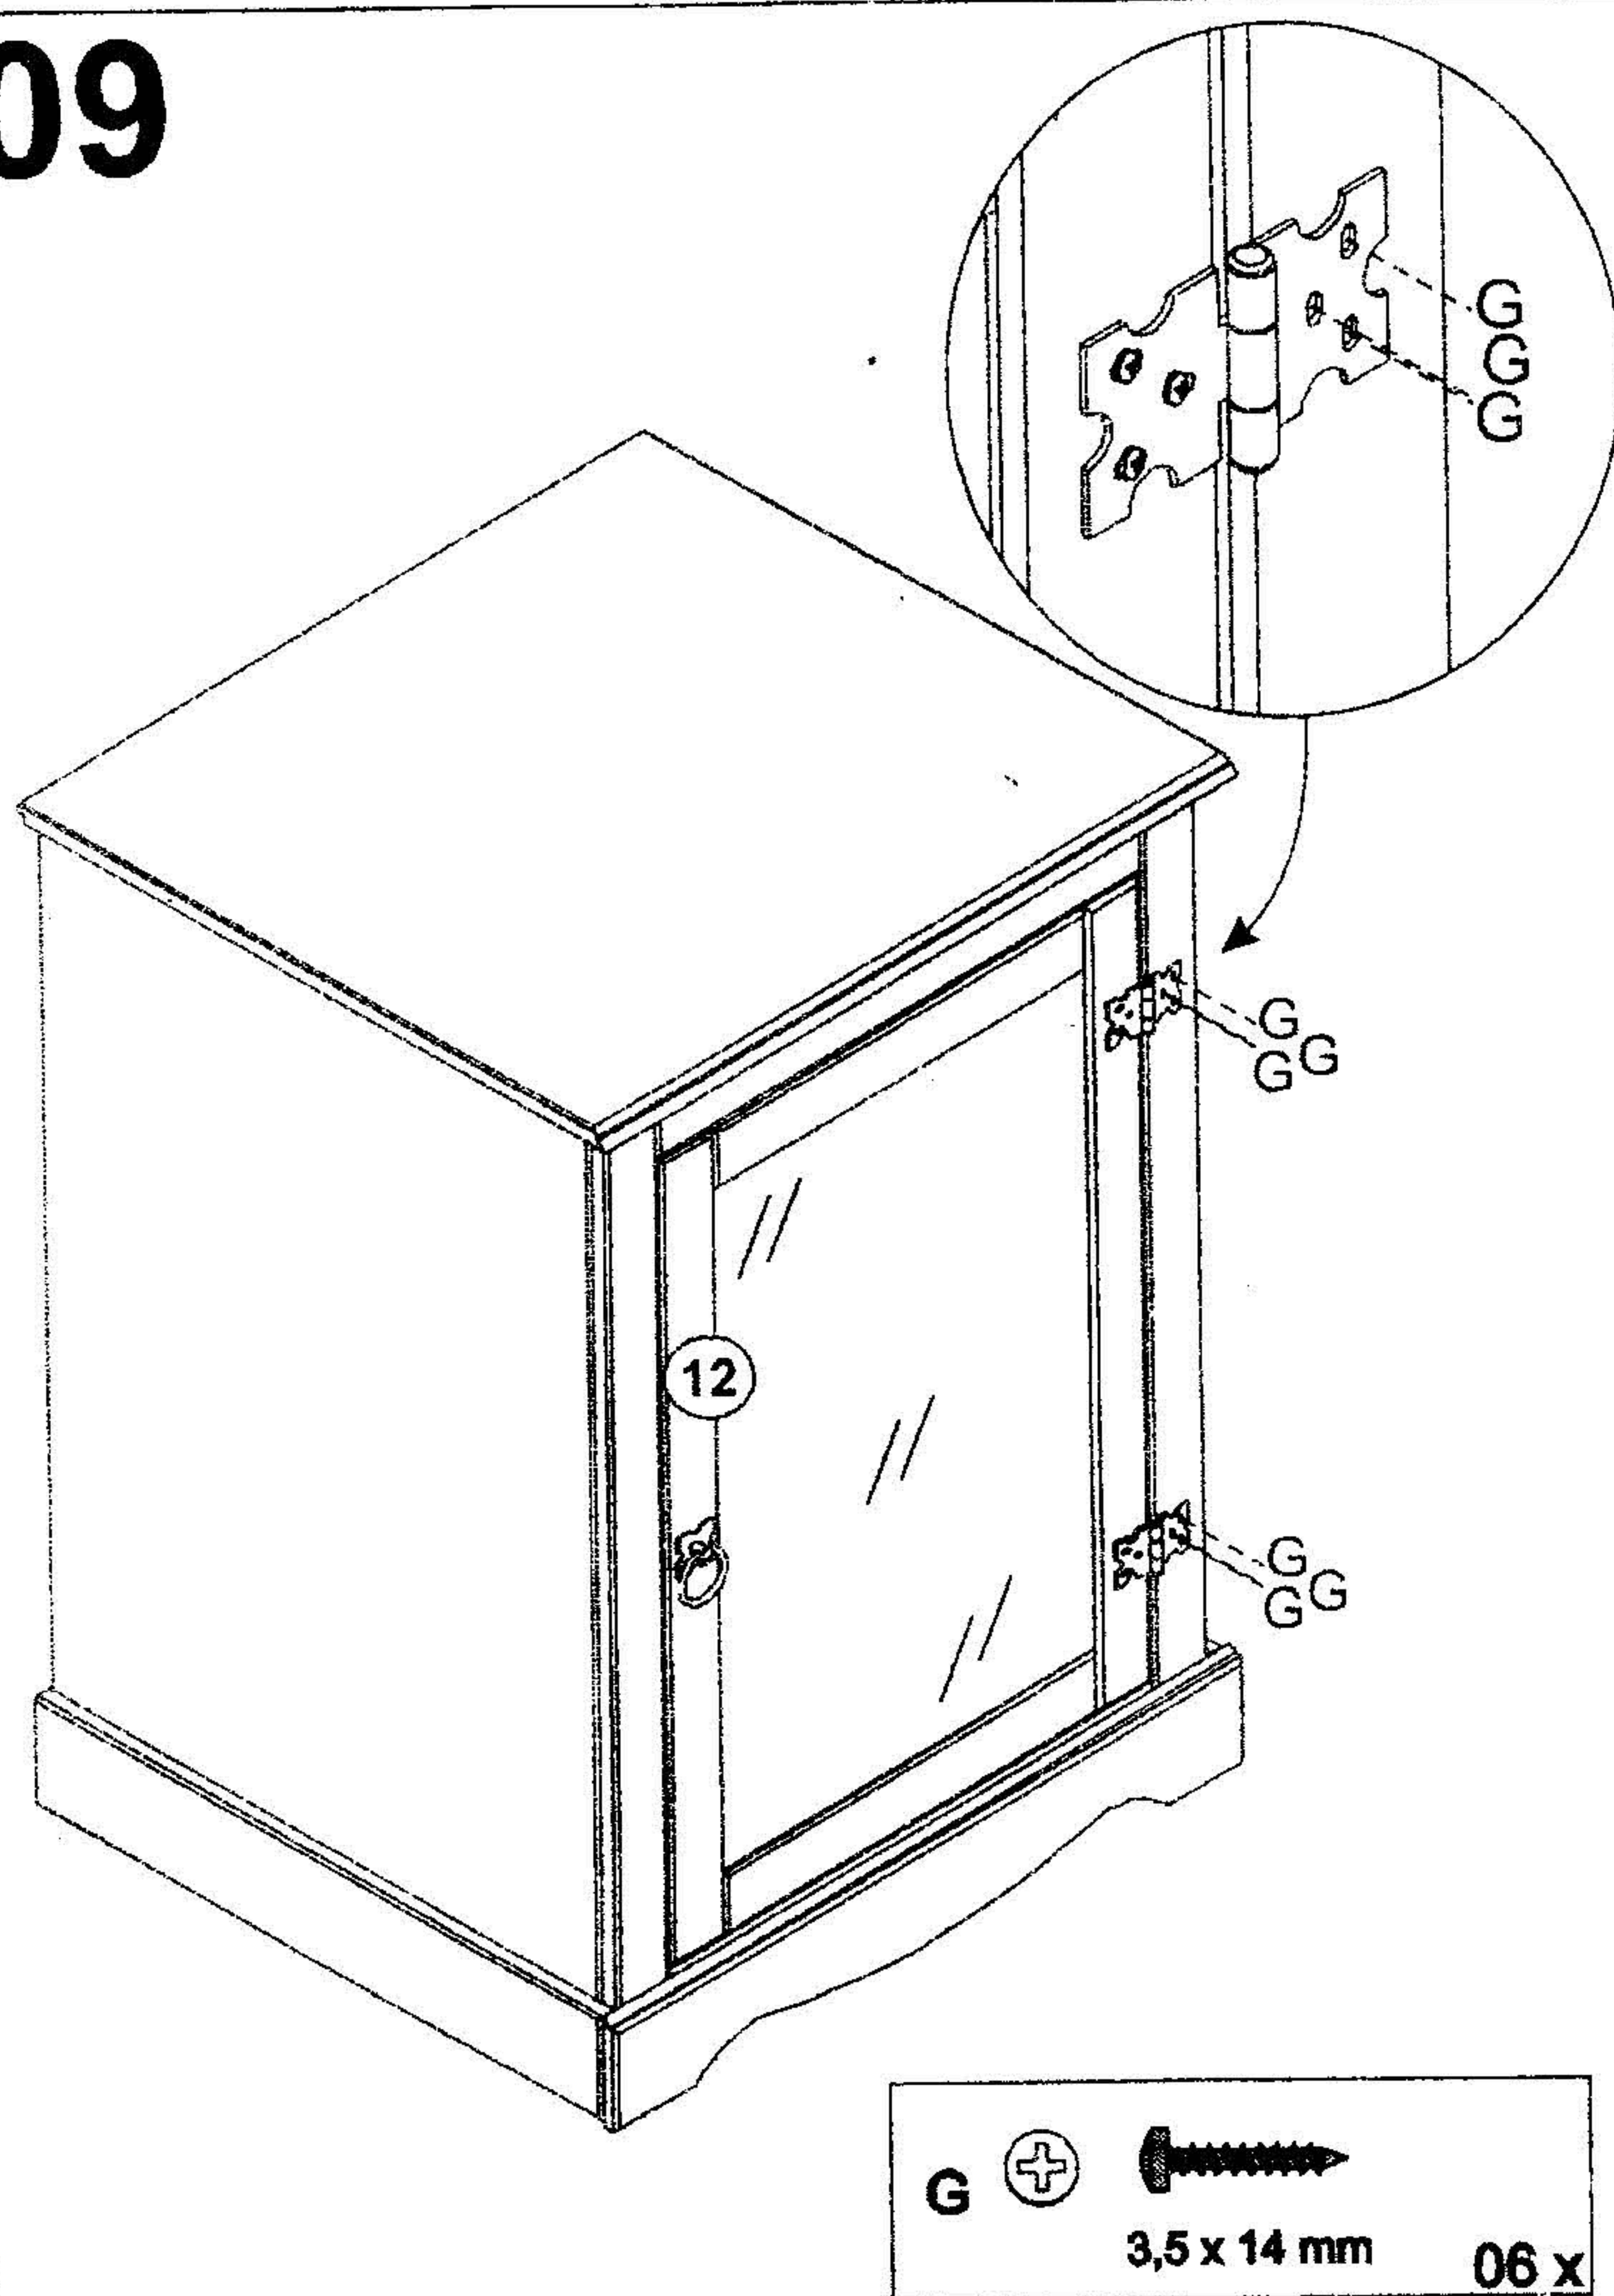

# 10

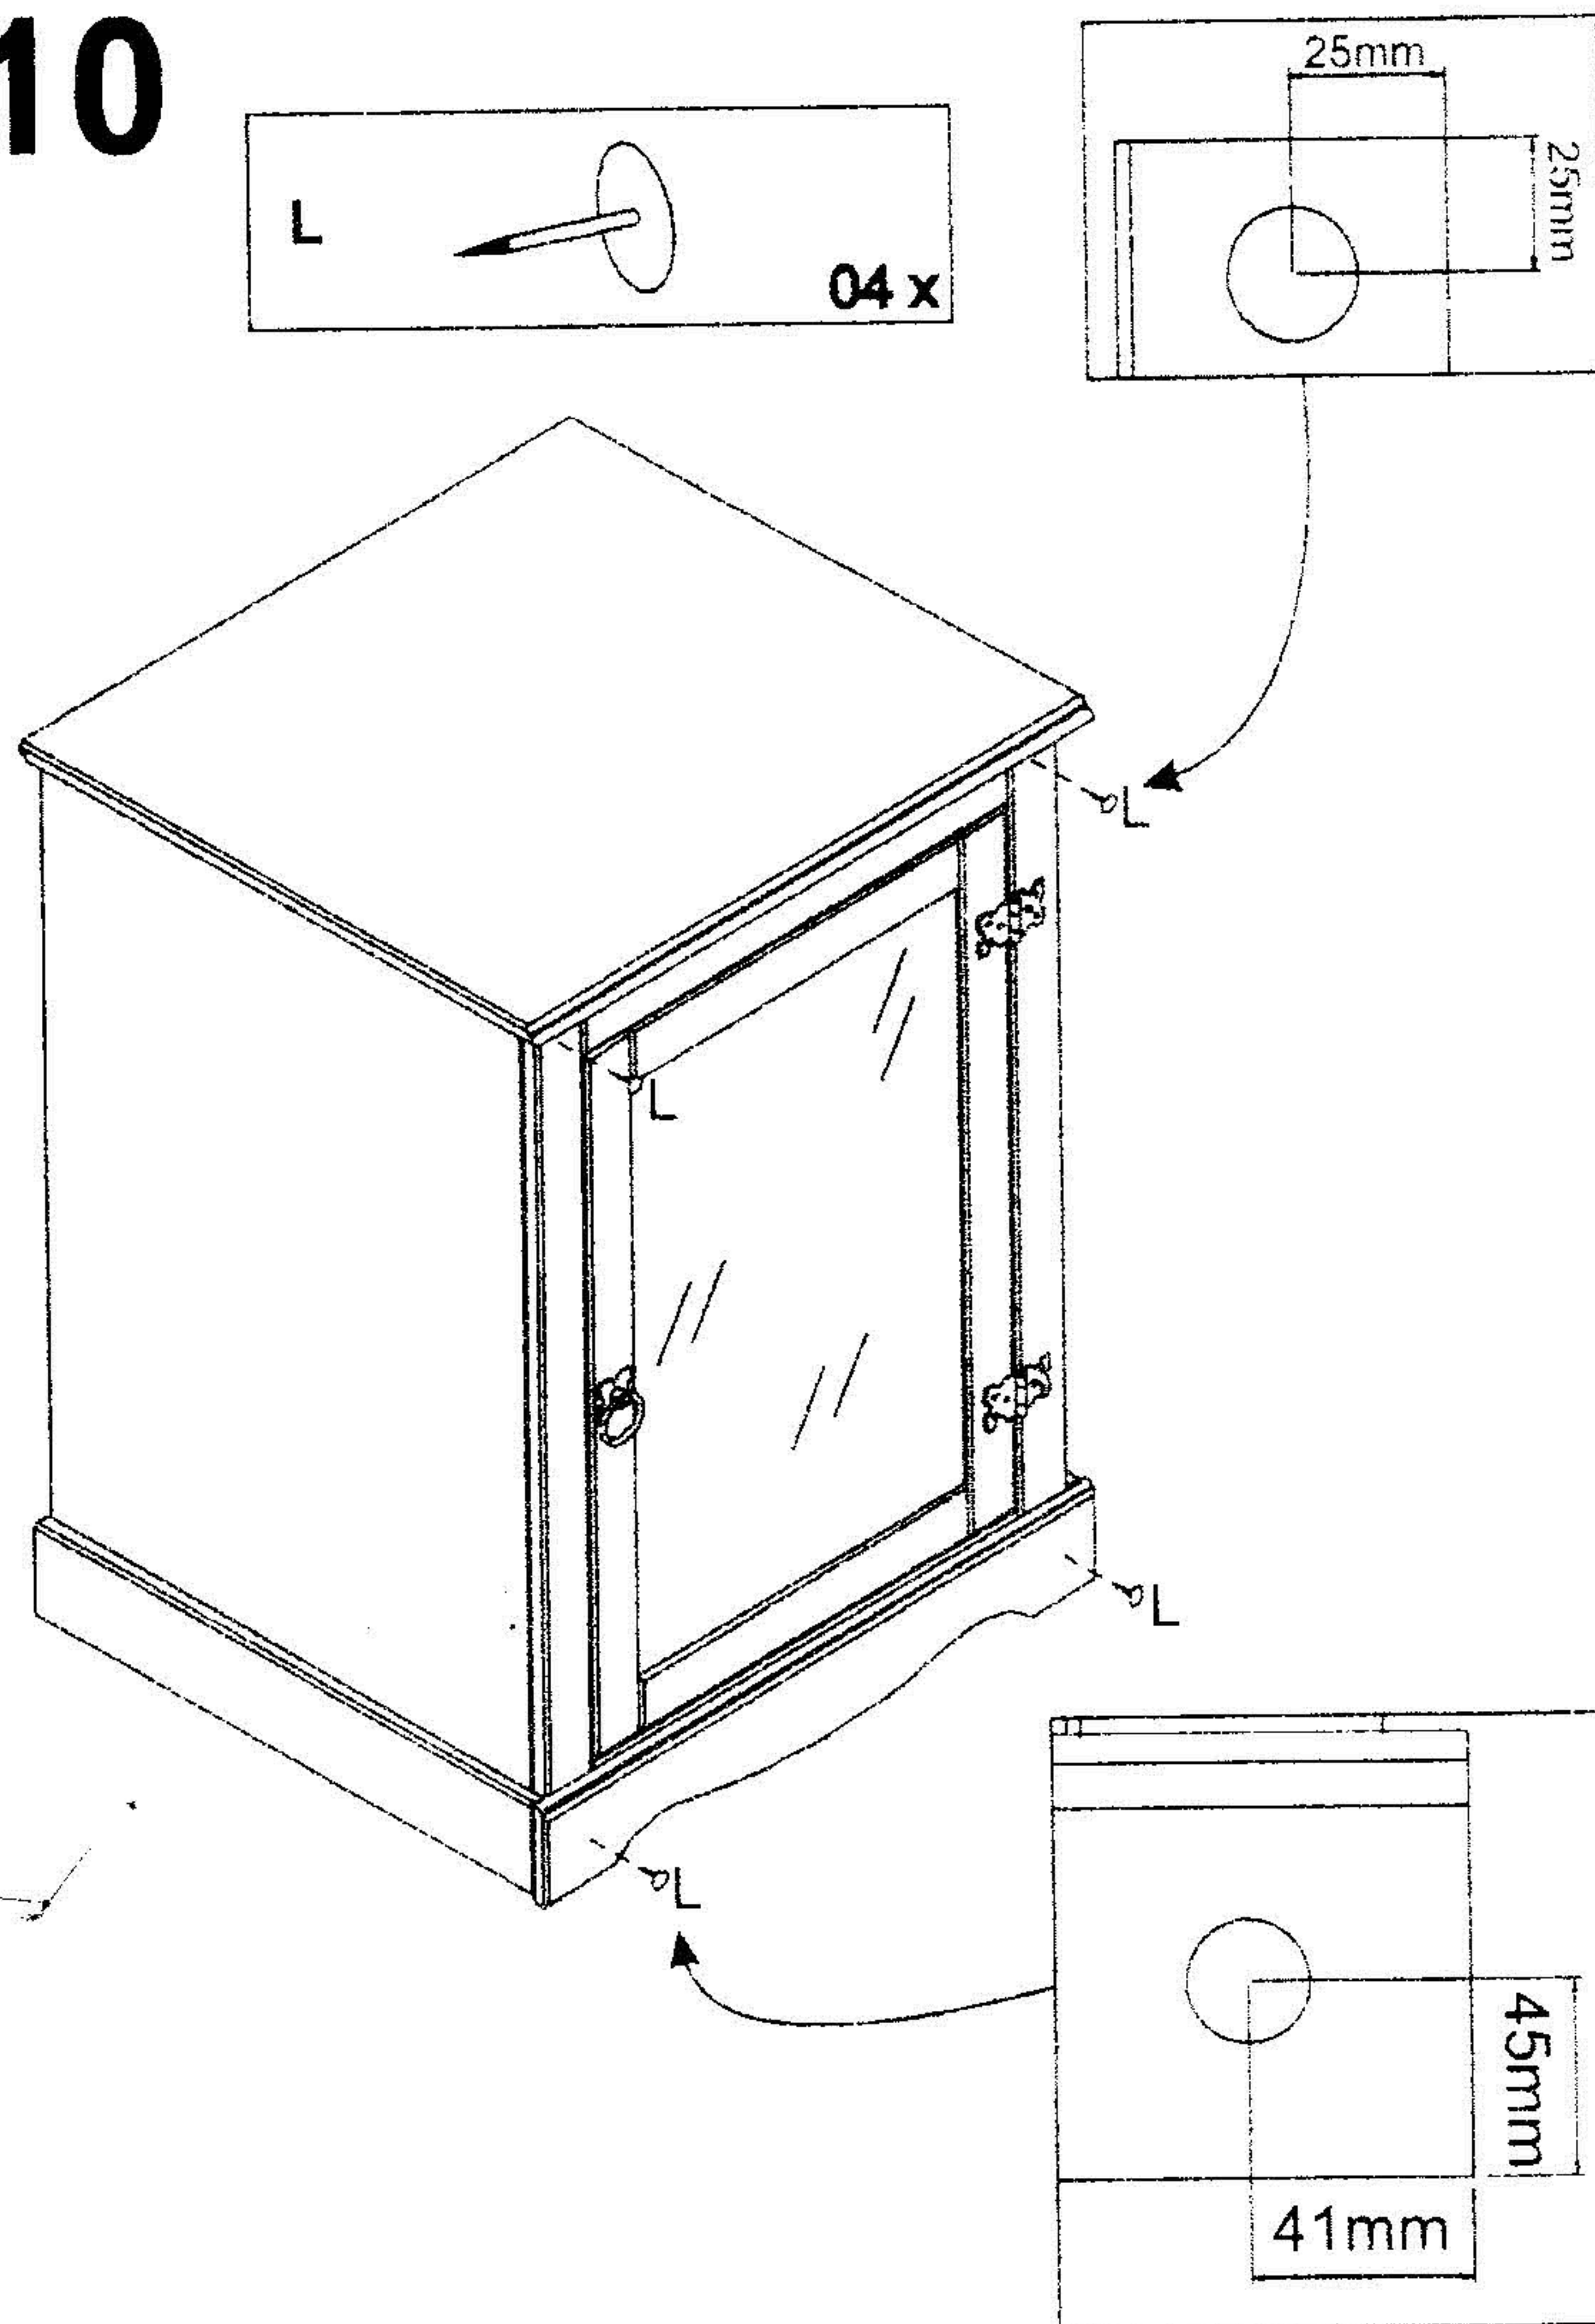

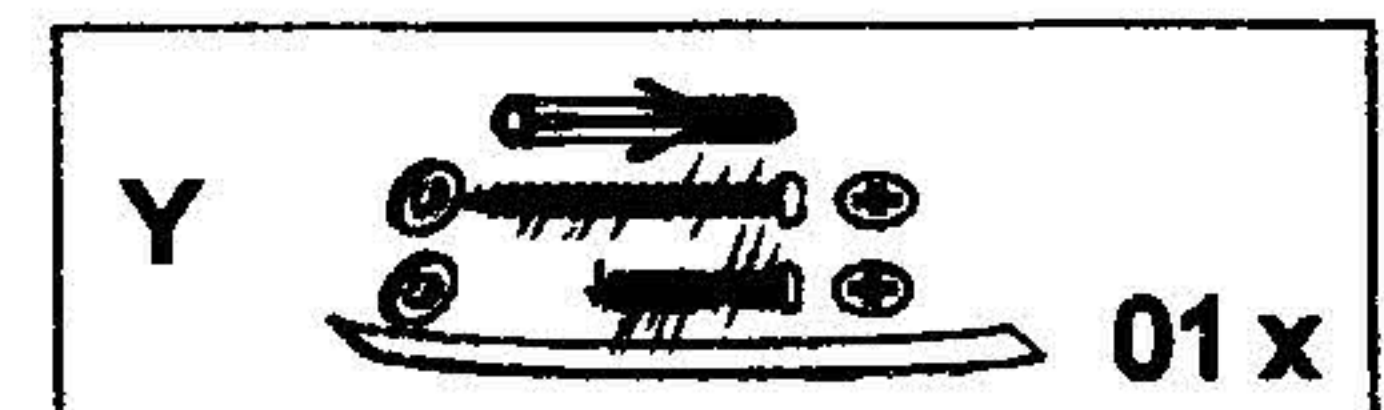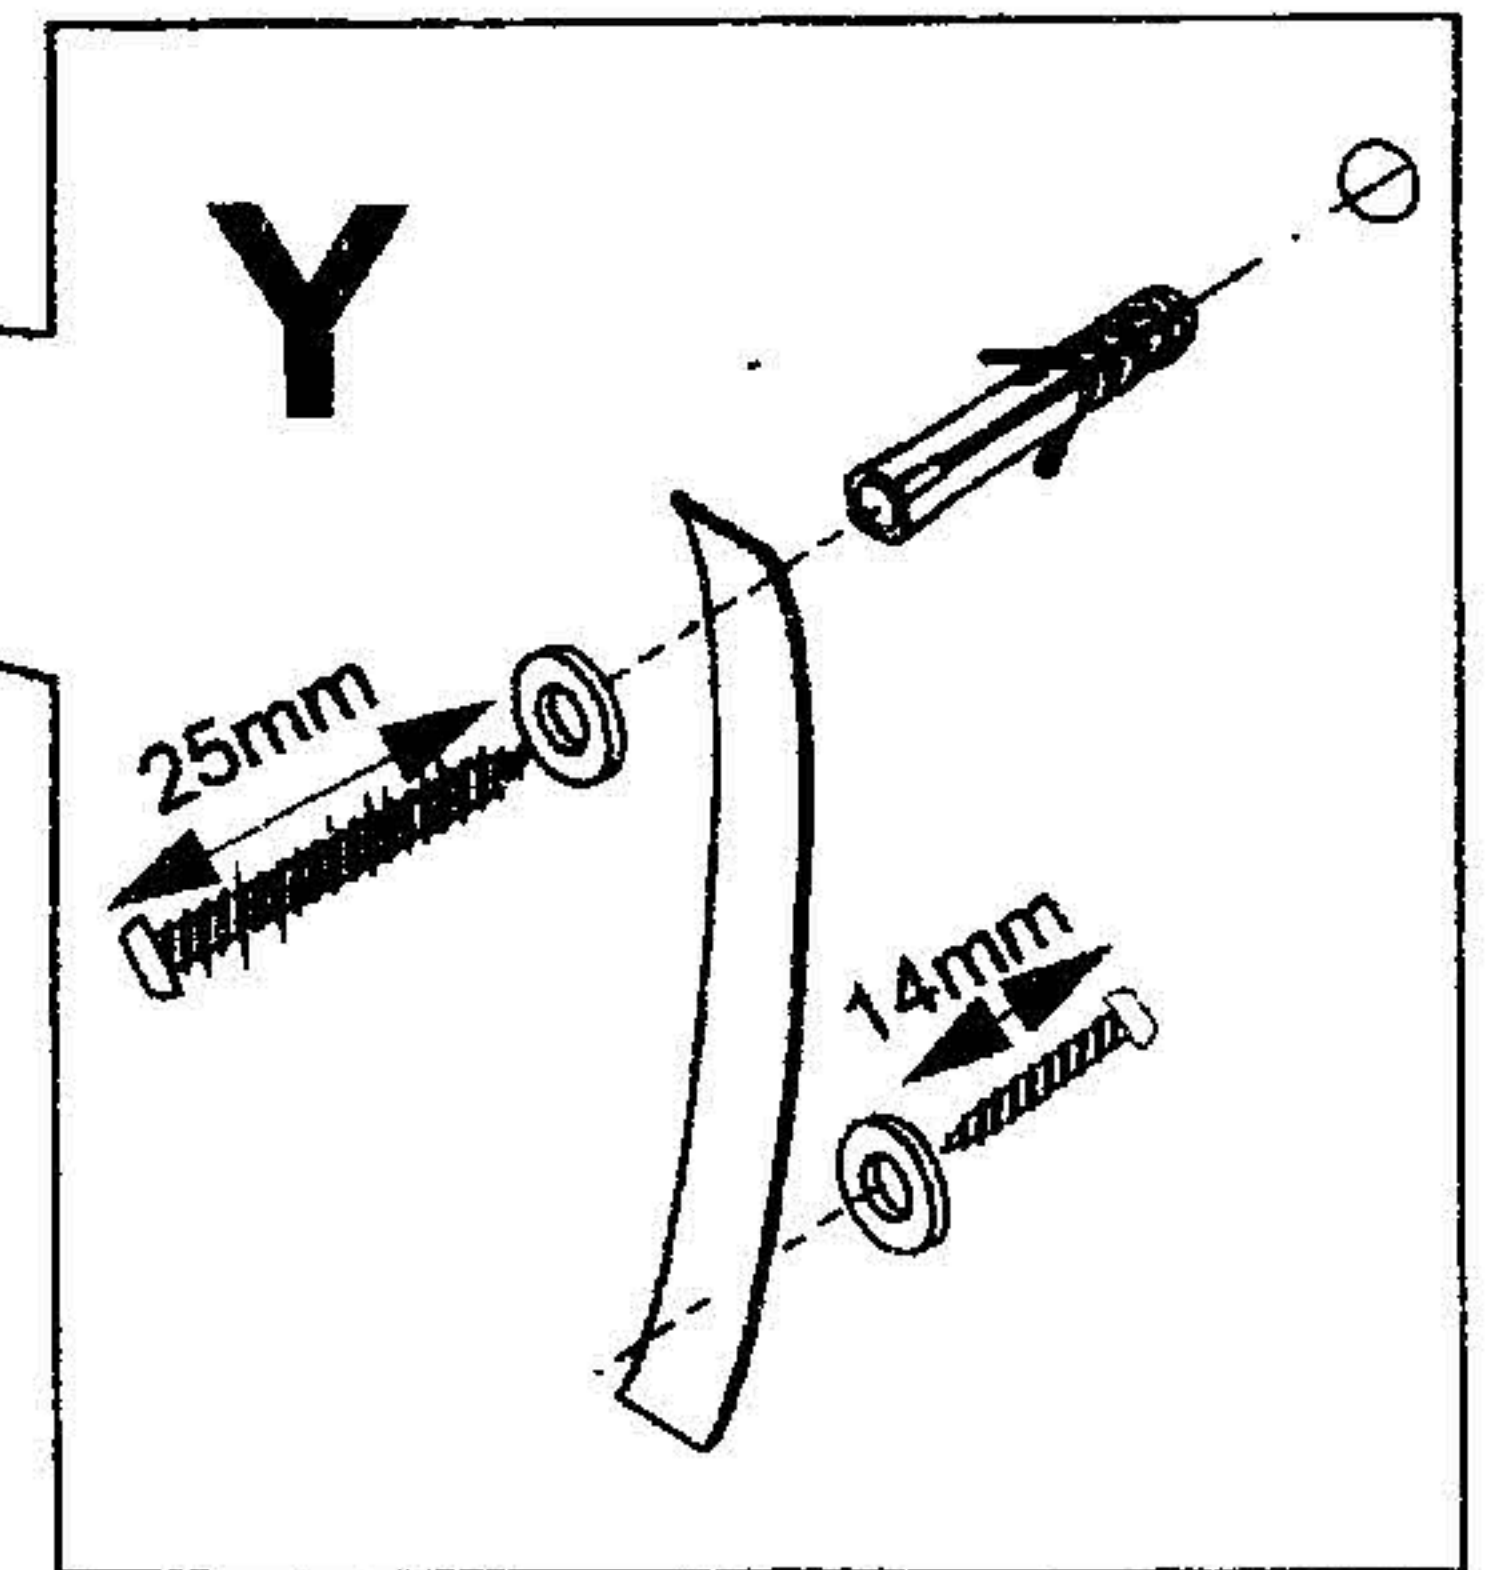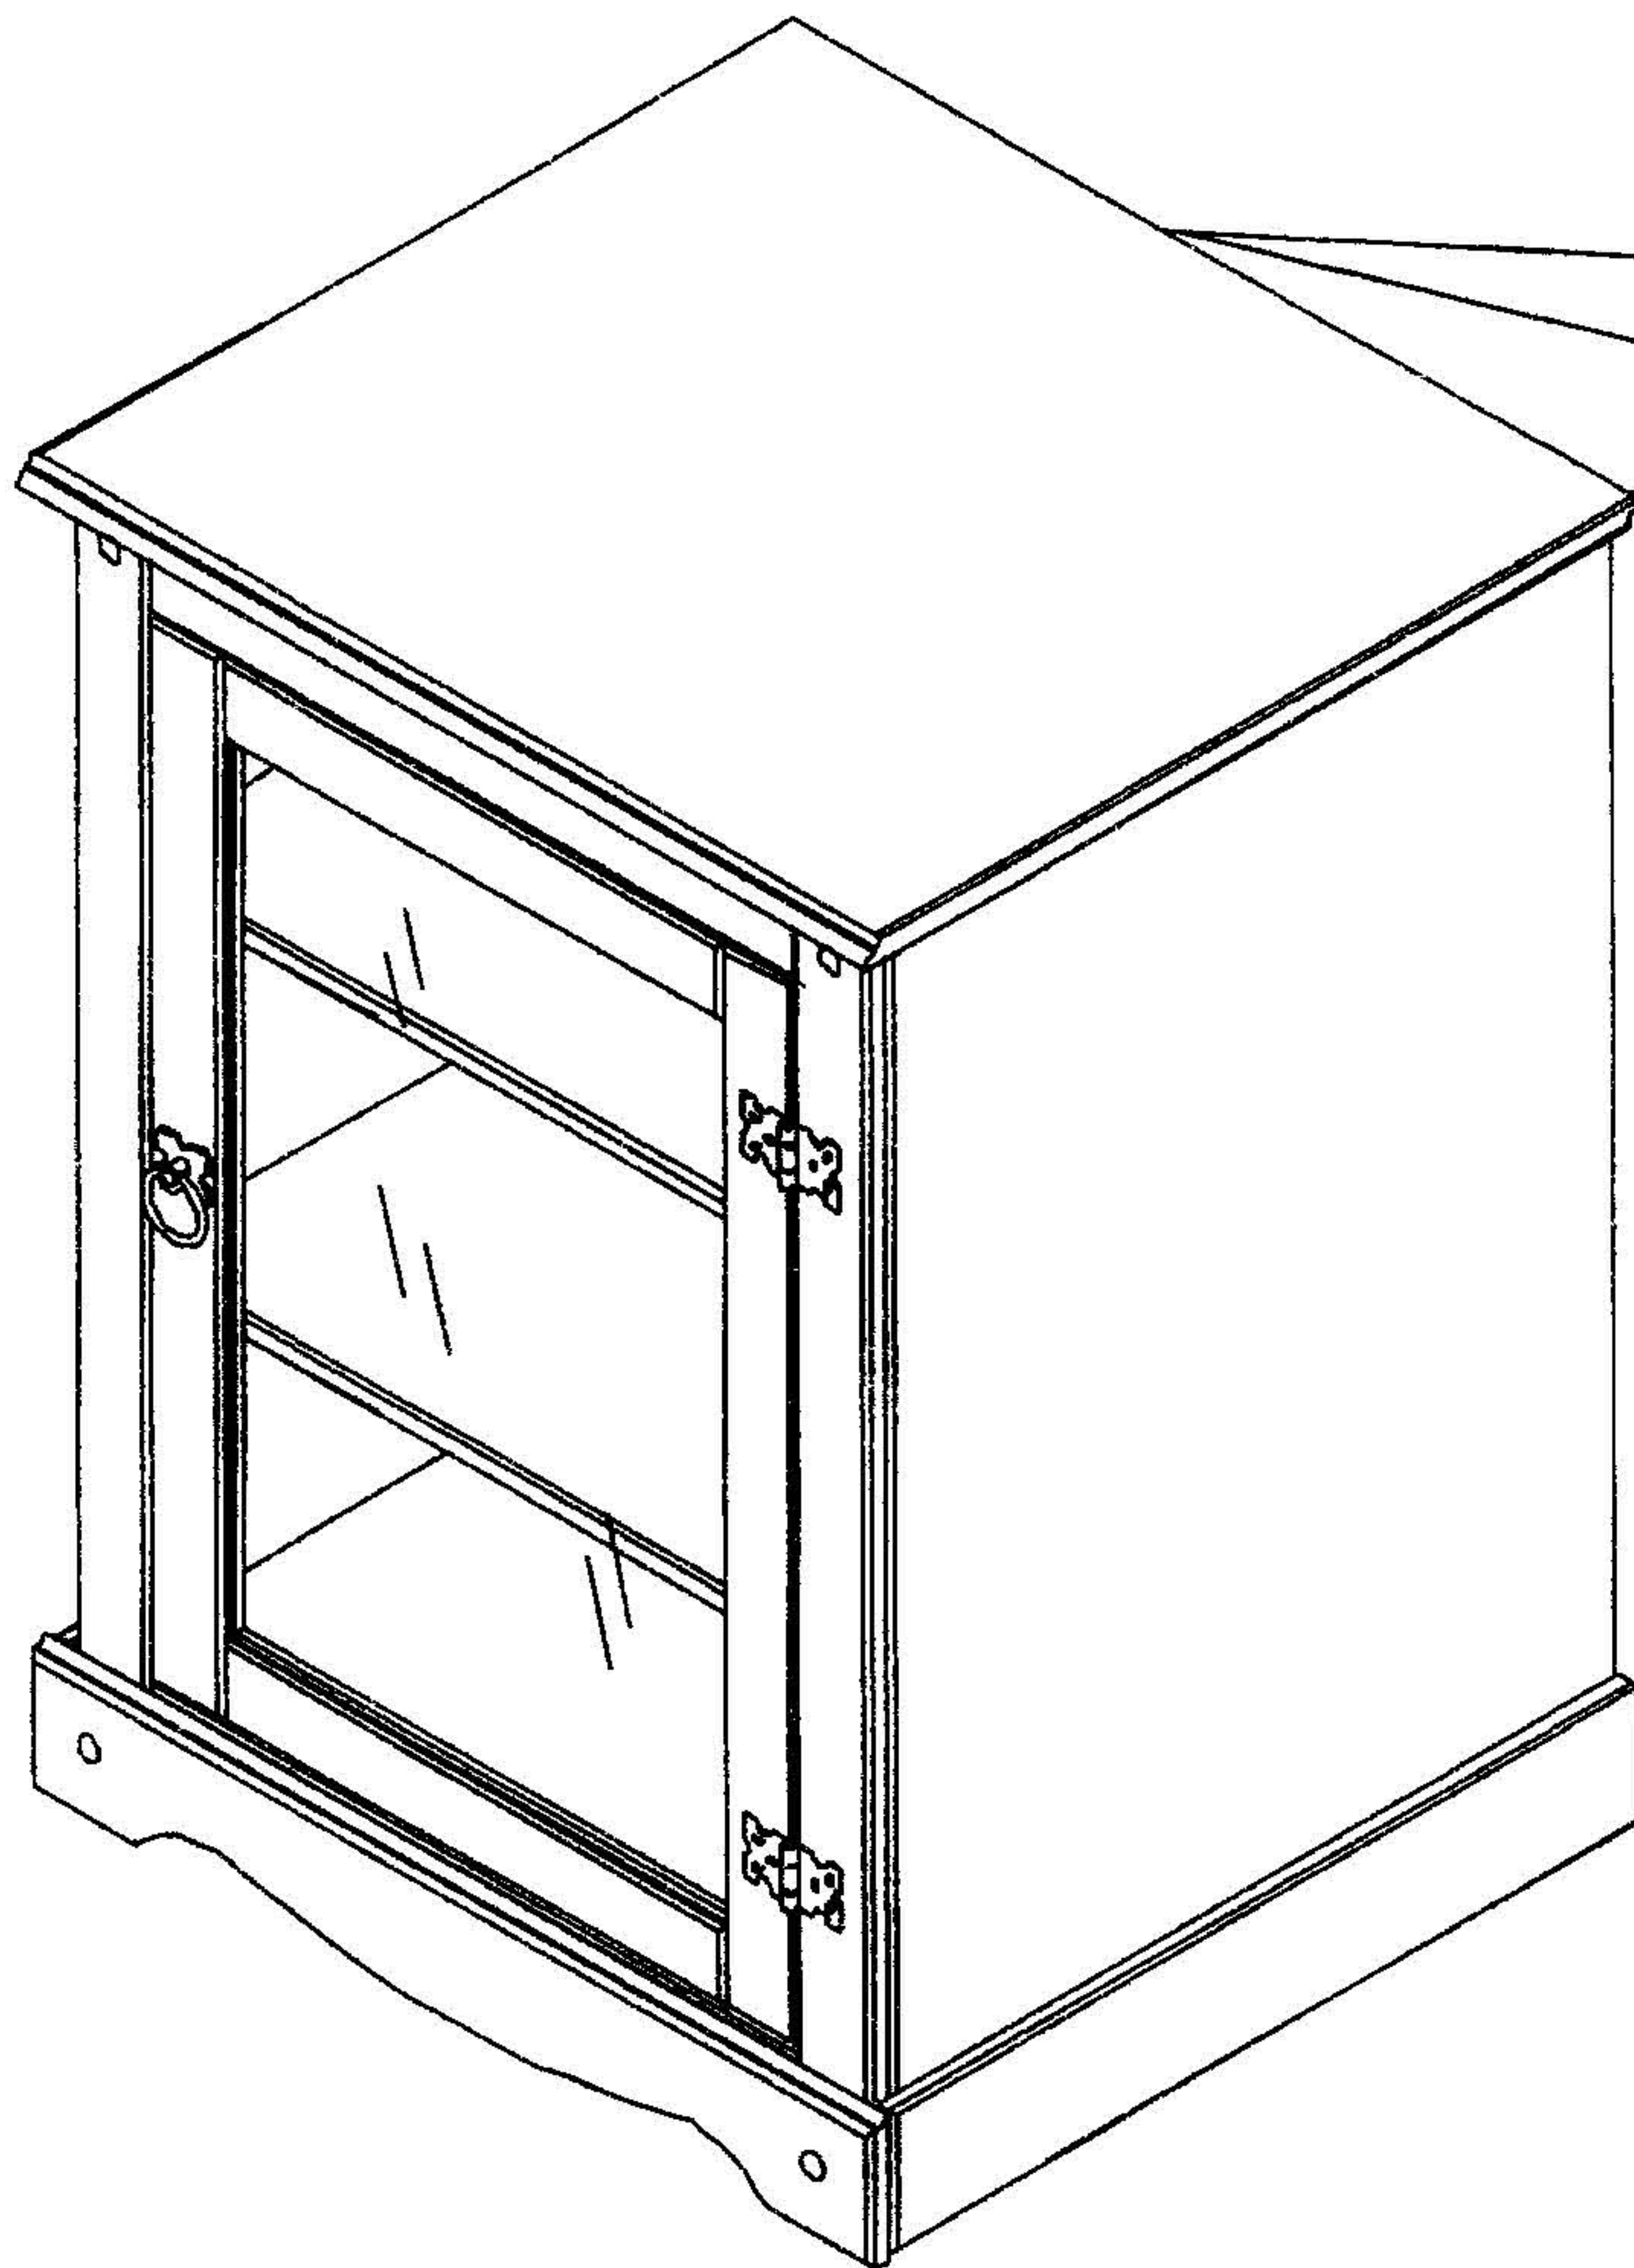

**WARNING: CHECK FOR HIDDEN PIPES AND CABLES BEFORE DRILLING.**

**IMPORTANT: IF YOUR WALLS ARE NOT SOLID LIKE BRICK OR STONE, IT WILL REQUIRE SPECIAL FITTINGS (NOT SUPPLIED).**

- Place the fixing strip against the wall and mark the position for drilling hole.
- Drill a hole in the wall to a depth of 30mm by using a 6mm drill bit. If the surface of your wall is soft and crumbly, we would advise you to use a 5mm drill bit for a tighter fit.
- Insert the wall plug into the hole with end flush to the wall surface.
- Attach fixing strip to the wall using the 25mm screw + washer and securely tighten.
- Pre-drill small pilot hole on the back edge of the furniture top using a 2mm drill bit. Attach the other end of fixing strip to the back edge of the furniture top using the 14mm screw + washer and securely tighten.