







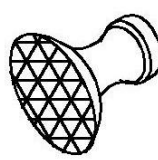







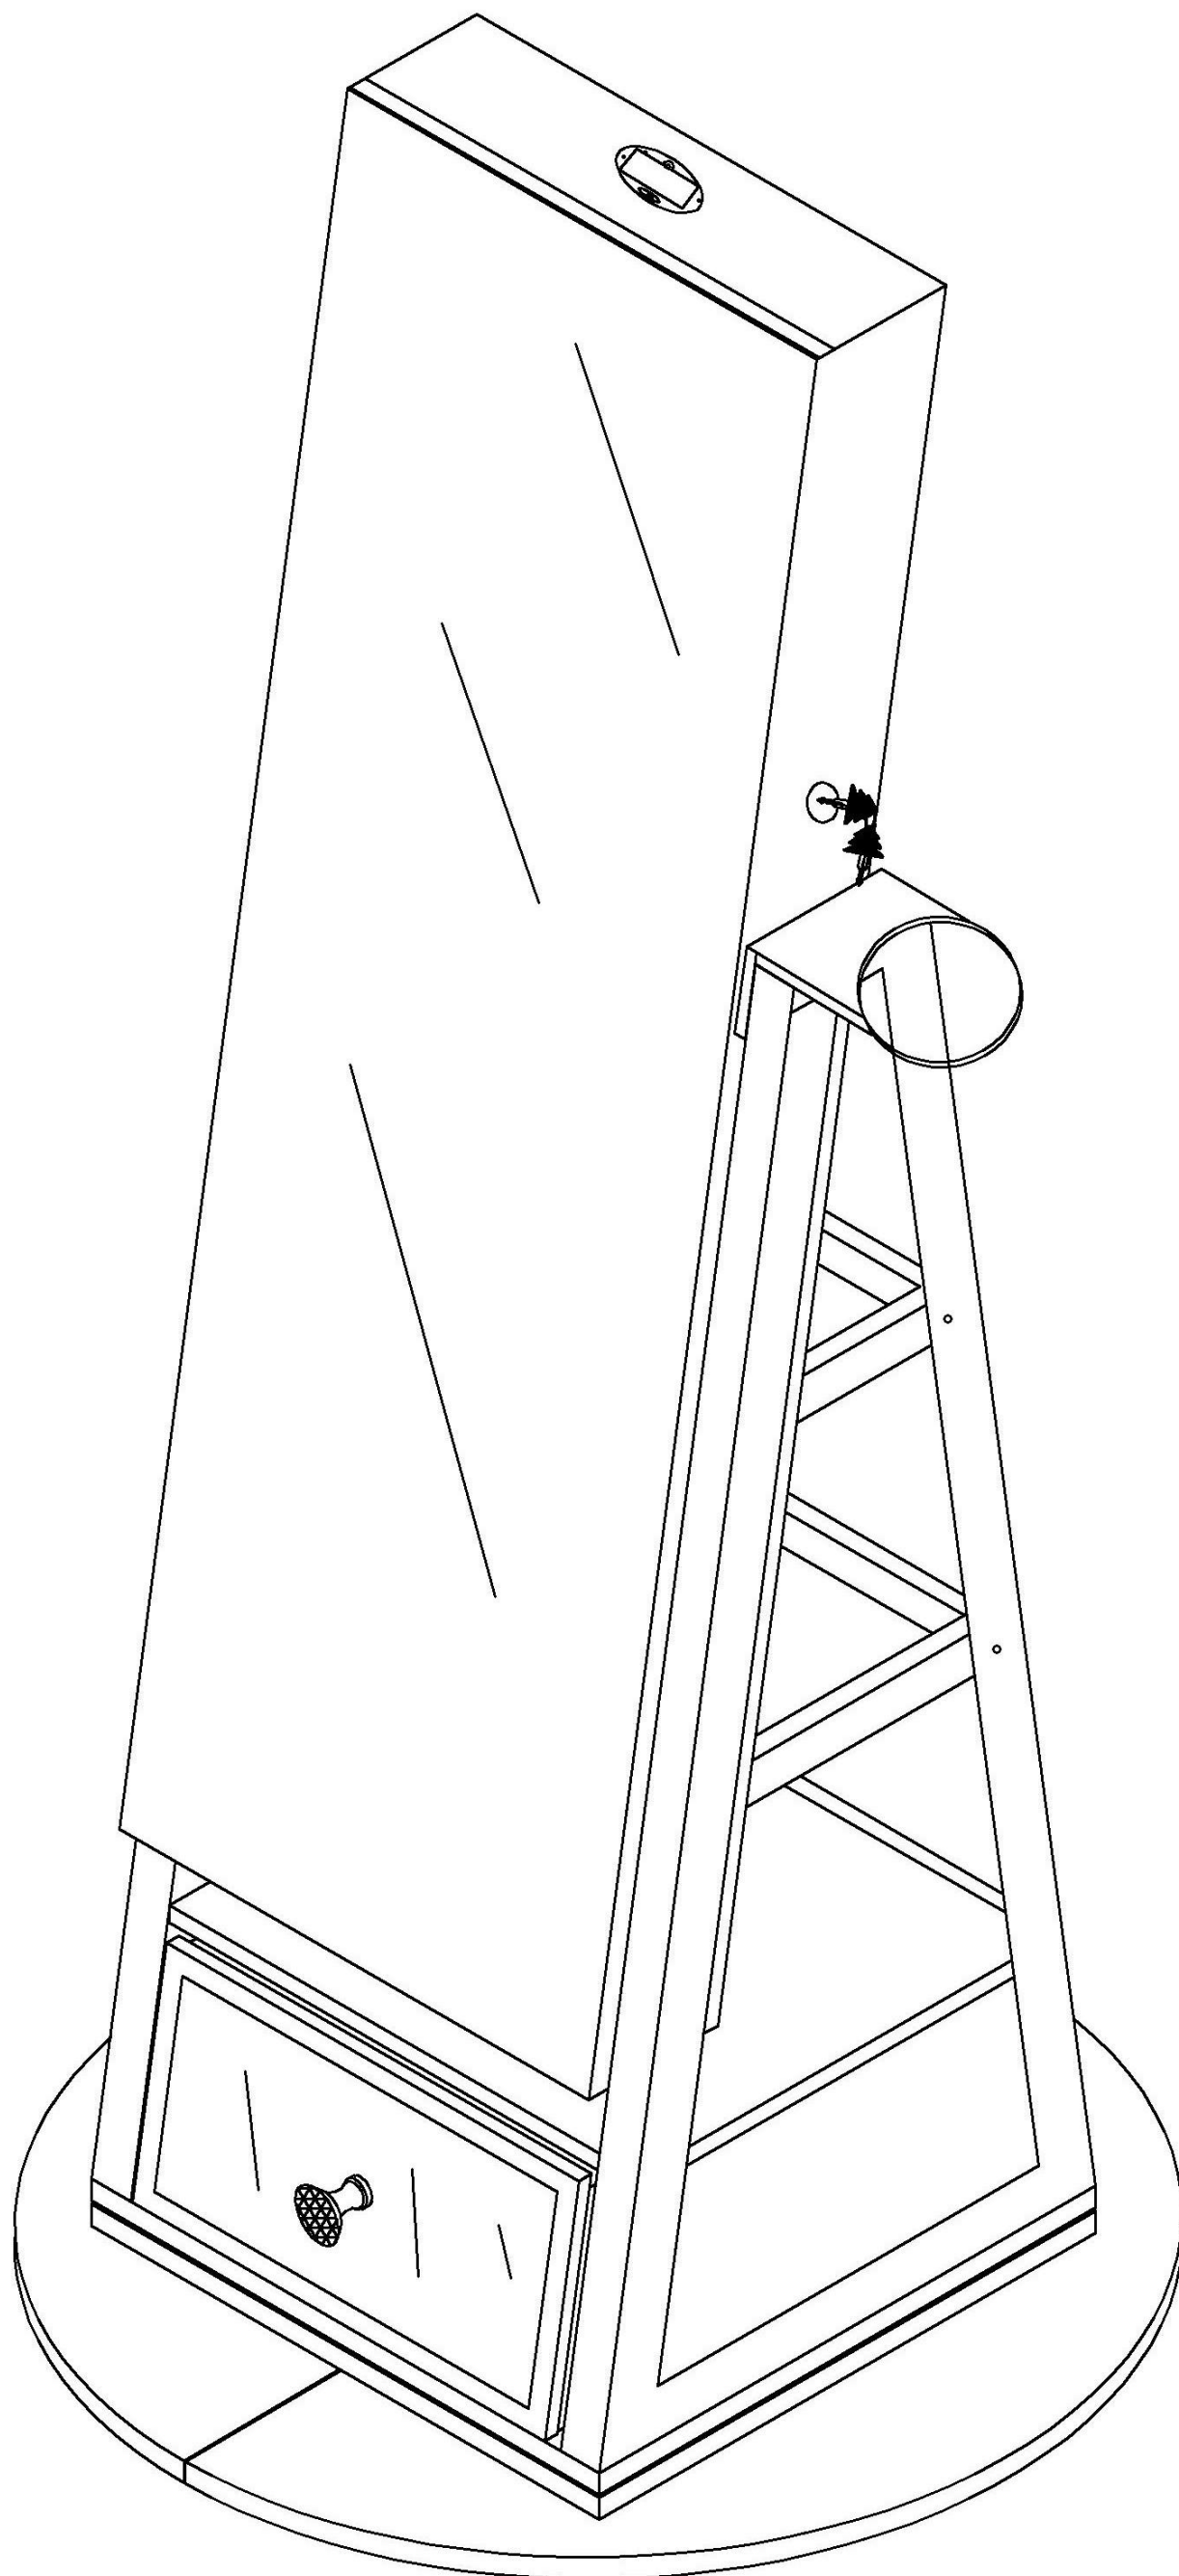



MIRROR JEWELLERY CABINET

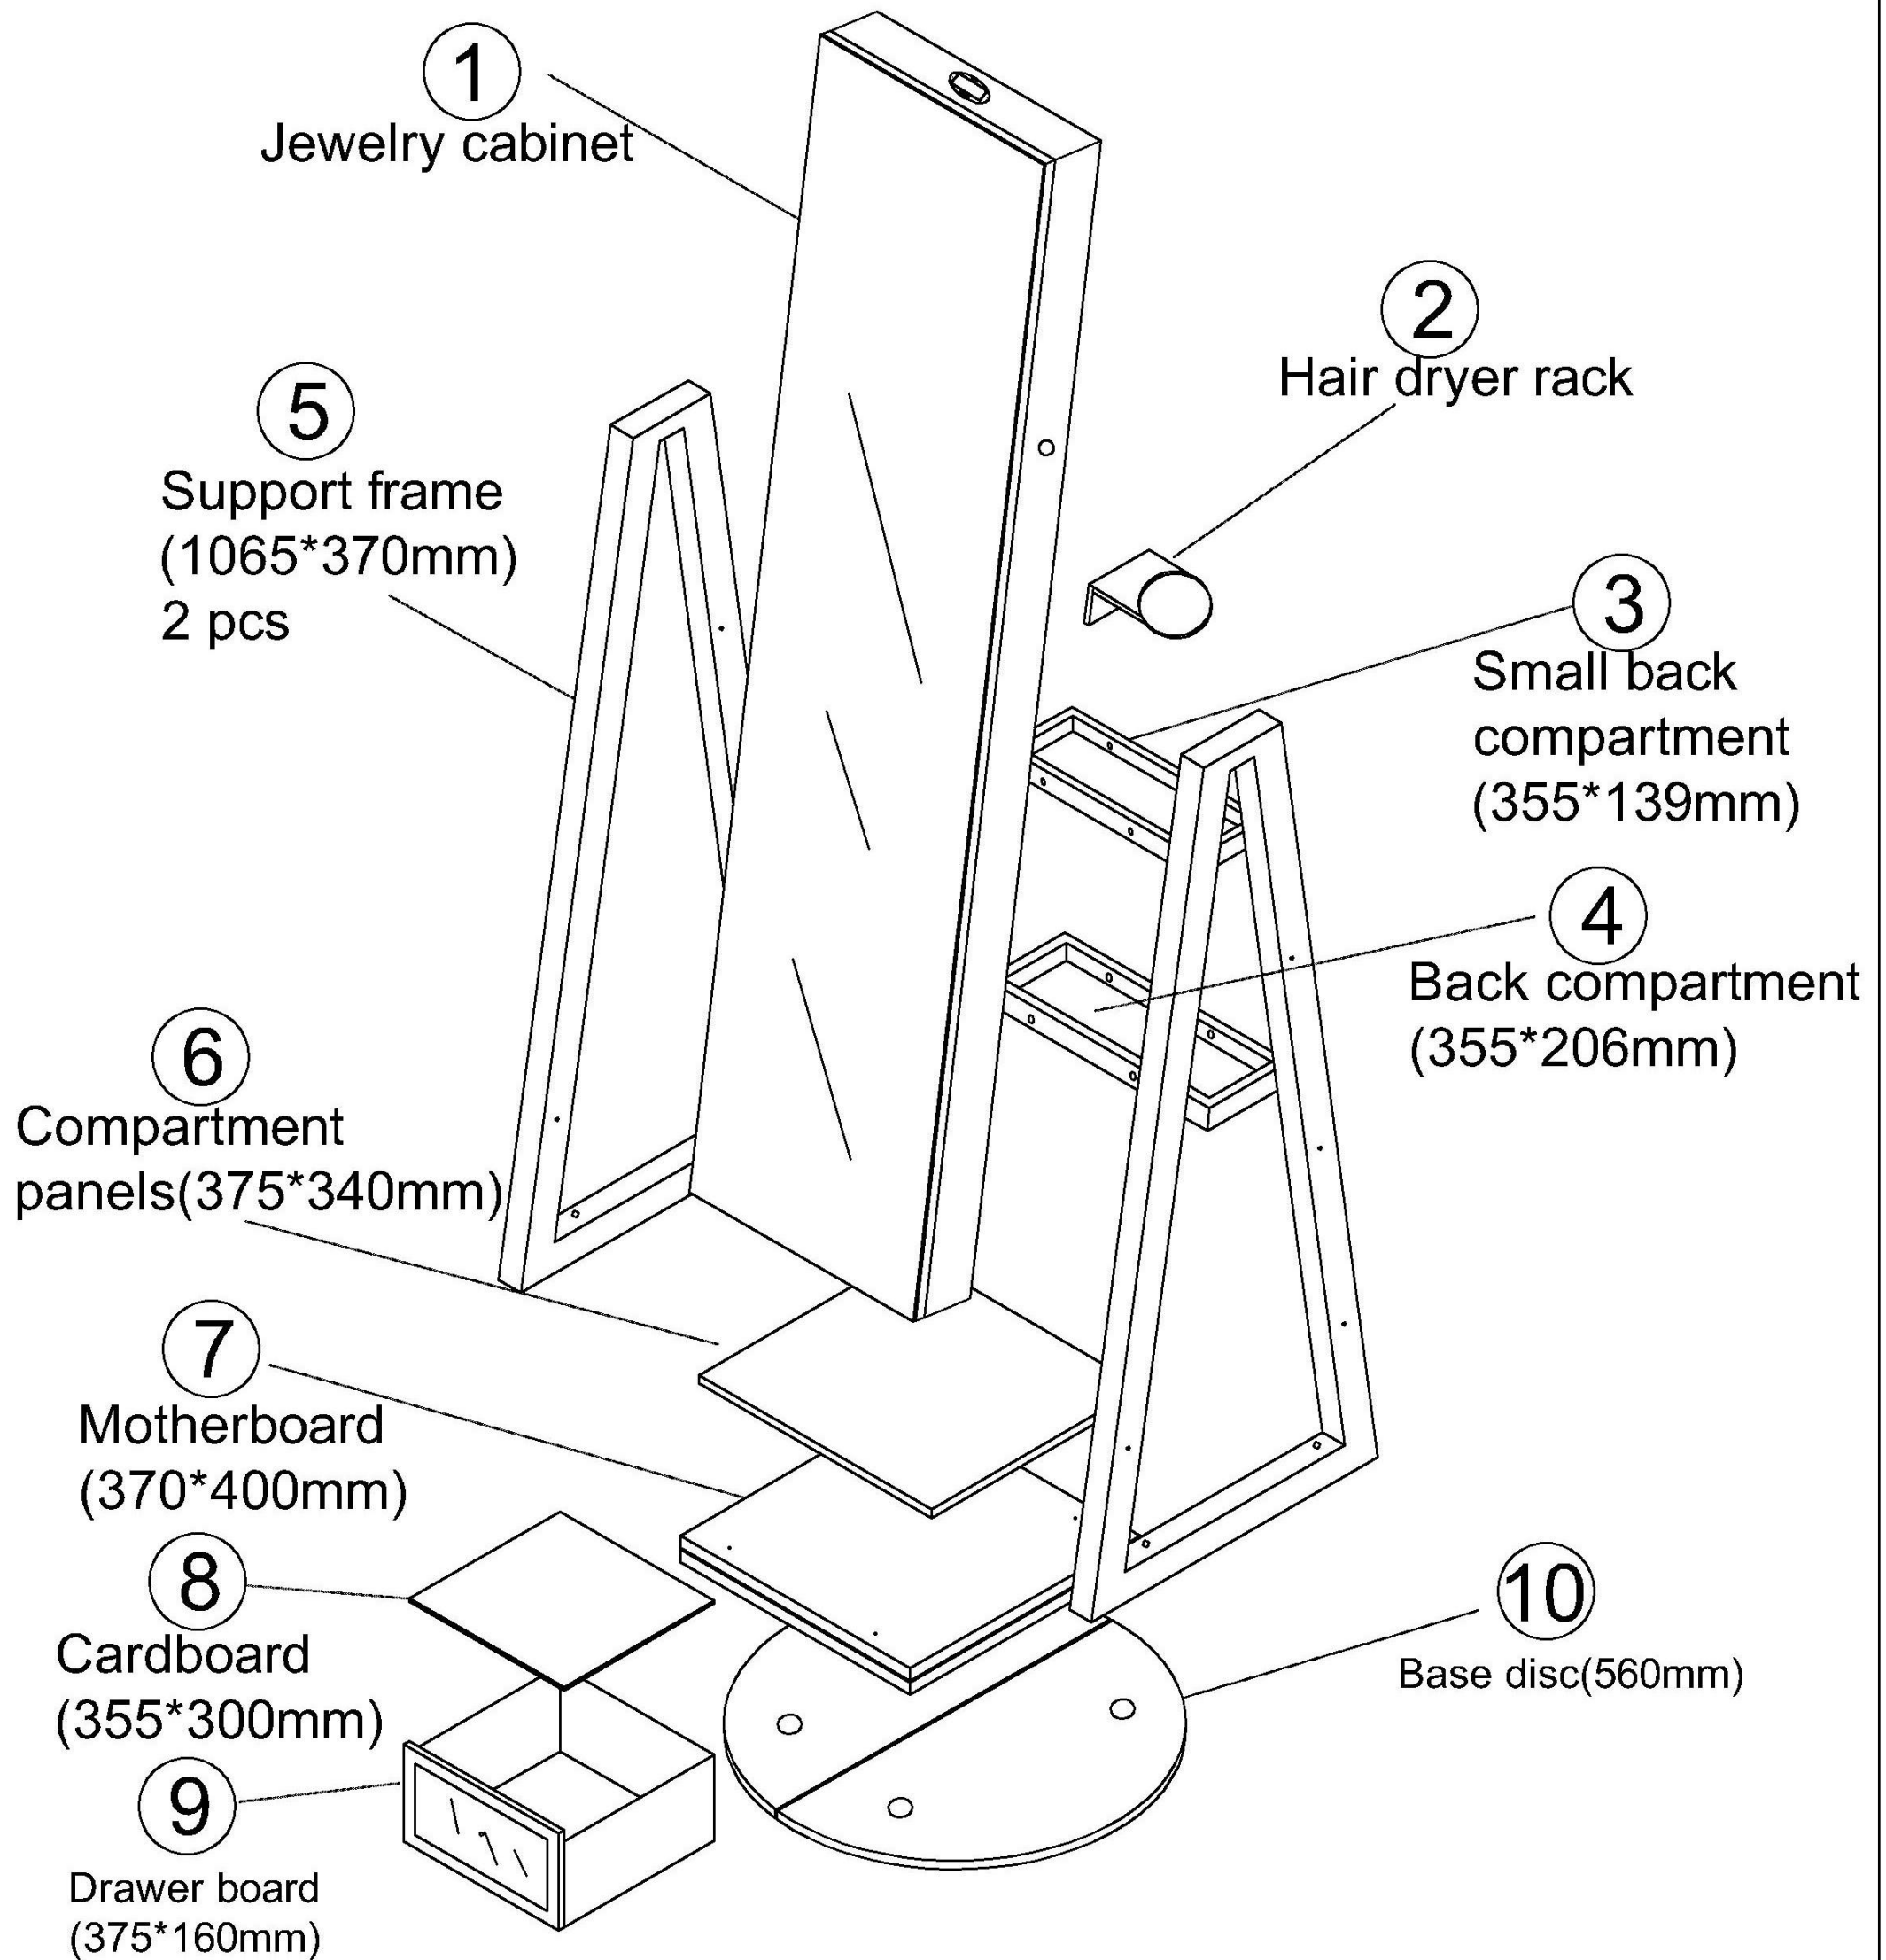

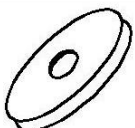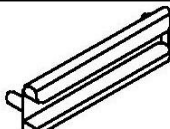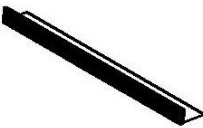Hardware list

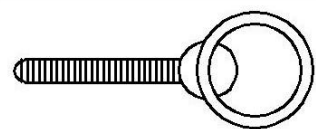

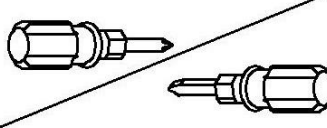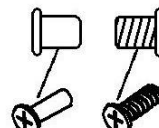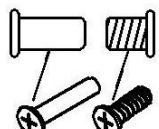Accessories list

(A)		Gasket	1 Pcs
(B)		Acrylic left and right accessories	4 Pcs
(C)		Acrylic spacer	2 Pcs
(D)		Key	1 Pcs
(E)		Hold hands	1 Pcs
(F)		Cross nuts and gaskets (4x18mm)	1 Pcs
(G)		Countersunk head tapping screws (8x20mm)	2 Pcs
(H)		Eye-screw (8x30mm)	2 Pcs
(I)		Cross machine wire (6x50mm)	8 Pcs
(J)		Cross nut (6x20mm)	4 Pcs
(K)		Screwdriver	1 Pcs
(L)		(Short Type 5*8mm) Cross screw assembly	4 Pcs
(M)		(Long Type 5*20mm) Cross screw assembly	4 Pcs
(N)		Self tapping wire (3x16mm)	1 Pcs
(O)		Colloidal granules/Self tapping wire (4x45mm)	1 Pcs
(P)		Anti-rewind (290mm)	1 Pcs


Step 1

J



(6*20mm)

x 4

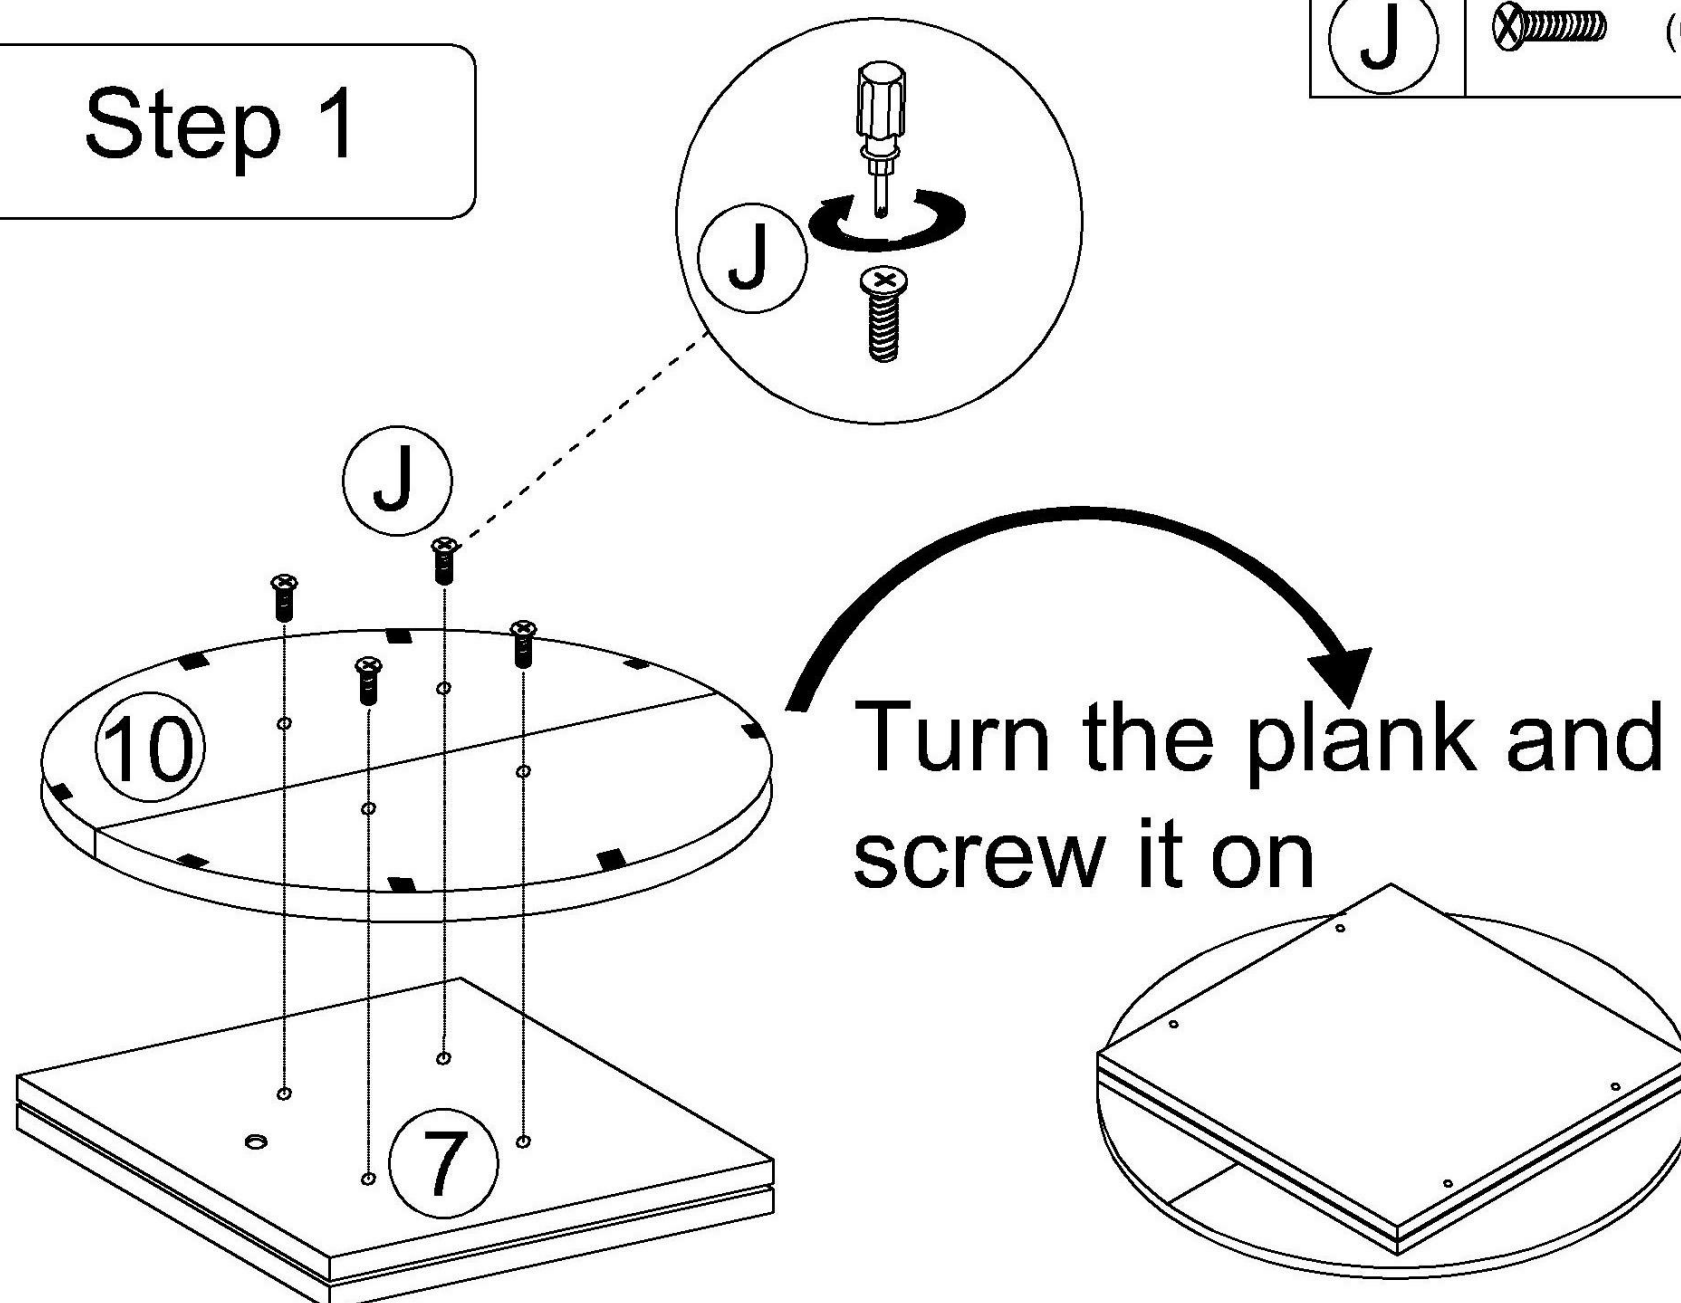

Turn the plank and
screw it on


Step 2

I




(6*50mm)


x 4

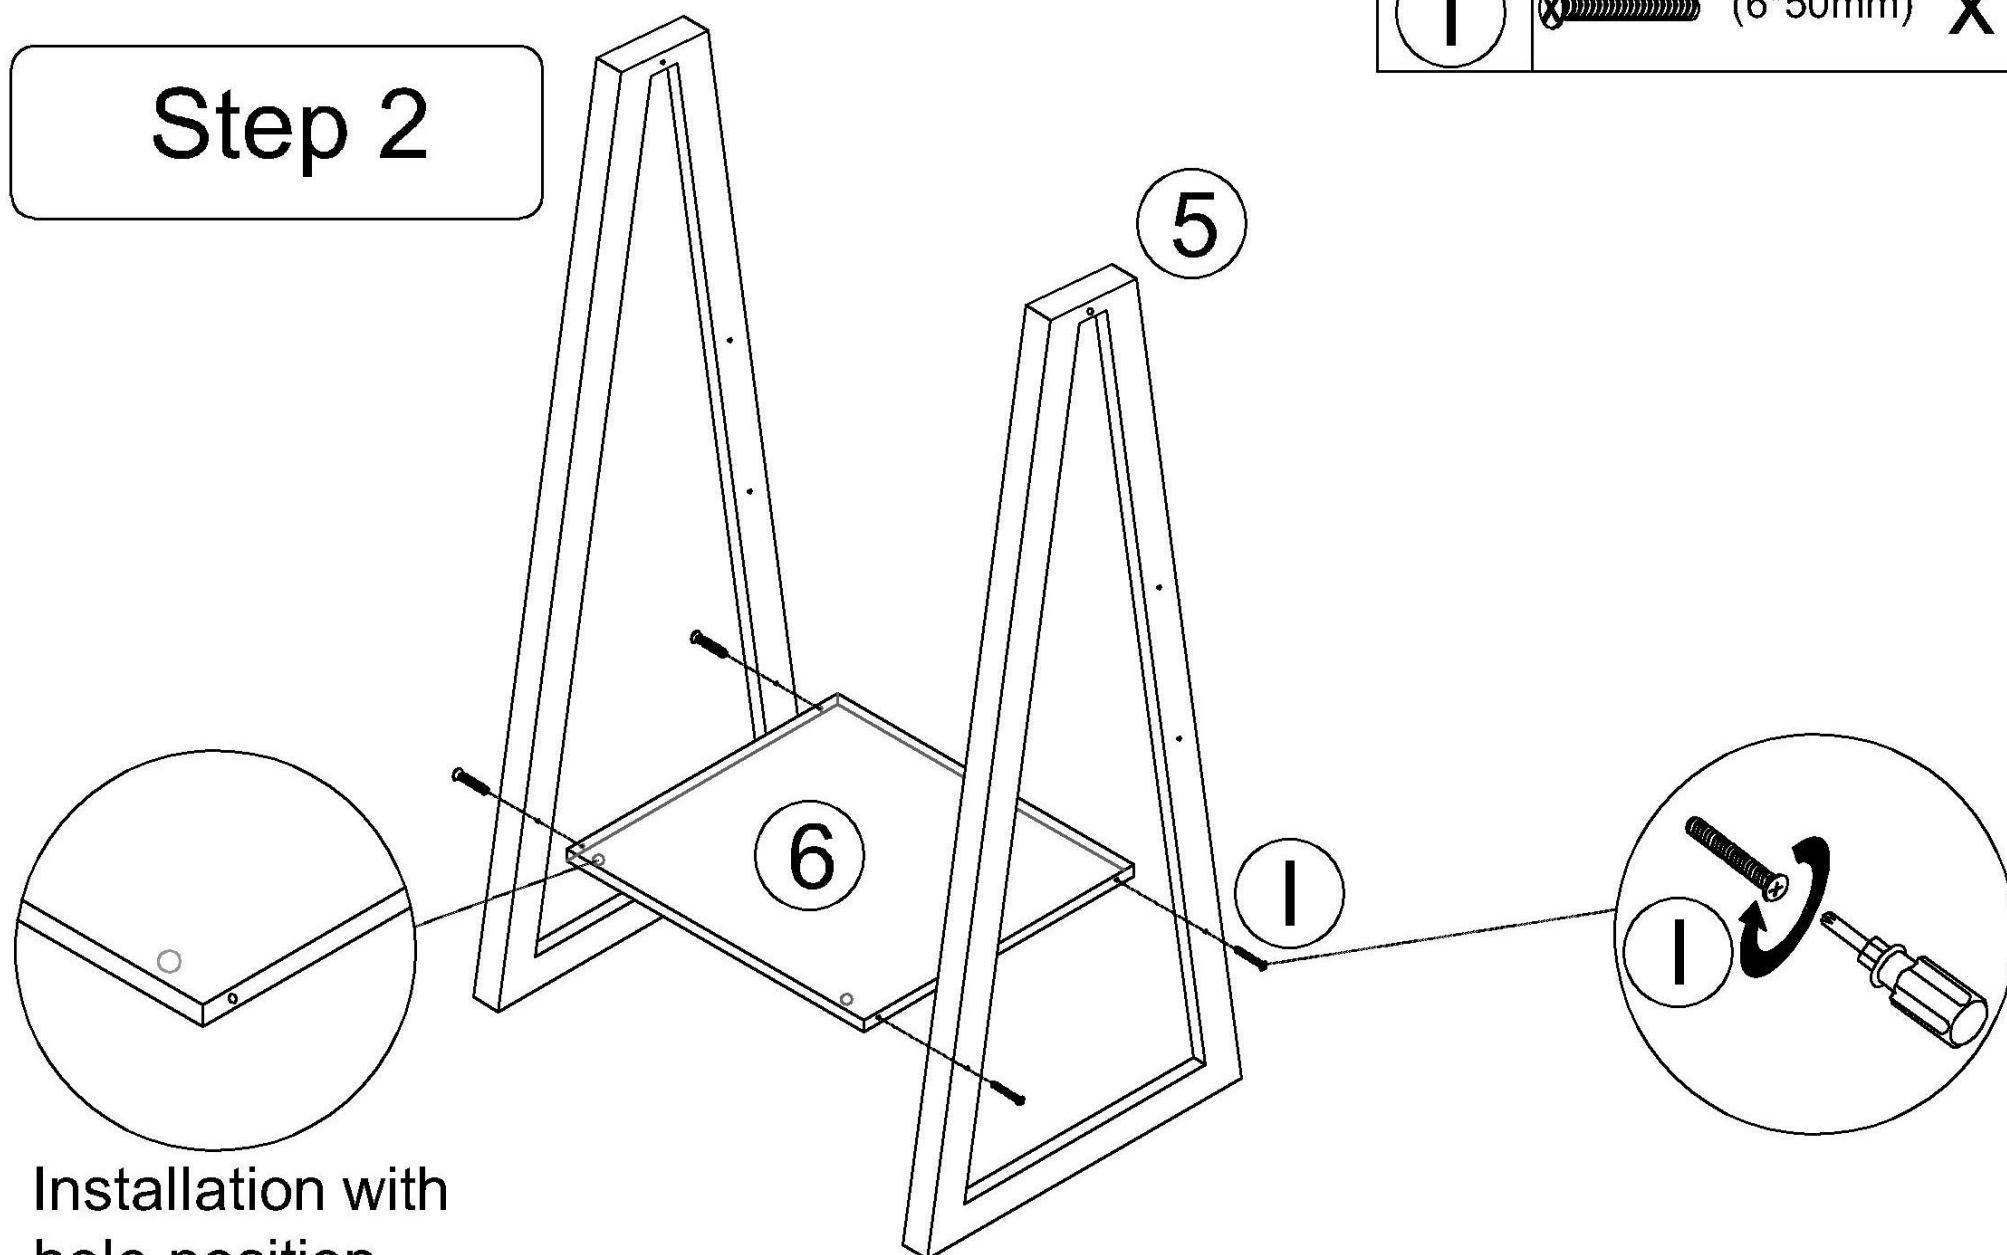



Installation with
hole position
downward


Step 3

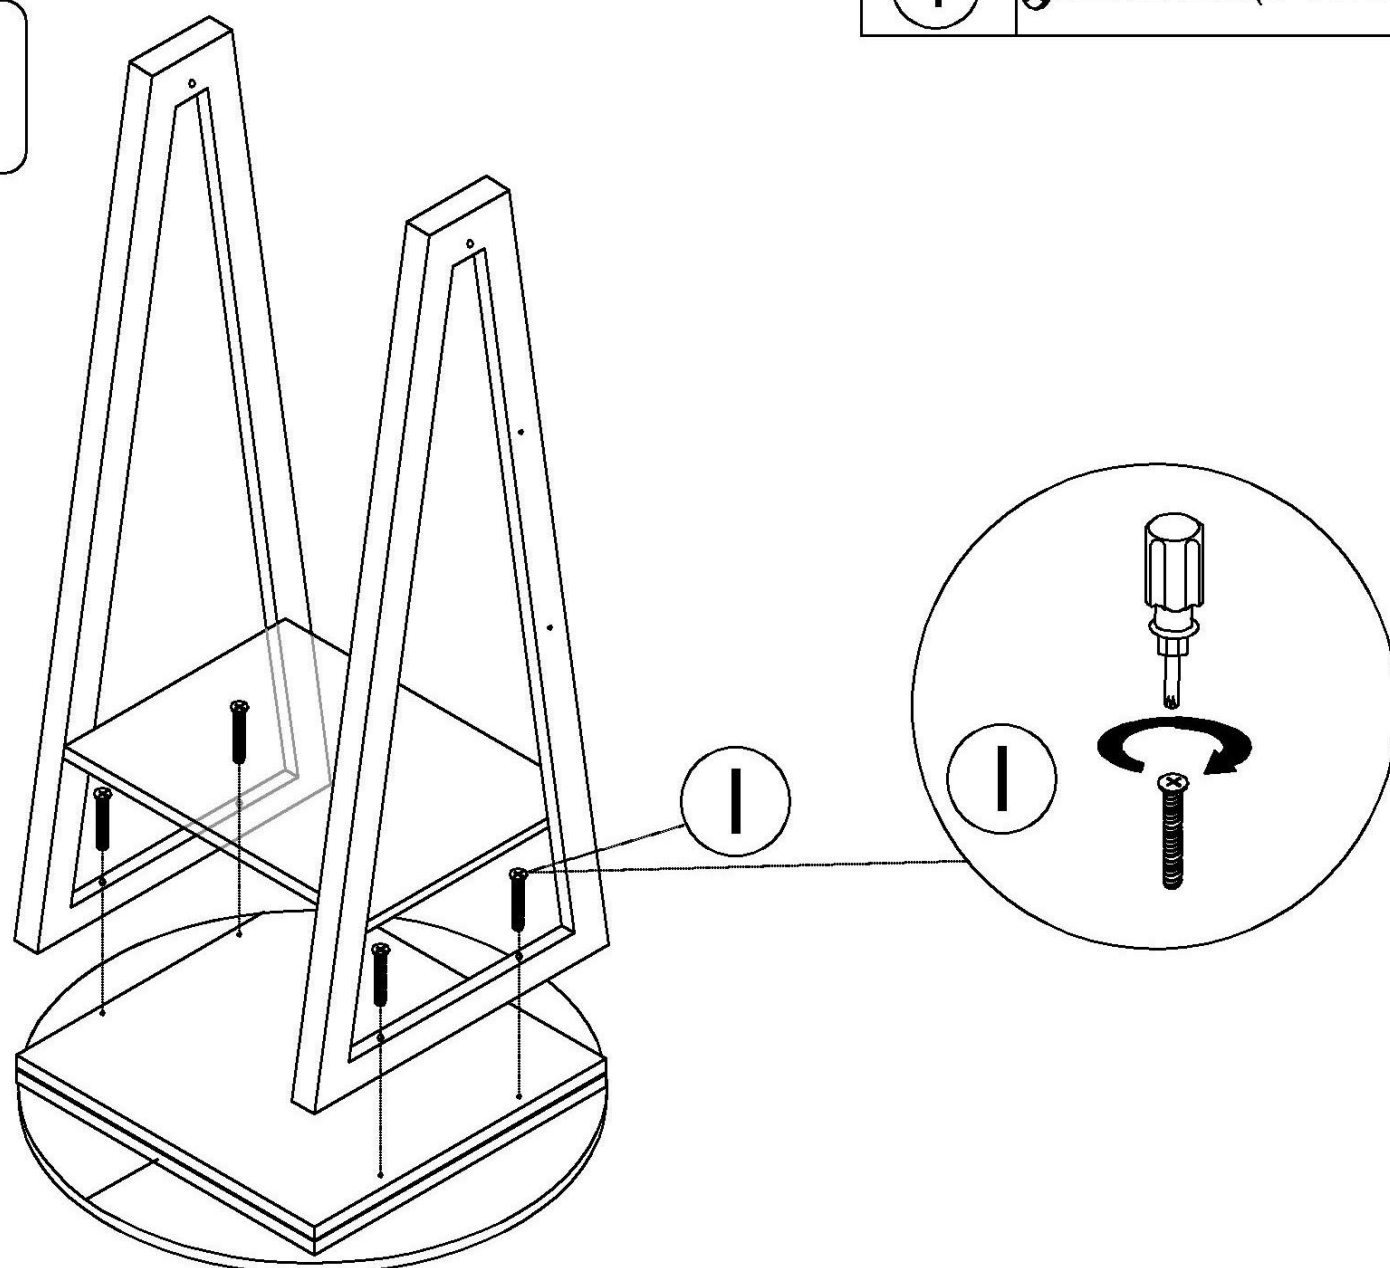①  (6*50mm) x 4




Step 4



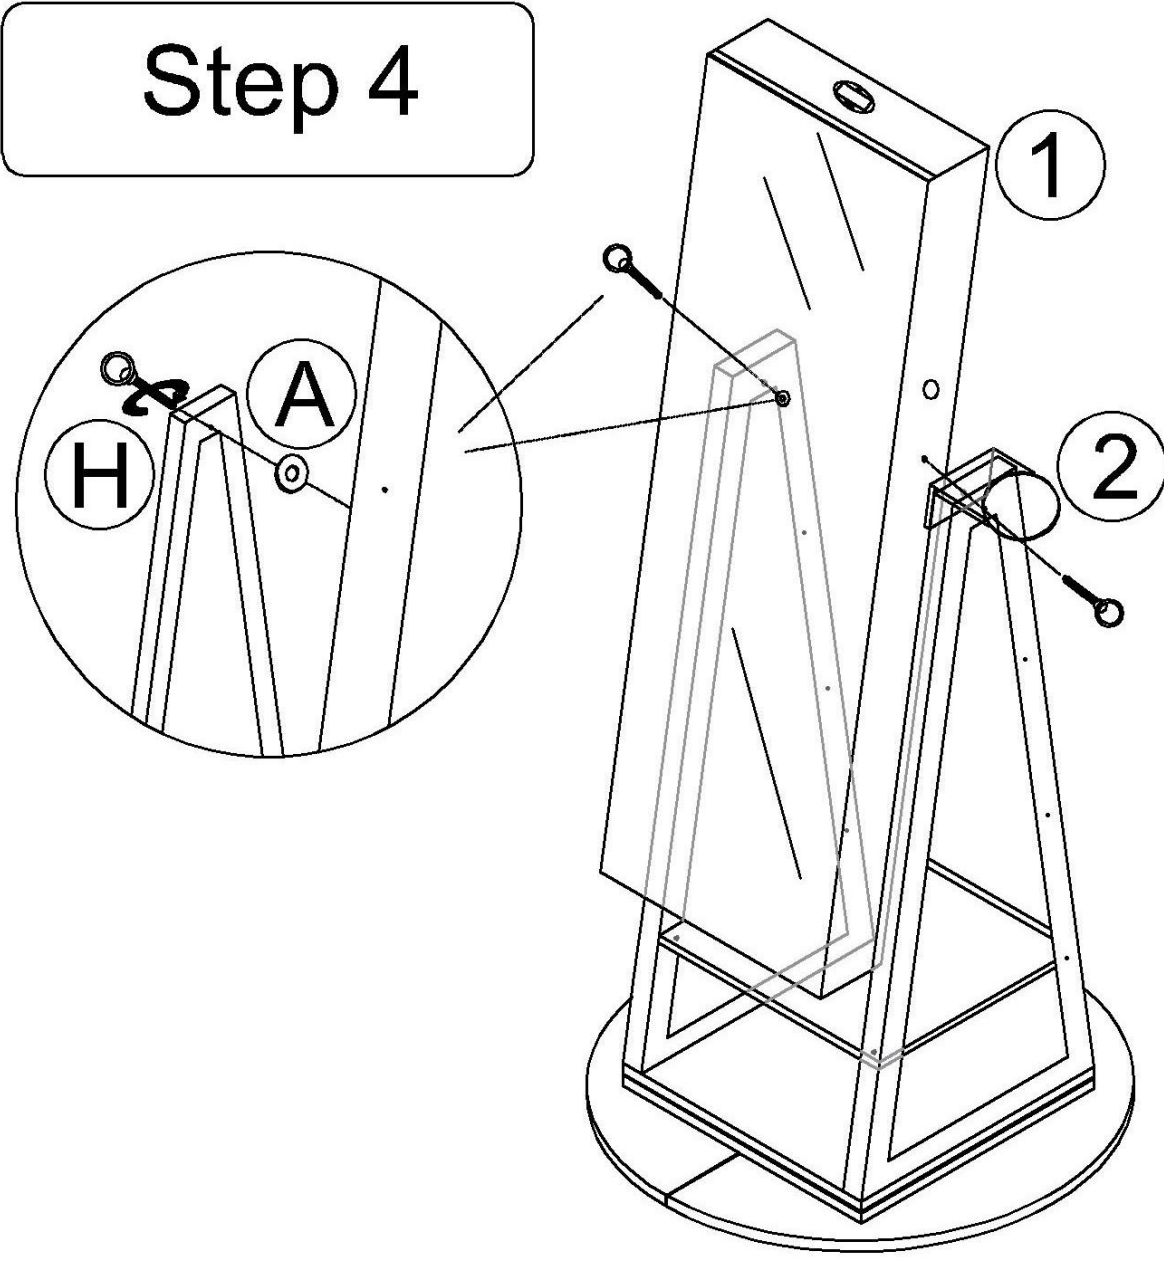


①		x 1
②		x 2


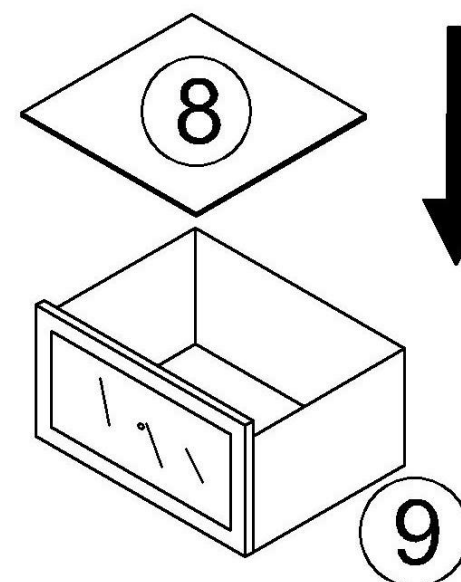


Open the flannelette drawer and put the cardboard down






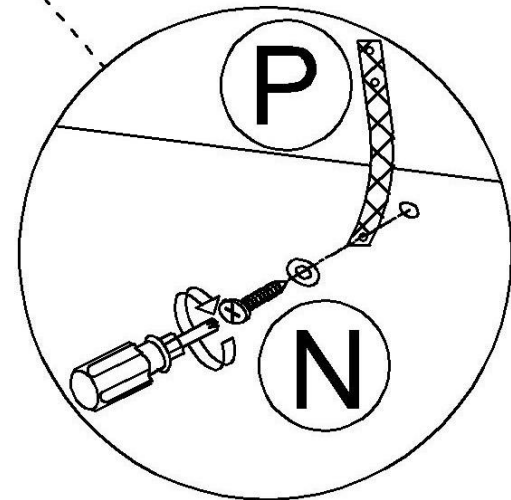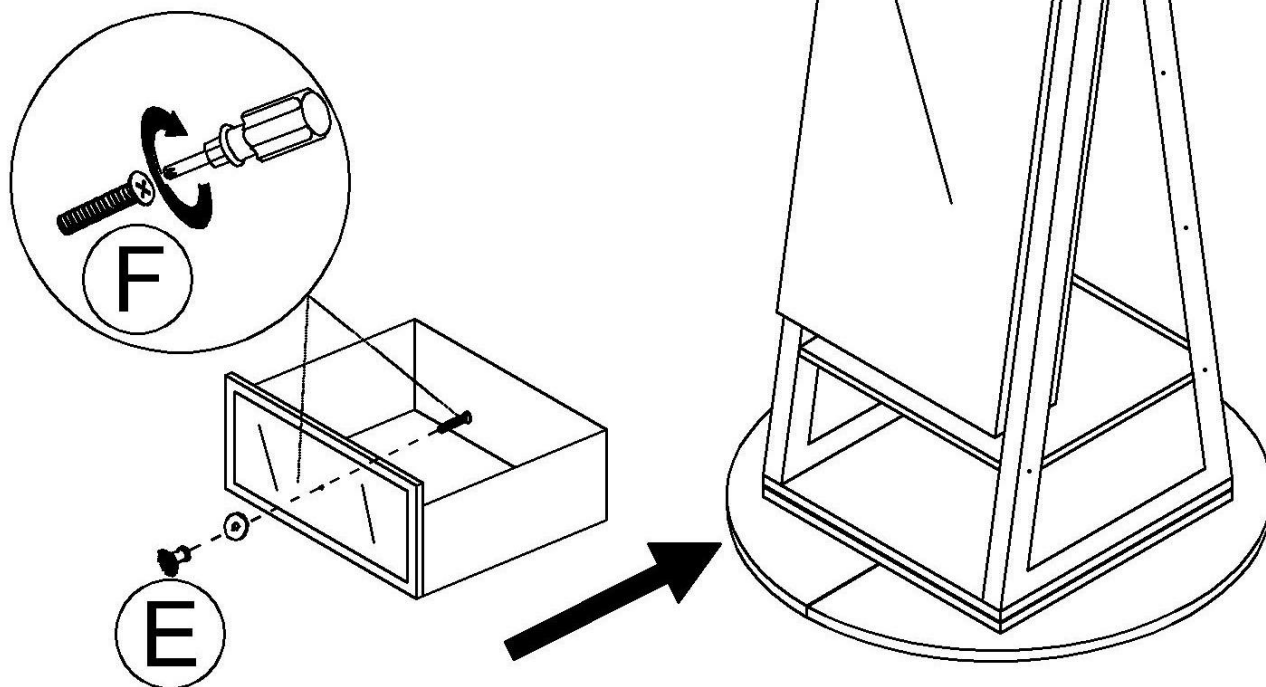



Step 5

F	 (4*18mm) X 1
E	 X 1
N	  X 1
P	 X 1





Step 6


B	 X 4
L	  (5*8mm) X 4
M	  (5*20mm) X 4
G	 X 2

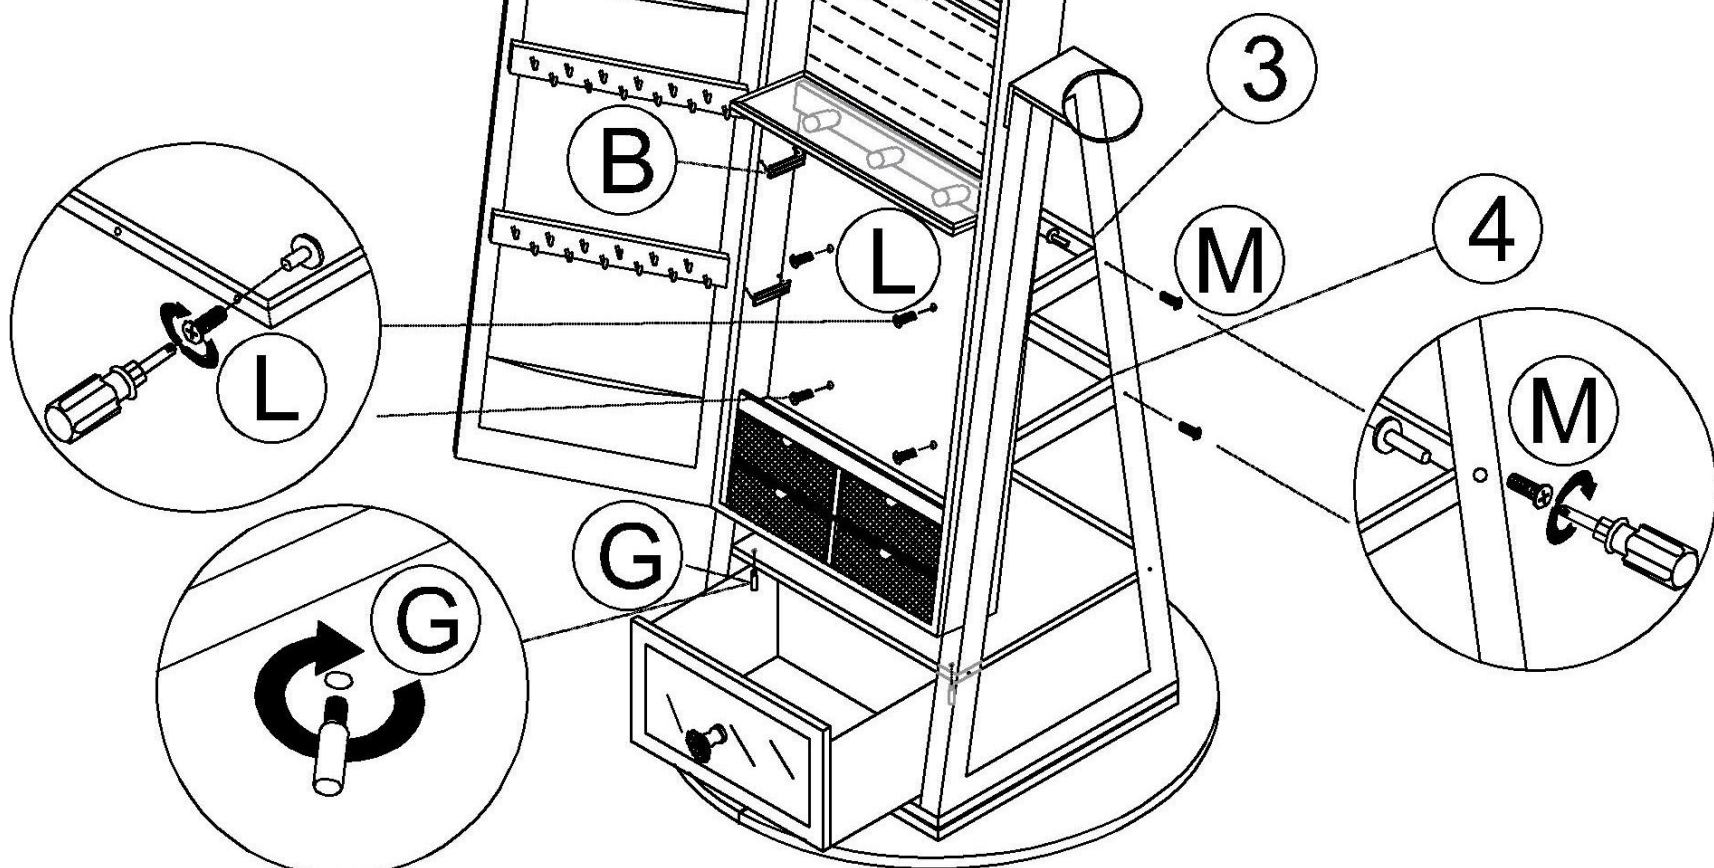


Step 7

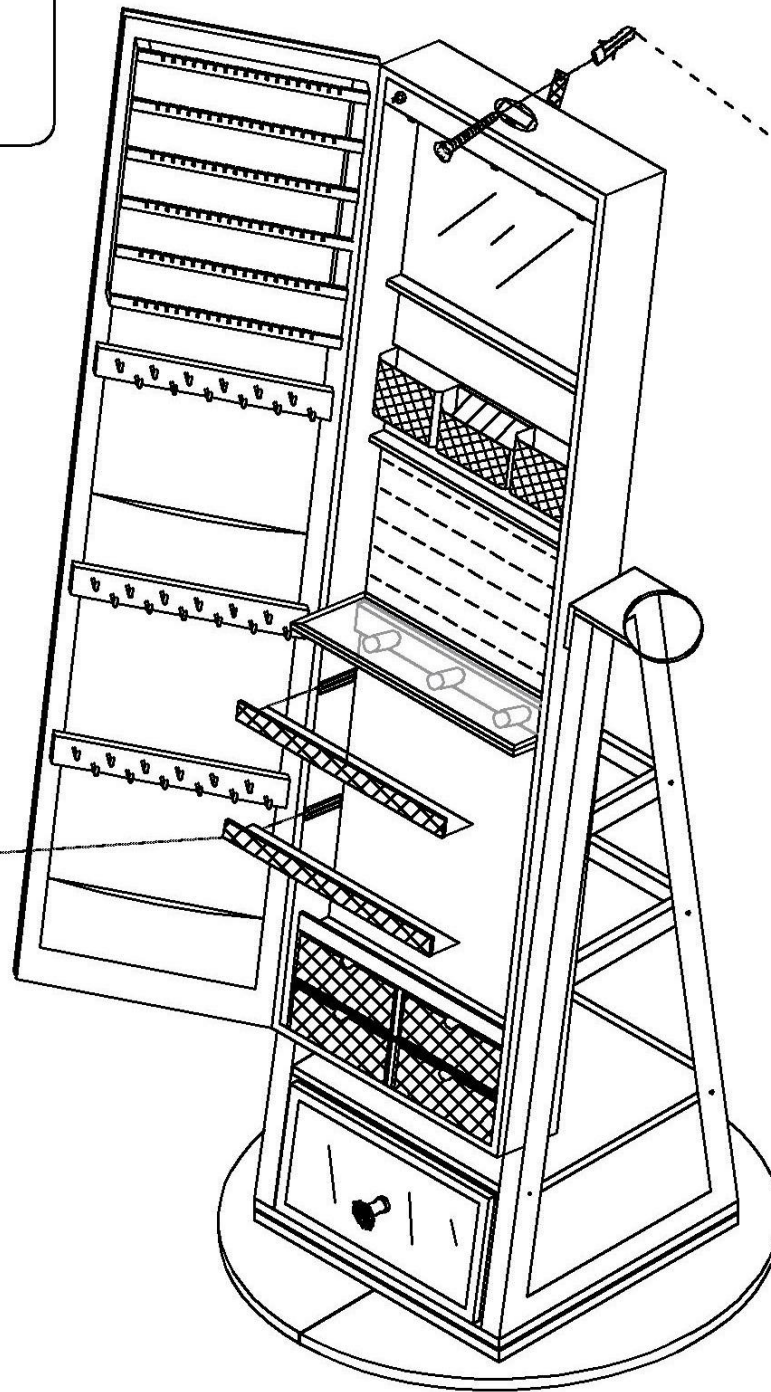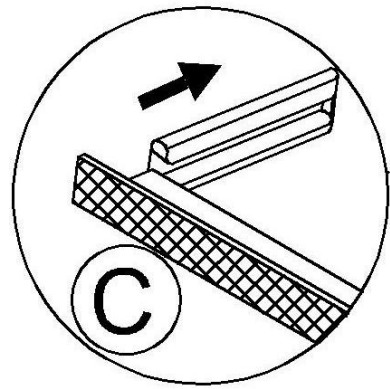

C		x 2
O		x 1

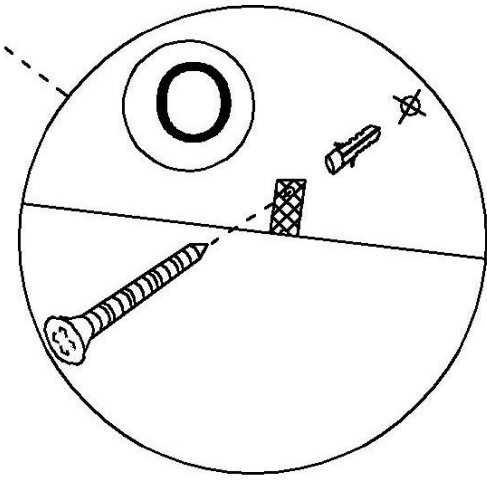

Step 8

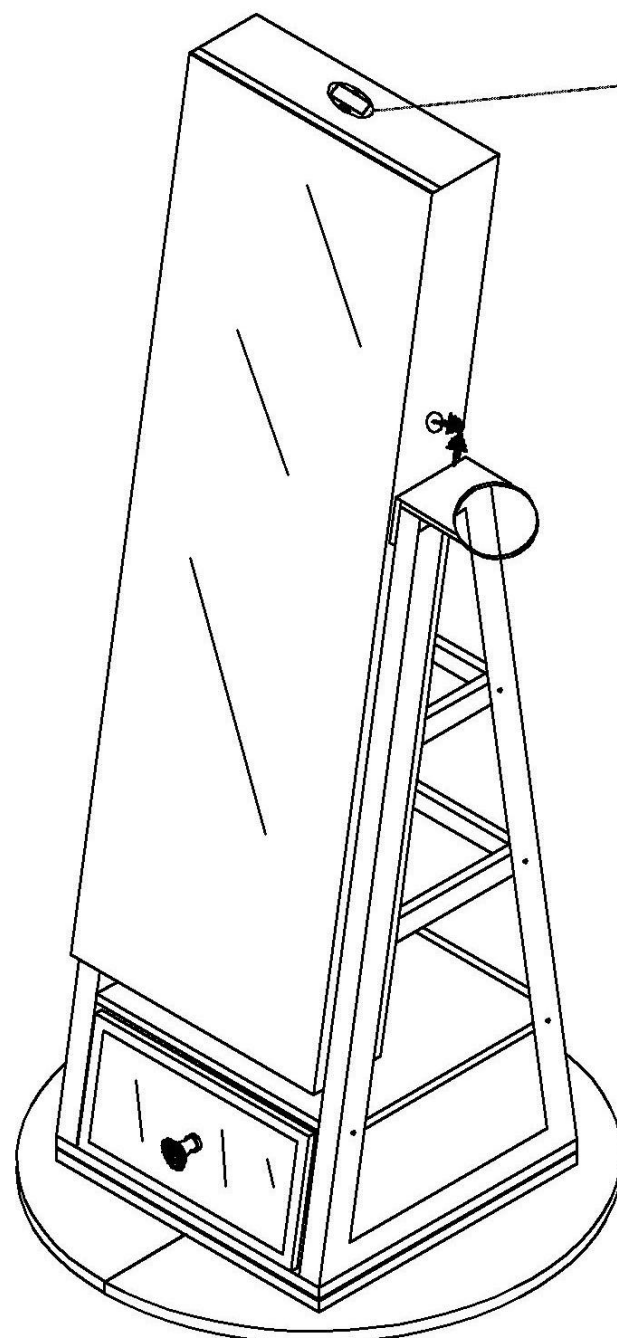

Battery installation (Tip: use 3 AAA Batteries)

