

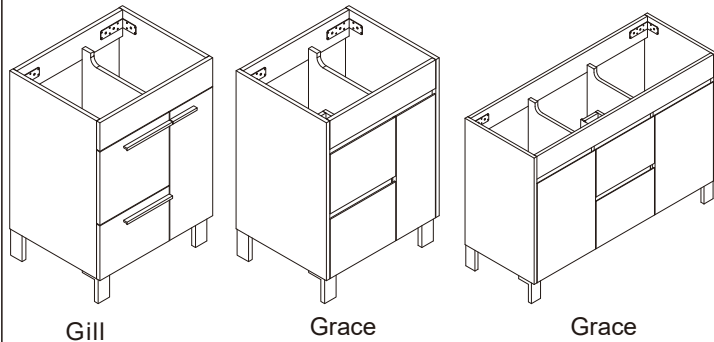



INSTALLATION GUIDE

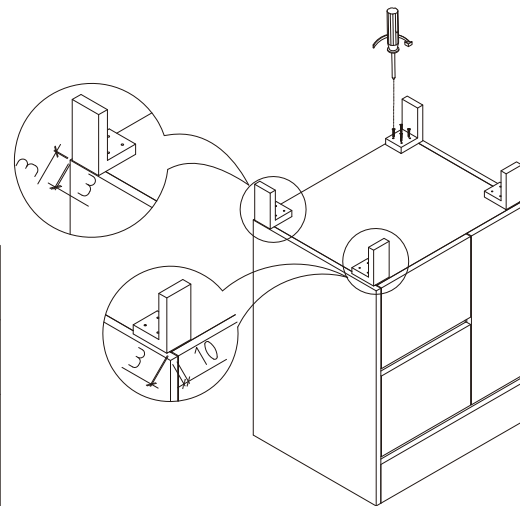

1

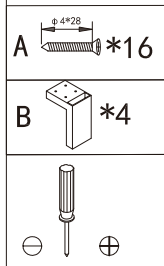

4

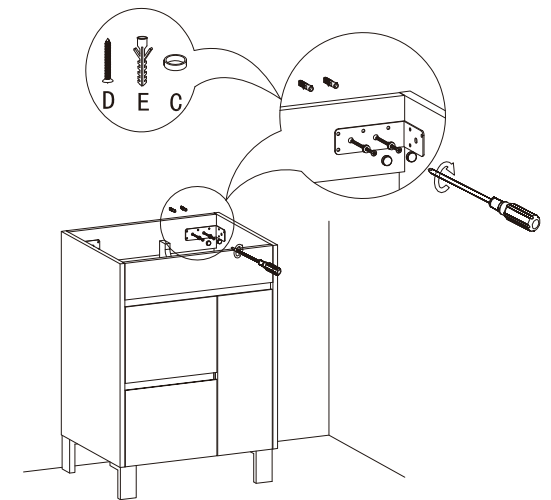

Electric drill



Drill ($\phi 8$)




Tape measure (3m~5m)



Silicone




Pencil




Screwdriver

TOOLS NEEDED FOR INSTALLATION

2

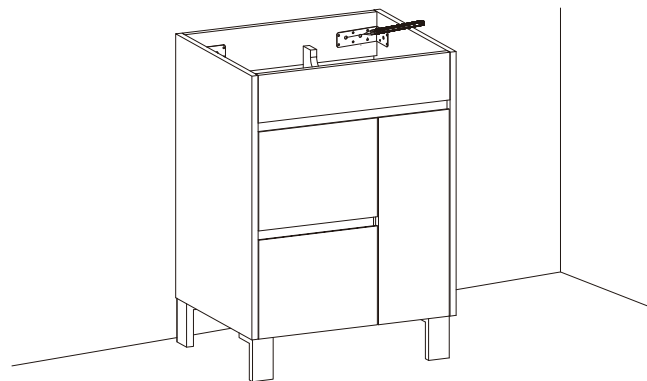

5

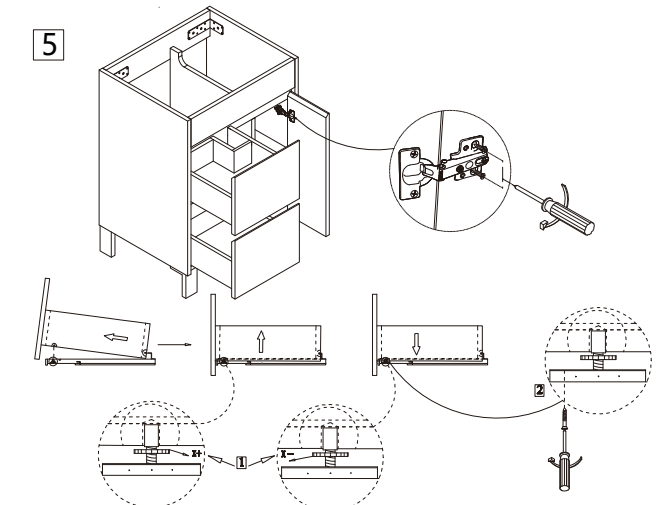

Cabinets




A=16



B=4



C=4







D=4



E=4

3

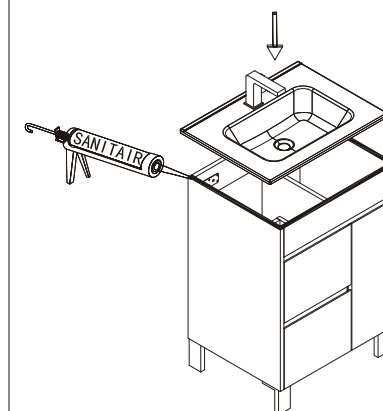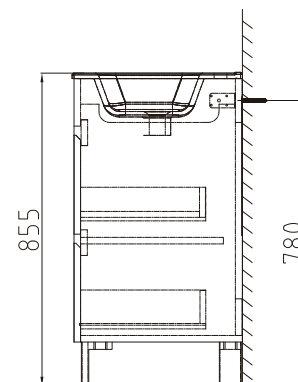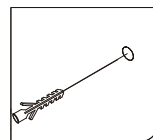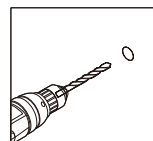

When installing the basin, transparent silicone must be applied at the contact place between the basin and the cabinet to make it fit accurately.