





ASSEMBLY INSTRUCTIONS

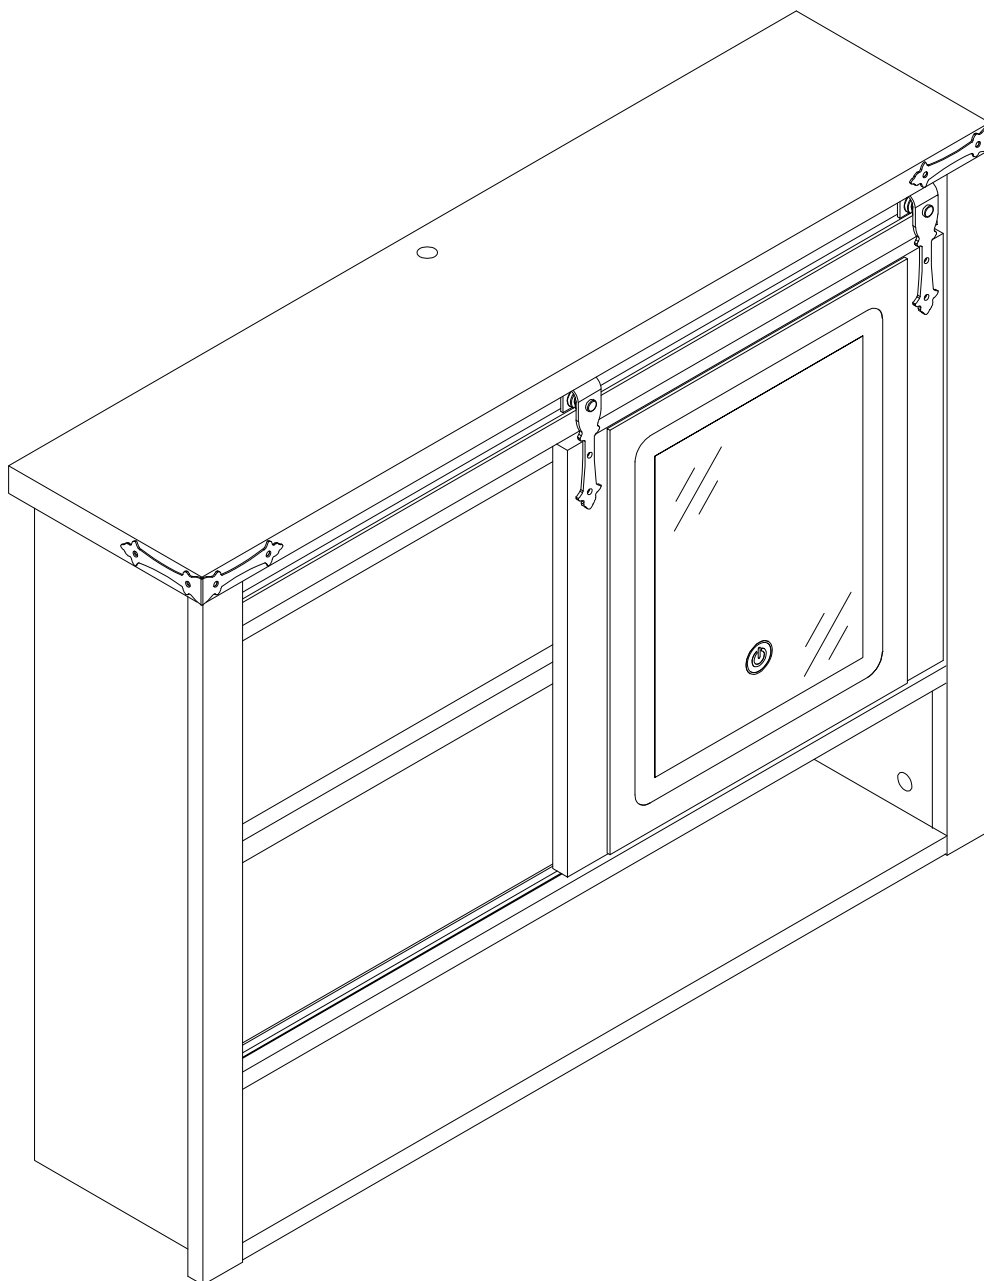


SAFETY TIPS: Static charge may cause dust on foam – clean with a dry or damp cloth. Small foam strands may be present – handle gently and dispose of properly. Do not burn or incinerate. Check local recycling guidelines.

Before You Start

1. Read through each step carefully and follow the proper order.
2. Separate and count all your parts and hardware.
3. Give yourself enough room for the assembly process.
4. Assemble this product on the empty carton or carpet to avoid scratching.
5. Two people are recommended for ease in the assembly of this product.
6. Keep all small parts of this product away from children. They may cause serious injury.
7. Have the following tools: Flat Head Screwdriver, #2 Phillips Head Screwdriver and Hammer.

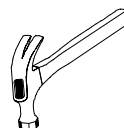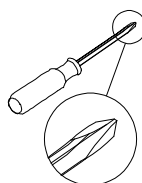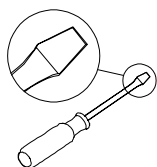


8. Power tools should not be used to assemble this product.

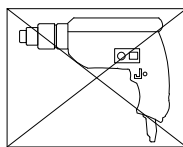


HOW THE KNOCK DOWN (KD) ASSEMBLY SYSTEM WORKS





1. Screw the Cam Bolt into the pre-drilled hole on the panel. Make sure Cam Bolt goes into the pre-drilled hole on the end of panel for Cam Lock.
2. Insert the Cam Lock into the pre-drilled large hole on the panel. Make sure the arrow on the face of Cam Lock points towards Cam Bolt.
3. Take a Phillips screwdriver and rotate the Cam Lock clockwise to lock the Cam Bolt.
4. Use the sticker to conceal the Cam.

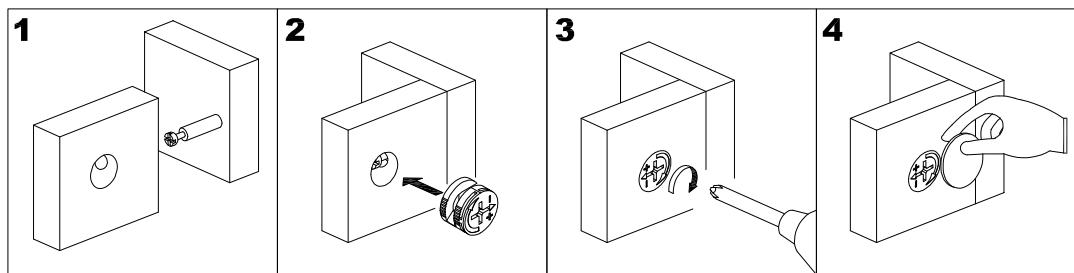


PARTS LIST

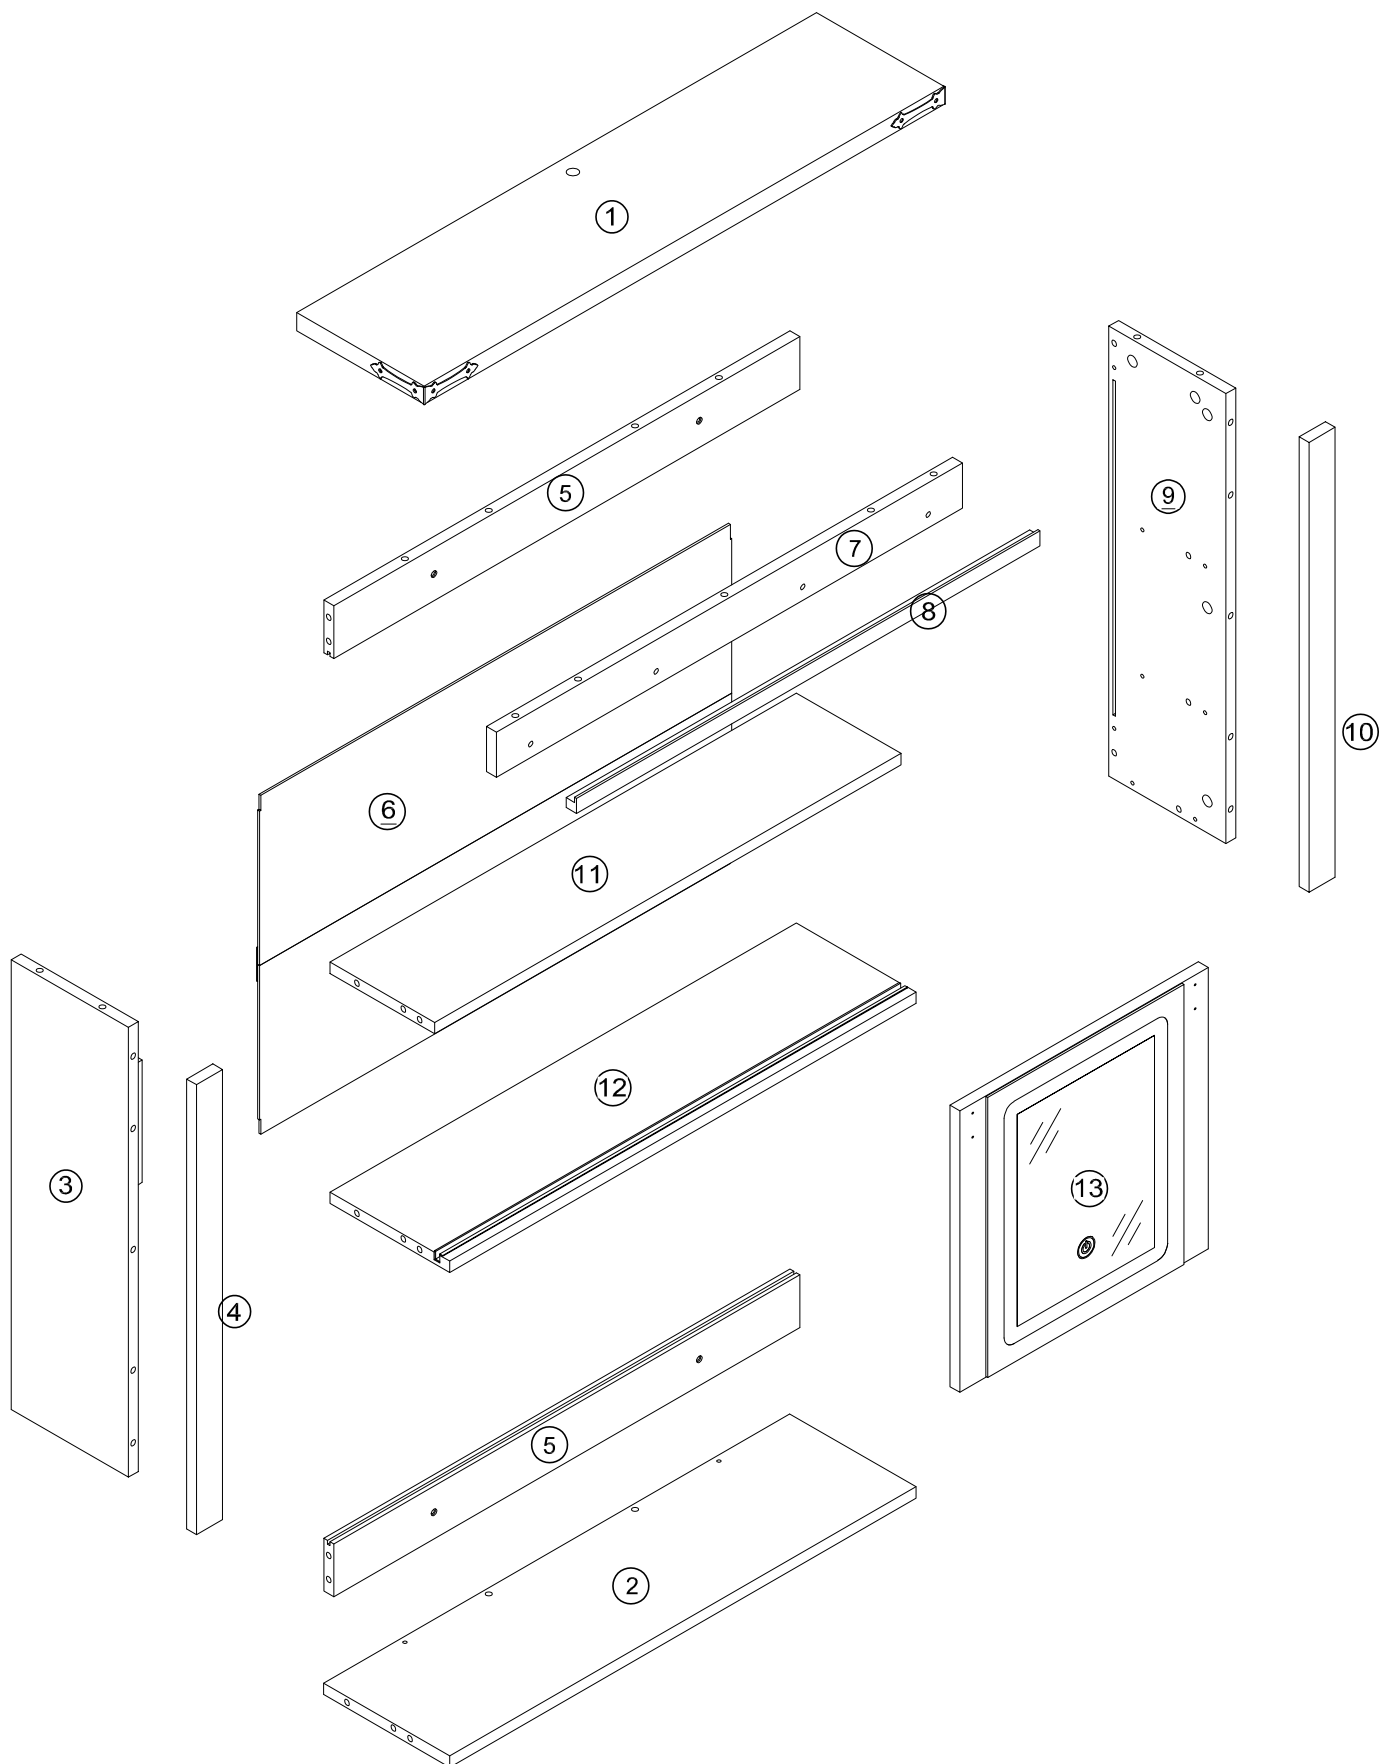








HARDWARE LIST

A		Ø6x35mm	Cam bolt	33 pcs
B		Ø15x11mm	Cam lock	33 pcs
C		Ø30mm	Cam cover	29 pcs
D		Ø8x30mm	Wooden dowel	20 pcs
E			Plastic wedge	8 pcs
F		Ø3x17mm	Flat-head screw	8 pcs
G		Ø4x57mm	Screw	4 pcs
H		Ø7x30mm	Wall anchor	4 pcs
I			Pulley	2 pcs
J			Plate	2 pcs
K		Ø6x25mm	Bolt	4 pcs
L		Ø4x15mm	Screw	8 pcs
M			Power adapter	1 pc
N		Ø13x1mm	Flat Washer	4 pcs

STEP 1



Ax33

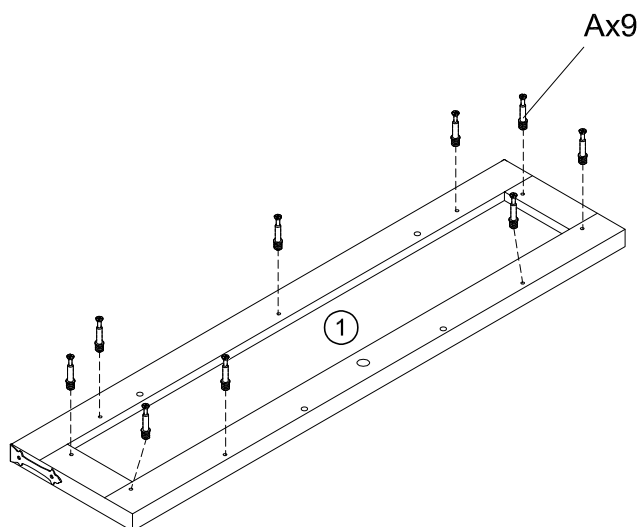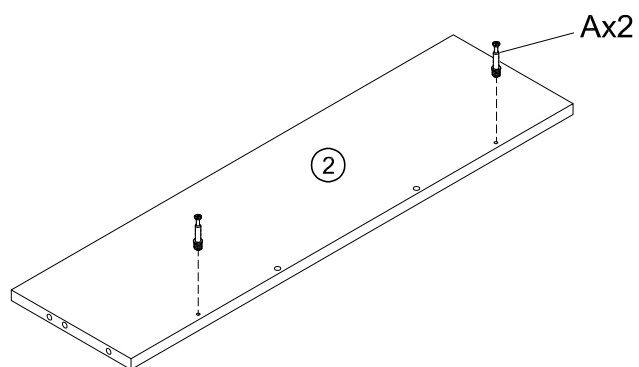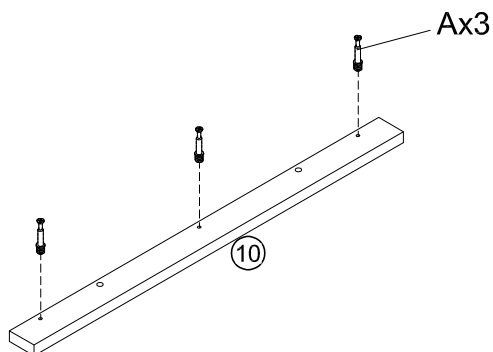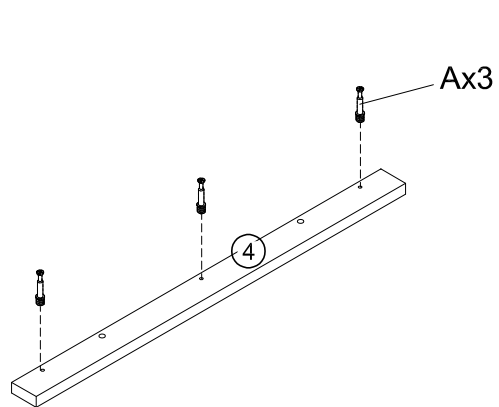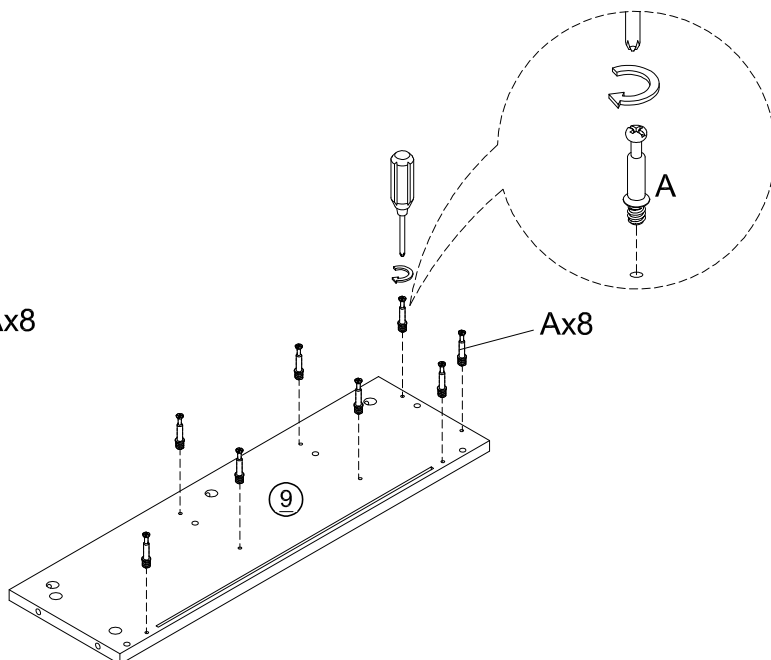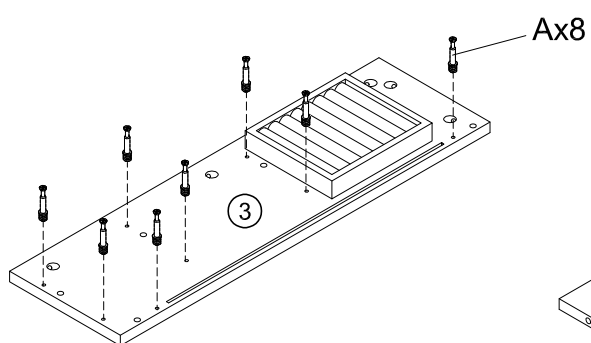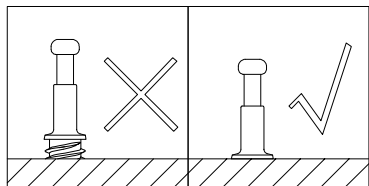



STEP 2



Dx4



Bx6

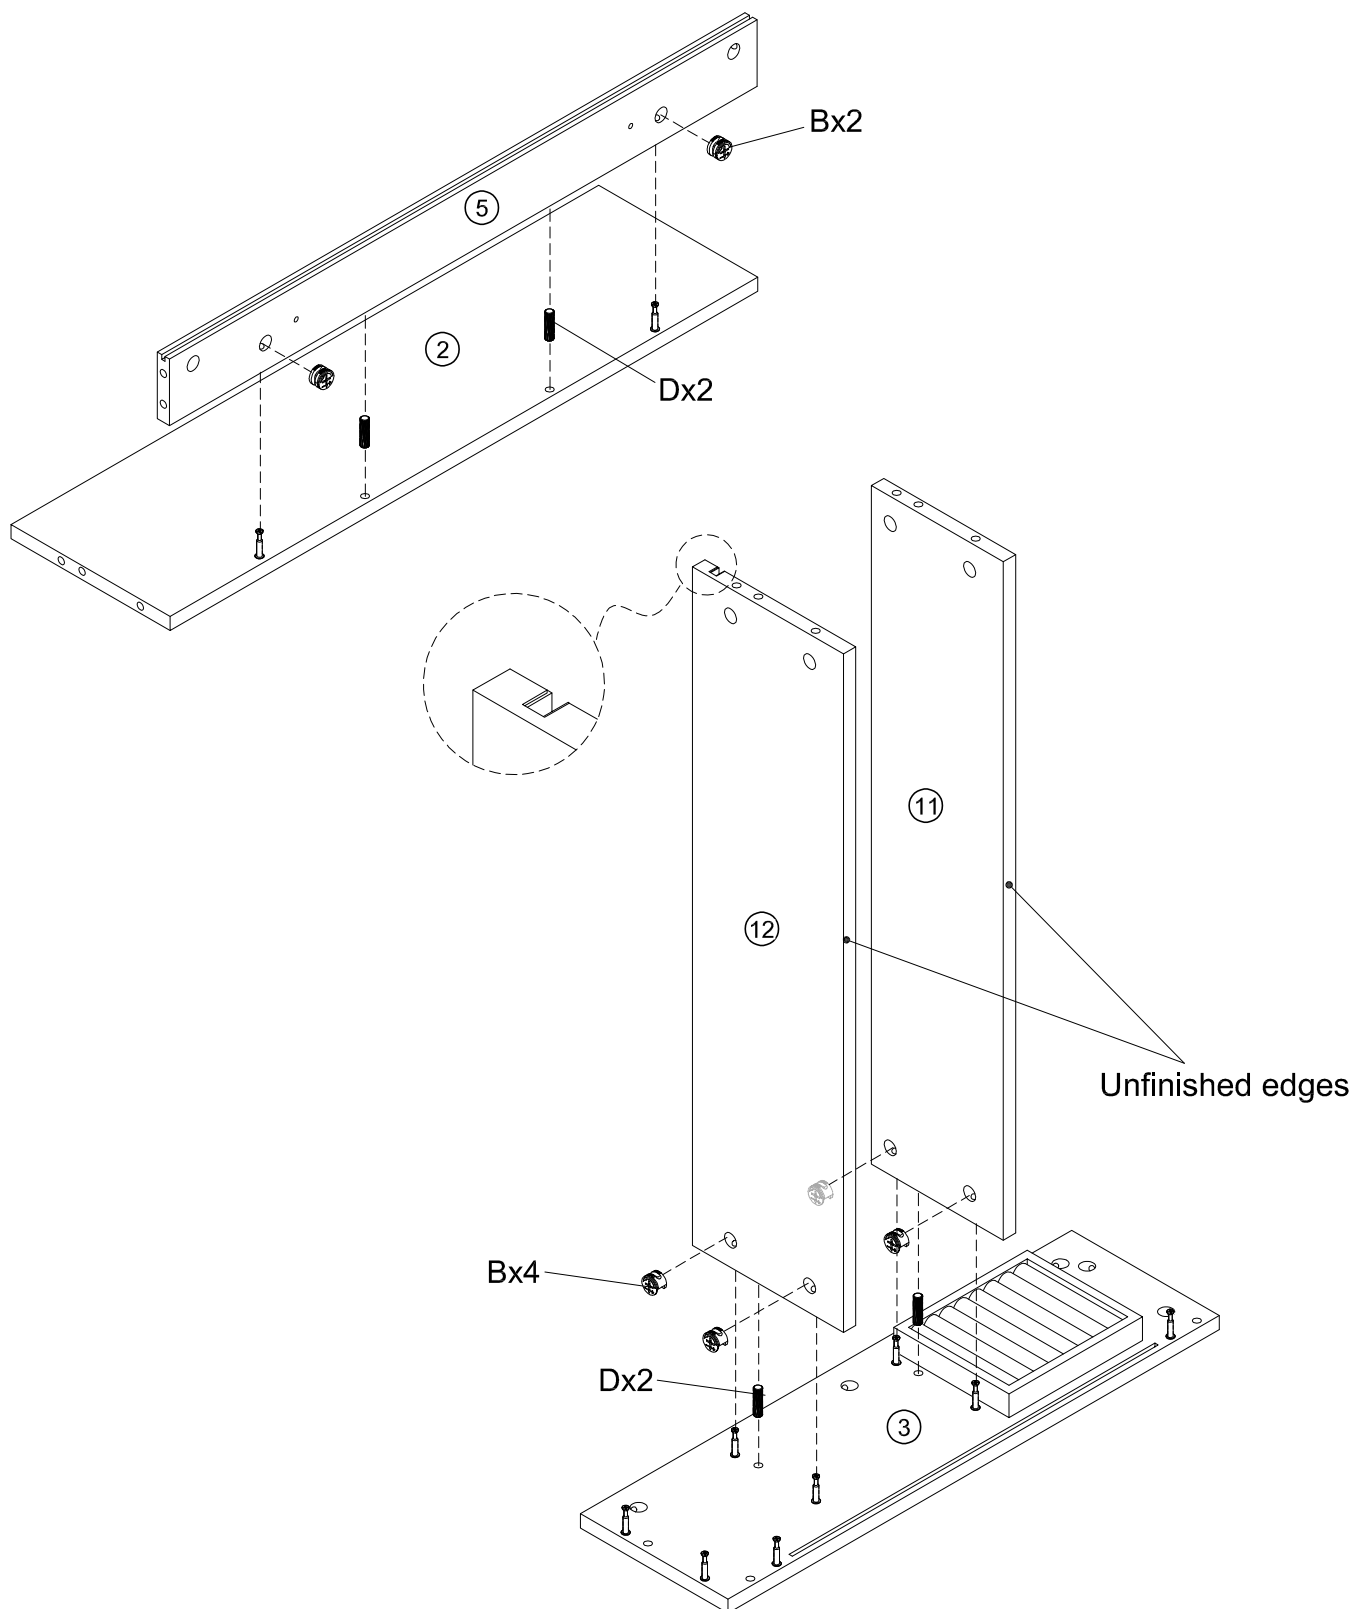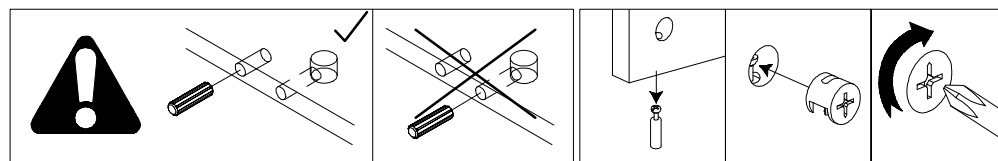



STEP 3



Bx4



Dx3

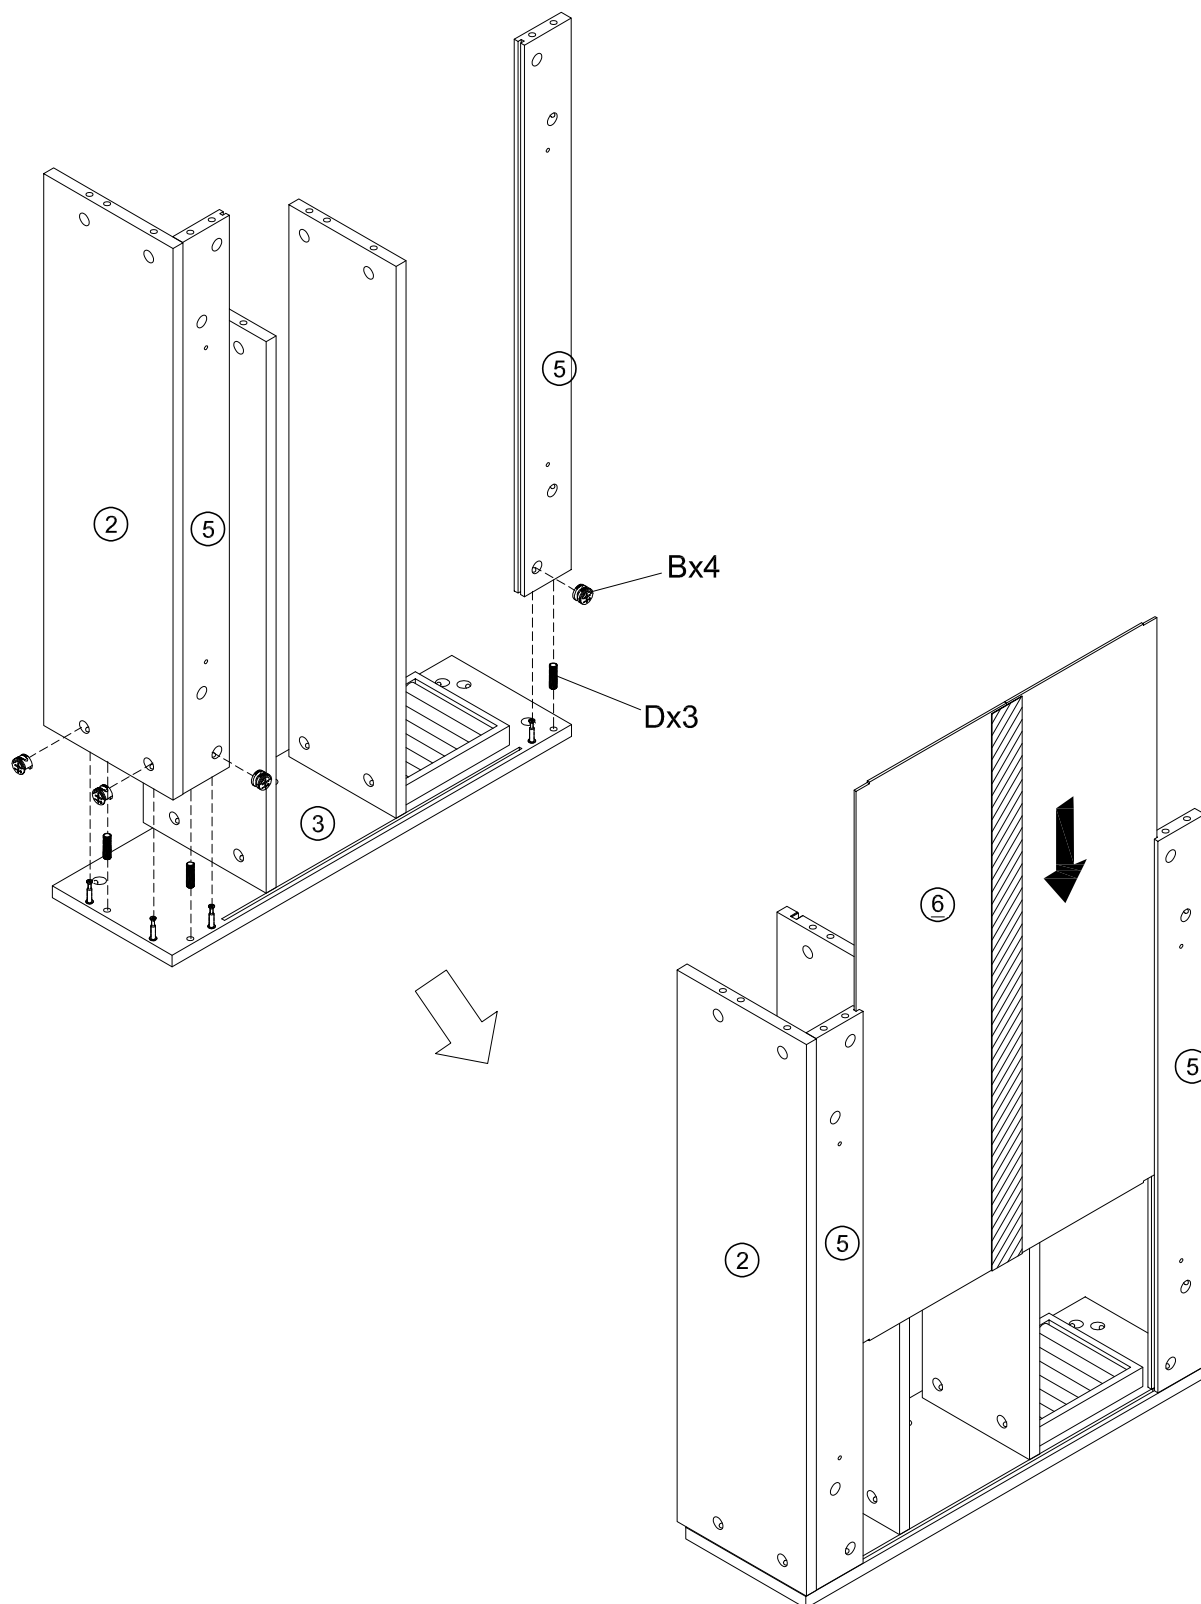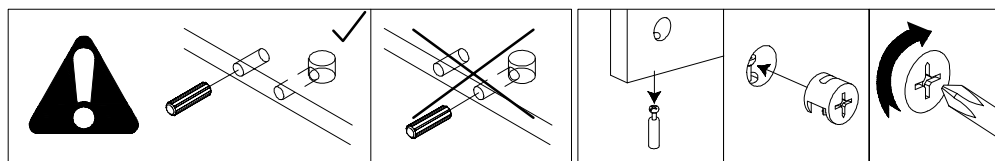


STEP 4





Dx9



Bx14

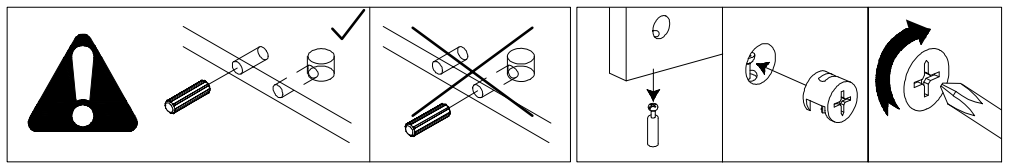

Finished edge

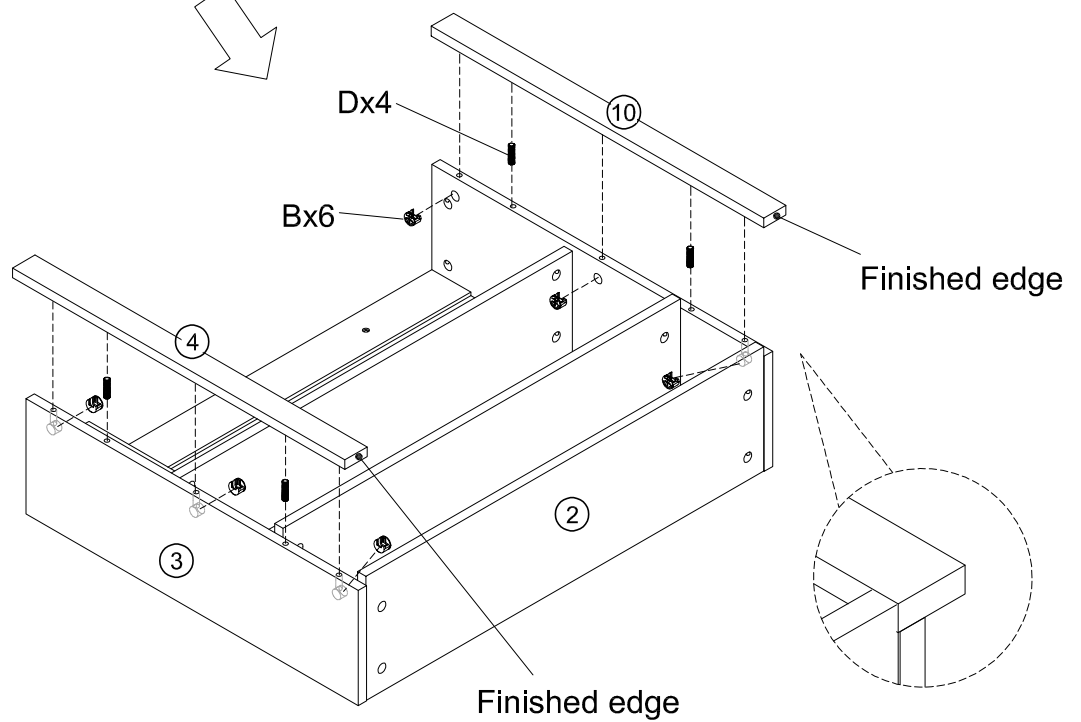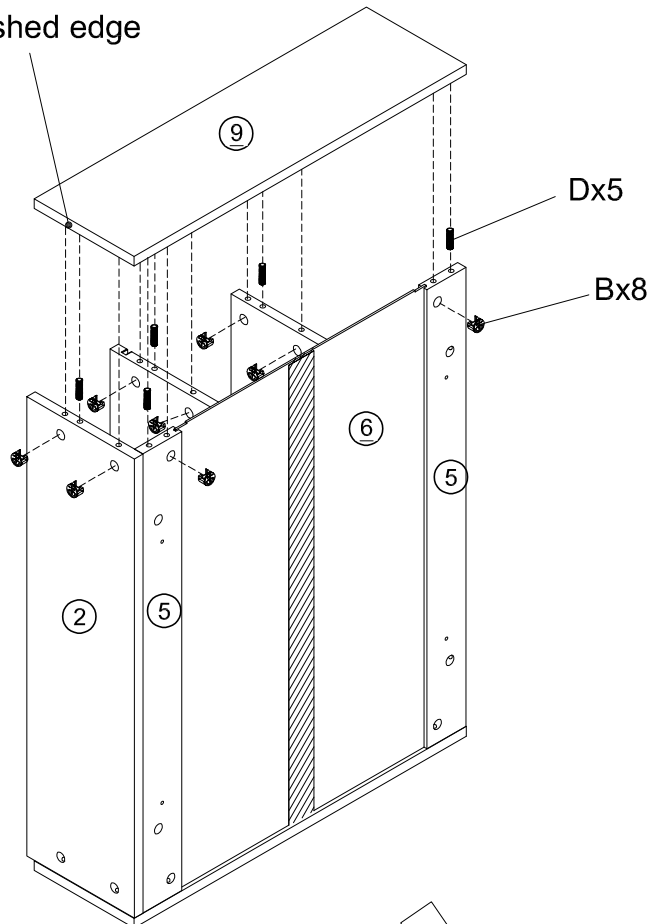

STEP 5





Dx2



Bx3



Kx4

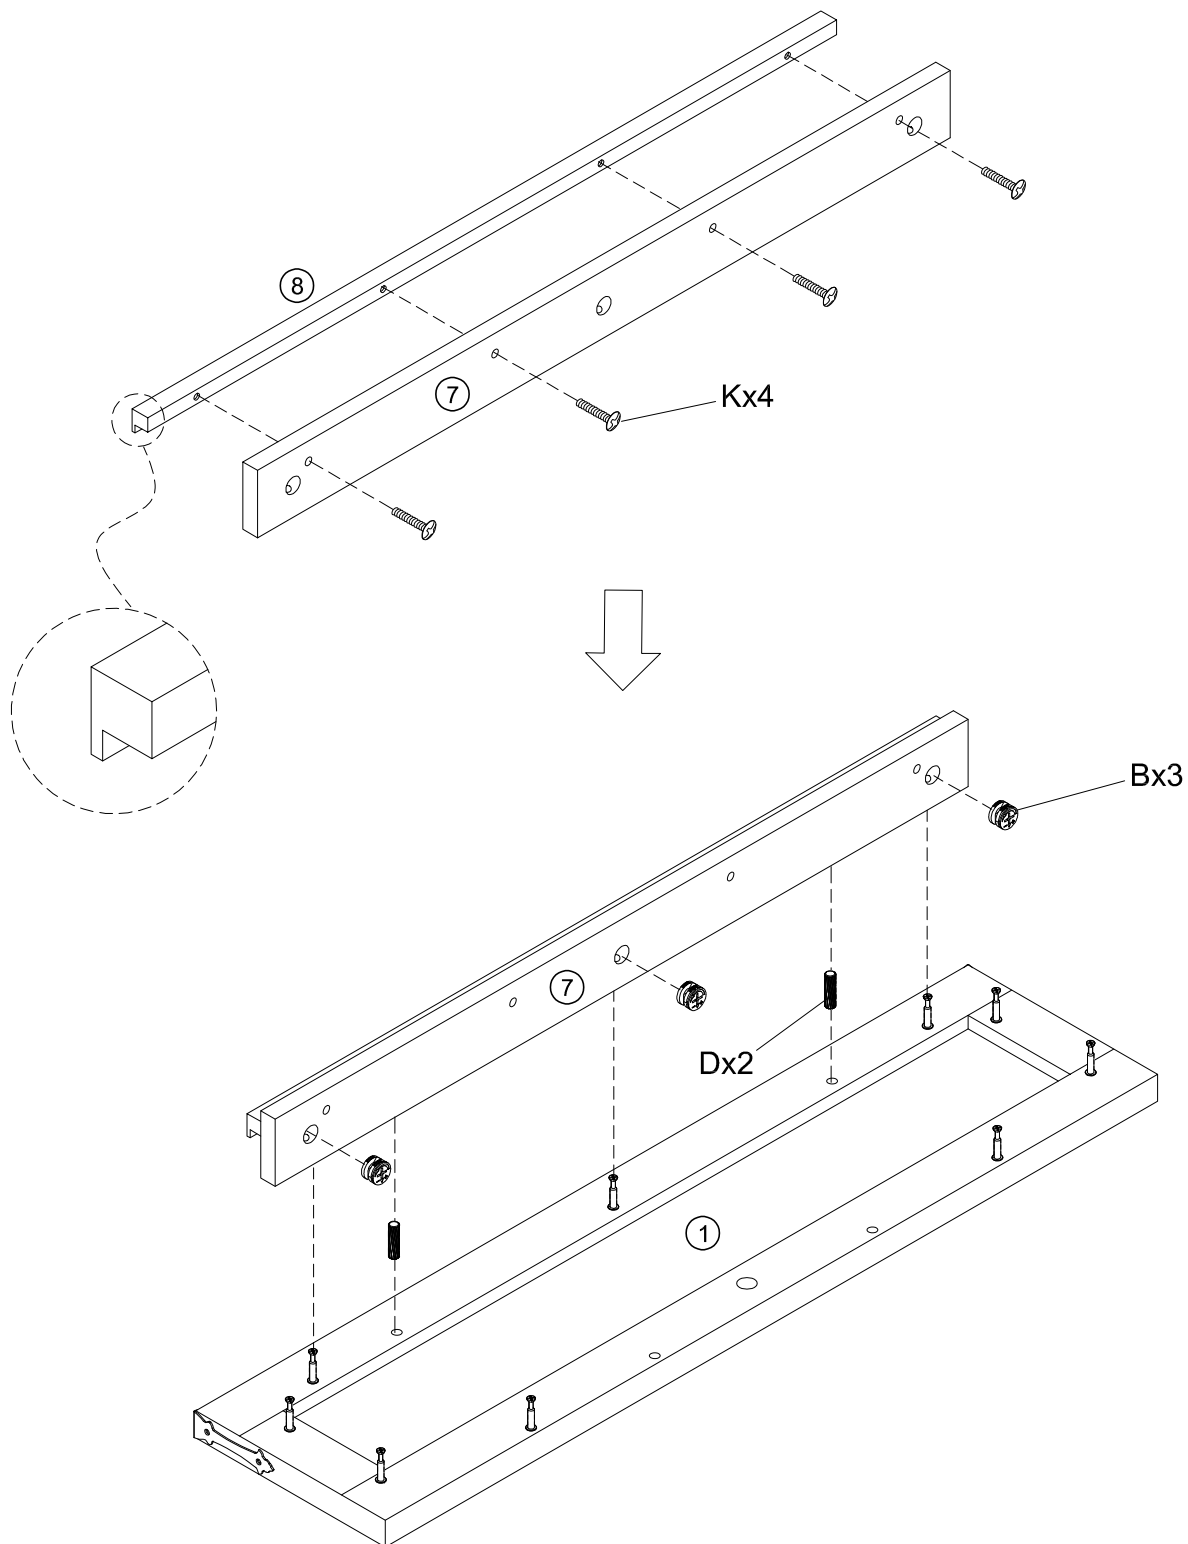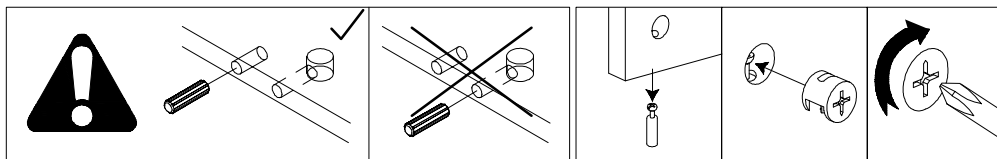

STEP 6



Dx2






Bx6



Ex8




Fx8

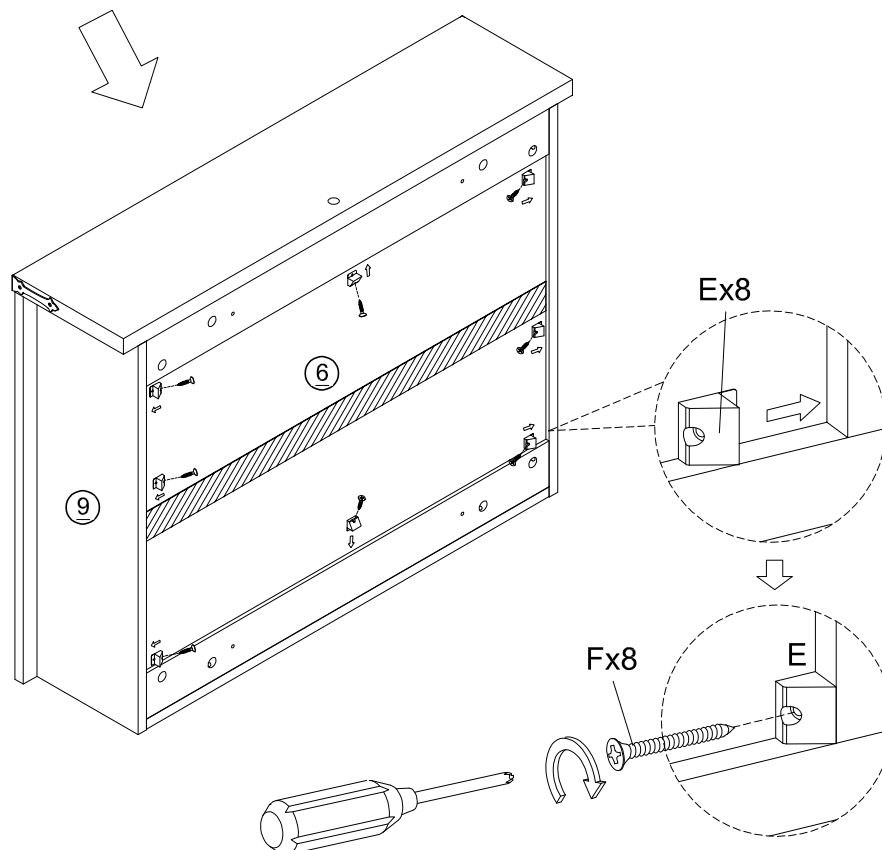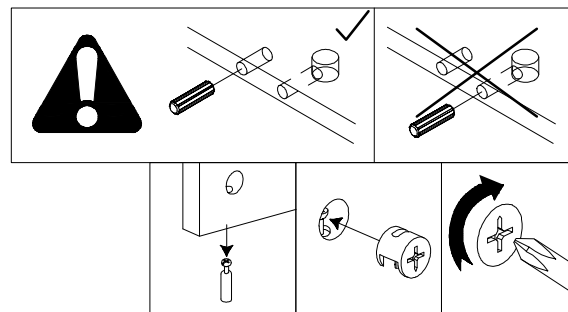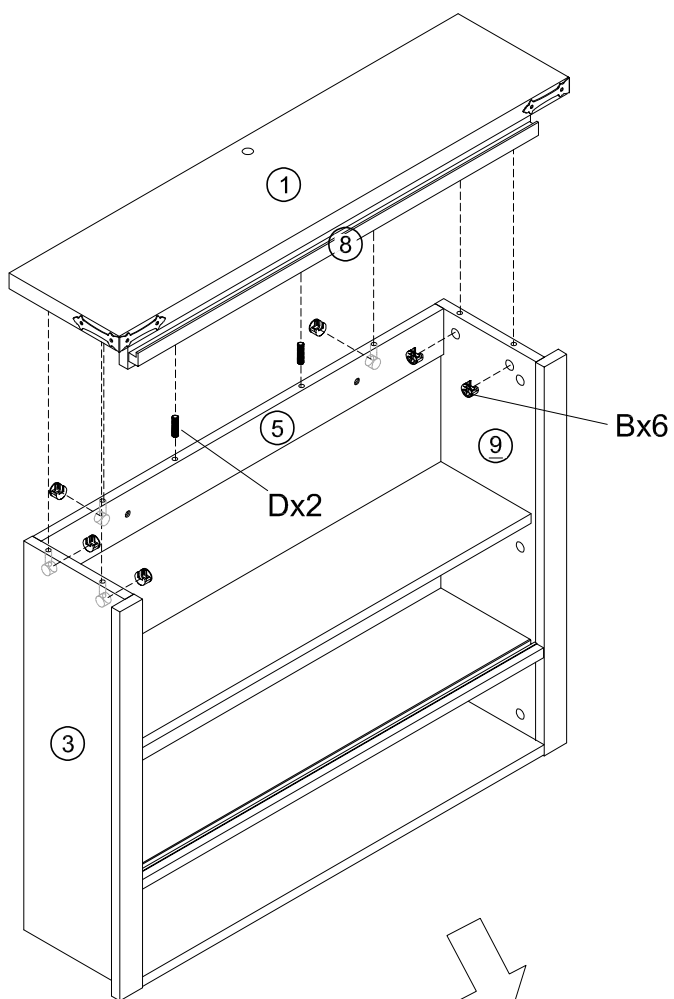


STEP 7

Please make sure hardware is suitable for your walls before installing, as different wall materials may require different types of anchors.

An assistance is required with this step.

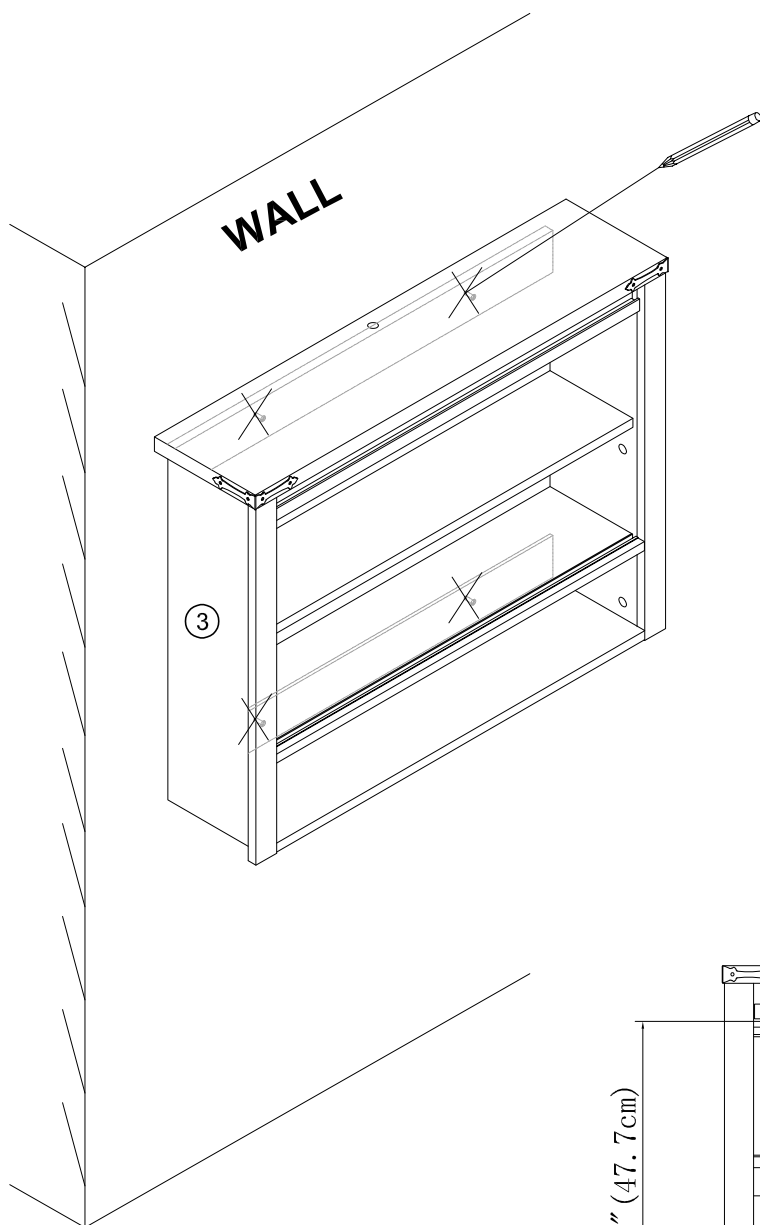

Mark the drill position on the wall with a pencil.

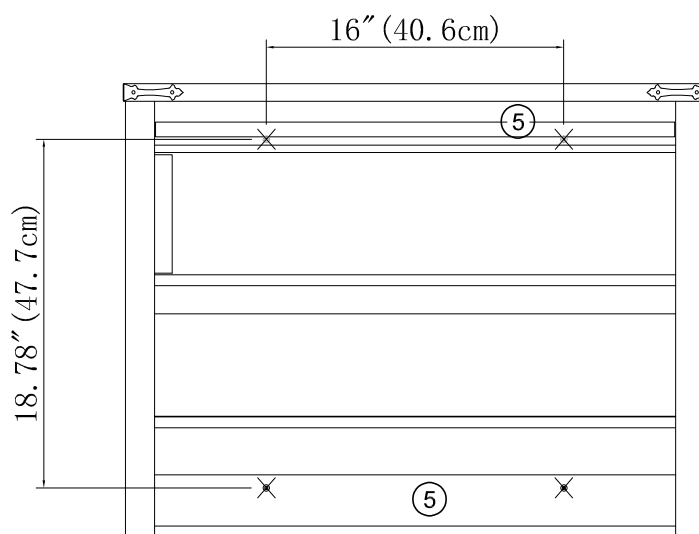


STEP 8




Hx4

Drill holes on the marked position using a bit, and then gently insert the wall anchor (H) into the drilled hole with the help of a hammer.

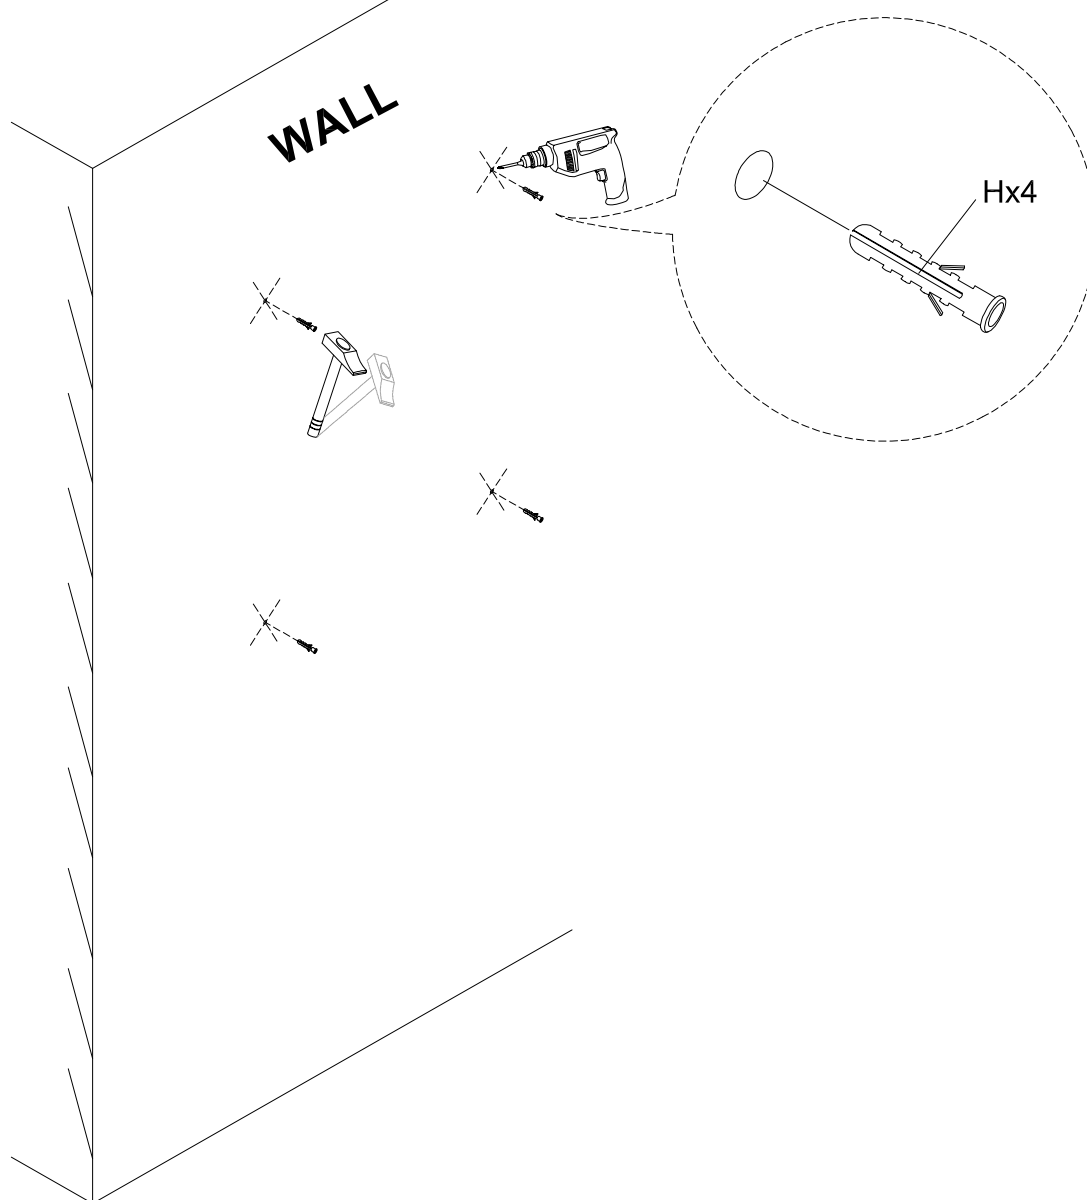

STEP 9




Gx4




Nx4

An assistance is required with this step.

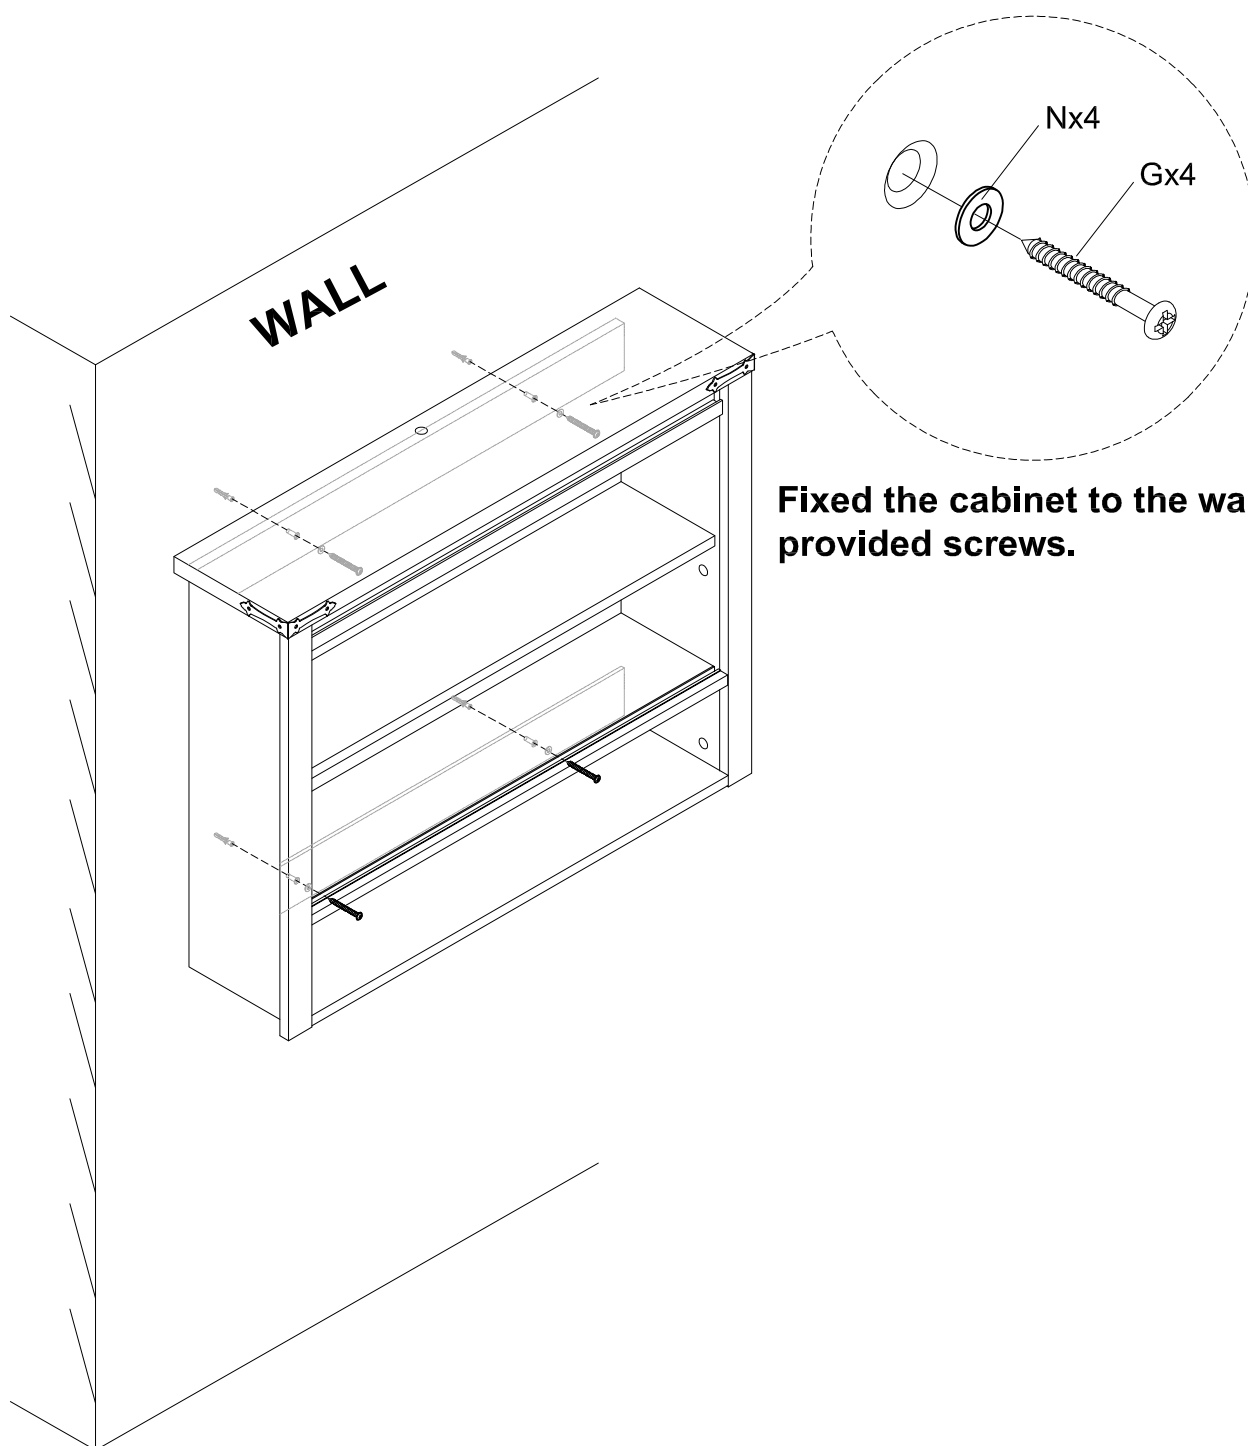


Fixed the cabinet to the wall with provided screws.

STEP 10



Ix2





Jx2




Lx8



Put the mirror panel on the carpet

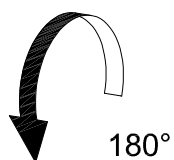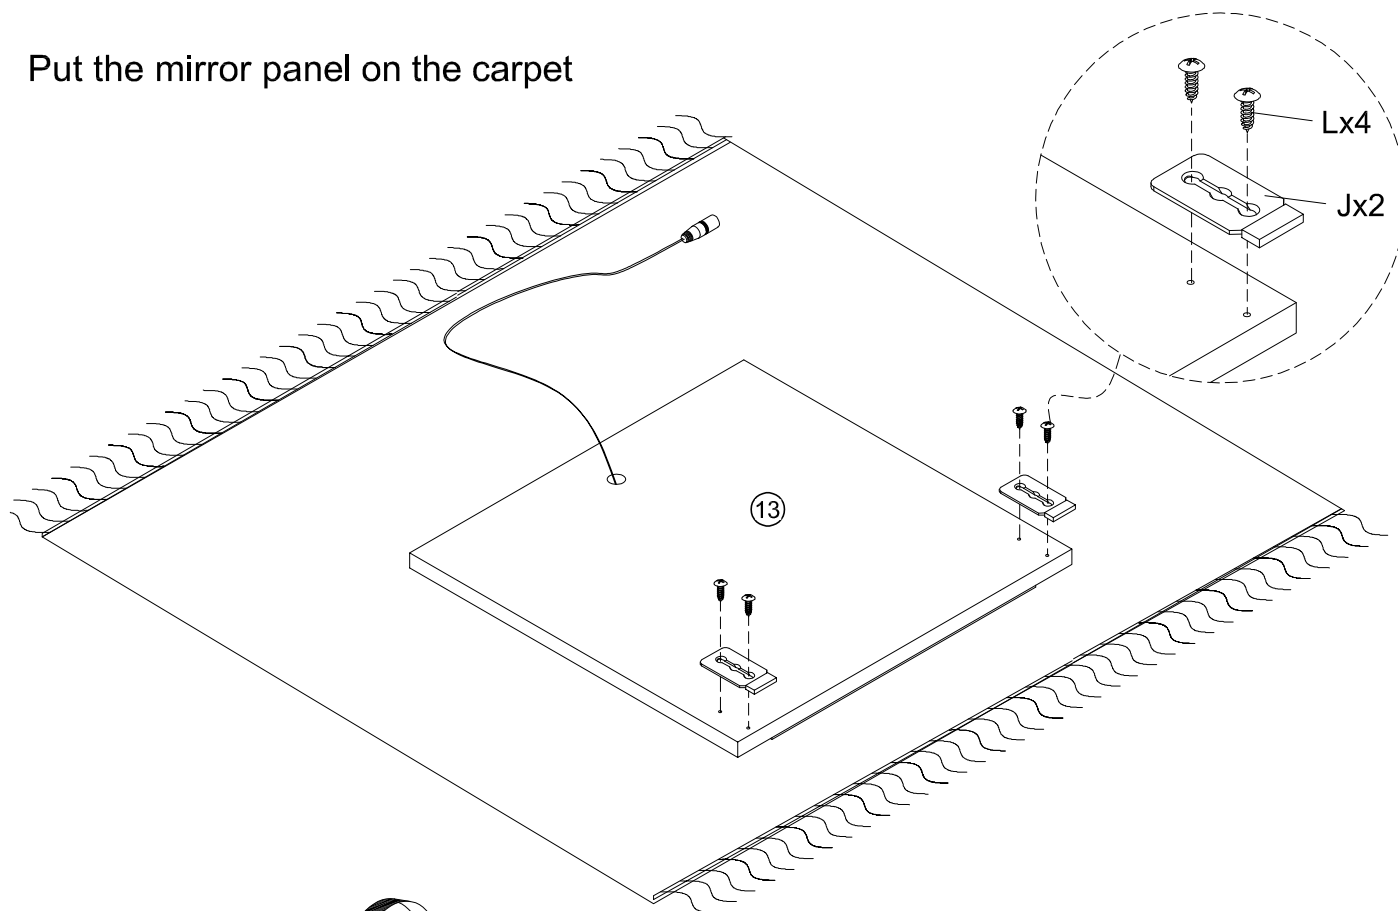

180°

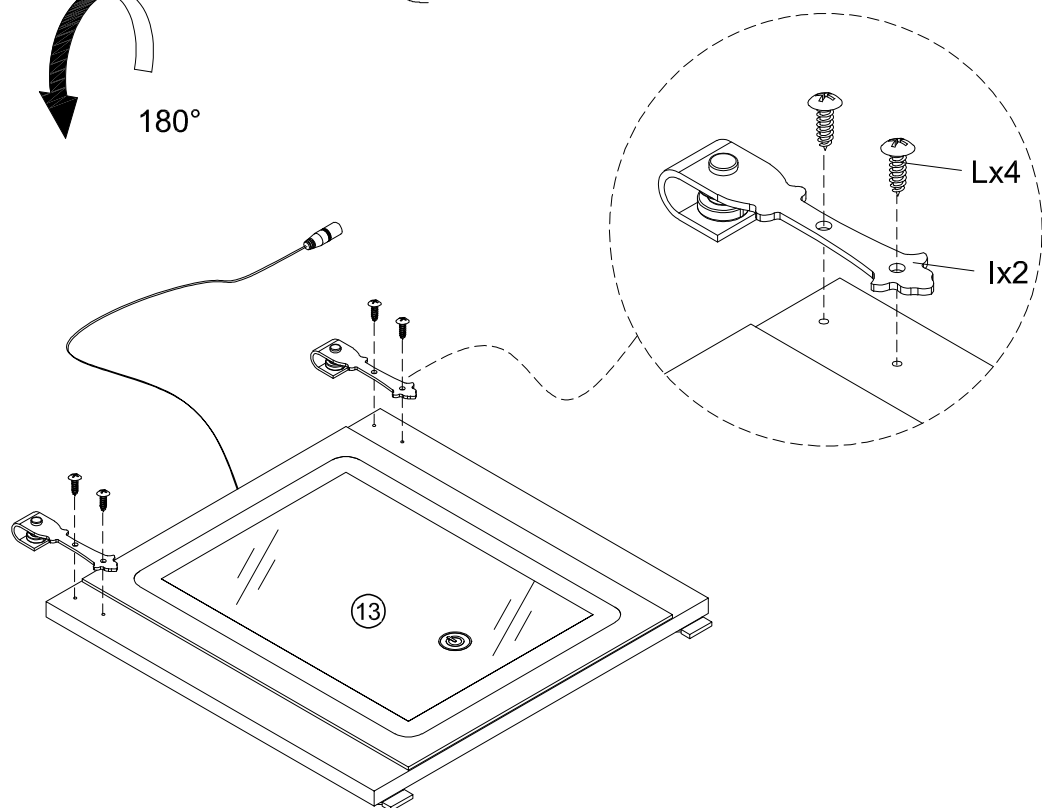





STEP 11

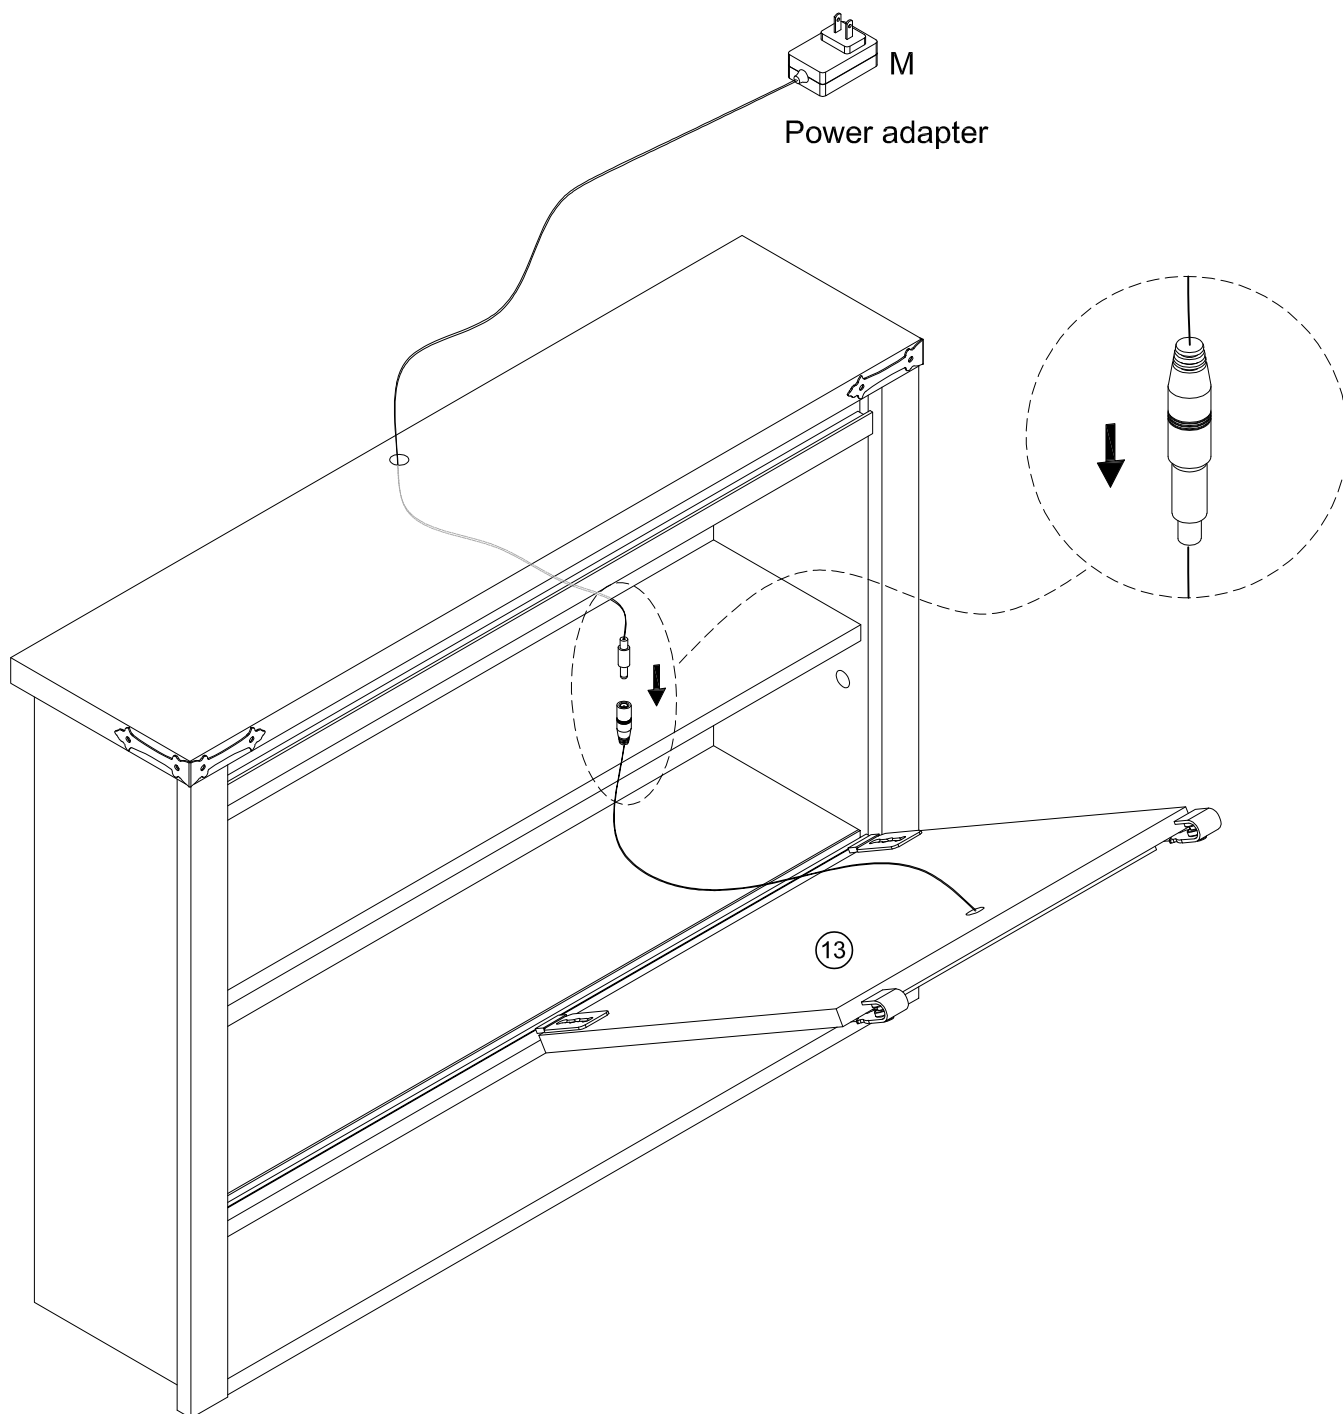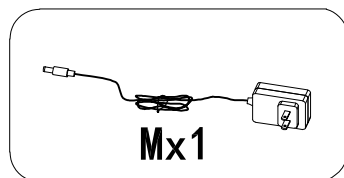

STEP 12

Cx29

Attach bottom of doors to the sliding slot then close the doors to the sliding track. Slightly uplift the doors and hook pulley to the sliding track.

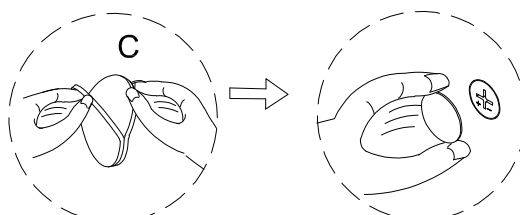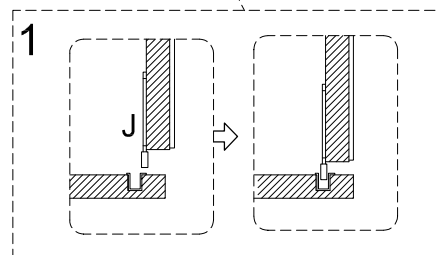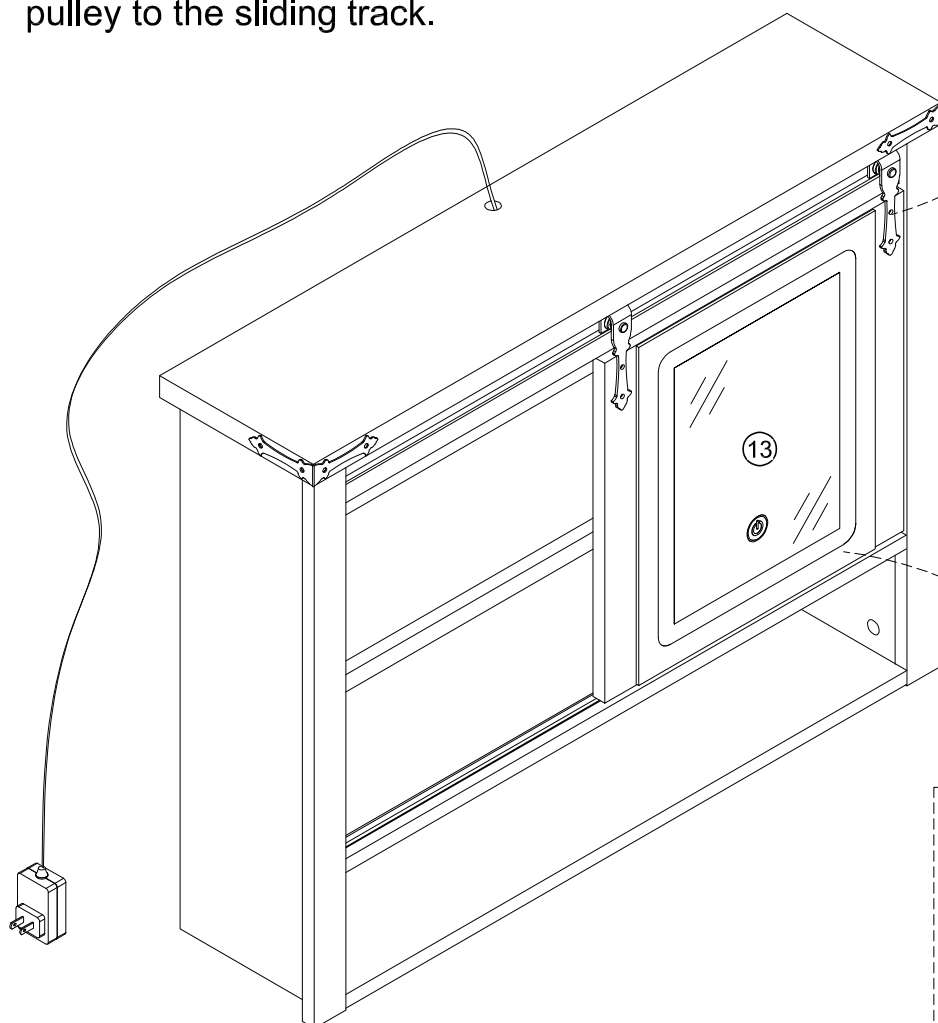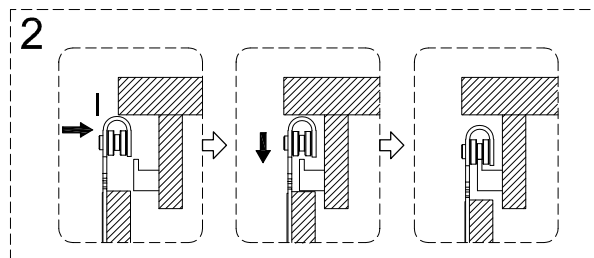

· Stick stickers (C) on cam locks (B) .

Final Assembly