


# ASSEMBLY INSTRUCTIONS










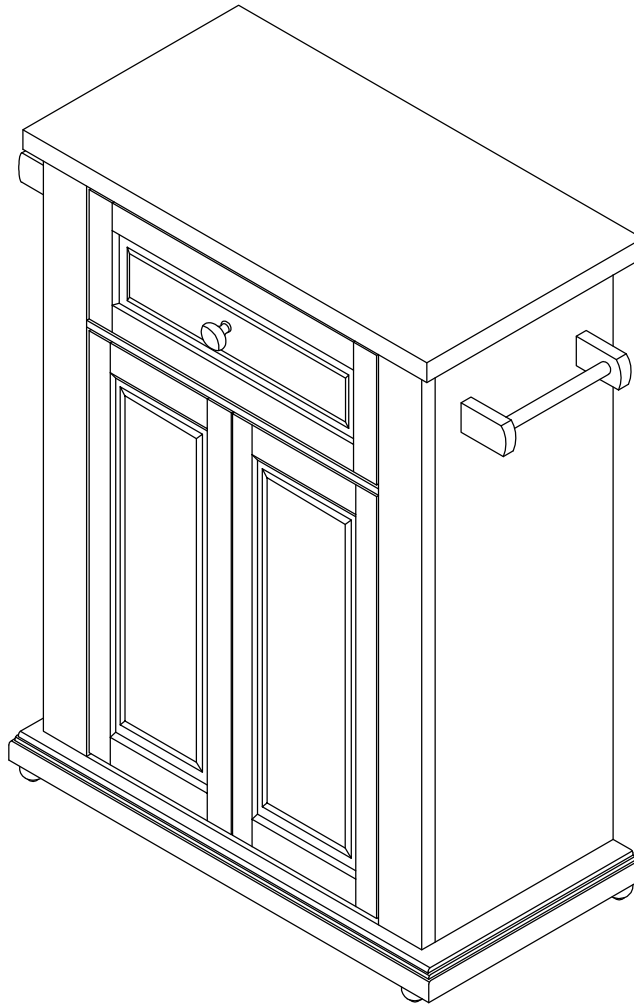







## Kitchen Island








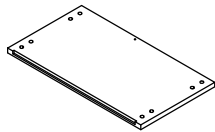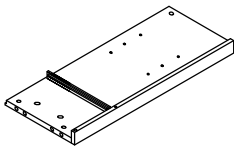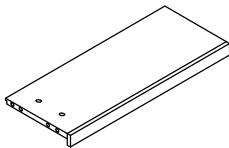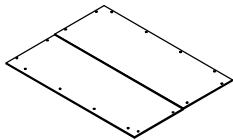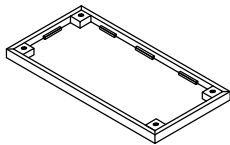




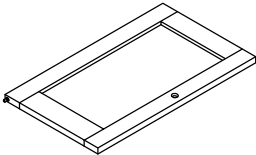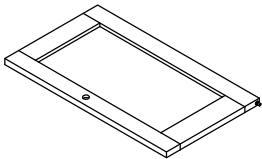


### NOTE TO CUSTOMERS:

- For ease and speed of assembly we recommend that before you commence each step of the assembly that you identify all the parts required to complete that step.
- We recommend that where possible you allow sufficient space to assemble the item as close as possible to the place where it will be once assembled.
- For the protection of your furniture we recommend that the product is placed on protected surfaces during assembly to prevent any damage.
- During assembly do not to over tighten, as this may damage the product.
- Please ensure you retain all the product packaging until the item completely assembled.
- Please periodically check all fittings and re-tighten as necessary.
- Please never allow any liquids to remain on your furniture as absorption can cause the wood to warp or finish to de-laminate.
- It is recommended that this item should be assembled by two adults.

## Part list :

		
1. Top Panel Qty: 1	2. Left Side Frame Qty: 1	3. Right Side Frame Qty: 1
		
4. Back Panel Qty: 1	5. Top Support Bar Qty: 1	6. Middle Support Bar Qty: 1
		
7. Bottom Panel Qty: 1	8. Drawer Front Panel Qty: 1	9. Drawer Side Panel Qty:2
		
10. Drawer Bottom Panel Qty: 1	11. Drawer Back Panel Qty: 1	12. Left Door Qty: 1
		
13. Right Door Qty: 1	14. Adjustable Shelf Qty: 1	15. Leg Qty: 4
		
16. Bar Qty: 4	17. Towel Bar Qty:2	

## Hardware list :

						
A. Camlock Qty: 8	B. Wood Dowel Qty: 20	C. Magnet with screw Qty: 1	D. Stopper with screw Qty: 1	E. Bolt Qty: 8	F. Long screws Qty: 2	G. Back Panel Screw Qty: 16
						
H. Short screws Qty: 8	I. Knob & Bolt Qty: 3	J.Shelf Support Qty: 4	K. Pin Qty: 4	L. Nut Qty: 4	M. Allen Wrench Qty: 1	





## Note:

- Read these instructions carefully before assembling.
- Tools required : Phillips screwdriver, flat screwdriver.
- Find a clean, smooth area on which to work , such as a carpet, in order to avoid scratching the wood surfaces.
- Wait to dispose of the packing material until assembly is complete and all parts and hardware are accounted for.
- Two or more people might be required for assembly.

## To use Dowels:

1. Add glue (about  $\frac{1}{4}$  full ) in the hole(s) of each board to be joined.
2. Insert the Dowel(s) and join boards.
3. Wipe excess glue with a damp paper towel.

## To use Cam Locks:

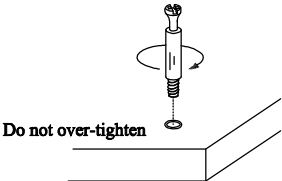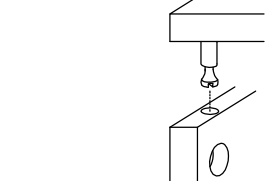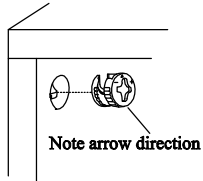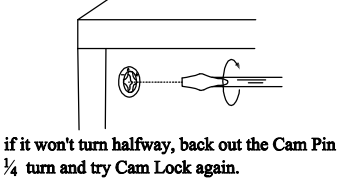
<p>1. Insert Cam Pin until snug</p> 	<p>2. Set boards together</p> 	<p>3. Insert Cam Lock</p> 	<p>4. Turn Cam Lock clockwise (half a turn)</p> 
--	---	--	---

## Assembly instructions

Step 1: Assemble the stopper (D) to top bar (5) using included screw;


Step 2: Assemble the magnet (C) to the middle bar (6) using included screws;

Step 3: Assemble the top bar (5) & middle bar (6) to the side panels (2)&(3) using camlocks (A) and wood dowels ( B ).

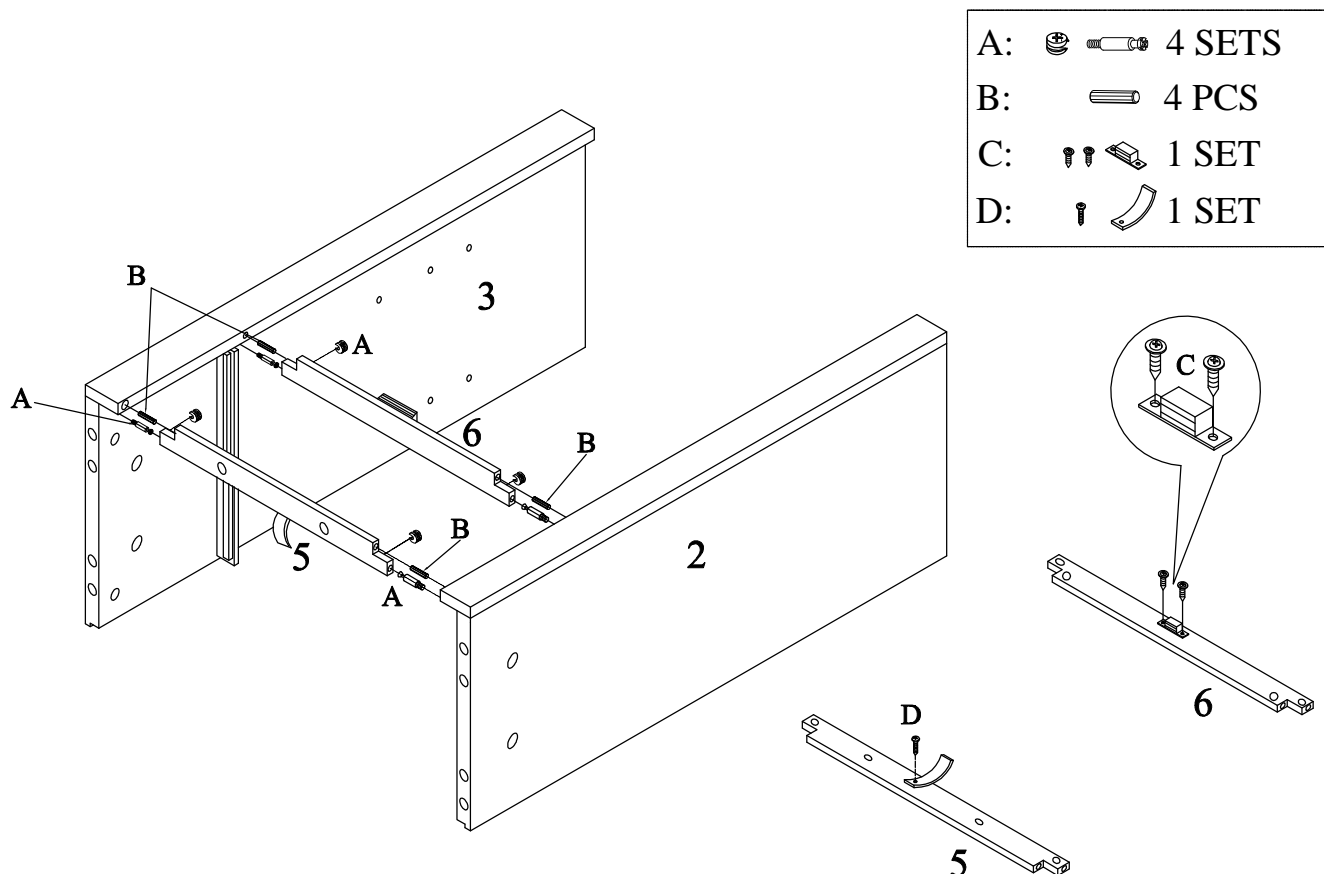


Step 4: Assemble the legs( 15) to the bottom of bottom panel (7).

Step 5: Assemble the bottom panel (7) to the side panels (2) &(3) using wood dowels (B) & bolts (E) with nut (L) as below drawing shown.

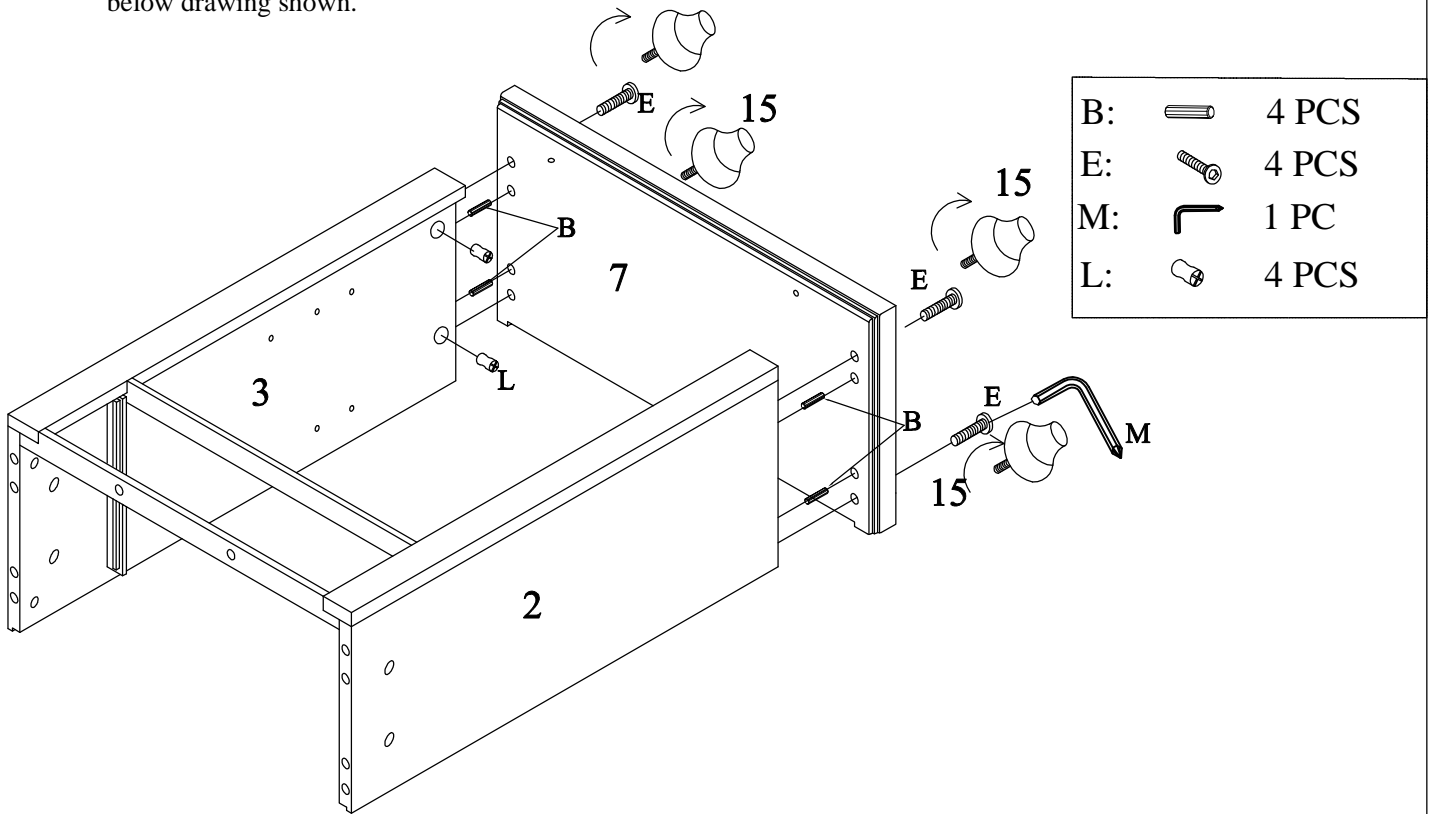


Step 6: Insert the towel bar (17) into two bars(16), then assemble this whole part to the side panel( 2) using bolts (E) and wood dowels (B).

Step 7: Repeat Step 6 to assemble another towel bar (17) & another two bars(16) to side panel (3).

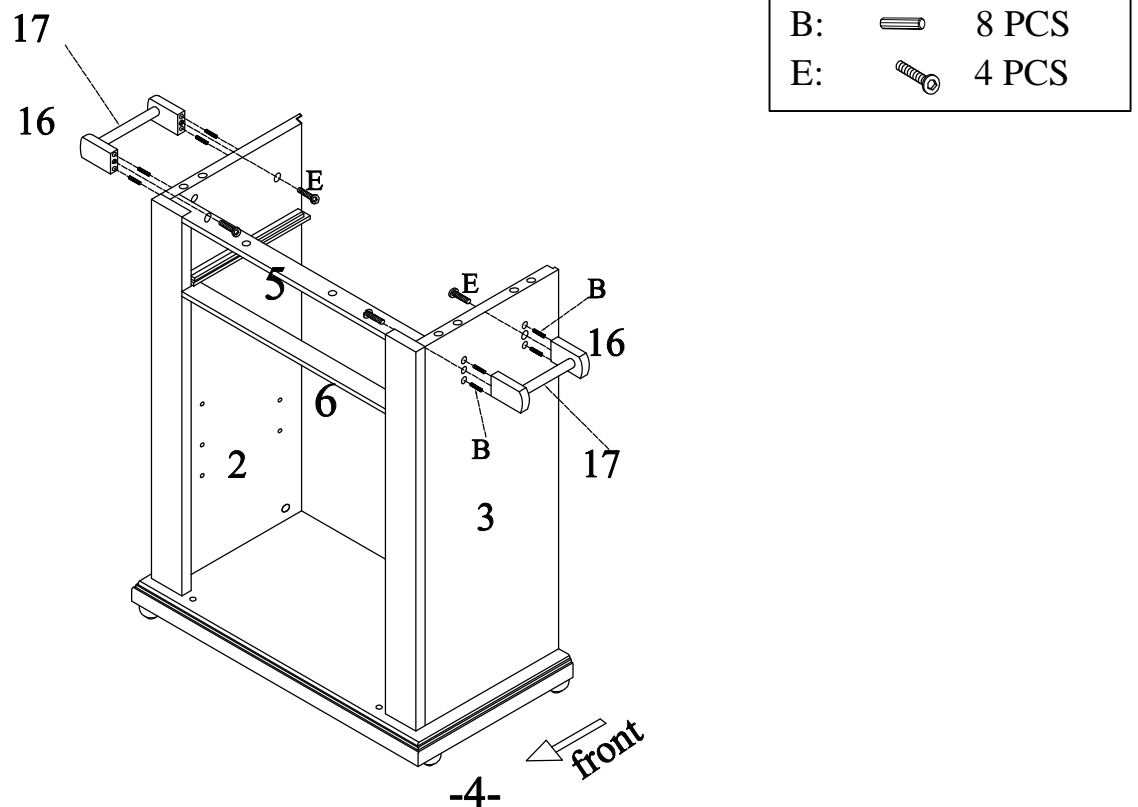


Step 8: Insert the wood dowels (B) into the bottom of top panel (1) and tighten the cam bolts(A),refer Fig.1. Then assemble the top panel (1) to side panels (2)&(3) using assembled wood dowels(B) and camlocks(A).

Step 9: Finally tighten top panel (1) to the top support Bar(5) using screws (F).

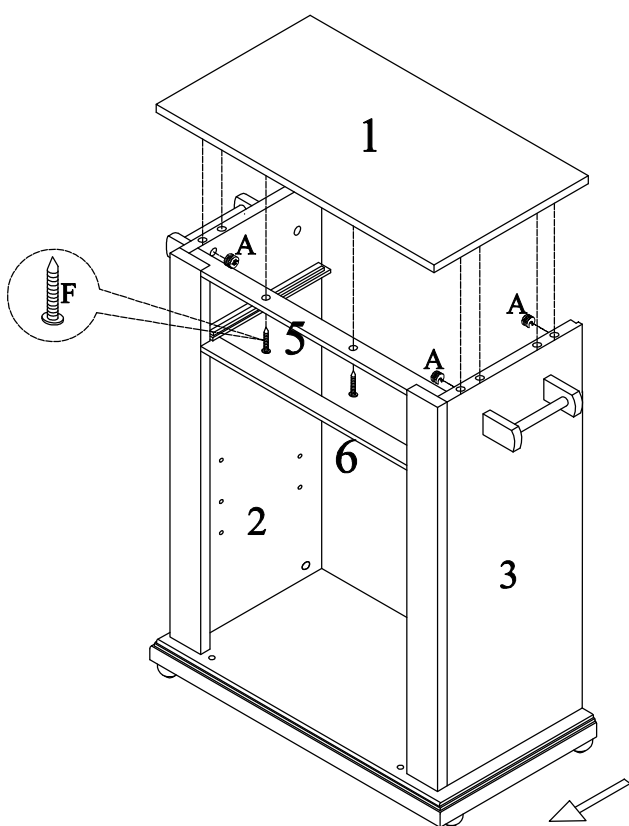


- |    |  |        |
|----|--|--------|
| A: |  | 4 SETS |
| B: |  | 4 PCS  |
| F: |  | 2 PCS  |
| M: |  | 1 PC   |

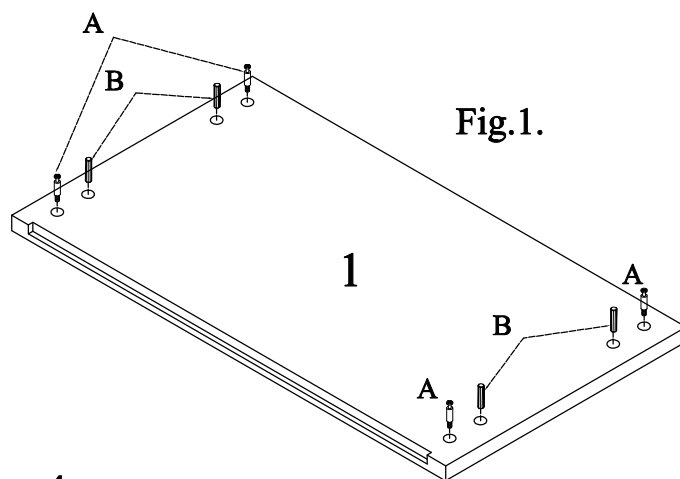

-4-

Step 10: Assemble the back panels(4) to side panels(2)&(3) and top panel (1),bottom panel(7) using screws (G).

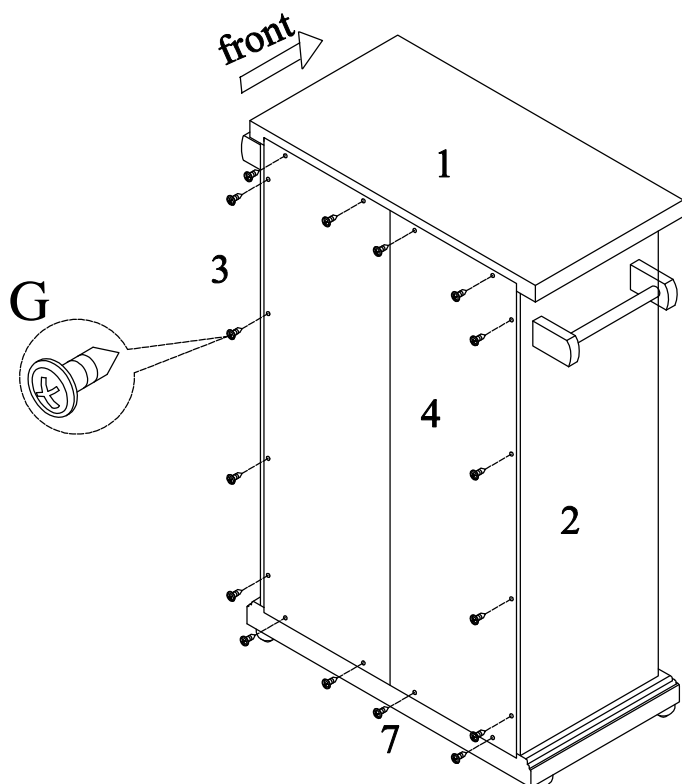

- |    |  |        |
|----|--|--------|
| G: |  | 16 PCS |
|----|--|--------|

-5-

Step 11: Assemble the drawer side panels (9) to drawer back panel (11) using screws (H).


Step 12: Insert the drawer bottom panel (10) into grooves on drawer side panels(9) and drawer back panel (11).

Step 13: Assemble the drawer front panel (8) to drawer side panels (9) using screws (H);


Step 14: Attach the knob (I) to the drawer front panel(8) with included bolt.

H:  8 PCS


I:  1 SET

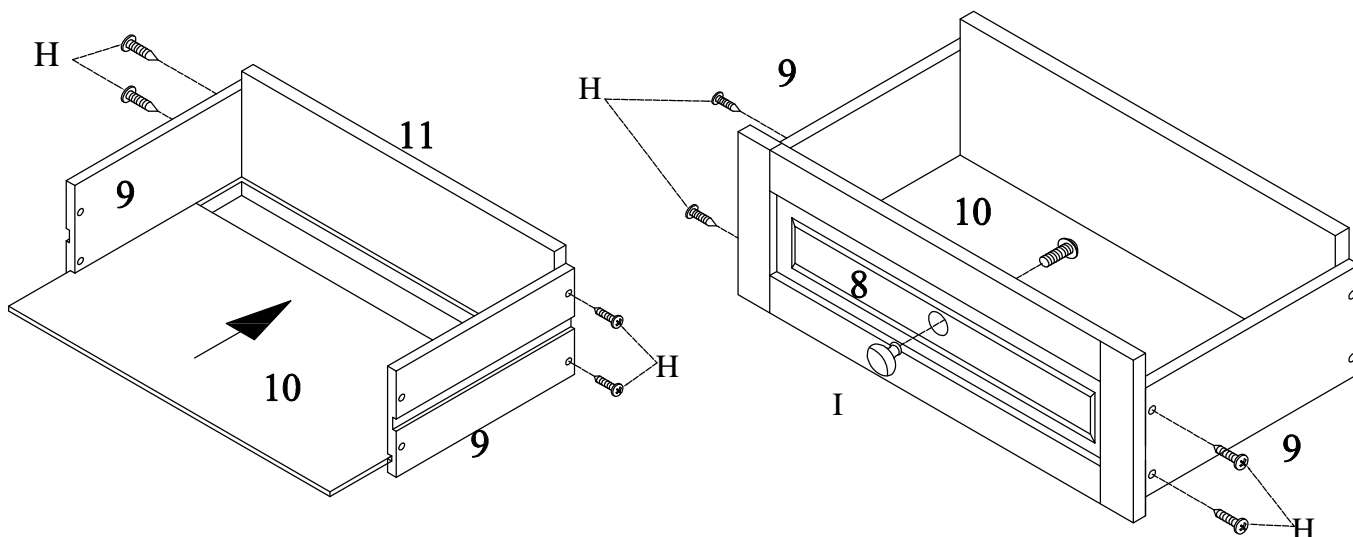

Step 15: Insert the drawer in as below drawing shown.

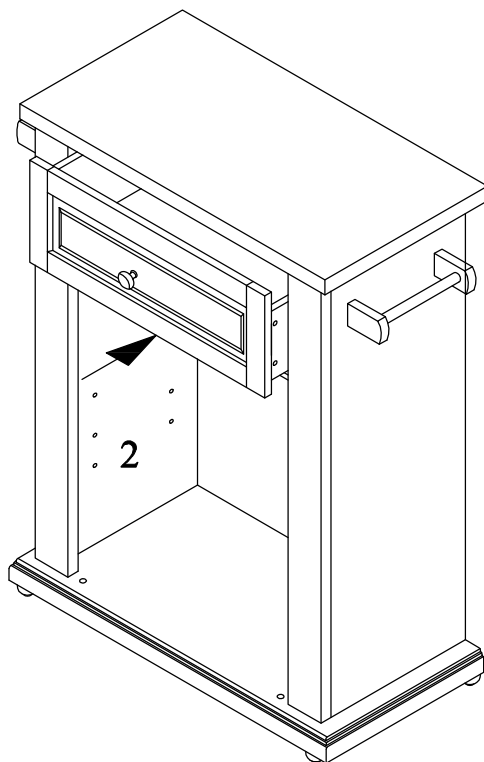

Step 16: Put the shelf supports (J) into the side frames (2)&(3) , then put the adjustable shelf (14) onto the shelf supports (J).

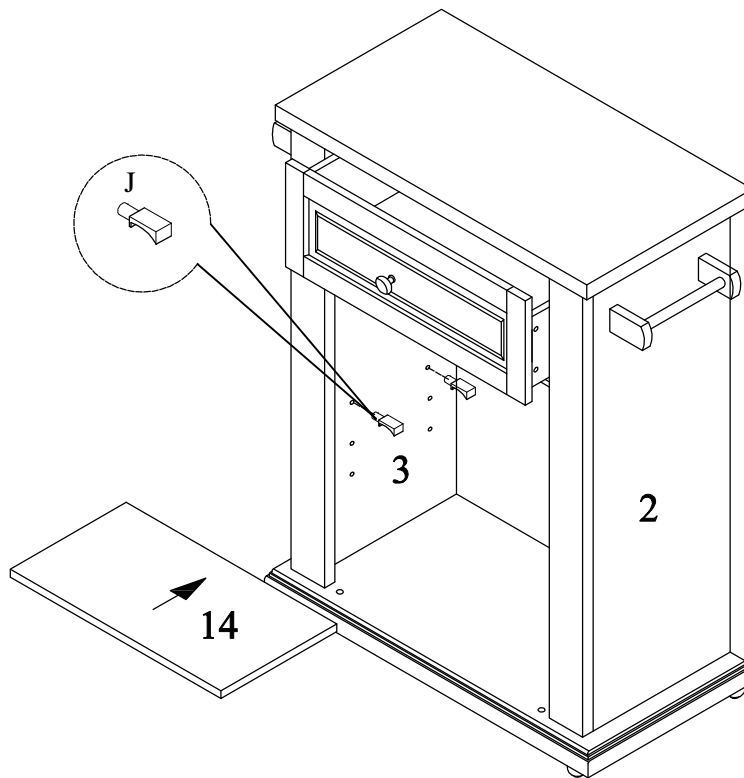


J:  4 PCS

Step 17: Insert the pin (K) into the hole on the bottom of door panel (13), Then connect the door panel (13) to the unit bottom panel (7) as below Fig.2. Insert the upper pin (K) into to hole on the top of door panel(13), then press down the upper pin(K) see Fig.3. and hold the door panel carefully into the cabinet with the upper pin popping up into the hole of top support bar (6).

Step 18: Repeat the above steps to assemble another door panel (12).

Step 19: Assemble the door knobs(I) to door panels (12)&(13) with included bolts.

I:  2 SETS

K:  4 SETS

