

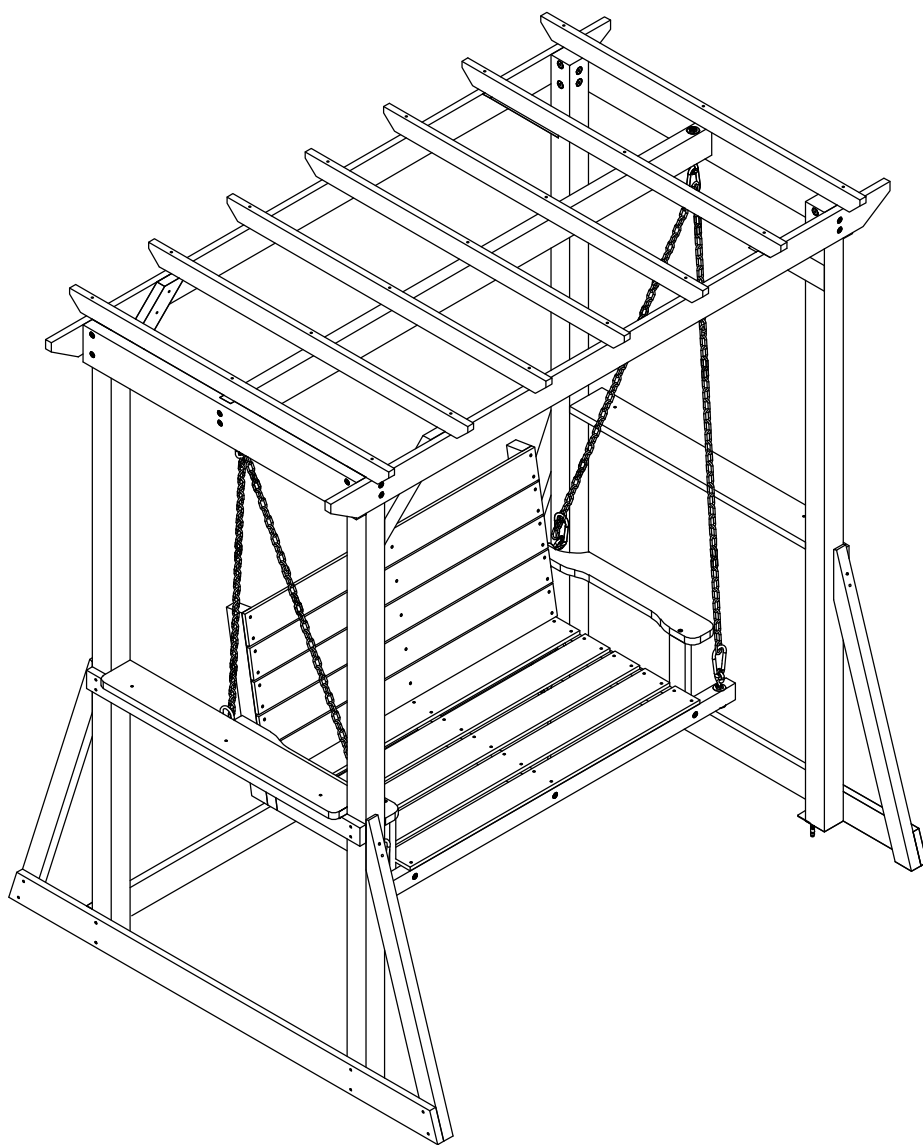
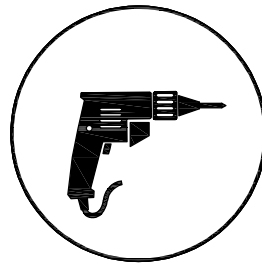
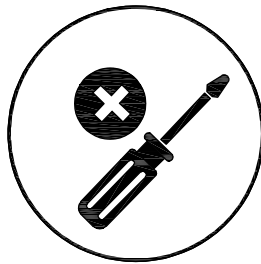
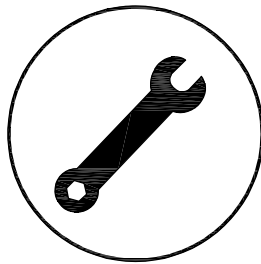
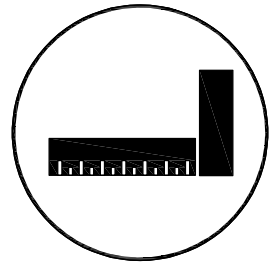
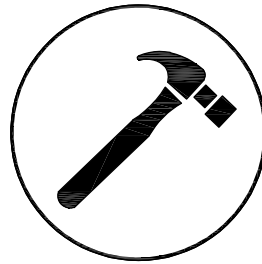
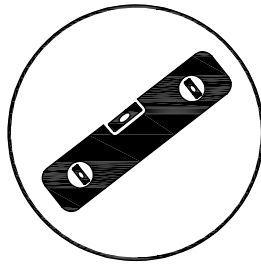


INSTALLATION

Product Manual

Version: 510026US-00-25A-HB

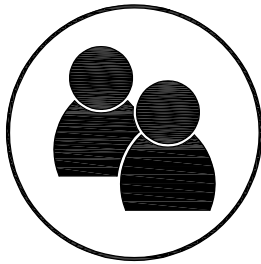




Icons and their uses you will see throughout this manual



You will need to make sure that your assembly is square before tightening your bolts.

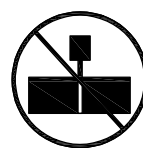


This icon warns you to not over tighten your bolts. This is to prevent structural damage and also splintering your wood.



For proper assembly you will need to ensure that your structure is level before proceeding to the next step.




This icon will show you what drill attachments are needed. For this example you will need a Phillips head attachment .

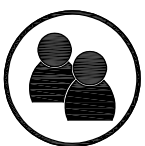

Some steps in the assembly process will require an extra set of hands. Make sure you have a helper available.




This size of the open-end wrench on these icons should correspond to the size of the nut.




Wood Components (Not to Scale)


BOX 1/2

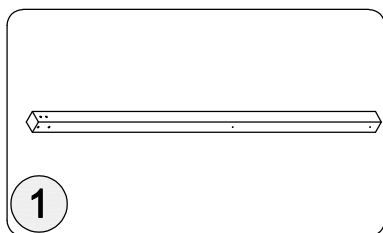


Front left column
Qty:1

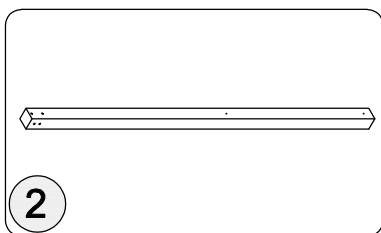


Front right column
Qty:1

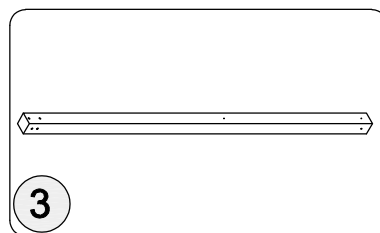


rear left column
Qty:1

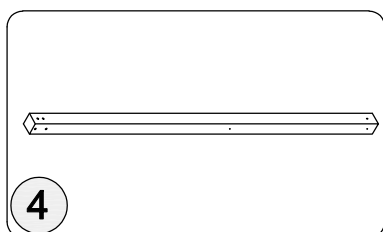

Rear right column
Qty:1

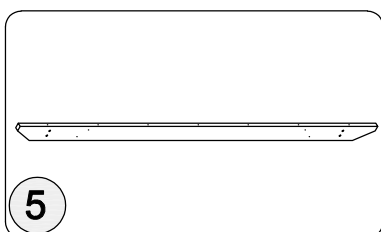

Front and rear cross beams
Qty: 2

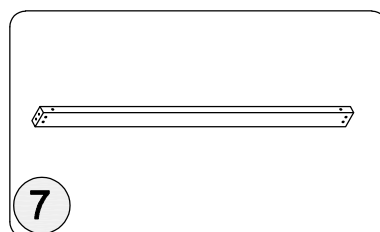

Hanging beam
Qty:1



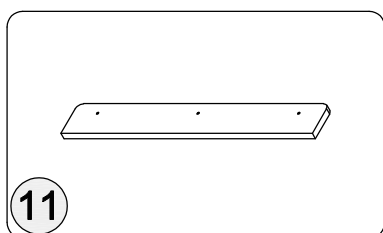



Table top
Qty: 2

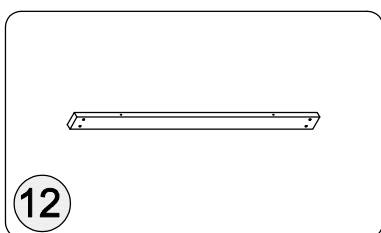


Mid-side bar
Qty: 2

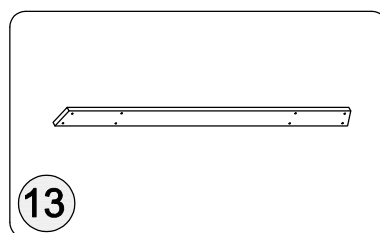

side base bar
Qty: 2

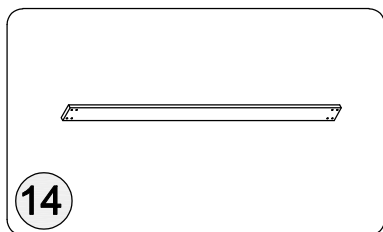


Horizontal bar below
Qty:1

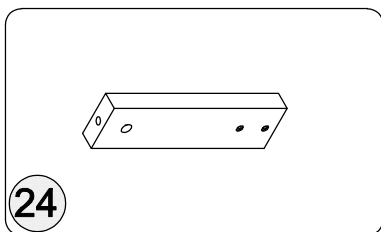


Front support bar
Qty: 2

Manual



Wood Components (Not to Scale)


BOX 2/2

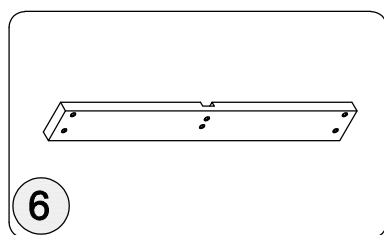

6

side sill


Qty: 2

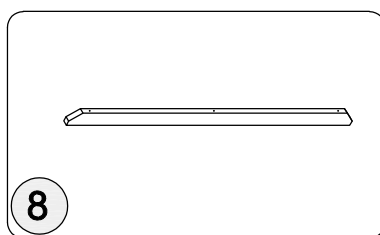

8

Top story


Qty: 7

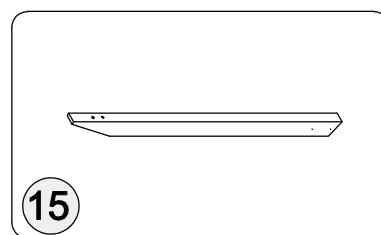

15

Left support bar


Qty: 2

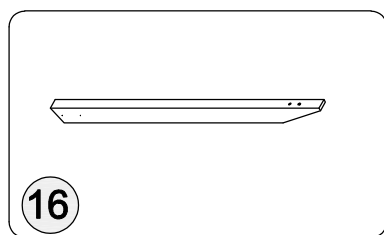

16

Right support bar


Qty: 2

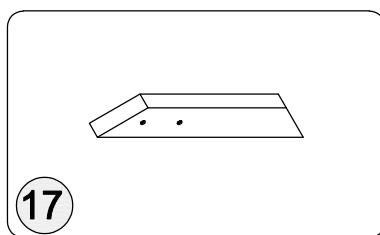

17

Left triangular wood


Qty: 2

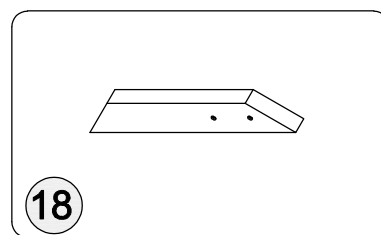

18

Right triangular wood


Qty: 2

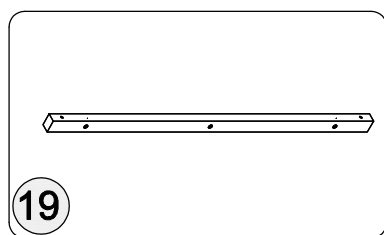

19

Chair front strip


Qty:1

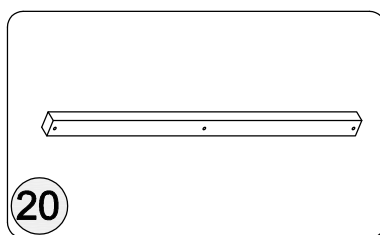

20

Chair back bar


Qty:1

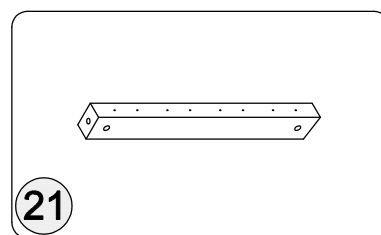

21

Left bottom bar of chair


Qty:1

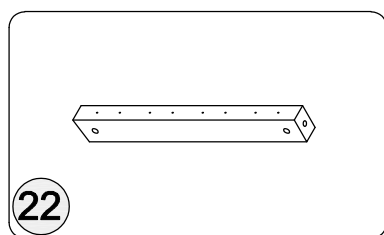

22

Right bottom rail of chair


Qty:1

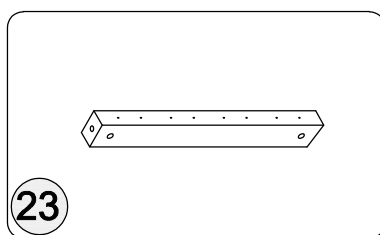

23

Bottom rail of chair


Qty:1

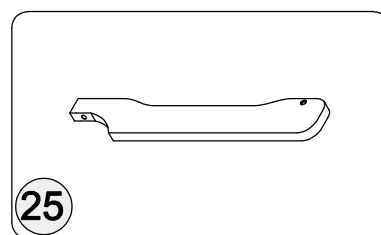

25

Left handrail


Qty:1

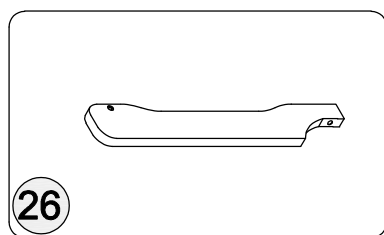

26

Right handrail


Qty:1

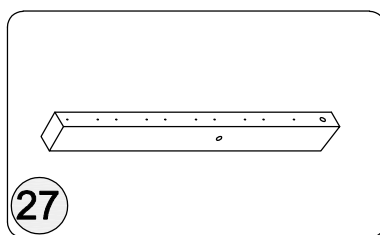

27

Chair side back rail


Qty: 2

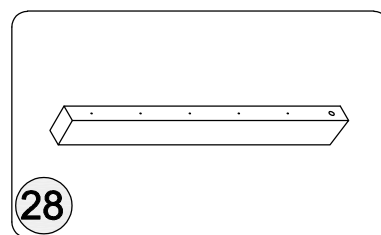

28


Middle back stripe

Qty:1




Wood Components (Not to Scale)

BOX 2/2


















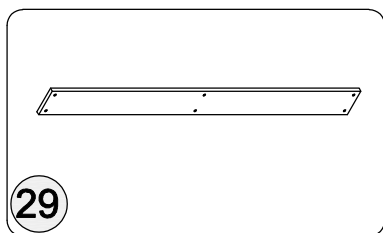


Seat board batten
Qty: 5

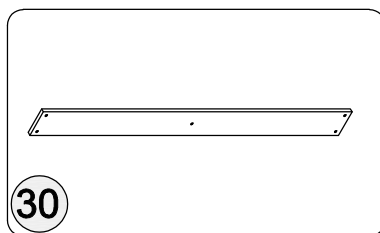


Backboard batten
Qty: 5


Hardwares

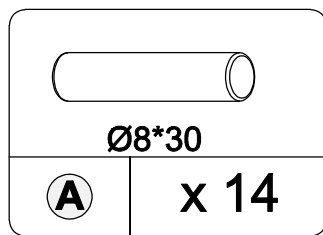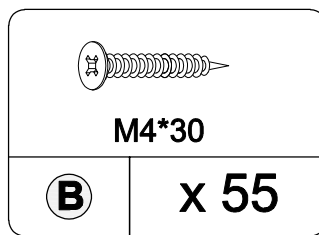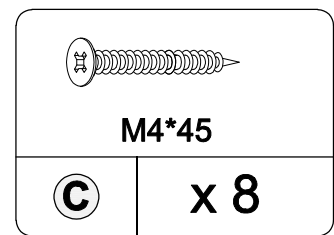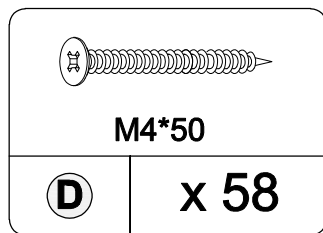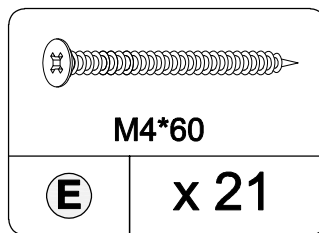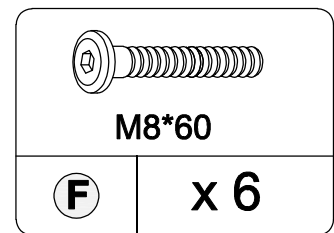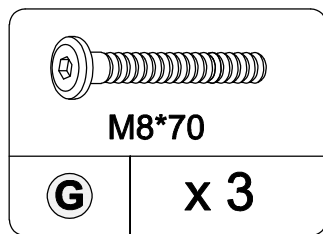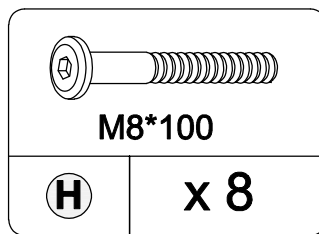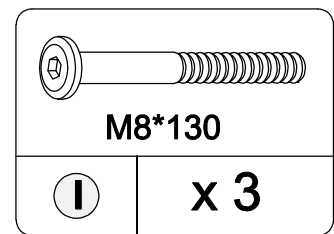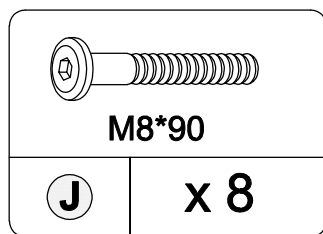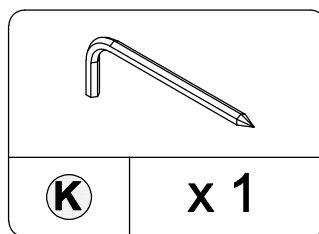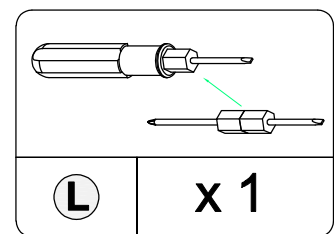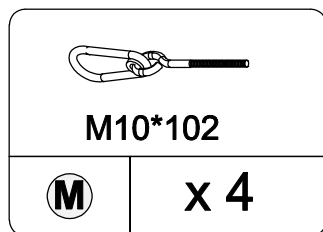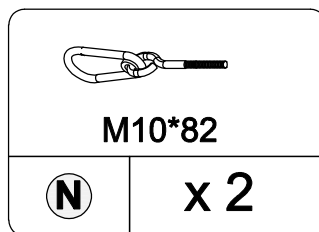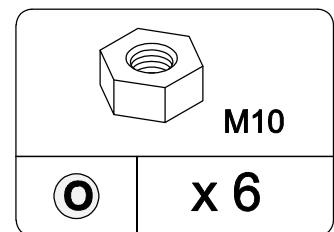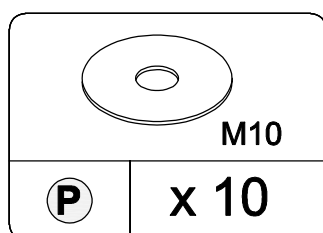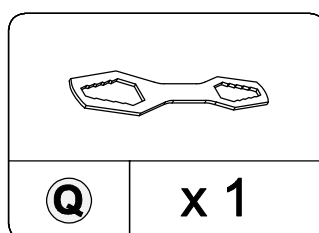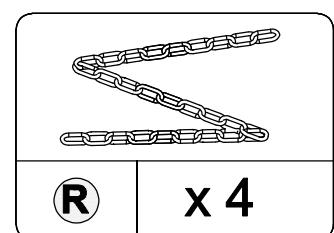Hardware Components

Wooden tenons

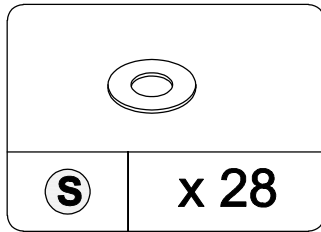Screw

Screw

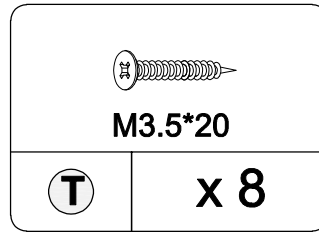Screw

Screw

screws

screws

screws

screws

screws

Hex key

Screwdriver

threaded rod

threaded rod

Nut

Flat washer

open end wrench

chain


Hardware Components




Flat washer




Black Screw

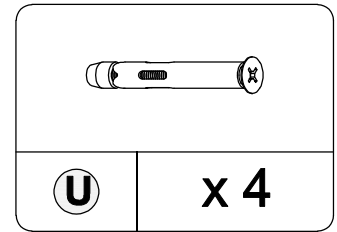


Earth screw

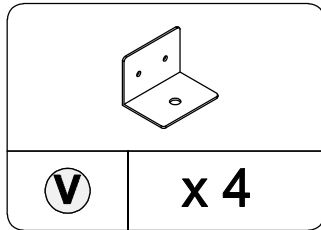


connect iron sheet

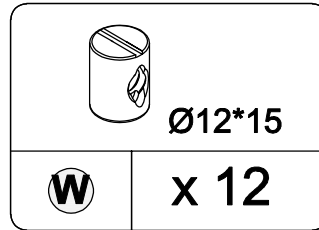

hammer

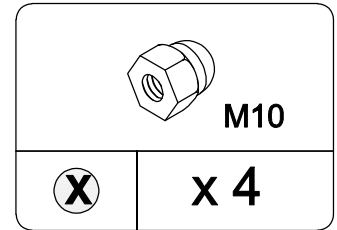


Nut




Installation of left frame

Step 1

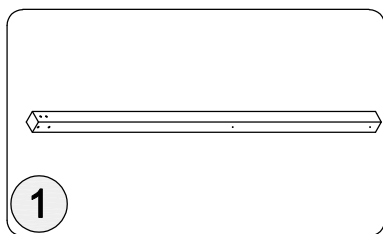


Front left column
Qty:1

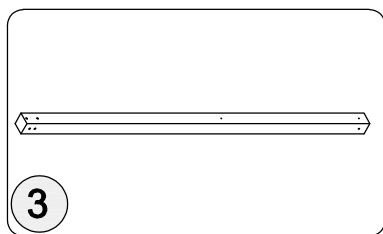


rear left column
Qty:1



side sill
Qty: 1

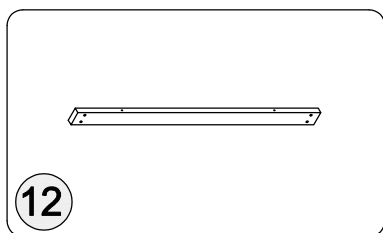


Mid-side bar
Qty: 1

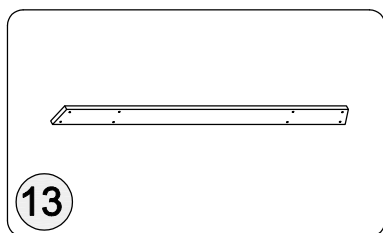

side base bar
Qty: 1

1. Connect with hardware A first, then install with hardware D
 2. Thread hardware H through hardware S, and then use tool hardware K to install component 1,3
- Arrange according to the diagram, pay attention to the direction

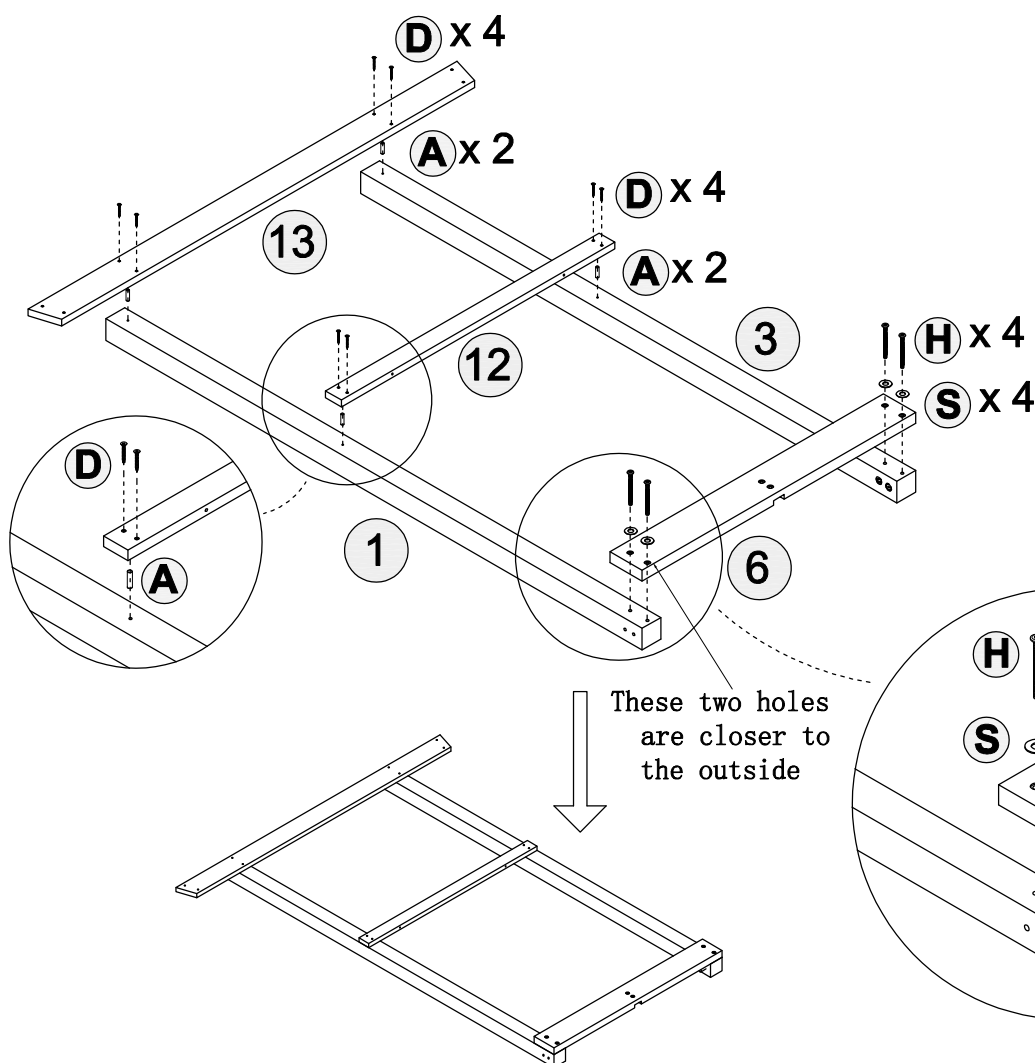

M4*50

D

x 8



K

x 1



S


x 4



Ø8*30

A


x 4




M8*100

H


x 4

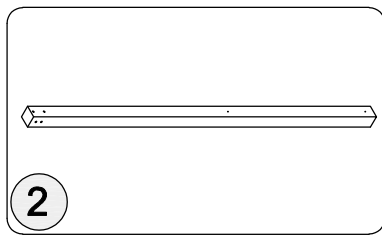


Front right column
Qty:1

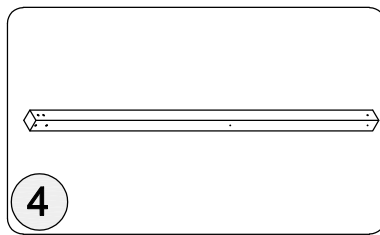


Rear right column
Qty:1

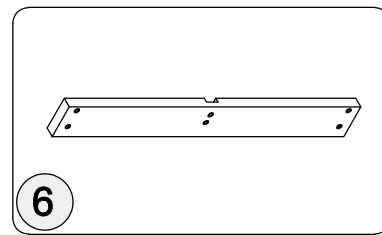

side sill
Qty: 1





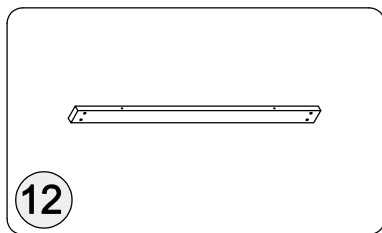




Mid-side bar
Qty: 1

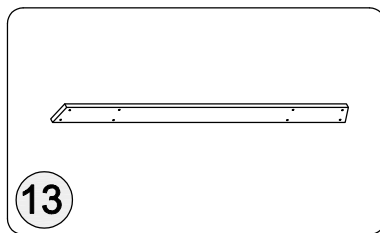

side base bar
Qty: 1

1. Connect with hardware A first, then install with hardware D
2. Thread hardware H through hardware S, and then use tool hardware K to install component 2, 4
3. Arrange according to the diagram, pay attention to the direction

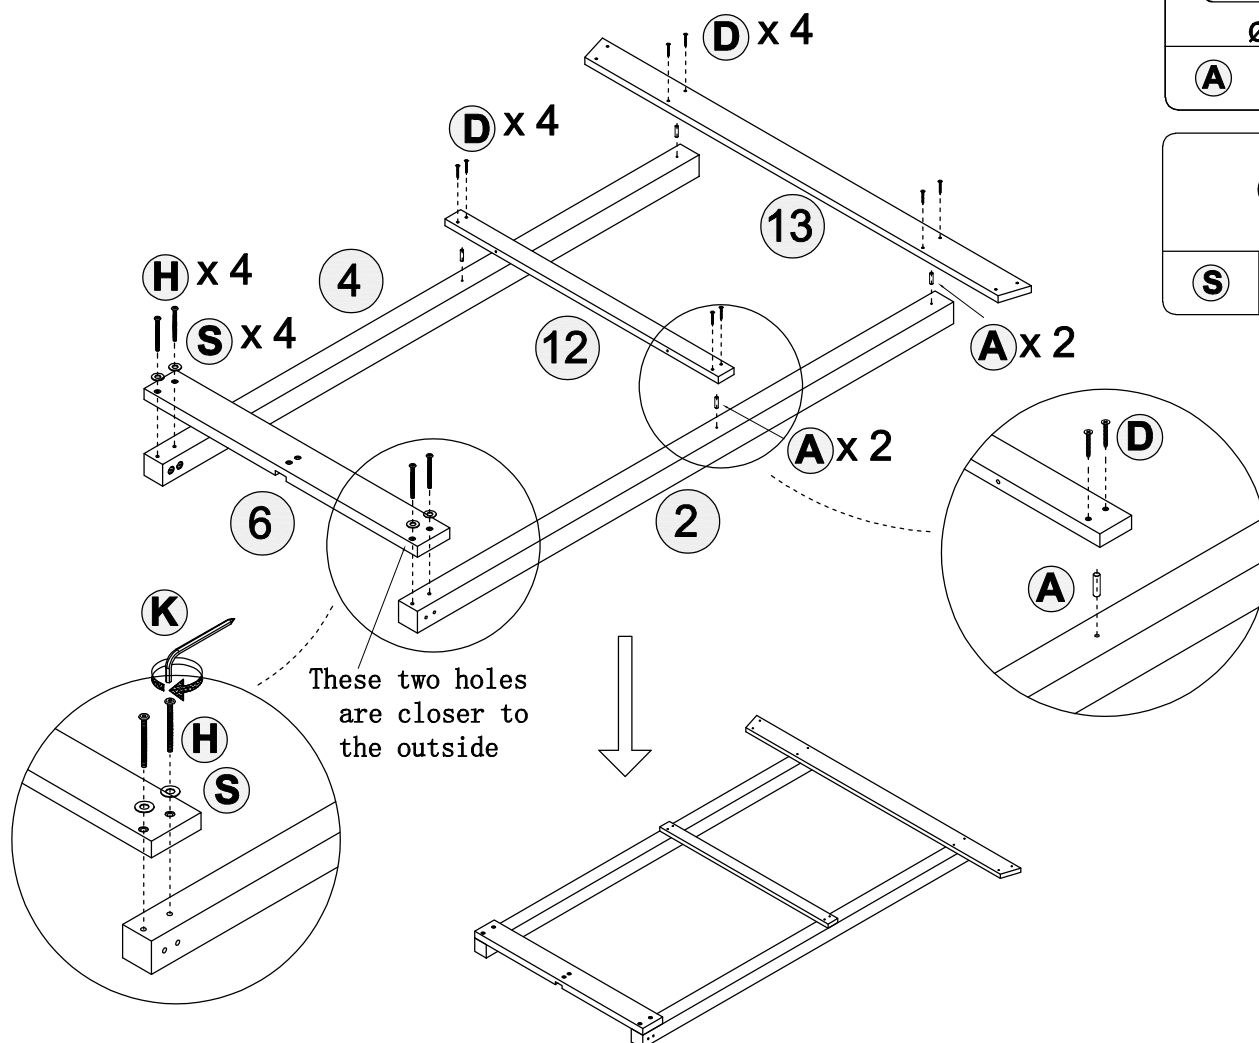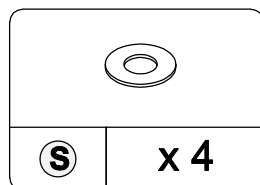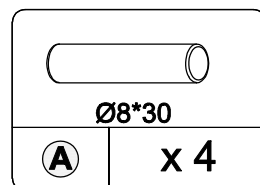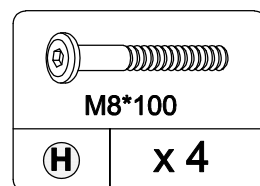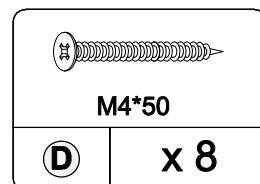


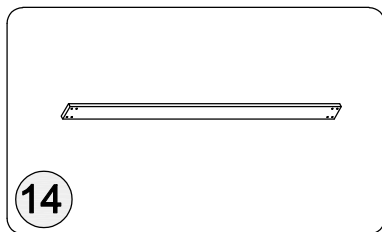


Horizontal bar below
Qty:1

Ø8*30	
A	x 2
M4*50	
D	x 8


1. Connect with hardware A first, then install with hardware D
2. Two people are required to operate to prevent falling and damage

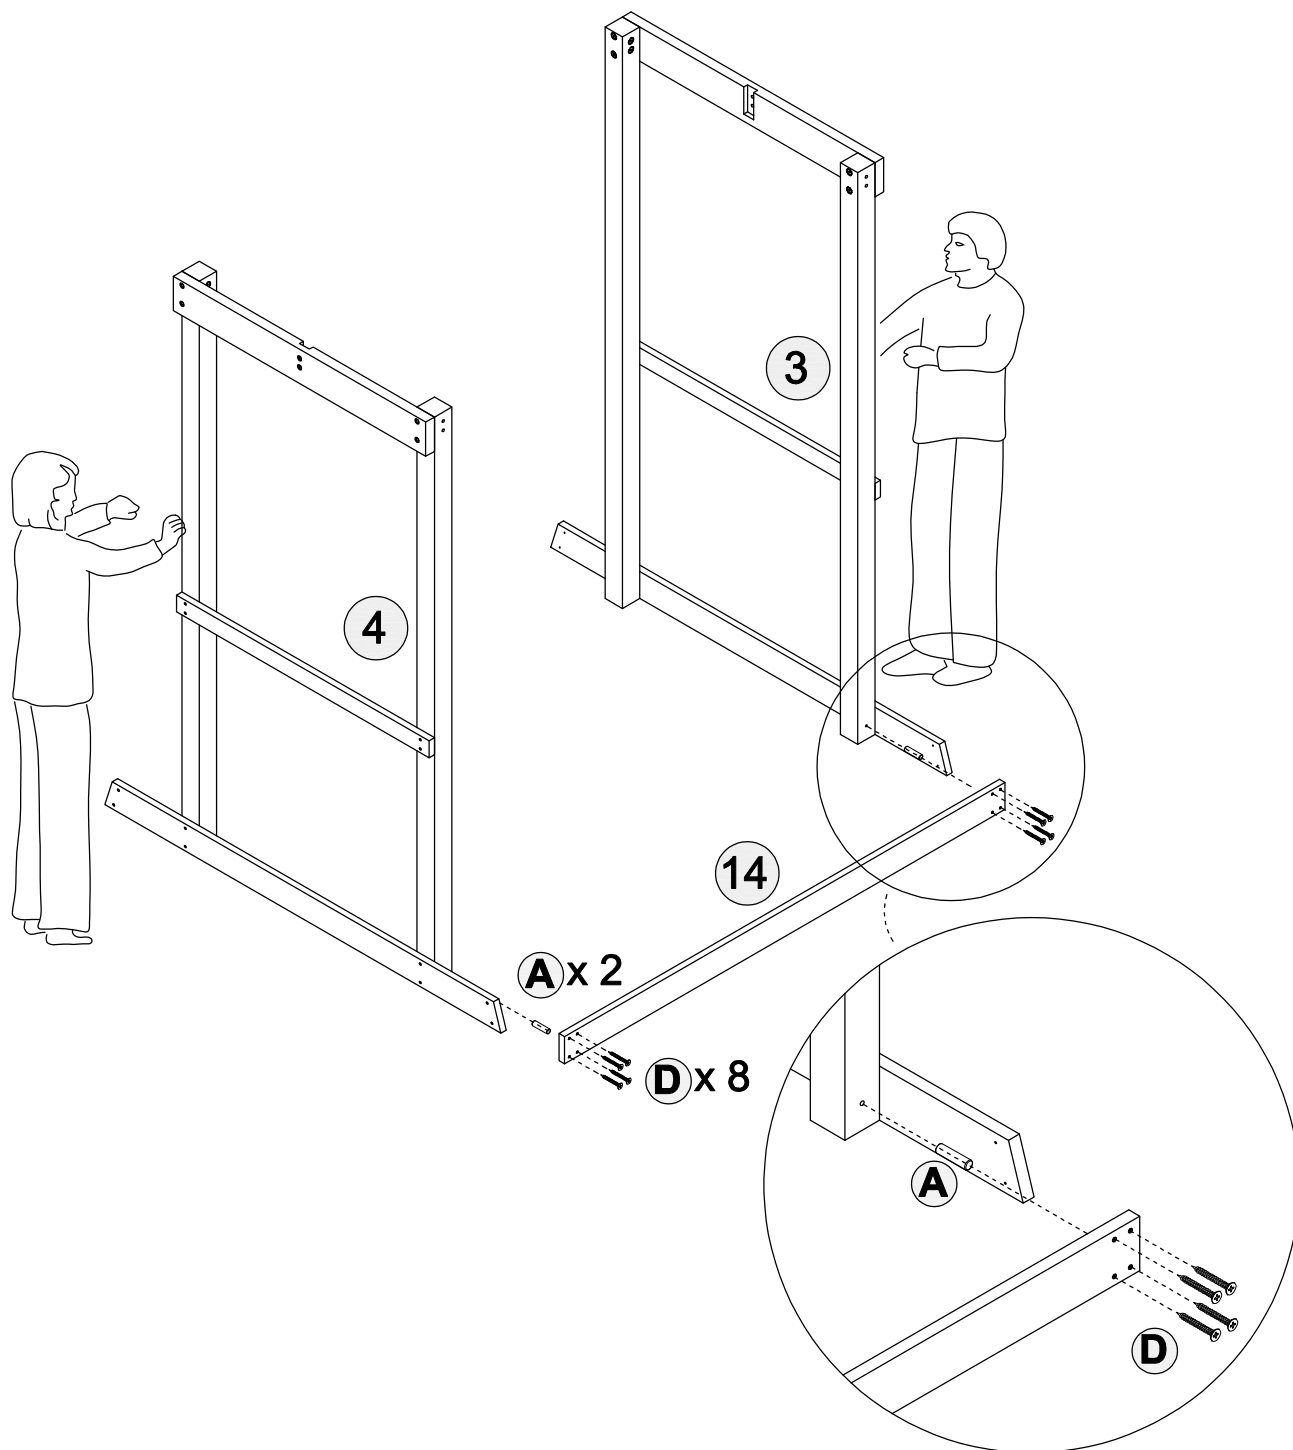

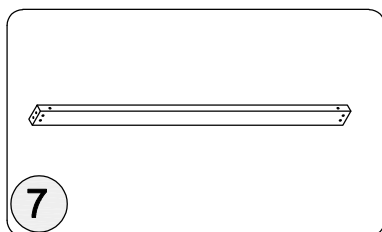

Hanging beam
Qty:1

1. First, use tool L to put hardware W in and hold it against the top
2. Thread hardware F through hardware S, and then use tool hardware K to tighten W



M8*60

F


x 4



Ø12*15

W

x 4




L



x 1



S

x 4



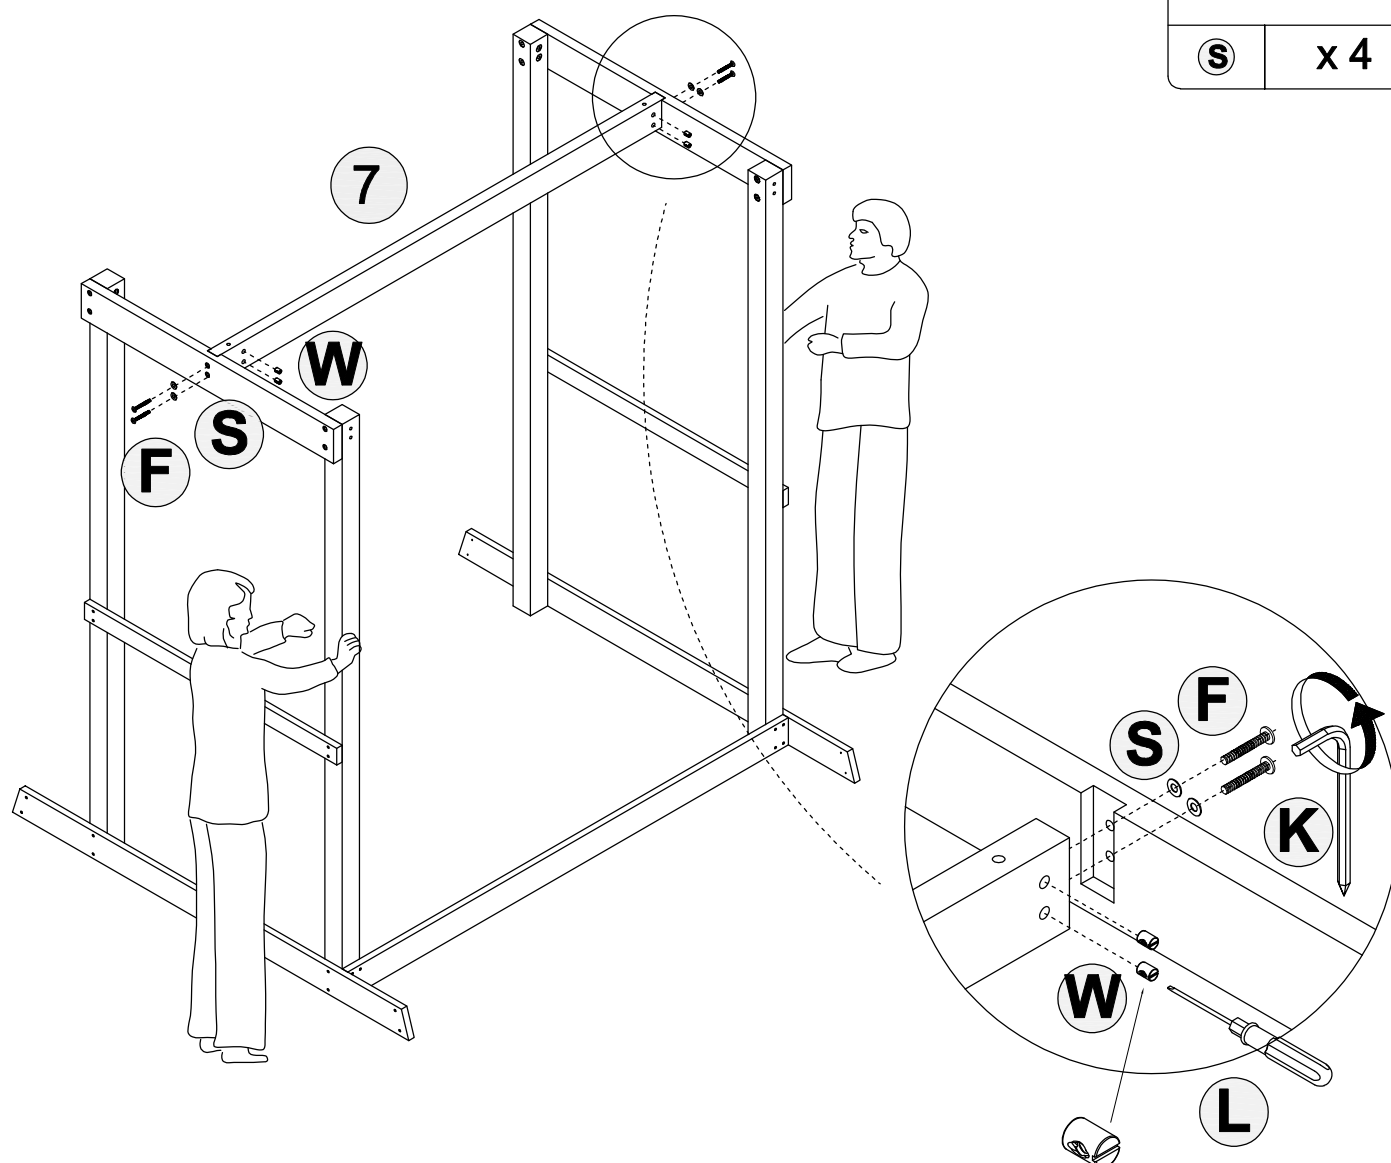


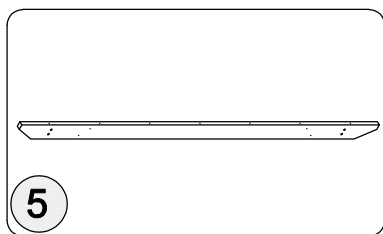

Front and rear cross beams

Qty: 2

1. Thread hardware J through hardware S, and then use tool hardware K to install component 5

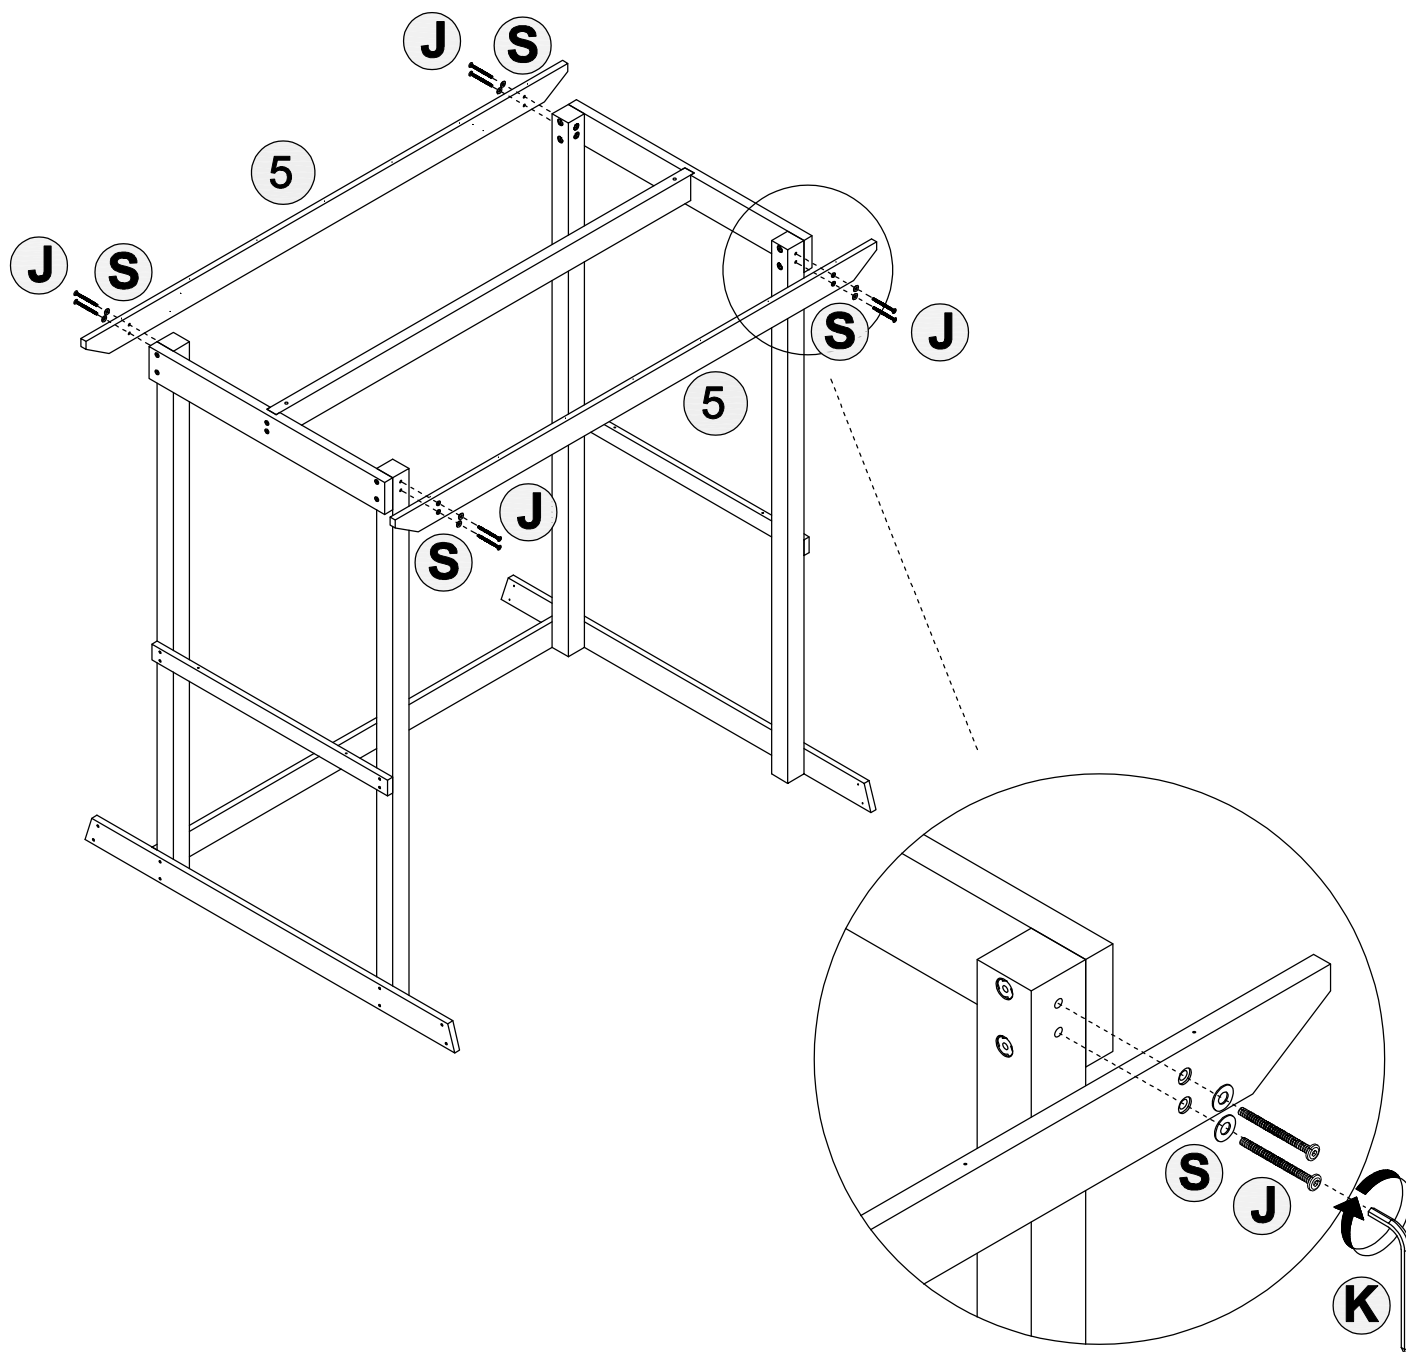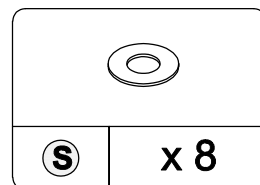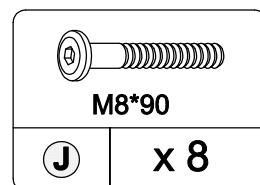



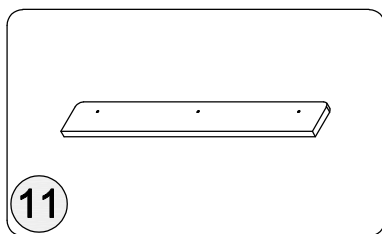


Table top

Qty: 2

1. Connect with hardware A first, then install with hardware D



Ø8*30

A



x 4




M4*50

D


x 6

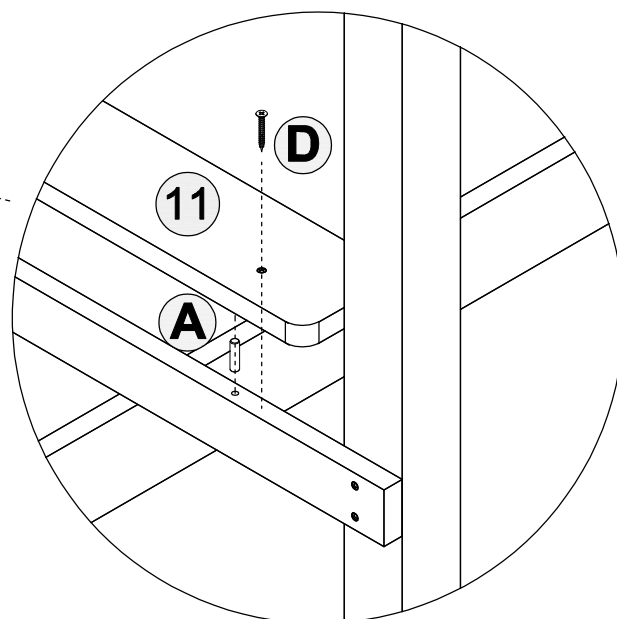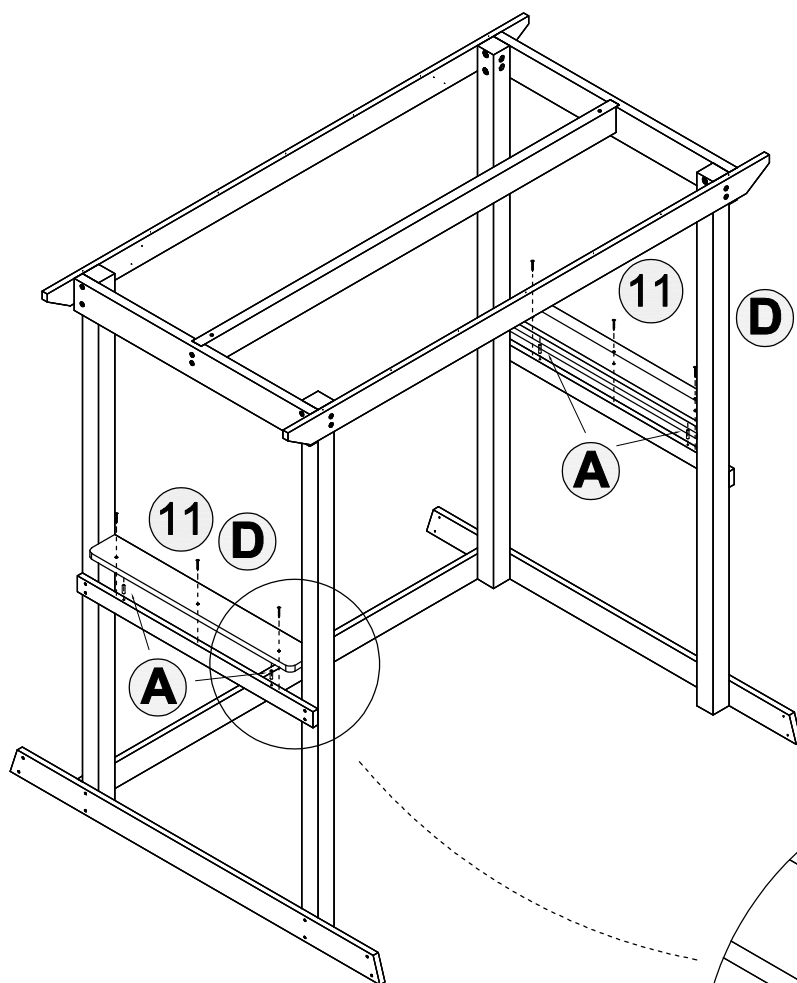

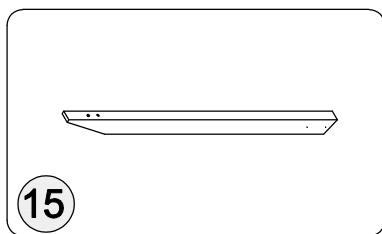

15

Left support bar
Qty: 2

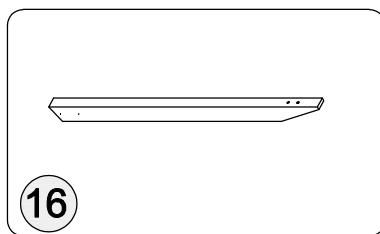

16

Right support bar
Qty: 2





M4*50

D


x 8


1. Use hardware D to pass through component 15 or component 16 and install it towards the lead hole

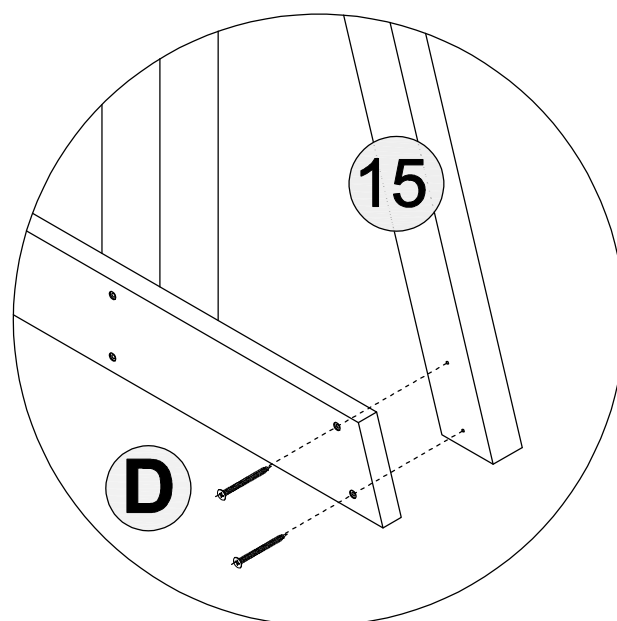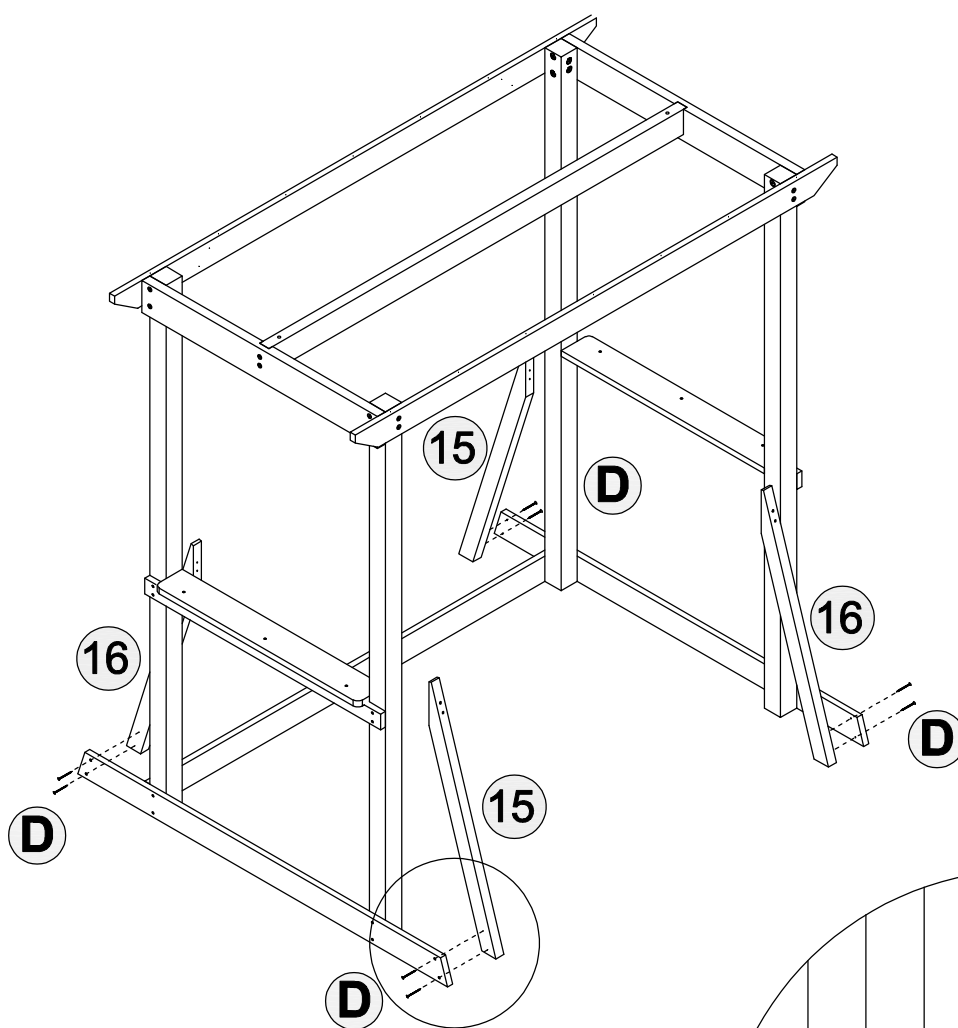

1. After installing the lower end, install the upper end, ensuring that the upper edge is level with the column edge


	
M4*50	
	x 8

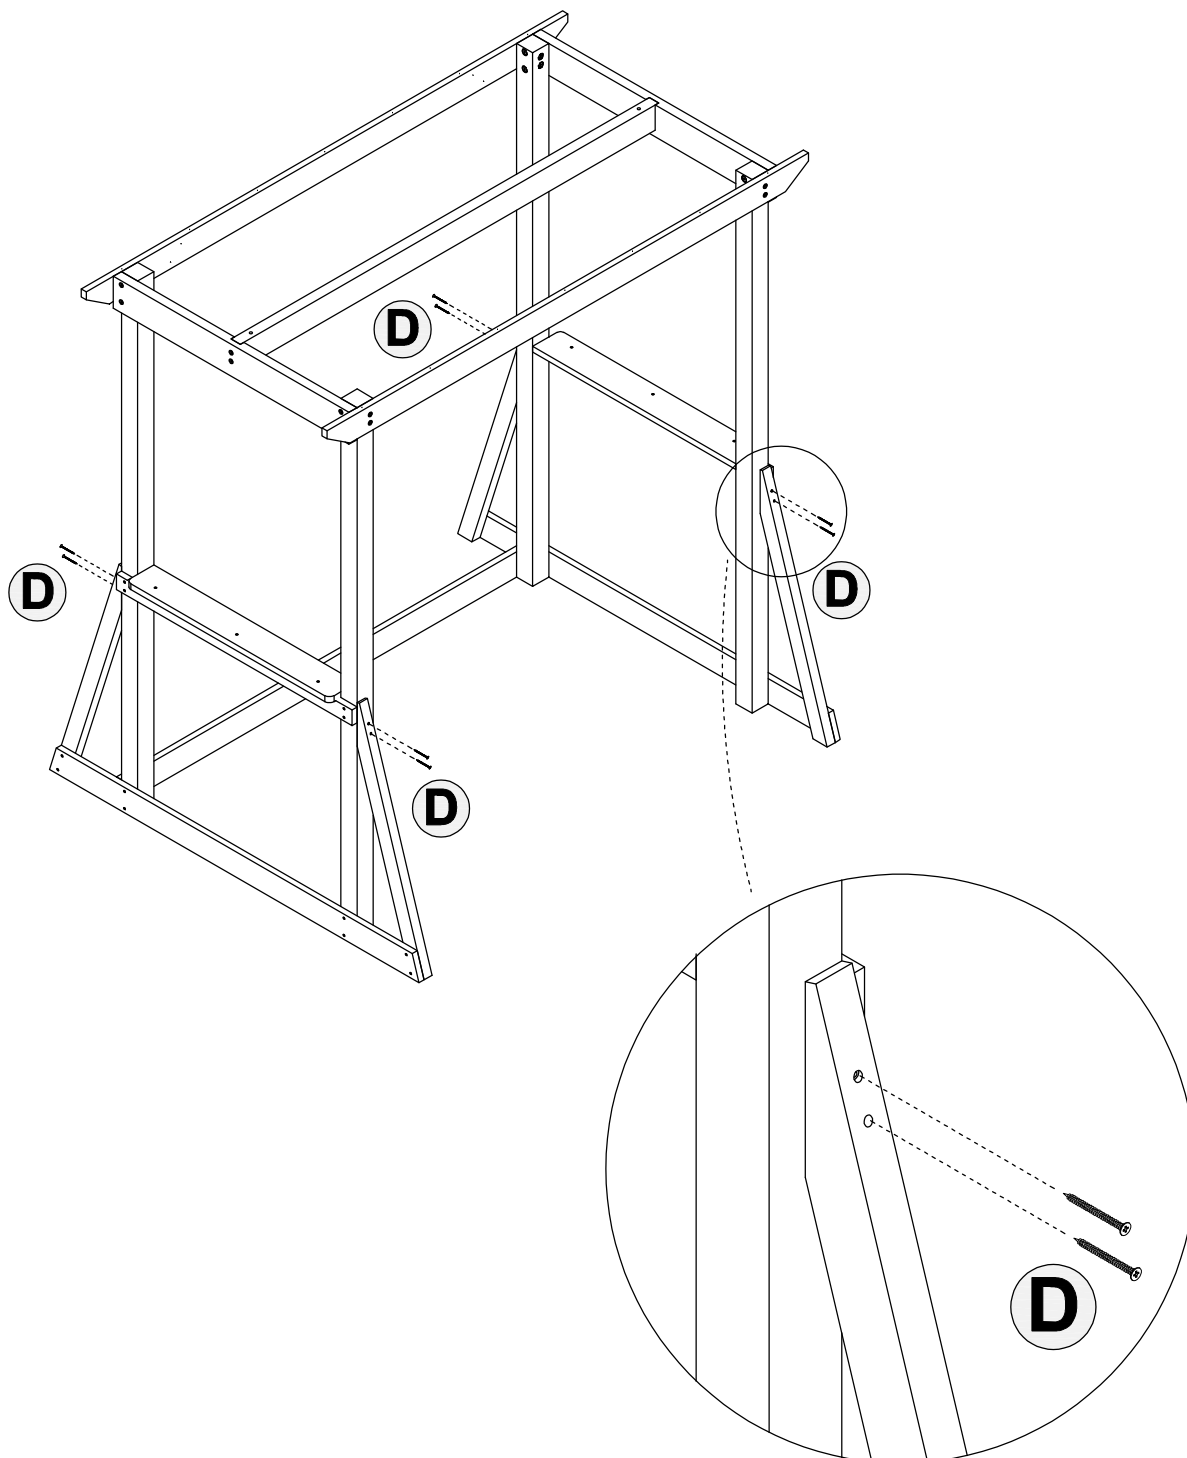




Triangle wood installation

Step 9

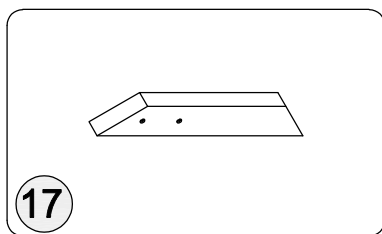

Left triangular wood
Qty: 2

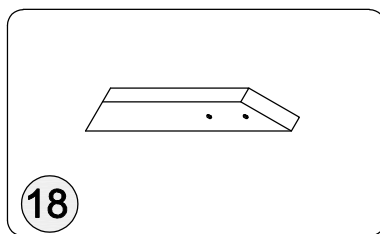

Right triangular wood
Qty: 2





M4*45

C

x 8

1. Use hardware C to pass through component 17 or component 18 and install it towards the lead hole

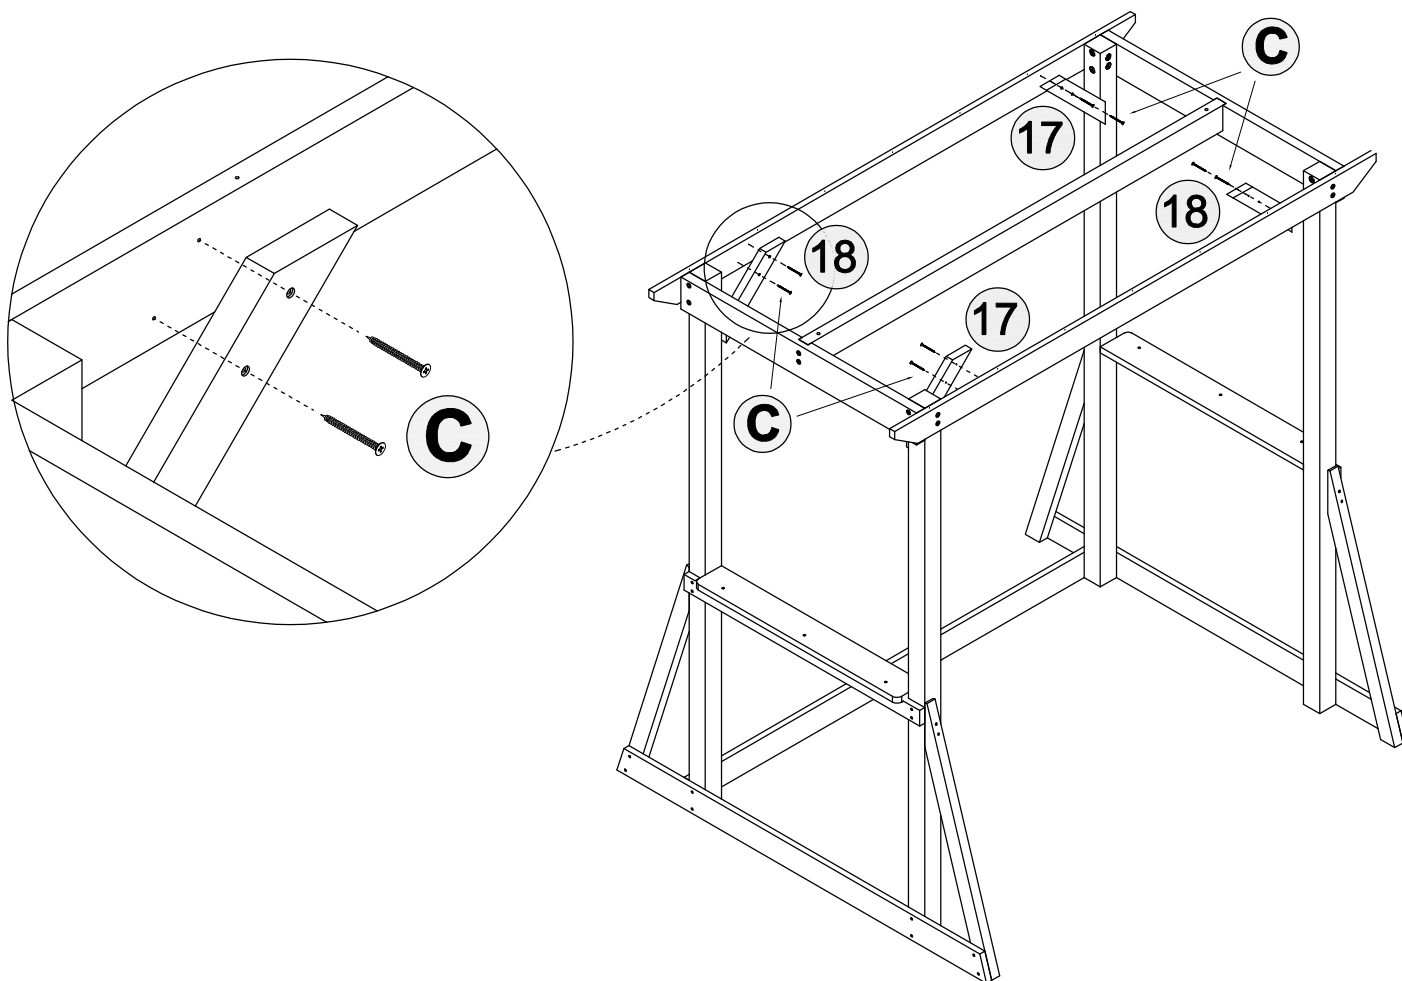





1. After installing the upper end, install the lower end, ensuring that the lower edge is level with the column edge




M4*50

D

x 8




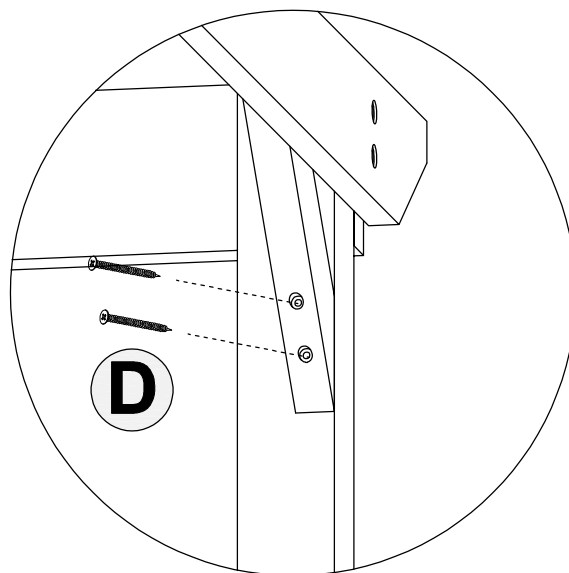
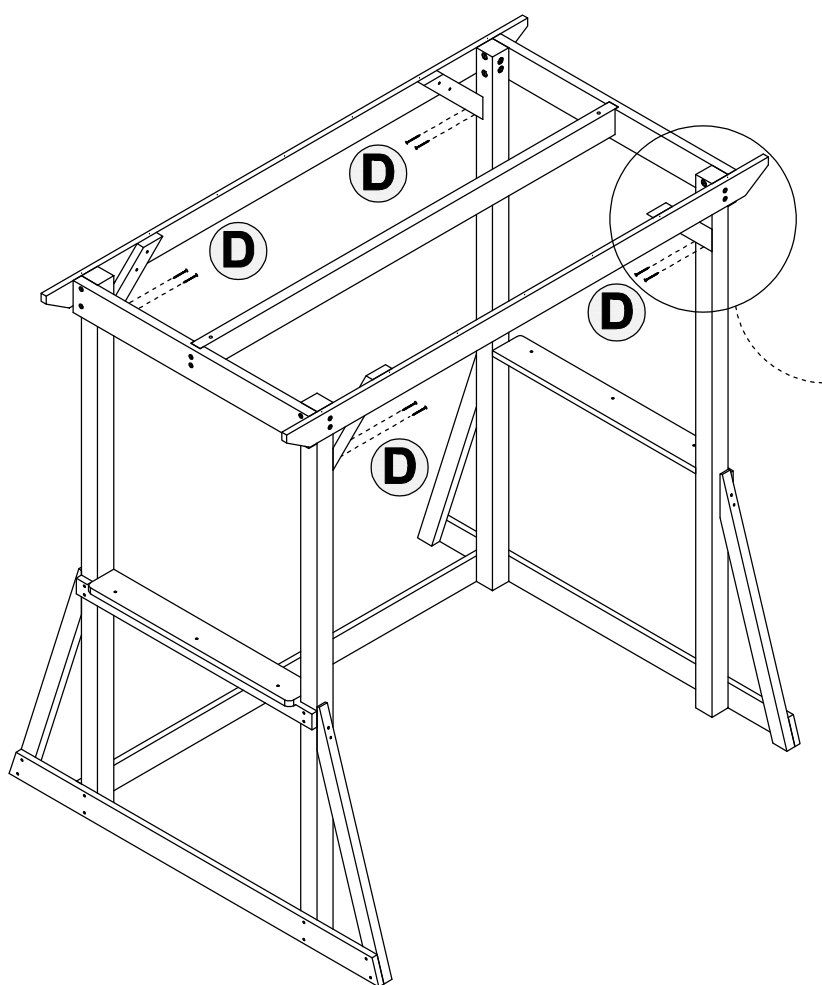


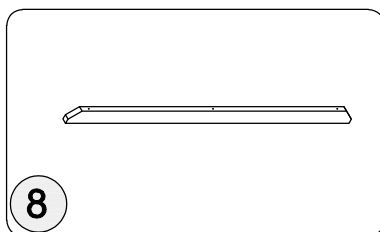



Top story

Qty: 7


1. Use hardware E to pass through component 8 and install it towards the lead hole
2. Use hardware T to pass through Hardware V and install it towards the lead hole
3. Use hardware U to pass through Hardware V and Installed underground
4. Please install according to the lead hole

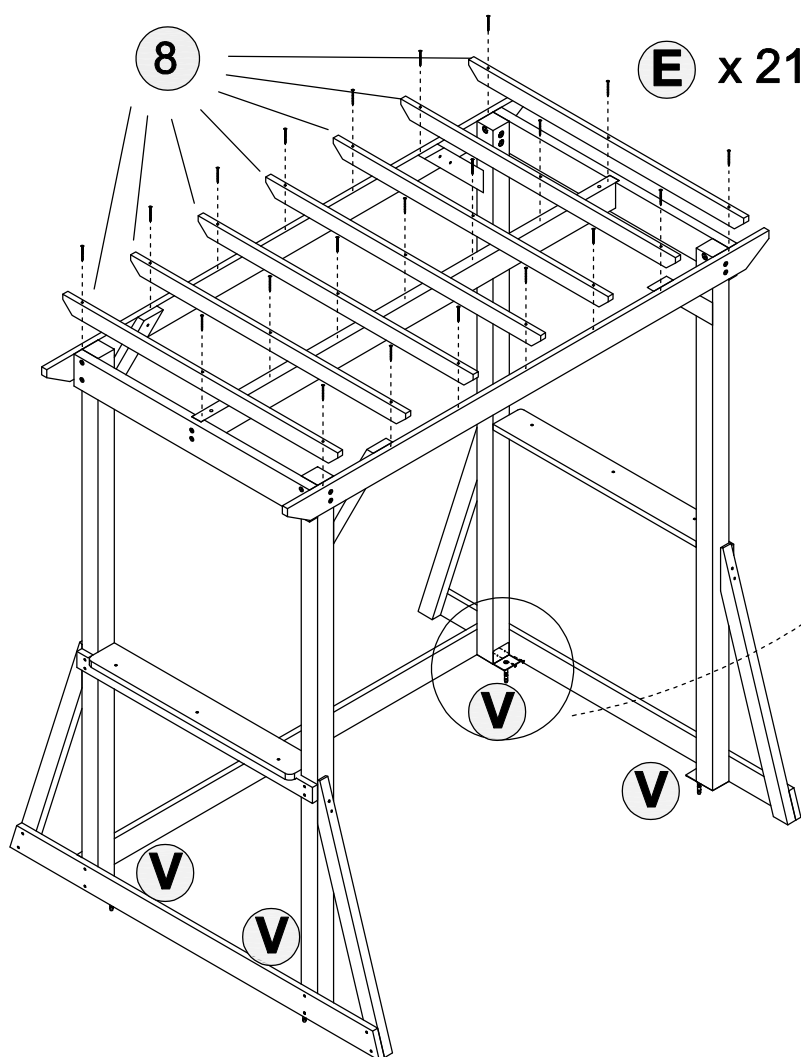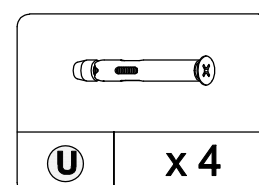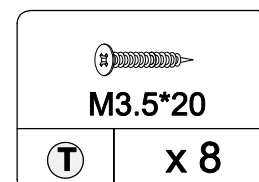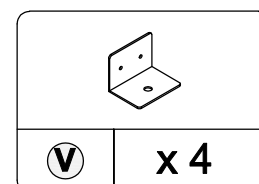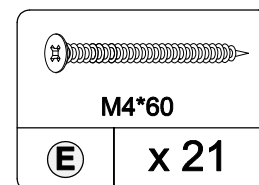

Installed on the
inside of the four legs

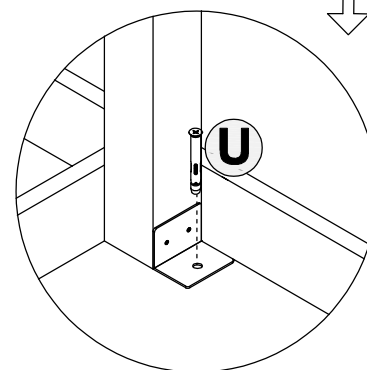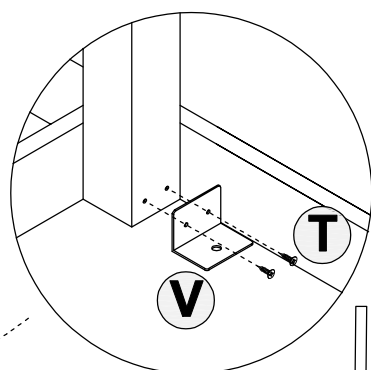

1. Thread hardware M through hardware P, through the component, and then through hardware P, and use tool Q to screw hardware O onto hardware M

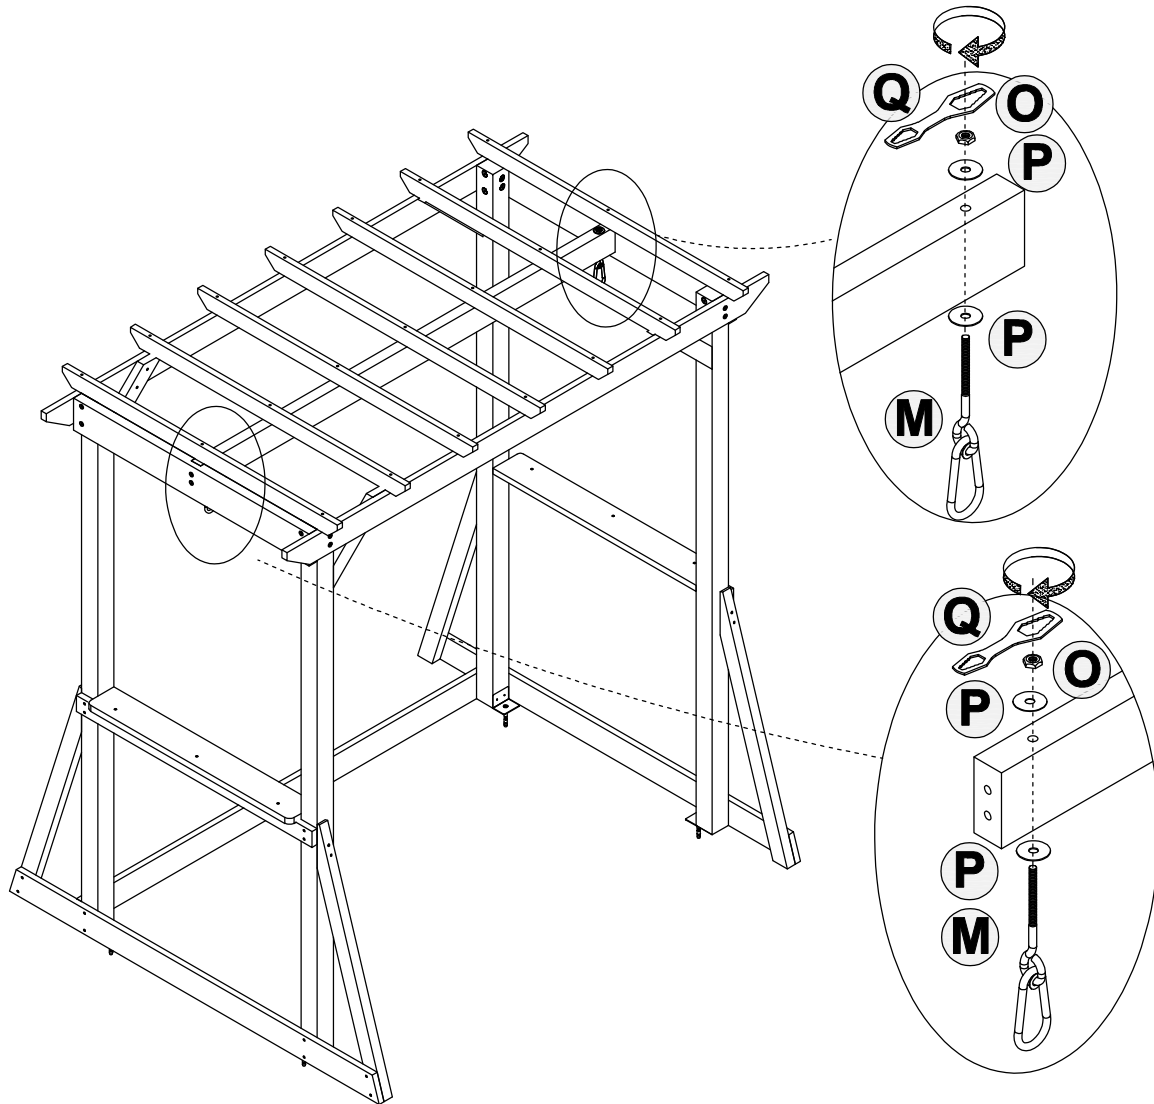

M10*102

(M)


x 2



M10

(O)

x 2



M10



(P)

x 4




(Q)


x 1

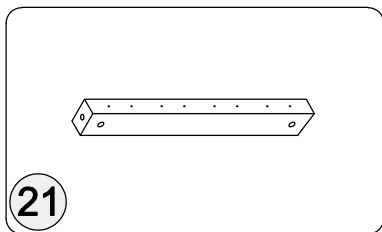


Left bottom bar of chair
Qty:1

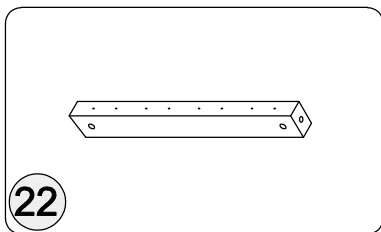

Right bottom rail of chair
Qty:1

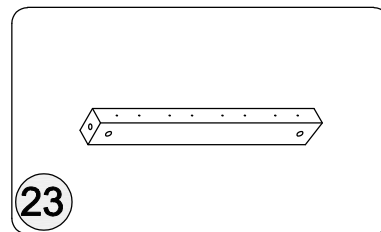





Bottom rail of chair
Qty:1


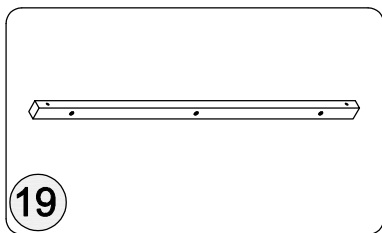


Chair front strip
Qty:1




1. Firstly, use tool L to place and hold hardware W in place, paying attention to the direction of hardware W
2. Thread hardware G through hardware S, and then use tool hardware K to tighten W

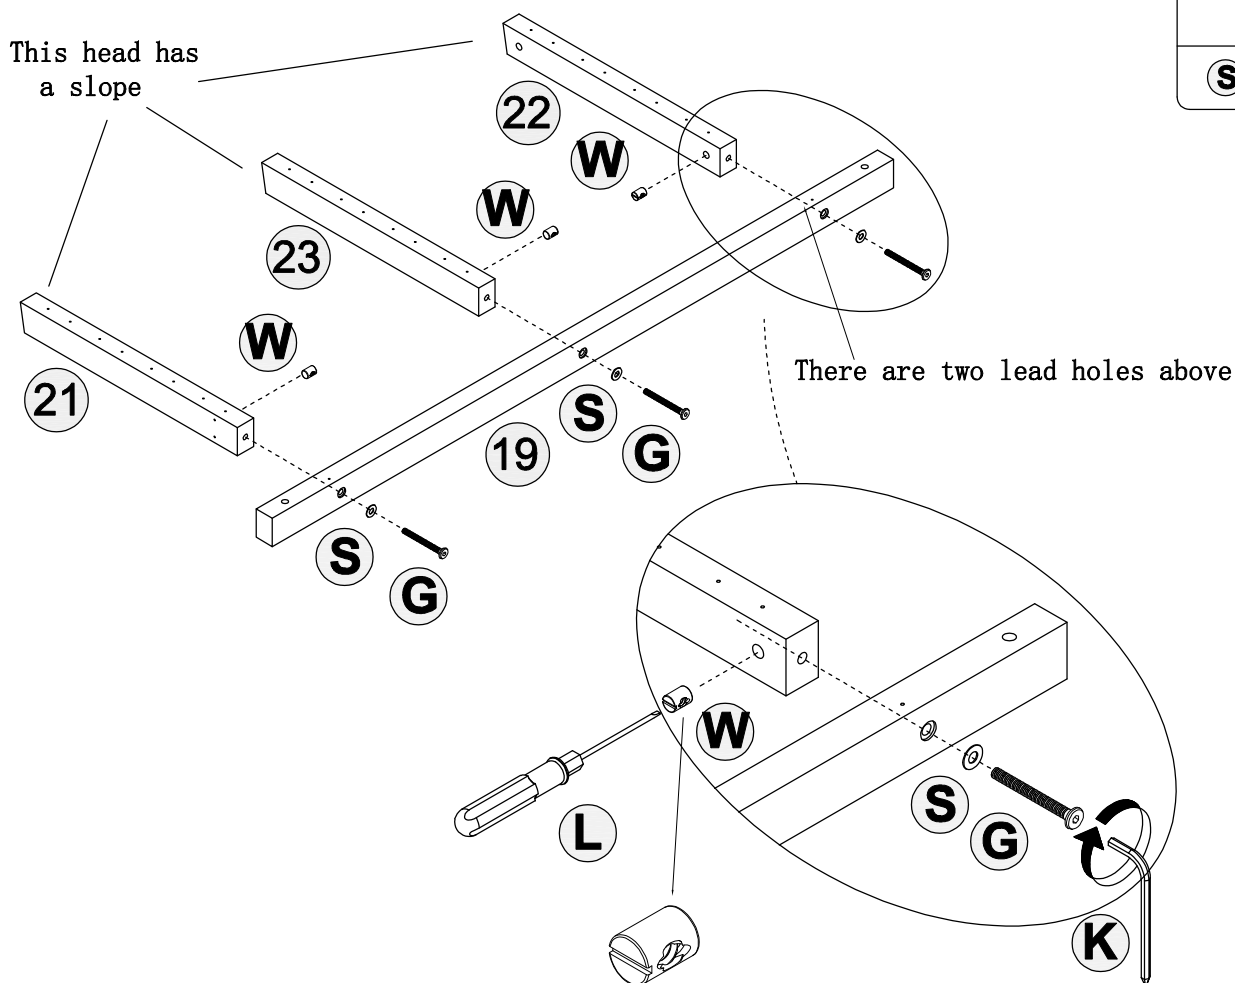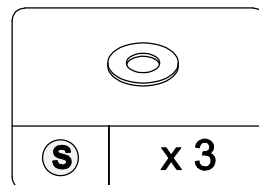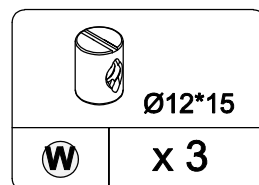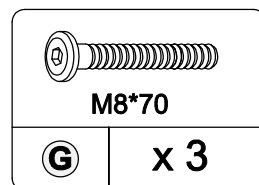


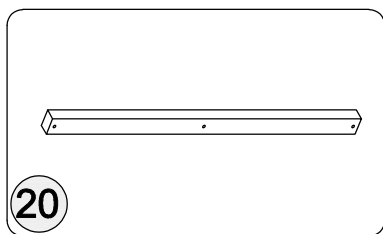

Chair back bar
Qty:1

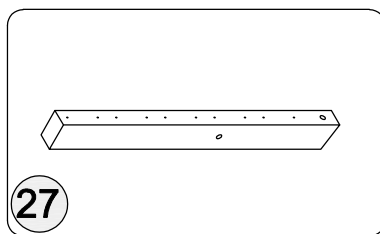





Chair side back rail
Qty: 2

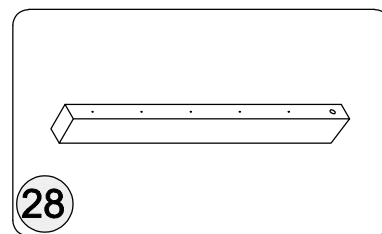


Middle back stripe
Qty:1



1. Firstly, use tool L to place and hold hardware W in place, paying attention to the direction of hardware W
2. Thread hardware I through hardware S, and then use tool hardware K to tighten W

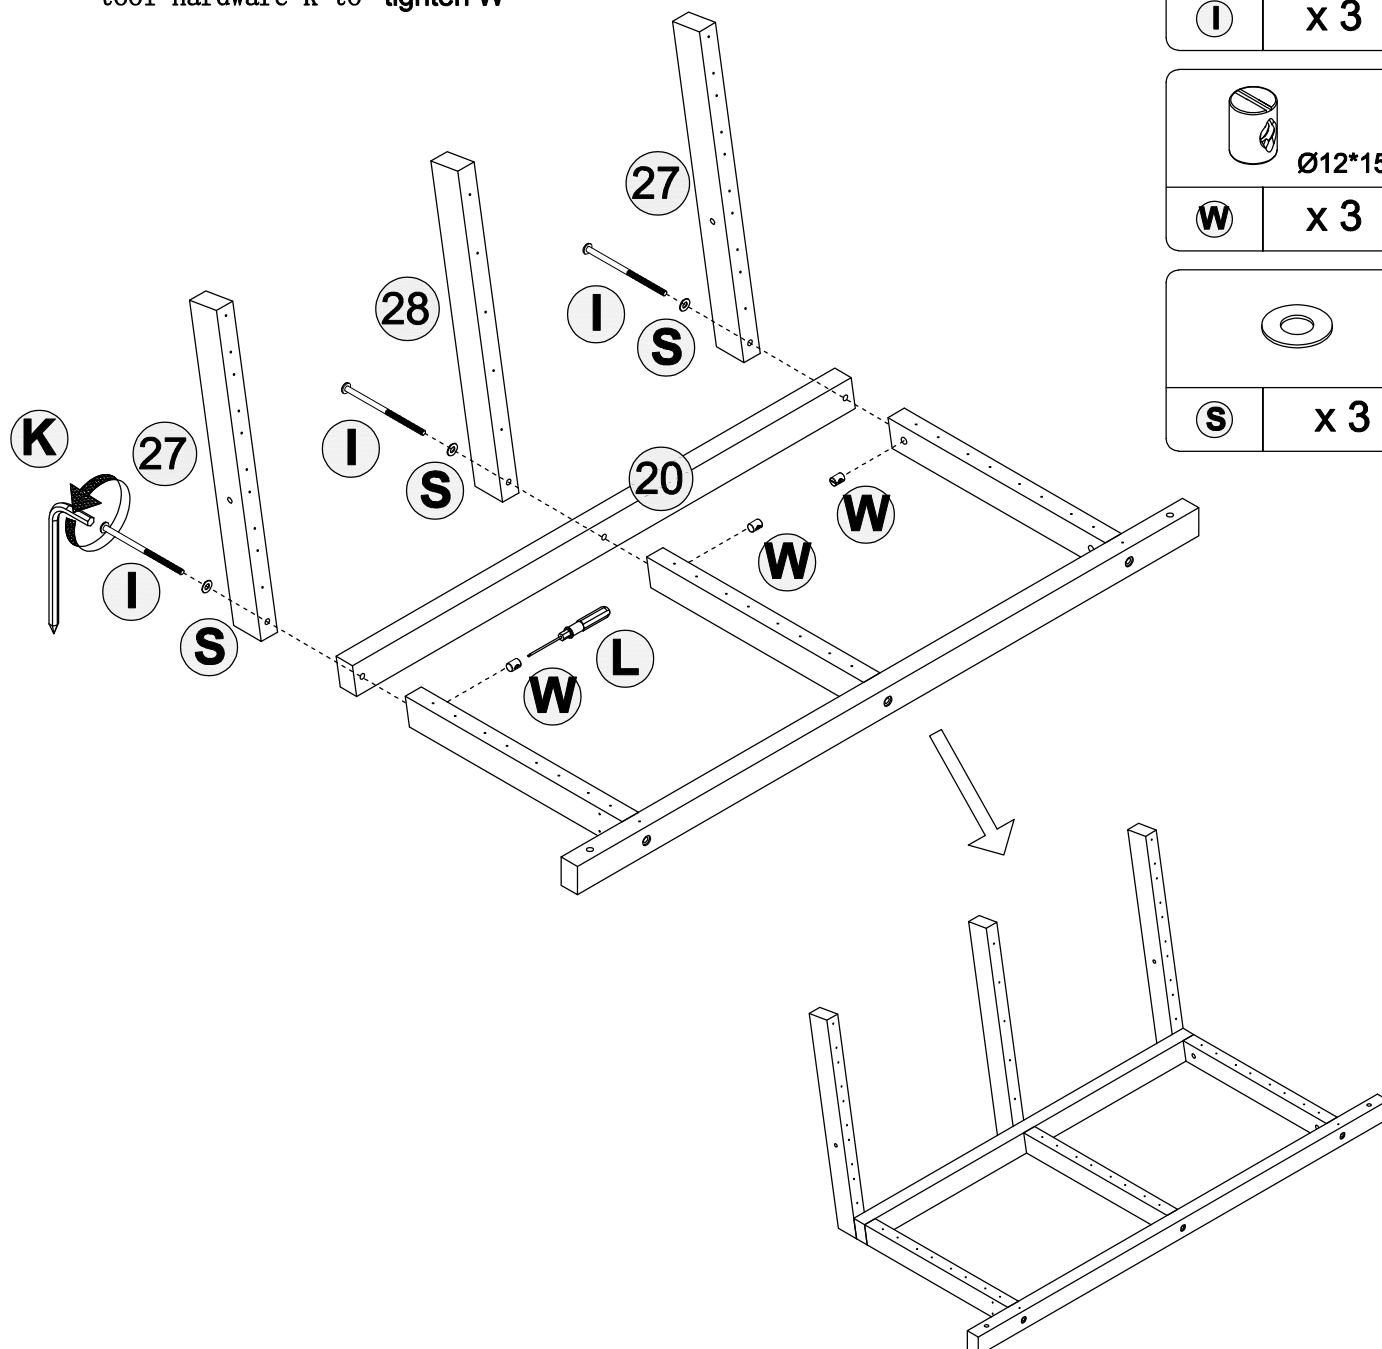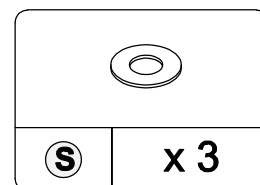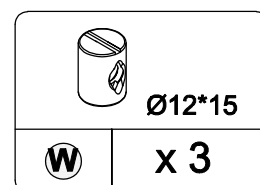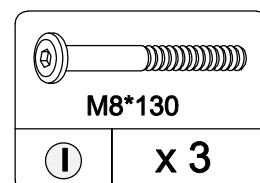

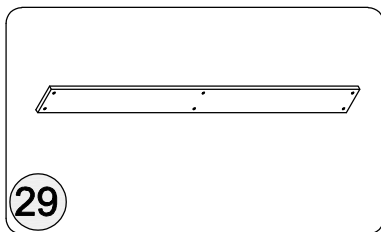

29

Seat board batten
Qty: 5






M4*30

B

x 30

1. Use hardware B to pass through component 29 and install it

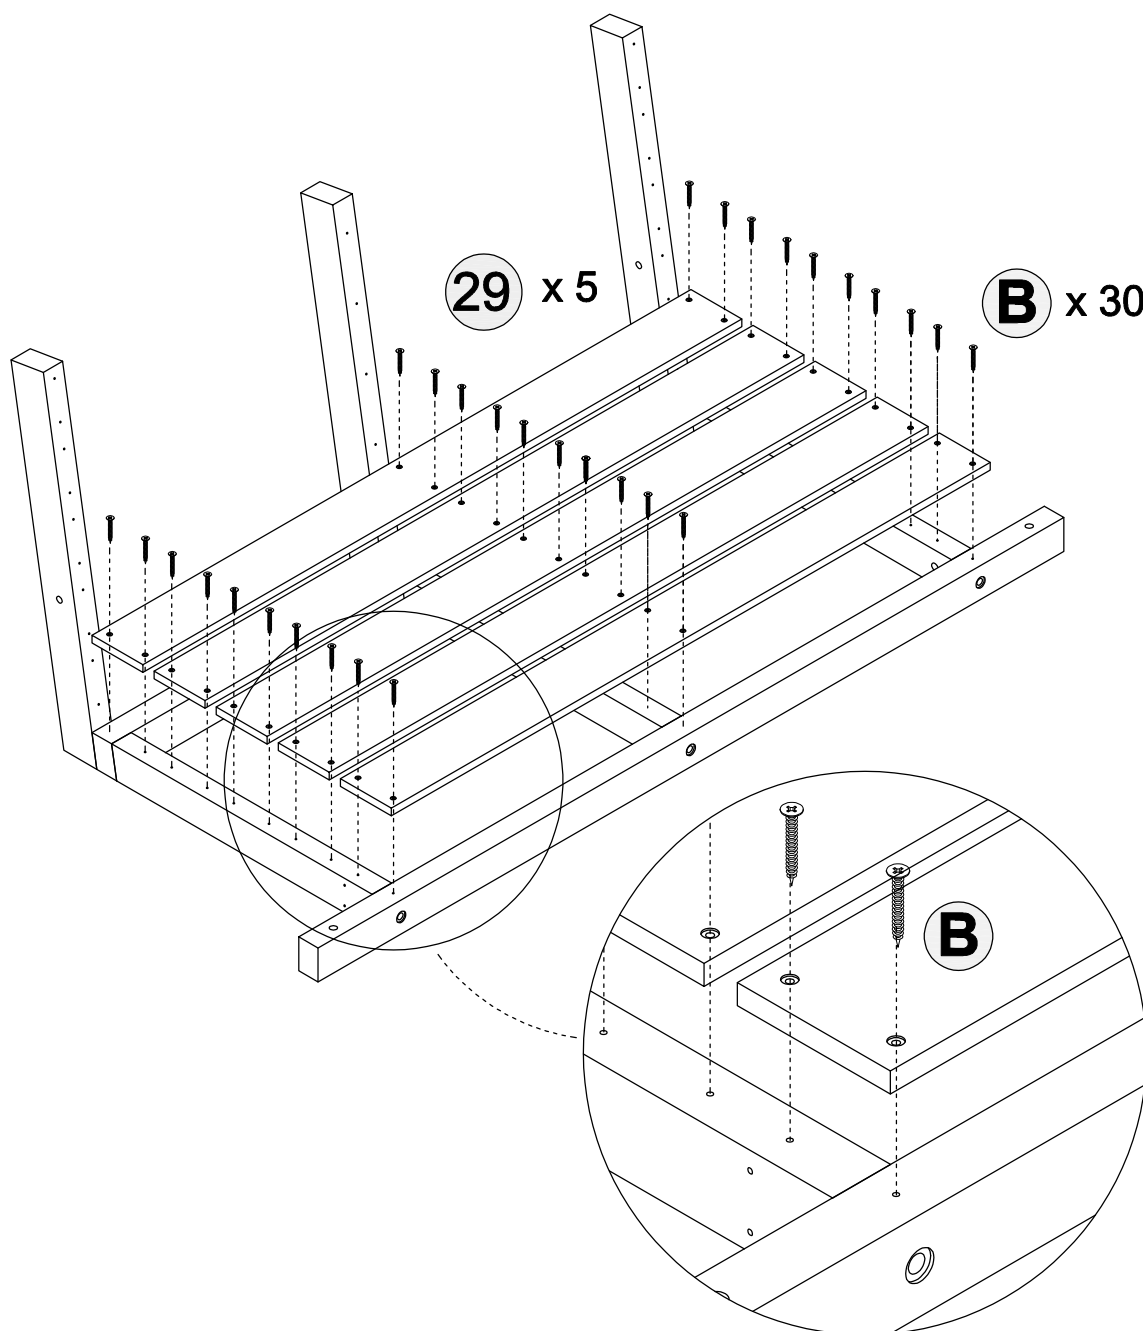

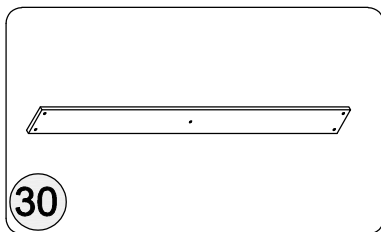

30

Backboard batten

Qty: 5






M4*30

B

x 25

1. Use hardware B to pass through component 30 and install it towards the lead hole

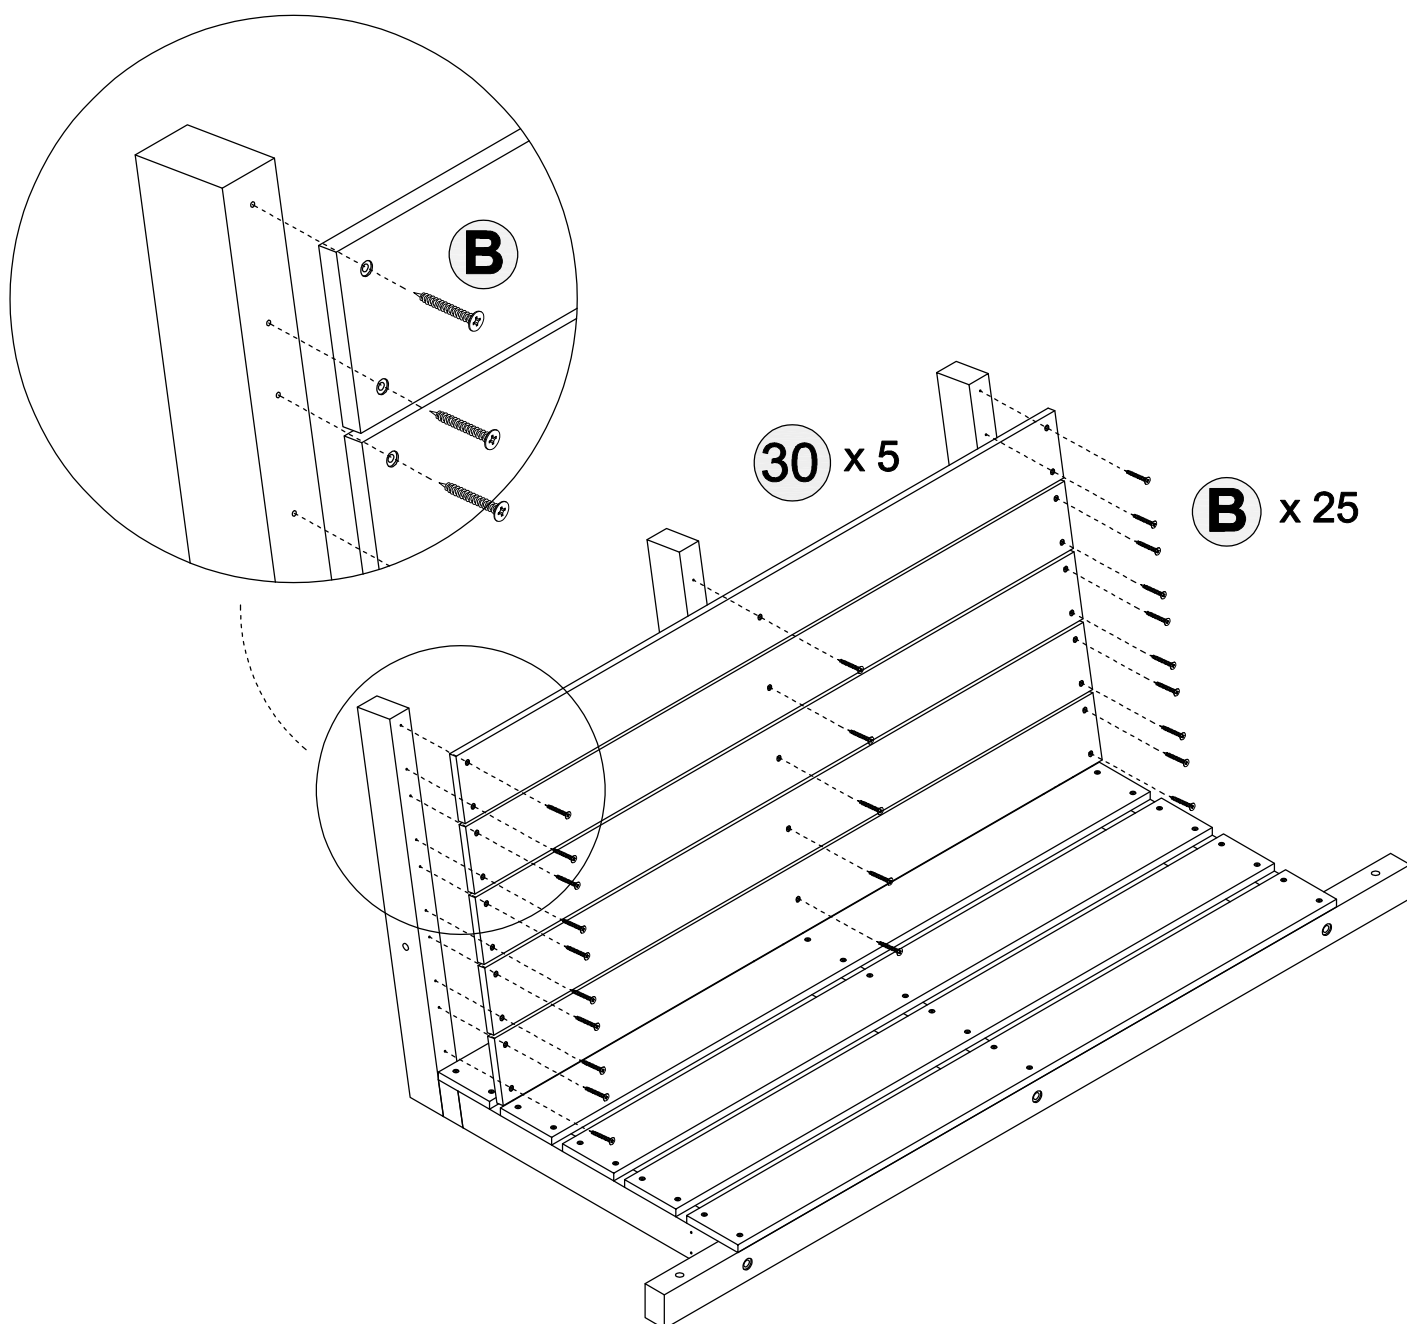

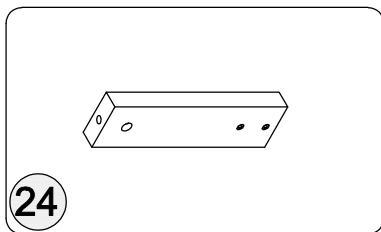

24

Front support bar

Qty: 2






M4*50

D


x 4

1. Use hardware D to pass through component 24 and install it towards the lead hole

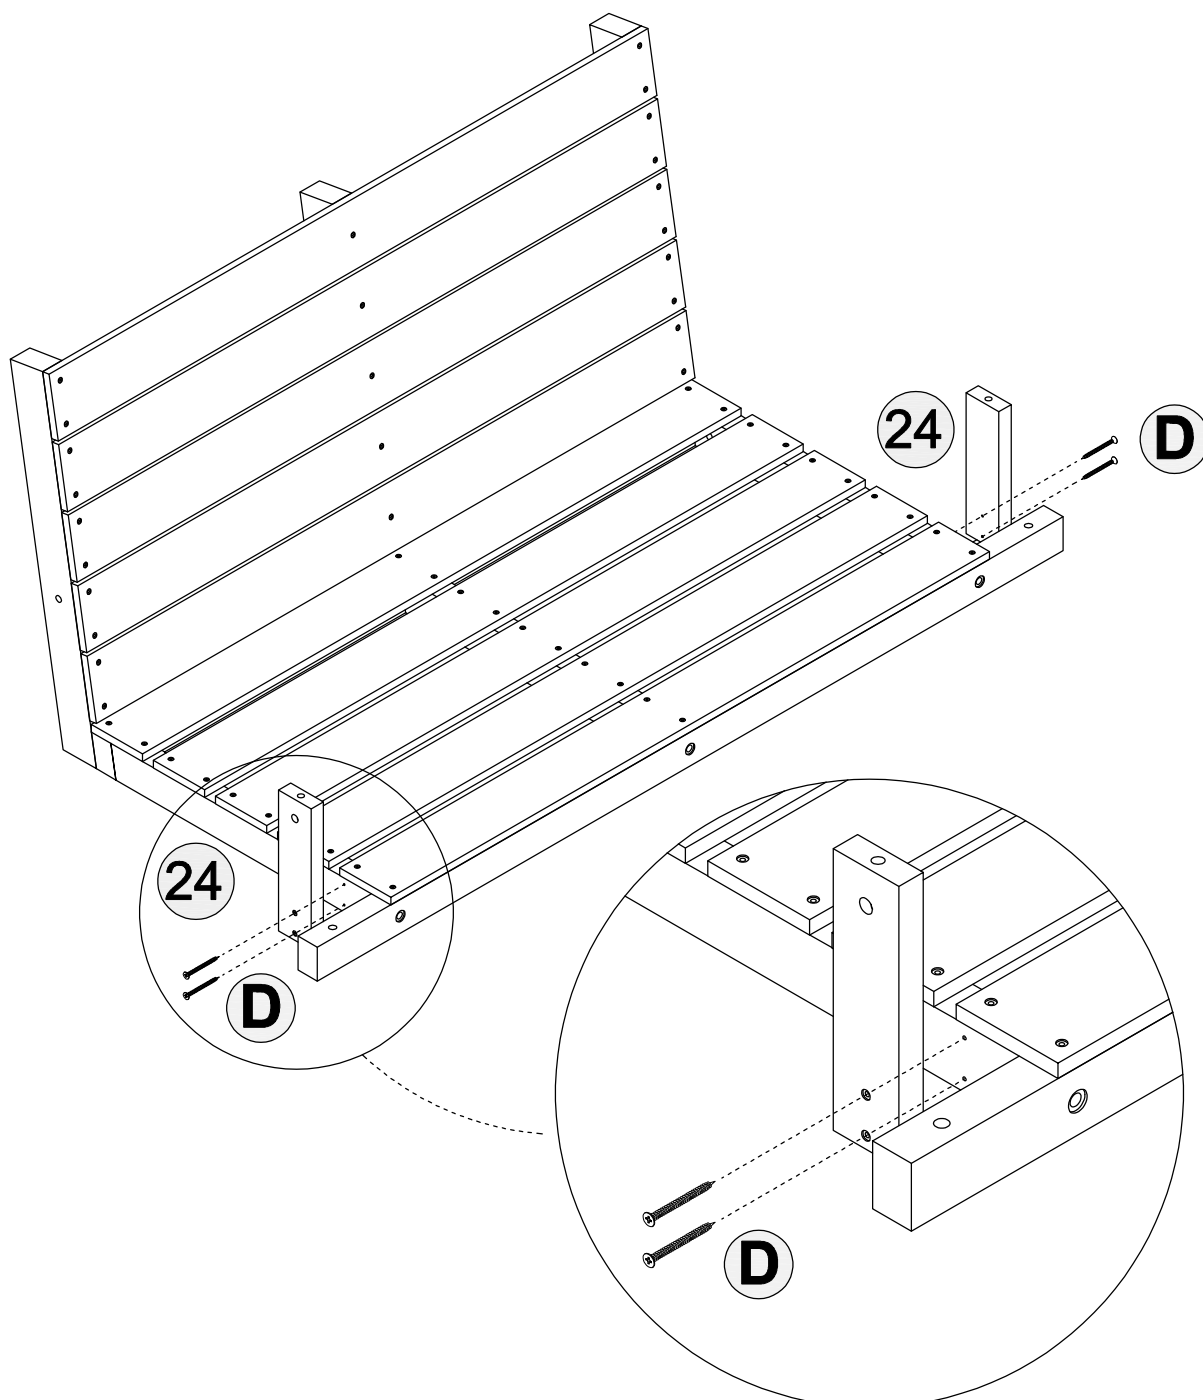


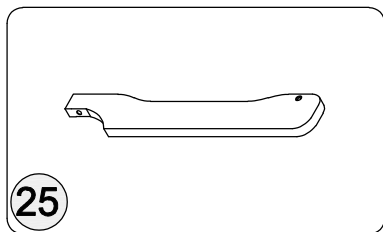

Left handrail
Qty:1

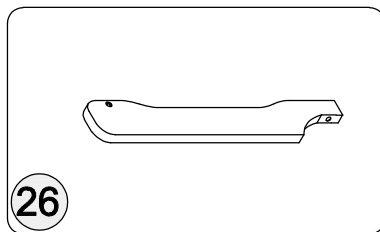

Right handrail
Qty:1



M8*60

F

x 2




Ø12*15

W


x 2




1. Firstly, use tool L to place and hold hardware W in place, paying attention to the direction of hardware W
2. Thread hardware F through component 25 or component 26, and use tool K to screw hardware F onto hardware W

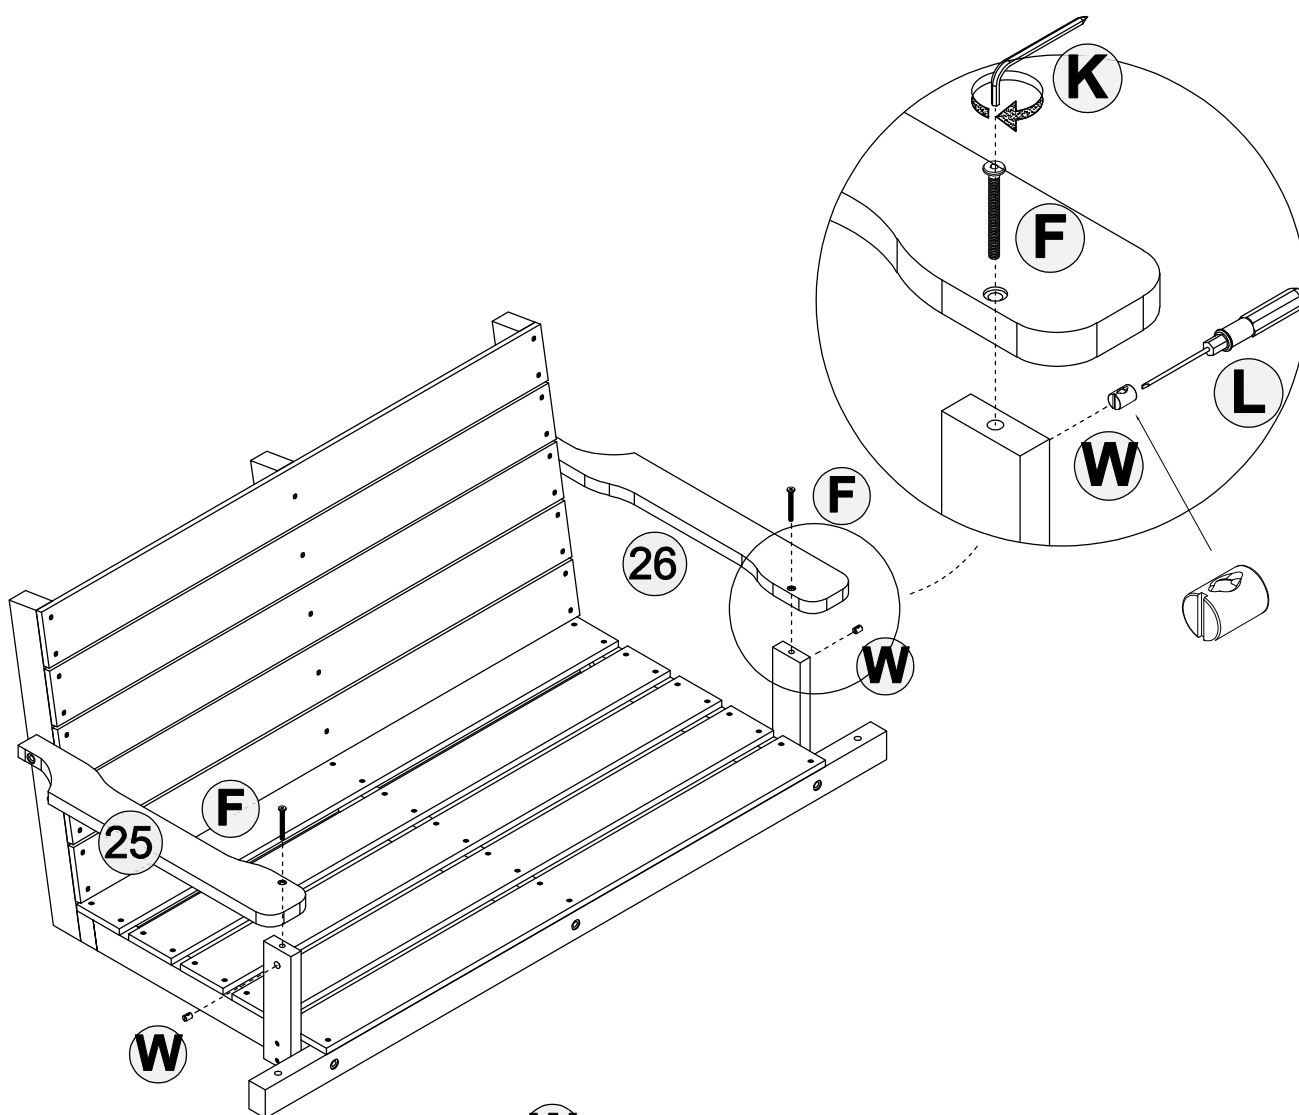

First put **W** in,
then use **F** to tighten **W**.



1. Screw hardware M onto hardware O, pass through hardware S, pass through the component, pass through hardware P, and tighten with hardware X. Adjust hardware O and X to clamp the component tightly

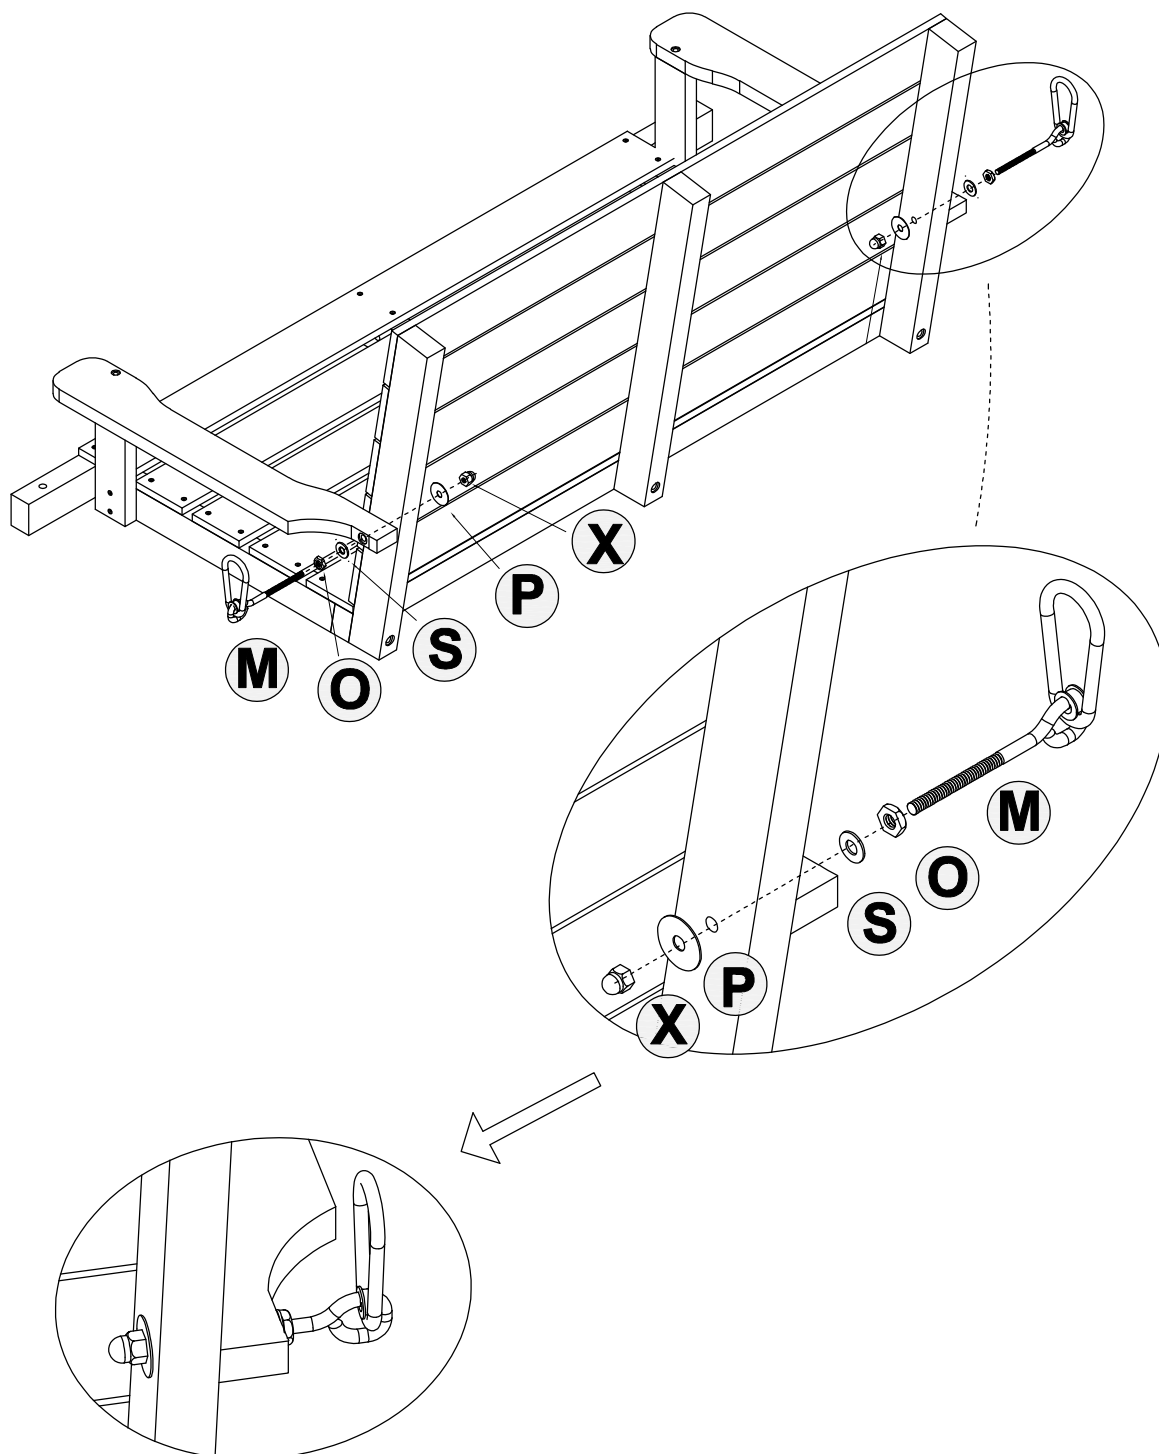

M10*102

M


x 2



M10

O

x 2



M10

P

x 2



S

x 2




M10

X


x 2

1. Screw hardware N onto hardware O, pass through hardware P, pass through the component, pass through hardware P, and tighten with hardware X. Adjust hardware O and X to clamp the component tightly


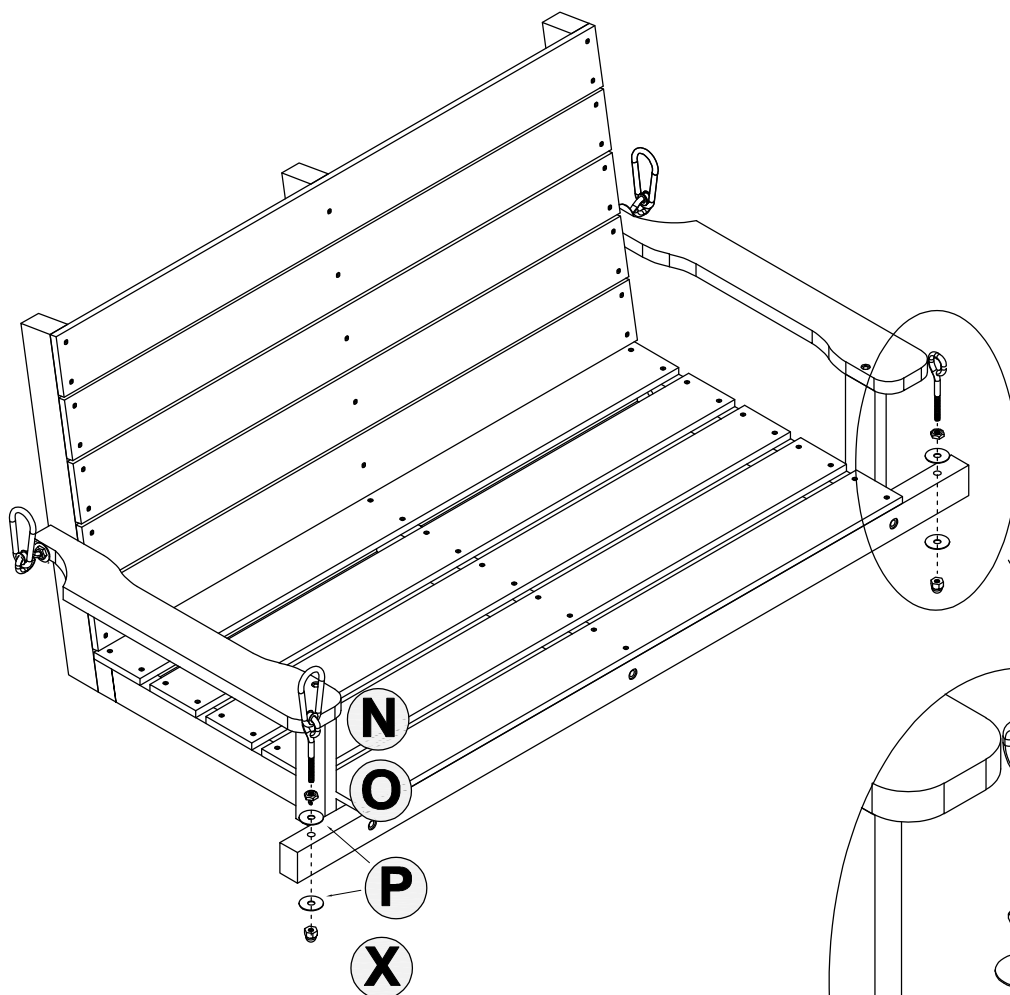


	
M10*82	
N	x 2



	
M10	
O	x 2

	
M10	
P	x 4

	
M10	
X	x 2

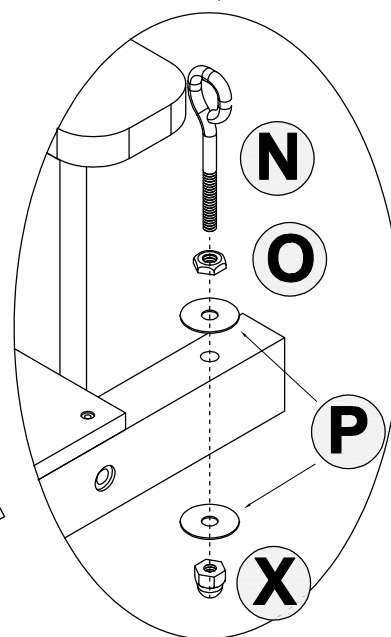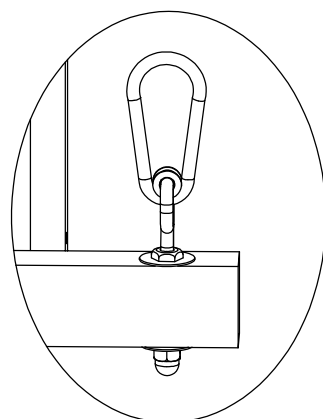

1. Hang the iron chain, and adjust the height of the iron ring at the lower end of the chain to suit different positions

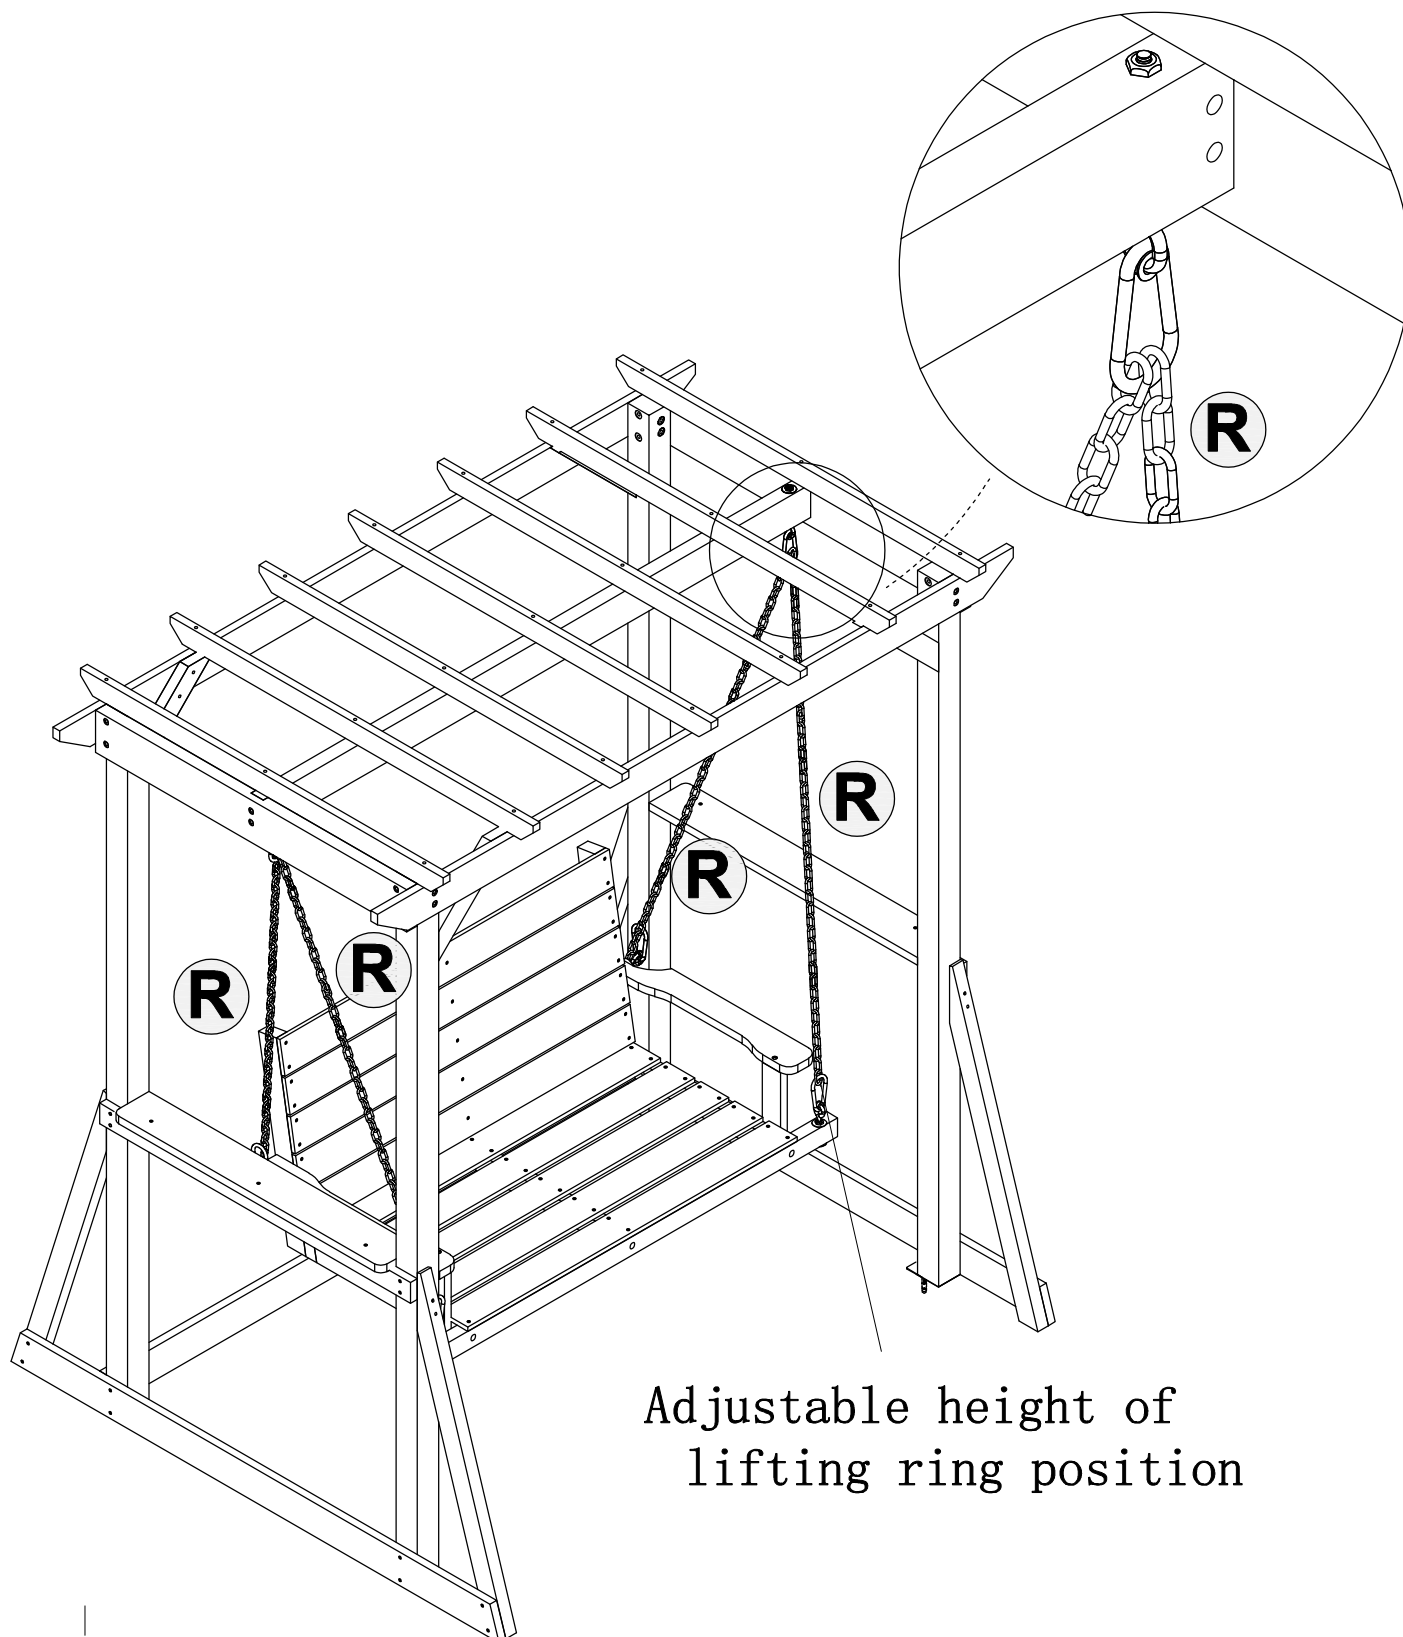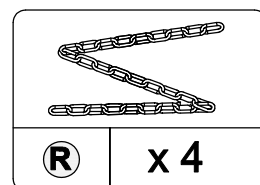

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOUR ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.

AFTER-SALES CONTACT



adelahu@fufugaga.com



208-820-0068

208-820-0799