



STANDARD BED

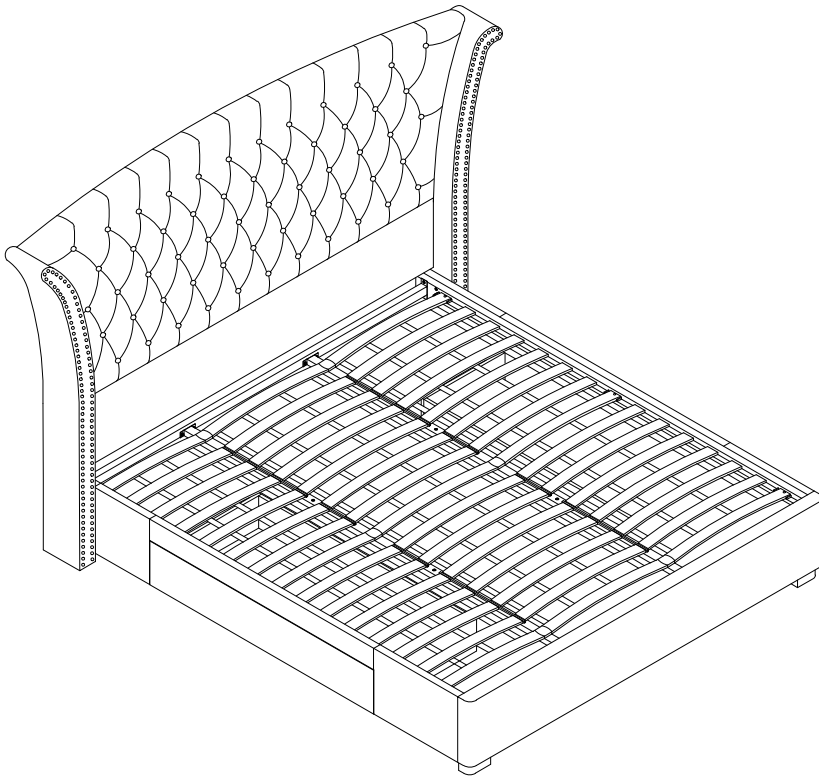


Please TEAR OFF this shrink film from side!
DO NOT USE CUTTER!

IMPORTANT NOTE



1. FOR THE PROTECTION OF YOUR FURNITURE, PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE TO PREVENT ANY DAMAGE.
2. DO NOT USE POWER TOOLS TO ASSEMBLE THE BED.
3. PLEASE PERIODICALLY CHECK ALL FITTINGS AND RE-TIGHTEN AS NECESSARY.
4. DO NOT USE THE BED UNLESS ALL BOLTS AND SCREWS ARE FIRMLY SECURED.
5. YOU CAN ASSEMBLE IT WITH OUR PACKAGING TOOLS OR WITH A.

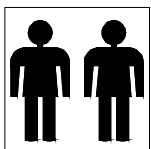

Minimum two
person assembly

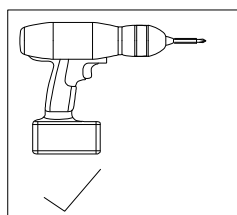


PART LIST

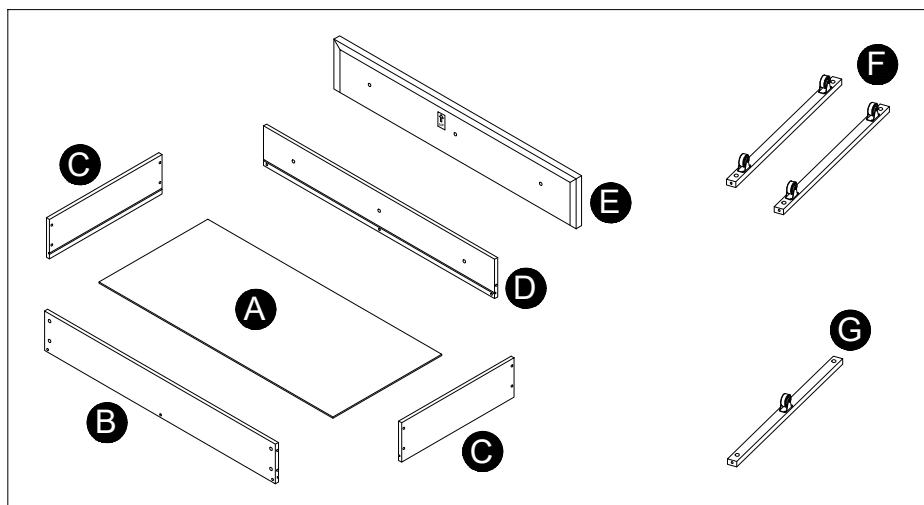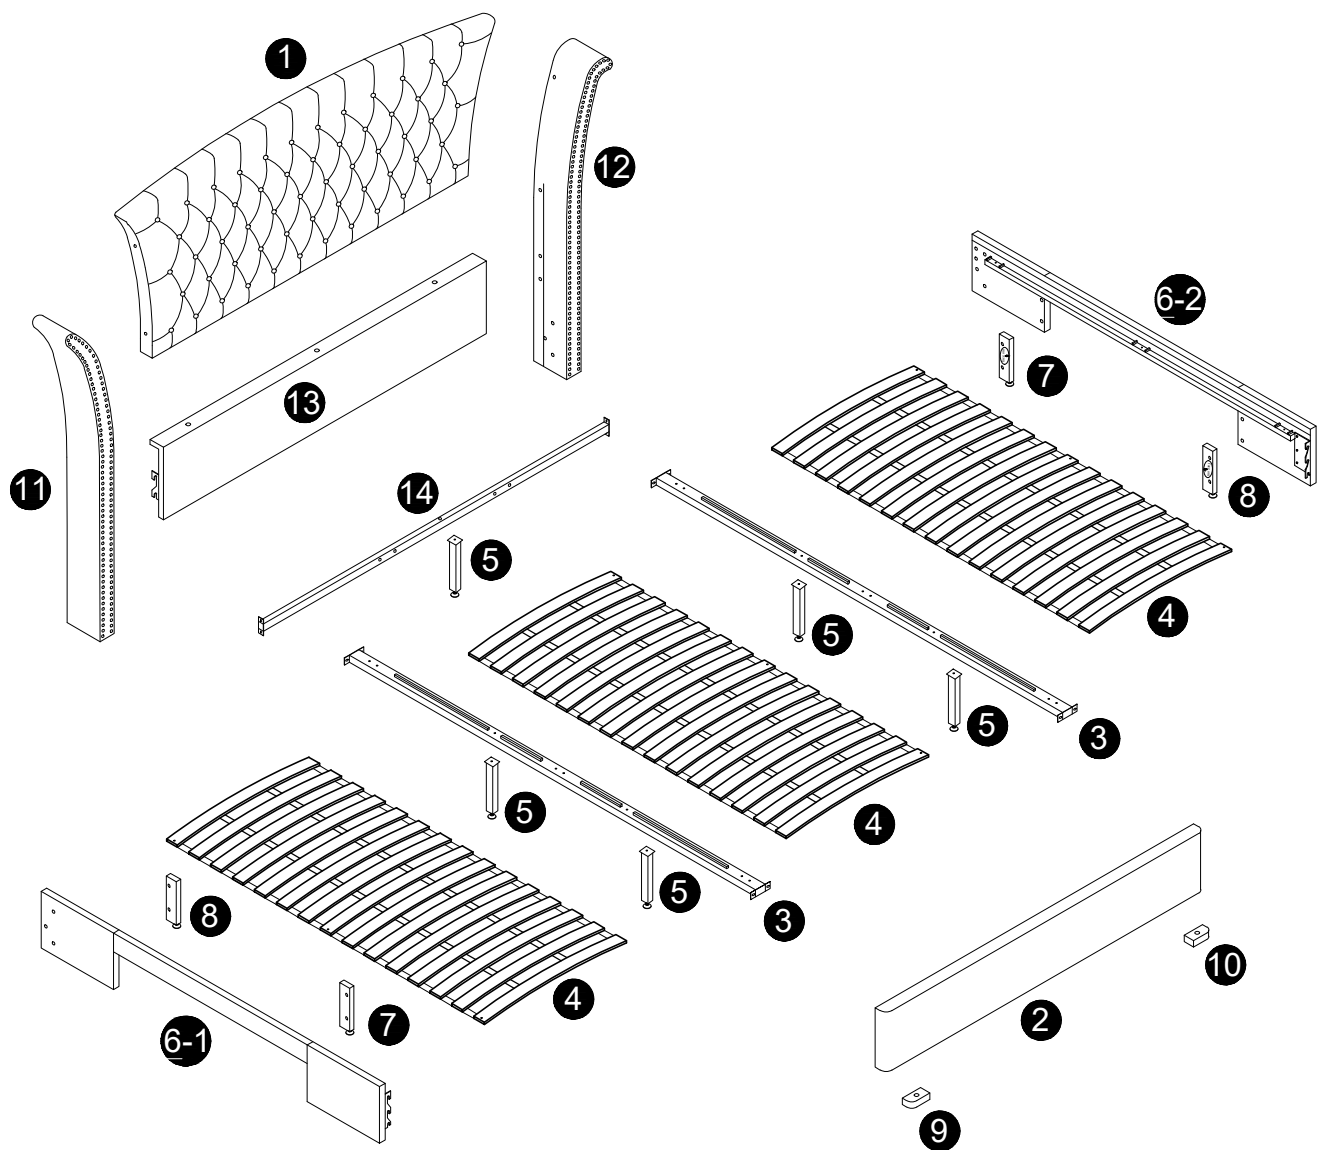


x2

PART LIST


① x 1pc

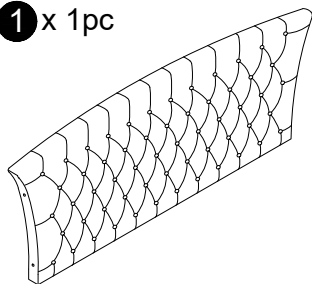


② x 1pc

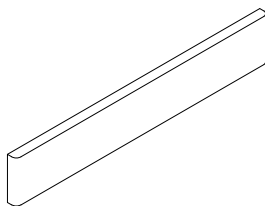

③ x 2pcs

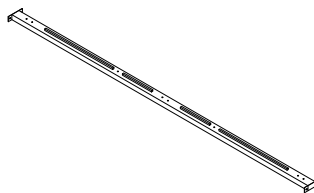


④ x 3pcs

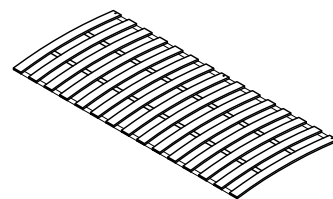


⑤ x 5pcs



⑥-1 x 1pc

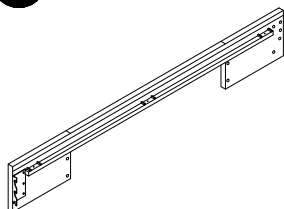


⑥-2 x 1pc

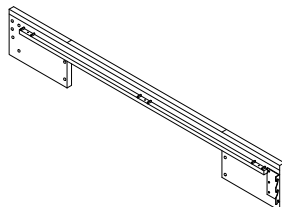

⑦ x 2pcs



⑧ x 2pcs




⑨ x 1pc




⑩ x 1pc




⑪ x 1pc




⑫ x 1pc




⑬ x 1pc

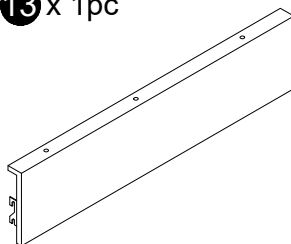


⑭ x 1pc

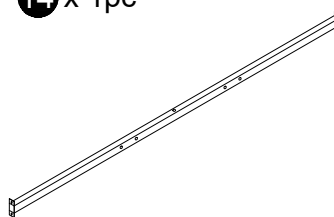


Ⓐ x 2pcs

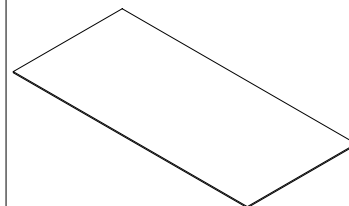


Ⓑ x 2pcs

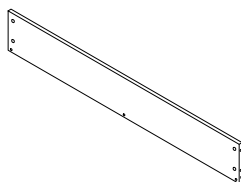


Ⓒ x 4pcs




Ⓓ x 2pcs

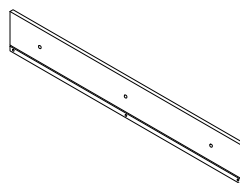


Ⓔ x 2pcs

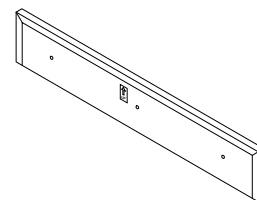


Ⓕ x 4pcs

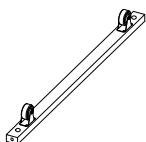

Ⓖ x 2pcs

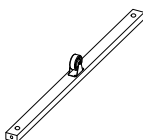

HARDWARE LIST



H1 M5 x 1pc



H2 M8x25mm x 22pcs



H3 M8x50mm x 21pcs



H4 M8x35mm x 11pcs



H5 M8 x 43pcs



H6 M8x17mm x 43pcs



H7 M8x22mm x 13pcs




H8 x 6pcs



H9 x 6pcs



H10 x 28pcs



H11 5x50mm x 28pcs



H12 M8x100mm x 2pcs




H13 M8x 2pcs




H14 M14x 1pc


1

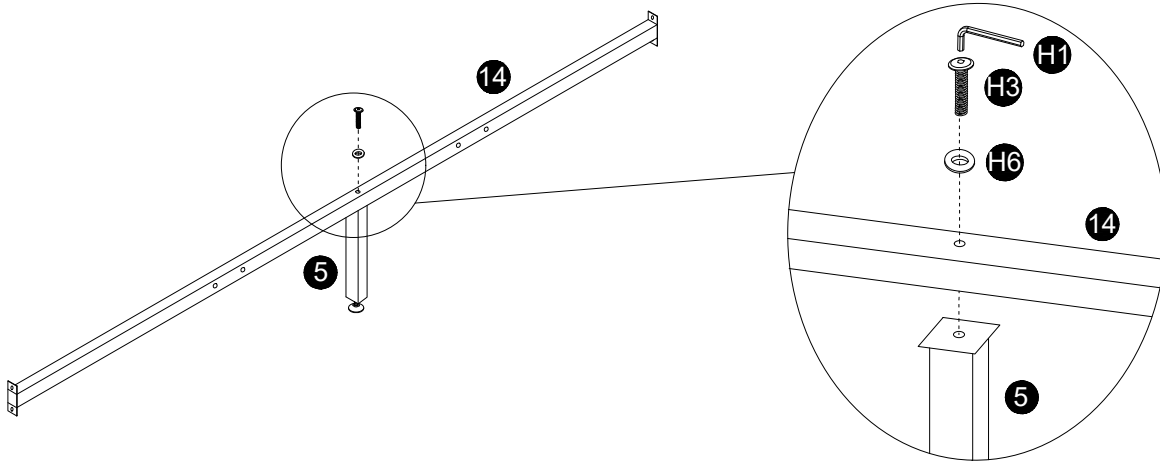


2

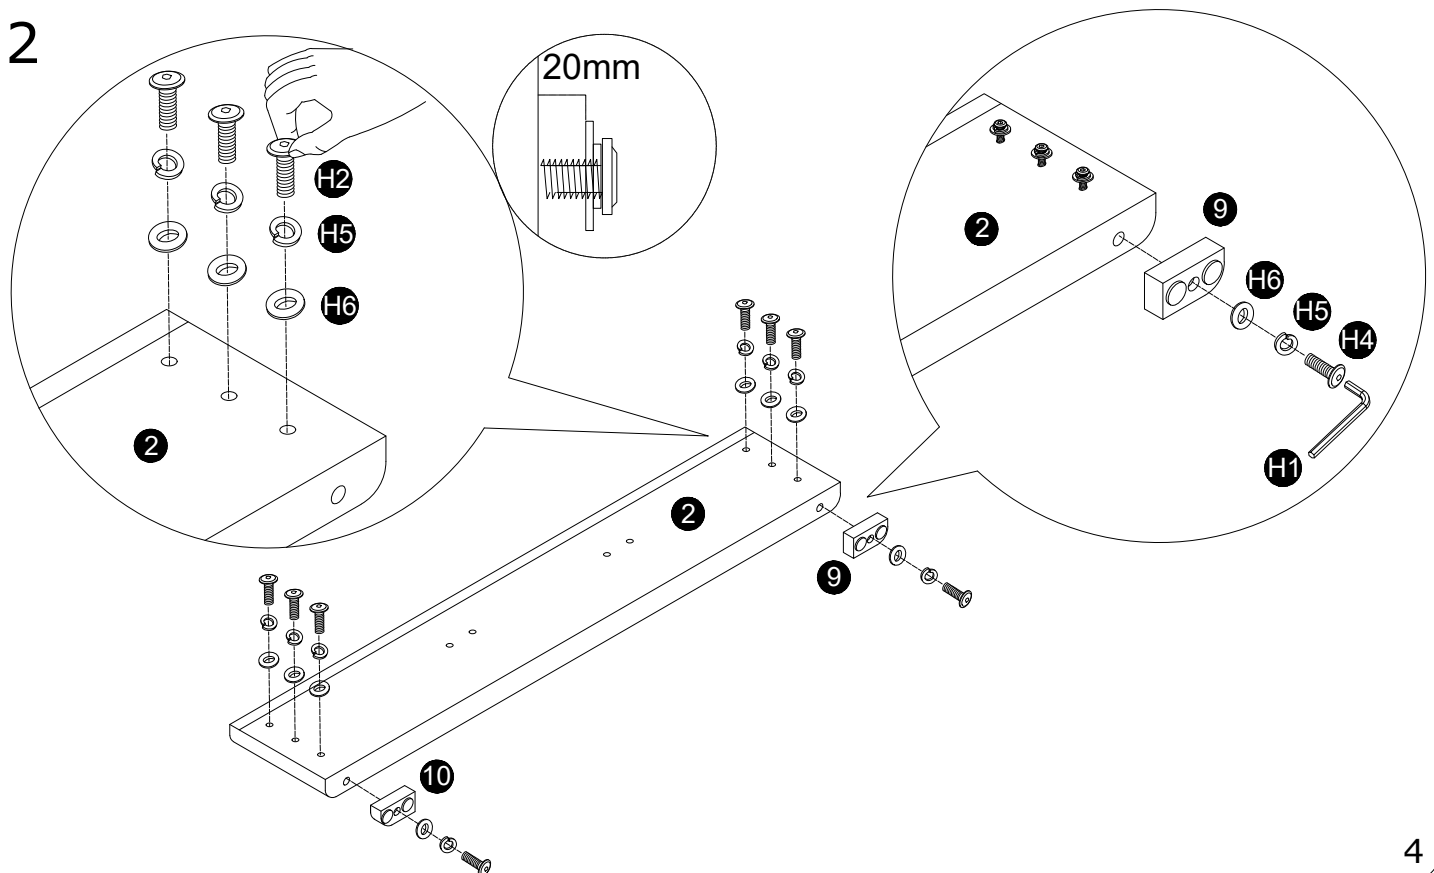

3

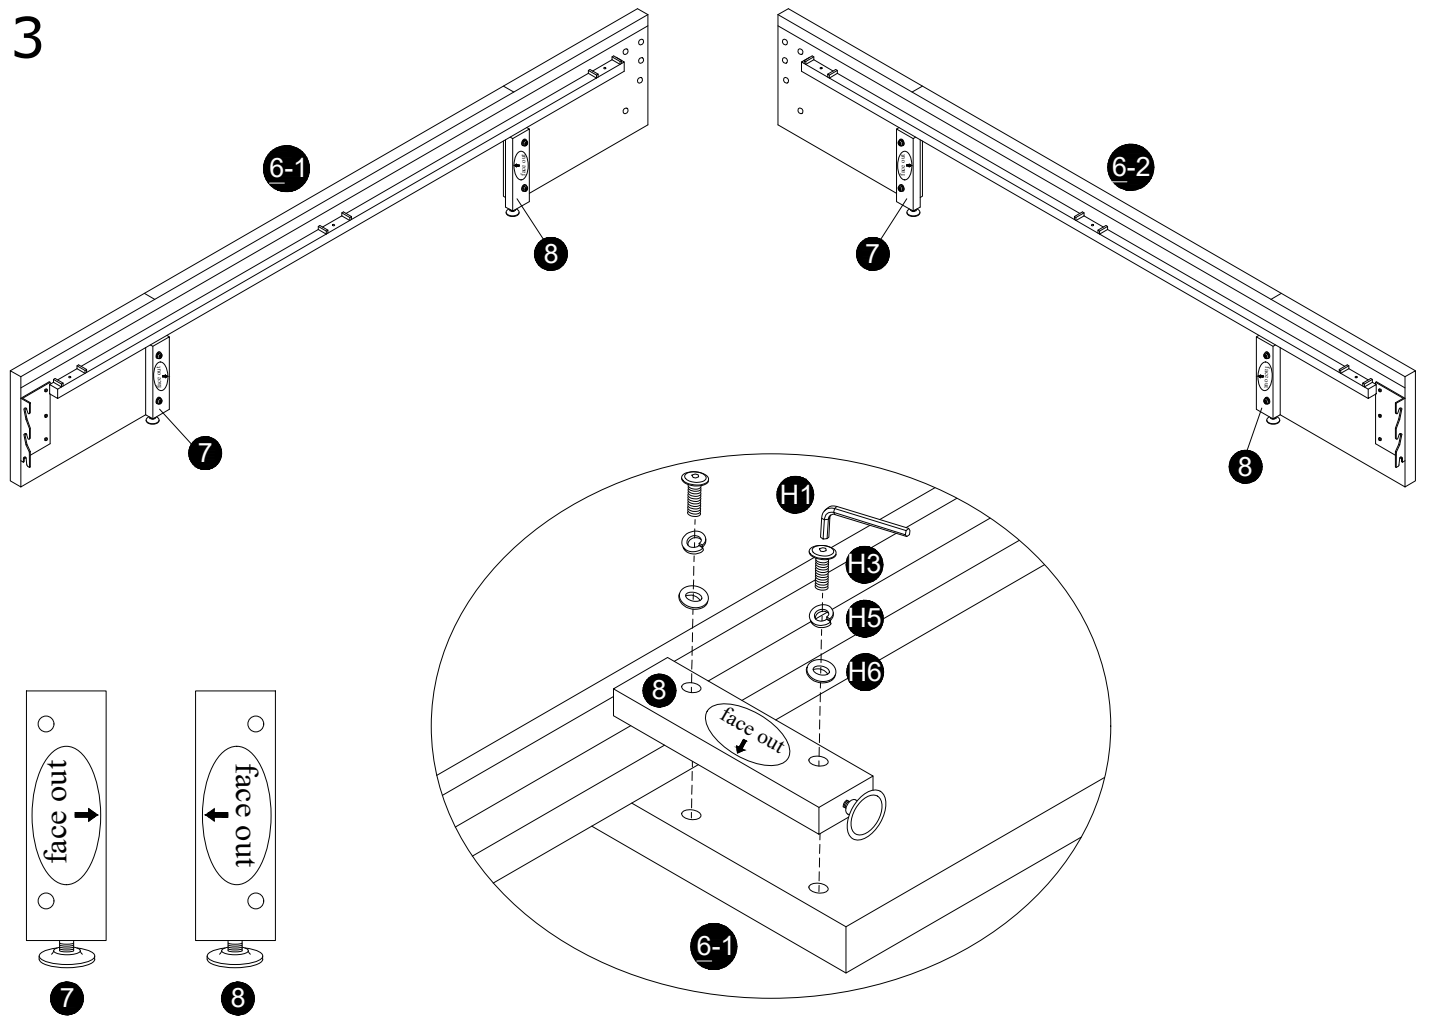


4

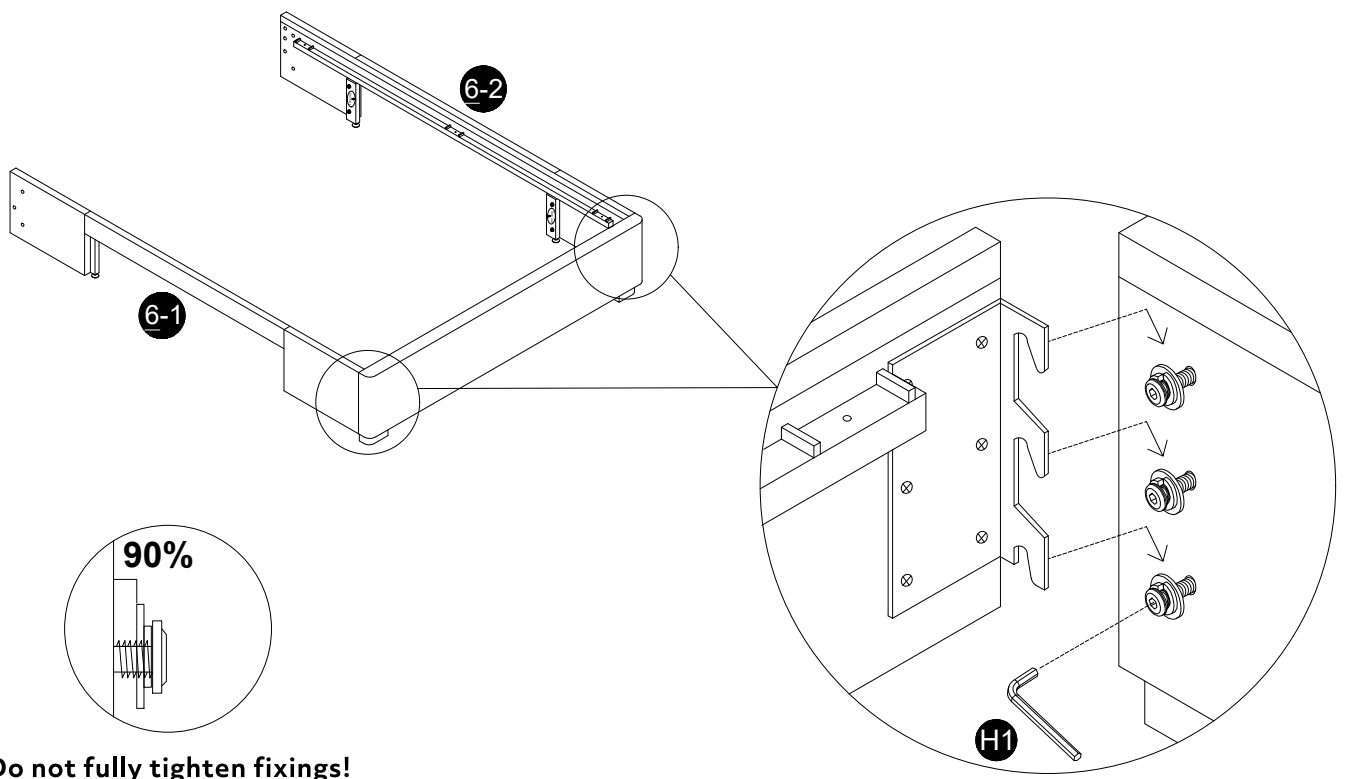


Do not fully tighten fixings!


5

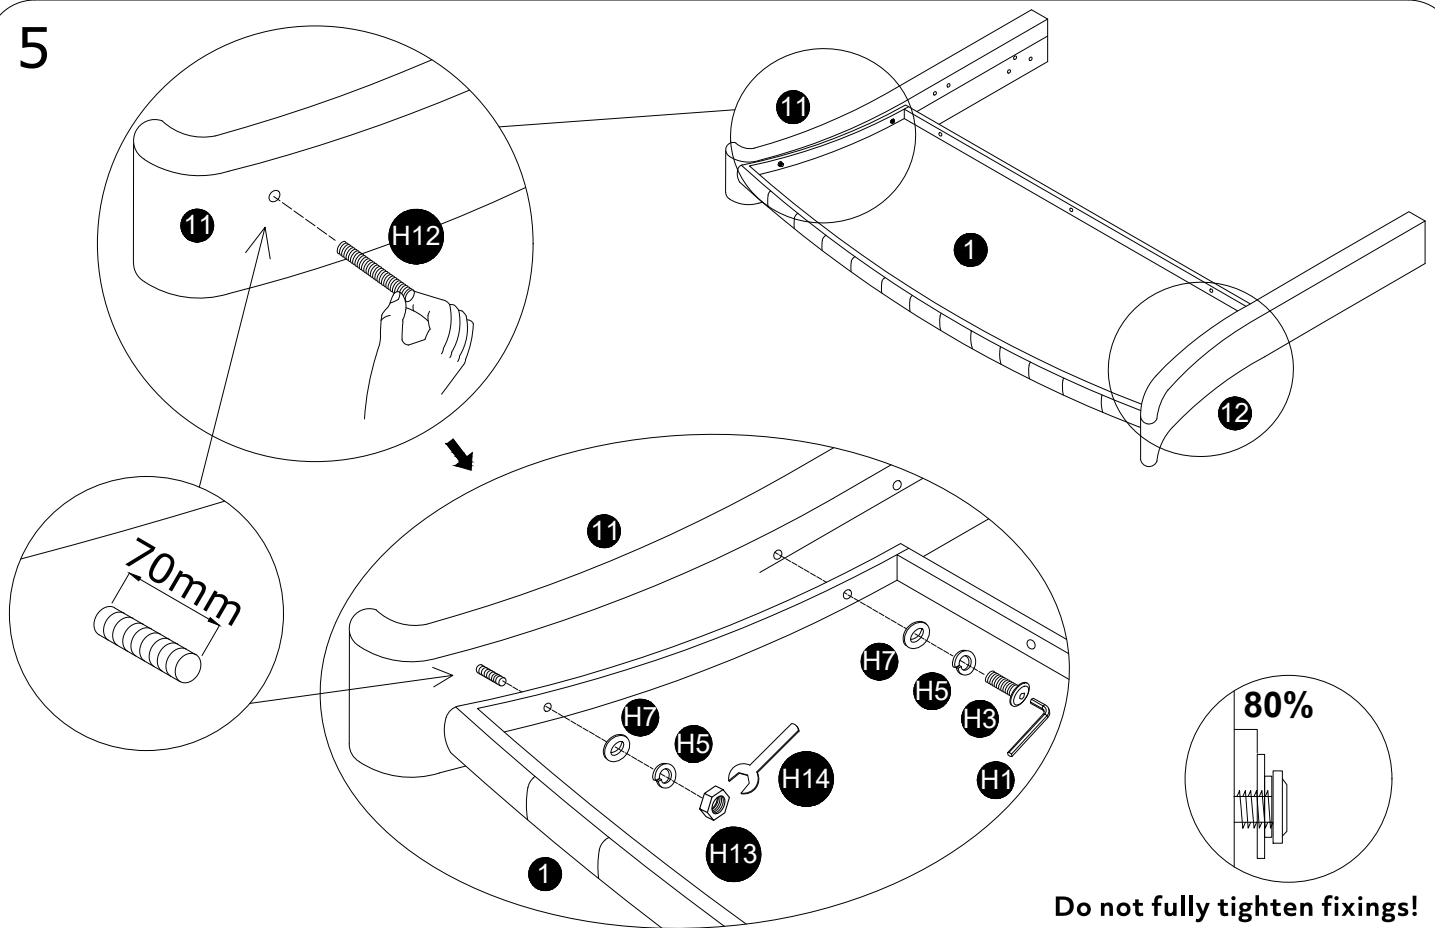


6

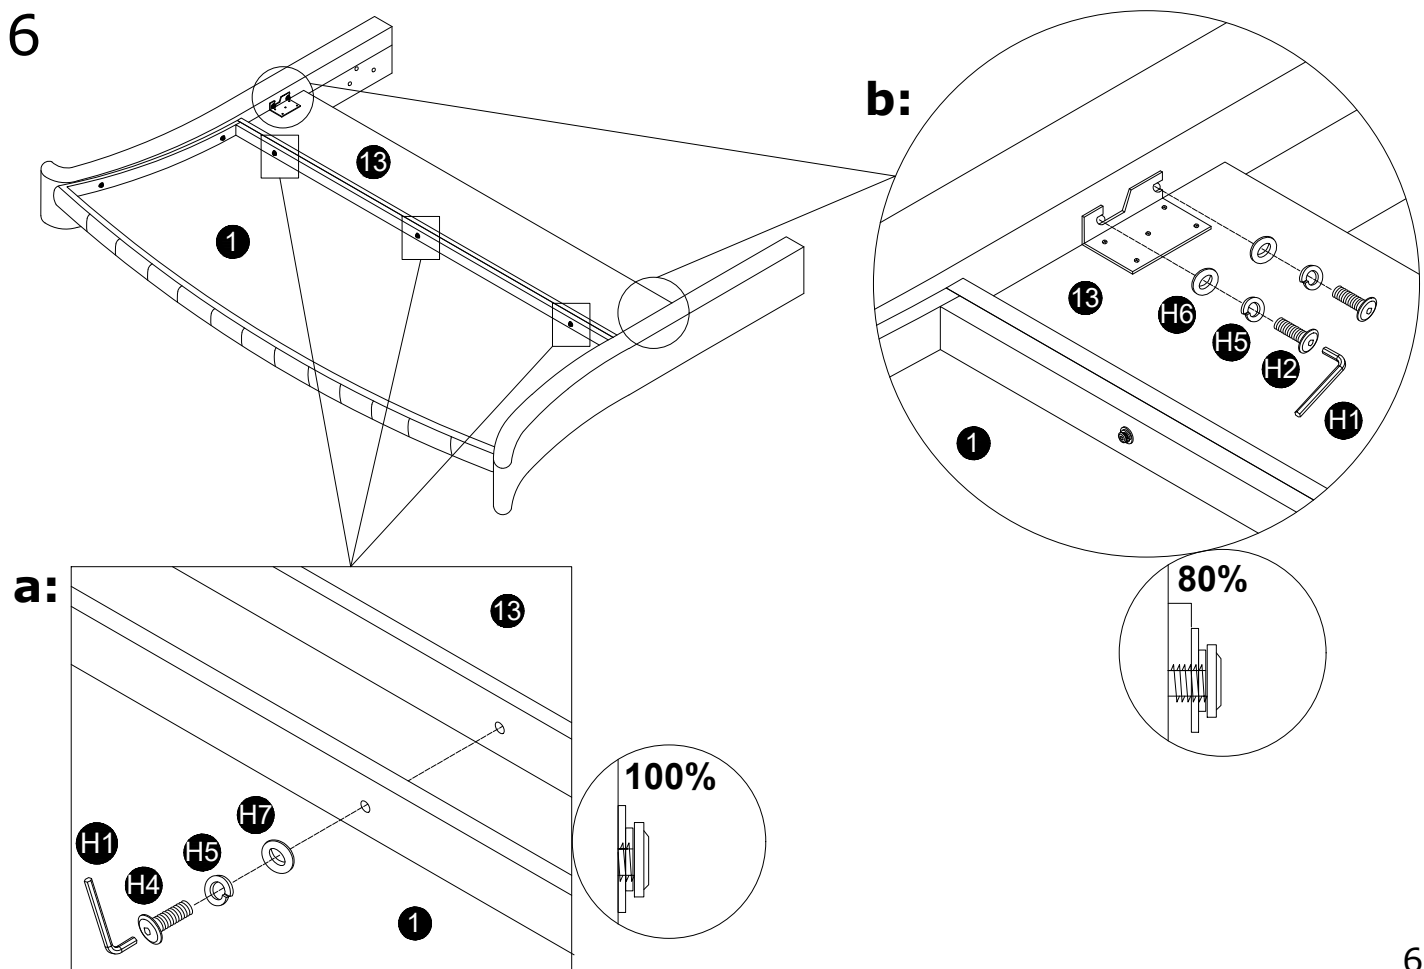



7

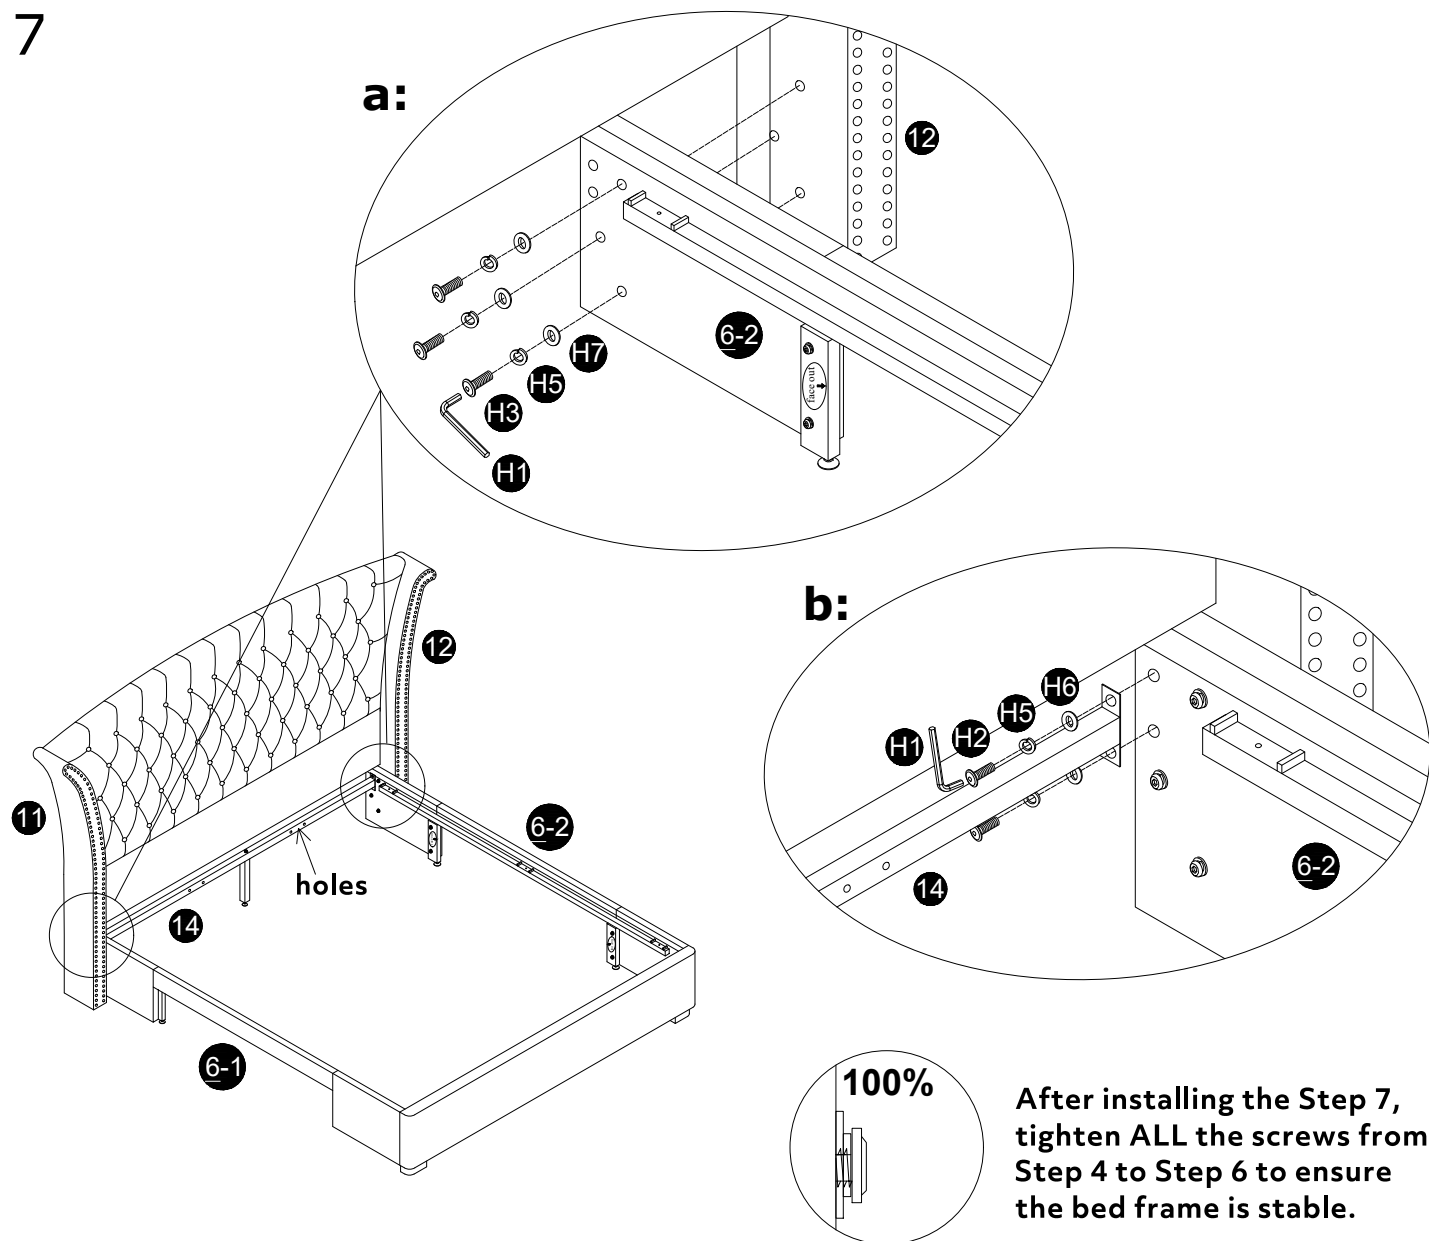

8





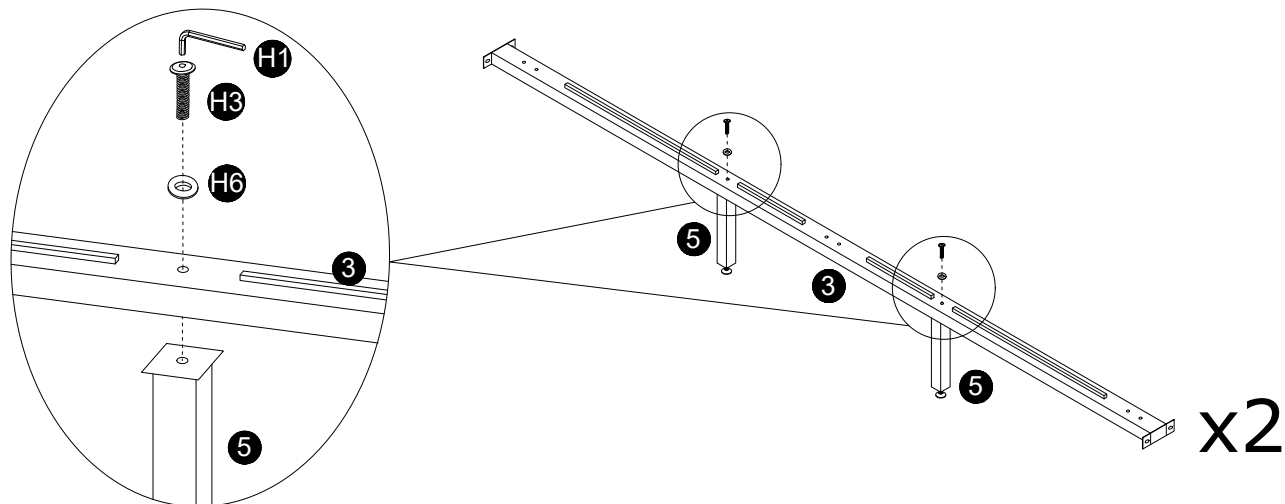


9

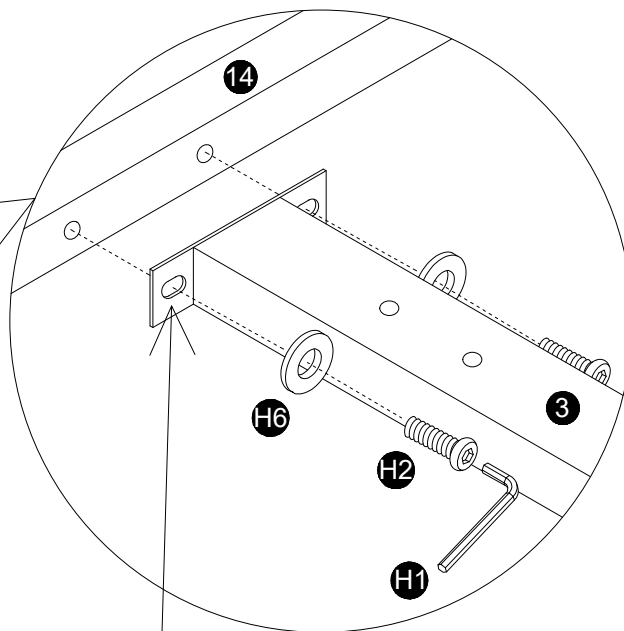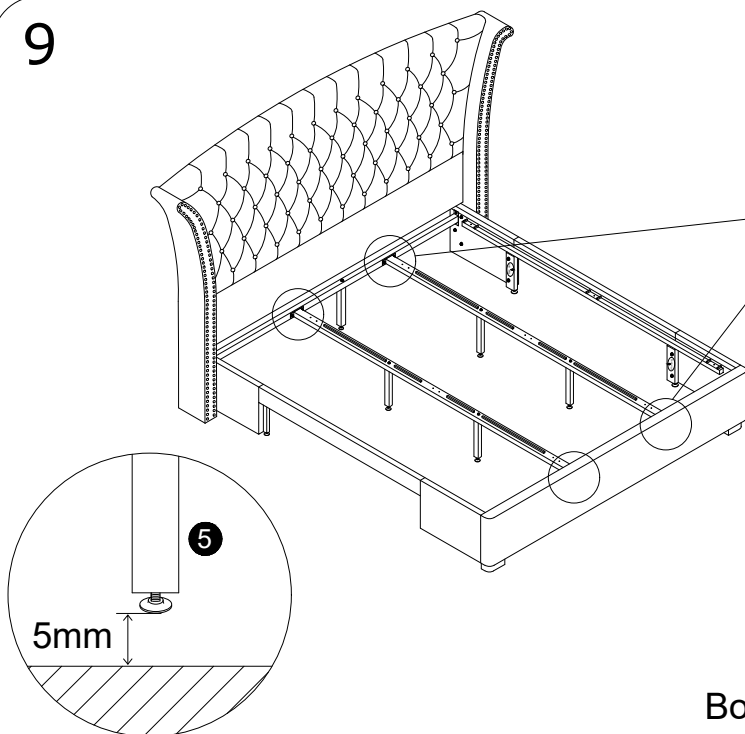



Bolts should be in centre of long holes

10

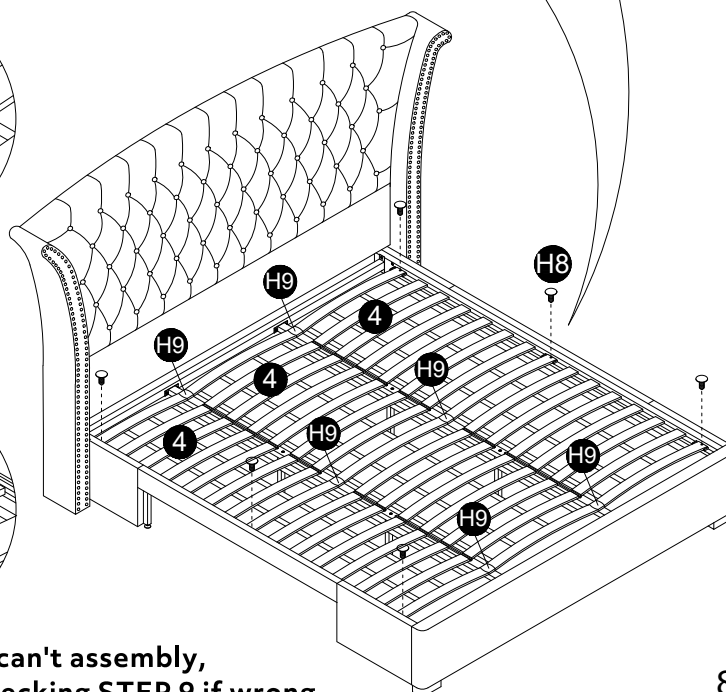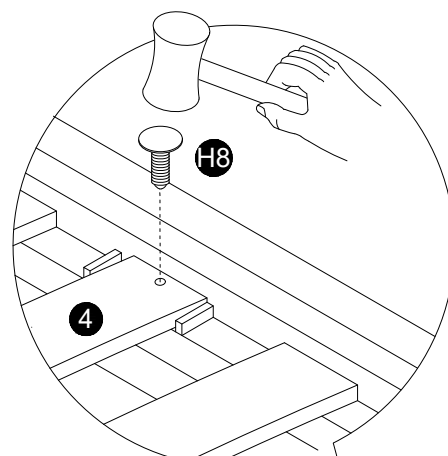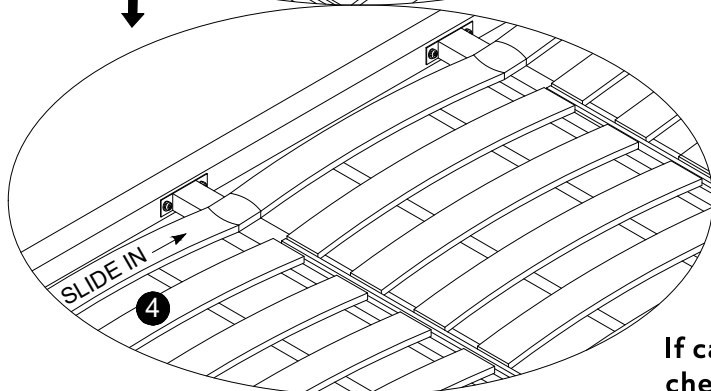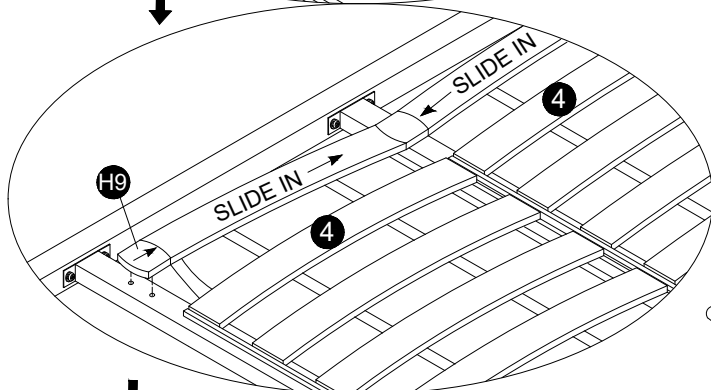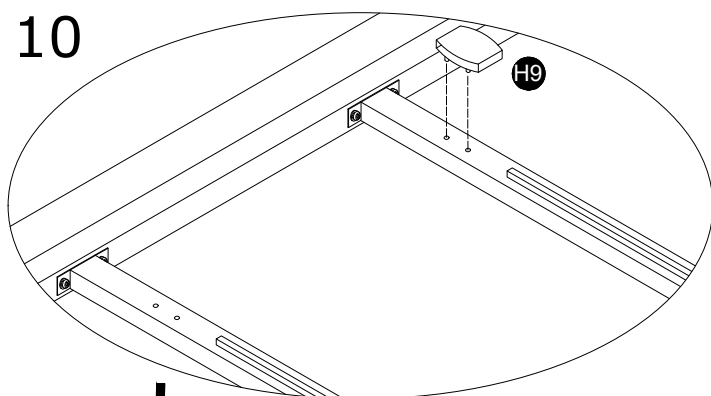

If can't assembly,
checking STEP 9 if wrong


11

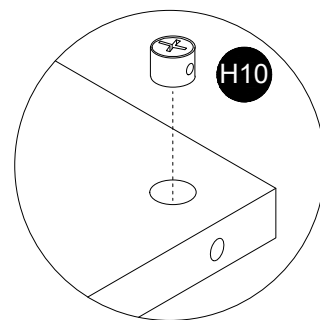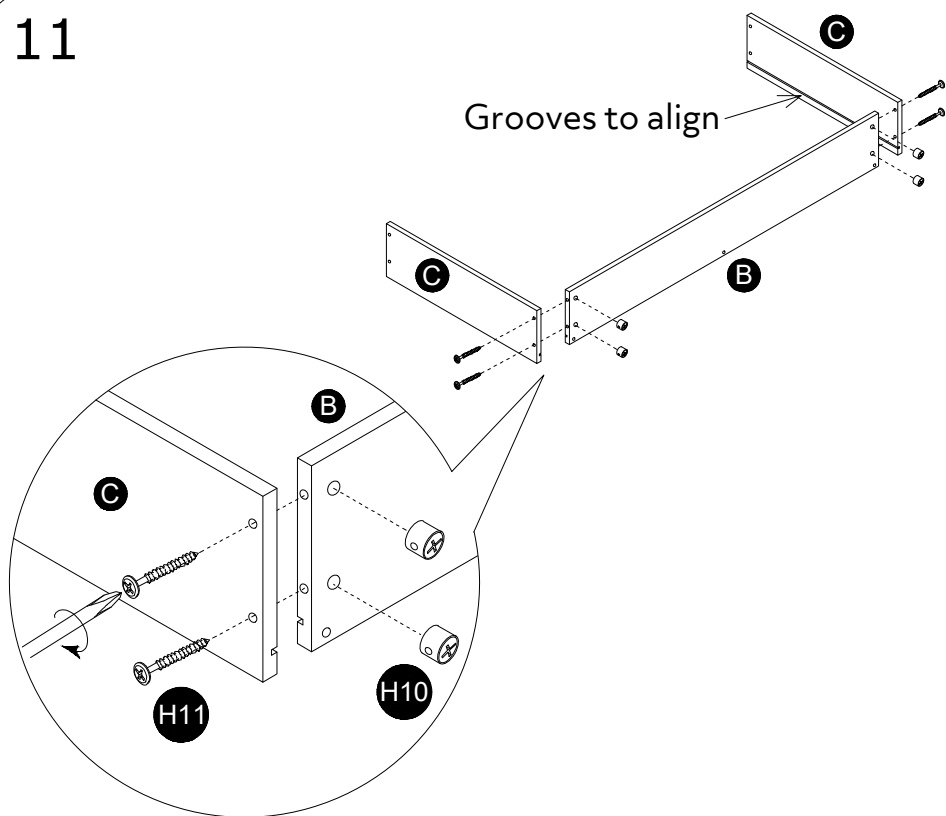


IMPORTANT:

Make sure when fitting the nuts that the hole is in correct alignment with the hole in the panel edge.


12

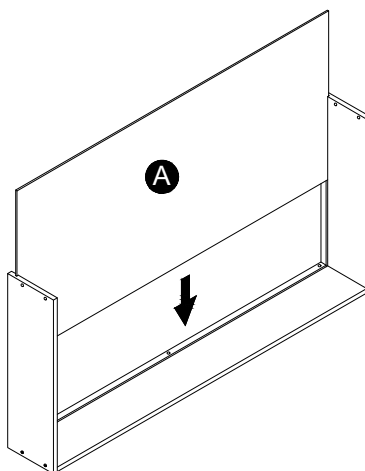


13

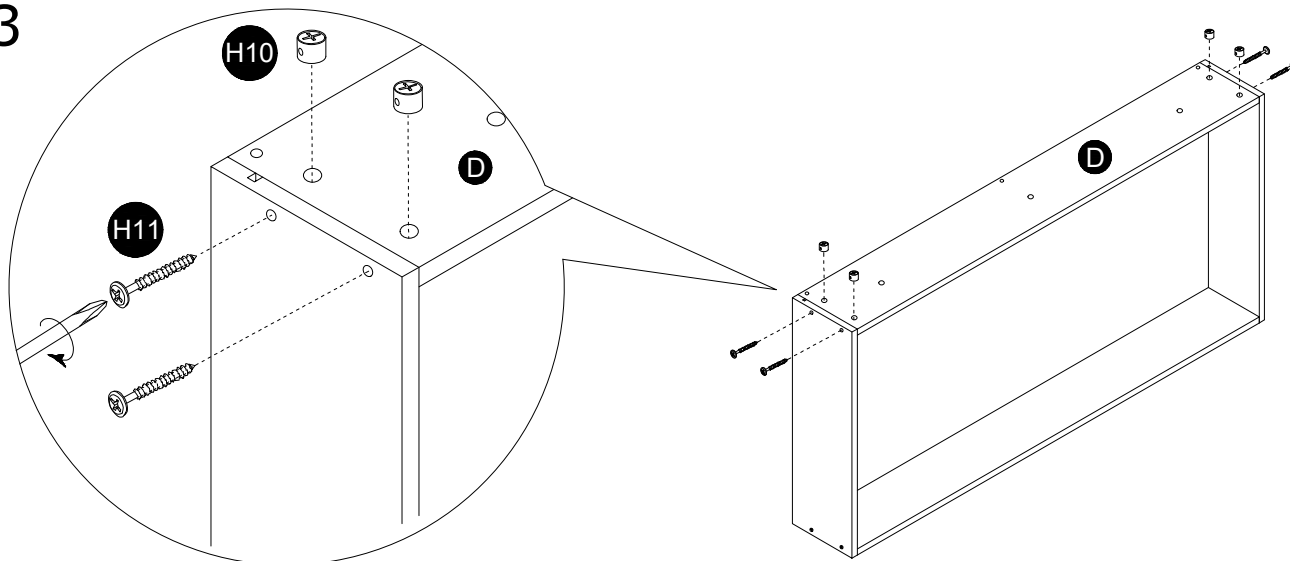


14

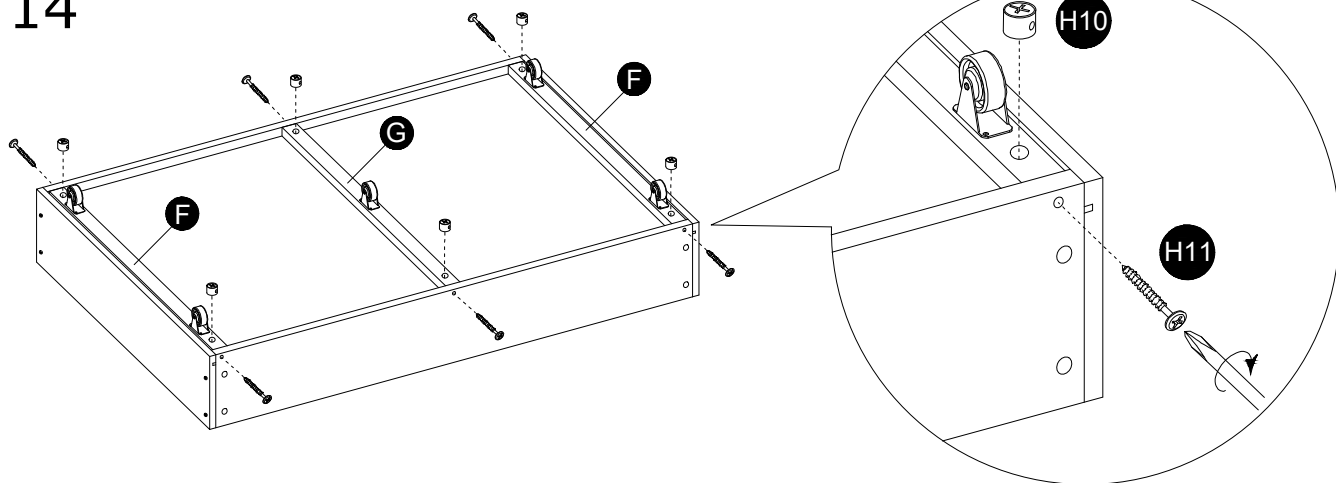

15

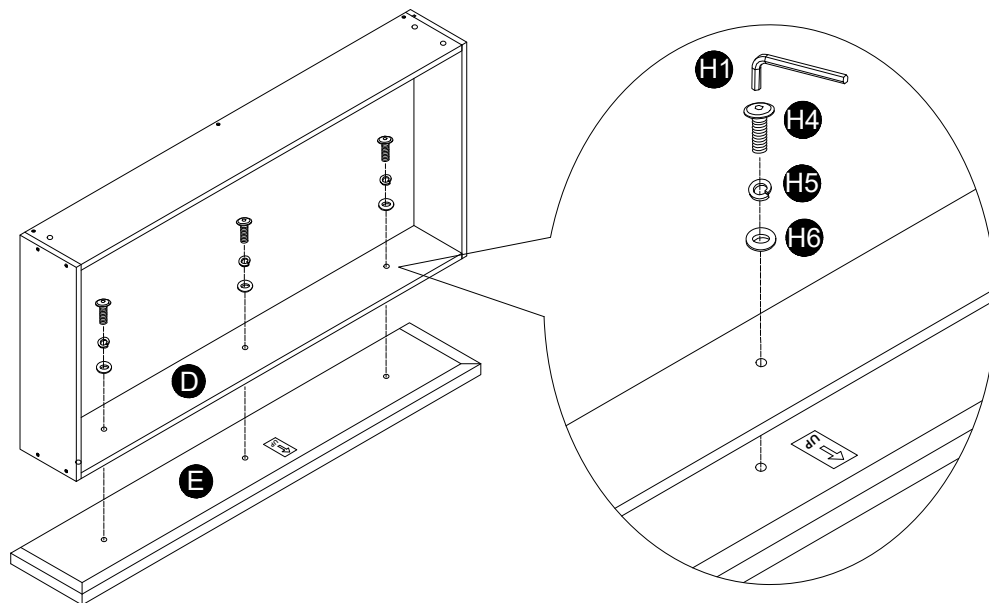

16

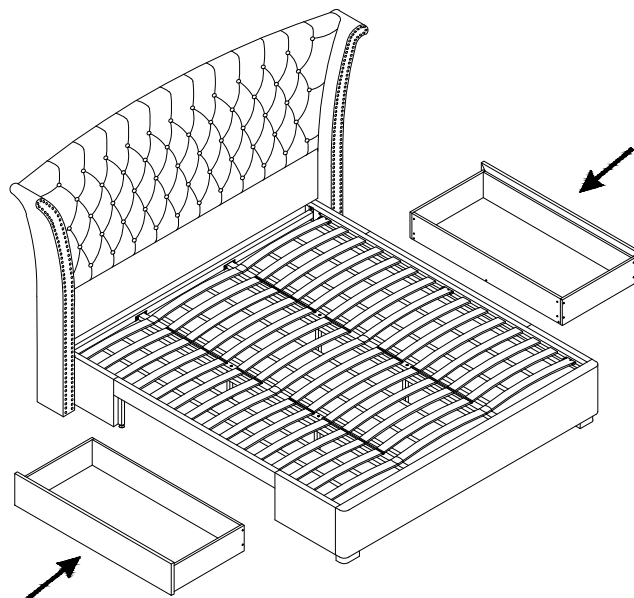

Job Complete !

In the interest of our environment please dispose of all packaging thoughtfully.