
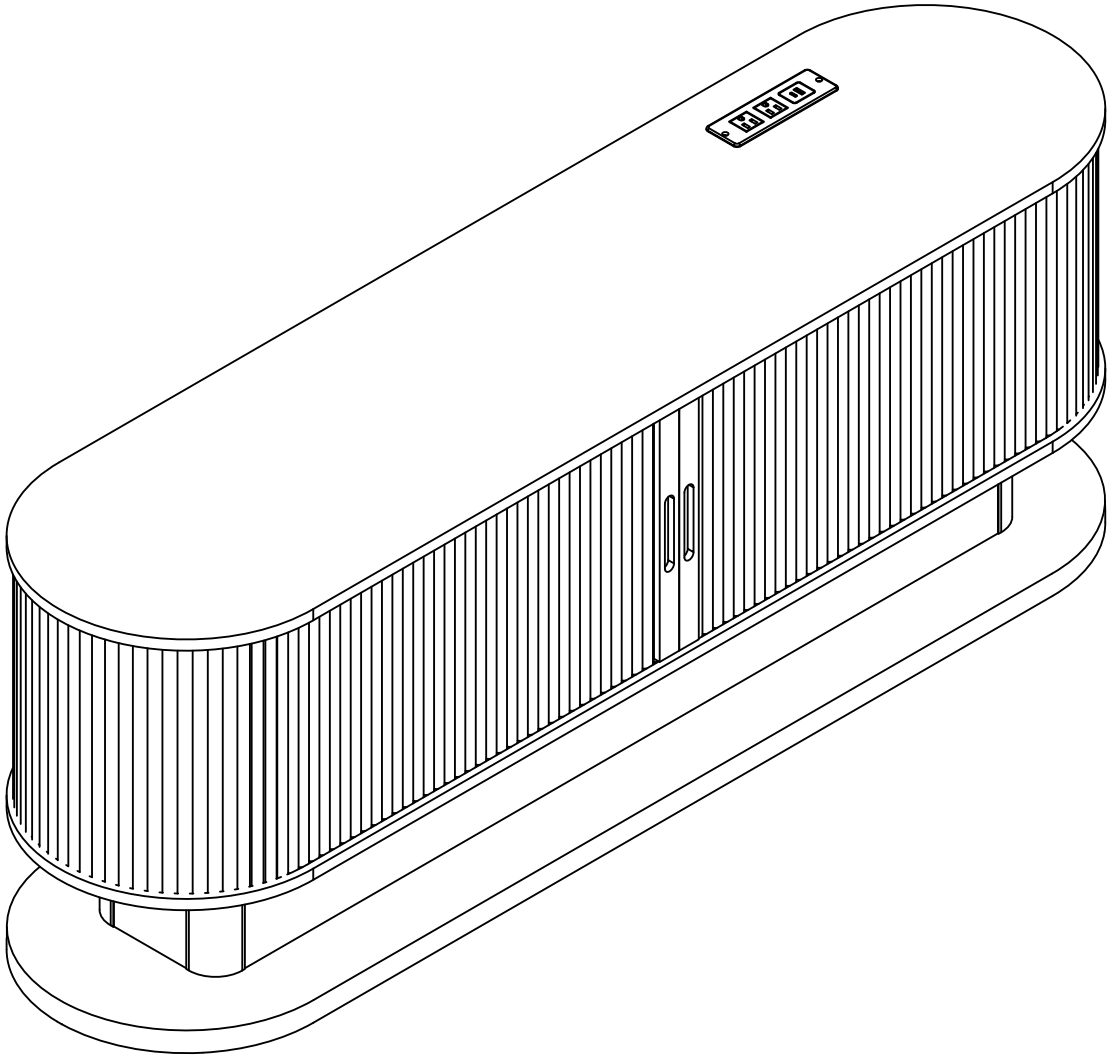


As this item contains many parts, please read the installation instruction carefully before installation and complete the installation with the cooperation of your partner. Please use tools properly and carefully. If you have any questions about the product and installation, please contact us.


Before You Start

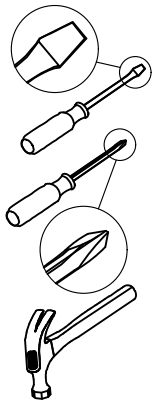

- Read through each step carefully and follow the proper order
- Separate and count all your parts and hardware
- Give yourself enough room for the assembly process
- Have the following tools: Flat Head Screwdriver, #2 Phillips Head Screwdriver and Hammer
- Caution: If using a power drill or power screwdriver for screwing, please be aware of to slow down and stop when screw is tight. Failure to do so may result in stripping the screw. （Assembly speed can be increased by using electric screwdriver）

Helpful Hints

PEOPLE NEEDED FOR ASSEMBLY: **1-2**

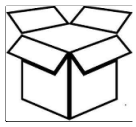


- Open your item in the area you plan to keep it to avoid excessive heavy lifting.

- Identify, sort and count the parts before attempting assembly.



- Compression dowels are lightly tapped in with a hammer.

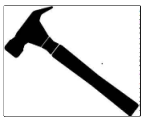

- Slides are labeled with an **R** (right) and **L** (left) for proper placement.



- Make sure to always face the point on the top of the Cam Lock towards the outer edge.



- If there is a back panel in the package, please install it to make sure your unit is complete and sturdy.

-Please fix all the screws provided for the back panel which can enhance product stability. If it is difficult to fix it when tightening, it can be fixed with the help of a hammer and then tightened.




- Do NOT use harsh chemicals or abrasive cleaners on this item.

- Never push, pull, or drag your furniture.


Board Identification

Not actual size

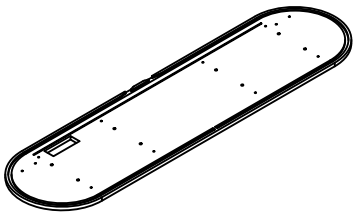


①

Qty:1

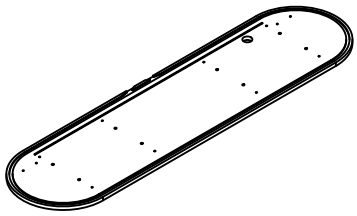


②

Qty:1

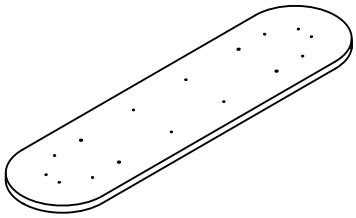


③

Qty:1

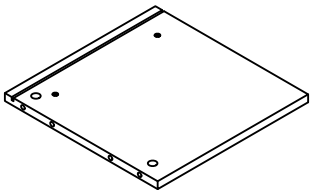


④

Qty:1

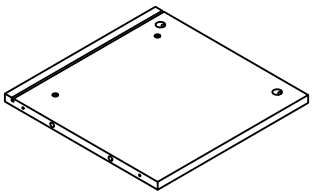


⑤

Qty:1

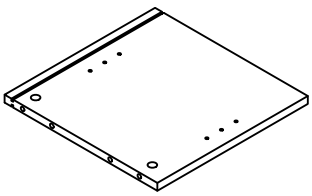


⑥

Qty:1

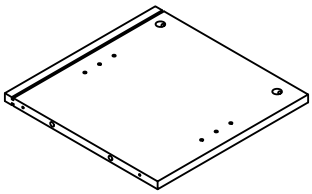


⑦

Qty:1

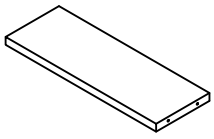

⑧

Qty:1

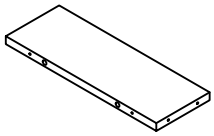


⑨

Qty:1


Board Identification

Not actual size

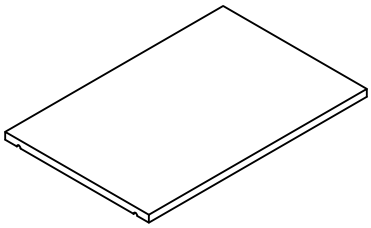


⑩

Qty:1

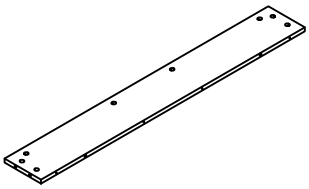


⑪

Qty:2

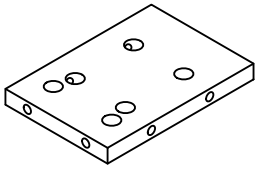


⑫

Qty:2

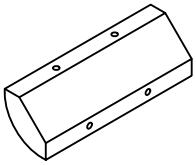


⑬

Qty:4

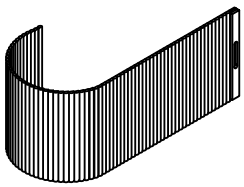


⑭

Qty:1

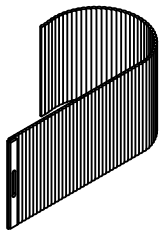


⑮

Qty:1

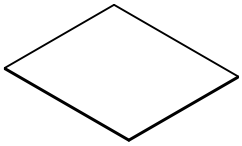

⑯


Qty:2

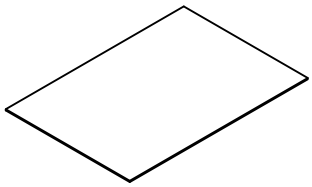


⑰

Qty:1


Part List

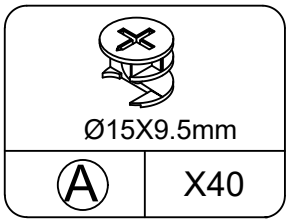


CAM LOCK
spare:3

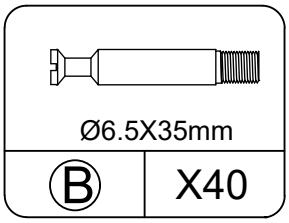


CAM BOLT
spare:3

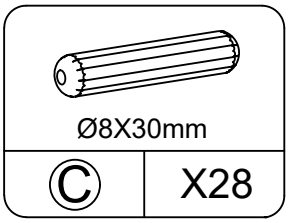


WOOD DOWEL
spare:2

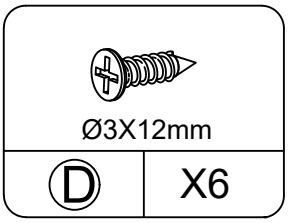


SCREW
spare:1

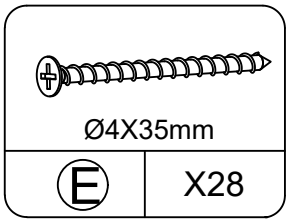


SCREW
spare:2

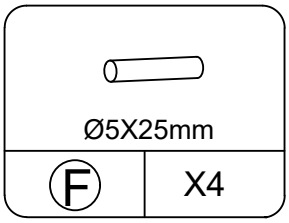


ADJUSTABLE SHELF PIN
spare:1

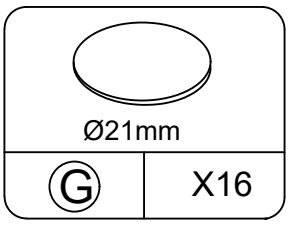


PERFECT STICKER
spare:1

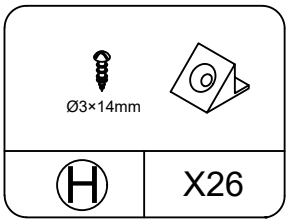


FASTENER
spare:2

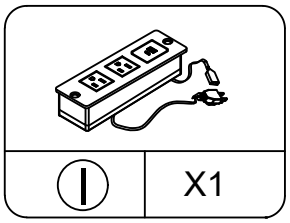


USB ON AC SIDE

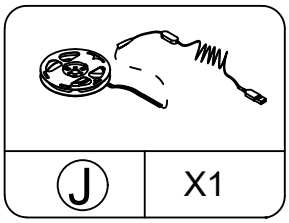

LIGHT STRIP

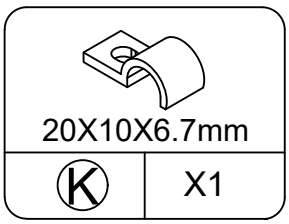


CRIMPING BUCKLE

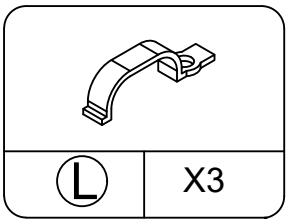


CRIMPING BUCKLE

Part List

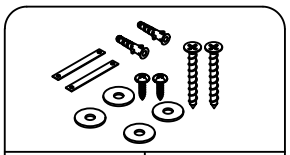


Ⓜ	X1Set

SCREW ANCHOR SET

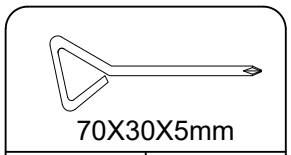

Ⓝ	X1

WRENCH

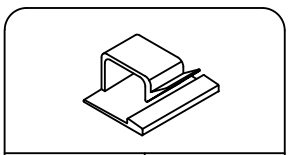


Ⓞ	X3

SELF-ADHESIVE BUCKLE


Cam Lock Fastening System

Insert the cam bolt into the hole first, then insert the cam lock and lock it.

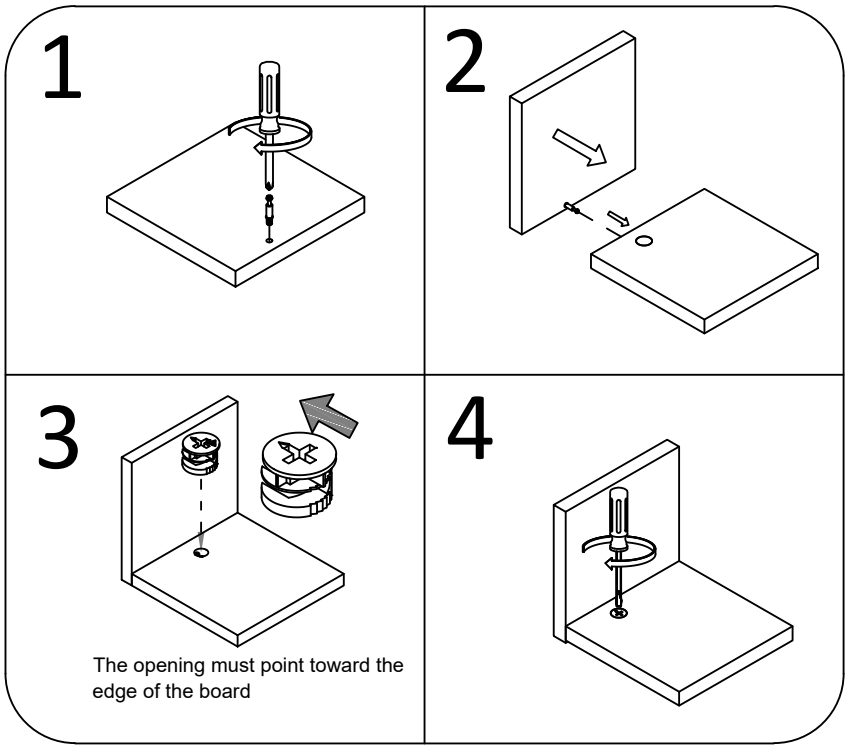



Board Identification


Not actual size

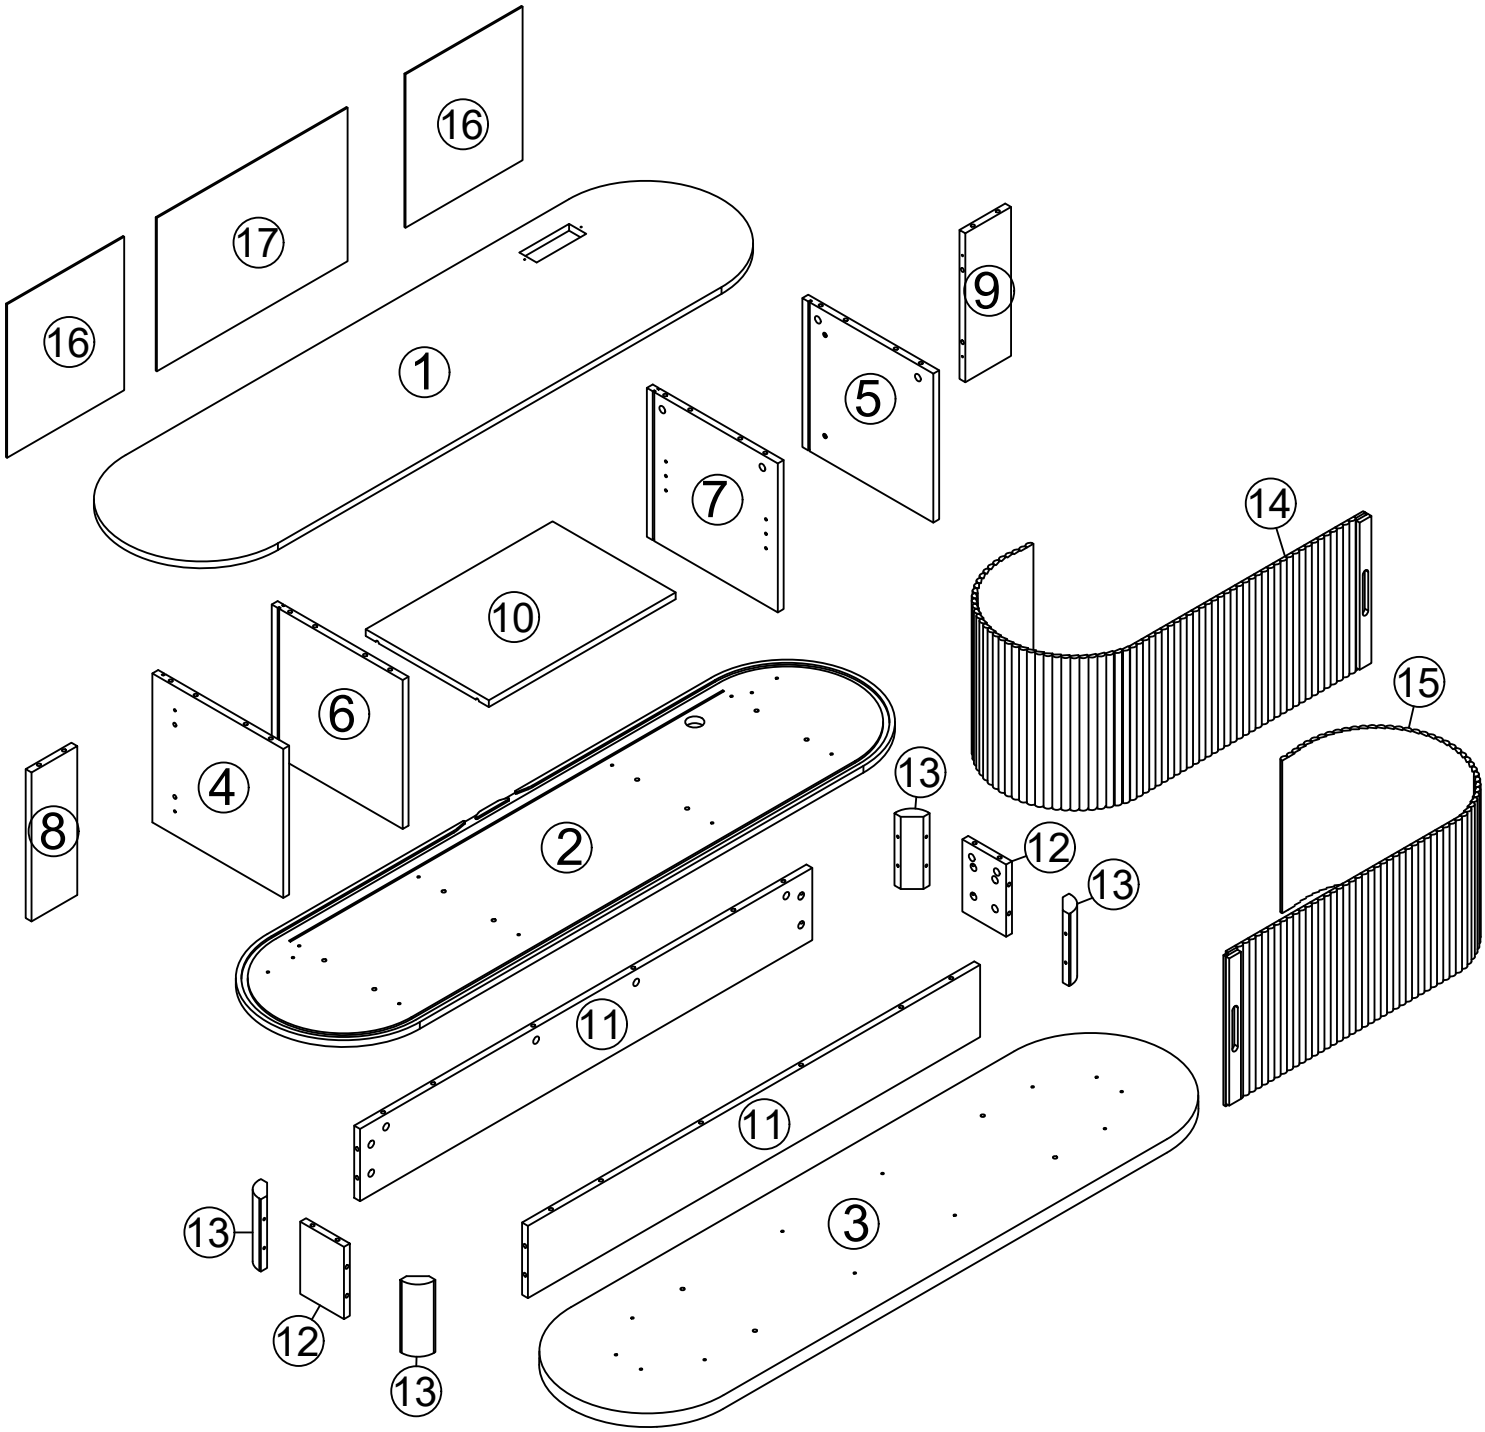



STEP1

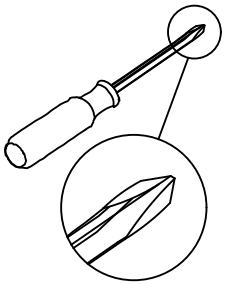

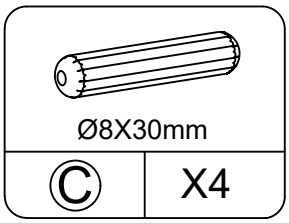


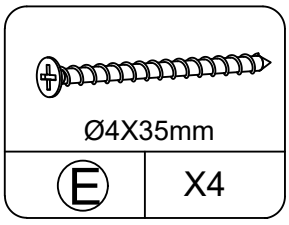


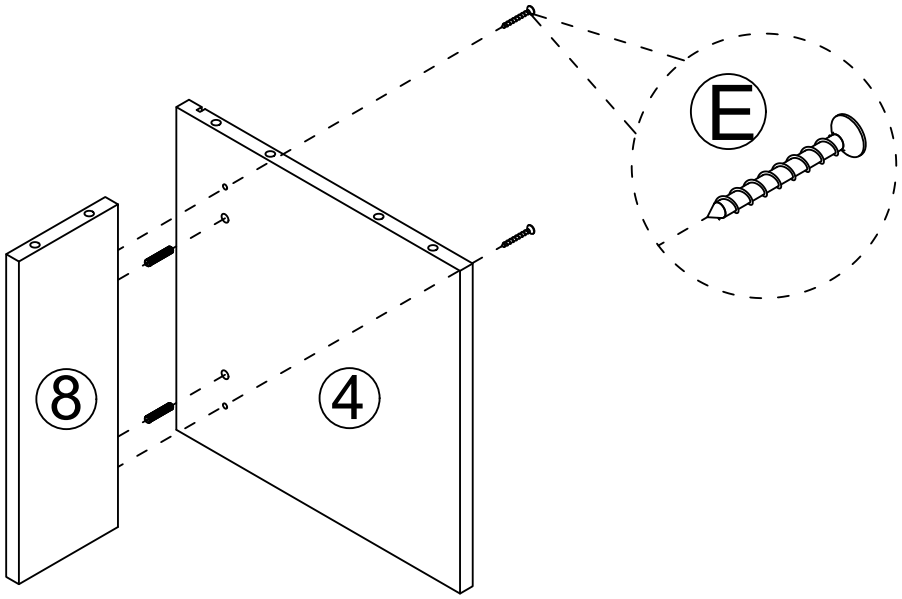


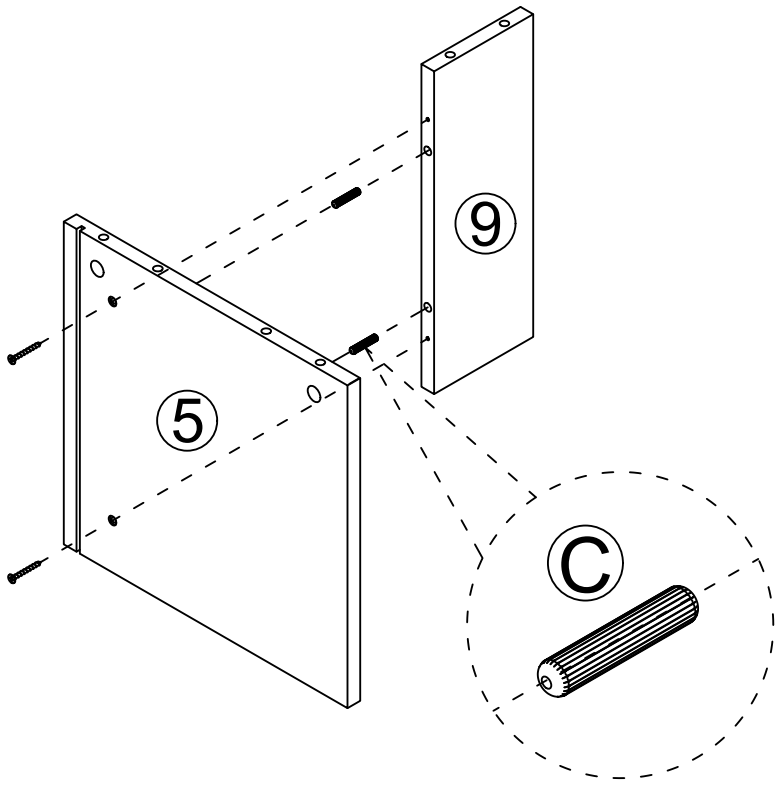


STEP2

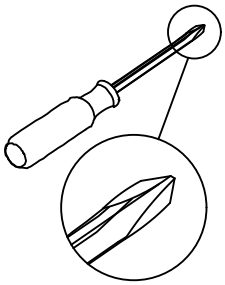


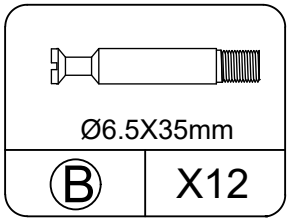


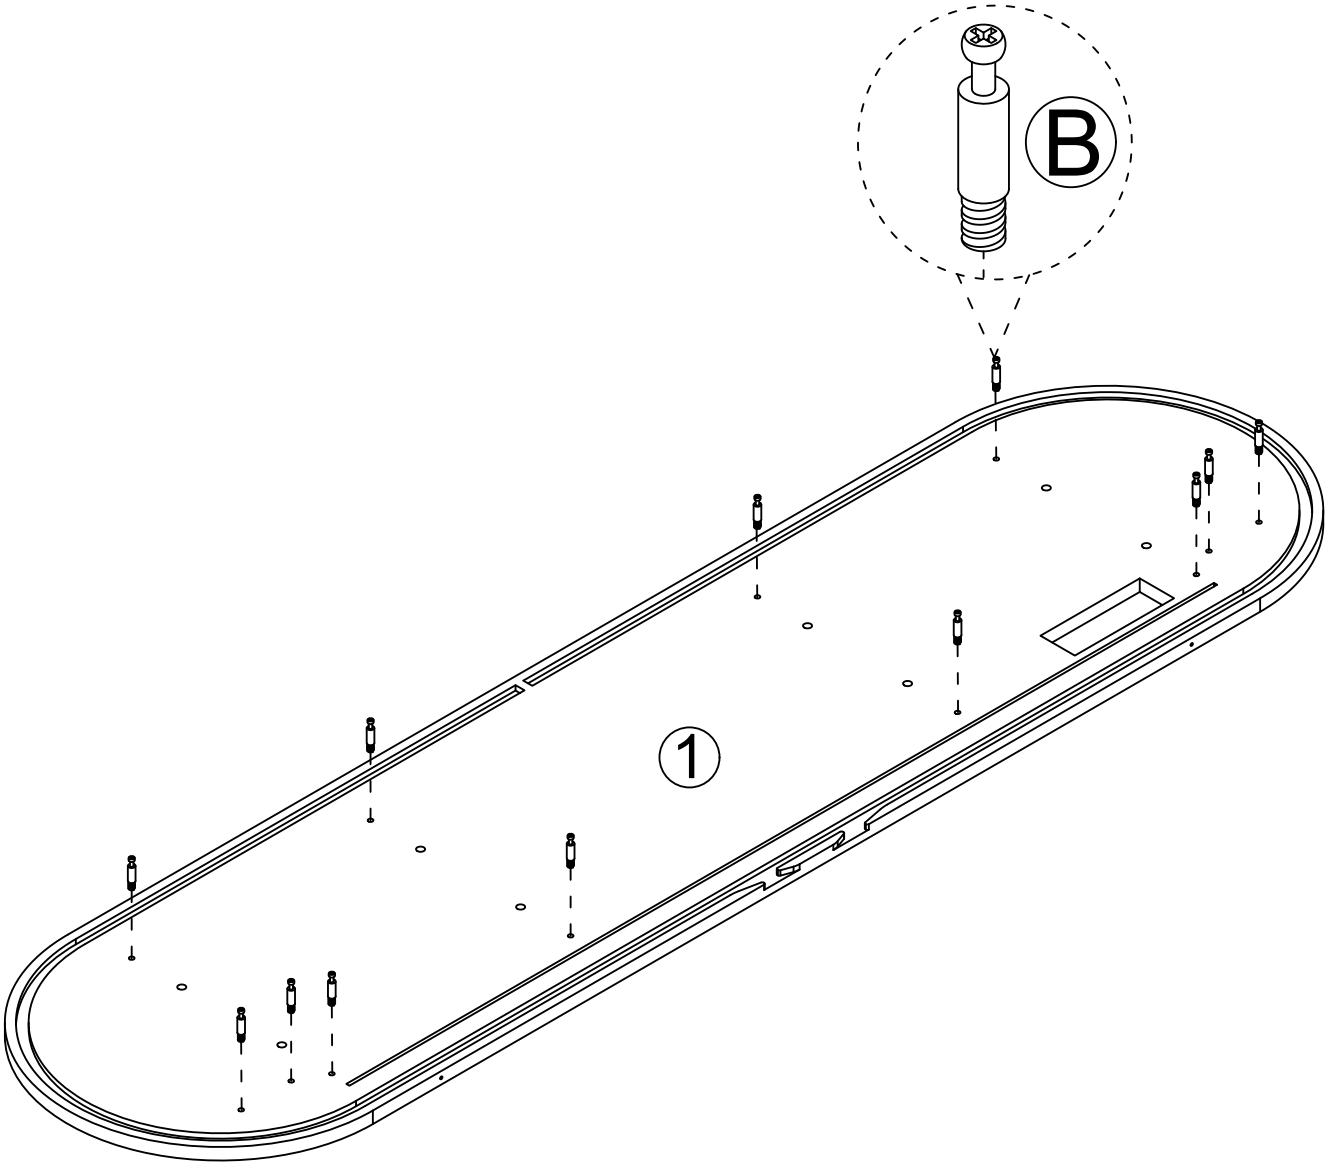

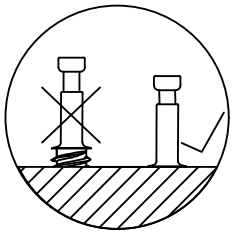



STEP3

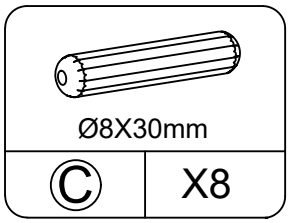


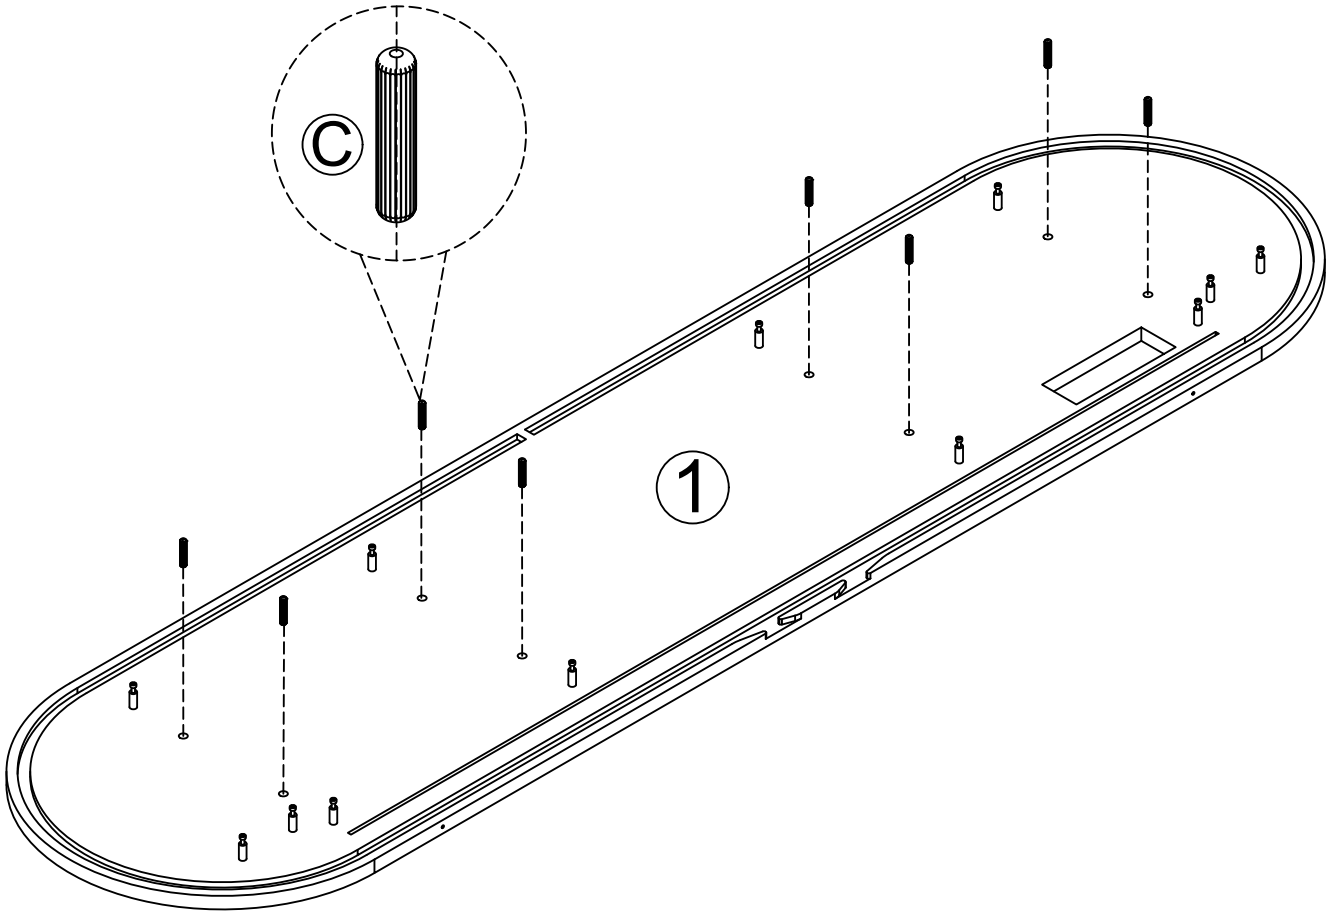


STEP4

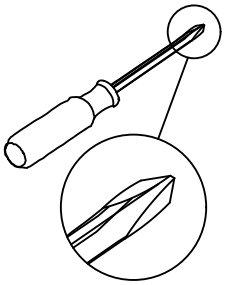

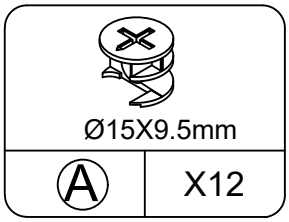

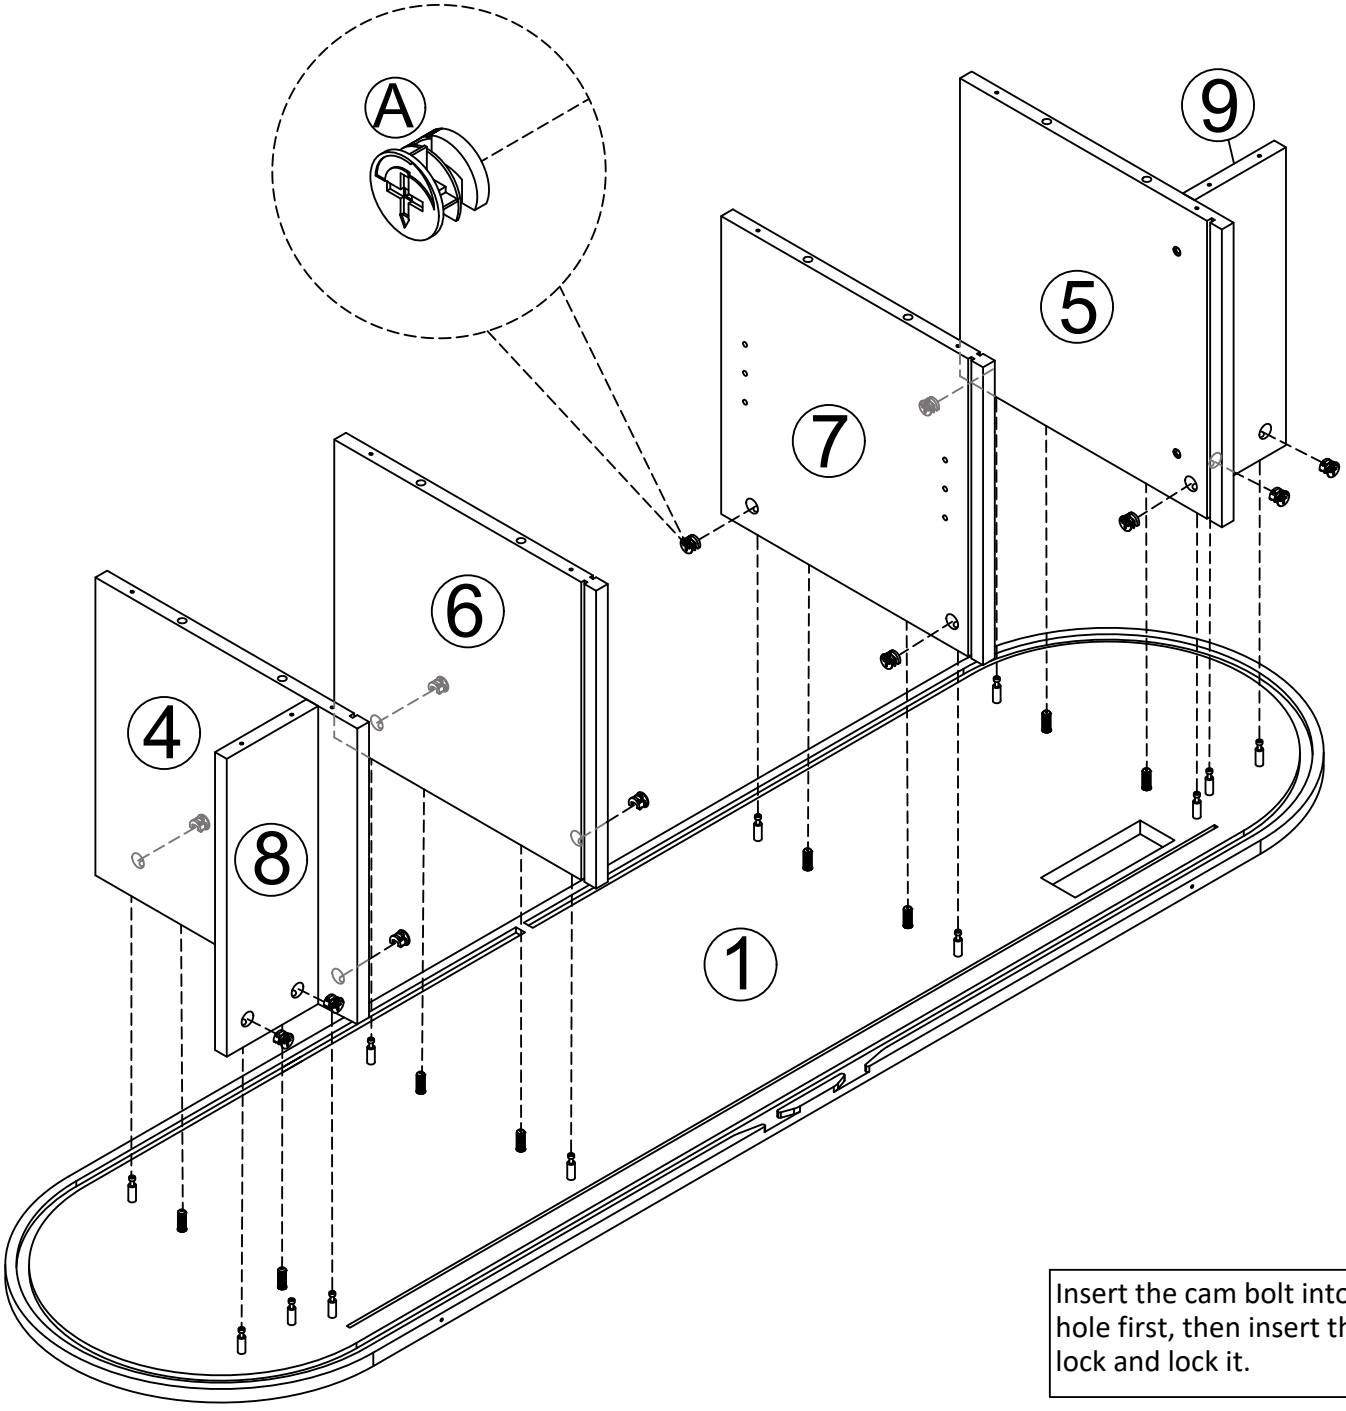


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

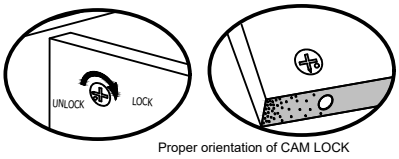



Proper orientation of CAM LOCK

STEP5

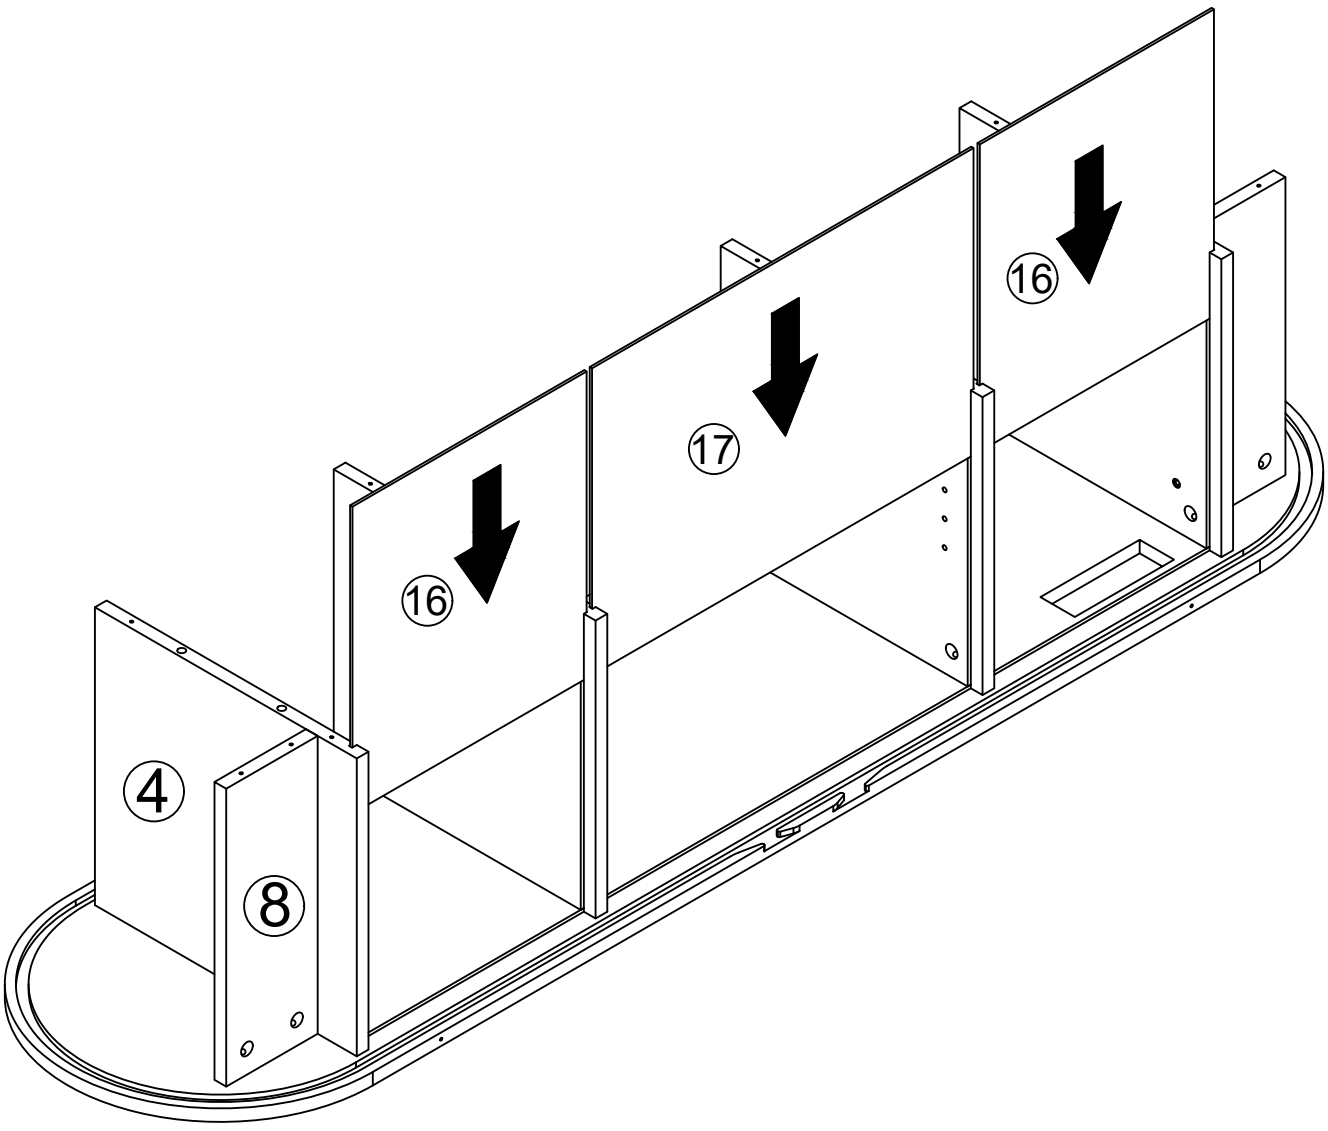



STEP6

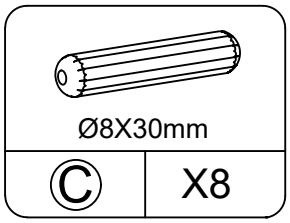


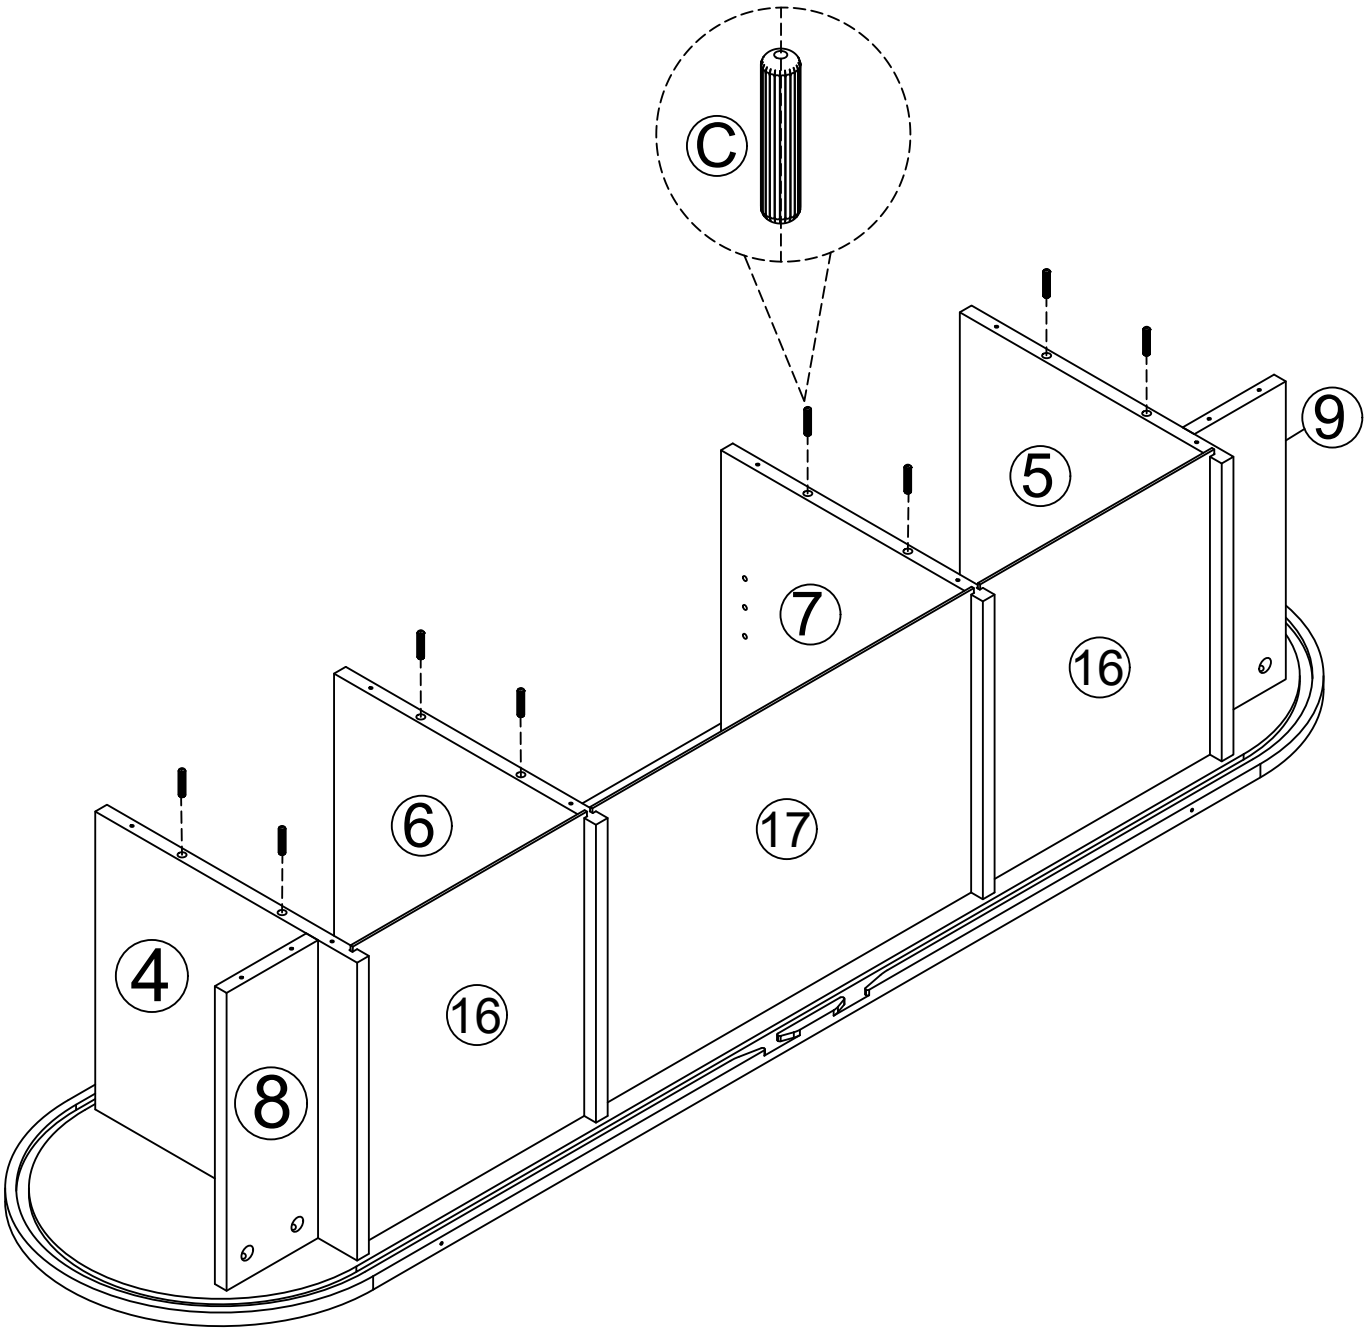


STEP7

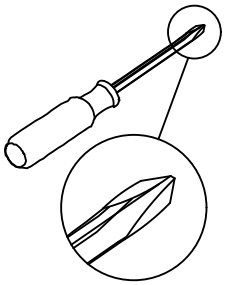

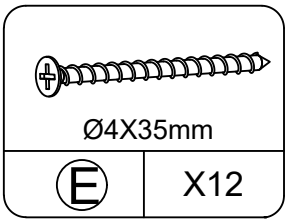

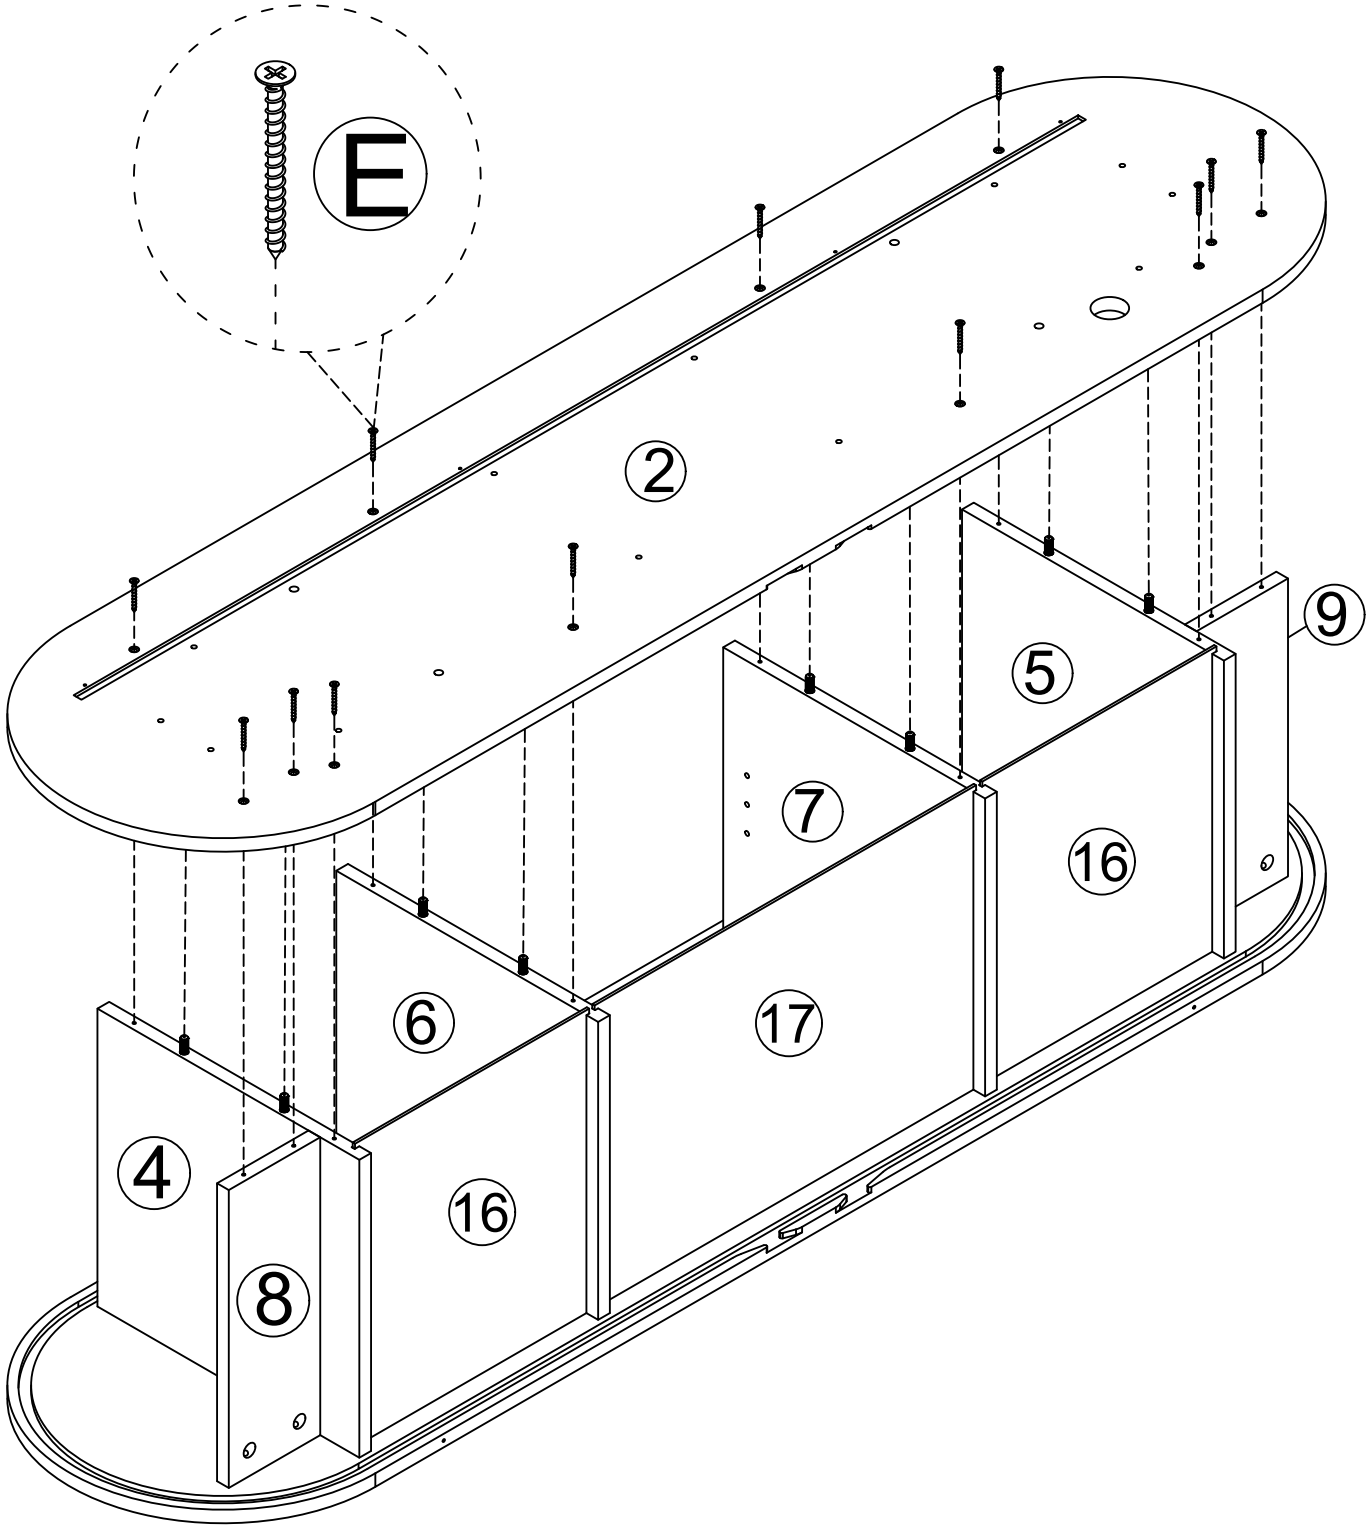

STEP8

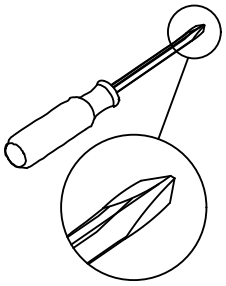


Ø3X12mm			
D	X4		




J	X1



20X10X6.7mm			
K	X1		

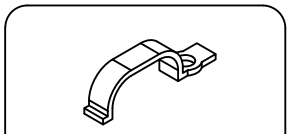

L	X3




O	X3

When installing light strip J:


First, remove the adhesive backing paper, then attach the light strip into the slot of Board (2), ensuring correct orientation of the light strip.


Then fasten the accessories (K), (L) and (O) onto the light strip with the screws (D).

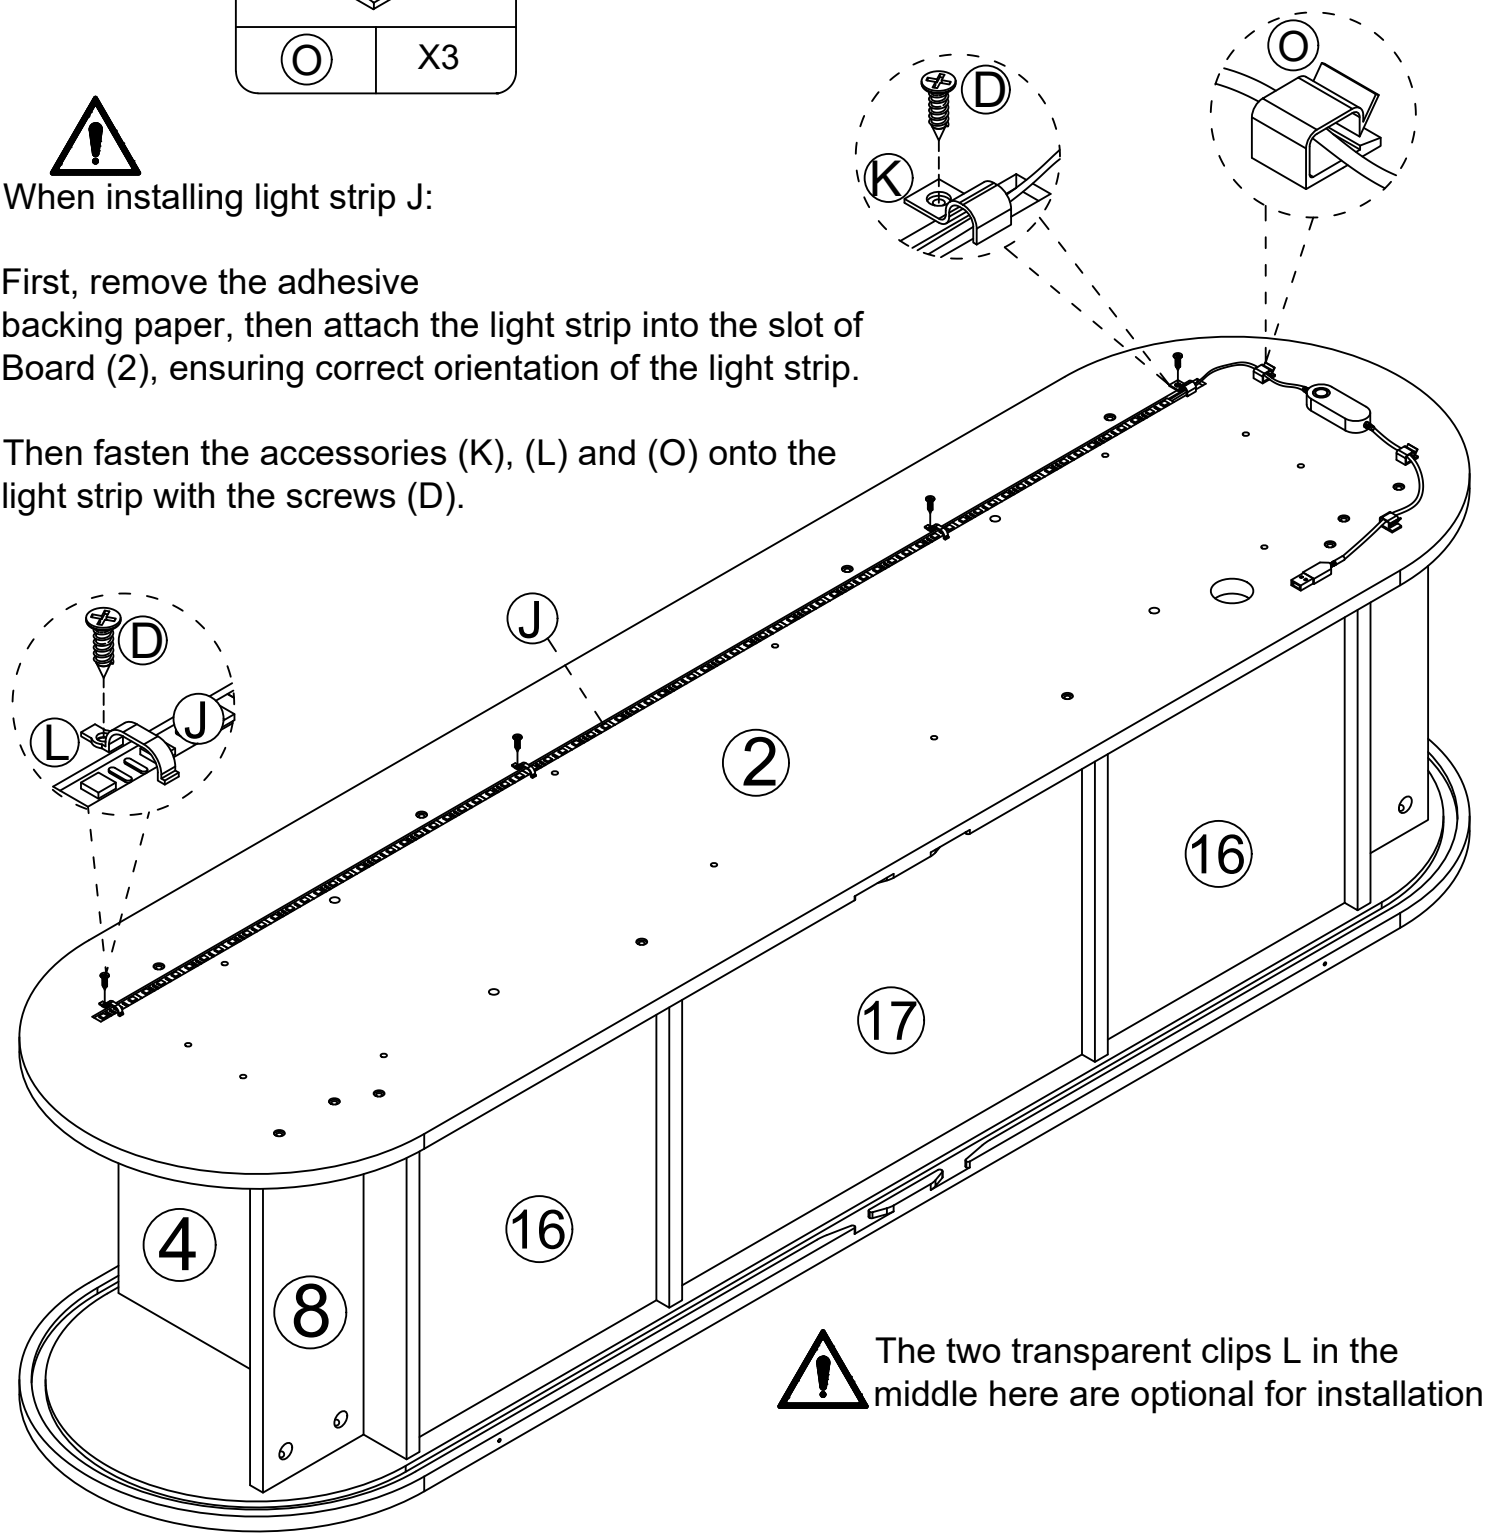


The two transparent clips L in the middle here are optional for installation.

STEP9

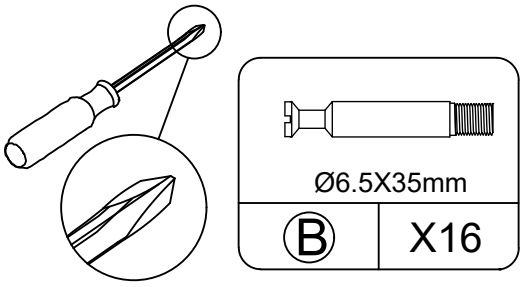


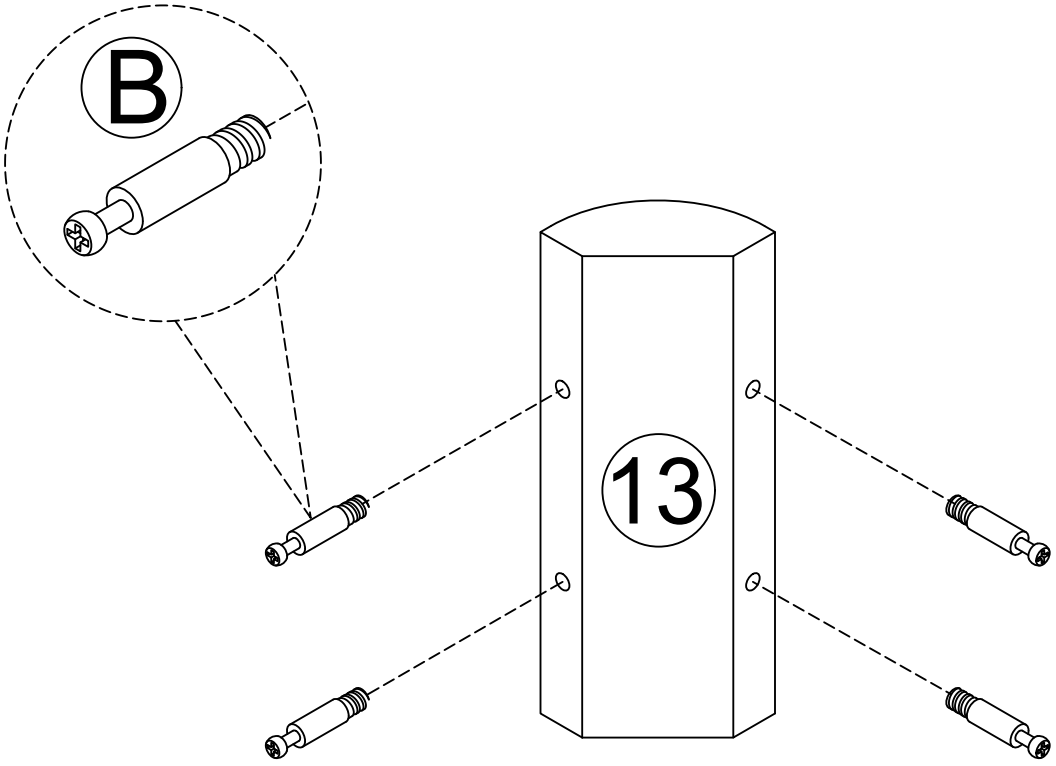



X4

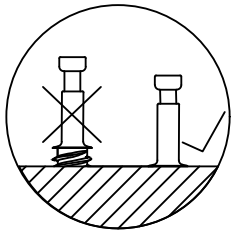

STEP10

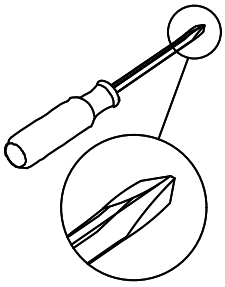


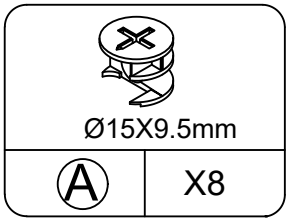

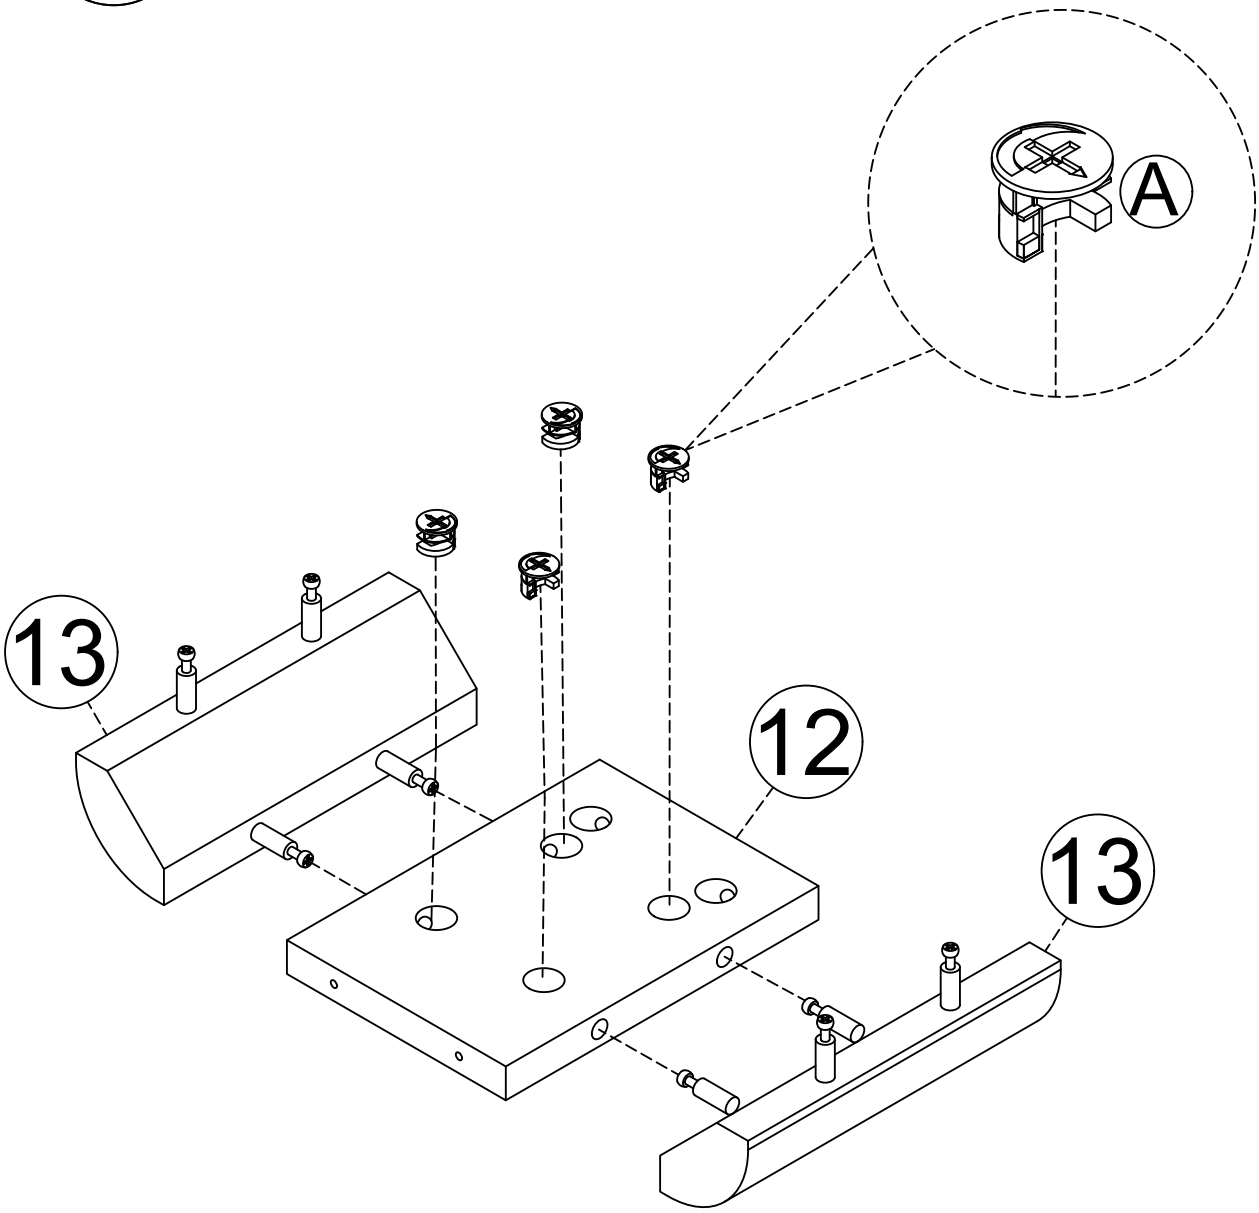


X2


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

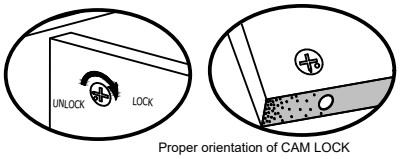


Proper orientation of CAM LOCK


STEP11

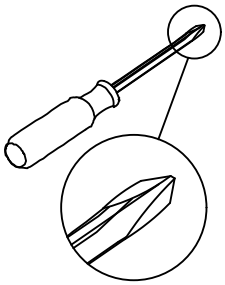

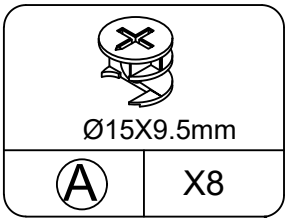

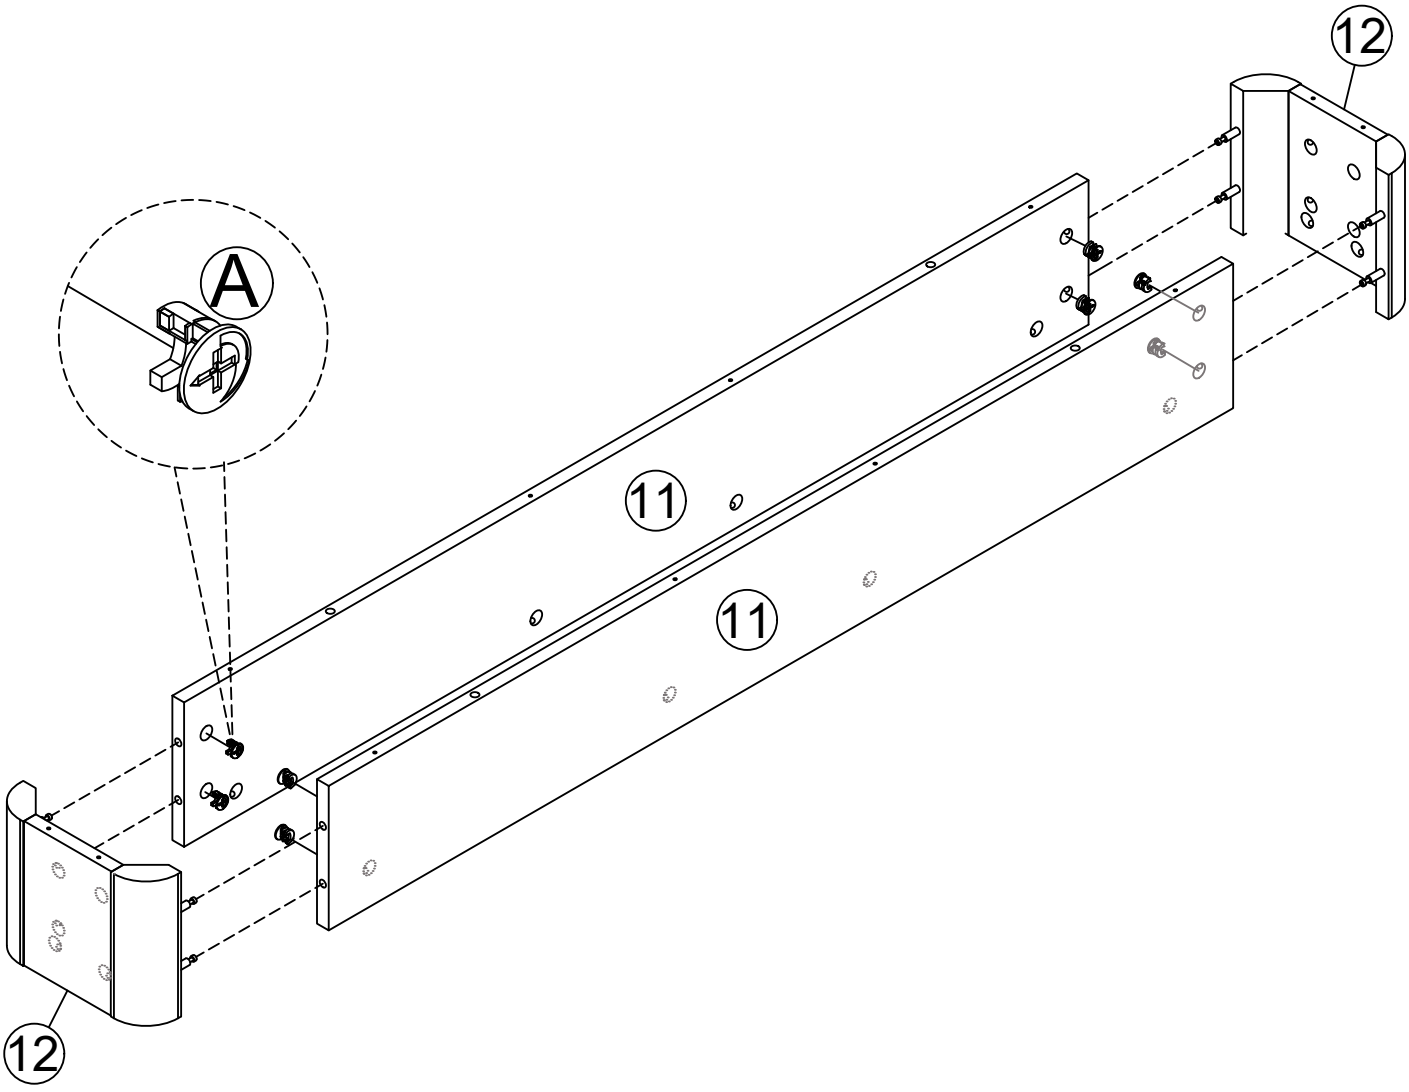



Insert the cam bolt into the hole first, then insert the cam lock and lock it.

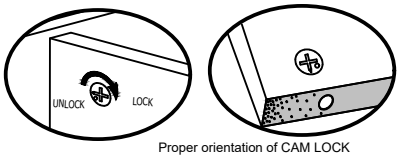


Proper orientation of CAM LOCK


STEP12

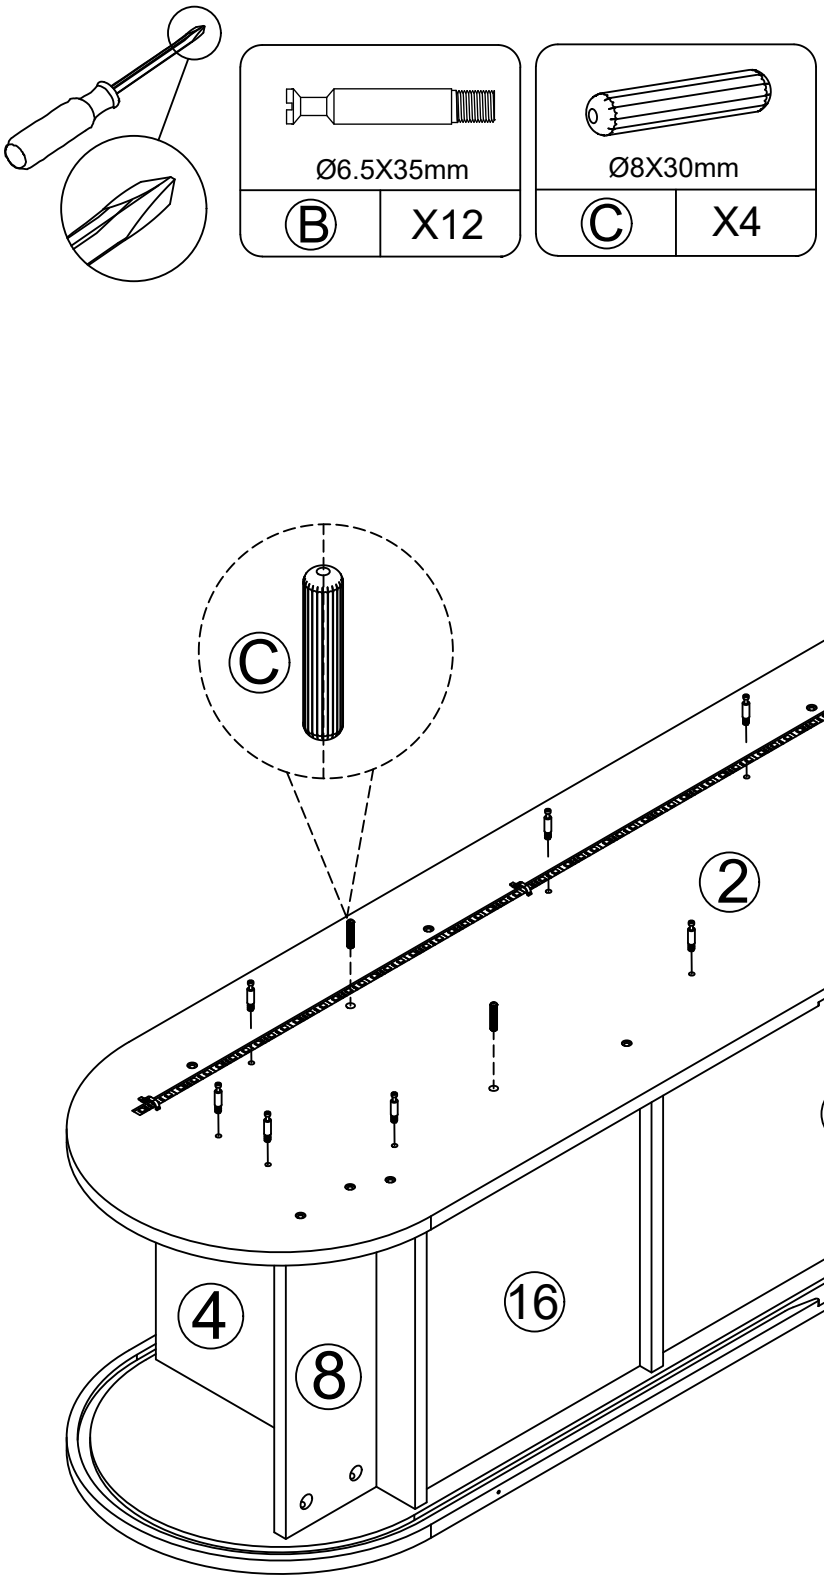


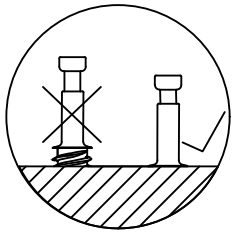


STEP13

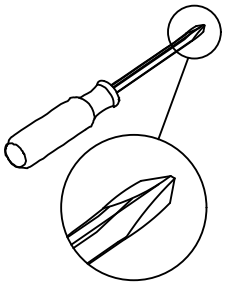

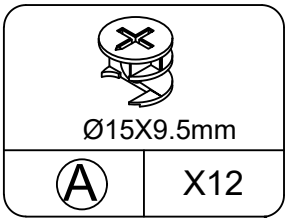

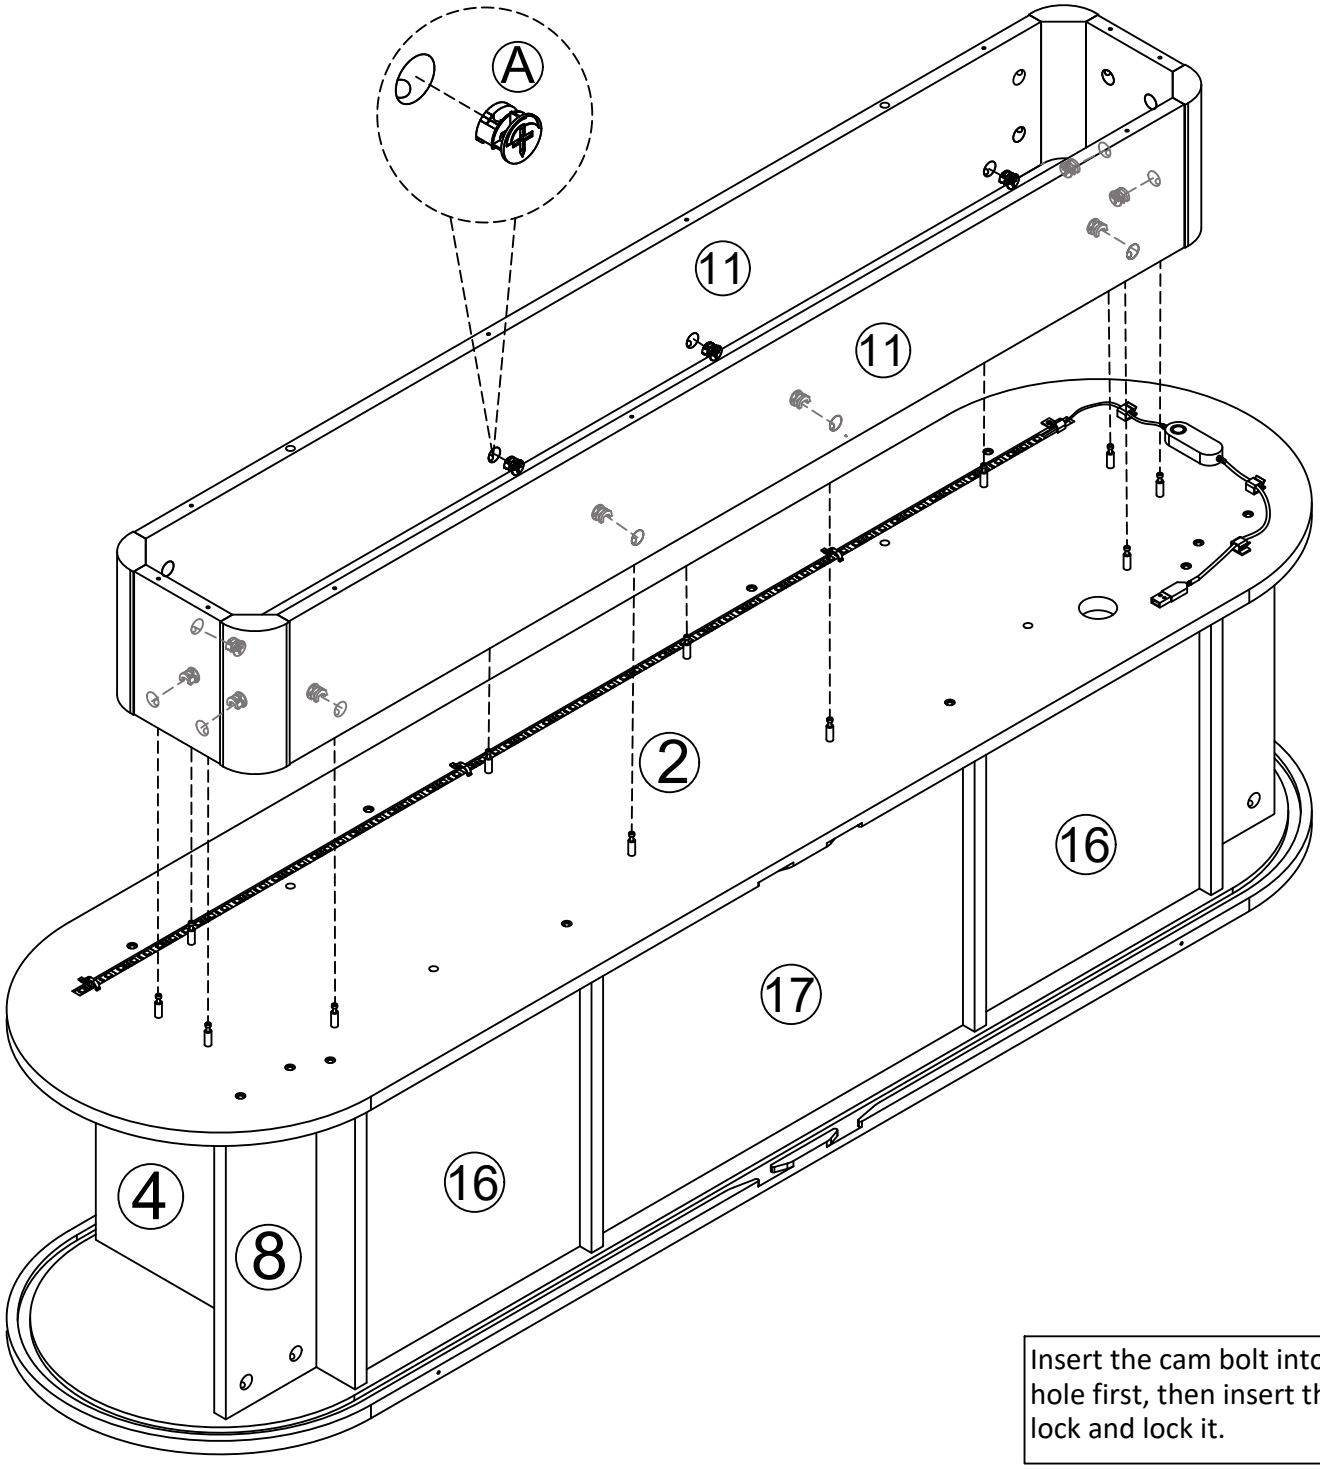



Insert the cam bolt into the hole first, then insert the cam lock and lock it.

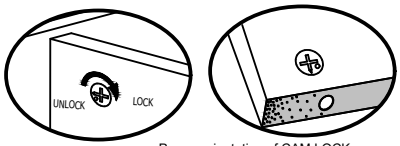



Proper orientation of CAM LOCK

STEP14

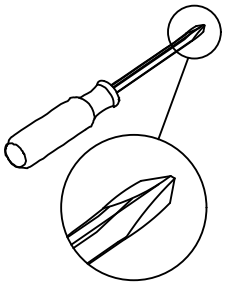


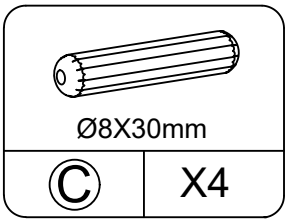

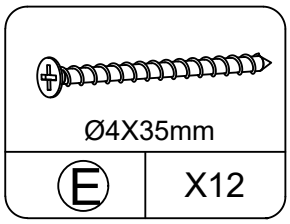


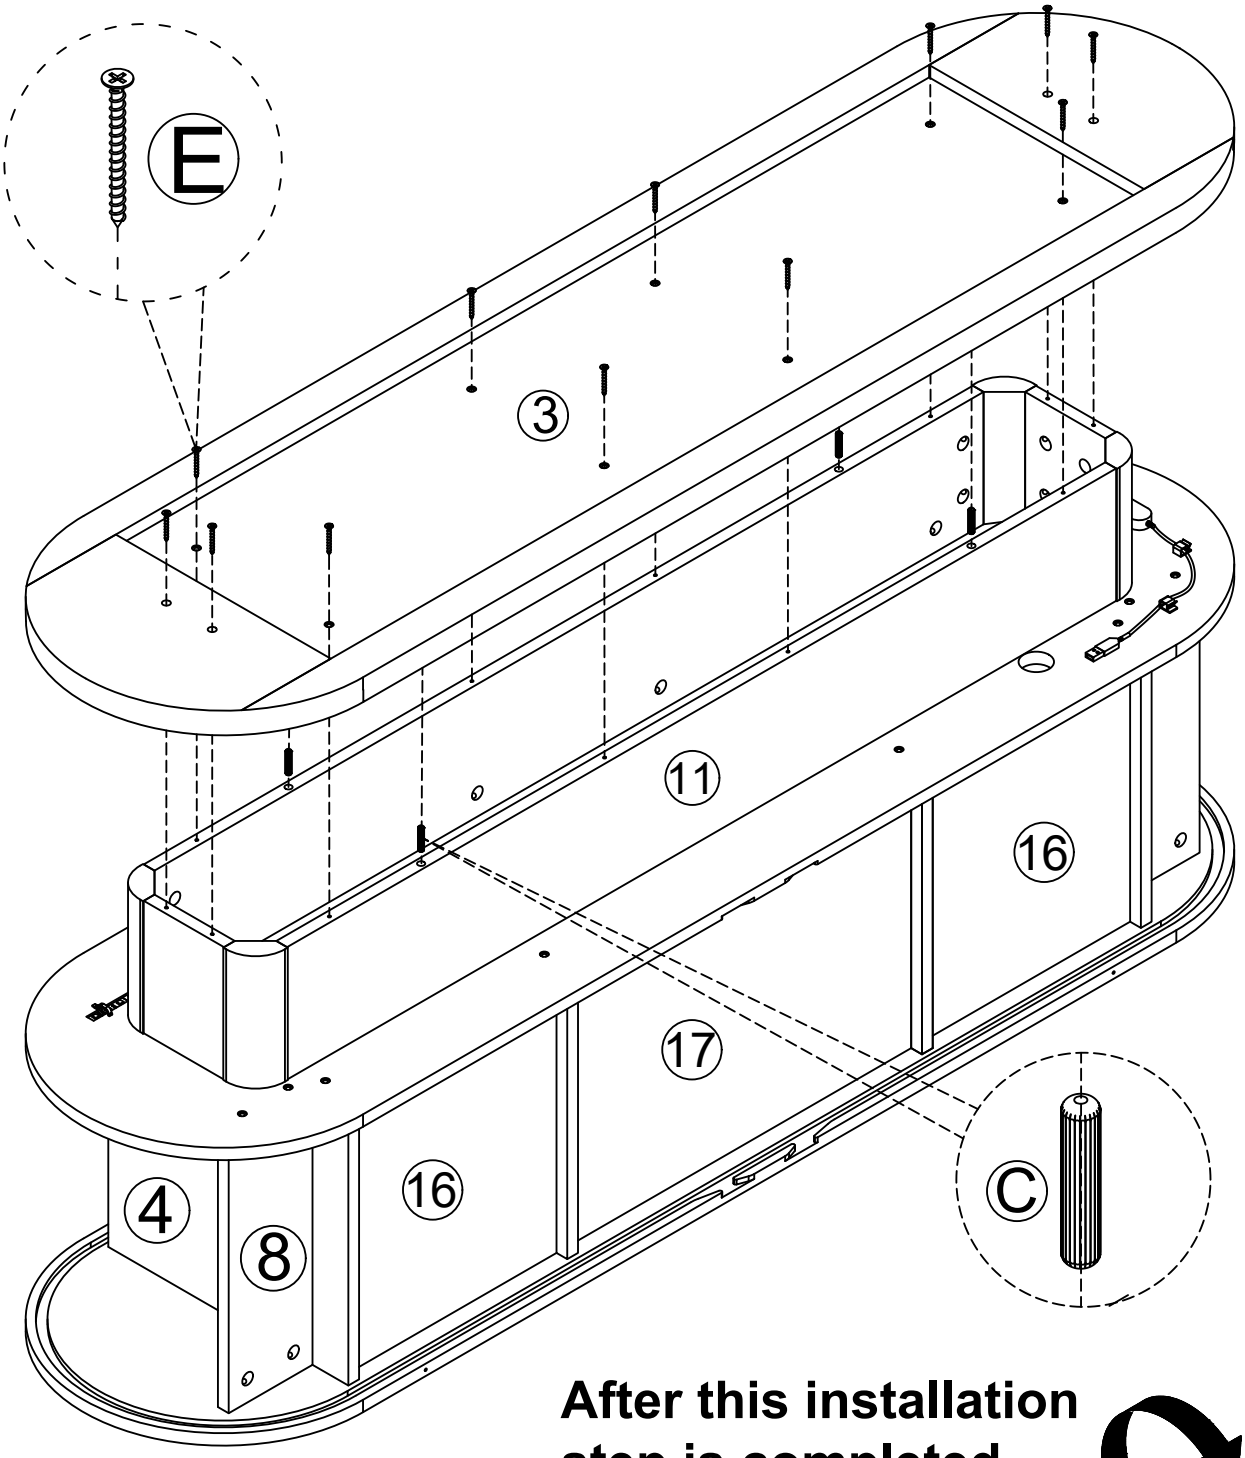


After this installation step is completed, flip it over.

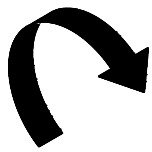


STEP15

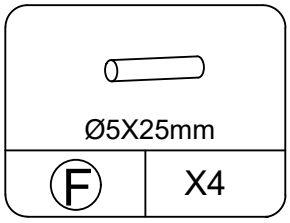


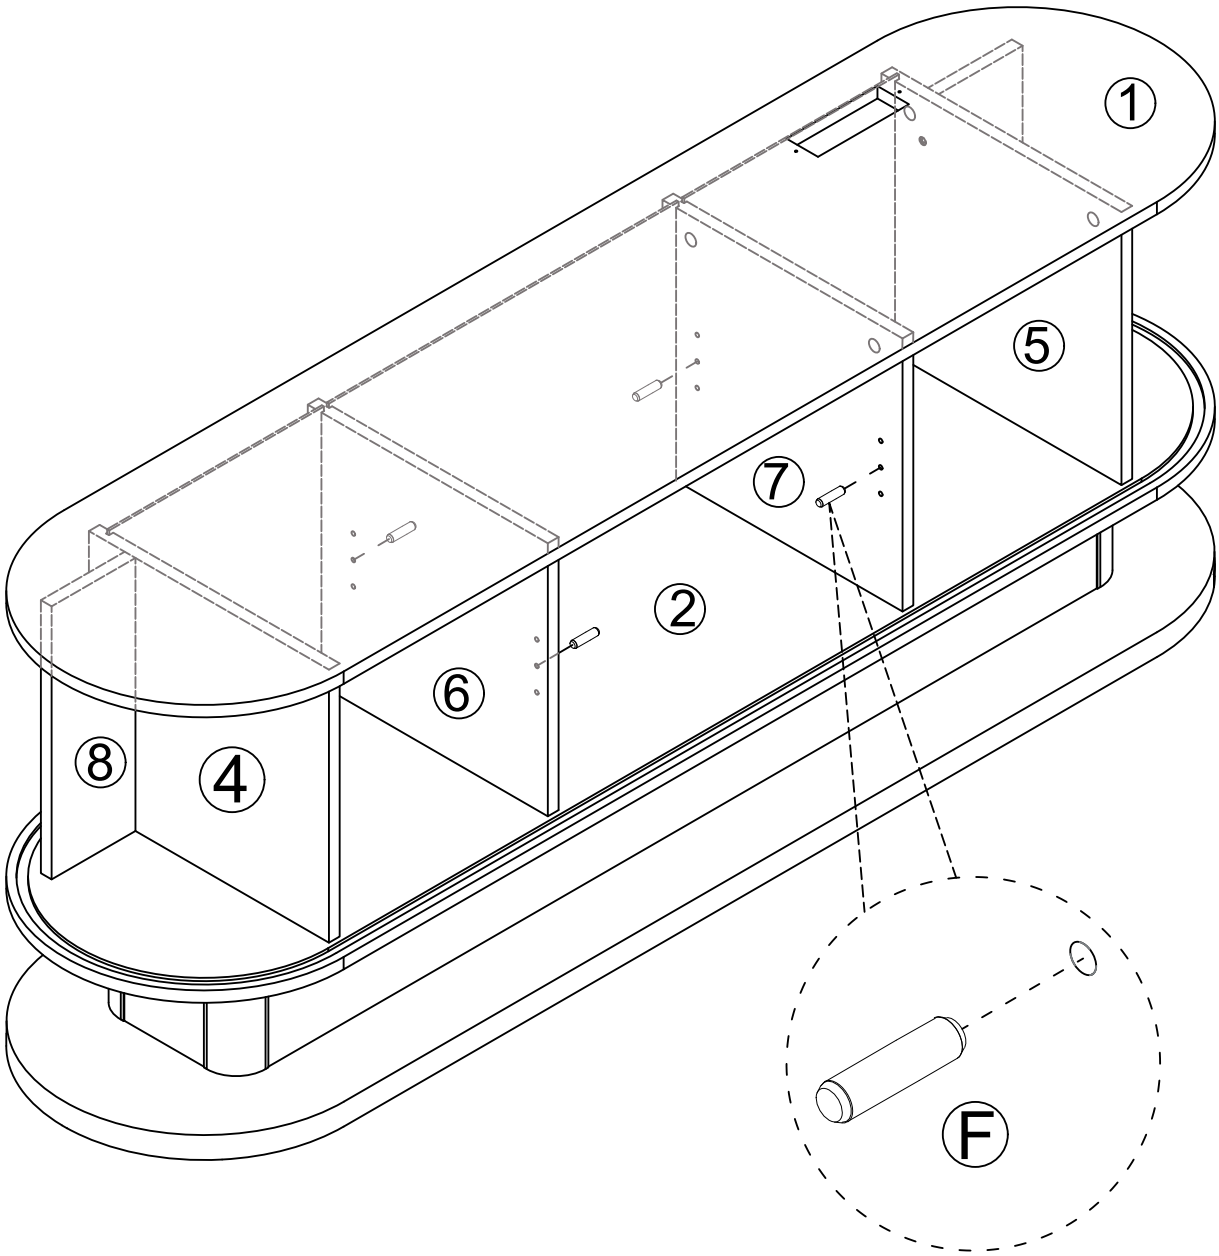


STEP16

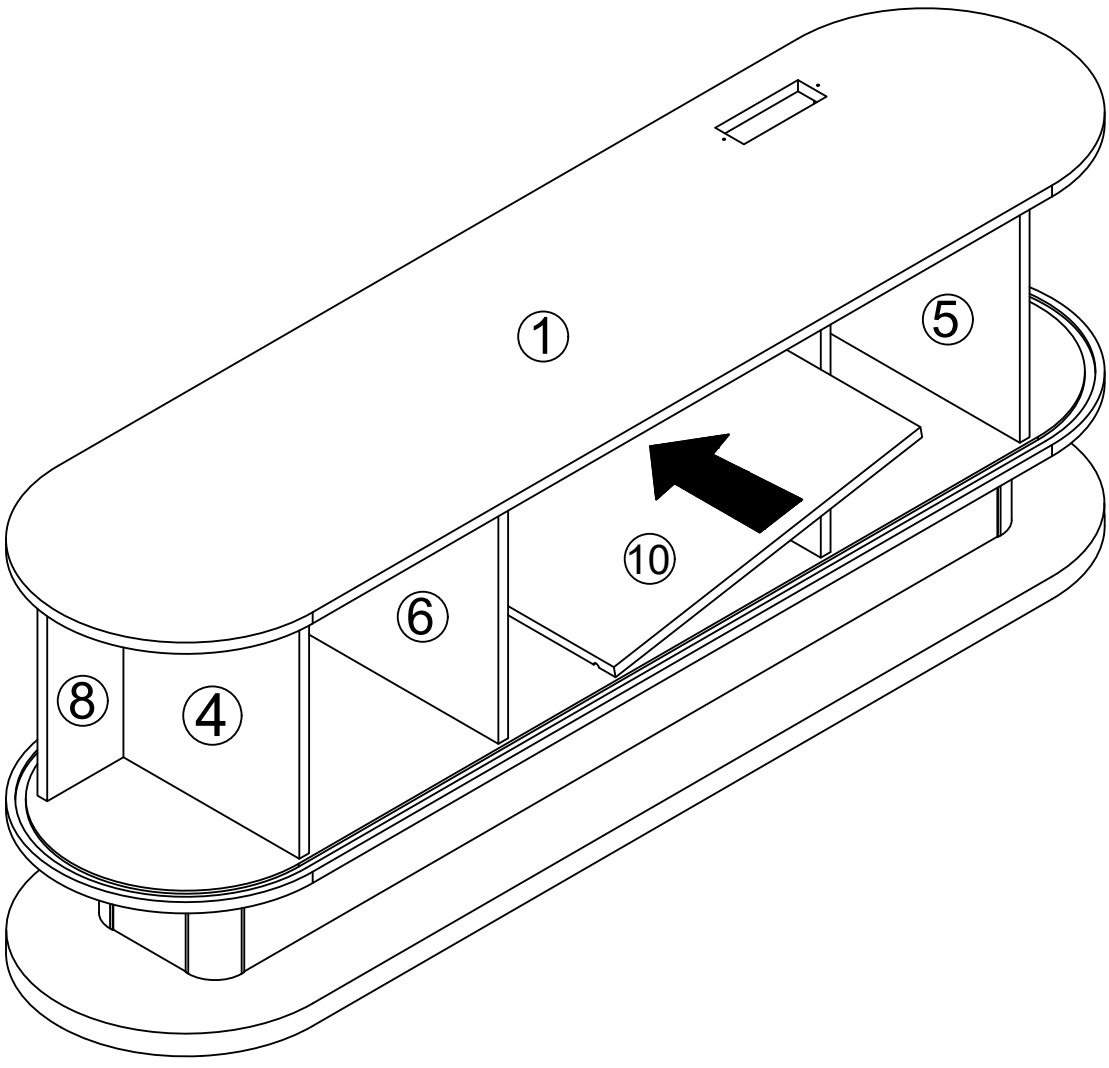



STEP17

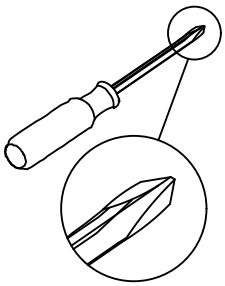

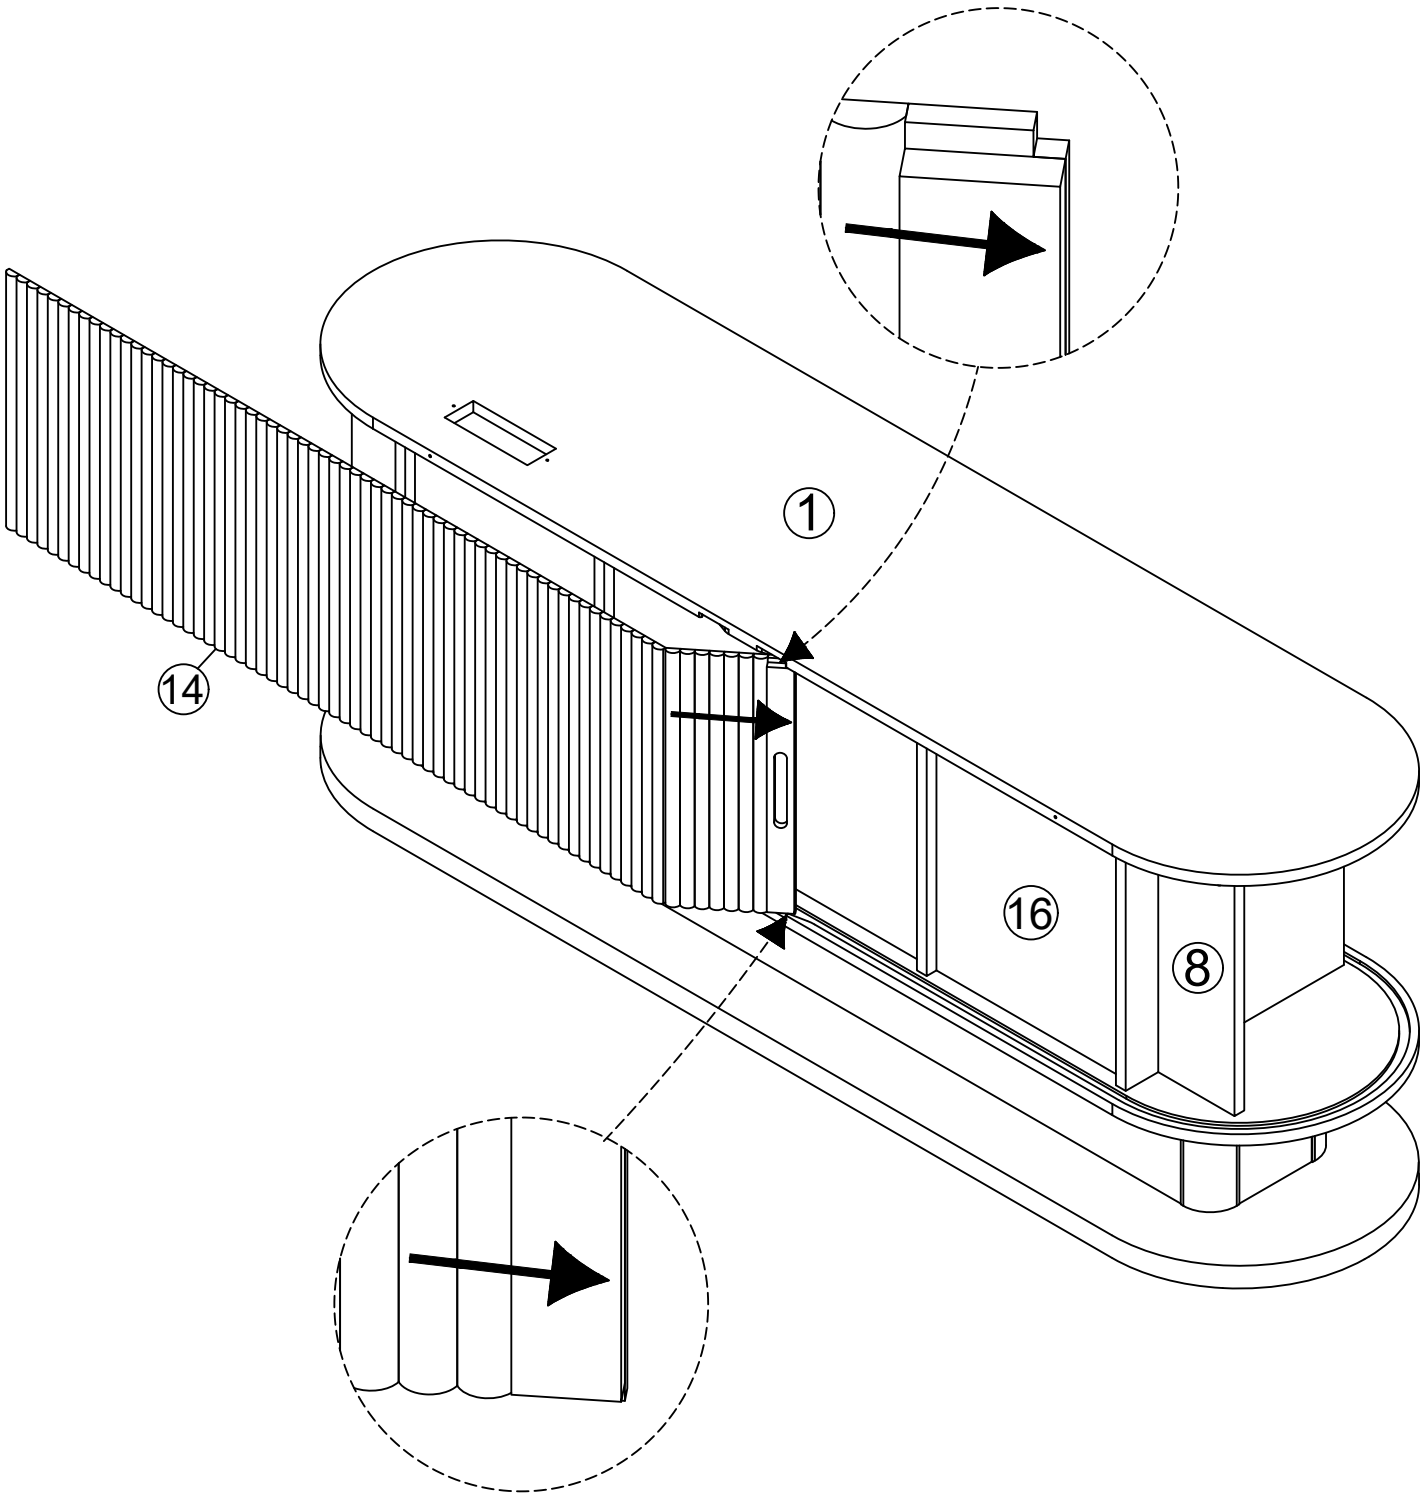



STEP18

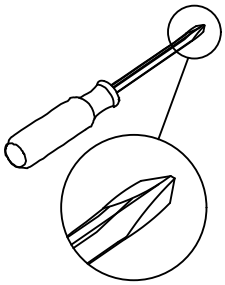

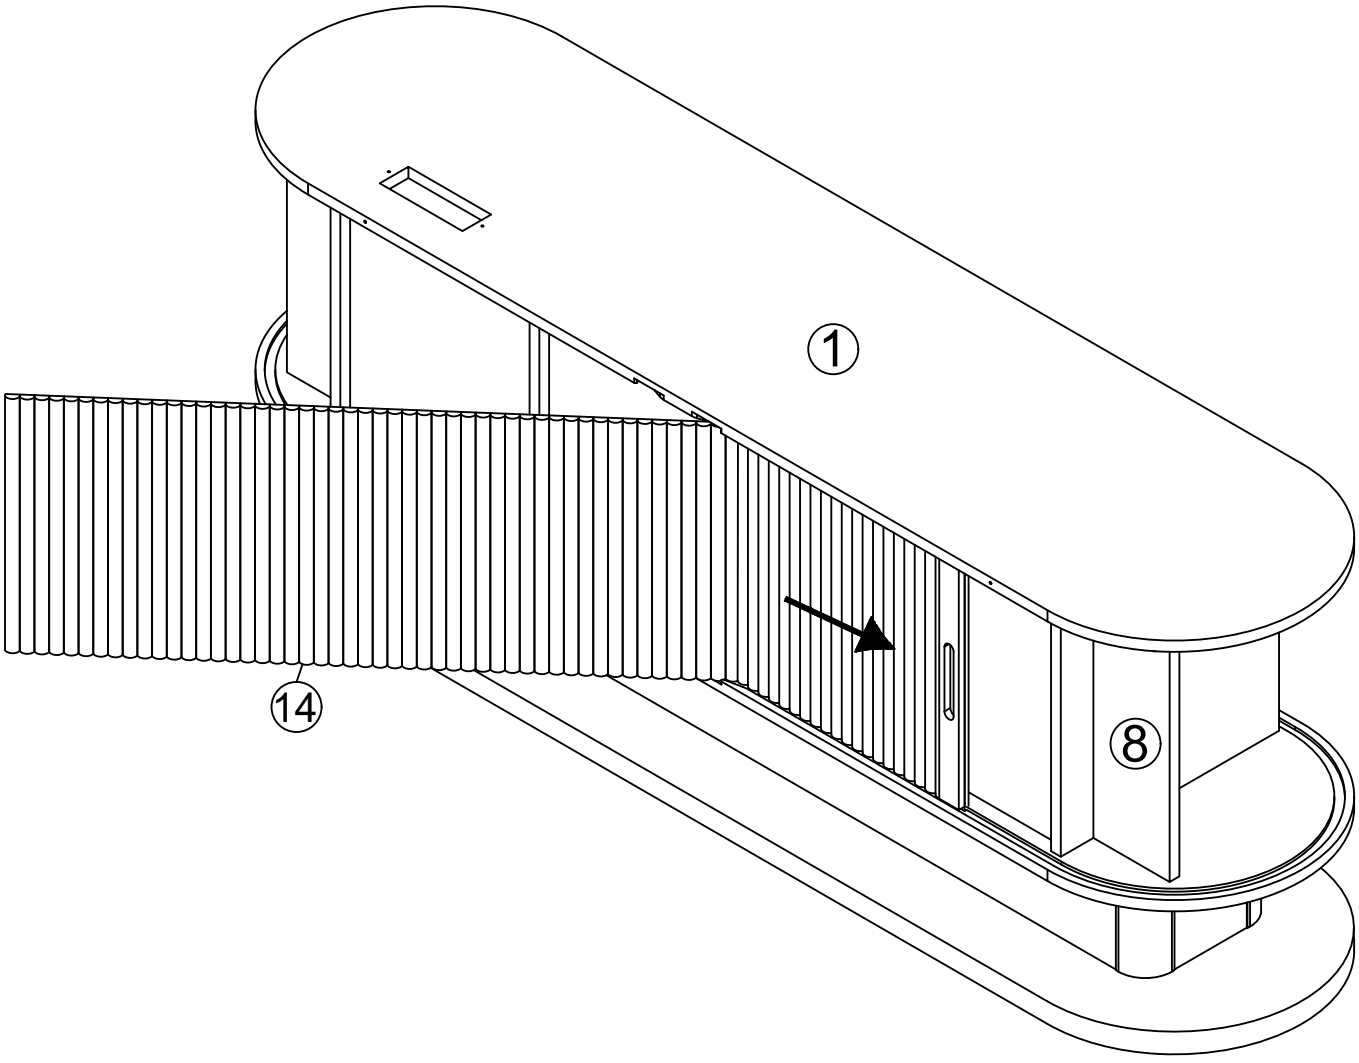



STEP19

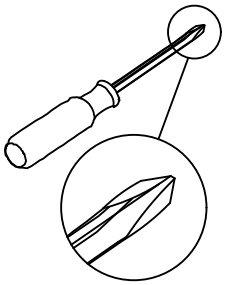

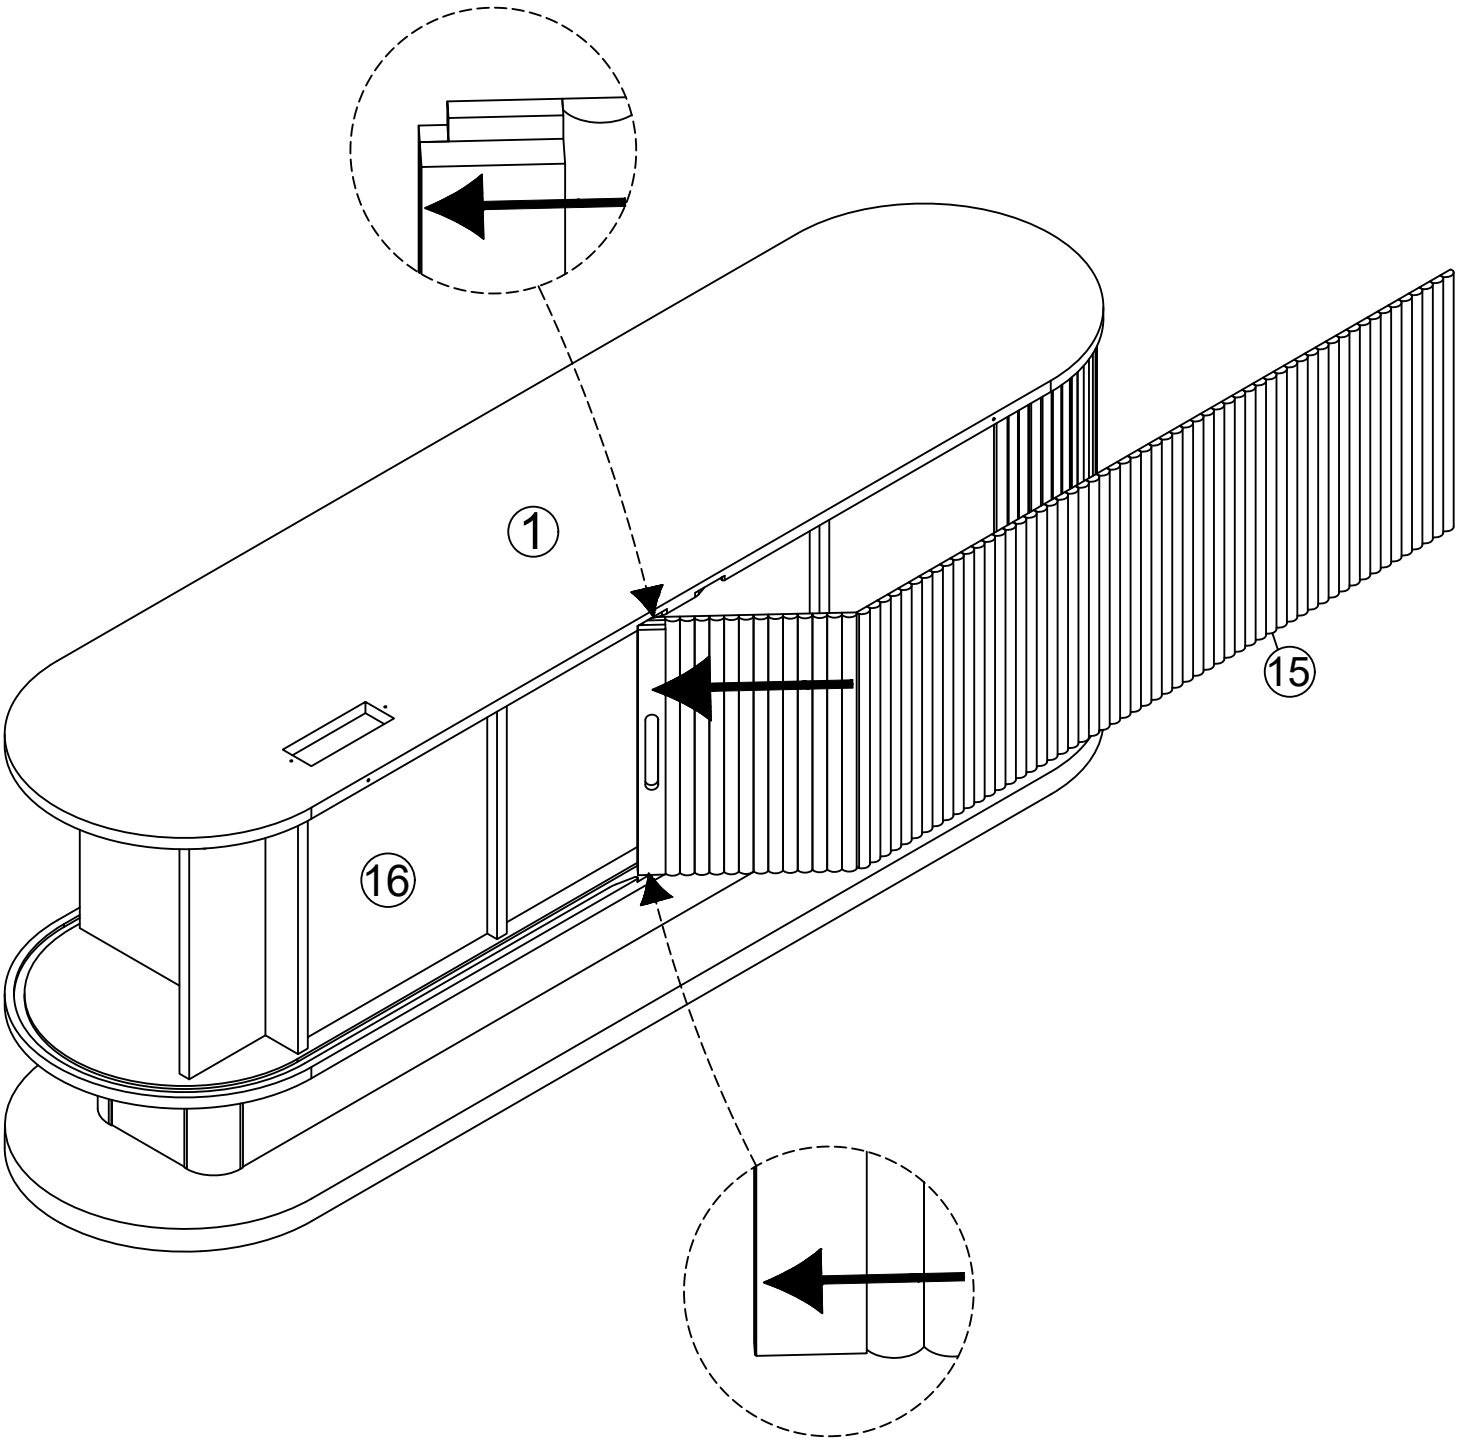



STEP20

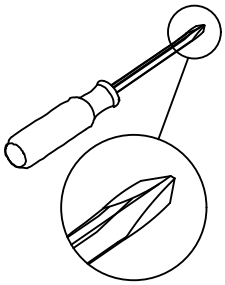


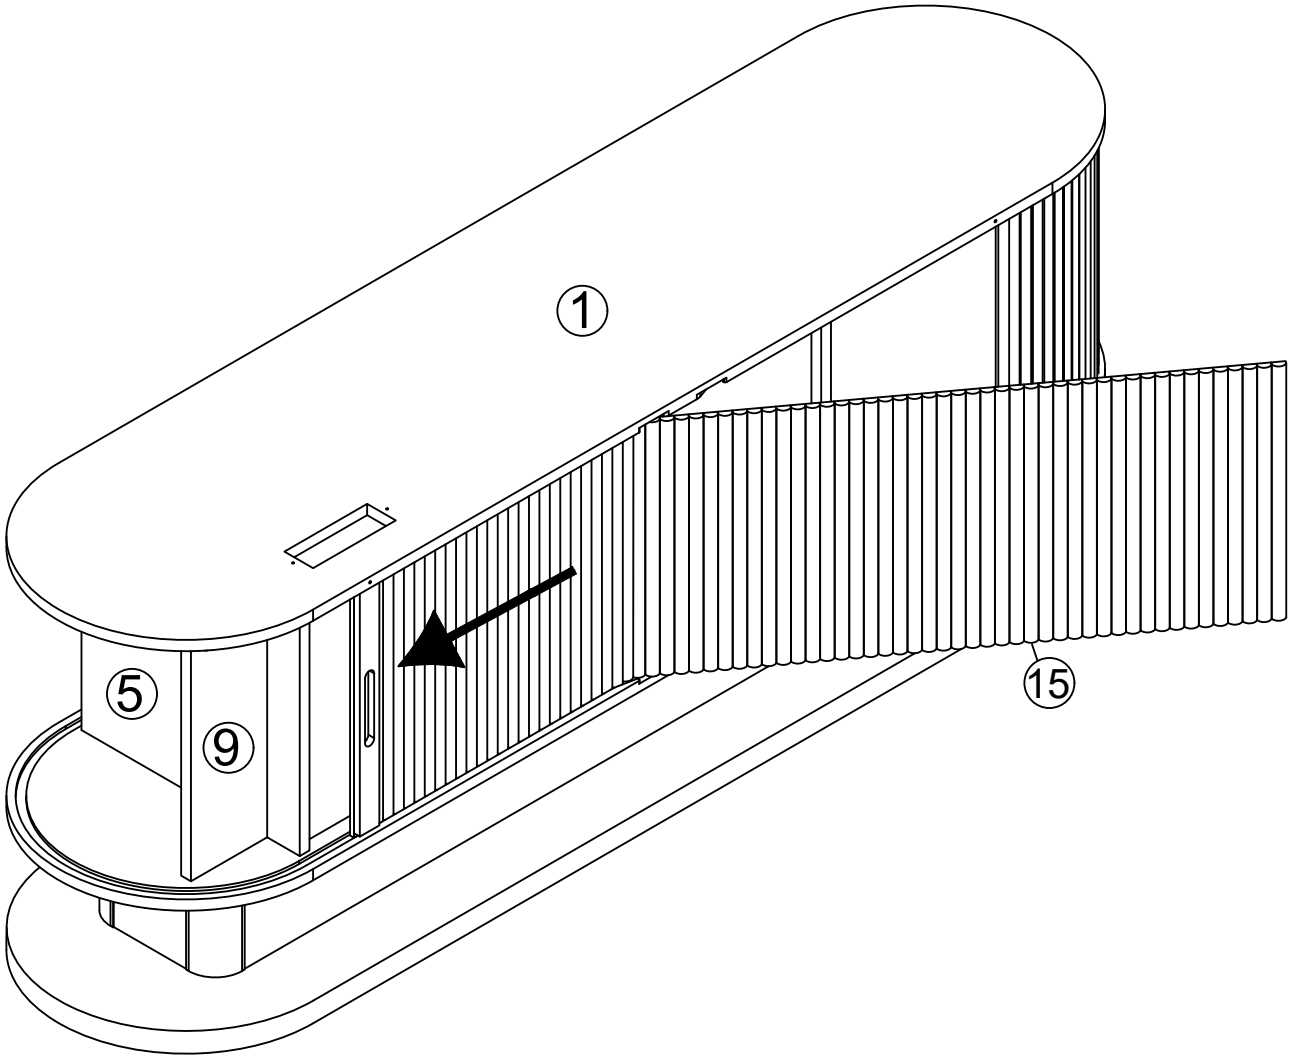


STEP21

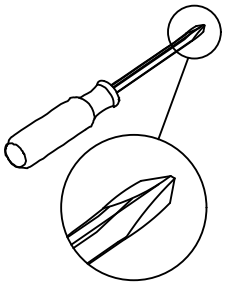


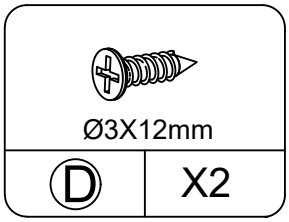

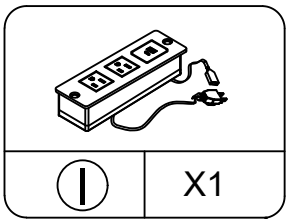


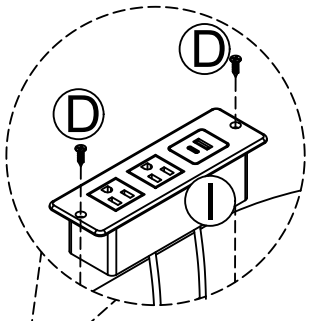



Note: Pass the two USB plugs through the round hole of Plate (2).

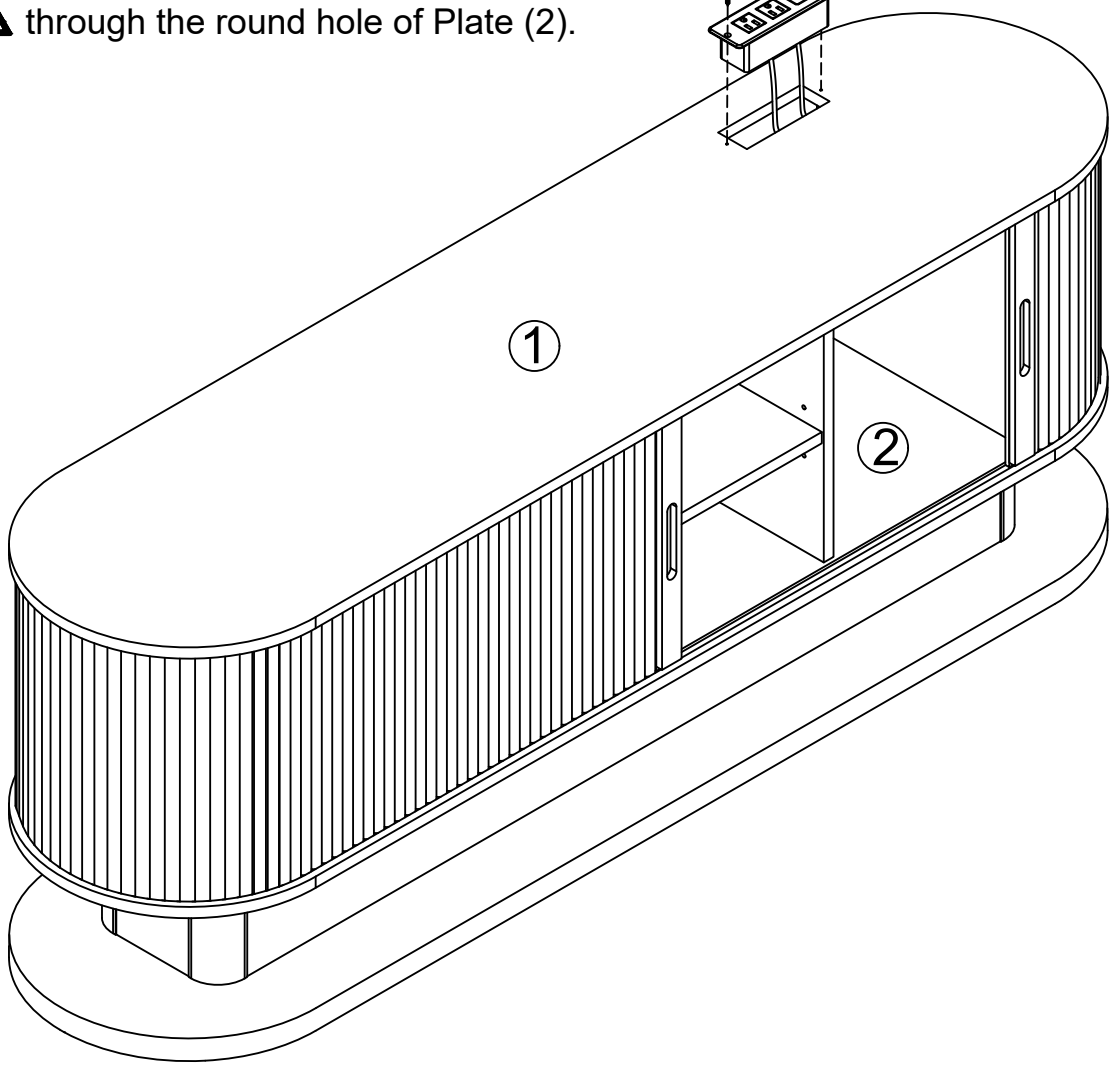

STEP22

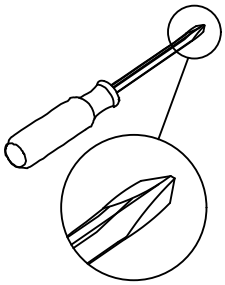


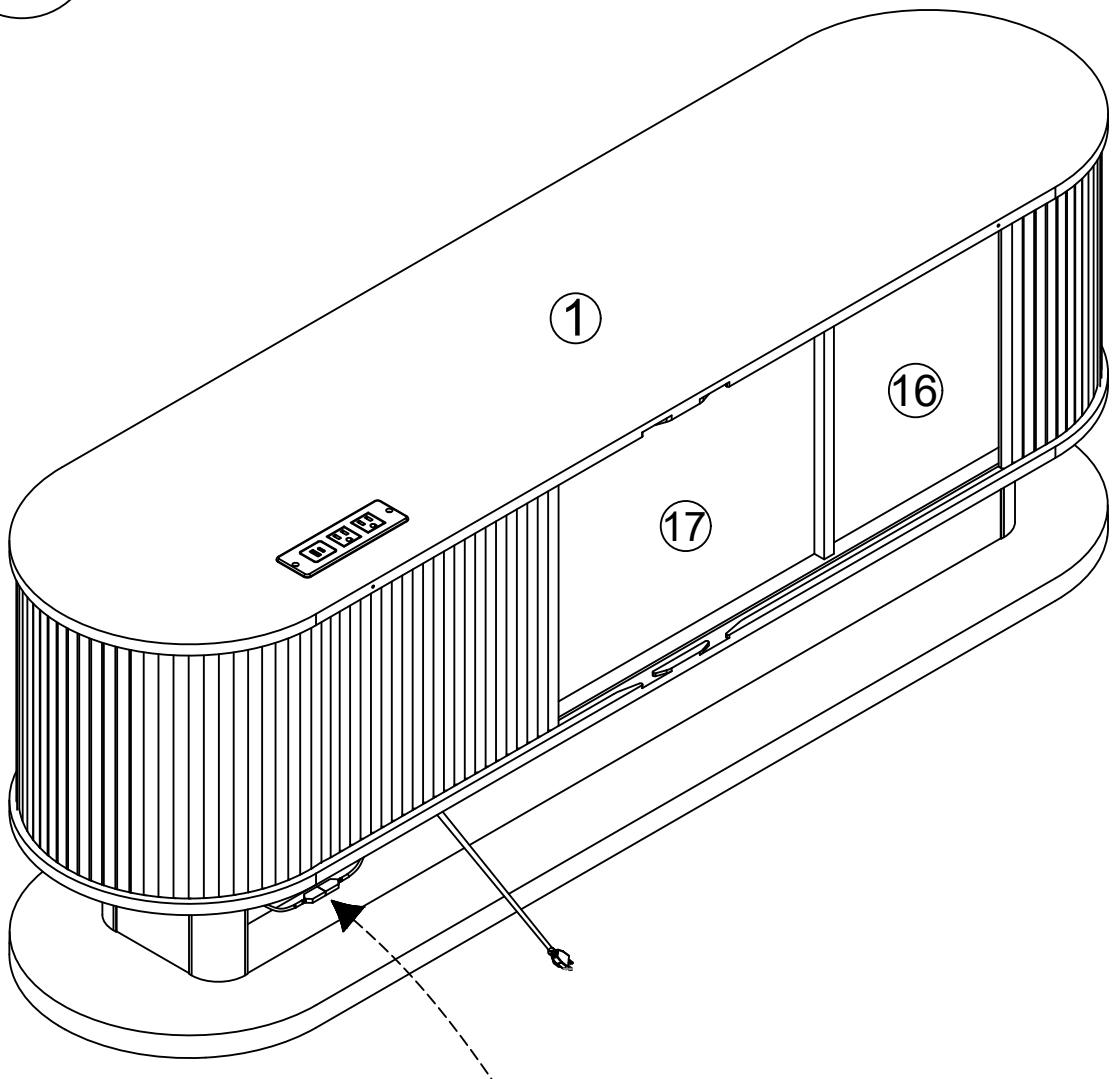


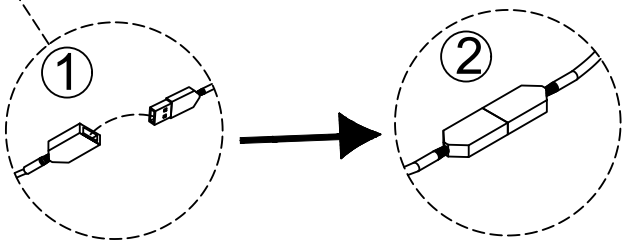



Connect the USB port of the socket to the LED light strip.


STEP23

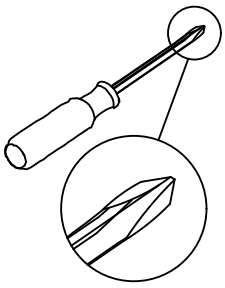

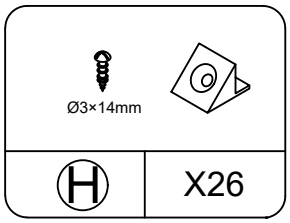

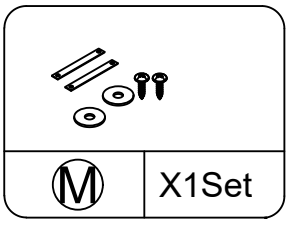


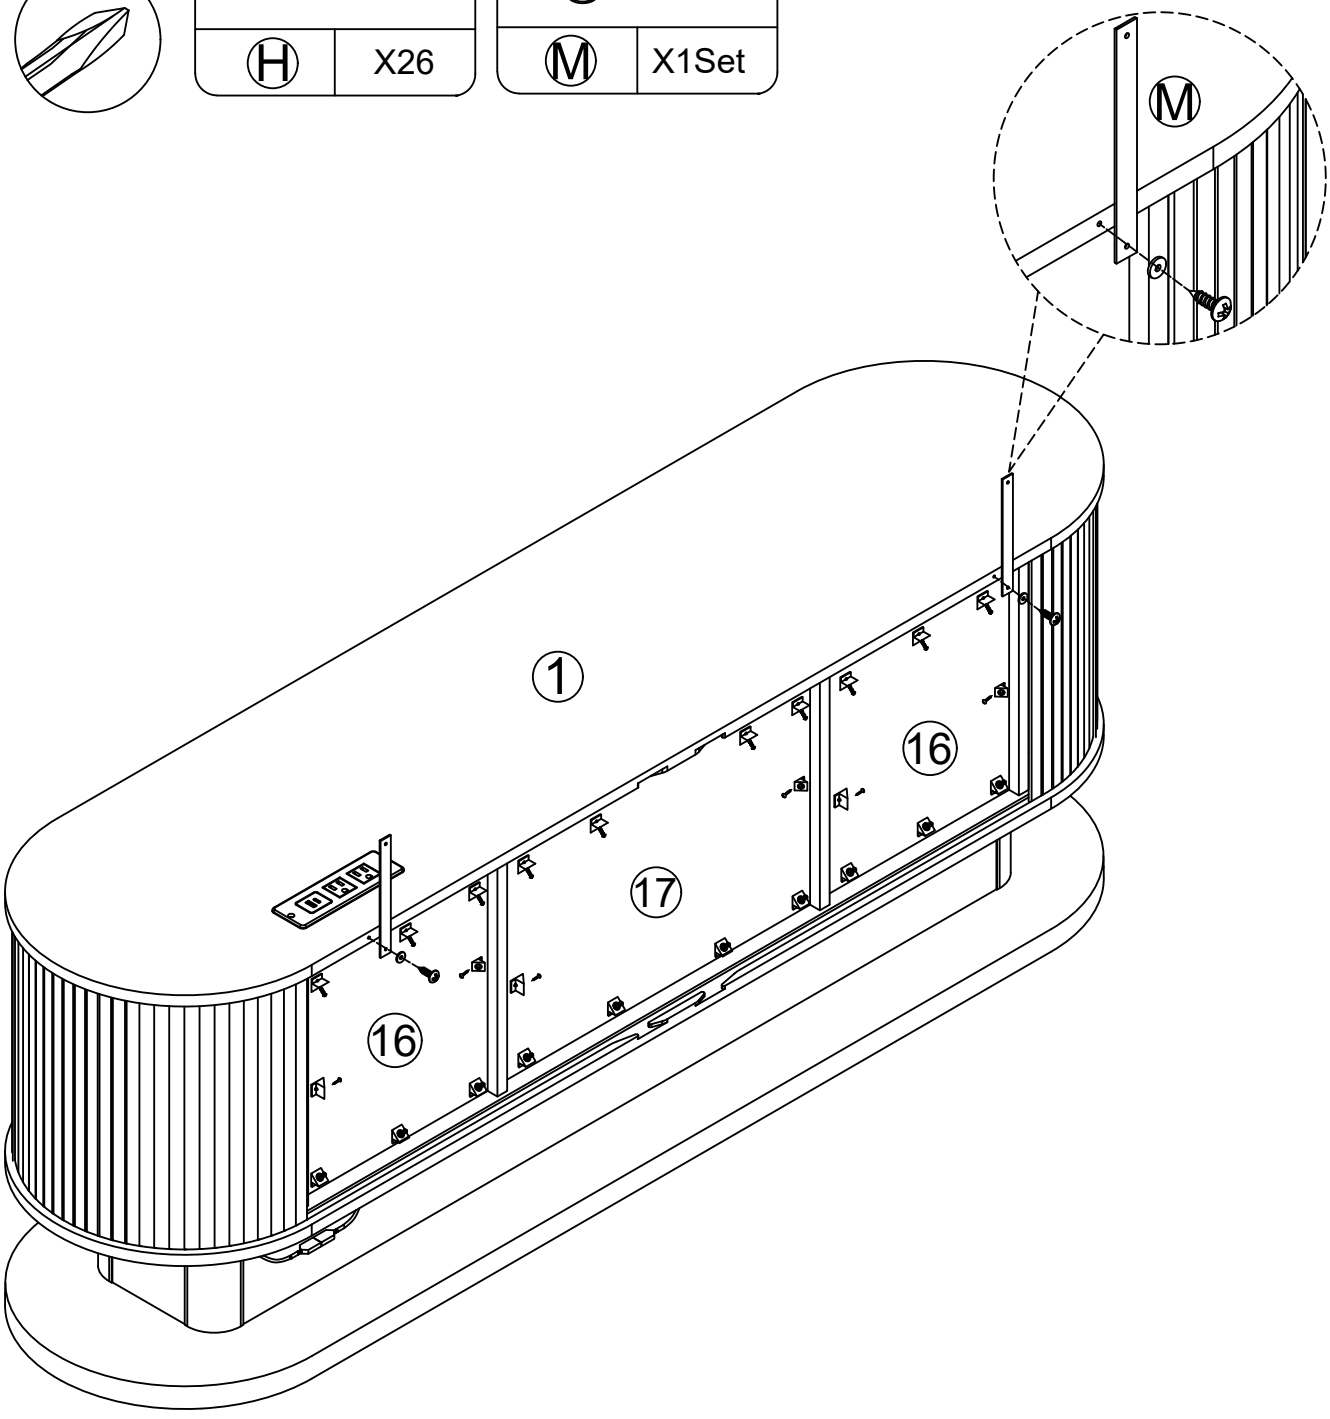


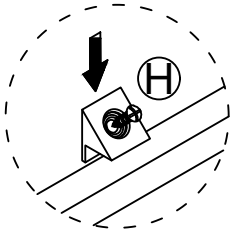


Insert the plastic buckle into the back plate slot, screw through the hole in the plastic buckle and lock it in place.

STEP24

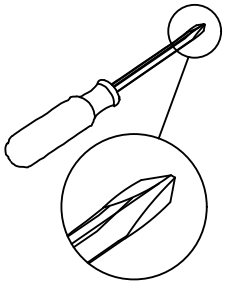


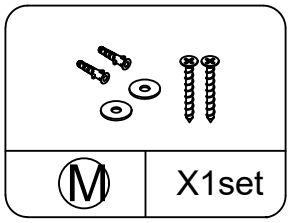


Install the tipping restraint hard ware

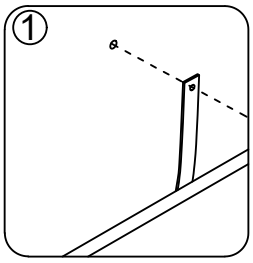


1.make mark on the wall

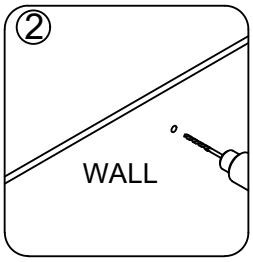


2.drill two Ø6 holes on the wall

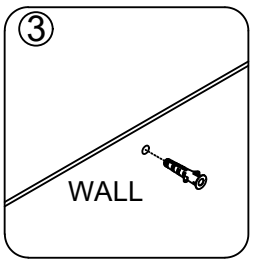


3.put two anchors in the holes

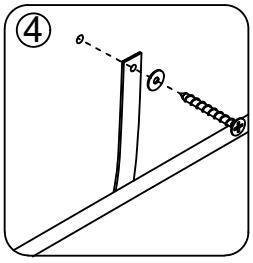

4.fix the device on the wall by the long screws

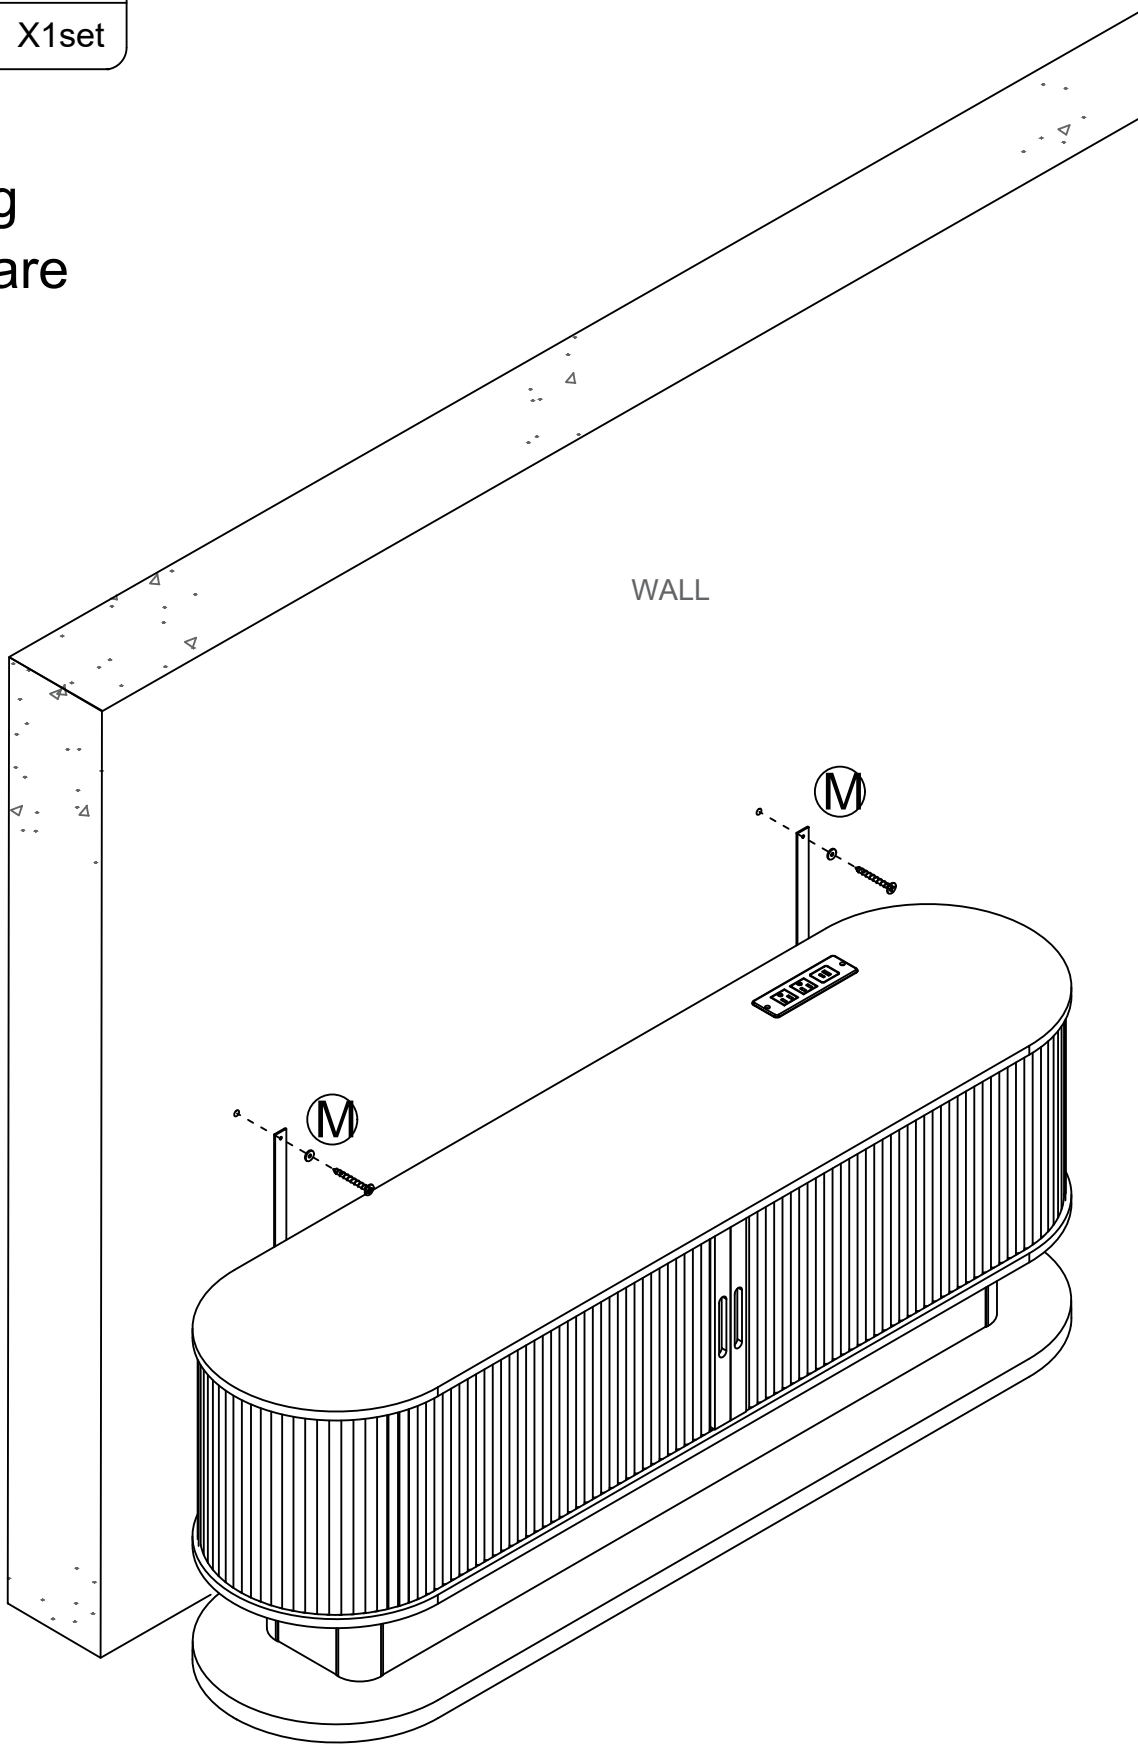

STEP25

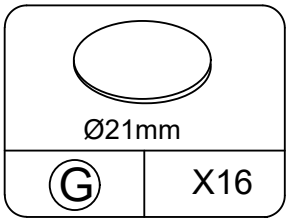

Using Cover-up Sticker (G)*16
tocoverthe exposed
part of Screws.

