









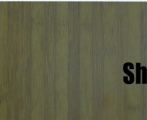






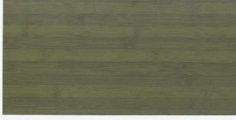









Installation Manual

Accessory List:

| | | |
|---|---|---|
|  |  |  |
| Top layer board * 1 | Long Backplane A * 2 | Drawer rear baffle * 2 |
|  |  |  |
| Door suction layer * 1 | Long Backplane B * 1 | Drawer front baffle * 2 |
|  |  |  |
| Bottom layer * 1 | Backboard stopper * 1 | Drawer side baffle * 4 |
|  |  |  |
|  | Short Backplane B * 2 | Drawer base plate * 2 |
|  |  | |
| Small layer board * 1 | Short Backplane A * 1 | |
|  |  | |
| First layer partition * 1 | Door plank * 3 | |
|  |  |  |
| Door stopper | Door mat | Plug |
|  |  |  |
| Door bolt | Large screw | Middle screw |
|  |  | |
| Small screw | Installation tools | |

Drawer installation



1. Remove the drawer front cover and drawer side cover and install them with the middle screw.



2. Take out the drawer base and insert it along the groove.



3. Remove the drawer back cover and install it with the middle screw.

Installation of gaskets



Remove the door panel and door pad and install them with small screws.

Installation steps




1. Take out the bottom layer board and the left side bracket, and install them with large screws (pay attention to aligning the grooves of the layer board and bracket)



2. Remove a layer of partition and install the door stopper with small screws.



3. Then fix the partition board to the bottom board layer with large screws (pay attention to aligning the grooves between the layer board and the bracket).

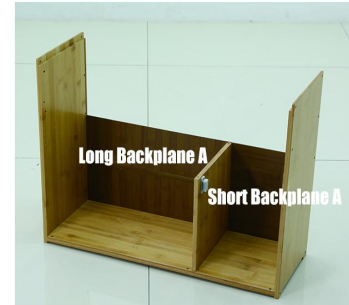

4. Take out the back panel strip, insert the long backplane A and the short backplane A along the groove.



5. Remove the door suction layer board and install the door suction with small screws.



6. Take out the second partition and fix the door suction layer with large screws (pay attention to the alignment of the grooves between the layers).



7. Fix the door suction panel and side bracket with large screws (do not tighten screws at the marked positions).



8. Take out the door panel with the hinges and fix it with the door bolts.



9. Install the remaining door panels again, and then tighten the screws.



10. Remove the short backplane B and insert it along the groove.



11. Remove the small layer board and install it with large screws.



12. Remove the short backplane B and insert the long backplane B along the groove.



13. Remove the top layer board and install it with large screws.



14. Remove the plug and insert it into the hole.



15. Finally, insert the drawer.