


ASSEMBLY GUIDE
URBAN 3-DOOR WARDROBE

Compliant with Federal Law STURDY Act (Stop Tip-overs of Unstable, Risky Dressers on Youth). Passed 16 CFR 1262, ASTM F2057-23 Tests.

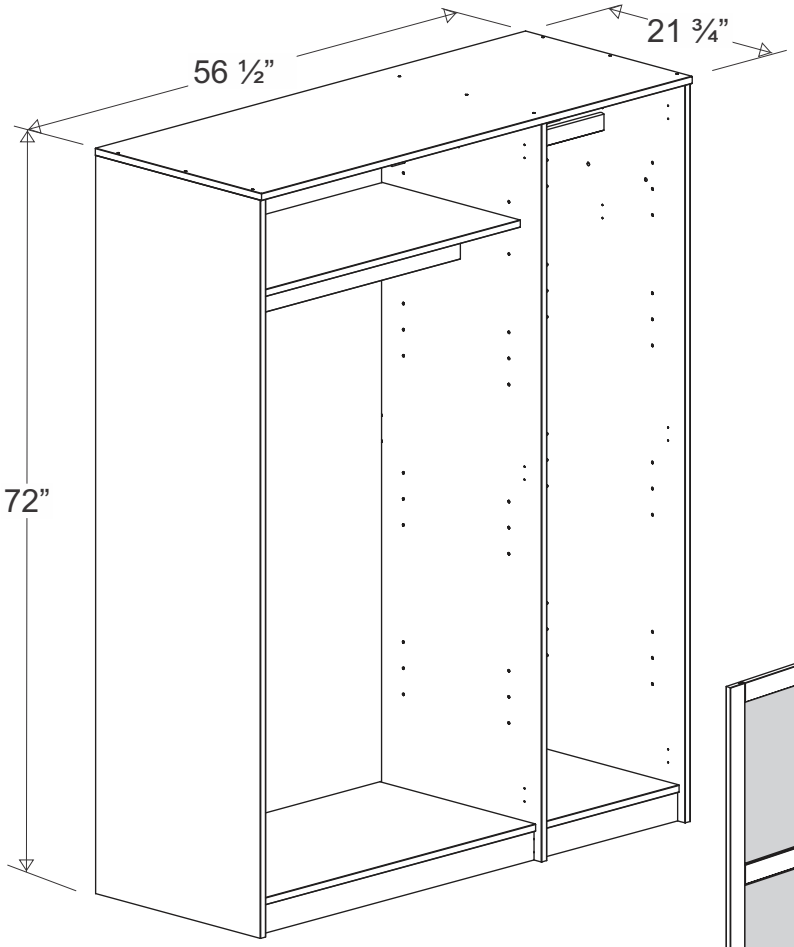


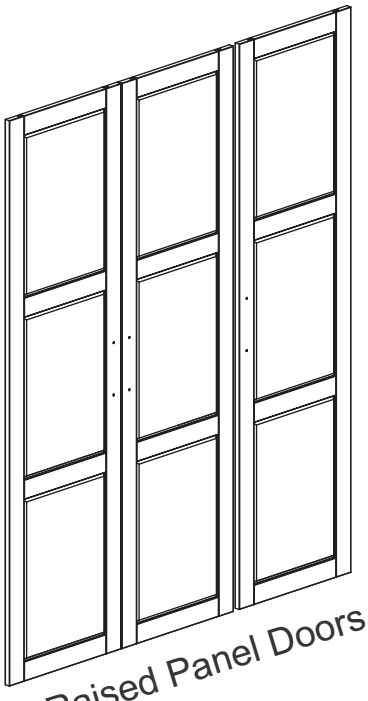



Raised Panel Doors

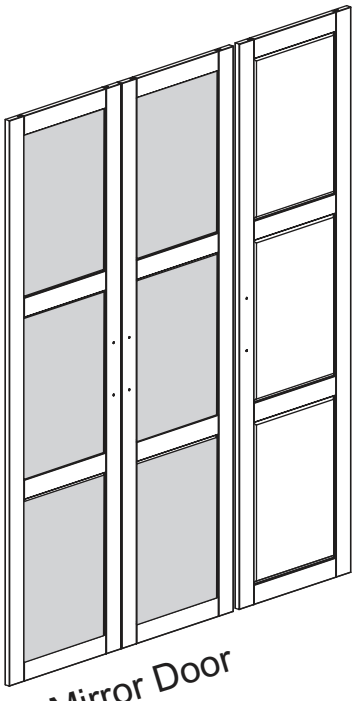

Mirror Door

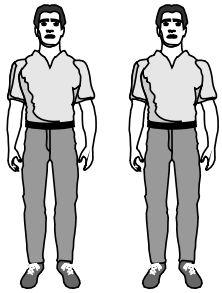

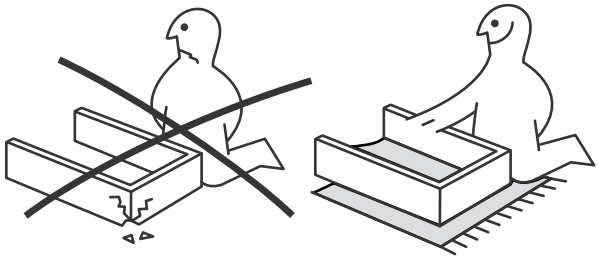

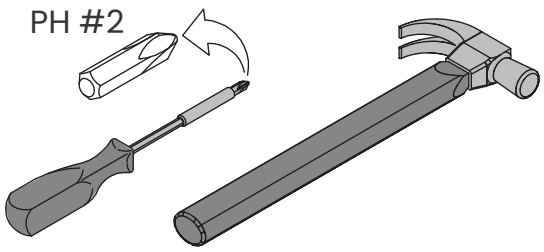


Before You Begin Assembly

- Carefully inspect the package contents. A complete parts checklist is provided below.
- If any parts are missing or damaged, please contact us for assistance.












Assembly Tips


- Assemble the item on a flat, smooth surface. We recommend placing a blanket or protective covering underneath to prevent scratches.
- Use a power drill **only at a low-speed setting** to avoid damaging components.
- Assemble the product as close as possible to its final location to minimize the need for moving it later.
- Important: The hardware pack contains small parts that may pose a choking hazard.
  Keep all small items out of reach of young children.

PARTS LAYOUT

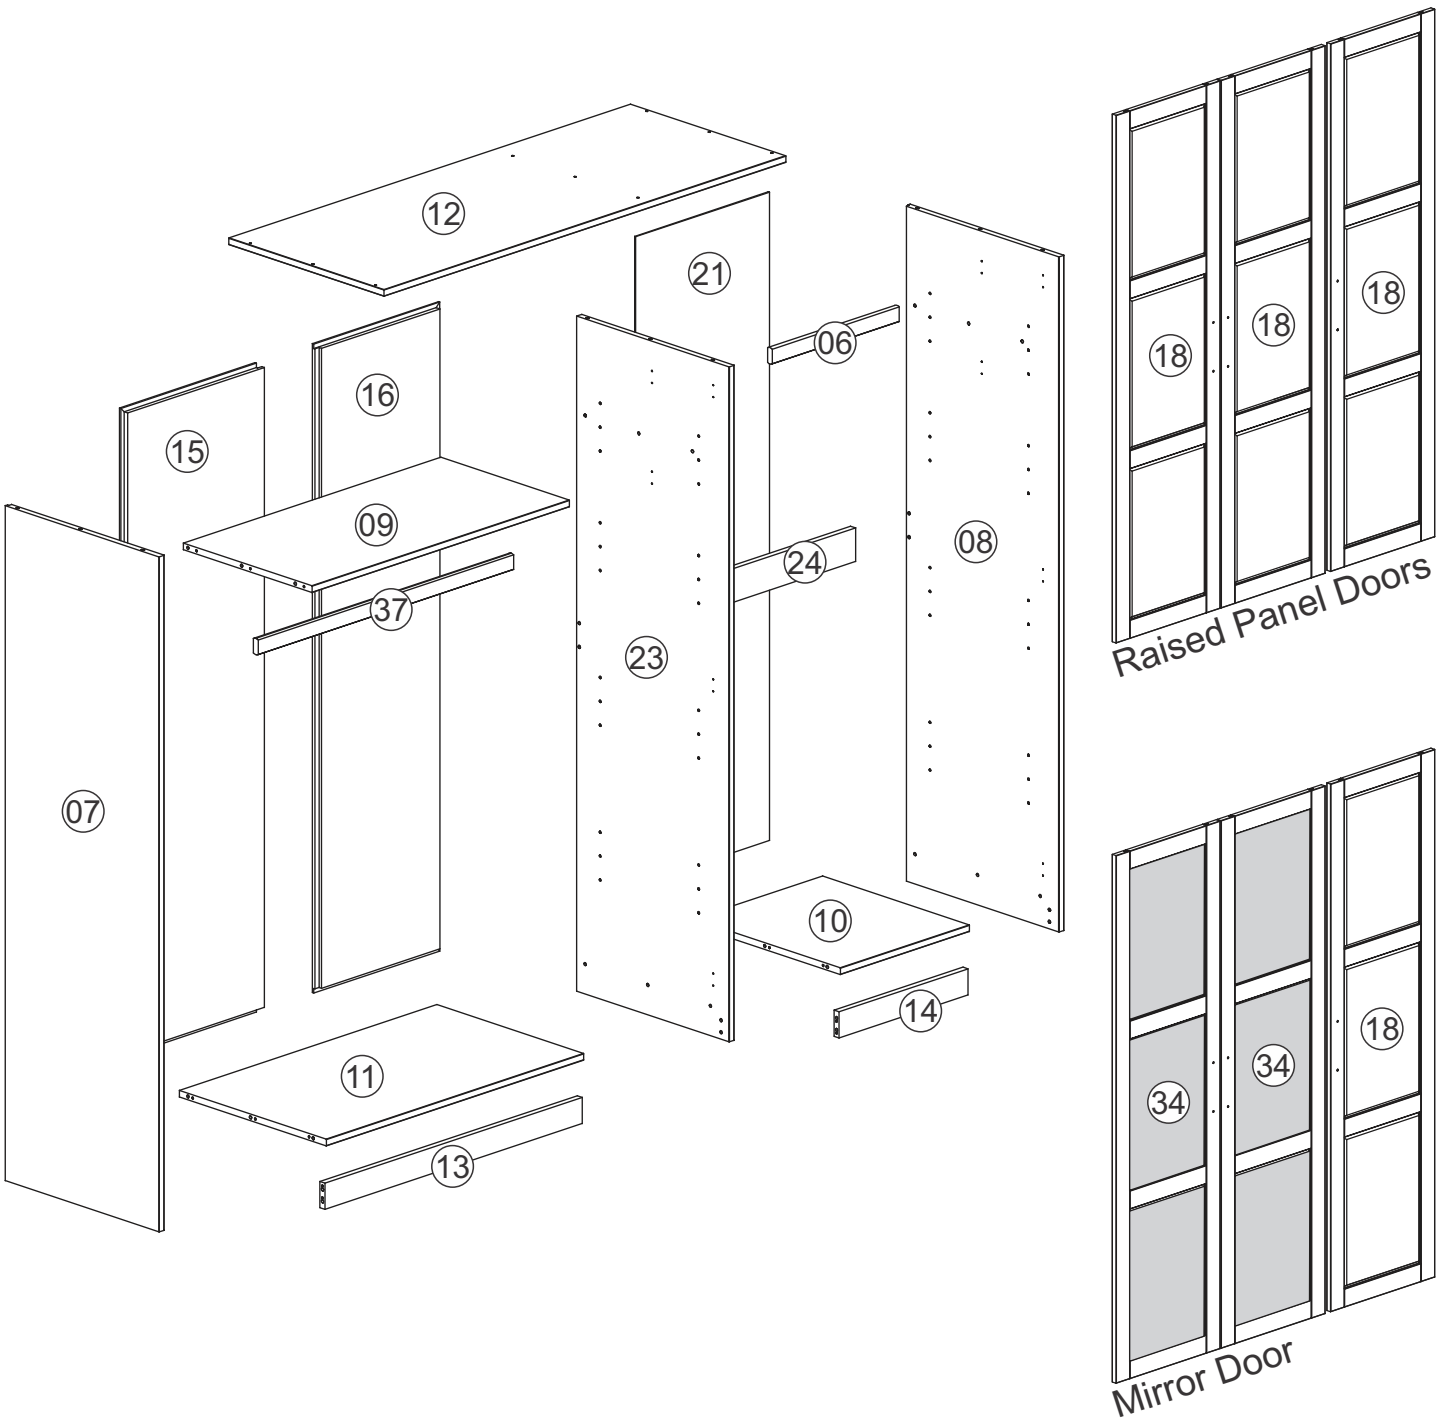

Screws Are Illustrated at Actual Size for Accurate Reference

A1	 4,0x30	31+2
A16	 4,0x40	09+1
A25	 M4x25	06+1
A44	 3,5x14	54+3
C2	 8,0x25	39+2
D3	 45x27x12	02
D10		04
D27		05+1
D35	 50x13x1,2	02
F16		09
G1	 10x10	57
H12		03

TIPOVER RESTRAINT KIT		
A47	 3,0x20	02+1
F8	 47x20x9	02
F15	 300mm	01

WARNING:
CHOKING HAZARD


Contains small parts - choking hazard.
Adult supervision is required during assembly.
Not suitable for children under 3 years of age.

WARNING:

Important Safety Notice:


This furniture includes tip-over prevention hardware, which MUST be securely attached to the wall as outlined in the assembly instructions. Failure to do so may result in serious injury or death.


01)

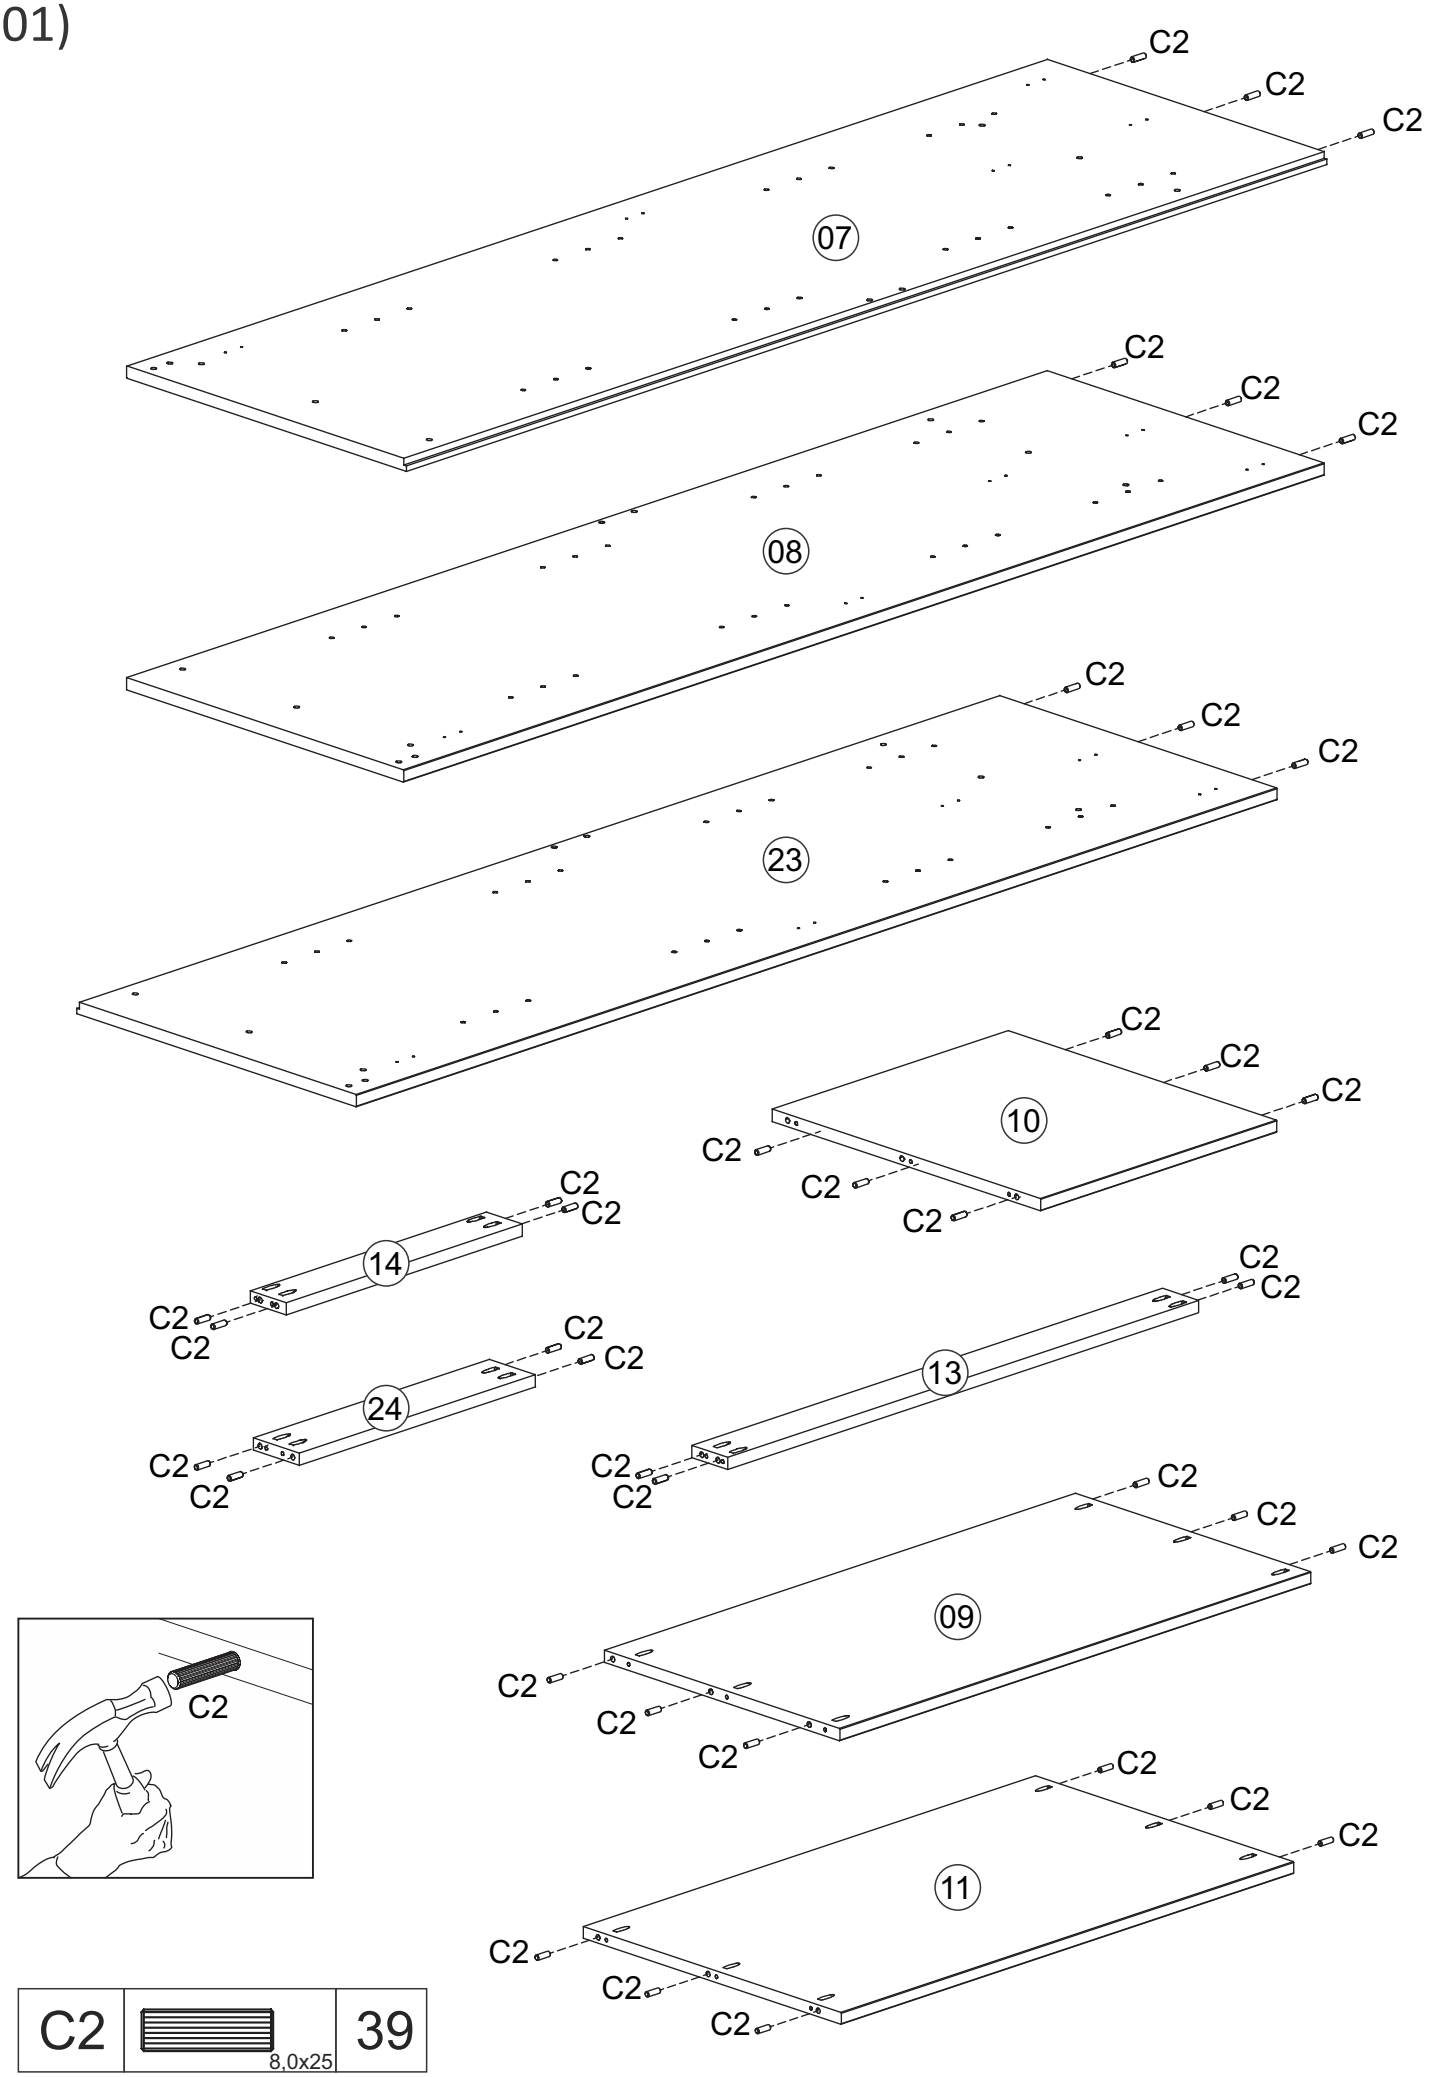


C2	8,0x25	39


02)

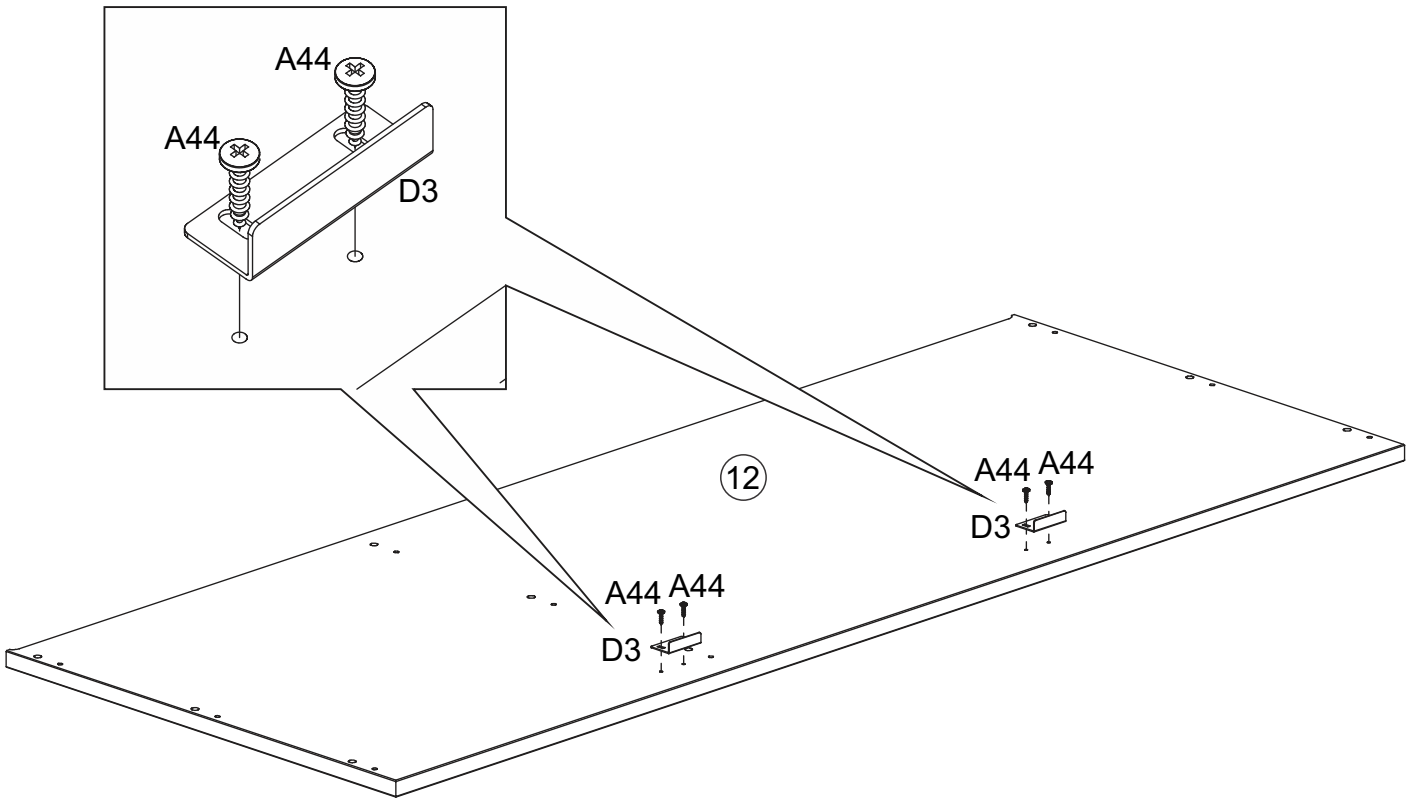

A44	 3,5x14	04


D3		02


03)

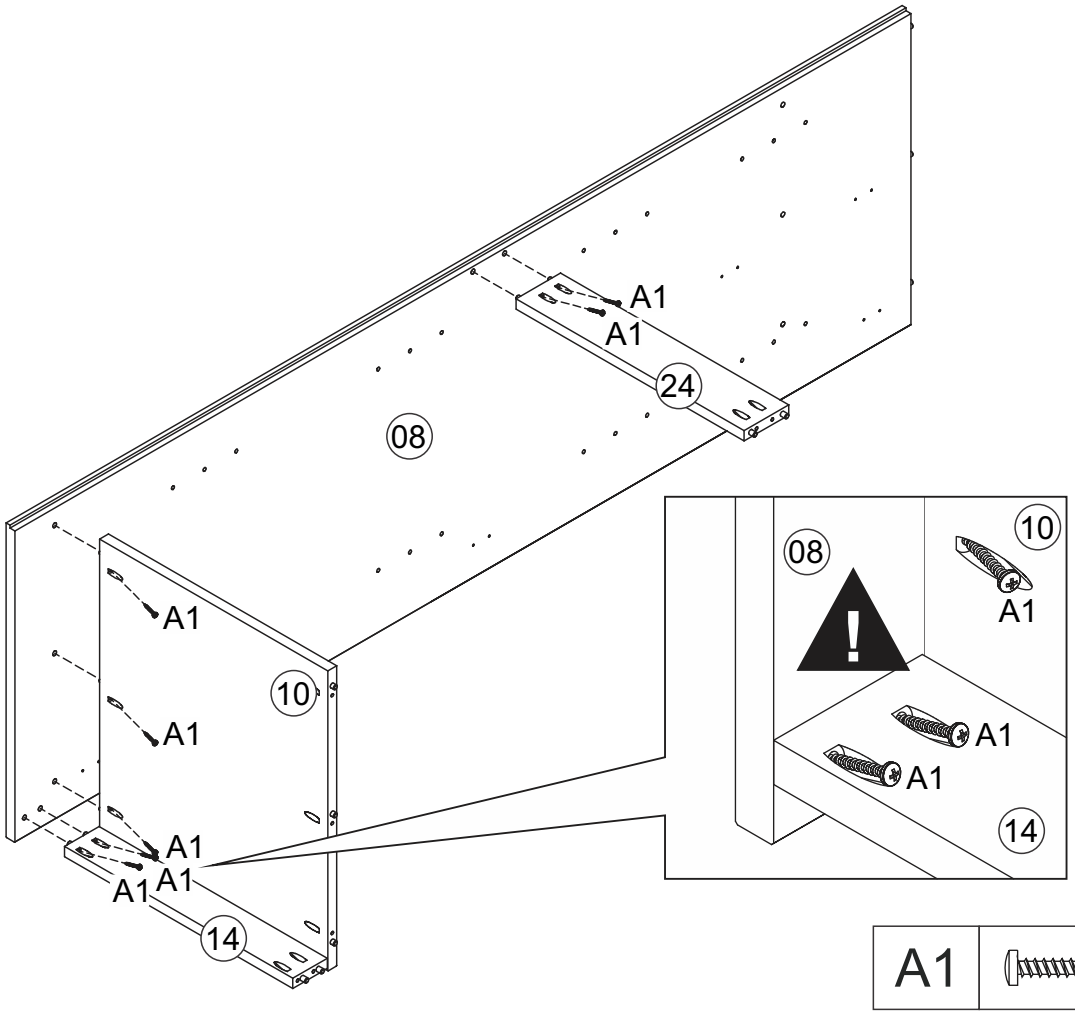


A1	 4,0x30	07

04)

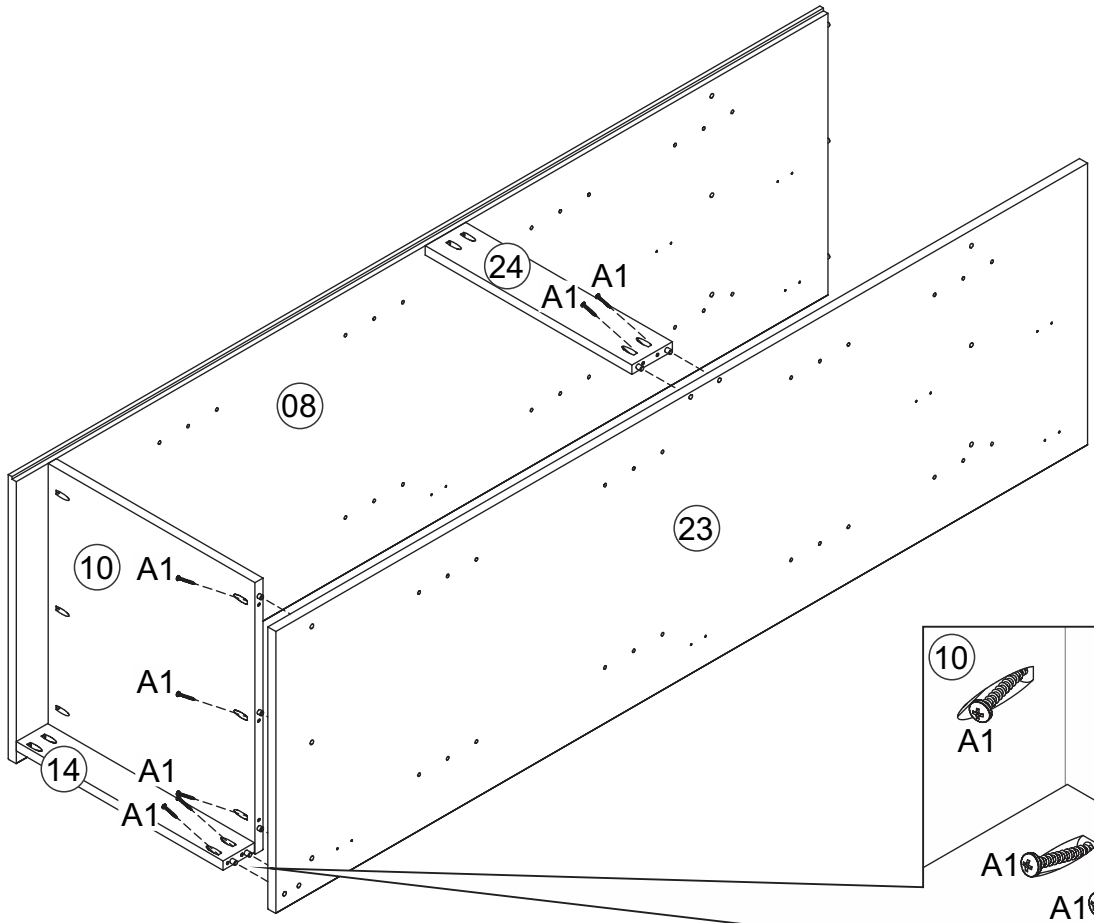


A1	 4,0x30	07

05)

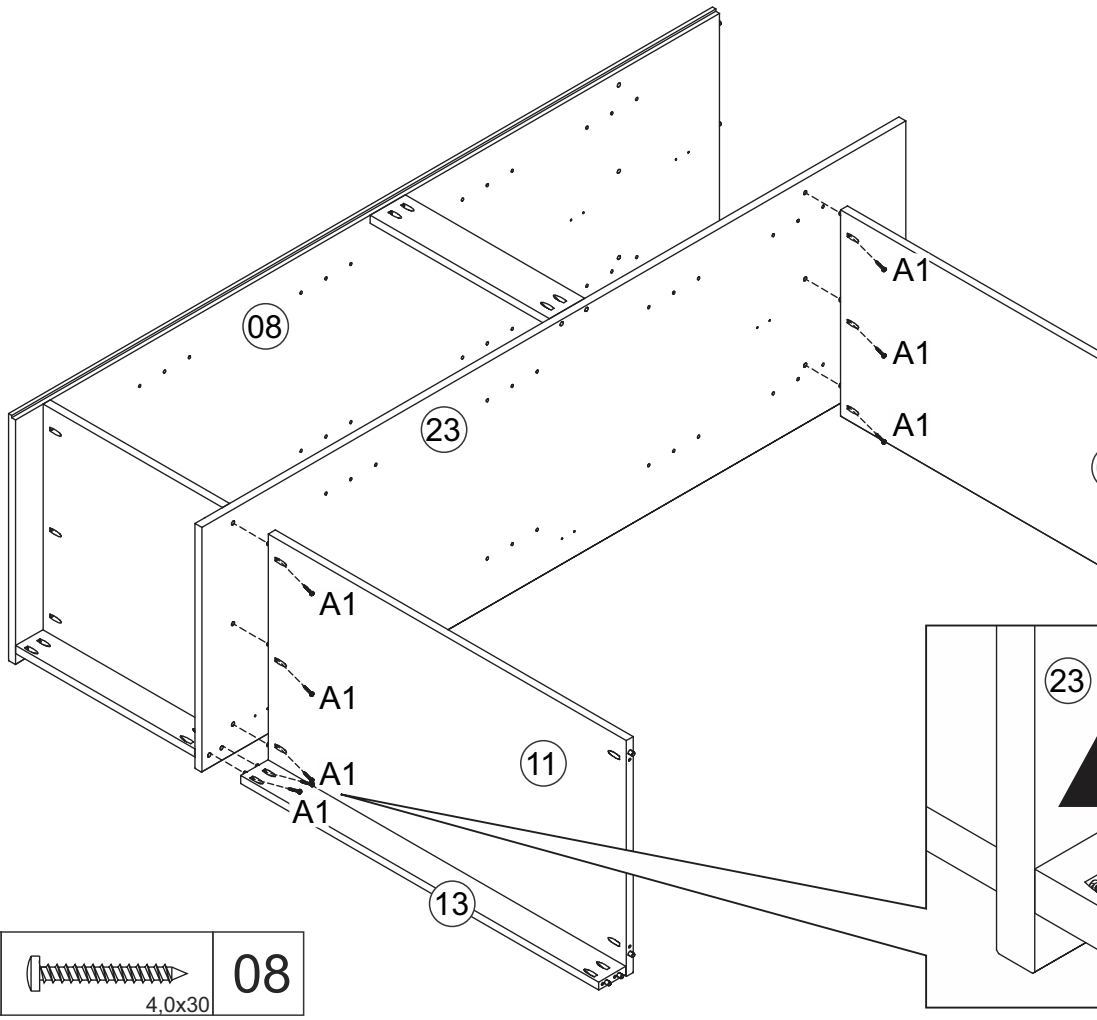


A1	4,0x30	08

06)

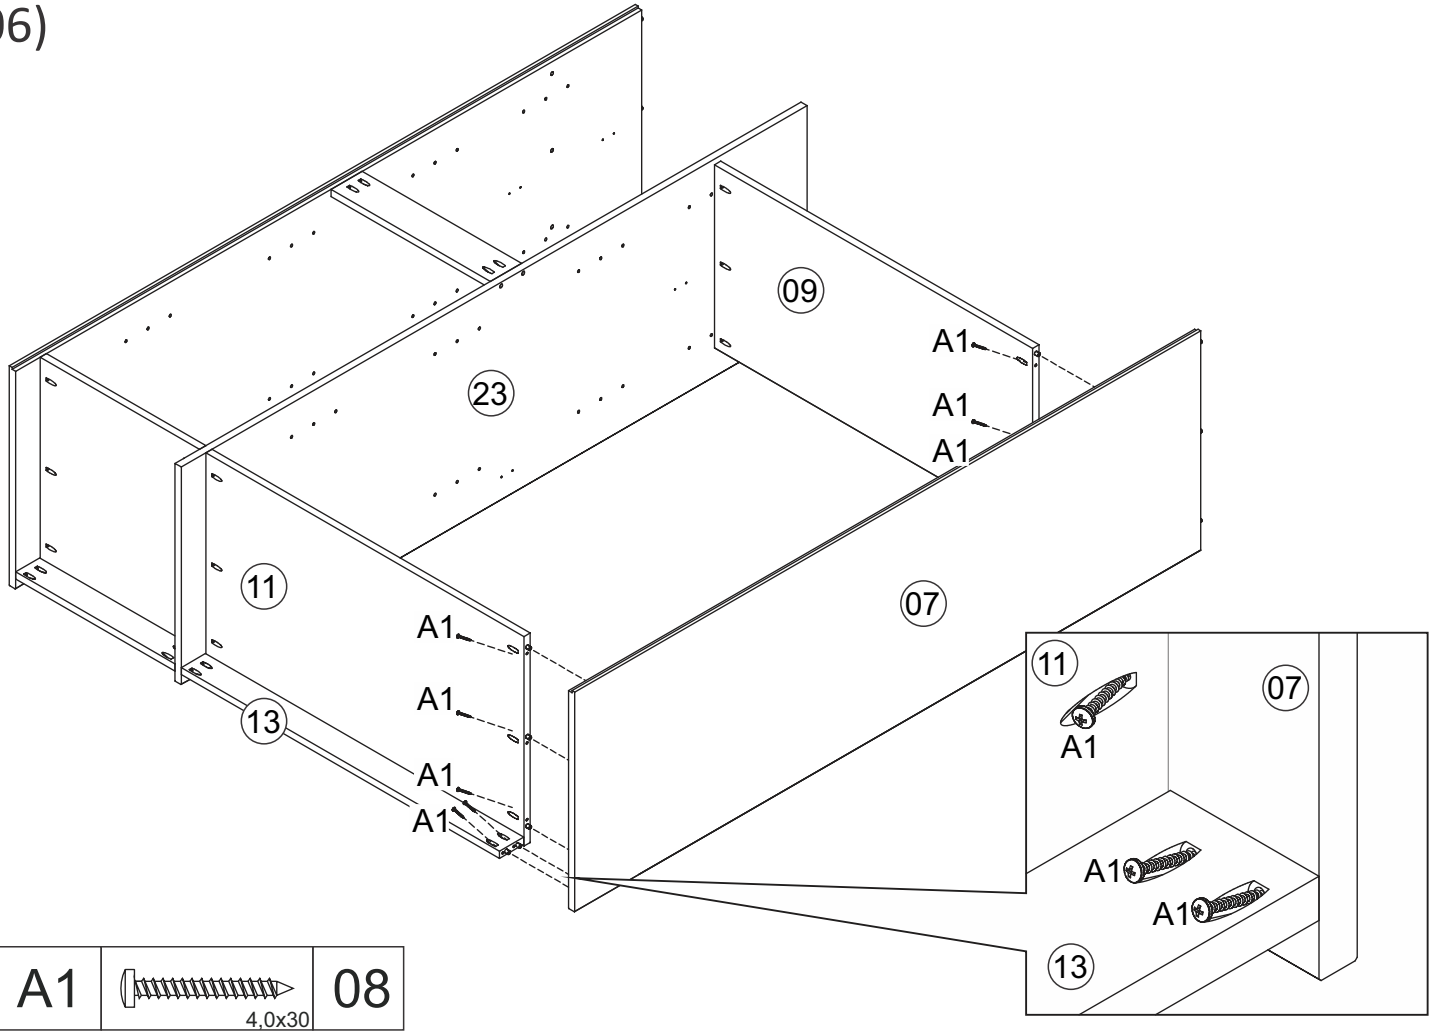


A1	4,0x30	08

07)

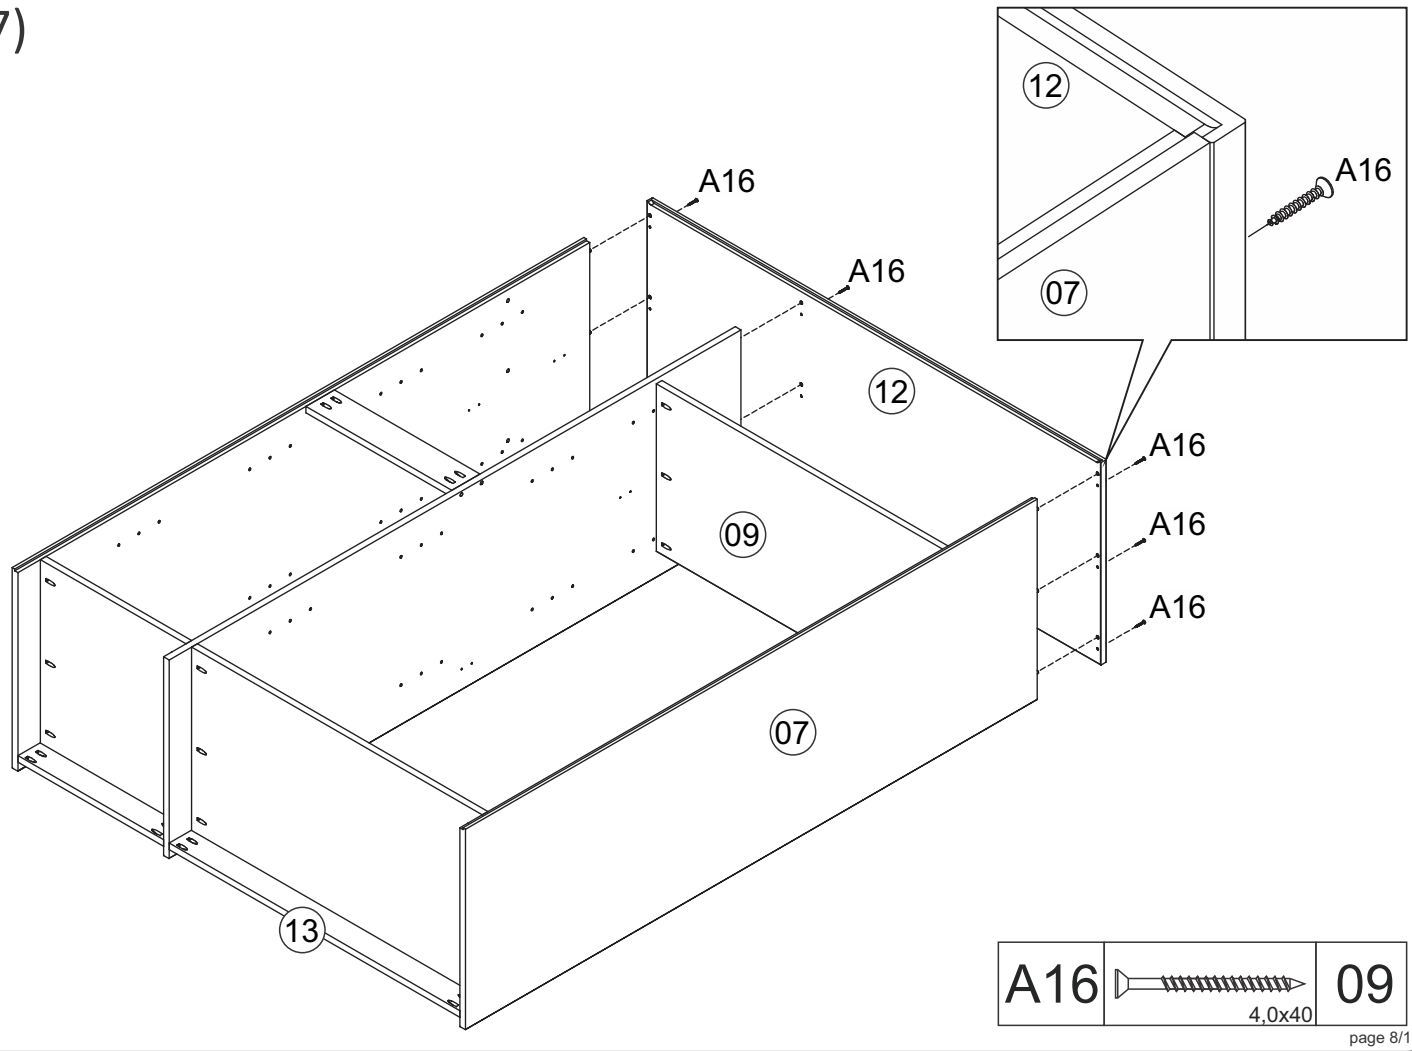

A16	4,0x40	09


08)

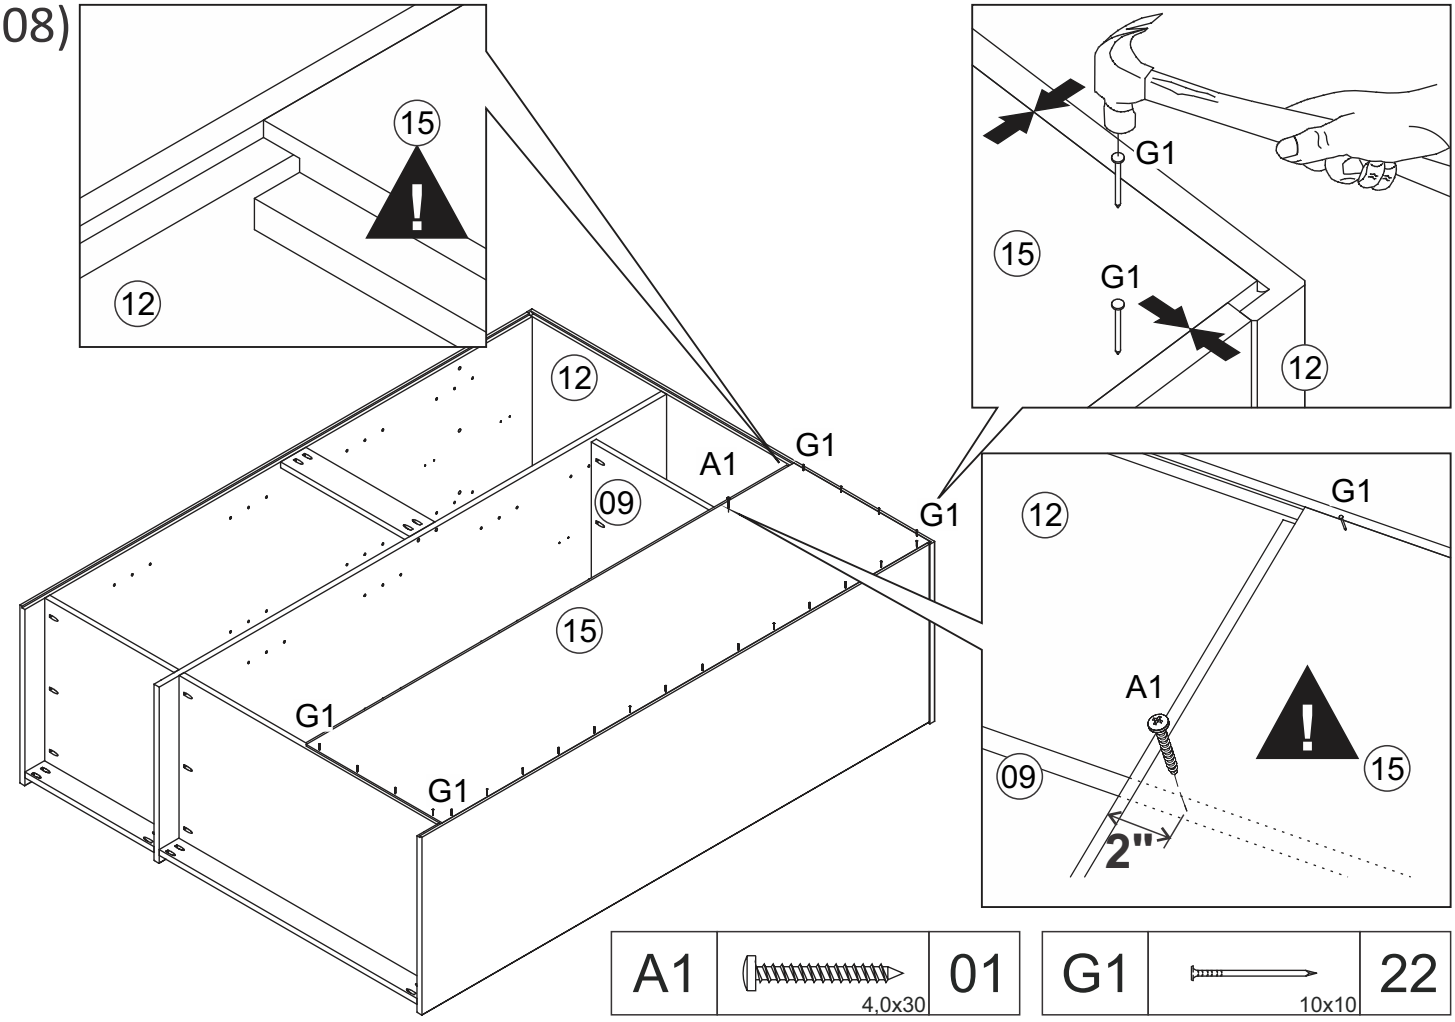

A1	4,0x30	01


G1	10x10	22

09)

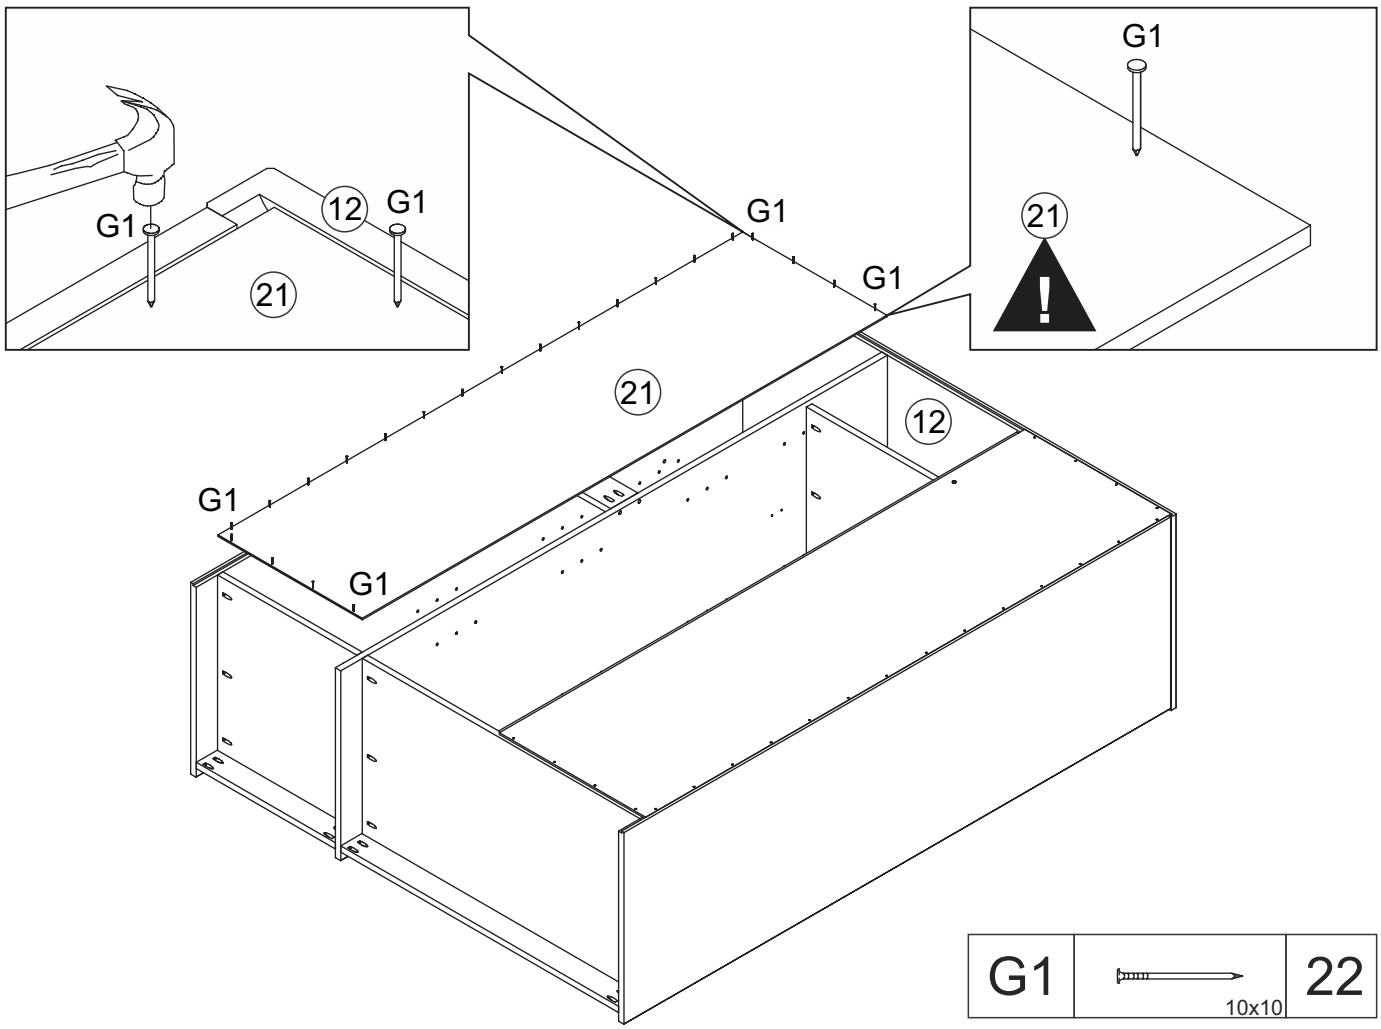


G1	10x10	22

10)

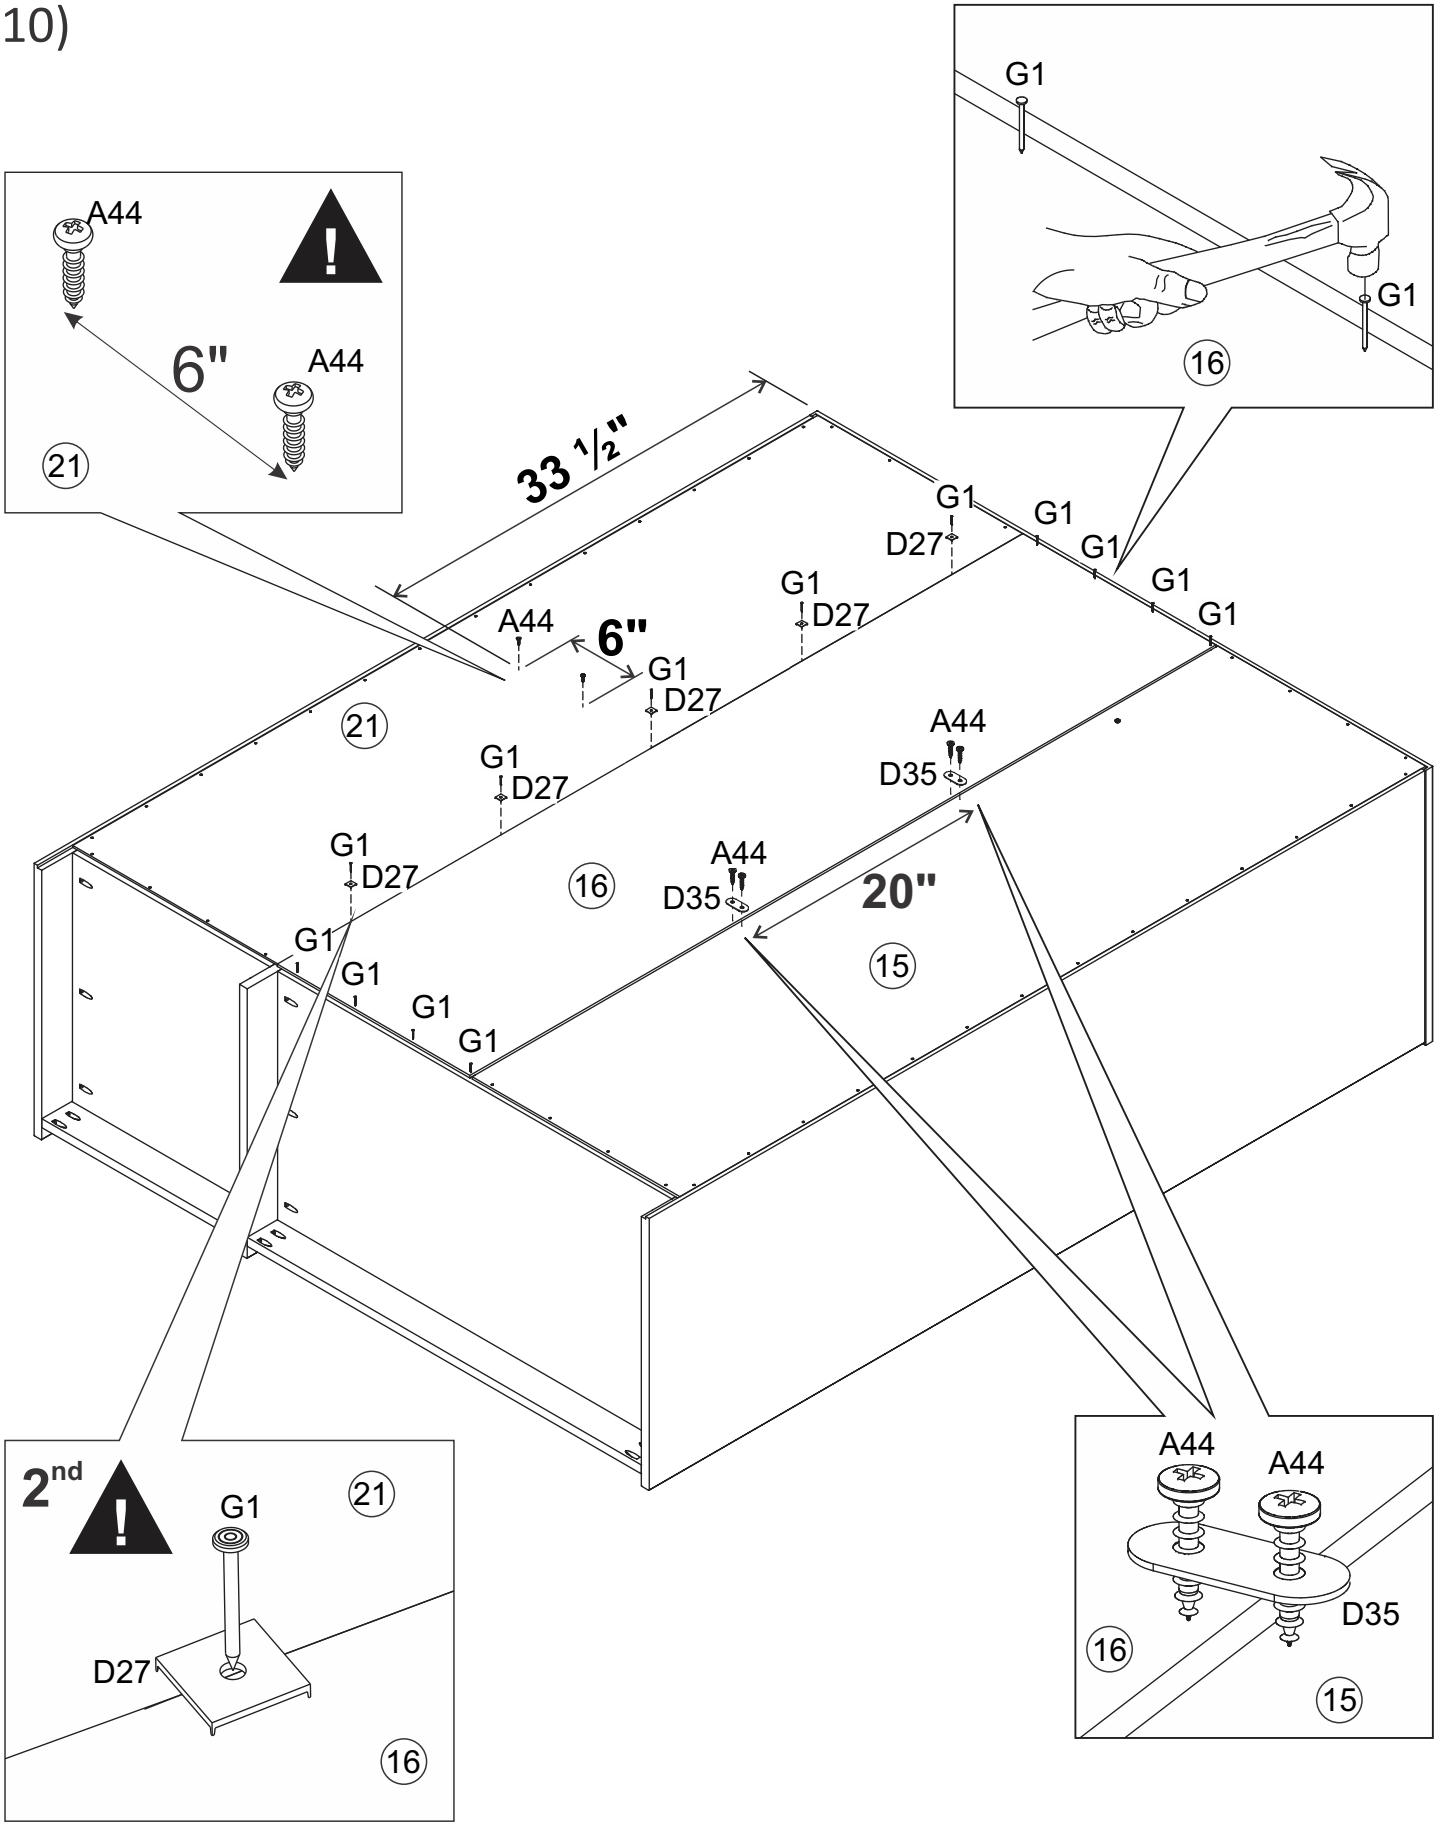


A44	3,5x14	06
D27		05
D35		02
G1	10x10	13

11)

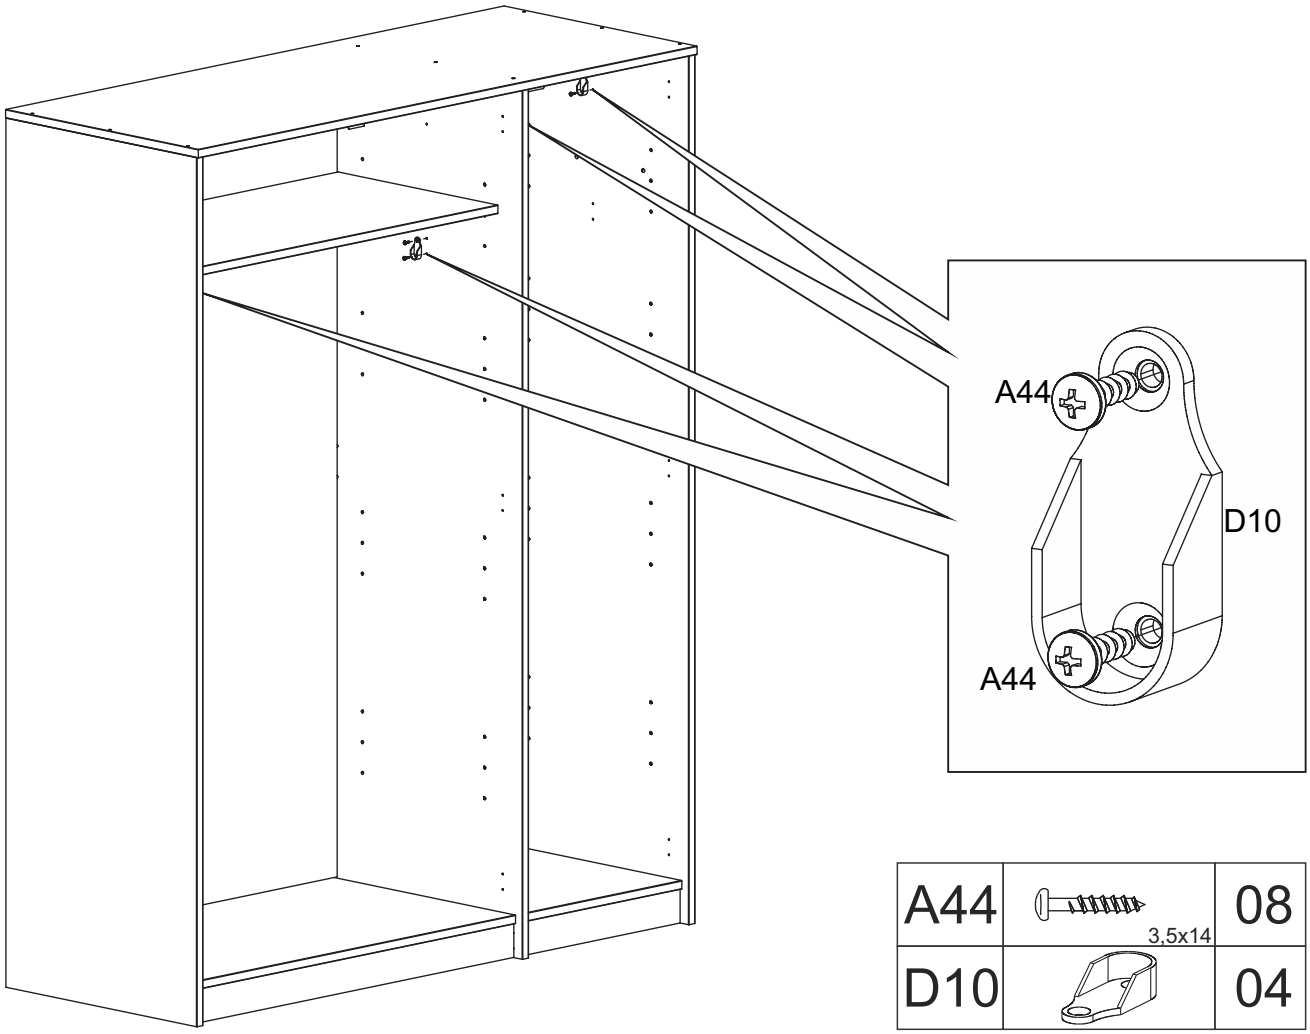


A44	3,5x14	08
D10		04

12)

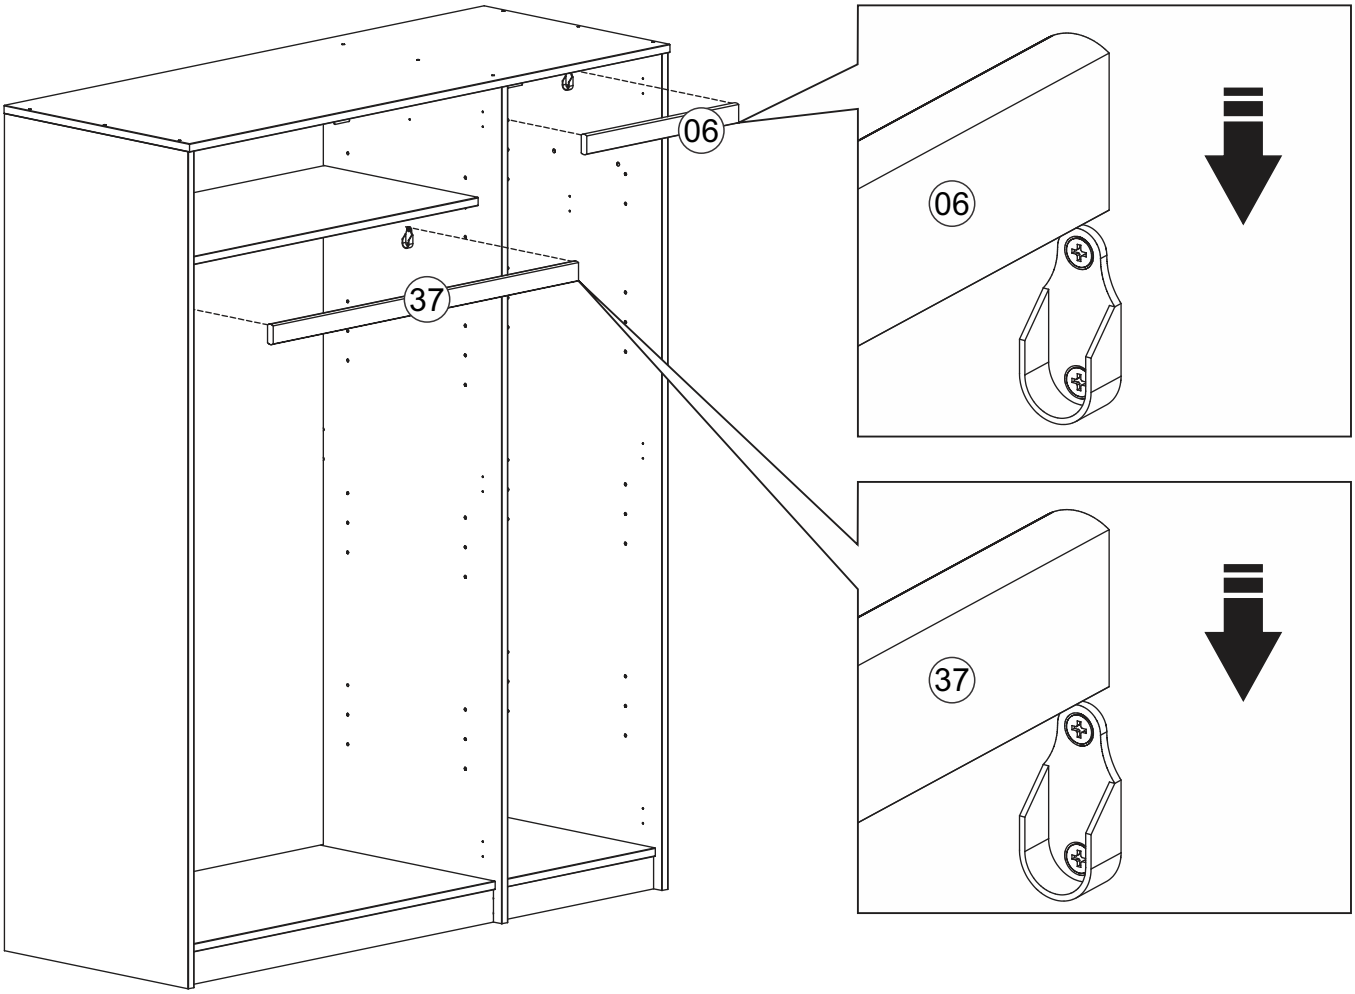


13)

If the hinge (F16) is detached, attach it to the hinge plate by aligning and pushing it in until it clicks securely into place.

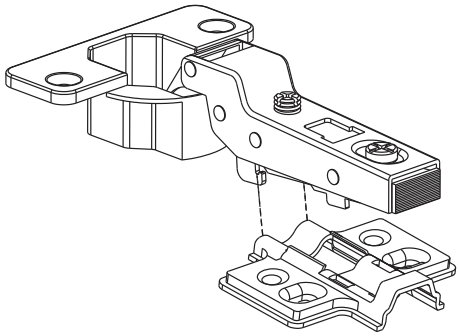


F16

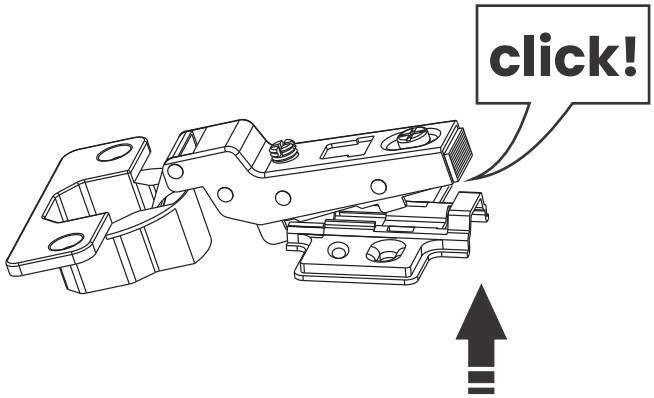


14)

3x

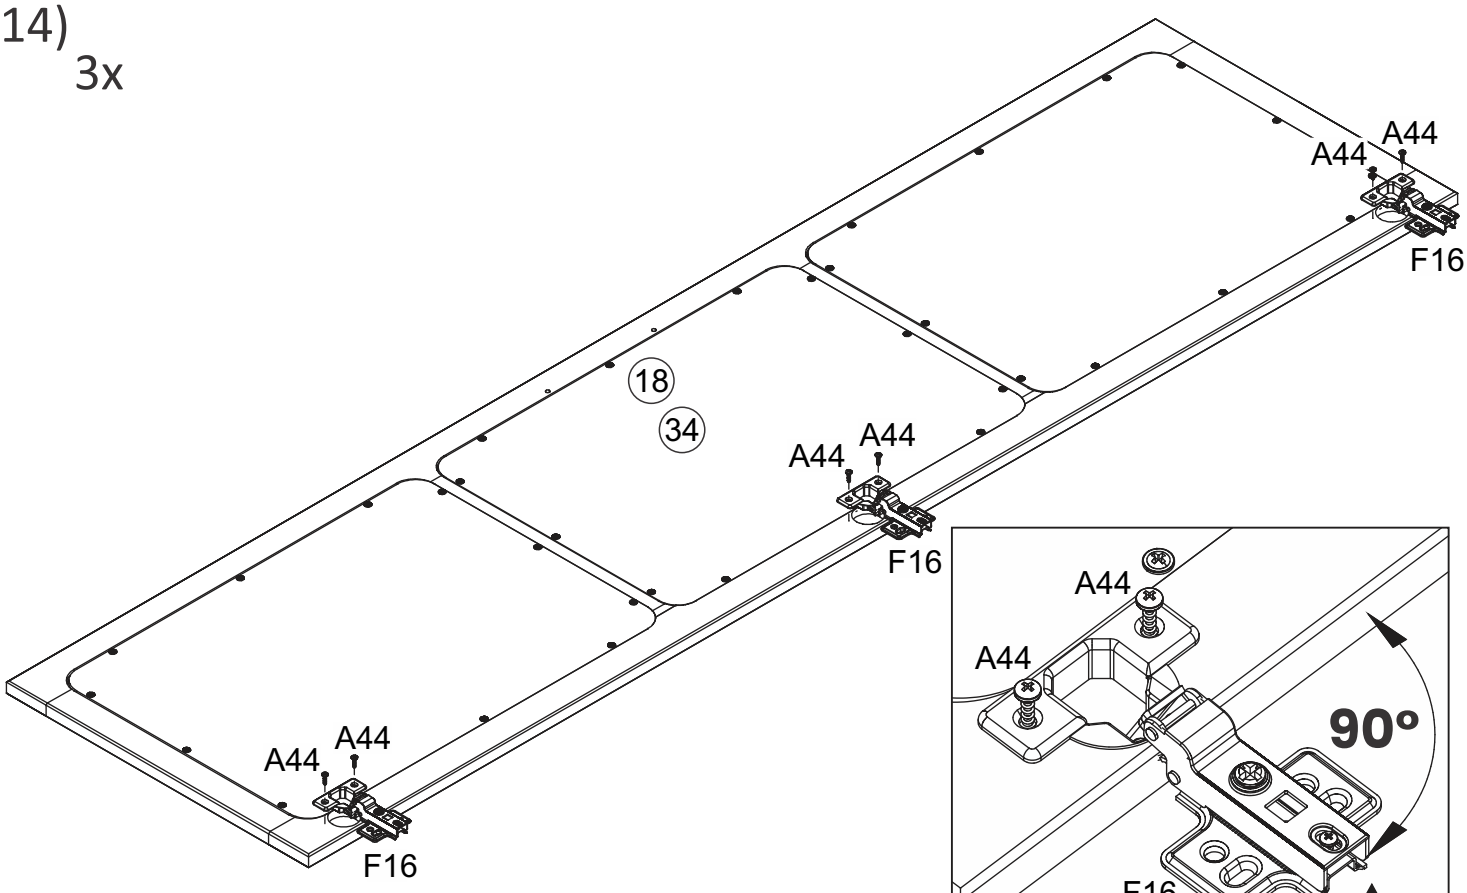


A44	3,5x14	18
F16		09

15)

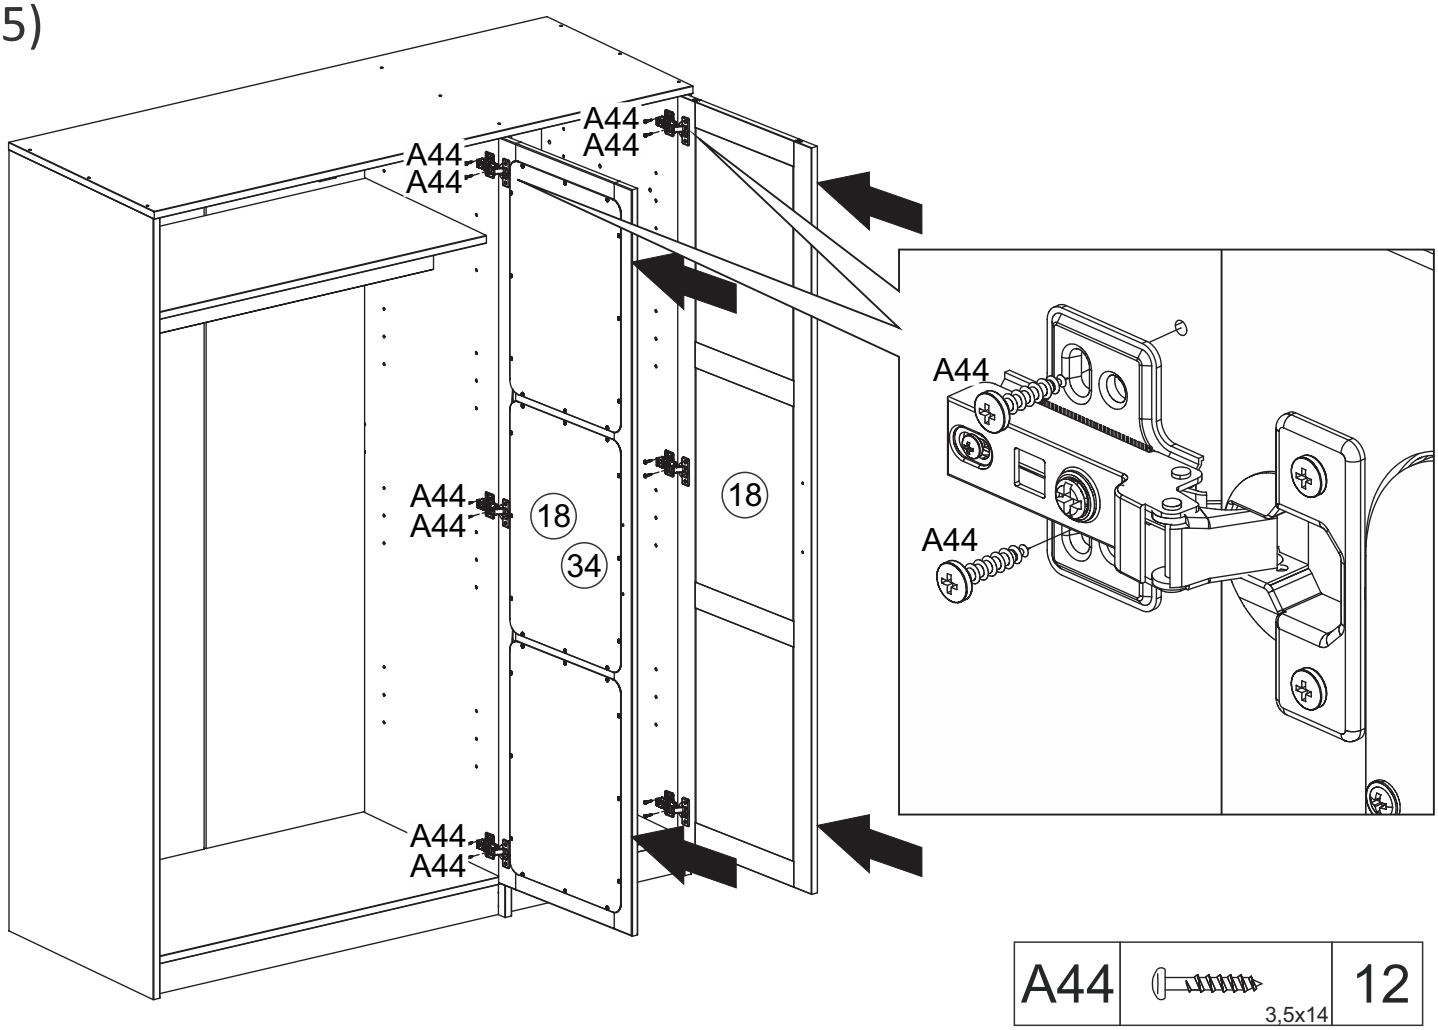


A44	3,5x14	12

16)

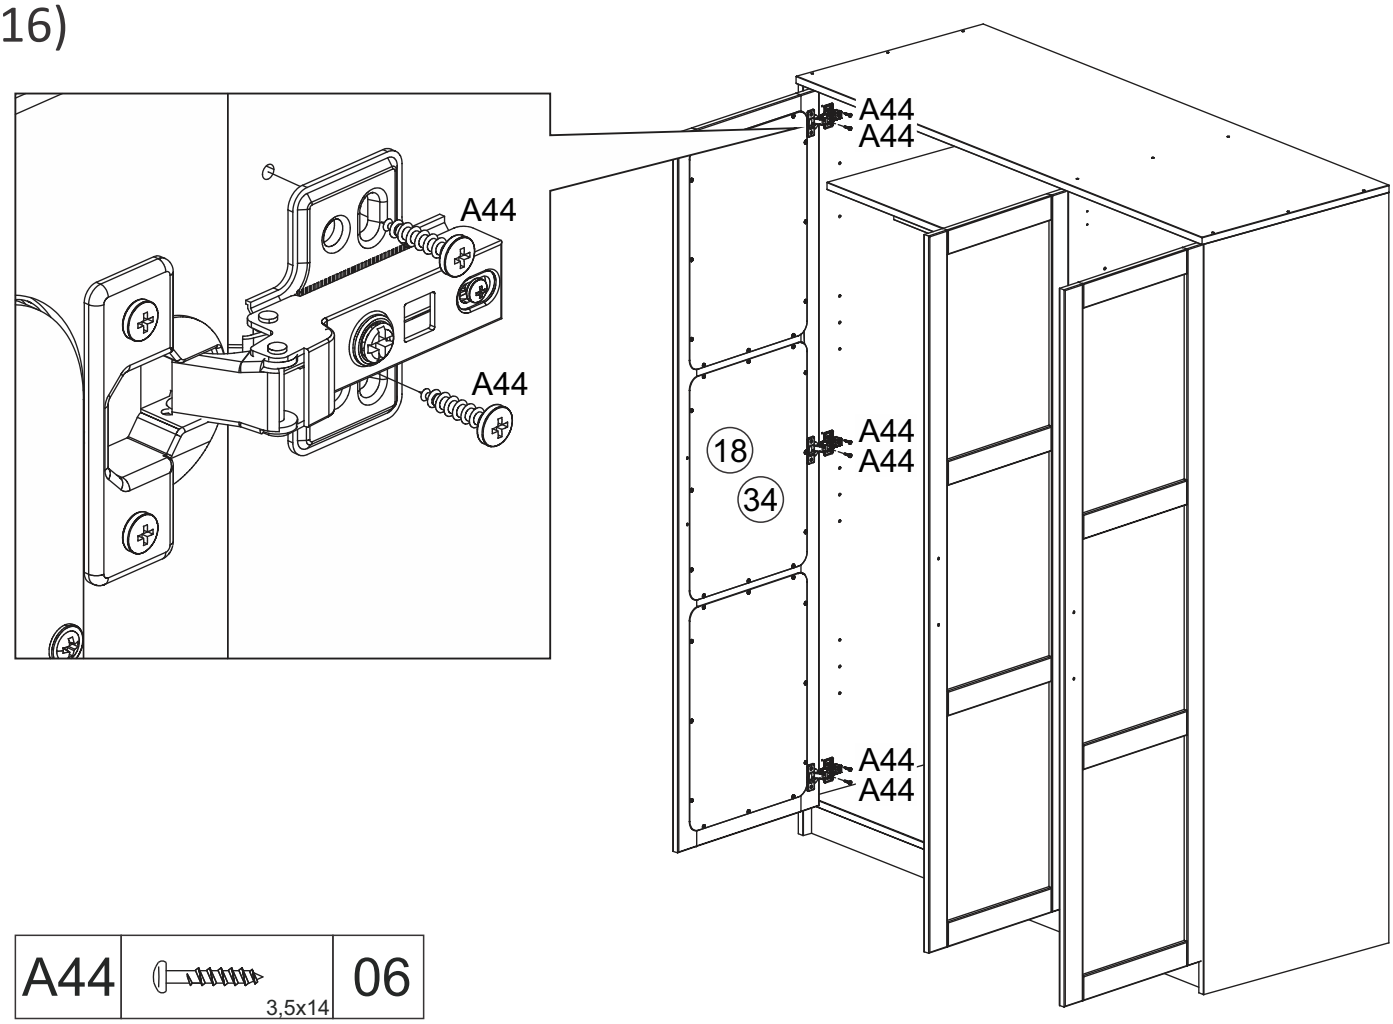


A44	3,5x14	06

17)

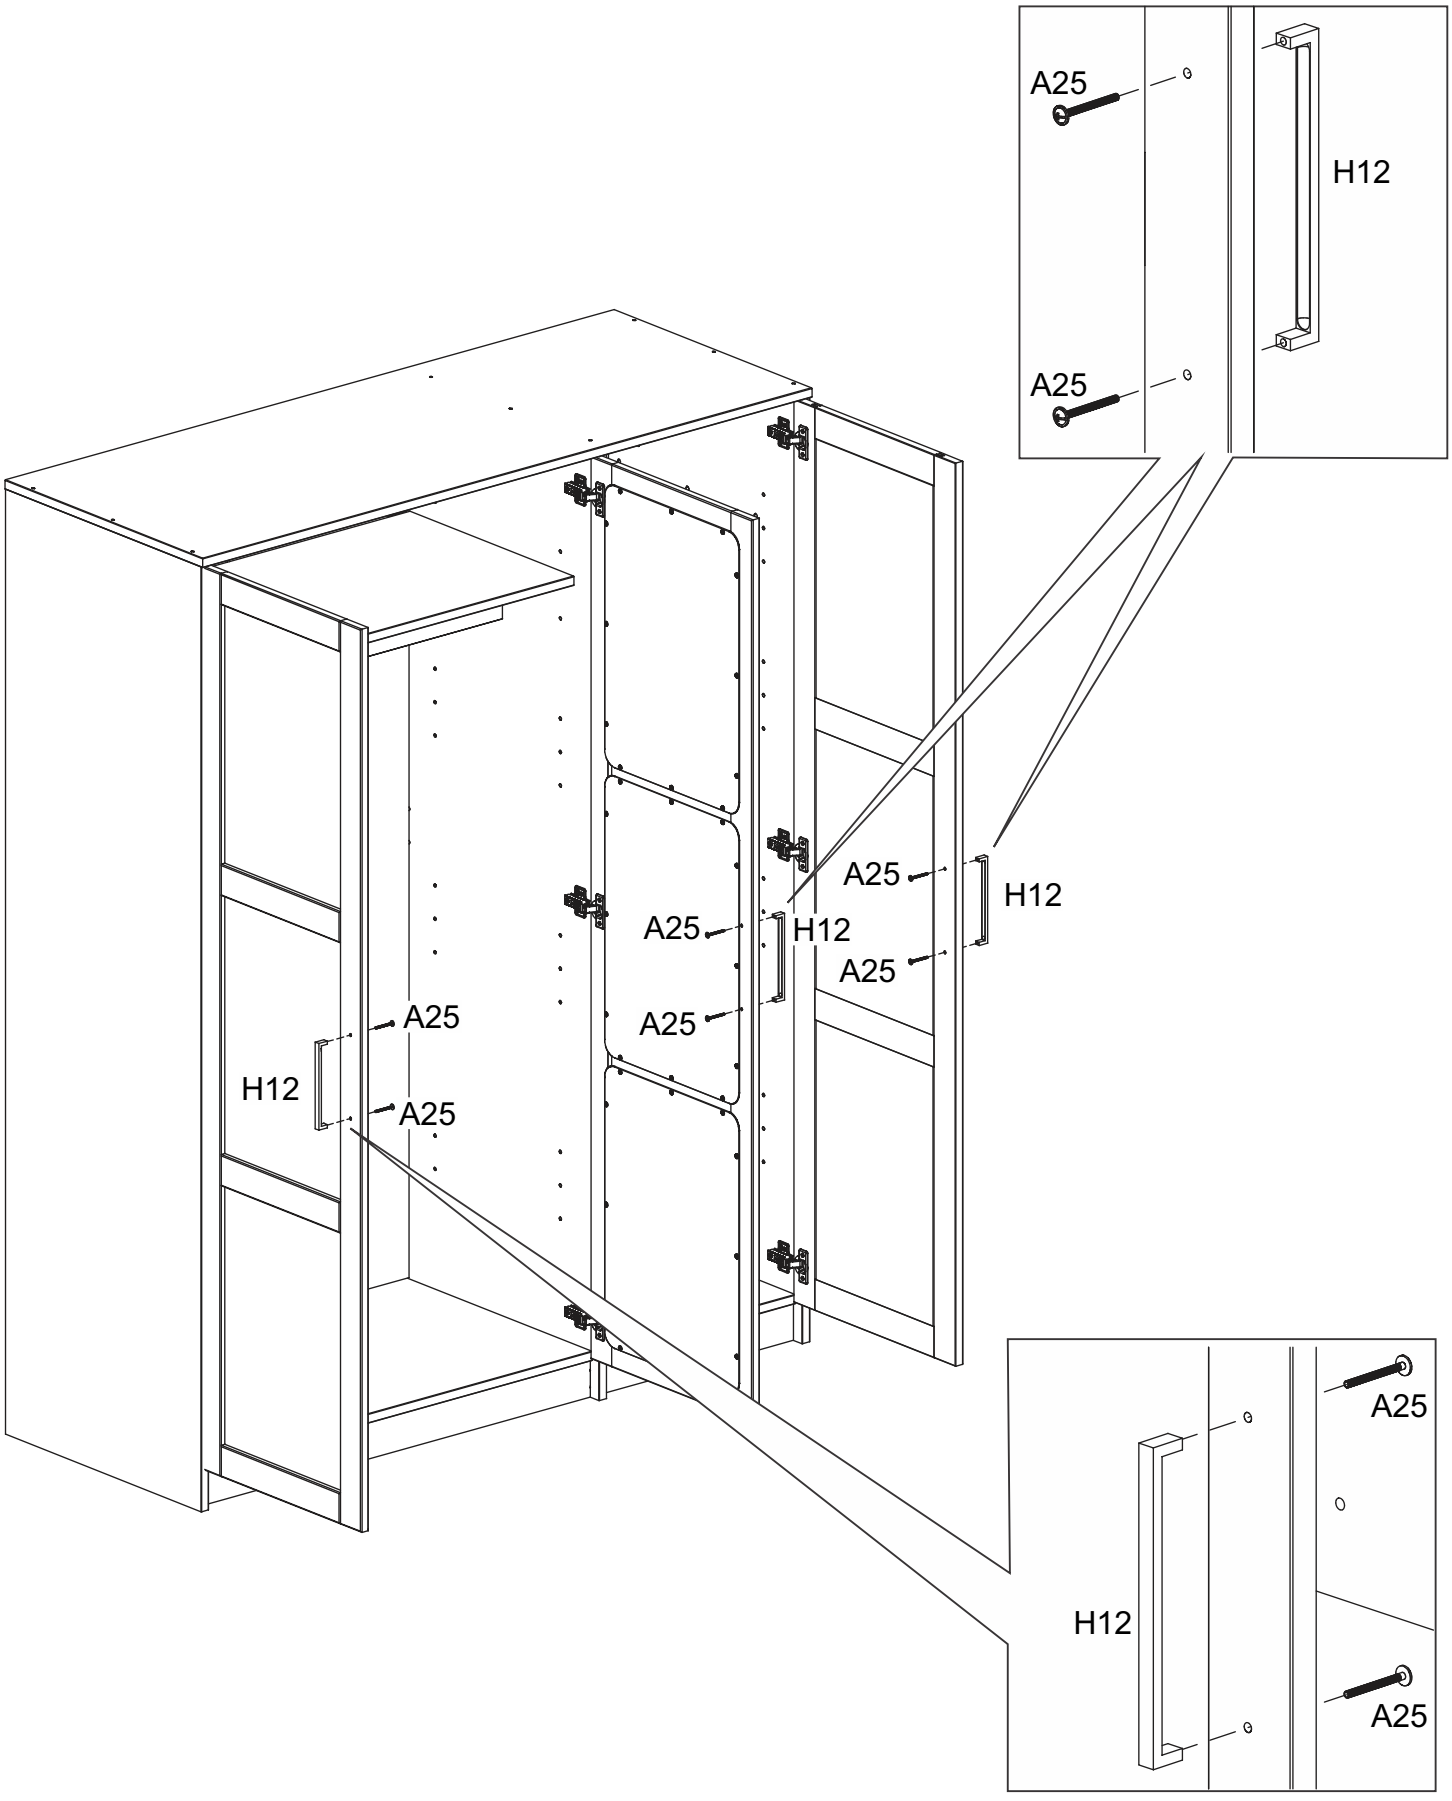



A25	M4x25	06	H12		03

18) Align Crooked Doors

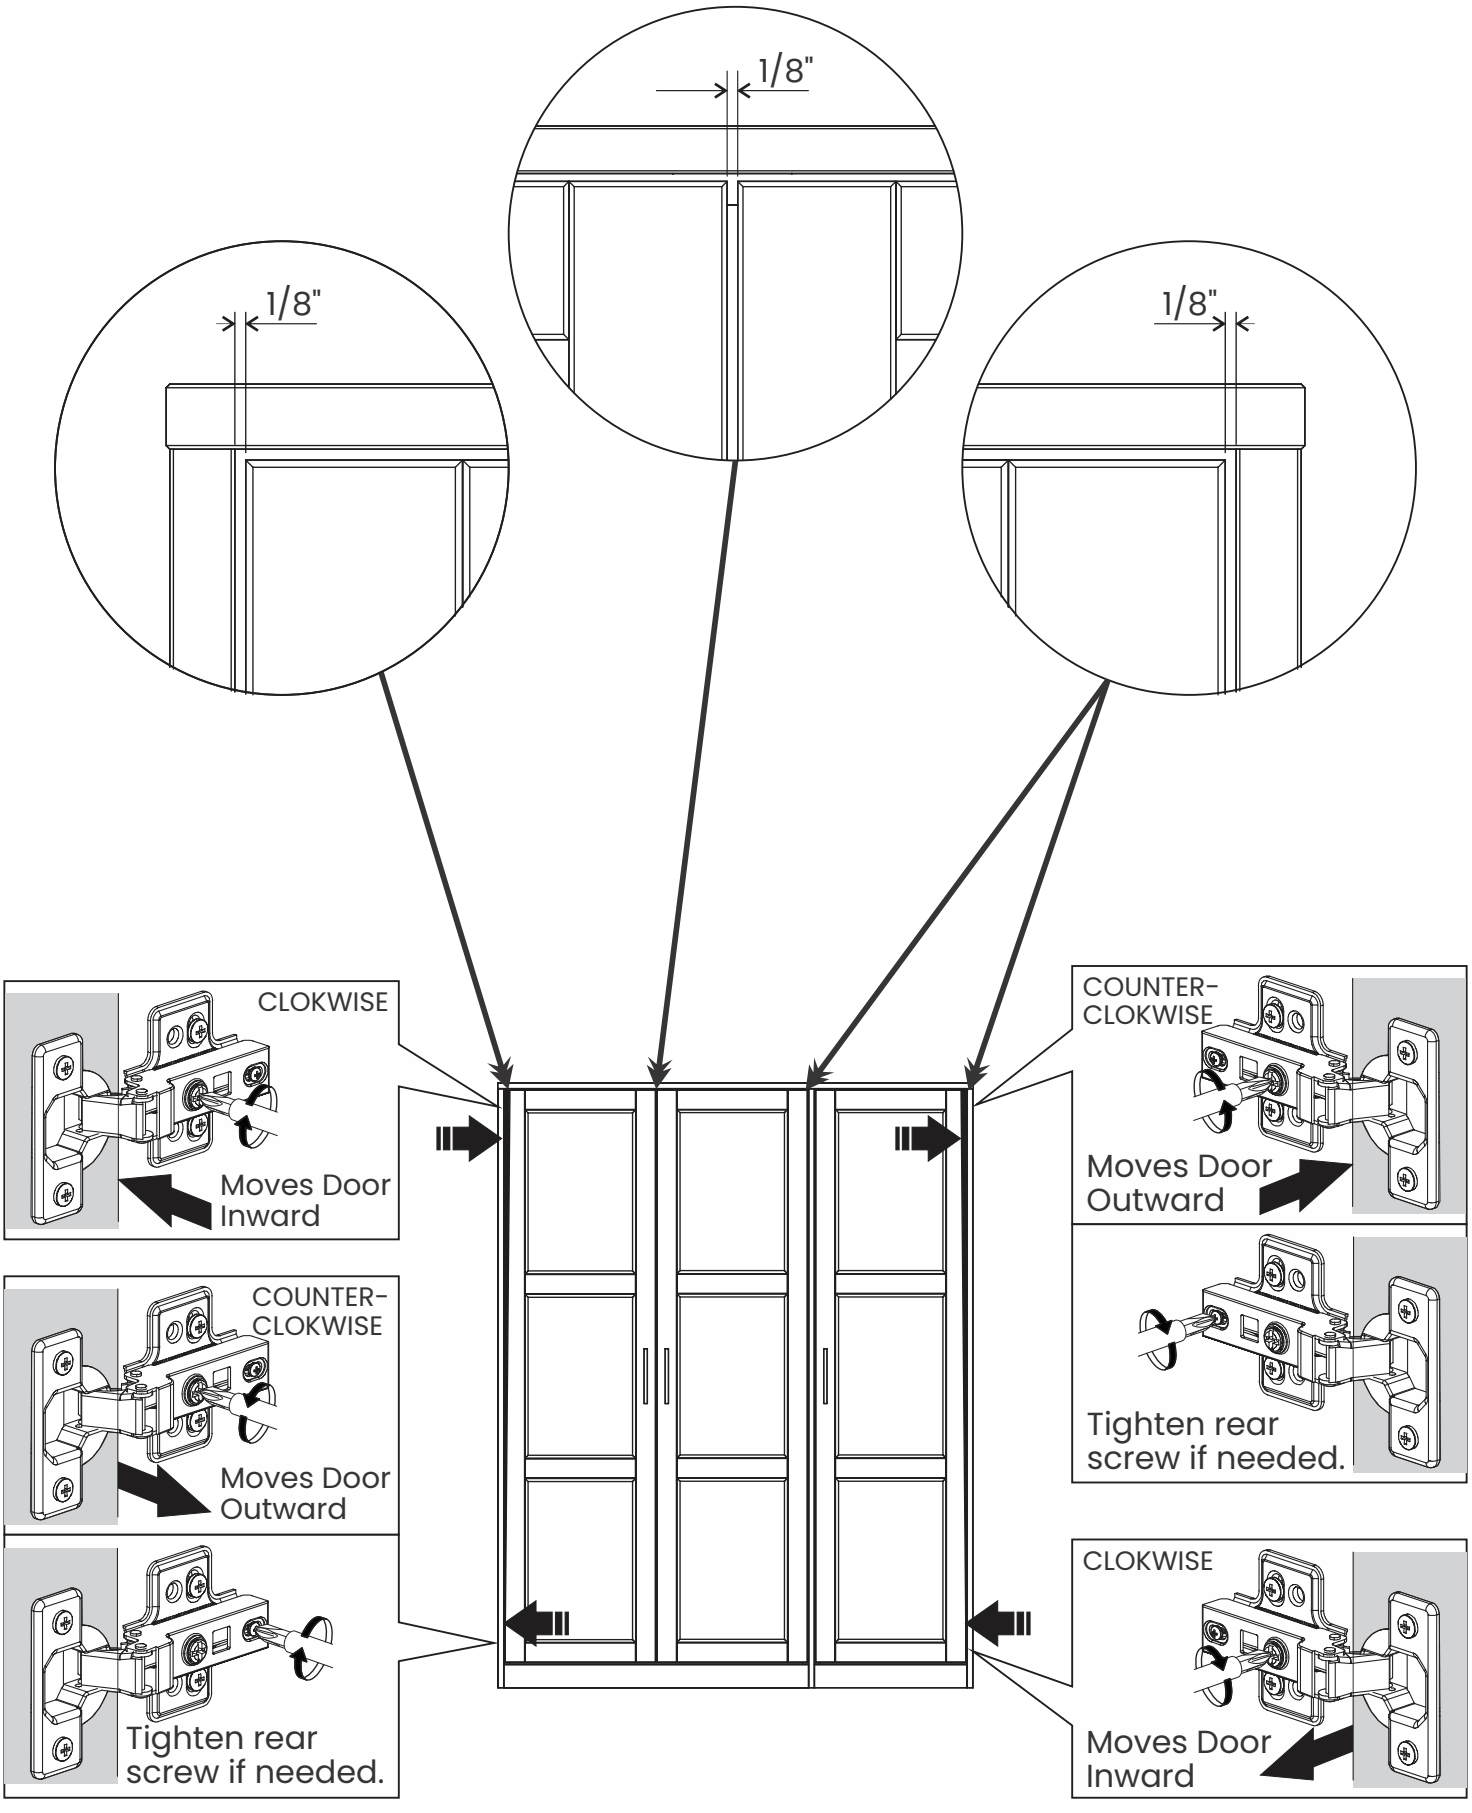


19) To align the doors with the sides of the wardrobe

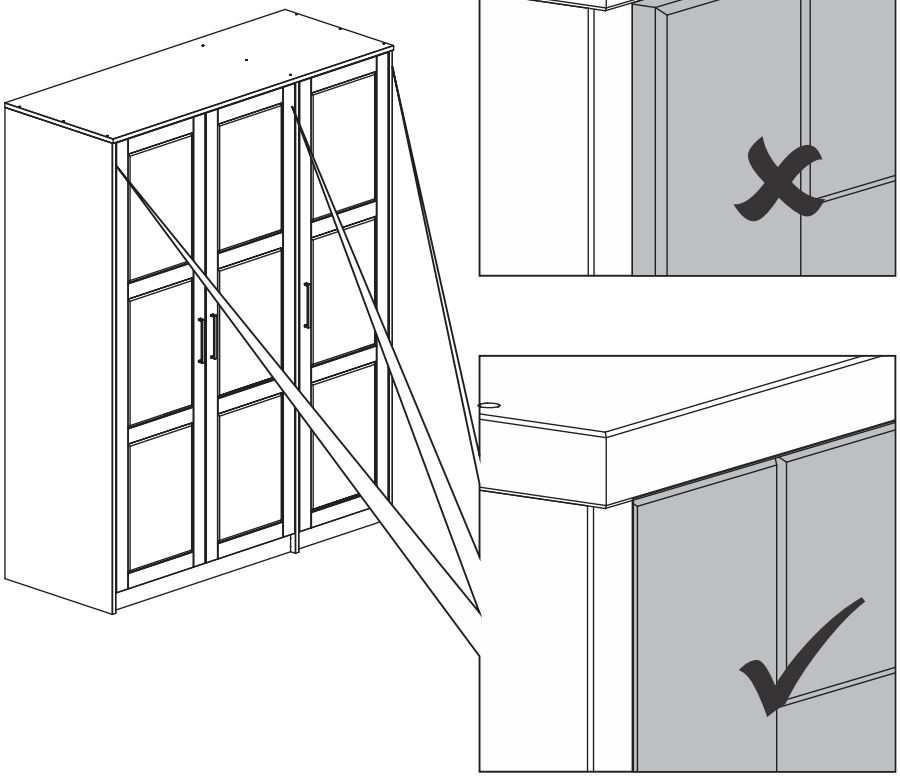


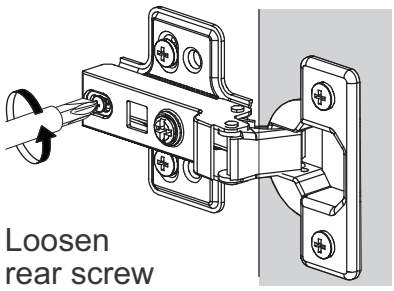

Loosen
rear screw

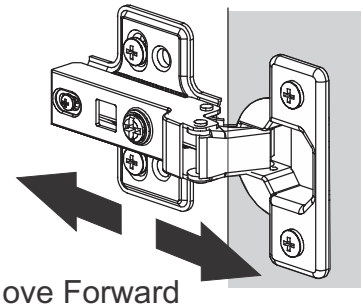



Move Forward
or Backward

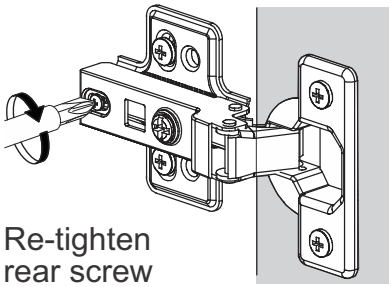


Re-tighten
rear screw

20) Adjusting the space between the door and the top.

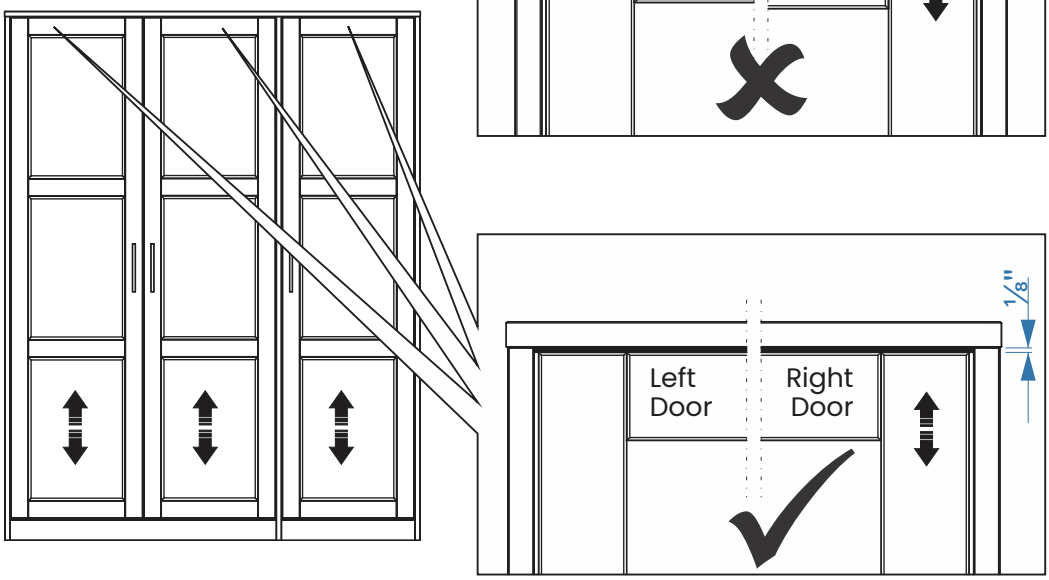


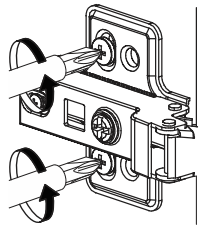

Loosen top and bottom
screw on all hinges.

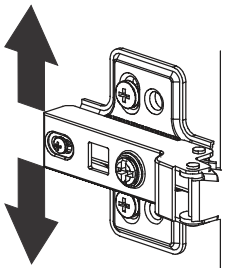



Adjust Height:
Move Up or Down

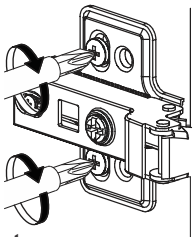



Re-tighten screws
on all hinges.


21) Tip-over Restraint Kit Installation

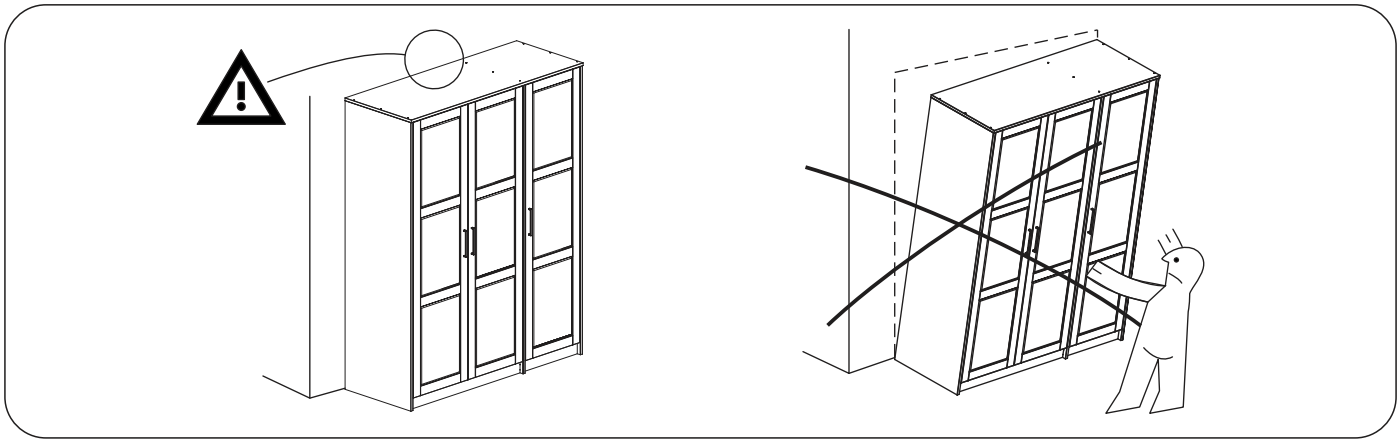

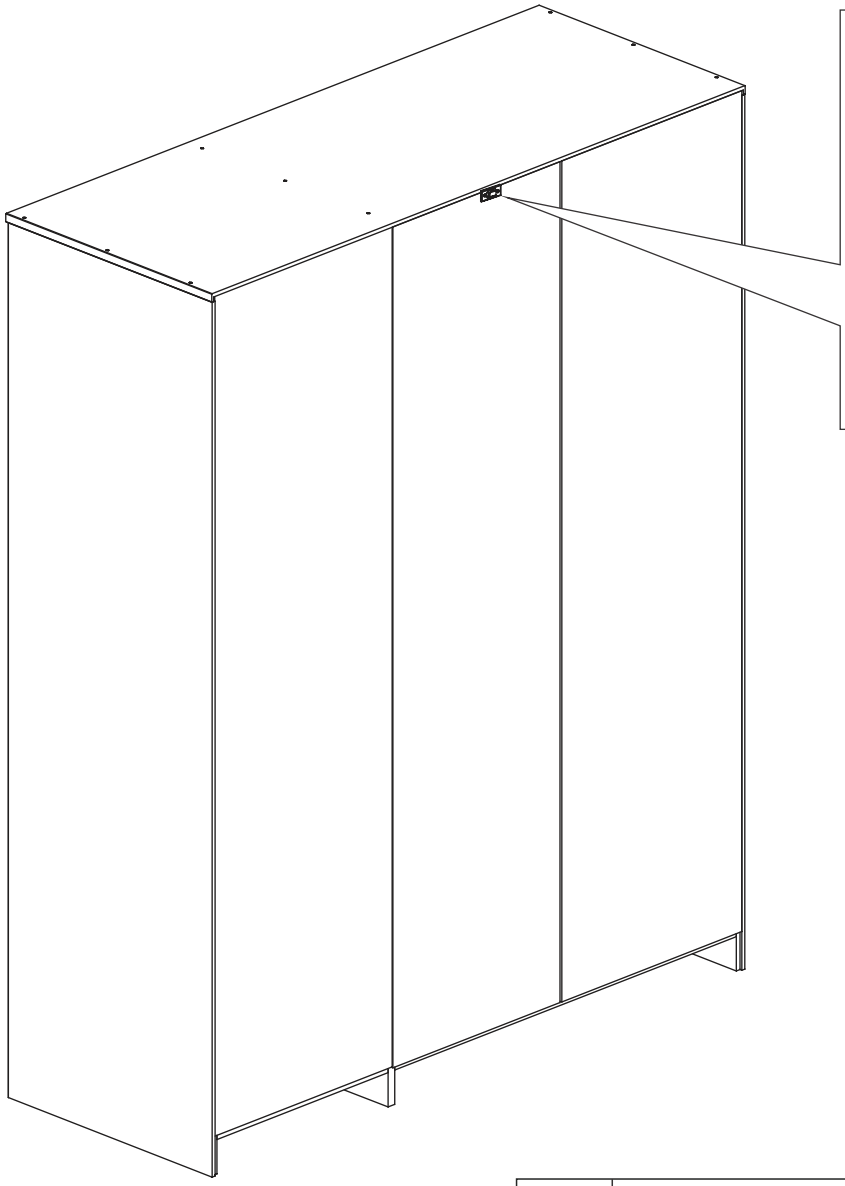

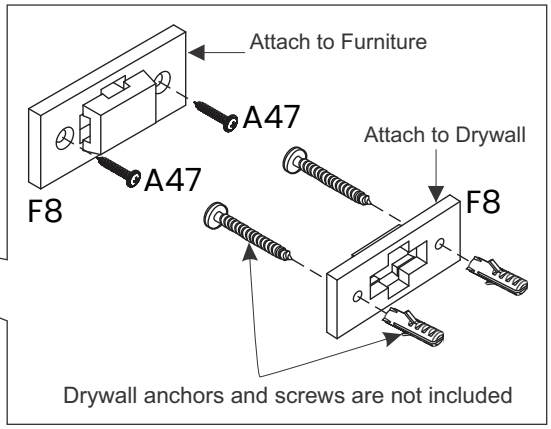

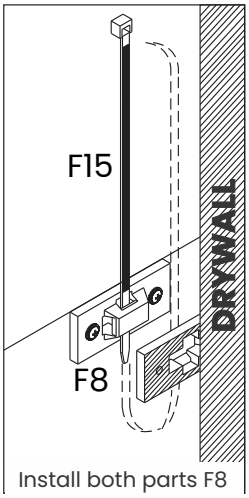

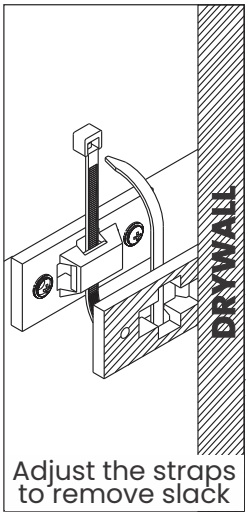

A47	3,0x20	2
F8		2
F15		1