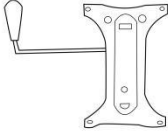

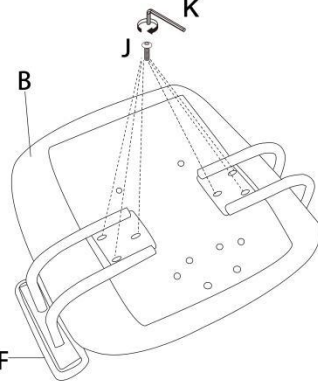
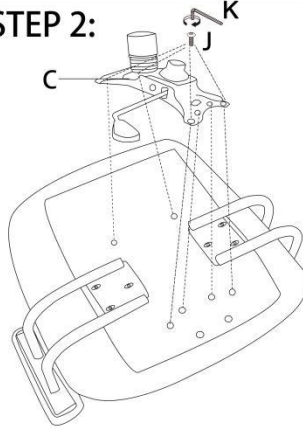
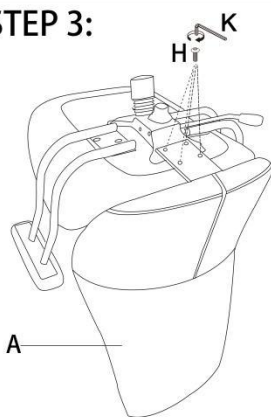
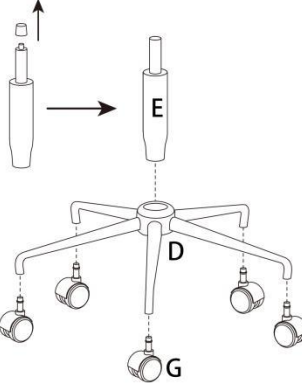
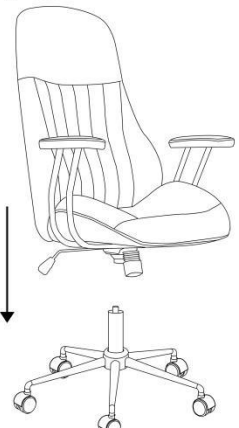


ASSEMBLING INSTRUCTION

Ax1 	Bx1 	Cx1 	Dx1 
Ex1 	Fx2 	Gx5 	Kx1 (M6) 
		Hx4(M6x30mm)  Jx10(M6x20mm) 	

STEP 1: 	STEP 2:  Noted: Lock the screw 60% at first.	STEP 3:  Noted: Lock the screw 60% at first, then tighten the all screws.
STEP 4: 	STEP 5: 	STEP 6: 