


Louvred Cafe Door Installation

Watch Installation Video <https://bit.ly/2QfC1Rj>

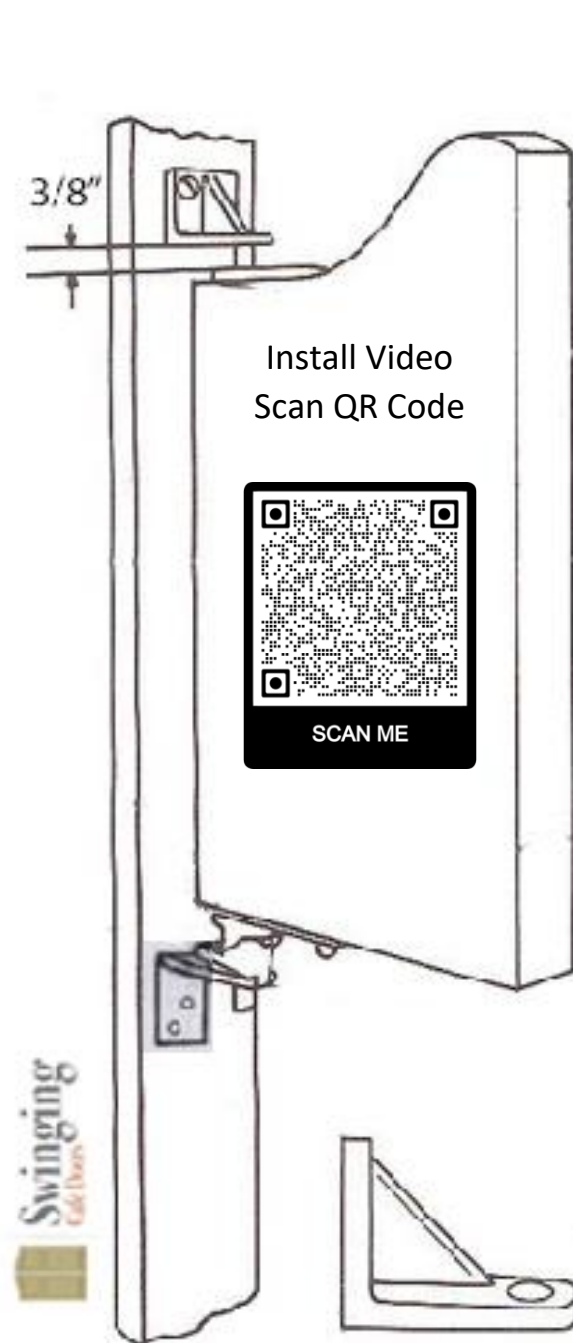

Step 1: Mount top pivot to top of door 9/16" from finished back edge of door.

Pre-Drill Holes with 1/8" drill bit before installing Philips countersunk screws.

Step 2: Mount bottom pivot to bottom of door 1/2" from finished edge of doors.

Pre-Drill Holes with 1/8" drill bit before installing round panhead screws.

Step 3: Flip white nylon ramp to opposite side of bottom bracket to look like Image A.


Image A

Step 4: Mount bottom bracket to door jamb using Phillips countersunk screws. **Pre-Drill Holes with 3/32"**

Step 5: Set door into bottom bracket. Locate screw hole positions for top bracket on jamb. Mount top bracket to jamb using round panhead screws, allowing 3/8" height between top bracket and top pivot (see install image on the left). This will compensate for the rise of door when swung into open position. **Pre-Drill Holes with 3/32" drill bit.**

Step 6: Align door by adjusting screw in bottom door plate.


Repeat process on the other door.

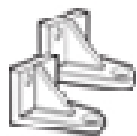


Or




Top Brackets

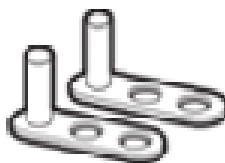

Top Pivots

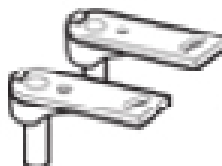

Bottom Pivots

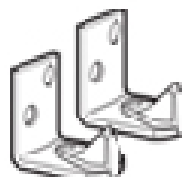

Bottom Brackets



Phillips
Countersunk
Screws



Round
Panhead
Screws