

Assembly Instructions

Caution: You must read this before you proceed

Care & Maintenance


-  • Not for commercial use. For residential use only.
-  • Furniture may scratch floors. We recommend using furniture pads to protect your floors.
-  • Do not put hot items directly on furniture surface.
-  • Do not clean furniture with harsh cleansers or polish.
-  • Do not place furniture under direct sunlight.
-  • Do not place furniture near heating or cooling vents.
-  • Do not write on furniture without a padded barrier to protect the surface.
-  • Do not place furniture outside . For indoor use only.
-  • Stains may be removed with mild soap solution and damp cloth.
-  • Children should not climb or jump on the furniture.

-  • Dust and pick-up spills using a clean, non-colored, lint-free cloth.







Please look in the magic tape pouch for hardware packs and legs.

Sets often ship in multiple boxes and may arrive a day or two apart.





SOFA




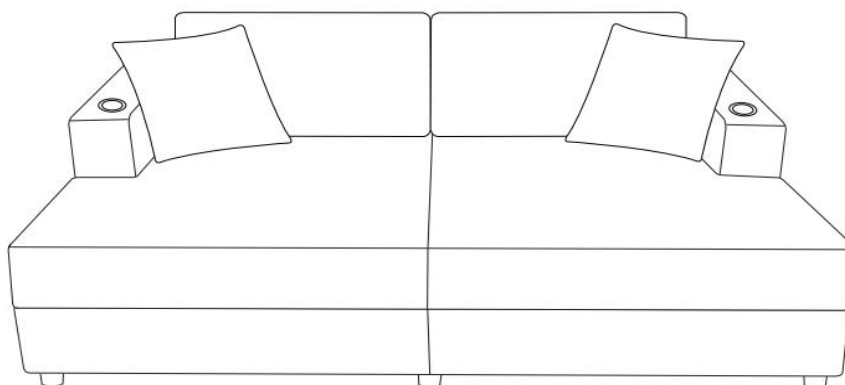


PART LIST : N719P452847

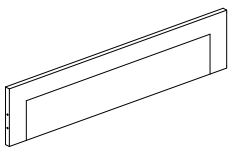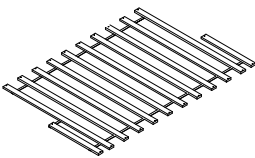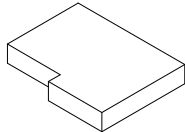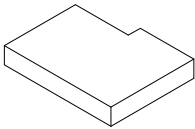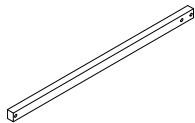LABEL	PICTURE	DESCRIPTION	QTY
A		BACKREST	1
L		BED SLAT	1
M1		LEFT SEAT CUSHION	1
M2		RIGHT SEAT CUSHION	1
I		MIDDLE LEG CONNECTING WOODEN BATTE	2
K		BACK MIDDLE LEG CONNECTING WOODEN BATTE	2


PART LIST : N719P452848

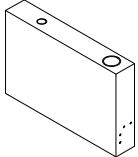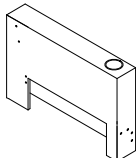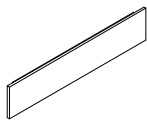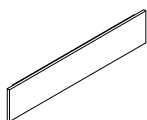B		LEFT ARMREST	1
C		RIGHT ARMREST	1
D1		FRONT RAIL LEFT	1
D2		FRONT RAIL RIGHT	1

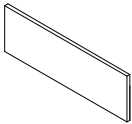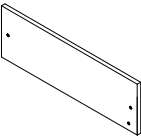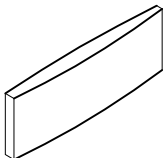LABEL	PICTURE	DESCRIPTION	QTY
E		LEFT RAIL	1
F		RIGHT RAIL	1
N		BACK CUSHION	2
O		PILLOW	2
P		MIDDLE LEG	2
R		LEG	7
		HARDWARE	1

Assembly Preparation

BEFORE
BEGINNING
ASSEMBLY:

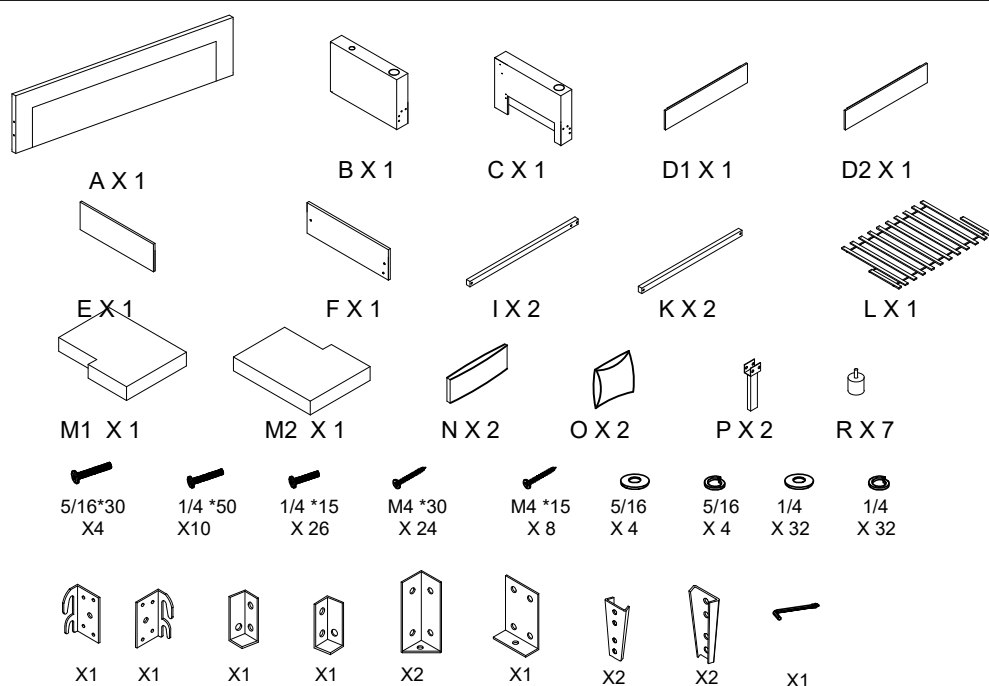


Hardware (PACKED IN A BOX N719P452848)

Label	Picture	DESCRIPTION	QTY
①		BOLT (5/16 X 30MM)	4
②		BOLT (1/4 X 50MM)	10
③		BOLT (1/4 X 15MM)	26
④		SCREW (M4X 30MM)	24
⑤		SCREW (M4X 15MM)	8
⑥		FLAT WASHER (5/16)	4
⑦		LOCK WASHER(5/16)	4
⑧		FLAT WASHER (1/4)	32
⑨		LOCK WASHER (1/4)	32
⑩		RIGHT LINK	1
⑪		LEFT LINK	1
⑫		ALLEN WRENCH	1
⑬		RIGHT STEEL CONNECTING PLATE	1
⑭		LEFT STEEL CONNECTING PLATE	1
⑮		IRON CONNECTING PLATE	2
⑯		INTERMEDIATE IRON CONNECTING PLATE	1
⑰		TAPERED CONNECTORS ON THE BACKREST	2
⑱		TAPERED CONNECTORS ON THE ARMREST	2



Assembly Steps

Overview

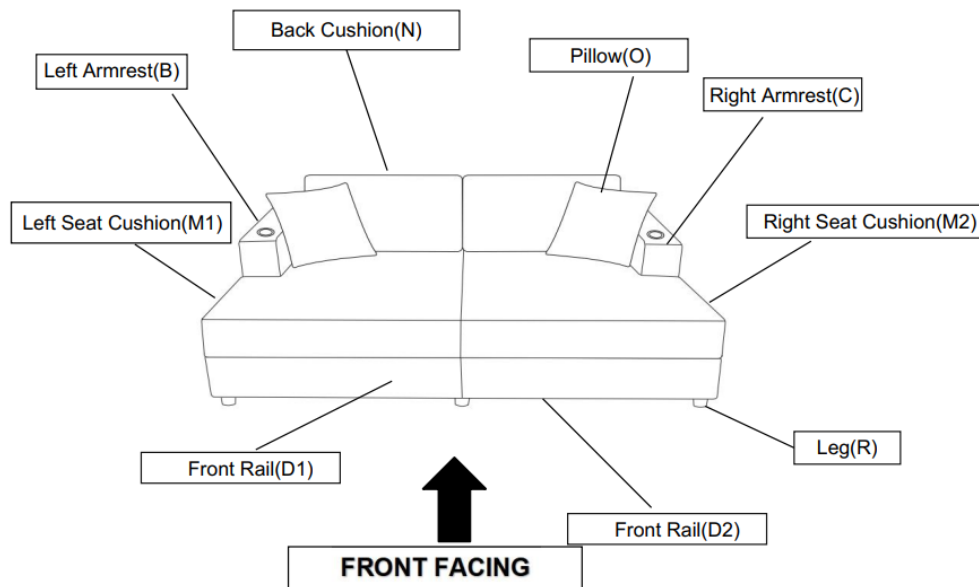

THIS BED HAS MULTIPLE PARTS AND MAY REQUIRE UP TO 30 MINUTES TO ASSEMBLE. TO GIVE YOU AN OVERVIEW OF THE BED PARTS, THE ABOVE PICTURE IS PROVIDED TO HELP YOU PUT THE VARIOUS PARTS INTO PERSPECTIVE. PLEASE READ THROUGH THE INSTRUCTIONS BELOW TO FAMILIARISE YOURSELF WITH THE PARTS AND STEPS BEFORE ASSEMBLY

STEP 1

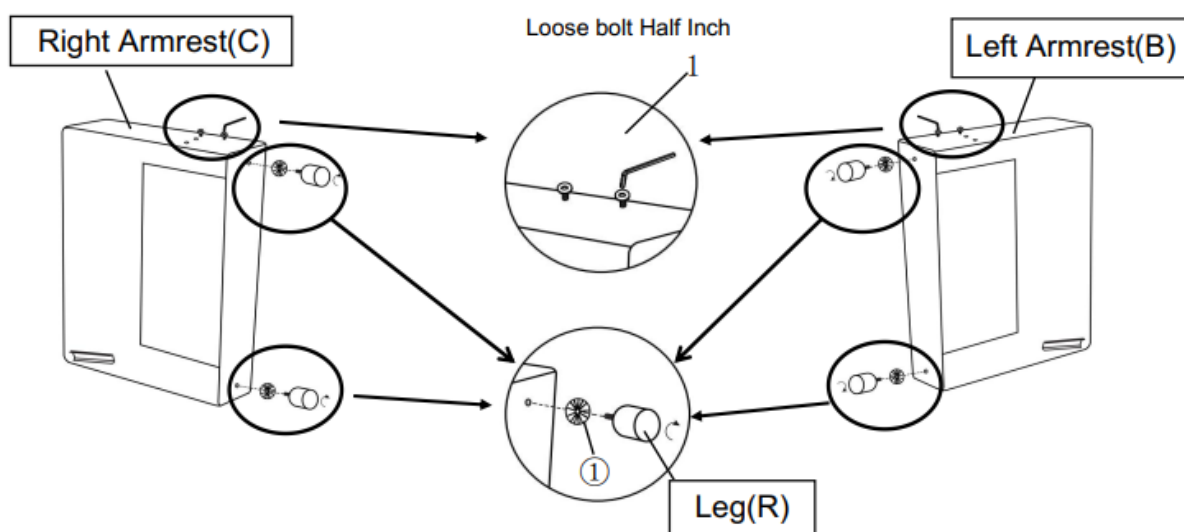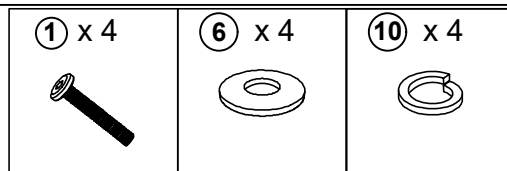


STEP 1.1. INSTALL THE BASE (R) UNDER THE LEFT (B) AND RIGHT (C) ARMRESTS BY PLACING THEM IN POSITION AND TIGHTENING BY ROTATING THE BASE CLOCKWISE.

STEP 1.2 INSTALL THE BOLTS (1) IN THE CORRECT POSITION AS SHOWN IN THE PICTURE, TIGHTEN 50%.

STEP 2


③ x 8	⑧ x 8	⑨ x 8	⑬ x 1	⑭ x 1	⑱ x 2
					

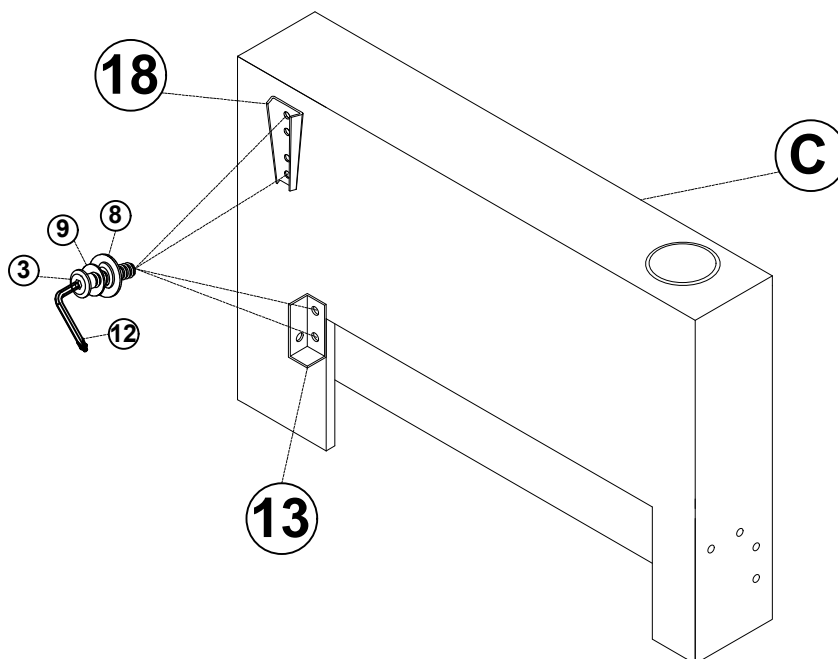

Place accessories (13) and (18) in the correct positions as shown in the illustration. Tighten with bolt (3) using wrench (12). Assemble the remaining parts in the same way for Handrail (B) with accessory (14).

STEP 3


③ x 4	⑧ x 4	⑨ x 4	⑯ x 1
			

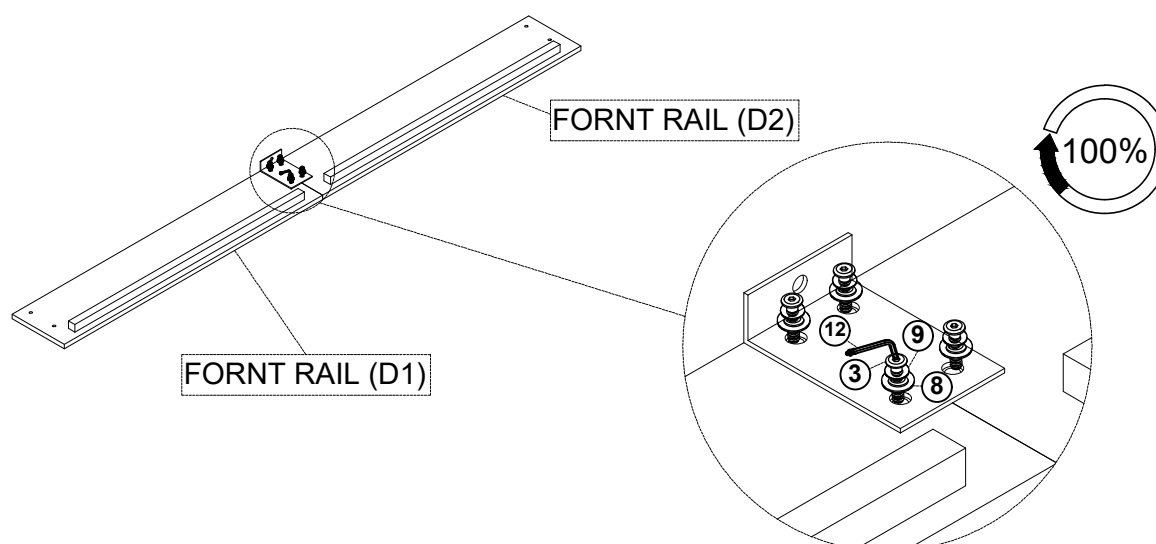

CONNECT THE TWO FRONT RAILS (D1) AND (D2) USING THE IRON CONNECTING PLATE (16), BOLTS (3), SPRING WASHER (9) FLAT WASHER (8) WITH A HEX WRENCH (12) TURNING CLOCKWISE UNTIL TIGHT.


STEP 4


③ x 2 	⑩ x 1 	⑪ x 1 	⑤ x 8 
--	--	--	---

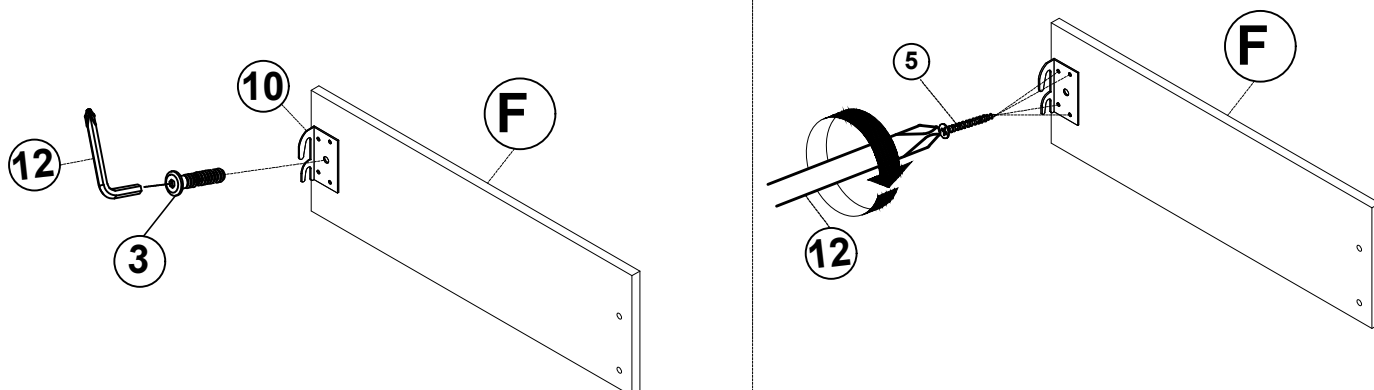

Position component (10) correctly on part (F). Secure it using bolt (3) together with lock (12), tightening firmly. Then, use screw (5) to further fasten and reinforce component (10) as illustrated. Repeat the same procedure for component (11) on part (E).



STEP 5

③ x 4 	⑧ x 4 	⑨ x 4 	⑮ x 2 
--	--	--	---

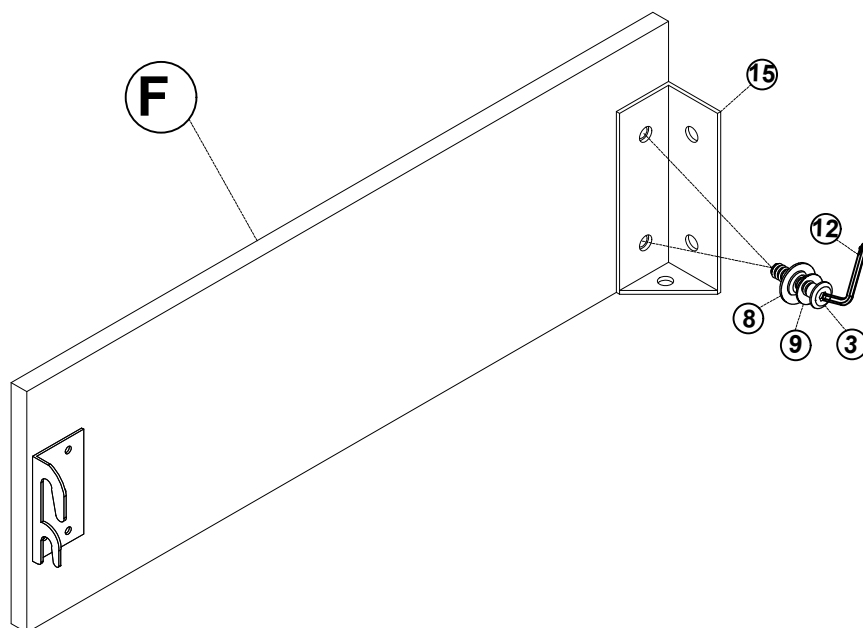


Attach part (15) to part (F). Secure it with bolt (3), together with washers (8) and (9), and fasten with lock (12). Tighten as shown in the illustration. Repeat the same procedure to attach part (15) to part (E).

STEP 6

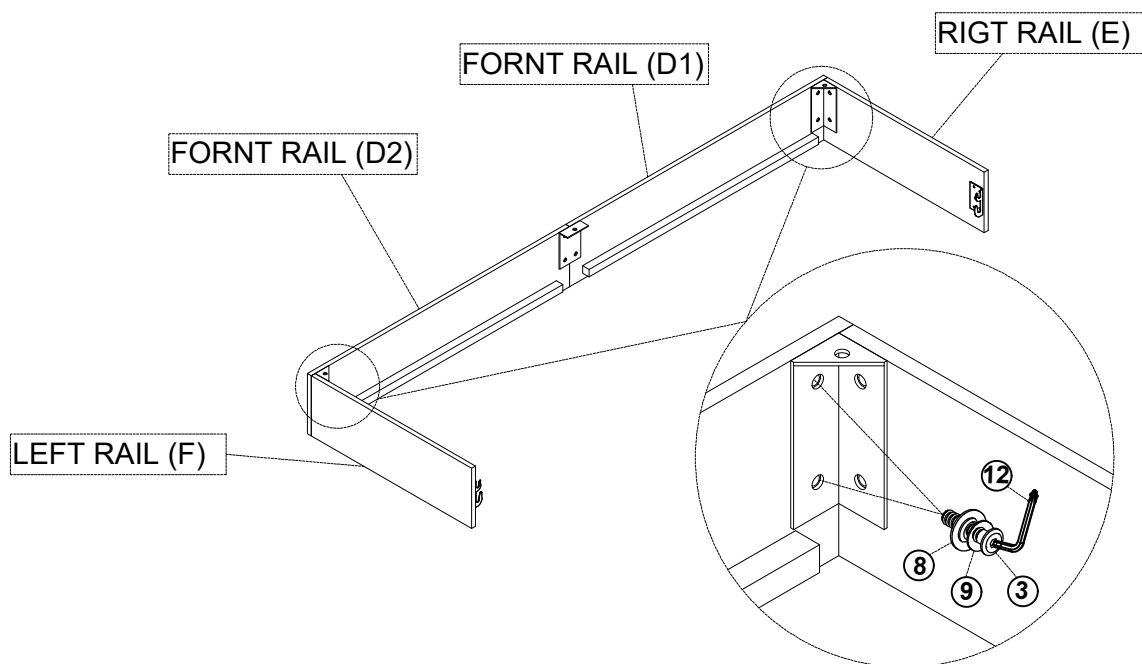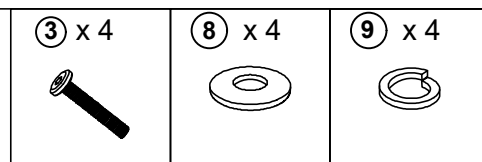


Attach the left rail (E) to the front rail (D1) using bolts (3), spring washers (9), and flat washers (8). Tighten with the hex wrench (12) by turning clockwise until secure. Repeat the same procedure to attach the right rail (F) to rail (D2). Tighten the bolts in sequence, as illustrated.

STEP 7

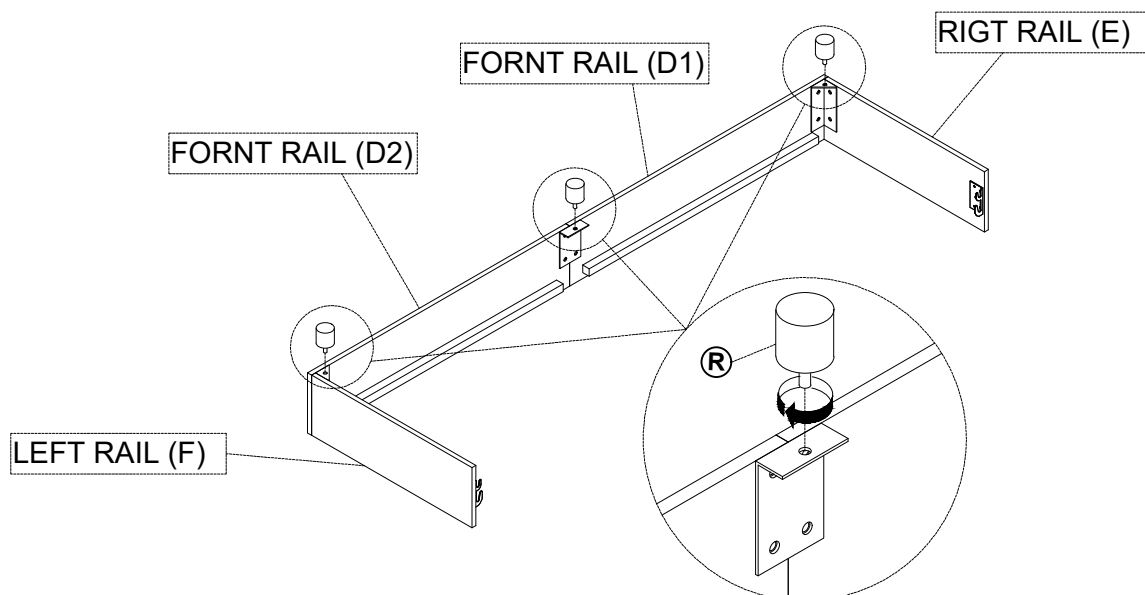

Attach leg (R) to the front rail (D). Tighten by turning the base clockwise. As illustrated.

STEP 8

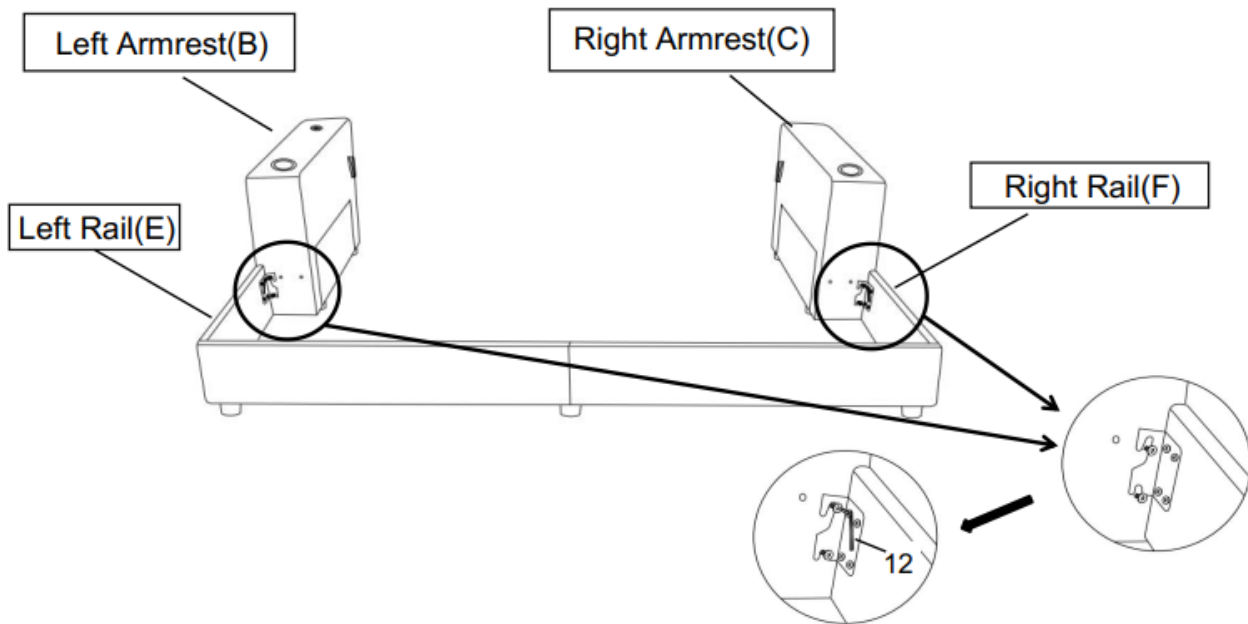

With the help of a partner, thread the hooks of the left rail (E) and right rail (F) onto the bolts of the left handrail (B) and right handrail (C) and tighten the bolts with a hex wrench (12) as shown above.

STEP 9

③ x 4




⑧ x 4



⑨ x 4




⑰ x 2

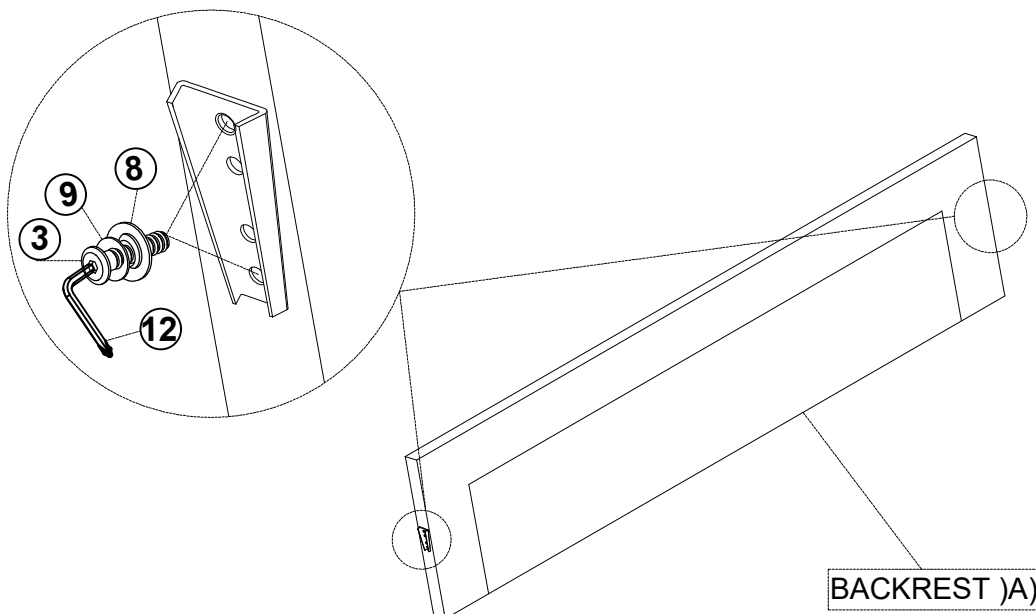

Position the accessories (17) correctly as shown in the illustration. Secure them using bolts (3), together with spring washers (9) and flat washers (8), and tighten with the wrench (12). Assemble the remaining parts in the same manner on the opposite side..

STEP 10


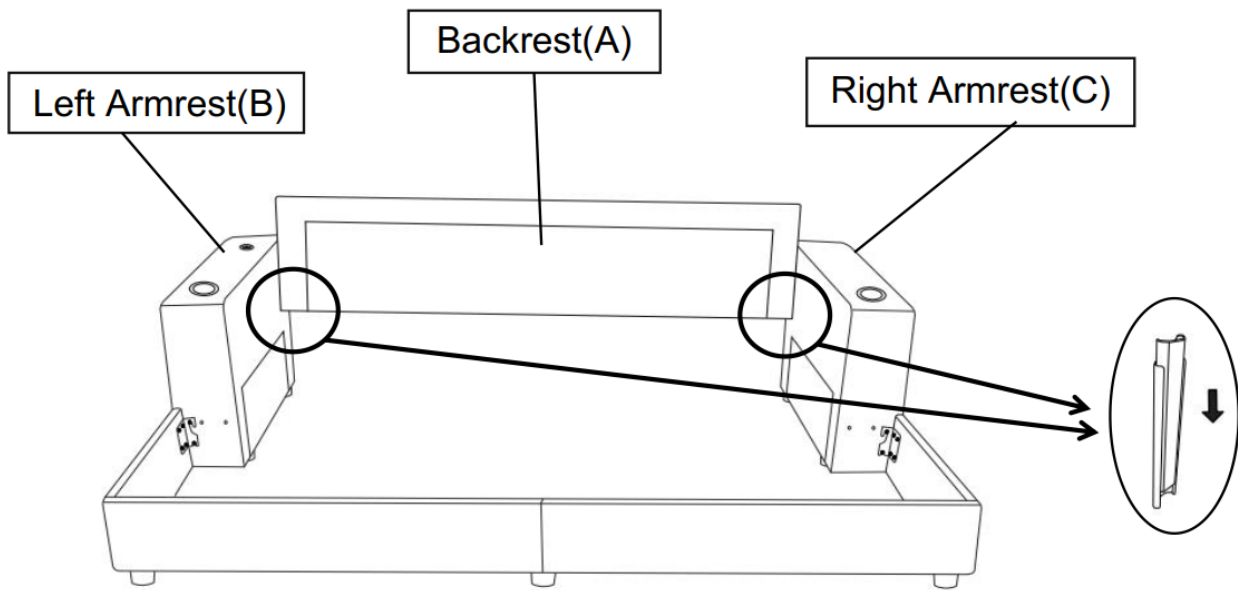


Slide the Tapered Connectors on the Backrest(A) into the Tapered Connectors on the Left Armrest(B) as shown in the picture. Repeat the same steps with the Right Armrest(C).

Note: Make sure the Tapered Connectors on Backrest(A) lock into the Tapered Connectors on the Left Armrest(B) and Right Armrest(C). Assistance from an adult partner is necessary for this assembly process. During this assembly process - do exercise caution. You may need to use your hand to press down or pave away the padded surface to facilitate the 'slip and slide' assembly.

Caution: Ensure that your fingers do not get caught or pinched in the assembly process.

STEP 11

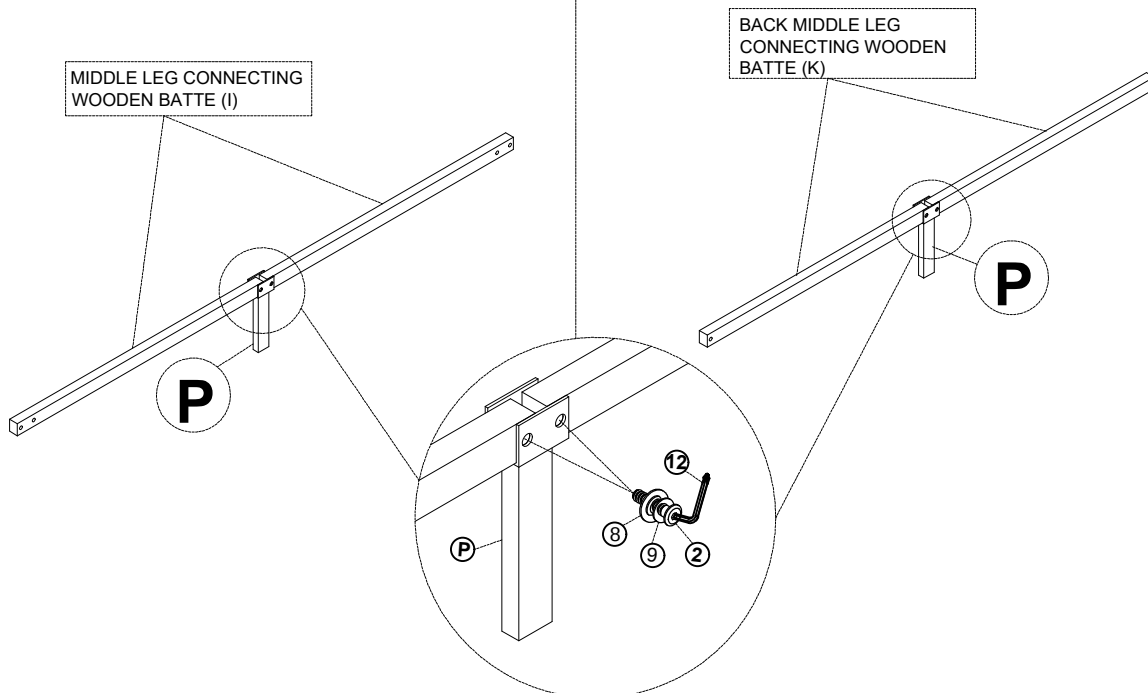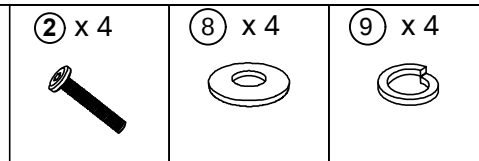

Assemble the middle leg (P) onto the two connecting wooden pieces of the middle leg (I). Using bolts (2), flat washers (8) and (9), and the hex wrench (12), turn clockwise until secure. Repeat the same procedure with the two pieces (K).

STEP 12



② x 2



⑧ x 2



⑨ x 2

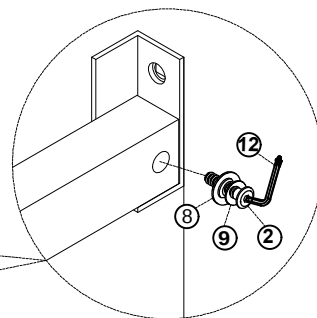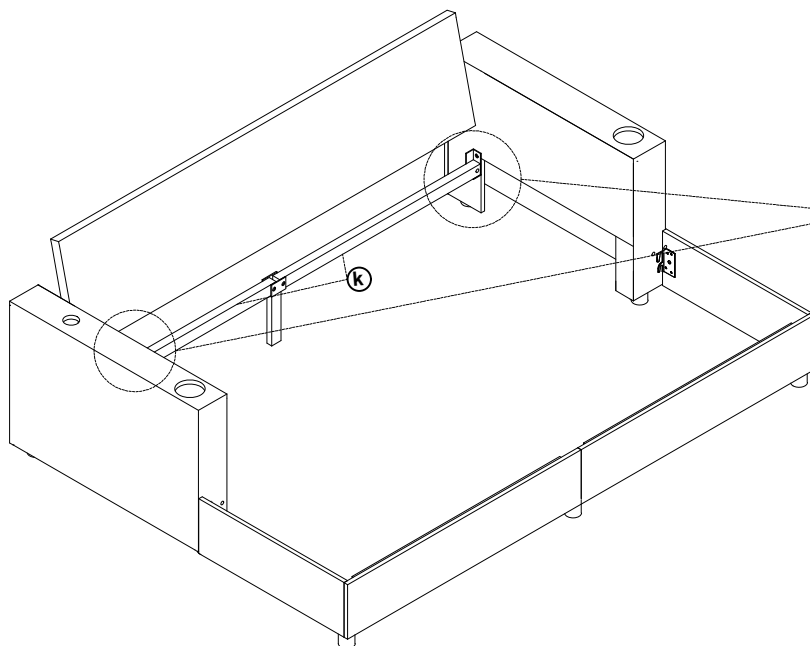

Install the rear middle leg connecting bar (K) into parts (13) and (14) using bolt (2), spring washer (8), and flat washer (9). Tighten clockwise with the hex wrench (12) until secure, as illustrated.

STEP 13



② x 4



⑧ x 4




⑨ x 4

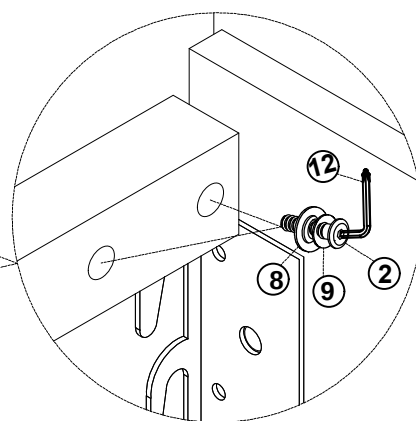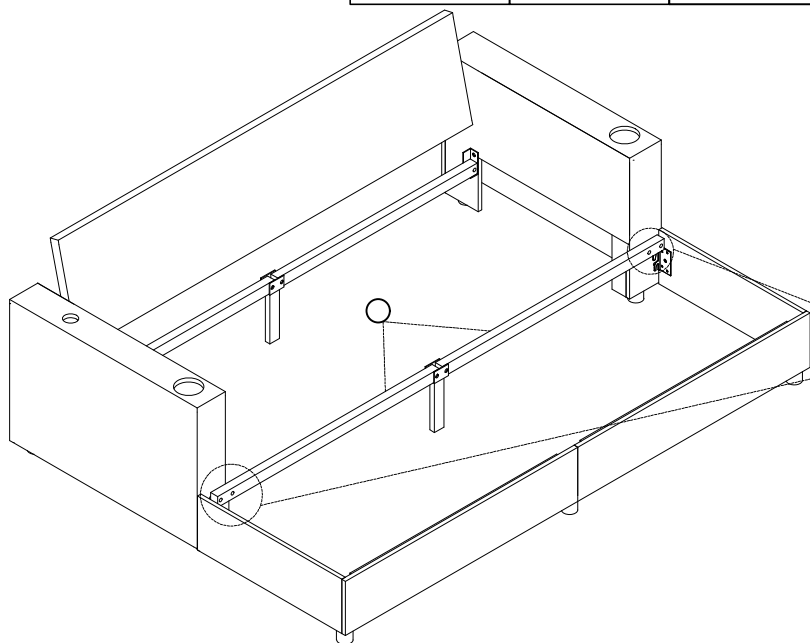

Attach the front middle leg connecting bar (I) to the left armrest (B) and right armrest (C) using Bolts (2), spring washer (7), flat washer (6) and hex wrench (12), turn clockwise until tight.


STEP 14

④ x 24

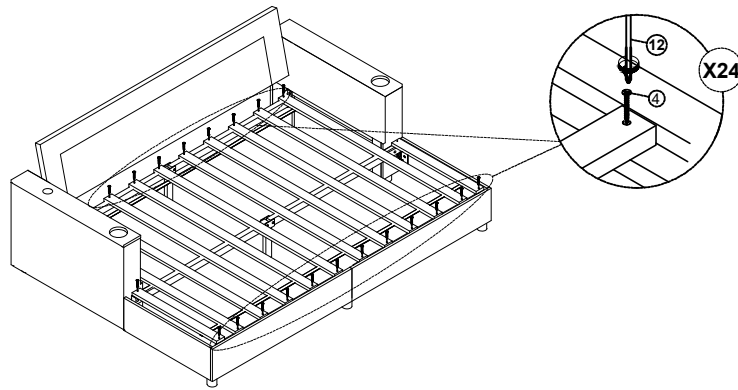


Use a screwdriver (12) to secure the screw (4) and bed bar (L) to the support. A total of 24 screws are needed.

STEP 15

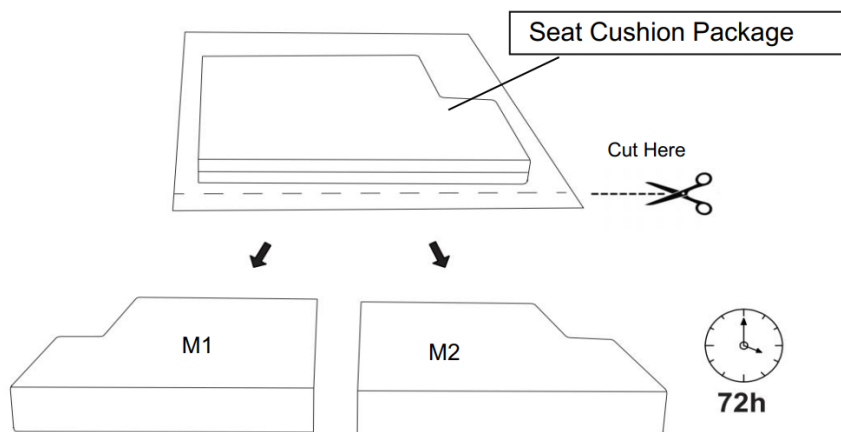


Cut open the seat cushion packages (M1) and (M2). The complete unpacking process can take up to 72 hours.

STEP 16

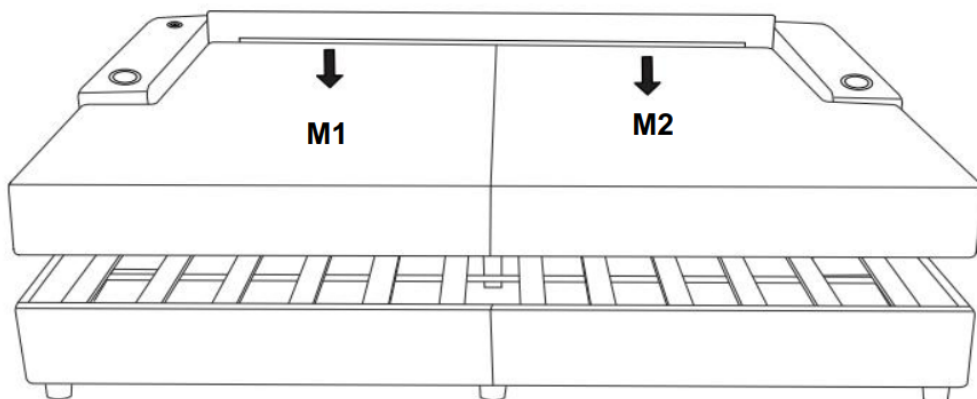


Place seat cushions (M1) and (M2) on the loveseat chaise lounge.

STEP 17

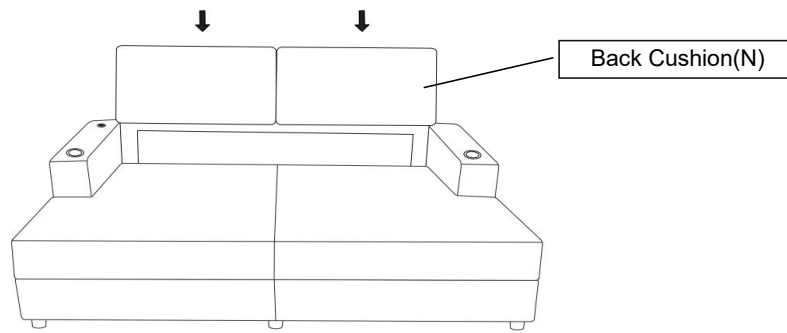


Put the Back Cushion(N) on the LOVESEAT CHAISE LOUNGE.

STEP 18

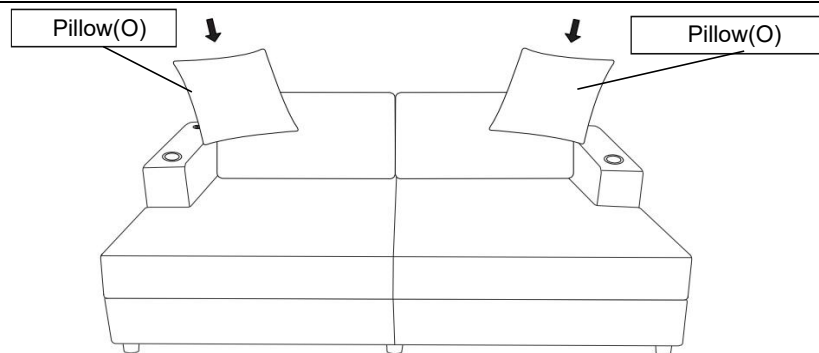


Put the Pillow(O) on the LOVESEAT CHAISE LOUNGE.

STEP 19

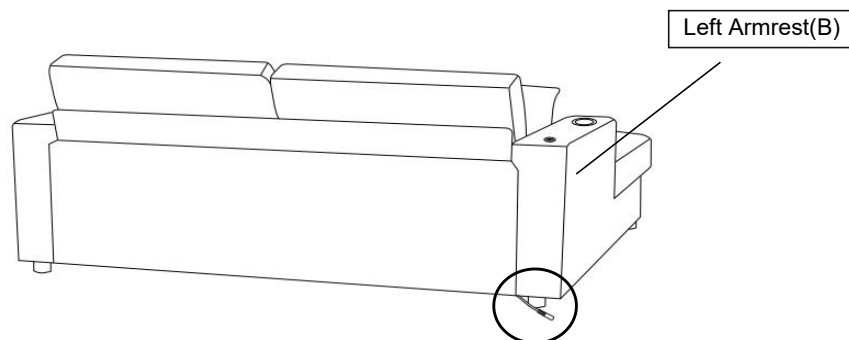

As shown in the picture, the power cord can be used normally.

STEP 20

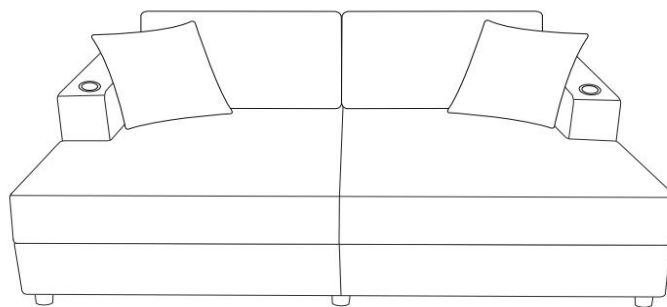

Your SOFA is ready to use.
This SOFA can only be used on a flat, level surface.



Product Name:USB CHARGER
Model :TY892

"This device complies with part 15 of the Fcc Rules.

Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation."